


E2E_PXXForward()



"XX" indicates one specific E2E profile.

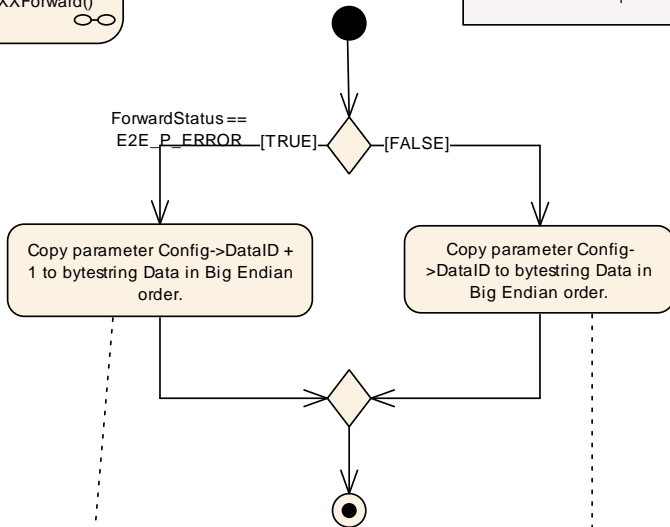

Parameter Config->DataID has length PXXDATAID_LEN (in bytes). Bytes need to be stored in Data at position Offset + PXXDATAID_POS to Offset + PXXDATAID_POS + PXXDATAID_LEN - 1.