

| Document Title | Requirements on Hardware Test Manager on start up and shutdown |
|----------------------------|----------------------------------------------------------------------|
| Document Owner | AUTOSAR |
| Document Responsibility | AUTOSAR |
| Document Identification No | 760 |
| | |
| Document Status | published |
| Part of AUTOSAR Standard | Classic Platform |
| Part of Standard Release | R21-11 |

| Document Change History | | | |
|-------------------------|---------|----------------------------------|-----------------------------------------------------------------------------------------------------|
| Date | Release | Changed by | Change Description |
| 2021-11-25 | R21-11 | AUTOSAR Release Management | No content changes |
| 2020-11-30 | R20-11 | AUTOSAR Release Management | No content changes |
| 2019-11-28 | R19-11 | AUTOSAR Release Management | No content changes Changed Document Status from Final to published |
| 2018-10-31 | 4.4.0 | AUTOSAR Release Management | Editorial changes |
| 2017-12-08 | 4.3.1 | AUTOSAR Release Management | Editorial changes |
| 2016-11-30 | 4.3.0 | AUTOSAR Release Management | Initial Release |



Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work. The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.



Table of Contents

| 1 | Scope of Document | 4 |
|-----|-----------------------------|----|
| 2 | Conventions to be used | |
| 3 | Acronyms and abbreviations6 | |
| 4 | Functional Overview | 7 |
| 4.1 | Functional Requirements | 8 |
| 5 | Requirements Tracing | 11 |
| 6 | References | 12 |
| 6.1 | Deliverables of AUTOSAR | |
| 6.2 | Related standards and norms | 12 |



1 Scope of Document

This document lists the requirements applicable to the design of the HTMSS module of AUTOSAR.



2 Conventions to be used

- The representation of requirements in AUTOSAR documents follows the table specified in [5].
- In requirements, the following specific semantics are used
- The representation of requirements in AUTOSAR documents follows the table specified in [TPS_STDT_00078].

The key words "MUST", "MUST NOT", "REQUIRED", "SHALL", "SHALL NOT", "SHOULD", "SHOULD NOT", "RECOMMENDED", "MAY", and "OPTIONAL" in this document are to be interpreted as:

- SHALL: This word means that the definition is an absolute requirement of the specification.
- SHALL NOT: This phrase means that the definition is an absolute prohibition of the specification.
- MUST: This word means that the definition is an absolute requirement of the specification due to legal issues.
- MUST NOT: This phrase means that the definition is an absolute prohibition of the specification due to legal constraints.
- SHOULD: This word, or the adjective "RECOMMENDED", mean that there may exist valid reasons in particular circumstances to ignore a particular item, but the full implications must be understood and carefully weighed before choosing a different course.
- SHOULD NOT: This phrase, or the phrase "NOT RECOMMENDED" mean that there may exist valid reasons in particular circumstances when the particular behavior is acceptable or even useful, but the full implications should be understood and the case carefully weighed before implementing any behavior described with this label.
- MAY: This word, or the adjective "OPTIONAL", means that an item is truly optional. One vendor may choose to include the item because a particular marketplace requires it or because the vendor feels that it enhances the product while another vendor may omit the same item. An implementation, which does not include a particular option, MUST be prepared to interoperate with another implementation, which does include the option, though perhaps with reduced functionality. In the same vein an implementation, which does include a particular option, MUST be prepared to interoperate with another implementation, which does not include the option (except, of course, for the feature the option provides.)



3 Acronyms and abbreviations

| Abbreviation / Acronym: | Description: |
|----------------------------|-------------------------------------------|
| ADC | Analog to Digital converter |
| BIST | Built In Self Test |
| BSW | Basic Software |
| ECU | Electronic Control Unit |
| ECUM | Electronic Control Unit Manager |
| HTMSS | Hardware Test Management startup shutdown |
| MCU | Micro Controller Unit |
| MSTP | Microcontroller Specific Test Package |



4 Functional Overview

The purpose of this module is to provide an infrastructure for integrating/transforming the microcontroller manufacturer specific start up and shutdown tests (e.g. BIST) test results/status within the AUTOSAR standard software platform.

The basic functionalities of this module includes collecting the test results/status from the MSTP, configure MSTP tests, start tests execution, provide the MSTP test status to EcuM module and application SWC to evaluate the test results for the system behavior.

The HTMSS module integrates on the level of the AUTOSAR BSW service layer. Below figure shows the functional integration of the HTMSS module in AUTOSAR software platform.

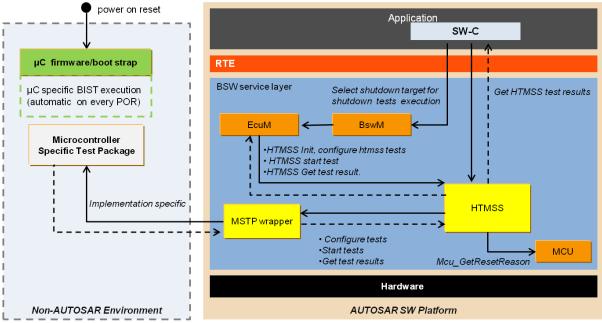


Figure 1 HTMSS interaction overview

The HTMSS module pre-integration requirements are:

- It shall be possible to run Microcontroller Specific Test Package (MSTP) startup and shutdown tests on the device under development
- The test results/status are available to the HTMSS module access
- It shall be possible to configure the MSTP start up and shutdown tests via HTMSS module



4.1 Functional Requirements

4.1.1 Configuration requirements of HTMSS and MSTP tests

4.1.1.1 [SRS_HTMSS_00001] The HTMSS shall allow configuration of start up and shutdown tests

| Туре: | Valid |
|----------------------|-----------------------------------------------------------------------------------------------------------|
| Description: | It shall be possible to configure the microcontroller specific start up and shutdown tests |
| Rationale: | It is necessary to be able to select and configure the tests based on HTMSS integrator requirements |
| Use Case: | The HTMSS configuration developer maps the microcontroller specific tests in the module configuration set |
| Dependencies: | [SRS_HTMSS_00002] |
| Supporting Material: | |

(FS_HTMSS_00001)

4.1.1.2 [SRS_HTMSS_00002] The HTMSS shall allow the configuration of tests at individual hardware resource level

| _[| | |
|----------------------|-----------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Туре: | Valid | |
| Description: | It shall be possible to test the individual hardware resources (e.g. selected via module / channel ID) on the given hardware | |
| Rationale: | The given hardware may contain two hardware unit for the resource considered under test (e.g. 2 separate ADC hardware units). In this example, it may be possible to test/obtain result for each ADC unit individually. | |
| Use Case: | The user may need to test all the hardware resources under test (used and unused), since certain microcontroller manufacturer may state that there is no guarantee that errors in unused hardware resource do not propagate or have influence on the rest of the microcontroller. | |
| Dependencies: | | |
| Supporting Material: | | |

J(FS_HTMSS_00001)

4.1.2 Main functionalities of HTMSS

4.1.2.1 [SRS_HTMSS_00003] The HTMSS shall provide a service to collect the MSTP tests results

| _ | |
|----------------------|-----------------------------------------------------------------------------------------|
| Туре: | Valid |
| Description: | The HTMSS shall collect and provide the test results of all executed tests |
| Rationale: | The MSTP test results shall be accessible |
| Use Case: | Having the tests results details, shall convey the fault status of the microcontroller. |
| Dependencies: | [SRS_HTMSS_00001], [SRS_HTMSS_00002] |
| Supporting Material: | |

J(FS_HTMSS_00001)



4.1.2.2 [SRS_HTMSS_00004] The HTMSS shall provide a mechanism to share the test results with the application layer software

| [| | |
|----------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|--|
| Туре: | Valid | |
| Description: | The current MSTP test results shall be provided to the application layer software during RUN time | |
| Rationale: | The applicative software evaluates and react on critical errors to ensure the safe state (e.g. change from normal run time to a degradation mode) | |
| Use Case: | The application software shall maintain the safe state based on the test results. E.g. a critical error judged according to the safety goals of the system may result in going to a safe state | |
| Dependencies: | [SRS_HTMSS_00001], [SRS_HTMSS_00002], [SRS_HTMSS_00004] | |
| Supporting Material: | | |
| | | |

J(FS_HTMSS_00001)

4.1.3 ECUM integration functionalities of HTMSS

Below HTMSS module functions shall be integrated in the ECUM module.

4.1.3.1 [SRS_HTMSS_00005] The HTMSS shall provide a service to configure/Initialise the MSTP tests during ECUM start up phase

| [| |
|----------------------|----------------------------------------------------------------------------------------------------------------------|
| Туре: | Valid |
| Description: | It shall be possible to configure the start up and shutdown tests during the ECUM start up phase via HTMSS interface |
| Rationale: | Initialization is required to pre-initialize the variables of HTMSS and the MSTP tests |
| Use Case: | During MCU start up the hardware is initialised to execute MSTP tests |
| Dependencies: | [SRS_HTMSS_00001], [SRS_HTMSS_00002] |
| Supporting Material: | |

J(FS_HTMSS_00001)

4.1.3.2 [SRS_HTMSS_00006] The HTMSS shall provide a service to trigger the tests execution

| [| |
|----------------------|----------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| Туре: | Valid |
| Description: | It shall be possible to trigger the start up tests during the ECUM start up phase and shutdown tests during ECUM shut down phase via HTMSS provided service function |
| Rationale: | The start up tests shall be performed during ECUM start up phase and the shut down tests shall be performed during the ECUM shutdown phase |
| Use Case: | During ECU start up and shutdown phase the configured MSTP tests are triggered for its execution |
| Dependencies: | |
| Supporting Material: | |

J(FS_HTMSS_00001)



4.1.4 Fault Operation

4.1.4.1 [SRS_HTMSS_00007] HTMSS shall provide callout options to handle the test failure conditions

| ſ | |
|----------------------|------------------------------------------------------------------------------------------------------------------|
| Туре: | Valid |
| Description: | On test failure (critical error conditions) it shall be possible to initiate error hooks as callout functions. |
| Rationale: | e.g. React to test failure to initiate ECU reset, safe state etc |
| Use Case: | The ECU software need to react to the test failures by preparing the system state (e.g. reset, halt, safe state) |
| Dependencies: | |
| Supporting Material: | |
| L EC UTMCC 00001) | |

J(FS_HTMSS_00001)



5 Requirements Tracing

| Requirement | Description | Satisfied by |
|----------------|-------------|-----------------------------------------------------------------------------------------------------------------------------|
| FS_HTMSS_00001 | | SRS_HTMSS_00001, SRS_HTMSS_00002, SRS_HTMSS_00003, SRS_HTMSS_00004, SRS_HTMSS_00005, SRS_HTMSS_00006, SRS_HTMSS_00007 |

Note: Currently HTMSS concept results are self contained hence, it does not refer other documents in AUTOSAR (i.e. FS_HTMSS_00001 is specified in TR_HWTestManagementIntegrationGuide).



6 References

6.1 Deliverables of AUTOSAR

[1] Layered Software Architecture

AUTOSAR_EXP_LayeredSoftwareArchitecture.pdf

[2] Technical report HTMSS

TR_HWTestManagementIntegrationGuide.pdf

[3] Specification of HTMSS

AUTOSAR_SWS_HTMSS.pdf

6.2 Related standards and norms

The ISO26262 part 5 chapter 8 requirements for hardware architecture metrics.