

Document Title	Diagnostic Extract Template
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	673

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R24-11

Document Change History			
Date	Release	Changed by	Description
2024-11-27	R24-11	AUTOSAR Release Management	- Improved handling of variants - Improved handling of security events - minor corrections / clarifications / editorial changes
2023-11-23	R23-11	AUTOSAR Release Management	- Improved diagnostic authentication - minor corrections / clarifications / editorial changes
2022-11-24	R22-11	AUTOSAR Release Management	- Support for nested data structures - Rework of ROE - Improvement of environmental condition - minor corrections / clarifications / editorial changes
2021-11-25	R21-11	AUTOSAR Release Management	- Support for Authentication service - Support for CpSoftwareCluster - minor corrections / clarifications / editorial changes
2020-11-30	R20-11	AUTOSAR Release Management	- Handling of Security Events - minor corrections / clarifications / editorial changes



△

2019-11-28	R19-11	AUTOSAR Release Management	• Increase support for variant handling • Improved Dem upstream mapping • Support for custom service instances • minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation • Changed Document Status from Final to published
2018-10-31	4.4.0	AUTOSAR Release Management	• minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation
2017-12-08	4.3.1	AUTOSAR Release Management	• minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation
2016-11-30	4.3.0	AUTOSAR Release Management	• Support for OBD • Support for J1939 • Support for Fim configuration • Support for environmental conditions • Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation
2015-07-31	4.2.2	AUTOSAR Release Management	• Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation
2014-10-31	4.2.1	AUTOSAR Release Management	• Initial Release

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Contents

1	Introduction	13
1.1	Overview	13
1.1.1	OEM	14
1.1.2	Application Developer	15
1.1.3	ECU-Supplier	15
1.1.4	Exchanging of Files	16
1.1.5	Relationship to software-component Service Needs	17
1.1.6	Recommendation and Hints	18
1.1.7	Limitations	18
1.2	Modeling of Diagnostic Configuration on classic and adaptive Platform	19
1.3	Scope	20
1.4	Document Conventions	21
1.5	About Tables	22
2	Use Cases	23
2.1	Use cases for diagnostic data exchange	23
2.2	Configuration of DCM	23
2.3	Configuration of DEM	23
2.4	Configuration of the Fim	26
2.4.1	Model Function Inhibition	26
2.4.2	Model Fim configuration before Dem exists	26
2.5	Configuration of J1939 Diagnostics	27
2.5.1	Modeling of J1939 Diagnostic Aspects independent of the Deployment	27
2.5.2	J1939 Diagnostic Content modeled in the Diagnostic Extract	28
3	Conceptual Background	29
3.1	Definition of relevant Diagnostic Elements	29
3.2	Abstraction from EcuC Level	29
3.3	Independence of Definition	30
3.3.1	Use of «atpSplittable» enabling separation of elements over several physical files	30
3.3.2	Use of self-contained mapping elements	30
4	Diagnostic Resources	32
4.1	Overview	32
4.2	Common Meta Model Elements	32
4.2.1	Data Identifier vs. Routine vs. Data Element	32
4.2.2	Overview	32
4.2.3	Diagnostic Data Identifier	34
4.2.4	Diagnostic Parameter	36
4.2.4.1	Overview	36
4.2.4.2	Size of a Diagnostic Parameter	39
4.2.4.3	Start Position of a Diagnostic Parameter	39

4.2.4.4	Content of a Diagnostic Parameter	40
4.2.4.5	Diagnostic Parameter as Reference Target	42
4.2.5	Diagnostic Data Element	42
4.2.5.1	Usage of SwDataDefProps	46
4.2.6	Definition of Arrays on the level of DiagnosticDataElement	52
4.2.6.1	Definition of textual Strings	53
4.2.7	Textual Documentation	53
4.2.8	Diagnostic Contribution	56
4.2.9	Diagnostic Protocol	60
4.2.10	Diagnostic Common Properties	66
4.3	Diagnostic Services	71
4.3.1	Introduction	71
4.3.2	Diagnostic Service Instance vs. Diagnostic Service Class	71
4.3.3	Diagnostic Access Permission	75
4.3.4	Diagnostic Session	78
4.3.5	Diagnostic Security Level	79
4.3.6	Diagnostic Authentication	80
4.3.7	Diagnostic Environmental Condition	82
4.3.7.1	Environmental Condition Formula	84
4.3.7.2	Atomic Conditions	87
4.3.8	Diagnostic Services supported by AUTOSAR	96
4.3.8.1	SessionControl	98
4.3.8.2	SecurityAccess	100
4.3.8.3	Authentication	104
4.3.8.4	EcuReset	109
4.3.8.5	CommunicationControl	111
4.3.8.6	ControlDTCSetting	118
4.3.8.7	DataByIdentifier	120
4.3.8.8	IOControl	126
4.3.8.9	RoutineControl	129
4.3.8.10	DynamicallyDefineDataIdentifier	136
4.3.8.11	ReadDataByPeriodicIdentifier	139
4.3.8.12	ResponseOnEvent	142
4.3.8.13	ReadDTCInformation	144
4.3.8.14	ClearDiagnosticInformation	147
4.3.8.15	Memory Services	148
4.3.8.16	RequestFileTransfer	157
4.3.9	OBD Diagnostic Services supported by AUTOSAR	158
4.3.9.1	OBD Mode 0x01 (RequestCurrentPowertrainDiagnosticData)	162
4.3.9.2	OBD Mode 0x02 (RequestPowertrainFreezeFrameData)	163
4.3.9.3	OBD Mode 0x03 / 0x07 (RequestEmissionRelatedDiagnosticTroubleCodes)	165
4.3.9.4	OBD Mode 0x04 (ClearResetEmissionRelatedDiagnosticInformation)	166

4.3.9.5	OBD Mode 0x06 (RequestOnBoardMonitoringTestResults)	167
4.3.9.6	OBD Mode 0x08 (RequestControlOfOnBoardDevice)	169
4.3.9.7	OBD Mode 0x09 (RequestVehicleInformation)	171
4.3.9.8	OBD Mode 0x0A (RequestEmissionRelatedDiagnosticTroubleCodesPermanentStatus)	174
4.3.10	UDS Diagnostic Services for supporting WWH-OBD	175
4.4	Diagnostic Event Handling	176
4.4.1	Introduction	176
4.4.2	DiagnosticEvent	176
4.4.2.1	Overview	176
4.4.2.2	Textual description	182
4.4.2.3	Associated Event Identification	184
4.4.3	DiagnosticTroubleCode	186
4.4.4	DiagnosticExtendedDataRecord	204
4.4.5	DiagnosticFreezeFrame	208
4.4.6	DiagnosticCondition	210
4.4.7	Diagnostic Debouncing	212
4.4.8	DiagnosticConditionGroup	217
4.4.9	DiagnosticOperationCycle	219
4.4.10	DiagnosticAging	220
4.4.11	DiagnosticIndicator	221
4.4.12	DiagnosticTestResult	222
4.4.13	OBD-related aspects of Dem Configuration	225
4.4.13.1	Dem Configuration for OBD-II	231
4.4.13.2	Dem Configuration for WWH-OBD	231
4.5	Functional Inhibition	232
4.5.1	Introduction	232
4.5.2	Alias Events	233
4.5.3	Function Identifier	233
4.6	Diagnostics on J1939	237
4.6.1	Introduction	237
4.6.2	Suspect Parameter Number	238
4.6.3	J1939Dcm-related Modeling	239
4.6.4	Dem-related Modeling	239
5	Diagnostic Mapping	243
5.1	Introduction	243
5.2	Mapping of Diagnostic Services	244
5.2.1	Diagnostic Service Data Mapping	247
5.2.2	Diagnostic Service Data Mapping for OBD	252
5.2.3	Diagnostic Service Software Mapping	256
5.2.4	Diagnostic Secure Coding	261
5.2.5	Diagnostic Authentication Transmit Certificate Mapping	262
5.2.6	Security Event Reporting Mode Mapping	263
5.3	Event-related Diagnostic Mapping	264

5.3.1	DiagnosticEvent to DtcUds Mapping	265
5.3.2	DiagnosticEvent to DiagnosticOperationCycle Mapping	266
5.3.3	DiagnosticEvent to DebounceAlgorithm Mapping	267
5.3.4	DiagnosticEvent to EnableConditionGroup Mapping	268
5.3.5	DiagnosticEvent to StorageConditionGroup Mapping	269
5.3.6	DiagnosticEvent to Port Mapping	270
5.3.7	DiagnosticOperationCycle to Port Mapping	272
5.3.8	DiagnosticEnableCondition to Port Mapping	273
5.3.9	DiagnosticStorageCondition to Port Mapping	274
5.3.10	Dem Provided Data Mapping	276
5.3.11	Master to Slave Event Mapping	278
5.3.12	Diagnostic Event to Security Event Mapping	279
5.4	Mapping of Function Inhibition	283
5.4.1	Mapping between Inhibition Source and Diagnostic Event	283
5.4.2	Alias Event Mapping	284
5.4.3	Mapping of Function Identifiers to interested software-components	287
5.4.4	Diagnostic IUMPR to Function Identifier Mapping	289
5.5	J1939-related DiagnosticMapping	290
5.5.1	SPN Mapping	290
5.5.2	Mapping between Software-Components and Controller Applications	292
5.5.3	Mapping between DiagnosticEvent and J1939 DTC	293
5.6	Diagnostic Configuration of CP Software Clusters	294
5.6.1	Association of Diagnostic Mapping with a CP Software Cluster	294
5.6.2	Mapping between DEXT elements and CP Software Cluster Resources	295
5.6.3	Mapping between Diagnostic Events and CP Software Cluster Resources	296
5.6.4	Mapping between Diagnostic Data Elements and CP Software Cluster Resources	297
5.6.5	Mapping between Diagnostic Routines and CP Software Cluster Resources	298
5.6.6	Mapping between Diagnostic Function Identifiers and CP Software Cluster Resources	299
A	Reference Material	301
A.1	Imposition Times of Constraints	301
A.2	Abbreviations	301
A.3	Requirements Tracing	304
B	Examples	308
B.1	Examples of the Definition of nested Diagnostic Parameters	308
B.1.1	Simple Nesting Example	308
B.1.2	Simple Nesting Example with Gaps	309
B.1.3	Two-Level Nesting Example	311
B.1.4	Array of Struct Example	313

B.2	Examples of Diagnostic Service Data Mapping	315
B.2.1	Simple Structure	315
B.2.2	Nested Structure	317
B.2.3	Array of Structure	318
B.3	Examples of the Definition of Mature and De-Mature Condition	320
B.4	Examples of the Definition of semi-formal Textual Description	321
B.5	Examples of the Definition of Pre- and Run-Condition	322
C	Mentioned Class Tables	323
D	Glossary	363
E	Change history of AUTOSAR traceable items	367
E.1	Traceable item history of this document according to AUTOSAR Release R4.2.1	367
E.1.1	Added Specification Items in R4.2.1	367
E.1.2	Added Constraints in R4.2.1	370
E.2	Traceable item history of this document according to AUTOSAR Release R4.2.2	372
E.2.1	Added Traceables in R4.2.2	372
E.2.2	Changed Traceables in R4.2.2	372
E.2.3	Deleted Traceables in R4.2.2	372
E.2.4	Added Constraints in R4.2.2	373
E.2.5	Changed Constraints in R4.2.2	373
E.2.6	Deleted Constraints in R4.2.2	373
E.3	Traceable item history of this document according to AUTOSAR Release R4.3.0	373
E.3.1	Added Traceables in R4.3.0	373
E.3.2	Changed Traceables in R4.3.0	375
E.3.3	Deleted Traceables in R4.3.0	375
E.3.4	Added Constraints in R4.3.0	375
E.3.5	Changed Constraints in R4.3.0	377
E.3.6	Deleted Constraints in R4.3.0	377
E.4	Traceable item history of this document according to AUTOSAR Release R4.3.1	377
E.4.1	Added Specification Items in 4.3.1	377
E.4.2	Changed Specification Items in 4.3.1	377
E.4.3	Deleted Specification Items in 4.3.1	377
E.4.4	Added Constraints in 4.3.1	378
E.4.5	Changed Constraints in 4.3.1	378
E.4.6	Deleted Constraints in 4.3.1	378
E.5	Traceable item history of this document according to AUTOSAR Release R4.4.0	379
E.5.1	Added Specification Items in 4.4.0	379
E.5.2	Changed Specification Items in 4.4.0	379
E.5.3	Deleted Specification Items in 4.4.0	379
E.5.4	Added Constraints in 4.4.0	380

E.5.5	Changed Constraints in 4.4.0	380
E.5.6	Deleted Constraints in 4.4.0	380
E.6	Traceable item history of this document according to AUTOSAR Release R19-11	381
E.6.1	Added Specification Items in 19-11	381
E.6.2	Changed Specification Items in 19-11	381
E.6.3	Deleted Specification Items in 19-11	381
E.6.4	Added Constraints in 19-11	382
E.6.5	Changed Constraints in 19-11	382
E.6.6	Deleted Constraints in 19-11	382
E.7	Traceable item history of this document according to AUTOSAR Release R20-11	382
E.7.1	Added Specification Items in R20-11	382
E.7.2	Changed Specification Items in R20-11	383
E.7.3	Deleted Specification Items in R20-11	383
E.7.4	Added Constraints in R20-11	383
E.7.5	Changed Constraints in R20-11	386
E.7.6	Deleted Constraints in R20-11	386
E.8	Traceable item history of this document according to AUTOSAR Release R21-11	387
E.8.1	Added Specification Items in R21-11	387
E.8.2	Changed Specification Items in R21-11	387
E.8.3	Deleted Specification Items in R21-11	388
E.8.4	Added Constraints in R21-11	388
E.8.5	Changed Constraints in R21-11	389
E.8.6	Deleted Constraints in R21-11	389
E.9	Traceable item history of this document according to AUTOSAR Release R22-11	390
E.9.1	Added Specification Items in R22-11	390
E.9.2	Changed Specification Items in R22-11	391
E.9.3	Deleted Specification Items in R22-11	391
E.9.4	Added Constraints in R22-11	391
E.9.5	Changed Constraints in R22-11	392
E.9.6	Deleted Constraints in R22-11	392
E.10	Traceable item history of this document according to AUTOSAR Release R23-11	393
E.10.1	Added Specification Items in R23-11	393
E.10.2	Changed Specification Items in R23-11	393
E.10.3	Deleted Specification Items in R23-11	394
E.10.4	Added Constraints in R23-11	394
E.10.5	Changed Constraints in R23-11	394
E.10.6	Deleted Constraints in R23-11	395
E.10.7	Added Advisories in R23-11	395
E.10.8	Changed Advisories in R23-11	395
E.10.9	Deleted Advisories in R23-11	395

E.11	Traceable item history of this document according to AUTOSAR Release R24-11	395
E.11.1	Added Specification Items in R24-11	395
E.11.2	Changed Specification Items in R24-11	396
E.11.3	Deleted Specification Items in R24-11	396
E.11.4	Added Constraints in R24-11	396
E.11.5	Changed Constraints in R24-11	397
E.11.6	Deleted Constraints in R24-11	397
E.11.7	Added Advisories in R24-11	397
E.11.8	Changed Advisories in R24-11	397
E.11.9	Deleted Advisories in R24-11	397
F	Modeling of InstanceRef	398
F.1	Introduction	398
F.2	Modeling	399
G	Upstream Mapping	402
G.1	Introduction	402
G.2	Dcm	402
G.3	Dem	653
G.4	FiM	732
G.5	IdsM	735
G.6	J1939Dcm	736
G.7	KeyM	746
H	Splitable Elements in the Scope of this Document	747
I	Variation Points in the Scope of this Document	749

References

- [1] Specification of RTE Software
AUTOSAR_CP_SWS_RTE
- [2] Layered Software Architecture
AUTOSAR_CP_EXP_LayeredSoftwareArchitecture
- [3] Specification of ECU Configuration
AUTOSAR_CP_TPS_ECUConfiguration
- [4] ASAM MCD 2D ODX
<http://www.asam.net>
ASAM MCD-2D ODX v2.2.0.pdf
- [5] System Template
AUTOSAR_CP_TPS_SystemTemplate
- [6] Specification of ECU Configuration Parameters (XML)
AUTOSAR_CP_MOD_ECUConfigurationParameters
- [7] Specification of Manifest
AUTOSAR_AP_TPS_ManifestSpecification
- [8] Software Component Template
AUTOSAR_CP_TPS_SoftwareComponentTemplate
- [9] Basic Software Module Description Template
AUTOSAR_CP_TPS_BSWModuleDescriptionTemplate
- [10] Specification of Diagnostic Communication Manager
AUTOSAR_CP_SWS_DiagnosticCommunicationManager
- [11] Specification of Diagnostic Event Manager
AUTOSAR_CP_SWS_DiagnosticEventManager
- [12] Standardization Template
AUTOSAR_FO_TPS_StandardizationTemplate
- [13] Specification of Function Inhibition Manager
AUTOSAR_CP_SWS_FunctionInhibitionManager
- [14] SAE J1939 – Serial Control and Communications Heavy Duty Vehicle Network
- [15] Generic Structure Template
AUTOSAR_FO_TPS_GenericStructureTemplate
- [16] Collection of blueprints for AUTOSAR M1 models
AUTOSAR_FO_MOD_GeneralBlueprints
- [17] ISO 14229-1 – Unified diagnostic services (UDS) – Part 1: Specification and requirements (Release 2006-12)
<https://www.iso.org>

- [18] ISO 26021-2 – Road vehicles – End-of-life activation of on-board pyrotechnic devices – Part 2: Communication requirements
<https://www.iso.org>
- [19] ISO 15031-5 – Road vehicles – Communication between vehicle and external equipment for emission-related diagnostic – Part 5: Emission-related diagnostic services.
<https://www.iso.org>
- [20] ISO 27145-3:2012 – Road vehicles – Implementation of World-Wide Harmonized On-Board Diagnostics (WWH-OBD) communication requirements – Part 3: Common message dictionary
<https://www.iso.org>
- [21] SAE J1939-73 Application Layer – Diagnostics
- [22] Security Extract Template
AUTOSAR_FO_TPS_SecurityExtractTemplate
- [23] Specification of Intrusion Detection System Manager
AUTOSAR_CP_SWS_IntrusionDetectionSystemManager
- [24] SAE J1979 – E/E Diagnostic Test Modes
- [25] Requirements on Diagnostic Extract Template
AUTOSAR_CP_RS_DiagnosticExtractTemplate
- [26] Software Process Engineering Meta-Model Specification
<http://www.omg.org/spec/SPEM/2.0/>

1 Introduction

1.1 Overview

The distributed nature of an AUTOSAR [ECU](#) development requires an optimized capturing of information. In particular, diagnostic information (i.e. DEM and DCM configuration) shall be captured only once by the person with the best knowledge and therefore being able to take responsibility better than one centralized individual.

In the configuration approach before the advent of the [DiagnosticExtract](#), the Basic Software Modules DCM and DEM are entirely configured centrally. During integration, all SW-Cs above the RTE [1, SWS RTE] (Application Software) introduce ports to be connected to the BSW modules, see [2, EXP Layered Software Architecture]. Additionally, SW-Cs express needs which shall be fulfilled by the BSW.

The market shows a high demand for transferring diagnostic demands of the [OEM](#)-specific configuration process to their tier-1 suppliers.

In the past, due to the absence of integral options, many file formats like ODX or EcuC (see [3, TPS EcuC Configuration]) are often used. But neither ODX nor EcuC is well suited to transfer this information.

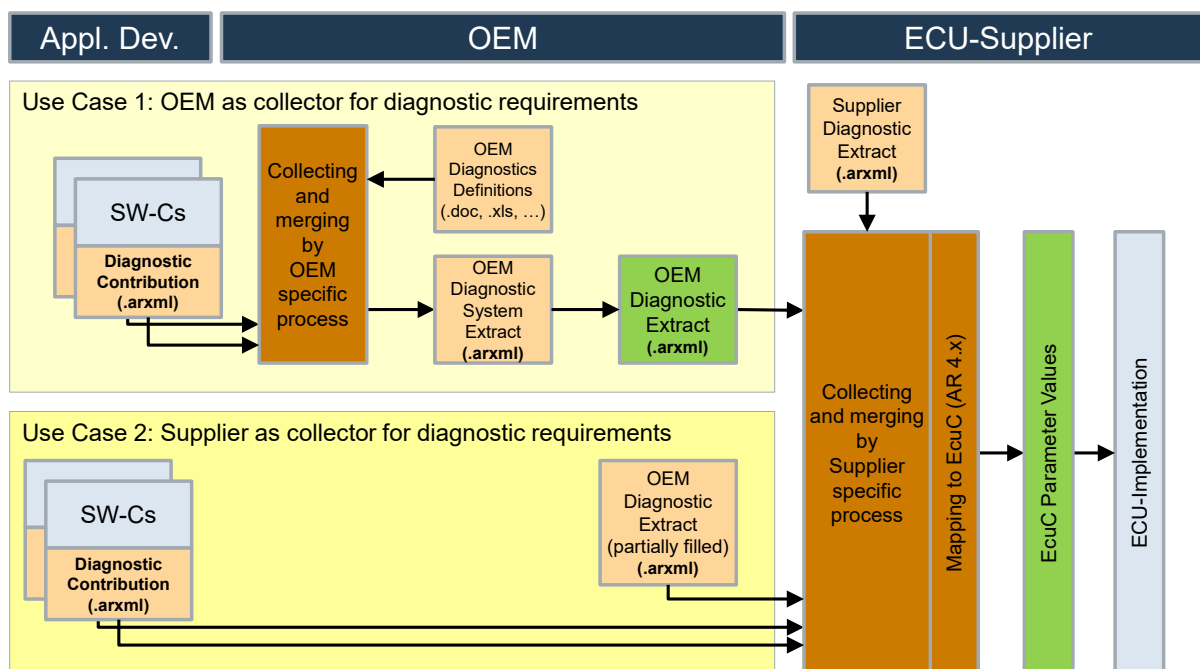


Figure 1.1: Scope of this document in the [ECU](#) Development work-flow

For example, [4, ODX] lacks in fault memory details and EcuC (which was never designed for becoming the vehicle for data exchange between different organizations) has a very generic nature that renders the enforcement of a strict model formalization very difficult.

On top of that, the integration of EcuC definitions into an existing configuration (especially the PDUs) cannot be fully automated.

Therefore, the obvious solution approach has been to define a new standardized AUTOSAR exchange format on diagnostic functionality that can be used similar to a System Description, formalized as an ARXML file.

In this spirit, the configuration of diagnostic functionality becomes similar to the configuration of the communication part within the system description, see [5, TPS System Template].

Figure 1.1 shows the configuration process of diagnostics for two generalized use cases. This process involves three parties:

- **OEM** or diagnostic requester
- **Application Developer** or Application Developer
- **ECU-Supplier** or integrator

The specific role of these contributors to the diagnostic extract is in detail explained in the following sub-chapters.

1.1.1 OEM

The **OEM** or requester of diagnostic data uses the `DiagnosticExtract` to define the diagnostic interfaces of one or multiple ECUs. It may also define some `InternalBehaviors` as requirements for the **ECU-Supplier** or **Application Developer**

- Defines the values of the `DTCS`
- Defines the `UDS` services and sub-services supported by the ECUs
- Defines the required events needed by a specific composition implemented by an **Application Developer**

NOTE: This list represents an example; this document does not define a specific ownership of each element.

In the first use case, the `DiagnosticExtract` is used to exchange information which is transformed into the EcuC configuration (M2 to M1 mapping, see also [3, TPS Ecu Configuration] and [6, MOD Ecu Configuration Parameters]).

Second, the **OEM** uses the `DiagnosticExtract` to document requirements to be implemented by a supplier. These requirements are expressed in textual language and can not be mapped directly to any EcuC configuration parameters (no M2 to M1 mapping possible).

1.1.2 Application Developer

The Application Developers implement their **software-components** with the corresponding **software-component description**. The role “Application Developer” can be assumed by both an **OEM** and a supplier. In other words, both **OEM** and supplier may contribute application software to a given ECU.

With the introduction of this concept, the Application Developer has the possibility to provide diagnostic information relevant to the software-components as part of the **DiagnosticExtract**.

The Application Developer may also receive some input as requirement from the **OEM** within the **DiagnosticExtract** in textual form as for example:

Example 1.1

Definition of the content of a specific `ReadDataByIdentifier` implemented by this software-component

Example 1.2

Definition of the events needed for this software-component

NOTE: Only mentioned as as example content. This document does not define a specific ownership of each element.

In the first use case, the Application Developer defines the parameters of a specific `ReadDataByIdentifier`, i.e. the content of the diagnostic request but not the **DID** itself. The **DID** of this command will usually be defined by the **OEM**.

Secondly, the software-component events including information like `Debouncing` and `OperationCycle` may be defined by the **Application Developer**. The **Application Developer** may also define events and diagnostic jobs which are not needed by a specific **OEM** but for another one.

Suppliers may use the same software for multiple **OEMs** and need to reuse it. This implies that some **DiagnosticExtract** information coming from a software-component may be ignored during the integration if not needed for a specific project.

1.1.3 ECU-Supplier

The **ECU-Supplier** or integrator receives one or several **DiagnosticExtract** files from the **OEM** and from multiple **Application Developers**. The main goal of the **Integrator** is to integrate all delivered **DiagnosticExtract** and to generate the EcuC configuration from it.

Since this concept does not define a specific ownership for each element like DIDs, parameters of a **UDS** service, Events, Sessions, etc. the integrator has to ensure that the complete information is still valid after merging it.

- Mapping of **DTCs** to Events
- Merge of Events
- Mapping of services

Some **DTCs** may already be mapped to events - especially in cases where both come from the same party. But if the **DTCs** are defined by the **OEM** and the SW implemented by other supplier acting as an **Application Developer** the integrator has to ensure that both are mapped together.

In some cases, an Event may be defined multiple times. An **OEM** defines the Events which shall be implemented by an **Application Developer**. A Supplier implements a software-component which will be used in multiple projects and which also detects this type of error and also defines this same event.

Both events may have different naming but the same meaning. The integrator has to detect this redundancy during the integration and merge them together.

In another case, the **OEM** requires a specific `ReadDataByIdentifier` and an **Application Developer** implements it. If the implementation is performed for one specific project only, the **Application Developer** may map the DID from the **OEM** to the already defined job in their software-component.

In other cases, in which the **Application Developer** implements a generic diagnostic job, it will be a task of the **ECU-Supplier** to merge this information and to map the jobs to the corresponding **DID**.

1.1.4 Exchanging of Files

During an **ECU** development project, the three main roles (**OEM**, Application Developer, **ECU** Integrator) exchange **DiagnosticExtract** files. The timing and frequency of exchanges and the content in each of these exchanged files is highly dependent on the individual project setup and situation.

Therefore, the **DiagnosticExtract** format has been designed to allow for gradual enrichment of definitions contributed at largely arbitrary points in time by the different roles in order to meet the needs of “Decentralized Configuration”.

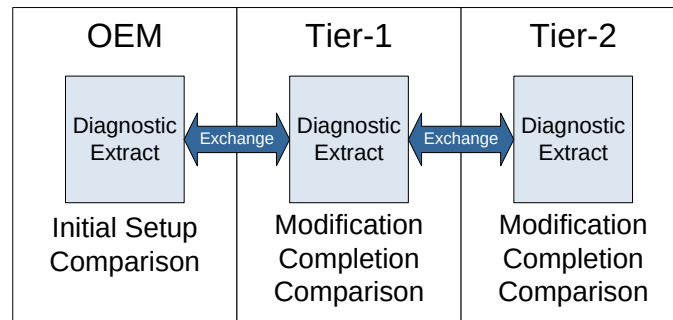


Figure 1.2: Exchange of diagnostic configuration between OEM, Tier-1, and Tier-2

For any exchange path between any two roles, the same file format based on the [DiagnosticExtract](#) template is used. It is then up to a company specific process and tooling to merge the collected [DiagnosticExtract](#) files while resolving conflicts (contradictions, redundancies etc.).

As final result, a consistent and complete [DiagnosticExtract](#) file is available which is input to derivation of the configuration for the diagnostic modules of the Basic Software.

Even after the [DiagnosticExtract](#) has been fully integrated and is ready to go for deriving the configuration of the diagnostic stack on EcuC level it is still foreseen to feed it back to e.g. an OEM.

In this case the OEM has the ability to review the configuration of the diagnostic stack on the level of the diagnostic extract.

At some point, this information may also be taken to (directly or via indirection of other formats) create a configuration of a diagnostic client.

1.1.5 Relationship to software-component Service Needs

Before the introduction of the Diagnostic Extract, Service Needs were used to describe diagnostic requirements on software-component level. These configuration requirements are referenced to the related BSW module DCM or DEM in order to provide the corresponding configuration on BSW level.

The usage of Service Needs is only possible on Atomic software-component level whereas the assignment of diagnostic demands must be possible on Composition level.

The software-component Service Needs within the software-component Description are still to be used along with the [DiagnosticExtract](#) in order to annotate the software-component ports which are relevant for further mapping and handling as defined by the [DiagnosticExtract](#).

From software-component Developer's perspective, the `DiagnosticExtract` is therefore used partially as substitution and partially as extension of the software-component Service Needs. The reasoning for "substitution" is the avoidance of redundant diagnostic definitions.

Since some diagnostic properties potentially definable by software-component Developers are not covered in software-component Service Needs, the `DiagnosticExtract` can also be viewed as "extension" to the original purpose of software-component Service Needs.

1.1.6 Recommendation and Hints

Multiple parties may have different understanding of which parts shall be provided by each one. There is no defined rule to indicate who is responsible for each part. At the end, it is the **ECU-Supplier** in his role as integrator who has to ensure that all mappings are done and that the `ECU` runs as expected by the `OEM`.

In case the `OEM` does not have own diagnostic requirements, the **ECU-Supplier** has to provide the complete `DiagnosticExtract`. In this case, the `OEM` may only receive the `DiagnosticExtract` as part of the delivery. The process itself how the parties work with this format is not defined within this specification.

Figure 1.1 shows a recommended way how to handle the `DiagnosticExtract` between the different parties. In use case 1, some software-components are implemented by the `OEM` (or by a Supplier of the `OEM`) and the first merging of `DiagnosticExtract` data occurs at the `OEM`.

In use case 2, the `OEM` provides the diagnostic requirements via `DiagnosticExtract` and multiple **Application Developer** provide information related to their implementation, the merging is performed completely by the **ECU-Supplier**.

Also, a combination of use cases 1 and 2 is allowed. Also, the **ECU-Supplier** may implement some part of the SW inclusive their corresponding `DiagnosticExtract`.

1.1.7 Limitations

This release of the `DiagnosticExtract` template focuses on defining diagnostic requirements a single `ECU` only. For the time being, distributed diagnostic functionality for a system or partial system consisting of multiple ECUs cannot be defined using the `DiagnosticExtract` template.

In future releases, the `DiagnosticExtract` template is expected to be extended to also cover configuration of distributed diagnostic functionality. Similar to the description of communication dependencies in the System Description, it shall be possible to describe diagnostic demands on system level to derive the diagnostic demands for a specific `ECU` from this description.

In general, the [DiagnosticExtract](#) does not support process-related parts to document the maturity of diagnostic configuration data. This means, that a data object cannot be marked as “draft” or “released”.

This issue needs to be solved by AUTOSAR within a general concept in a future release. Therefore, it does not make sense to introduce a solution for diagnostics only.

1.2 Modeling of Diagnostic Configuration on classic and adaptive Platform

The configuration of the “external behavior” of the AUTOSAR diagnostic stack is done by means of the so-called [DiagnosticExtract](#). The [DiagnosticExtract](#) in general extends to both the *AUTOSAR classic platform* and the *AUTOSAR adaptive platform*.

In particular, some parts of the [DiagnosticExtract](#) apply only for the *AUTOSAR classic platform*, some parts are shared between the *AUTOSAR classic platform* and the *AUTOSAR adaptive platform*, and some parts apply only for the *AUTOSAR adaptive platform*.

The parts that are specific to the *AUTOSAR classic platform*, and the parts that apply to both the *AUTOSAR classic platform* and the *AUTOSAR adaptive platform* are documented in the deliverable “TPS Diagnostic Extract Template”, i.e. this document.

For technical reasons, the parts that apply to the *AUTOSAR adaptive platform* cannot be included in this document, “TPS Diagnostic Extract Template” and are consequently described in the document [7, TPS Manifest Specification].

The parts about the configuration of Diagnostic Management, as described in “TPS Manifest Specification”, fit seamlessly into the same modeling framework that is used on the *AUTOSAR classic platform*. This means that the specific parts for the *AUTOSAR adaptive platform* utilize the shared parts that are described in the “TPS Diagnostic Extract Template”.

In other words, readers who want to focus on [DiagnosticExtract](#) specifically for application on the *AUTOSAR classic platform* may concentrate on reading the “TPS Diagnostic Extract Template”.

On the other hand, readers who'd like to understand how the [DiagnosticExtract](#) works on the *AUTOSAR adaptive platform* will have to read the diagnostics-related chapters of the “TPS Manifest Specification”, plus the relevant parts of the “TPS Diagnostic Extract Template”.

1.3 Scope

This document describes the formal description of contributions to the diagnostic configuration.

On the level of meta-modeling, the content described in this document conceptually relates to the definition of [SwcServiceDependency](#) or [BswServiceDependency](#), as defined by the [8, TPS Software Component Template] or [9, BSW Module Description Template].

Further relations exist to the specification of communication in AUTOSAR systems as described by the [5, TPS System Template].

Further relations exist to the specification of the [10, SWS Diagnostic Communication Manager] as well as to the [11, SWS Diagnostic Event Manager].

The relation of the [DiagnosticExtract](#) to the rest of the AUTOSAR meta-model is sketched in [Figure 1.3](#).

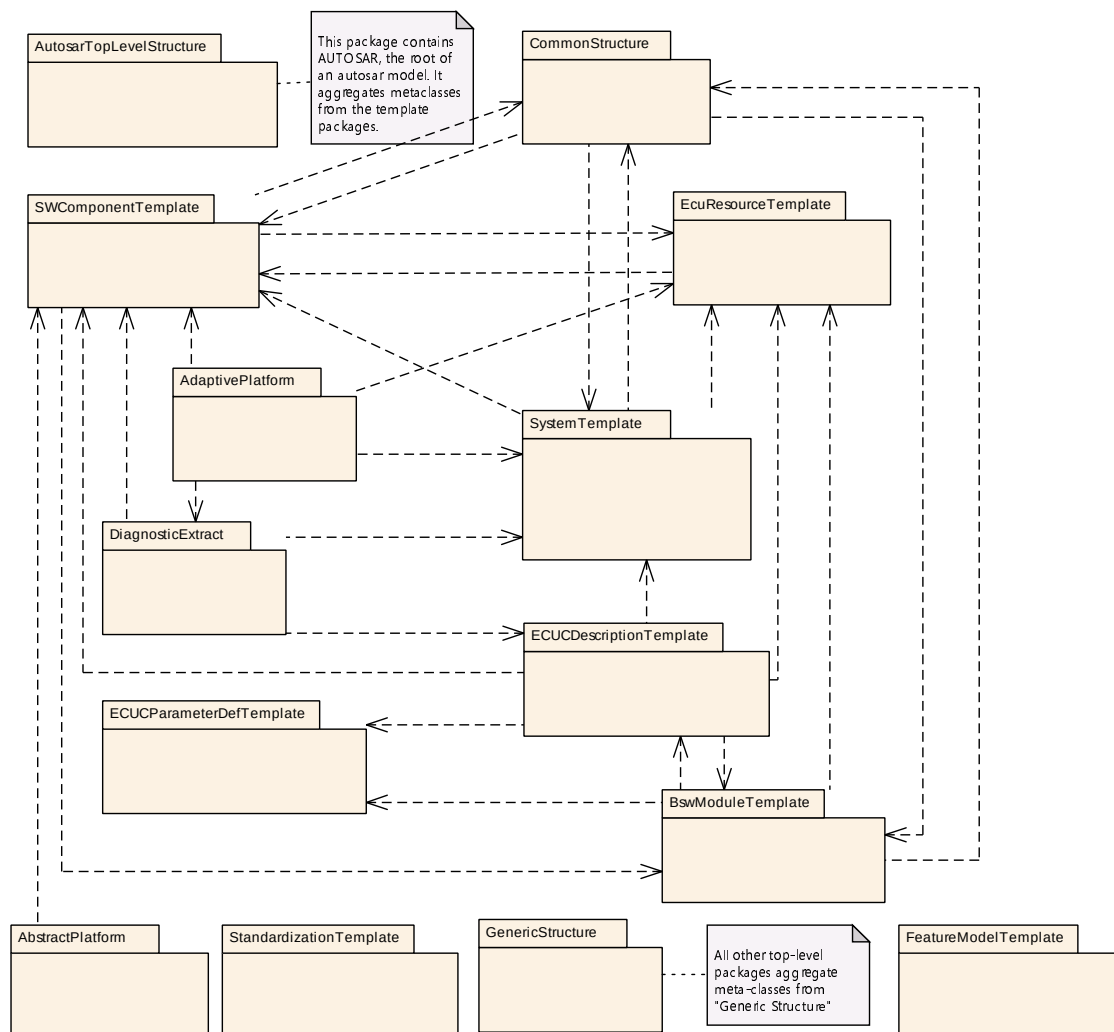


Figure 1.3: The relation of the [DiagnosticExtract](#) to the rest of the AUTOSAR meta-model

1.4 Document Conventions

Technical terms are typeset in mono spaced font, e.g. `PortPrototype`. As a general rule, plural forms of technical terms are created by adding "s" to the singular form, e.g. `PortPrototypes`. By this means the document resembles terminology used in the AUTOSAR XML Schema.

This document contains constraints in textual form that are distinguished from the rest of the text by a unique numerical constraint ID, a headline, and the actual constraint text starting after the `[` character and terminated by the `]` character.

The purpose of these constraints is to literally constrain the interpretation of the AUTOSAR meta-model such that it is possible to detect violations of the standardized behavior implemented in an instance of the meta-model (i.e. on M1 level).

Makers of AUTOSAR tools are encouraged to add the numerical ID of a constraint that corresponds to an M1 modeling issue as part of the diagnostic message issued by the tool.

The attributes of the classes introduced in this document are listed in form of class tables. They have the form shown in the example of the top-level element AUTOSAR:

Please note that constraints are not supposed to be enforceable at any given time in an AUTOSAR workflow. During the development of a model, constraints may legitimately be violated because an incomplete model will obviously show inconsistencies.

However, at specific points in the workflow, constraints shall be enforced as a safeguard against misconfiguration.

The points in the workflow where constraints shall be enforced, sometimes also known as the "binding time" of the constraint, are different for each model category, e.g. on the classic platform, the constraints defined for software-components are typically enforced prior to the generation of the RTE while the constraints against the definition of an Ecu extract shall be applied when the Ecu configuration for the Com stack is created.

For each document, possible binding times of constraints are defined and the binding times are typically mentioned in the constraint themselves to give a proper orientation for implementers of AUTOSAR authoring tools.

Let `AUTOSAR` be an example of a typical class table. The first rows in the table have the following meaning:

Class: The name of the class as defined in the UML model.

Package: The UML package the class is defined in. This is only listed to help locating the class in the overall meta model.

Note: The comment the modeler gave for the class (class note). Stereotypes and UML tags of the class are also denoted here.

Base Classes: If applicable, the list of direct base classes.

The headers in the table have the following meaning:

Attribute: The name of an attribute of the class. Note that AUTOSAR does not distinguish between class attributes and owned association ends.

Type: The type of an attribute of the class.

Mul.: The assigned multiplicity of the attribute, i.e. how many instances of the given data type are associated with the attribute.

Kind: Specifies, whether the attribute is aggregated in the class (`aggr` aggregation), an UML attribute in the class (`attr` primitive attribute), or just referenced by it (`ref` reference). Instance references are also indicated (`iref` instance reference) in this field.

Note: The comment the modeler gave for the class attribute (role note). Stereotypes and UML tags of the class are also denoted here.

Please note that the chapters that start with a letter instead of a numerical value represent the appendix of the document. The purpose of the appendix is to support the explanation of certain aspects of the document and does not represent binding conventions of the standard.

The verbal forms for the expression of obligation specified in [TPS_STDT_00053] shall be used to indicate requirements, see Standardization Template, chapter Support for Traceability ([12]).

The representation of requirements in AUTOSAR documents follows the table specified in [TPS_STDT_00078], see Standardization Template, chapter Support for Traceability ([12]).

1.5 About Tables

There is a number of tables in this document that describe the applicability or multiplicity of model elements. These tables contain empty cells, which represent a “not applicable” meaning. Model elements that correspond to an empty cell shall not exist in the context described by the respective table cell.

If the value of a table cell shall indicate that that either the existence or multiplicity of the represented model element shall be ignored anyway, the table cell gets the content “d/c” for “don’t care”. This means that if the respective model element exists, it shall be ignored in the downstream processing of the model.

2 Use Cases

2.1 Use cases for diagnostic data exchange

The basic usage of the [DiagnosticExtract](#) is the exchange of diagnostic data between the different parties involved in the diagnostic development process to allow the configuration of the [DCM](#) and the [DEM](#) and to provide the description of corresponding application interfaces to implement diagnostic services and fault handling.

2.2 Configuration of DCM

As depicted in [Figure 2.1](#), the configuration of the [DCM](#) includes the setup of diagnostic services and the assignment of data objects provided by one or more software components (e.g. Composition 1, Composition 2).

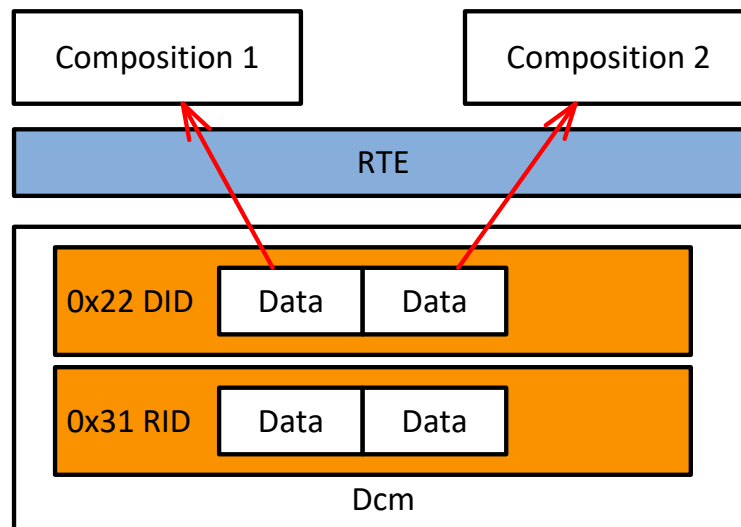


Figure 2.1: Assignment of [DCM](#)-related data objects

2.3 Configuration of DEM

As sketched in [Figure 2.2](#), the configuration of the [DEM](#) includes fault memory data ([DTCs](#) and environmental data) and the assignment of corresponding data by one or more [SwComponentTypes](#) (e.g. Composition 1, Composition 2).

As already explained, the diagnostic development process is distributed among different parties. On the one hand side, the [OEM](#) needs to describe the general requirements for a diagnostic system that have to be implemented by an ECU:

1. Depending on the diagnostic system, the [OEM](#) can provide a completely or partly-filled [DiagnosticExtract](#) including the description of [PortInterfaces](#):
 - Integrator/SWC developer ([OEM](#) or Tier 1) is responsible for the completion (detailing of predefined diagnostic content).
 - Integrator/SWC developer ([OEM](#) or Tier 1) is responsible for the specific configuration of diagnostic content defined by himself.
 - New integration of updated Diagnostic descriptions by integrator.
2. Return of completely or partly-filled [DiagnosticExtract](#) to [OEM](#) for:
 - Documentation
 - [ECU](#) testing
 - Integration reviews
 - Failure correction

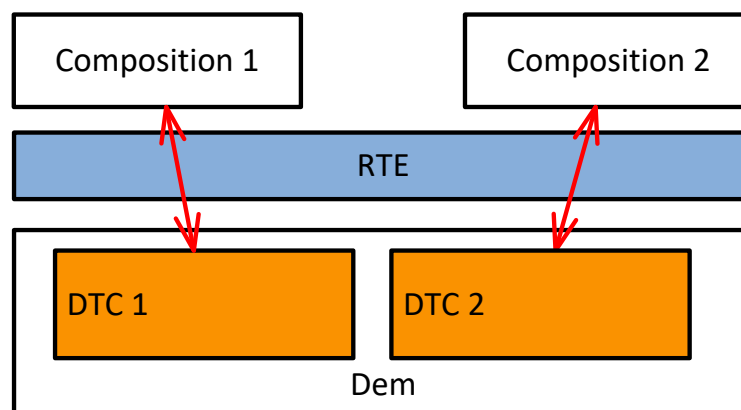


Figure 2.2: Assignment of DEM-related data objects

Use case examples:

- Configuration of [UDS](#) service 0x22 ([ReadDataByIdentifier](#))
- Configuration of [UDS](#) service 0x2E ([WriteDataByIdentifier](#))
- Configuration of [UDS](#) service 0x31 ([RoutineControl](#))
- Configuration of [UDS](#) service 0x2F ([I/O-Control](#))
- Configuration of [DEM DTCs](#)
- Configuration of Combined Events
- Mapping of events to [DTCs](#)
- Configuration of [DTC](#)-related environmental data

- Mapping of [DEM](#) Events to their corresponding Enable Conditions and Storage Conditions
- Configure general [DCM](#) parameters
- Description of diagnostic demands that are not relevant for code generation but have to be exchanged between [OEM](#) and Tier1 (e.g. set and reset condition for a [DTC](#))

Refinement of use cases, as also depicted in [Figure 2.3](#):

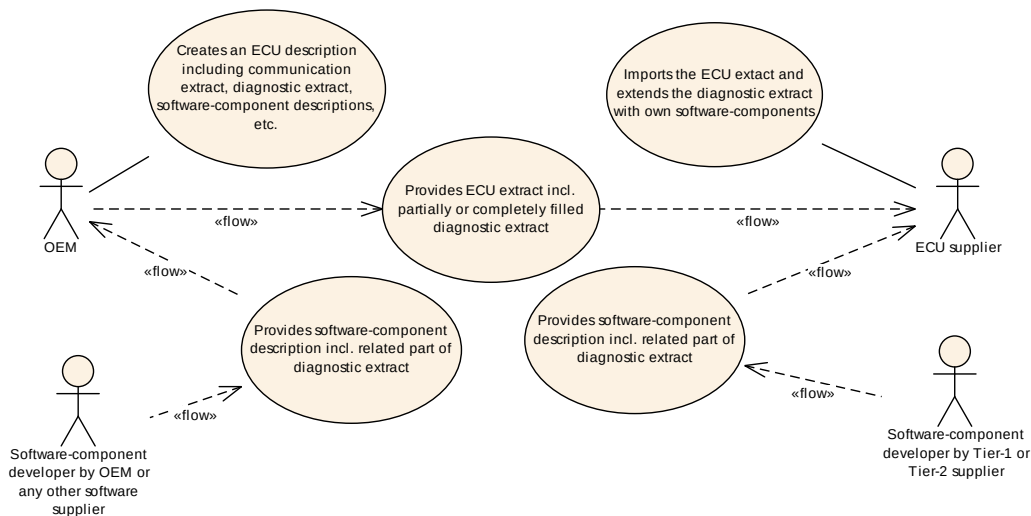


Figure 2.3: Workflow scenario for diagnostic data exchange

The [OEM](#) already provides a System Template for an [ECU](#) which describes the [ECU](#) Supplier SW parts as a [CompositionSwComponentType](#) where only inputs and outputs are known.

1. The [OEM](#) creates a [DiagnosticExtract](#) which describes the diagnostic interfaces of an ECU. Supported services are described (e.g. Read Data By Identifier/Write Data by Identifier/Routine Control) as well as their corresponding input/output parameters and return values (those which are optional in [UDS](#) standard).
2. SWC Developer at [OEM](#) or [OEM](#) SW Supplier develops SWC and also describes the Diagnostic information using [ServiceNeeds](#) as diagnostic contribution.
3. The [OEM](#) Diagnose Responsible for a Project creates the mappings between the [DiagnosticExtract](#) and the SWC available on [OEM](#) side (from 2.).
4. The [OEM](#) Diagnostic Responsible for a Project creates the mappings between the [DiagnosticExtract](#) and the [CompositionSwComponentTypes](#) which will be implemented by the [ECU](#) Supplier or SW Developer.
5. The [ECU](#) Suppliers receives the [ECU](#) Extract including [DiagnosticExtract](#) from the [OEM](#) and imports it to the project.

6. In the same way as in point 2., the SWC Developer on supplier or Tier 2 side describes the Diagnostic information using *ServiceNeeds* as diagnostic contribution.

In the same way as in point 3: The ECU Supplier Diagnostic Responsible creates the mapping between the *PortInterfaces* of the *DiagnosticExtract* (from 5.) and the *SwComponentTypes* as provided in 6.

For the usage of indicators, it might happen that indicators defined on BSW level in *DEM* might not be automatically mapped to the implementation on SWC level. This would then require a manual mapping step by the integrator to resolve the mismatch.

2.4 Configuration of the Fim

2.4.1 Model Function Inhibition

A typical use case for the *FIM* is the definition of “control mechanisms for software components and the functionality therein”, see [13, SWS Function Inhibition Manager]. By this means, the *FIM* can significantly modify the behavior of the application software at run-time, e.g. in response to a sensor failure.

The conditions for deciding about inhibitions are derived from *diagnostic events*. If a *diagnostic event* that relates to a hardware sensor is reported as “failed” then the *FIM* can degrade the behavior of the application software to no longer rely on the sensor information that has become unreliable.

Consequently, the *DiagnosticExtract* needs to provide the basic mechanisms to create the definition of such inhibition rules that relate pieces of the application software (which are visible to the *DiagnosticExtract* as formally defined *SwComponentTypes*) to the definition of *diagnostic events*.

2.4.2 Model Fim configuration before Dem exists

The configuration of the *FIM* module and the *DEM* module are closely intertwined because the *FIM* uses the *diagnostic events* defined in the context of the *DEM*. This means that the *FIM* can only be configured if the *DEM* exists as a basis for creating this configuration.

Clearly, this is contradicting the approach of a “decentralized configuration” of the diagnostics stack’s behavior. It may happen that the configuration of the *FIM* and the configuration of the *DEM* by means of the *DiagnosticExtract* are distributed over different organizations within a concrete vehicle project.

However, the organizations would not be able to make progress independently of each other because the work product of one is the immediate prerequisite that the other organization can start working.

Therefore, one important use case for the `DiagnosticExtract` is the ability to configure the `FIM` module in the scope of the `DiagnosticExtract` **without the immediate need to already have access to the corresponding configuration of the `DEM` module**.

In other words, a typical work-flow could look like this:

1. Create the `FIM` configuration on the basis of a collection of alias objects that represent the *diagnostic events* that are defined in the context of the `DEM` module within the configuration of the `FIM` and **in parallel** create the `DEM` configuration and thereby add definitions of the actual *diagnostic events*.
2. Ship the configuration of the `DEM` to the organization that is responsible for the creation of the configuration of the `FIM`.
3. Let this organization take care of resolving the alias *diagnostic events* by way of referring from the `FIM` configuration to the *diagnostic events* contained in the actual `DEM` configuration.

2.5 Configuration of J1939 Diagnostics

Within the System Extract, J1939 diagnostic is configured on a service level by the diagnostic messages DM01..DM57, which will be handled by J1939 `DCM`.

The diagnostic content which is provided by the diagnostic messages is defined within the `DiagnosticExtract` separately for each J1939 function, and contributes to the configuration of the J1939 `DCM` as well as the parts of the `DEM` configuration that are relevant for J1939.

J1939 functions (known as Controller Application or CA within the [14, SAE J1939 Standard]) are identified by a NAME and an address (assigned at run-time) and are represented in AUTOSAR by the `J1939NmNode`.

2.5.1 Modeling of J1939 Diagnostic Aspects independent of the Deployment

The main use case for modeling the J1939 in the `DiagnosticExtract` is the possibility to create the diagnostic configuration relevant for a J1939 function, even if the underlying communication architecture is not (fully) defined and if no vehicle model (represented by a `System`) exists.

The J1939 diagnostics modeling is done during functional development before the `System` exists where the functions are deployed. This approach represents a case of decentralized configuration of the diagnostic stack.

2.5.2 J1939 Diagnostic Content modeled in the Diagnostic Extract

The diagnostic content for J1939 consists of the following topics:

SPN The Suspect Parameter Number is used throughout the J1939 specification to identify measured values (physical signals) and commands, the communication signals to which these are mapped, and diagnostic events caused by these.

Signals Communication signals that are relevant for diagnostics are specifically annotated, and reported by the J1939 diagnostics.

DTCs J1939 [DTCs](#) consist of an [SPN](#), identifying the source of the diagnostic event, and an FMI (Failure Mode Indicator), identifying the problem with this source, like a boundary exception. In addition, an event counter is contained in the [DTC](#).

Freeze Frames contain measured values captured at the time a diagnostic event is reported as failed. J1939 supports two different kinds of freeze frames:

- **standardized freeze frames** (reported by DM04), which have a legislated layout
- **expanded freeze frames** (reported by DM24/DM25), which have a configurable layout

3 Conceptual Background

[Chapter 1](#) has already given an overview on the intended way of using the [DiagnosticExtract](#) template and files. This chapter gives further background information on the overall concept behind the new format to create a better basis for understanding of the meta-model described in [Section 4.2](#).

3.1 Definition of relevant Diagnostic Elements

[TPS_DEXT_01046] ECU configuration is not suitable to be exchanged between partners in an ECU development project

Upstream requirements: [RS_DEXT_00001](#)

[The [ECU](#) configuration (EcuC) parameters defined by the AUTOSAR Software Specification (SWS) documents for [Dem](#) and [Dcm](#) are not suitable to be exchanged between partners in an [ECU](#) development project.

Besides proprietary ways of using the EcuC format, the main reason for EcuC parameters being inappropriate to be exchanged is their closeness to implementation (e.g. parameter on buffer sizes).]

[TPS_DEXT_01047] Differences in the development processes for diagnostics at automotive OEMs and ECU suppliers

Upstream requirements: [RS_DEXT_00001](#)

[Additionally, there are differences in the development processes for diagnostics at automotive [OEMs](#) and [ECU](#) suppliers resulting in different views on relevant diagnostic properties to be exchanged and different ways of deriving and defining them as diagnostic requirements.]

Therefore, the identification of all diagnostic properties and requirements as superset from the companies' views forms the basis on which the [DiagnosticExtract](#) template has been defined.

3.2 Abstraction from EcuC Level

The [DiagnosticExtract](#) template does not only focus on relevant diagnostic properties and requirements but also - if required - lift them onto an appropriate abstraction level to make them meaningfully exchangeable (e.g. debouncing requirements that abstract from mapping on a concrete ECU).

However, for many EcuC parameters identified as relevant, an abstraction is not useful or not required and thus, these parameters are mapped 1:1 to equivalent elements of the [DiagnosticExtract](#) template.

[TPS_DEXT_01140] Values contained in [DiagnosticExtract](#) shall be taken for the derivation of basic software modules

Upstream requirements: [RS_DEXT_00044](#)

[The values specified in a given [DiagnosticExtract](#) shall be taken for the derivation of basic software modules in the diagnostic stack.

This means that parameter values in the Ecuc are created that could be subject to constraints, e.g. a valid interval.]

Therefore, model elements in the [DiagnosticExtract](#) shall be carefully checked against the constraints formulated in EcuC. However, this document does not contain specific constraints on a detailed basis.

3.3 Independence of Definition

With respect to development processes, the [DiagnosticExtract](#) format also enables more independence when defining requirements on diagnostic functionality than possible with EcuC parameters. The approach of “decentralized configuration” is met in the [DiagnosticExtract](#) template in mainly two ways described in the following sub-chapters.

3.3.1 Use of `<<atpSplitable>>` enabling separation of elements over several physical files

Most elements of the [DiagnosticExtract](#) template can be split over several physical files. Therefore, parts of these elements (e.g. certain attributes) can be defined by, for example, an [OEM](#) and other parts of these elements by, for example, an [ECU](#) supplier.

3.3.2 Use of self-contained mapping elements

Many diagnostic requirements are established by mappings between diagnostic elements (e.g., [DTC](#) to DemEvent mapping). However, the “decentralized configuration” approach requires that these mappings can be flexibly defined at almost any time within the [ECU](#) development process and by any of the involved companies respectively roles.

Therefore, the `DiagnosticExtract` template defines self-contained mapping elements that have references to two (or potentially more) diagnostic elements to define a mapping.

The self-contained mapping elements can be created any time after the diagnostic elements to be mapped together have been defined. Alternatively, a mapping element can be created after only one diagnostic element has been defined indicating the need to make the mapping complete by defining the additional diagnostic element(s) to map to.

4 Diagnostic Resources

4.1 Overview

This chapter contains a description of diagnostic resources that are defined to describe the external behavior of the diagnostic stack. The definition of these resources (e.g. diagnostic services, diagnostic events) is done independently of their usage in the context of either other diagnostic resources or the application software.

The description of the modeling of diagnostic resources can be roughly divided into five sections

- A common section that contains meta-classes shared between the description of the diagnostic services (that roughly corresponds to the Dcm) and the diagnostic event handling (that roughly corresponds to the Dem), see [Section 4.2](#).
- A section dedicated to the configuration of the diagnostic services, see [Section 4.3](#).
- A section dedicated to the configuration of the diagnostic event handling, see [Section 4.4](#).
- A section dedicated to the configuration of the functional inhibition from the diagnostics point of view, see [Section 4.5](#).
- A section dedicated to the configuration of the diagnostics on J1939, see [Section 4.6](#).

Following the descriptions in [15, TPS Generic Structure Template]. The modeling of the `DiagnosticExtract` supports the application of variant handling of dedicated model elements.

4.2 Common Meta Model Elements

4.2.1 Data Identifier vs. Routine vs. Data Element

4.2.2 Overview

This chapter highlights the formal modeling of some of the central parts of AUTOSAR diagnostics when it comes to configuration. There are some concepts widely used that need to be reflected in the meta-model.

The purpose of the `DiagnosticCommonElement` is to provide a common reference target for all kinds of diagnostic elements. This aspect is explained in more detail in [Section 4.2.8](#).

The purpose of a `Data Identifier (DID)` is to associate a unique numerical value to a piece of data related to diagnostics. From the modeling point of view, this means that

the modeling of the `Data Identifier` needs to provide an attribute that represents the numeric value as well as a relation to a `Data Element` representing a set of diagnostic piece of data.

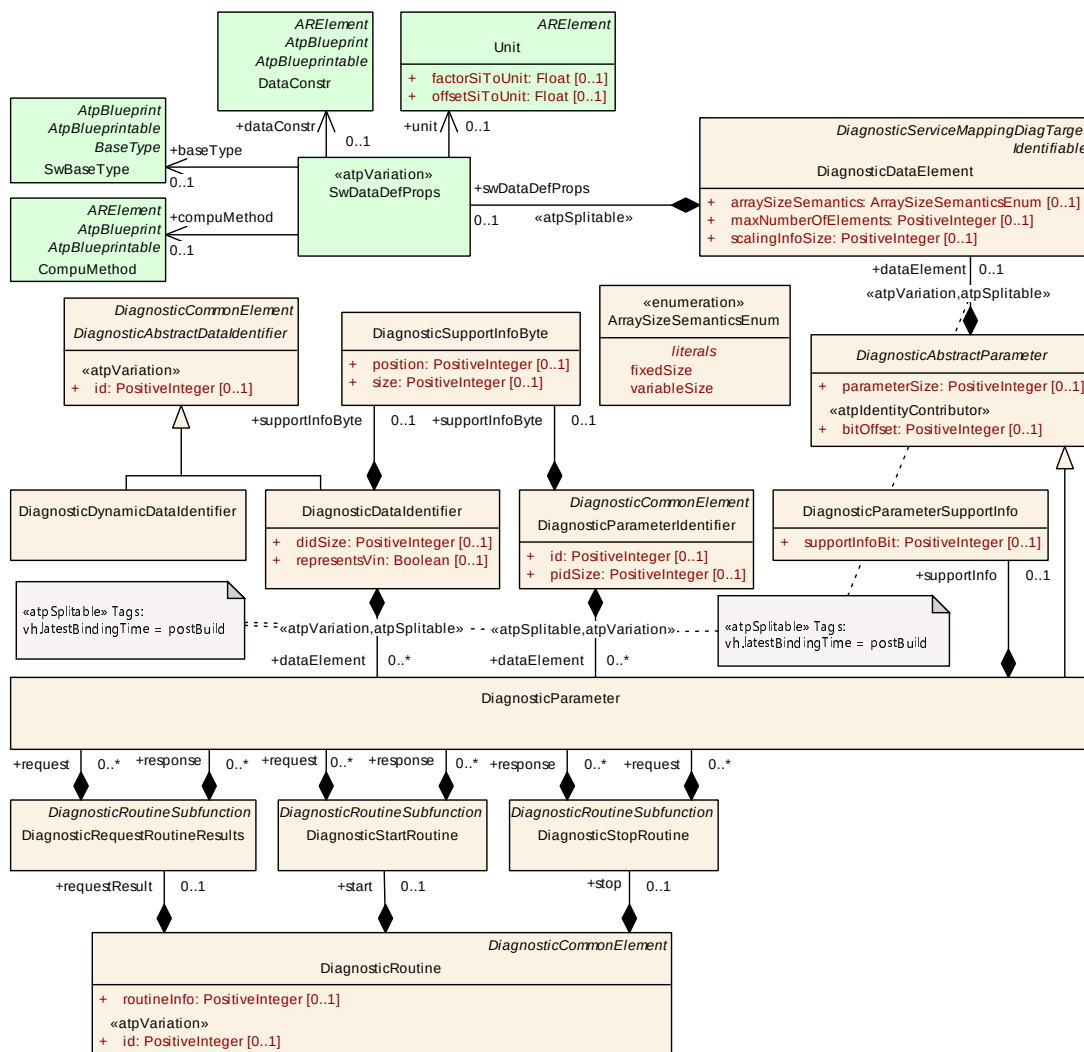


Figure 4.1: Common Diagnostic elements

Class	<i>DiagnosticCommonElement</i> (abstract)
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics
Note	This meta-class represents a common base class for all diagnostic elements. It does not contribute any specific functionality other than the ability to become the target of a reference.
Base	ARElement , ARObject , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable



Class	DiagnosticCommonElement (abstract)			
Subclasses	DiagnosticAbstractAliasEvent , DiagnosticAbstractDataIdentifier , DiagnosticAccessPermission , DiagnosticAging , DiagnosticAuthRole , DiagnosticCondition , DiagnosticConditionGroup , DiagnosticCustomServiceClass , DiagnosticDataIdentifierSet , DiagnosticEcuInstanceProps , DiagnosticEnvironmentalCondition , DiagnosticEvent , DiagnosticExtendedDataRecord , DiagnosticFimEventGroup , DiagnosticFreezeFrame , DiagnosticFunctionIdentifier , DiagnosticFunctionIdentifierInhibit , DiagnosticIndicator , DiagnosticInfoType , Diagnosticlumpr , DiagnosticlumprDenominatorGroup , DiagnosticlumprGroup , DiagnosticJ1939ExpandedFreezeFrame , DiagnosticJ1939FreezeFrame , DiagnosticJ1939Node , DiagnosticJ1939Spn , DiagnosticMapping , DiagnosticMeasurementIdentifier , DiagnosticMemoryDestination , DiagnosticMemoryIdentifier , DiagnosticOperationCycle , DiagnosticParameterIdentifier , DiagnosticPowertrainFreezeFrame , DiagnosticProtocol , DiagnosticRoutine , DiagnosticSecurityLevel , DiagnosticServiceClass , DiagnosticServiceInstance , DiagnosticServiceTable , DiagnosticSession , DiagnosticTestResult , DiagnosticTestRoutineIdentifier , DiagnosticTroubleCode , DiagnosticTroubleCodeGroup , DiagnosticTroubleCodeProps			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.1: DiagnosticCommonElement

4.2.3 Diagnostic Data Identifier

[TPS_DEXT_01000] AUTOSAR diagnostics supports two kinds of data identifiers

Upstream requirements: [RS_DEXT_00034](#), [RS_DEXT_00035](#)

[In AUTOSAR, two kinds of data identifiers are supported:

- The [DiagnosticDataIdentifier](#) inherits from [DiagnosticAbstractDataIdentifier](#) and is used to define data identifiers fully known at configuration time. A [DiagnosticDataIdentifier](#) shall have at least 1 [dataElement](#).
- The [DiagnosticDynamicDataIdentifier](#) inherits from [DiagnosticAbstractDataIdentifier](#) and is used to define data identifiers fully known **only** at run time. Consequently, there is **no formal means** to define [dataElement](#) at configuration time.

]

[constr_1792] Existence of [DiagnosticDataIdentifier.dataElement](#)

Imposition time: [IT_Dext](#)

[For each [DiagnosticDataIdentifier](#), the aggregation of [DiagnosticParameter](#) in the role [dataElement](#) shall exist at least once.]

Class	DiagnosticDataIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class represents the ability to model a diagnostic data identifier (DID) that is fully specified regarding the payload at configuration-time. Tags: atp.recommendedPackage=DiagnosticDataIdentifiers			
Base	ARElement , ARObject , CollectableElement , DiagnosticAbstractDataIdentifier , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dataElement	DiagnosticParameter	*	aggr	This is the dataElement associated with the Diagnostic DataIdentifier. Stereotypes: atp.Splitable; atp.Variation Tags: atp.Splitkey=dataElement.bitOffset, dataElement.ident.shortName, dataElement.variationPoint.shortLabel vh.latestBindingTime=postBuild
didSize	PositiveInteger	0..1	attr	This attribute indicates the size in bytes of the Diagnostic DataIdentifier.
representsVin	Boolean	0..1	attr	This attributes indicates whether the specific Diagnostic DataIdentifier represents the vehicle identification.
supportInfoByte	DiagnosticSupportInfoByte	0..1	aggr	This attribute represents the supported information associated with the DiagnosticDataIdentifier.

Table 4.2: DiagnosticDataIdentifier

Class	DiagnosticDynamicDataIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class represents the ability to define a diagnostic data identifier (DID) at run-time. Tags: atp.recommendedPackage=DiagnosticDataIdentifiers			
Base	ARElement , ARObject , CollectableElement , DiagnosticAbstractDataIdentifier , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.3: DiagnosticDynamicDataIdentifier

Class	DiagnosticAbstractDataIdentifier (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class represents an abstract base class for the modeling of a diagnostic data identifier (DID).			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	DiagnosticDataIdentifier , DiagnosticDynamicDataIdentifier			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
id	PositiveInteger	0..1	attr	This is the numerical identifier used to identify the DiagnosticAbstractDataIdentifier in the scope of diagnostic workflow Stereotypes: atp.Variation Tags: vh.latestBindingTime=preCompileTime

Table 4.4: DiagnosticAbstractDataIdentifier

[constr_1793] Existence of attribute `DiagnosticAbstractDataIdentifier.id`

Imposition time: `IT_Dext`

[For each `DiagnosticAbstractDataIdentifier`, attribute `id` shall exist.]

[TPS_DEXT_01072] Purpose of attribute `DiagnosticDataIdentifier.representsVin`

Upstream requirements: `RS_DEXT_00034`

[There is a use case for identifying a specific `DiagnosticDataIdentifier` that carries the so-called *vehicle identification number* (`VIN`).

It is therefore important to be able to formally indicate this characteristic. For this purpose the attribute `DiagnosticDataIdentifier.representsVin` is available.]

[constr_1324] Existence of attribute `DiagnosticDataIdentifier.representsVin`

Imposition time: `IT_Dext`

[Within the context of a given `DiagnosticContributionSet`, the attribute `DiagnosticDataIdentifier.representsVin` shall have the value `true` for only a single `DiagnosticDataIdentifier`.]

Please note that the `VIN` is only relevant in the context of *diagnostics over IP* (`DoIP`). However, there is no constraint that bounds the validity of [constr_1324] to the existence of a `DiagnosticConnection` that is build on top of an IP stack.


If the attribute exists and there is no IP used then the meaning of the attribute is simply irrelevant. Anyway, this situation should not be attributed to a misconfiguration.

4.2.4 Diagnostic Parameter

4.2.4.1 Overview

[TPS_DEXT_01169] **Role of meta-class `DiagnosticParameter`** [The role of the `DiagnosticParameter` is to allocate a well-defined (i.e. start, length, content) slot in a diagnostic telegram, represented e.g. by a `DiagnosticDataIdentifier` or `DiagnosticRoutineSubfunction`.]

To facilitate the modeling of `DiagnosticParameter`, an abstract meta-class named `DiagnosticAbstractParameter` is defined to allow for making statements (e.g. [TPS_DEXT_01170], [TPS_DEXT_01171], and [TPS_DEXT_01174]) about all its sub-classes uniformly instead of clarifying model semantics for each sub-class separately.

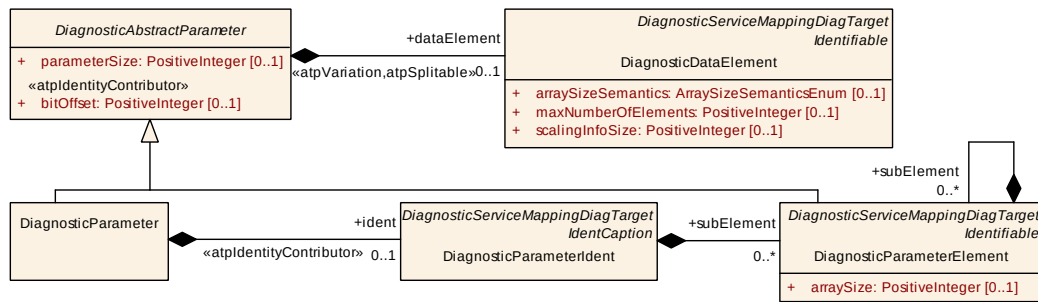Figure 4.2: Modeling of **DiagnosticParameter**

[TPS_DEXT_01170] Semantics of meta-class **DiagnosticAbstractParameter**
 [Meta-class **DiagnosticAbstractParameter** has been defined as a vessel to define attributes that are equally relevant for the sub-classes **DiagnosticParameter** and **DiagnosticParameterElement**.]

The modeling approach for the definition of a **DiagnosticParameter** is reflected in Figure 4.2.

Class	DiagnosticParameter			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class represents the ability to describe information relevant for the execution of a specific diagnostic service, i.e. it can be taken to parameterize the service.			
Base	ARObject, DiagnosticAbstractParameter			
Aggregated by	DiagnosticDataIdentifier.dataElement , DiagnosticExtendedDataRecord.recordElement , DiagnosticInfoType.dataElement , DiagnosticParameterIdentifier.dataElement , DiagnosticRequestRoutineResults.request , DiagnosticRequestRoutineResults.response , DiagnosticStartRoutine.request , DiagnosticStartRoutine.response , DiagnosticStopRoutine.request , DiagnosticStopRoutine.response			
Attribute	Type	Mult.	Kind	Note
ident	DiagnosticParameterIdent	0..1	aggr	The aggregation in the role ident provides the ability to make the DiagnosticAbstractParameter identifiable. From the semantical point of view, the AbstractDiagnosticParameter is considered a first-class Identifiable and therefore the aggregation in the role ident shall always exist (until it may be possible to let AbstractDiagnosticParameter directly inherit from Identifiable). Stereotypes: <code>atpIdentityContributor</code>
supportInfo	DiagnosticParameterSupportInfo	0..1	aggr	This attribute represents the ability to define which bit of the support info byte is representing this part of the PID.

Table 4.5: **DiagnosticParameter**

Class	DiagnosticParameterElement			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class represents an element of a DiagnosticParameter if the DiagnosticParameter represents a structure.			
Base	ARObject, DiagnosticAbstractParameter , DiagnosticServiceMappingDiagTarget , Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	DiagnosticParameterElement.subElement , DiagnosticParameterIdent.subElement			





Class	DiagnosticParameterElement			
Attribute	Type	Mult.	Kind	Note
arraySize	PositiveInteger	0..1	attr	This attribute indicates that the enclosing DiagnosticParameterElement represents an array and configures the array size in terms of the number of elements of the array.
subElement	DiagnosticParameterElement	*	aggr	This collection represents the sub-elements on the next lower level.

Table 4.6: DiagnosticParameterElement

Class	DiagnosticParameterIdent			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class has been created to introduce the ability to become referenced into the meta-class AbstractDiagnosticParameter without breaking backwards compatibility.			
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, DiagnosticServiceMappingDiagTarget , IdentCaption , Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	AtpClassifier.atpFeature, DiagnosticParameter.ident			
Attribute	Type	Mult.	Kind	Note
subElement	DiagnosticParameterElement	*	aggr	This collection represents the subElements on the top level.

Table 4.7: DiagnosticParameterIdent

Class	DiagnosticAbstractParameter (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class represents an abstract base class for modeling a diagnostic parameter.			
Base	ARObject			
Subclasses	DiagnosticParameter , DiagnosticParameterElement			
Attribute	Type	Mult.	Kind	Note
bitOffset	PositiveInteger	0..1	attr	This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticData Identifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction. Stereotypes: atpIdentityContributor Tags: atp.Status=candidate
dataElement	DiagnosticDataElement	0..1	aggr	This represents the related dataElement of the DiagnosticParameter Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=dataElement.shortName, dataElement.variationPoint.shortLabel vh.latestBindingTime=postBuild
parameterSize	PositiveInteger	0..1	attr	This attribute allows for the specification of the parameter size. This information is relevant if there is a gap between one diagnostic parameter and the following diagnostic parameter (or the tail of the telegram). The unit is bit and the values shall be multiples of 8. Tags: atp.Status=candidate

Table 4.8: DiagnosticAbstractParameter

4.2.4.2 Size of a Diagnostic Parameter

[TPS_DEXT_01171] **Size of a `DiagnosticAbstractParameter`** [The size of the slot can be described in two **mutually exclusive** ways:

- if the aggregation in the role `DiagnosticAbstractParameter.dataElement` exists, then the size of the slot is defined by the value of the attribute `DiagnosticAbstractParameter.dataElement.swDataDefProps.baseType.baseTypeSize`. The unit of attribute `baseTypeSize` is *bit*.
- if the aggregation `DiagnosticAbstractParameter.dataElement` does not exist, then the size of the slot is defined by the value of the attribute `DiagnosticAbstractParameter.parameterSize`. The unit of attribute `parameterSize` is *bit*.

]

[TPS_DEXT_01172] **Semantics of attribute `DiagnosticAbstractParameter.parameterSize`**

Upstream requirements: RS_DEXT_00034, RS_DEXT_00035

[The attribute `DiagnosticAbstractParameter.parameterSize` can be used to indicate the size of the current `DiagnosticAbstractParameter` in the unit *bits*.

This information is relevant if the following `DiagnosticAbstractParameter` (or the end of the telegram) is not placed directly adjacent to the current `DiagnosticAbstractParameter`, i.e. gaps exist between two adjacent `DiagnosticAbstractParameters`.]

4.2.4.3 Start Position of a Diagnostic Parameter

[TPS_DEXT_01173] **Start position of a `DiagnosticAbstractParameter`** [The slot allocated by a `DiagnosticAbstractParameter` is defined by means of its **starting position** (formalized as `DiagnosticAbstractParameter.bitOffset`, unit: *bit*) and the **slot's size**.]

[constr_1790] **Existence of attribute `DiagnosticAbstractParameter.bitOffset`**

Imposition time: IT_Dext

[For each `DiagnosticParameter`, attribute `bitOffset` shall exist.]

[constr_1470] Value of `DiagnosticAbstractParameter.bitOffset`

Imposition time: IT_Dext

[The value of `DiagnosticAbstractParameter.bitOffset` shall only be set to a multiple of 8.]

4.2.4.4 Content of a Diagnostic Parameter

[TPS_DEXT_01174] Content of a `DiagnosticParameter` [A `DiagnosticParameter` defines its content (i.e. the information stored in the slot) in one of two possible ways:

- The `DiagnosticParameter` aggregates `DiagnosticDataElement` in the role `dataElement`.
- The `DiagnosticParameter` contains a sub-structure consisting of `DiagnosticParameterElements` by means of the aggregation `DiagnosticParameter.ident.subElement`. In this case, the definition of the actual content is delegated (recursively) to the sub-structure.

]

Please note that the existence of the aggregation on the role `subElement` can be used to form nested hierarchies that resemble **arrays** or **structures**, including a mixture of both.

Please note further that the ability to define a `subElement` with array-semantics is somehow redundant to the already available capability of `DiagnosticDataElement`, which can define an array of “primitive” content.

To reduce the level of redundancy, a `subElement` with array-semantics shall only be used for the definition of arrays with “non-primitive” content, i.e. the `DiagnosticParameterElement` that represents the array shall have further `subElements` (see [constr_10369]).

[constr_1791] Existence of attribute `dataElement` vs. `parameterSize` of meta-class `DiagnosticParameter`

Imposition time: IT_Dext

[For each `DiagnosticParameter`, exactly **one** of the attributes

- `dataElement` or
- `parameterSize`

shall exist.]

[TPS_DEXT_01175] **Nested definition of a [DiagnosticParameter](#)** [It is possible to define a nested structure inside the definition of a [DiagnosticParameter](#).

This way, it is possible to replicate the nested structure of an [AutosarDataPrototype](#), such that either

- the entire structured [AutosarDataPrototype](#) or
- parts (i.e. [DataPrototypes](#)) of the structured data object

can be mapped to the respective locations in the definition of the structured [DiagnosticParameter](#).

The definition of a structured [DiagnosticParameter](#) is done by aggregating [DiagnosticParameterElement](#) in the role `ident.subElement`.

A structured [DiagnosticParameter](#) can have a `ident.subElement` that itself represents a structure as well. For this purpose the `ident.subElement` aggregates [DiagnosticParameterElement](#) in the role `subElement`.]

[constr_10369] **Existence of attributes of [DiagnosticParameterElement](#) depending on the value of attribute `category`**

Imposition time: `IT_Dext`

[

Value of category	Description	array-Size	subElement	dataElement
LEAF	The DiagnosticParameterElement represents a “leaf” element of a nested structure.	No	No	Yes
ARRAY	The DiagnosticParameterElement represents an array, i.e references to this DiagnosticParameterElement shall define a value for the attribute <code>index</code> . Arrays of “primitive” types are defined in the context of the DiagnosticDataElement	Yes	Yes, if dataElement does not exist	Yes, if subElement does not exist
STRUCTURE	The DiagnosticParameterElement represents a structure with one or more elements.	No	Yes	No

]

Please note: in AUTOSAR, the canonical naming approach for category `LEAF` would most likely boil down to the value `VALUE`. But in this specific case it is possible that the enclosed [DiagnosticDataElement](#) represents an **array** of primitive elements. Therefore, the usage of `VALUE` could be misleading in this case.

Please find examples for the definition of nested [DiagnosticParameters](#) in [Section B.1](#).

4.2.4.5 Diagnostic Parameter as Reference Target

[TPS_DEXT_01176] **DiagnosticParameter as a reference target** [The mapping of `DataPrototypes` inside a nested `AutosarDataPrototype` to a `DiagnosticParameterElement` requires the root `DiagnosticParameter` to define a `shortName` that becomes part of the reference in the ARXML serialization.

But `DiagnosticParameter` natively does not have the ability to define a `shortName` and therefore the aggregation of `DiagnosticParameterIdent` in the role `ident` is required to fill this gap.

For the case that the `DiagnosticParameter` directly defines a `dataElement` (i.e. the aggregation `DiagnosticParameter.ident.subElement` does not exist), the aggregation of `DiagnosticParameterIdent` in the role `ident` is **not** required.]

4.2.5 Diagnostic Data Element

The concept of the `Data Element` represents a piece of information decomposed from the data identified by a `DID` and exchanged between the diagnostic stack and, for example, a tester.

The nature of such a `Data Element` could be compared to the nature of an `ISignal`¹ and therefore the modeling of a `Data Element` by means of the meta-class `DiagnosticDataElement` aggregates `SwDataDefProps` in the role `swDataDefProps` in order to provide a reference to `SwBaseType`.

The aggregation of `SwDataDefProps` can also be used to refer to a `DataConstr` in order to specify a valid data range for the `DiagnosticDataElement`.

The definition of general blueprints (see [16, MOD General Blueprints]) in AUTOSAR offers a set of standardized `SwBaseTypes` for DEXT imports and exports (see `/AUTOSAR/Diagnostic/BaseTypes_Blueprint`) that allow to explicitly define the type's endianness on the network.

In contrast, the endianness of the platform base types is platform-dependent and therefore only defined in the context of an `EcuInstance`. This also means that in the context of two different `EcuInstances`, a `SwBaseType` with the same AUTOSAR Path can have different endianness.

Using the diagnostic `SwBaseTypes` avoids this potential problem.

¹which represents the payload in "regular" bus communication

[constr_1394] Value of `DiagnosticDataElement.maxNumberOfElements` depending on its existence*Imposition time:* `IT_Dext`

[If the attribute `DiagnosticDataElement.maxNumberOfElements` exists then its value shall be greater than 0.]

Class	DiagnosticDataElement			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class represents the ability to describe a concrete piece of data to be taken into account for diagnostic purposes.			
Base	<code>ARObject</code> , <code>DiagnosticServiceMappingDiagTarget</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>Referrable</code>			
Aggregated by	<code>DiagnosticAbstractParameter.dataElement</code>			
Attribute	Type	Mult.	Kind	Note
arraySize Semantics	<code>ArraySizeSemanticsEnum</code>	0..1	attr	This attribute controls the meaning of the value of the array size.
maxNumberOf Elements	<code>PositiveInteger</code>	0..1	attr	The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.
scalingInfoSize	<code>PositiveInteger</code>	0..1	attr	Size in bytes of scaling information for the <code>DiagnosticDataElement</code> if used with <code>DiagnosticReadScalingDataByIdentifier</code>
swDataDef Props	<code>SwDataDefProps</code>	0..1	aggr	This property allows to specify data definition properties in order to support the definition of e.g. computation formulae and data constraints. Stereotypes: <code>atpSplitable</code> Tags: <code>atp.Splitkey=swDataDefProps</code>

Table 4.9: DiagnosticDataElement**[TPS_DEXT_01134] Definition of a `DiagnosticDataElement` used in the context of a DID obtained by sender-receiver communication***Upstream requirements:* `RS_DEXT_00034`

[If the `DiagnosticDataElement` is aggregated by a `DiagnosticParameter` that in turn is aggregated by a subclass of `DiagnosticAbstractDataIdentifier` and the `DiagnosticDataElement` is also referenced by a `DiagnosticServiceDataMapping` then the referenced `DiagnosticDataElement` (by way of `SwDataDefProps`) shall refer to a `SwBaseType` with attribute `baseTypeSize` set to **either** 8, 16, or 32 and attribute `baseTypeEncoding` set to **either**

- NONE (for 8, 16, or 32 bit) or
- 2C (for 8, 16, or 32 bit) or
- IEEE754 (for 32 bit).

In this case it is possible to define the `DiagnosticDataElement` either as a scalar or as an array (see [TPS_DEXT_01001], [TPS_DEXT_01002]).]

[TPS_DEXT_01135] Definition of a [DiagnosticDataElement](#) used in the context of a DID obtained by client/server communication*Upstream requirements:* [RS_DEXT_00034](#)

If the [DiagnosticDataElement](#) is aggregated by a [DiagnosticParameter](#) that in turn is aggregated by a subclass of [DiagnosticAbstractDataIdentifier](#) and the [DiagnosticDataElement](#) is also referenced by a [DiagnosticServiceSwMapping](#) then the referenced [DiagnosticDataElement](#) (by way of [SwDataDefProps](#)) shall refer to a [SwBaseType](#) with attribute [baseTypeSize](#) set to **either** 8, 16, or 32 and attribute [baseTypeEncoding](#) set to **either**

- NONE (for 8, 16, or 32 bit) or
- 2C (for 8, 16, or 32 bit) or
- IEEE754 (for 32 bit).

In this case it is only possible to define the [DiagnosticDataElement](#) as an array (see [\[TPS_DEXT_01001\]](#), [\[TPS_DEXT_01002\]](#)). The ability to define a Variable-Size Array shall only be used for the last element of the [DID](#).]

[TPS_DEXT_01136] Definition of a [DiagnosticDataElement](#) used in the context of a diagnostic routine*Upstream requirements:* [RS_DEXT_00034](#)

If the [DiagnosticDataElement](#) is aggregated by a [DiagnosticParameter](#) that in turn is aggregated by either a [DiagnosticStartRoutine](#), [DiagnosticStopRoutine](#), or [DiagnosticRequestRoutineResults](#) then the [DiagnosticDataElement](#) (by way of [SwDataDefProps](#)) shall refer to a [SwBaseType](#) with attribute [baseTypeSize](#) to **either** 8, 16, or 32 and attribute [baseTypeEncoding](#) set to **either**

- NONE (for 8, 16, or 32 bit) or
- 2C (for 8, 16, or 32 bit) or
- IEEE754 (for 32 bit).

In this case it is possible to define the [DiagnosticDataElement](#) either as a scalar or as an array (see [\[TPS_DEXT_01001\]](#), [\[TPS_DEXT_01002\]](#)). The ability to define a Variable-Size Array shall only be used for the last argument to the diagnostic routine.]

Enumeration	ArraySizeSemanticsEnum
Package	M2::AUTOSARTemplates::CommonStructure::ImplementationDataTypes
Note	This type controls how the information about the number of elements in an ApplicationArrayDataType is to be interpreted.
Aggregated by	ApplicationArrayElement.arraySizeSemantics , DiagnosticDataElement.arraySizeSemantics , ImplementationDataTypeElement.arraySizeSemantics , SwTextProps.arraySizeSemantics





Enumeration	ArraySizeSemanticsEnum
Literal	Description
fixedSize	This means that the ApplicationArrayDataType will always have a fixed number of elements. Tags: atp.EnumerationLiteralIndex=0
variableSize	This implies that the actual number of elements in the ApplicationArrayDataType might vary at run-time. The value of arraySize represents the maximum number of elements in the array. Tags: atp.EnumerationLiteralIndex=1

Table 4.10: ArraySizeSemanticsEnum

The attribute `DiagnosticDataIdentifier.didSize` should be used if size of the DID data is intended to be enforced.

[constr_1552] Meta-class `DiagnosticDataIdentifier` referenced by `DiagnosticDataIdentifierSet`

Imposition time: IT_Dext

[If a `DiagnosticDataIdentifier` is referenced by `DiagnosticDataIdentifierSet`, then the `DiagnosticDataIdentifier` shall fulfill **all of the following conditions**:

- The `DiagnosticDataIdentifier` does **not** aggregate any `DiagnosticParameter` which in turn aggregates (via the aggregation of `DiagnosticParameterElement`) a `DiagnosticParameterElement`.
- Gaps in between individual elements (i.e. from the begin of an individual `DiagnosticDataElement`, as indicated by `DiagnosticParameter.bitOffset`, and the length of the aggregated `DiagnosticDataElement`) or at the end of the `DiagnosticDataIdentifier` (as indicated by attribute `DiagnosticDataIdentifier.didSize`) shall **not** exist.

The individual `DiagnosticDataElement` contained (via the aggregation of `DiagnosticParameter` in the role `dataElement`) in the `DiagnosticDataIdentifier` shall satisfy **one of the following conditions**:

- The `DiagnosticDataElement` does **not** define the attribute `maxNumberOfElements` at all.
- The modeling of attribute `DiagnosticDataElement.arraySizeSemantics` shall follow the description in [TPS_DEXT_01001].

]

[constr_10368] Restriction regarding the reference `DiagnosticDataIdentifierSet.dataIdentifier`*Imposition time:* IT_Dext

[A `DiagnosticDataIdentifier` that is referenced in the role `DiagnosticDataIdentifierSet.dataIdentifier` shall not aggregate in the role `dataElement` a `DiagnosticParameter` that aggregates in the role `ident` a `DiagnosticParameterIdent` that in turn aggregates in the role `subElement` a `DiagnosticParameterElement`.]

Rationale for the existence of [constr_10368]: in this context, there is no valid use case to define nested `DiagnosticParameters`.

[TPS_DEXT_01138] Applicability of `DiagnosticDataIdentifier.supportInfoByte`*Upstream requirements:* RS_DEXT_00034

[The attribute `DiagnosticDataIdentifier.supportInfoByte` may exist if the value of `DiagnosticDataIdentifier.id` is in the range 0xF400-0xF4FF.

A typical case for the existence of `DiagnosticDataIdentifier.supportInfoByte` is the understanding that the `DiagnosticDataIdentifier` is relevant for OBD and the `DiagnosticDataIdentifier.id` is in the designated range.]

[constr_1472] Existence of `DiagnosticDataIdentifier.supportInfoByte`*Imposition time:* IT_Dext

[The attribute `DiagnosticDataIdentifier.supportInfoByte` shall not exist if the value of `DiagnosticDataIdentifier.id` is outside the range 0xF400-0xF4FF.]

4.2.5.1 Usage of `SwDataDefProps`

Please note that the definitions of properties like computation methods², limits³, or units⁴ of diagnostic data elements is based on shared resources of the AUTOSAR meta-model, namely by aggregation of meta-class `SwDataDefProps`.

²formalized as `CompuMethod` in AUTOSAR

³formalized as `DataConstr` in AUTOSAR

⁴formalized as `Unit` in AUTOSAR

[constr_1325] Allowed attributes of `SwDataDefProps` for `DiagnosticDataElement.swDataDefProps`*Imposition time:* IT_Dext

Attributes of <code>SwDataDefProps</code>	<code>DiagnosticDataElement.swDataDefProps</code>
<code>additionalNativeTypeQualifier</code>	
<code>annotation</code>	
<code>baseType.baseTypeDefinition.baseTypeEncoding</code>	D
<code>baseType.baseTypeDefinition.baseTypeSize</code>	D
<code>baseType.baseTypeDefinition.byteOrder</code>	D
<code>baseType.baseTypeDefinition.memAlignment</code>	
<code>baseType.baseTypeDefinition.nativeDeclaration</code>	
<code>compuMethod</code>	D
<code>dataConstr</code>	D
<code>displayFormat</code>	D
<code>displayPresentation</code>	
<code>implementationDataType</code>	
<code>invalidValue</code>	
<code>swAddrMethod</code>	
<code>swAlignment</code>	
<code>swBitRepresentation</code>	
<code>swCalibrationAccess</code>	
<code>swCalprmAxisSet</code>	
<code>swComparisonVariable</code>	
<code>swDataDependency</code>	
<code>swImplPolicy</code>	
<code>swIntendedResolution</code>	
<code>swInterpolationMethod</code>	
<code>swIsVirtual</code>	
<code>swPointerTargetProps</code>	
<code>swRecordLayout</code>	
<code>swRefreshTiming</code>	
<code>swTextProps</code>	
<code>swValueBlockSize</code>	
<code>unit</code>	D
<code>valueAxisDataType</code>	

Legend for Table inside [constr_1325]**D Define** the attribute.**empty cell** Attribute is **not applicable** for usage in the scope of this element.

This meta-class contributes a wealth of possible properties related to the definition of data in general and, in this case, diagnostics in particular.

However, it is important to understand that [SwDataDefProps](#) is so expressive and versatile that its applicability needs to be constrained (in this specific case, see [[constr_1325](#)]) for specific deployments according to the requirements that originate from the semantics of the piece of data that is decorated by [SwDataDefProps](#).

Please note that, in comparison to similar constraints appearing in other AUTOSAR documents (e.g. [[8](#), TPS Software Component Template]), [[constr_1325](#)] intentionally goes into more detail regarding the applicability of the attributes of [SwBaseType](#). This is in contrast to similar constraints contained in, e.g. the specification of the [[8](#), TPS Software Component Template]

The attributes of [SwBaseType](#) are considered of **paramount importance for the definition of the semantics** of the enclosing [DiagnosticDataElement](#) and thus the emphasis is justified.

Class	«atpVariation» SwDataDefProps			
Package	M2::MSR::DataDictionary::DataDefProperties			
Note	This class is a collection of properties relevant for data objects under various aspects. One could consider this class as a "pattern of inheritance by aggregation". The properties can be applied to all objects of all classes in which SwDataDefProps is aggregated. Note that not all of the attributes or associated elements are useful all of the time. Hence, the process definition (e.g. expressed with an OCL or a Document Control Instance MSR-DCI) has the task of implementing limitations. SwDataDefProps covers various aspects: • Structure of the data element for calibration use cases: is it a single value, a curve, or a map, but also the recordLayouts which specify how such elements are mapped/converted to the DataTypes in the programming language (or in AUTOSAR). This is mainly expressed by properties like swRecordLayout and swCalprmAxisSet • Implementation aspects, mainly expressed by swImplPolicy, swVariableAccessImplPolicy, swAddrMethod, swPointerTargetProps, baseType, implementationDataType and additionalNativeTypeQualifier • Access policy for the MCD system, mainly expressed by swCalibrationAccess • Semantics of the data element, mainly expressed by compuMethod and/or unit, dataConstr, invalidValue • Code generation policy provided by swRecordLayout Tags: vh.latestBindingTime=codeGenerationTime			
Base	ARObject			
Aggregated by	AutosarDataType.swDataDefProps , CompositeNetworkRepresentation.networkRepresentation, CppImplementationDataTypeElement.swDataDefProps, DataPrototype.swDataDefProps , DataPrototypeTransformationProps.networkRepresentationProps, DiagnosticDataElement.swDataDefProps , DiagnosticEnvDataElementCondition.swDataDefProps , DltArgument.networkRepresentation, FlatInstanceDescriptor.swDataDefProps, ImplementationDataTypeElement.swDataDefProps, InstantiationDataDefProps.swDataDefProps, ISignal.networkRepresentationProps , McDataInstance.resultingProperties, ParameterAccess.swDataDefProps, PerInstanceMemory.swDataDefProps, ReceiverComSpec.networkRepresentation , SecurityEventContextDataElement.networkRepresentation, SenderComSpec.networkRepresentation , SomeipDataPrototypeTransformationProps.networkRepresentation, SwPointerTargetProps.swDataDefProps, SwServiceArg.swDataDefProps, SwSystemconst.swDataDefProps , SystemSignal.physicalProps			
Attribute	Type	Mult.	Kind	Note





Class	«atpVariation» SwDataDefProps			
additionalNativeTypeQualifier	NativeDeclarationString	0..1	attr	This attribute is used to declare native qualifiers of the programming language which can neither be deduced from the baseType (e.g. because the data object describes a pointer) nor from other more abstract attributes. Examples are qualifiers like "volatile", "strict" or "enum" of the C-language. All such declarations have to be put into one string. Tags: xml.sequenceOffset=235
annotation	Annotation	*	aggr	This aggregation allows to add annotations (yellow pads ...) related to the current data object. Tags: xml.roleElement=true xml.roleWrapperElement=true xml.sequenceOffset=20 xml.typeElement=false xml.typeWrapperElement=false
baseType	SwBaseType	0..1	ref	Base type associated with the containing data object. Tags: xml.sequenceOffset=50
compuMethod	CompuMethod	0..1	ref	Computation method associated with the semantics of this data object. Tags: xml.sequenceOffset=180
dataConstr	DataConstr	0..1	ref	Data constraint for this data object. Tags: xml.sequenceOffset=190
displayFormat	DisplayFormatString	0..1	attr	This property describes how a number is to be rendered e.g. in documents or in a measurement and calibration system. Tags: xml.sequenceOffset=210
displayPresentation	DisplayPresentationEnum	0..1	attr	This attribute controls the presentation of the related data for measurement and calibration tools.
implementationDataType	AbstractImplementationDataType	0..1	ref	This association denotes the ImplementationDataType of a data declaration via its aggregated SwDataDefProps. It is used whenever a data declaration is not directly referring to a base type. Especially • redefinition of an ImplementationDataType via a "typedef" to another ImplementationDatatype • the target type of a pointer (see SwPointerTarget Props), if it does not refer to a base type directly • the data type of an array or record element within an ImplementationDataType, if it does not refer to a base type directly • the data type of an SwServiceArg, if it does not refer to a base type directly Tags: xml.sequenceOffset=215
invalidValue	ValueSpecification	0..1	aggr	Optional value to express invalidity of the actual data element. Tags: xml.sequenceOffset=255
stepSize	Float	0..1	attr	This attribute can be used to define a value which is added to or subtracted from the value of a DataPrototype when using up/down keys while calibrating.





Class	«atpVariation» SwDataDefProps			
swAddrMethod	SwAddrMethod	0..1	ref	Addressing method related to this data object. Via an association to the same SwAddrMethod it can be specified that several DataPrototypes shall be located in the same memory without already specifying the memory section itself. Tags: xml.sequenceOffset=30
swAlignment	AlignmentType	0..1	attr	The attribute describes the intended typical alignment of the DataPrototype. If the attribute is not defined the alignment is determined by the swBaseType size and the memoryAllocationKeywordPolicy of the referenced Sw AddrMethod. Tags: xml.sequenceOffset=33
swBit Representation	SwBitRepresentation	0..1	aggr	Description of the binary representation in case of a bit variable. Tags: xml.sequenceOffset=60
swCalibration Access	SwCalibrationAccess Enum	0..1	attr	Specifies the read or write access by MCD tools for this data object. Tags: xml.sequenceOffset=70
swCalprmAxis Set	SwCalprmAxisSet	0..1	aggr	This specifies the properties of the axes in case of a curve or map etc. This is mainly applicable to calibration parameters. Tags: xml.sequenceOffset=90
swComparison Variable	SwVariableRefProxy	*	aggr	Variables used for comparison in an MCD process. Tags: xml.sequenceOffset=170 xml.typeElement=false
swData Dependency	SwDataDependency	0..1	aggr	Describes how the value of the data object has to be calculated from the value of another data object (by the MCD system). Tags: xml.sequenceOffset=200
swHostVariable	SwVariableRefProxy	0..1	aggr	Contains a reference to a variable which serves as a host-variable for a bit variable. Only applicable to bit objects. Tags: xml.sequenceOffset=220 xml.typeElement=false
swImplPolicy	SwImplPolicyEnum	0..1	attr	Implementation policy for this data object. Tags: xml.sequenceOffset=230
swIntended Resolution	Numerical	0..1	attr	The purpose of this element is to describe the requested quantization of data objects early on in the design process. The resolution ultimately occurs via the conversion formula present (compuMethod), which specifies the transition from the physical world to the standardized world (and vice-versa) (here, "the slope per bit" is present implicitly in the conversion formula). In the case of a development phase without a fixed conversion formula, a pre-specification can occur through swIntendedResolution. The resolution is specified in the physical domain according to the property "unit". Tags: xml.sequenceOffset=240





Class	«atpVariation» SwDataDefProps			
swInterpolationMethod	Identifier	0..1	attr	This is a keyword identifying the mathematical method to be applied for interpolation. The keyword needs to be related to the interpolation routine which needs to be invoked. Tags: xml.sequenceOffset=250
swIsVirtual	Boolean	0..1	attr	This element distinguishes virtual objects. Virtual objects do not appear in the memory, their derivation is much more dependent on other objects and hence they shall have a swDataDependency . Tags: xml.sequenceOffset=260
swPointerTargetProps	SwPointerTargetProps	0..1	aggr	Specifies that the containing data object is a pointer to another data object. Tags: xml.sequenceOffset=280
swRecordLayout	SwRecordLayout	0..1	ref	Record layout for this data object. Tags: xml.sequenceOffset=290
swRefreshTiming	MultidimensionalTime	0..1	aggr	This element specifies the frequency in which the object involved shall be or is called or calculated. This timing can be collected from the task in which write access processes to the variable run. But this cannot be done by the MCD system. So this attribute can be used in an early phase to express the desired refresh timing and later on to specify the real refresh timing. Tags: xml.sequenceOffset=300
swTextProps	SwTextProps	0..1	aggr	the specific properties if the data object is a text object. Tags: xml.sequenceOffset=120
swValueBlockSize	Numerical	0..1	attr	This represents the size of a Value Block Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime xml.sequenceOffset=80
swValueBlockSizeMult (ordered)	Numerical	*	attr	This attribute is used to specify the dimensions of a value block (VAL_BLK) for the case that that value block has more than one dimension. The dimensions given in this attribute are ordered such that the first entry represents the first dimension, the second entry represents the second dimension, and so on. For one-dimensional value blocks the attribute swValueBlockSize shall be used and this attribute shall not exist. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
unit	Unit	0..1	ref	Physical unit associated with the semantics of this data object. This attribute applies if no compuMethod is specified. If both units (this as well as via compuMethod) are specified the units shall be compatible. Tags: xml.sequenceOffset=350
valueAxisDataType	ApplicationPrimitiveDataType	0..1	ref	The referenced ApplicationPrimitiveDataType represents the primitive data type of the value axis within a compound primitive (e.g. curve, map). It supersedes CompuMethod, Unit, and BaseType. Tags: xml.sequenceOffset=355

Table 4.11: SwDataDefProps

4.2.6 Definition of Arrays on the level of DiagnosticDataElement

There are several use cases for a `DiagnosticDataElement` that actually represents an array of information. In some cases the array size is static and will not change at run-time, and in some cases the array size needs to change at run-time to fulfill the intended purpose.

[TPS_DEXT_01001] Definition of a fixed-sized array

Upstream requirements: [RS_DEXT_00034](#), [RS_DEXT_00038](#)

[A `DiagnosticDataElement` shall be interpreted as a **fixed-size array** if **all** of the following conditions apply:

1. The attribute `DiagnosticDataElement.maxNumberOfElements` exists.
2. The value of the attribute `DiagnosticDataElement.maxNumberOfElements` is set to a value > 0.
3. The value of `DiagnosticDataElement.arraySizeSemantics` either does not exist or is set to `ArraySizeSemanticsEnum.fixedSize`.

]

[TPS_DEXT_01002] Definition of a variable-sized array

Upstream requirements: [RS_DEXT_00034](#), [RS_DEXT_00038](#)

[A `DiagnosticDataElement` shall be interpreted as a **variable-size array** if **all** of the following conditions apply:

1. The attribute `DiagnosticDataElement.maxNumberOfElements` exists.
2. The value of the attribute `DiagnosticDataElement.maxNumberOfElements` is set to a value > 0.
3. The value of `DiagnosticDataElement.arraySizeSemantics` is set to `ArraySizeSemanticsEnum.variableSize`.

The value of `DiagnosticDataElement.maxNumberOfElements` shall be considered the maximum array size in terms of the number of elements.]

[constr_1326] Existence of a variable-sized array

Imposition time: [IT_Dext](#)

[The value of the attribute `DiagnosticDataElement.arraySizeSemantics` **shall not** be set to `ArraySizeSemanticsEnum.variableSize` if the respective `DiagnosticDataElement` is referenced from a `DiagnosticServiceDataMapping`.]

4.2.6.1 Definition of textual Strings

`DiagnosticDataElement` can be used to model a **textual string** that shall be send to or received from the `ECU` by the tester.

In this case it will be necessary to define the **intended encoding** such that the part of the software on the `ECU` that produces or consumes of the string on the `ECU` can be checked (after the establishment of a `DiagnosticMapping`) for a matching encoding specification.

The encoding in the scope of the `DiagnosticDataElement` can be defined using the attribute `DiagnosticDataElement.swDataDefProps.baseType.baseType-Definition.baseTypeEncoding`.

4.2.7 Textual Documentation

A `Data Identifier` also usually comes with some textual description that explains the meaning of the `Data Identifier` in short form. This ability is available via the inheritance from `Identifiable`, in particular by means of the attributes `desc` and/or `introduction` (see [Figure 4.3](#)).

This also means that the ability to add some form of textual description is widely usable in the scope of the `DiagnosticExtract`. Many meta-classes are derived from e.g. `DiagnosticCommonElement` (which inherits from `Identifiable`) or directly from `Identifiable` and therefore qualify for the described form of documentation.

In other words, the technology described in [Figure 4.3](#) and [Figure 4.4](#) is not limited to `DiagnosticDataElement` but has a much wider applicability in the context of the `DiagnosticExtract`.

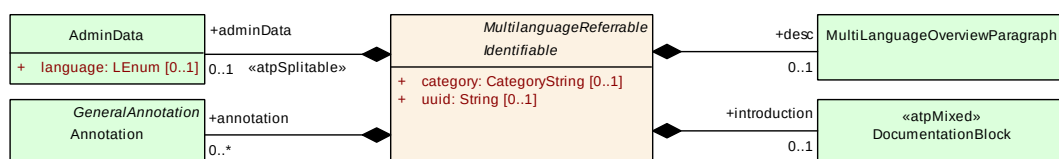


Figure 4.3: Definition of a textual description by means of `desc` and `introduction`

The details regarding the specification of textual content that goes along a given diagnostics element is detailed in [Figure 4.4](#).

In fact, `DocumentationBlock` provides a very sophisticated ability to define structured text that may consist e.g. of multiple paragraphs (formalized by meta-class `MultiLanguageOverviewParagraph` aggregated in the role `p`).

In addition to the ability to attach structured text, it is also possible to use the `annotation` (see [Figure 4.3](#)) to add short annotations (comparable to the usage of sticky notes) to diagnostic elements.

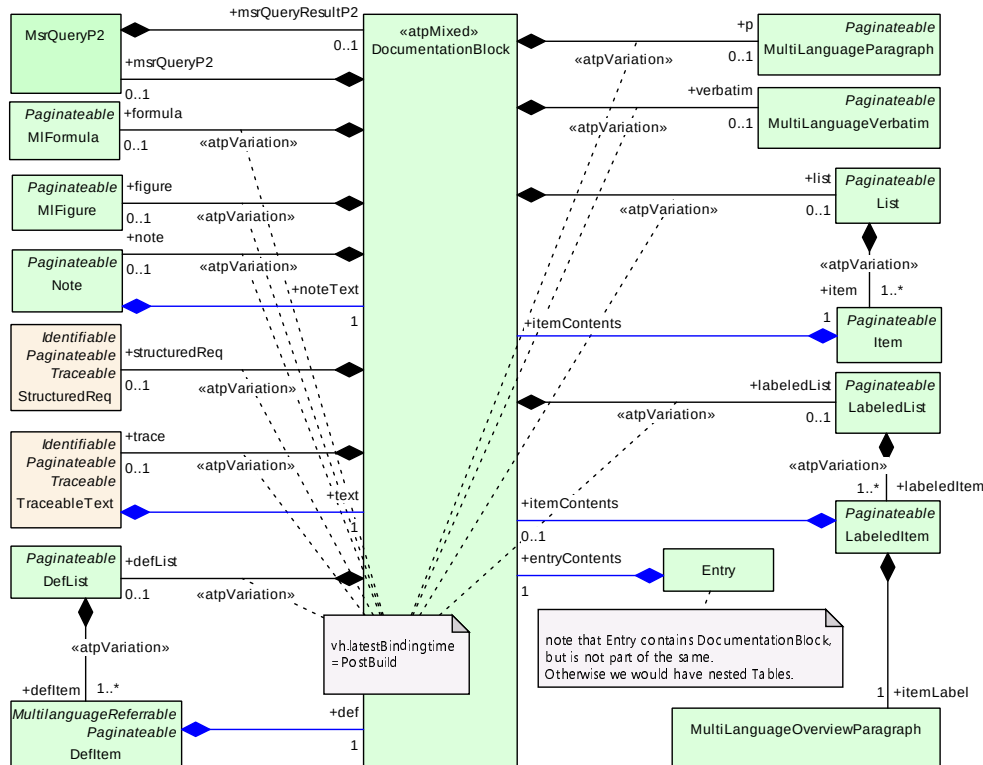


Figure 4.4: Details of the modeling of **DocumentationBlock**

Class	«atpMixed» DocumentationBlock			
Package	M2::MSR::Documentation::BlockElements			
Note	This class represents a documentation block. It is made of basic text structure elements which can be displayed in a table cell.			
Base	ARObject			
Aggregated by	ApplicabilityInfo.remark, AUTOSAR.introduction , BlueprintGenerator.introduction, <i>BlueprintPolicy</i> Modifiable.blueprintDerivationGuide, ClientServerOperationBlueprintMapping.blueprintMappingGuide, <i>DataMapping</i> .introduction, DefItem.def, <i>Describable</i> .introduction, EcucAddInfoParamValue.value, Ecu ResourceEstimation.introduction, Entry.entryContents, FrameMapping.introduction, <i>GeneralAnnotation</i> . annotationText, <i>Identifiable</i> .introduction, IPduMapping.introduction, ISignalMapping.introduction, Item. itemContents, LabeledItem.itemContents, LifecycleInfo.remark, <i>MappingConstraint</i> .introduction, Msr QueryP2.msrQueryResultP2, Note.noteText, PortDefinedArgumentBlueprint.blueprintMappingGuide, PrmChar.cond, PrmChar.remark, <i>ScheduleTableEntry</i> .introduction, <i>SignalPathConstraint</i> .introduction, StructuredReq.conflicts , StructuredReq.dependencies , StructuredReq.description , StructuredReq. rationale , StructuredReq.remark , StructuredReq.supportingMaterial , StructuredReq.useCase , SwAxis Type.swGenericAxisDesc, TopicContent.blockLevelContent, TraceableText.text , VariationPoint.blueprint Condition			
Attribute	Type	Mult.	Kind	Note
defList	DefList	0..1	aggr	This represents a definition list in the documentation block. Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=40





Class	«atpMixed» DocumentationBlock			
figure	MIFigure	0..1	aggr	This represents a figure in the documentation block. Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=70
formula	MIFormula	0..1	aggr	This is a formula in the definition block. Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=60
labeledList	LabeledList	0..1	aggr	This represents a labeled list. Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=50
list	List	0..1	aggr	This represents numbered or unnumbered list. Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=30
msrQueryP2	MsrQueryP2	0..1	aggr	This represents automatically contributed contents provided by an msrquery in the context of Documentation Block.
note	Note	0..1	aggr	This represents a note in the text flow. Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=80
p	MultiLanguage Paragraph	0..1	aggr	This is one particular paragraph. Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=10
structuredReq	StructuredReq	0..1	aggr	This aggregation supports structured requirements embedded in a documentation block. Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=100
trace	TraceableText	0..1	aggr	This represents traceable text in the documentation block. This allows to specify requirements/constraints in any documentation block. The kind of the trace is specified in the category. Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=90
verbatim	MultiLanguageVerbatim	0..1	aggr	This represents one particular verbatim text. Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild xml.sequenceOffset=20

Table 4.12: DocumentationBlock

Class	MultiLanguageOverviewParagraph			
Package	M2::MSR::Documentation::TextModel::MultilanguageData			
Note	This is the content of a multilingual paragraph in an overview item.			
Base	ARObject			
Aggregated by	Caption.desc, CompuScale.desc, Describable.desc, Identifiable.desc , LabeledItem.itemLabel, Modification.change, Modification.reason, ScaleConstr.desc, SdgCaption.desc, SwRecordLayoutGroup.desc, SwRecordLayoutV.desc, VariationPoint.desc			
Attribute	Type	Mult.	Kind	Note
I2	LOverviewParagraph	1..*	aggr	This represents the text in one particular language. Tags: xml.roleElement=true xml.roleWrapperElement=false xml.sequenceOffset=20 xml.typeElement=false xml.typeWrapperElement=false

Table 4.13: MultiLanguageOverviewParagraph

4.2.8 Diagnostic Contribution

[TPS_DEXT_01003] [DiagnosticContributionSet](#) is the central part of the [DiagnosticExtract](#)

Upstream requirements: [RS_DEXT_00001](#)

[The central part of formalization of the concept of the [DiagnosticExtract](#) is the [DiagnosticContributionSet](#).

To some extent, it fulfills a similar role as the [System](#) (see [5, TPS System Template]) in the communication domain.]

The [DiagnosticContributionSet](#) maintains references to [DiagnosticCommonElement](#) and by this means the actual definition of the extent of diagnostic contribution takes place.

In other words, the actual extent of a given contribution is created by the collection of [DiagnosticCommonElements](#) referenced by the [DiagnosticContributionSet](#).

[TPS_DEXT_01004] [DiagnosticContributionSet](#) defines the scope of the [DiagnosticExtract](#)

Upstream requirements: [RS_DEXT_00001](#)

[The [DiagnosticContributionSet](#) has the ability to define the scope of the given [DiagnosticExtract](#). This means that the [DiagnosticContributionSet](#) represents the [DiagnosticExtract](#) for the rest of the AUTOSAR model.

In other words, the [DiagnosticContributionSet](#) assumes a similar crucial role as the [System](#) in that it defines the extent to which a given description of diagnostic behavior is valid.

Any downstream processing of the description of diagnostic behavior shall take the scope of information to be processed from the definition of the `DiagnosticContributionSet` in its role as the root element of the description of diagnostic behavior.

During different stages of the design methodology, the scope of the `DiagnosticContributionSet` may vary between the scope of an entire system down to the contribution of a specific tier-1 supplier to a much bigger context.]

[TPS_DEXT_01055] Standardized values of `DiagnosticContributionSet.category`

Upstream requirements: `RS_DEXT_00001`, `RS_DEXT_00048`

[The scope of the `DiagnosticContributionSet`, on the other hand is determined by the value of its `category`. The following values are predefined by AUTOSAR:

DIAGNOSTICS_ABSTRACT_SYSTEM_DESCRIPTION this `DiagnosticContributionSet` represents a more or less high-level definition that can be taken as a template for creating concrete `DiagnosticContributionSets` of category `DIAGNOSTICS_SYSTEM_EXTRACT` or `DIAGNOSTICS_ECU_EXTRACT`

DIAGNOSTICS_SYSTEM_EXTRACT the scope of this `DiagnosticContributionSet` consists of several `EcuInstances`.

DIAGNOSTICS_ECU_EXTRACT the scope of this `DiagnosticContributionSet` consists of a **single** `EcuInstances`. A `DiagnosticContributionSet` of category `DIAGNOSTICS_ECU_EXTRACT` shall be taken as the basis for the derivation of service software-components of the diagnostic stack.

]

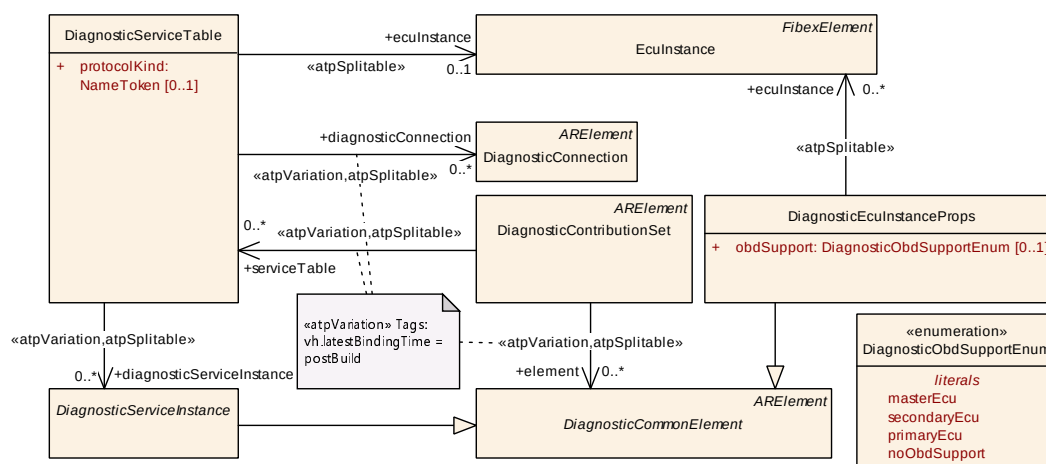


Figure 4.5: Diagnostic Contribution

[constr_1327] Multiplicity of `DiagnosticEcuInstanceProps.ecuInstance`*Imposition time: IT_Dext*

[The multiplicity of `DiagnosticEcuInstanceProps.ecuInstance` shall be limited to 1 and the enclosing `DiagnosticContributionSet` shall only refer to at most one `DiagnosticEcuInstanceProps` if the enclosing `DiagnosticContributionSet` is of category `DIAGNOSTICS_ECU_EXTRACT`.]

[constr_1328] Consistency of `DiagnosticEcuInstanceProps.ecuInstance` and `DiagnosticServiceTable.ecuInstance`*Imposition time: IT_Dext*

[Each `DiagnosticServiceTable` referenced by any given `DiagnosticContributionSet` in the role `serviceTable` shall define a reference in the role `DiagnosticServiceTable.ecuInstance` to an `EcuInstance` that is also referenced in the role `DiagnosticEcuInstanceProps.ecuInstance` by a `DiagnosticEcuInstanceProps` referenced by the mentioned `DiagnosticContributionSet` if the respective `DiagnosticContributionSet` is of category `DIAGNOSTICS_ECU_EXTRACT`.]

Please note that [constr_1328] resolves an intentional redundancy in the meta-model. Both `DiagnosticContributionSet` and `DiagnosticServiceTable` are able refer to `EcuInstance` with the idea that both `DiagnosticContributionSet` and `DiagnosticServiceTable` can be modeled independently of each other.

Of course, once the `DiagnosticContributionSet` and `DiagnosticServiceTable` are integrated in the same context (in particular by establishing the reference `DiagnosticContributionSet.serviceTable`) the individual references to the applicable `EcuInstances` need to be consistent.

[TPS_DEXT_01005] `DiagnosticContributionSet` can exist independently*Upstream requirements: RS_DEXT_00001*

[The `DiagnosticContributionSet` has been modeled as an `ARElement` so that its instances can exist independently of the existence of context-providing model-elements inside a given `ARPackage`.]

[TPS_DEXT_01005] elaborates on an important aspect that makes the `DiagnosticExtract` independent of the existence of a context. For example, it would have been possible to aggregate `DiagnosticContributionSet` somewhere, e.g. at `System`.

This kind of modeling intentionally puts `DiagnosticContributionSet` on the same level as e.g. `System`, as far as model granularity is concerned.

The purpose of the [DiagnosticContributionSet](#) is to refer to all [DiagnosticCommonElements](#) that are relevant in the context of the [DiagnosticContributionSet](#).

Class	DiagnosticContributionSet			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticContribution			
Note	This meta-class represents a root node of a diagnostic extract. It bundles a given set of diagnostic model elements. The granularity of the DiagnosticContributionSet is arbitrary in order to support the aspect of decentralized configuration, i.e. different contributors can come up with an own DiagnosticContributionSet. Tags: atp.recommendedPackage=DiagnosticContributionSets			
Base	ARElement , ARObject , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
common Properties	DiagnosticCommonProps	0..1	aggr	This attribute represents a collection of diagnostic properties that are shared among the entire DiagnosticContributionSet. Stereotypes: atpSplittable Tags: atp.Splitkey=commonProperties
element	DiagnosticCommonElement	*	ref	This represents a DiagnosticCommonElement considered in the context of the DiagnosticContributionSet Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=element.diagnosticCommonElement, element.variationPoint.shortLabel vh.latestBindingTime=postBuild
serviceTable	DiagnosticServiceTable	*	ref	This represents the collection of DiagnosticServiceTables to be considered in the scope of this DiagnosticContributionSet. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=serviceTable.diagnosticServiceTable, serviceTable.variationPoint.shortLabel vh.latestBindingTime=postBuild

Table 4.14: DiagnosticContributionSet

It is not sufficient that a given [DiagnosticCommonElement](#) is referenced by another [DiagnosticCommonElement](#) but is not referenced by the same [DiagnosticContributionSet](#) that also references the referencing [DiagnosticCommonElement](#).

[constr_1745] Indirect reference to [DiagnosticCommonElement](#)

Imposition time: IT_Dext

[If a [DiagnosticCommonElement](#) is referenced from within the context of another [DiagnosticCommonElement](#) and the referencing [DiagnosticCommonElement](#) is in turn referenced by a [DiagnosticContributionSet](#) in the role [element](#) then the referenced [DiagnosticCommonElement](#) shall also be referenced by the same [DiagnosticContributionSet](#).]

Example 4.1

A [DiagnosticDataIdentifier](#) that is referenced by a [DiagnosticDataIdentifierSet](#) that is referenced by a [DiagnosticContributionSet](#) shall also be referenced by that [DiagnosticContributionSet](#). This scenario is depicted in [Figure 4.6](#).

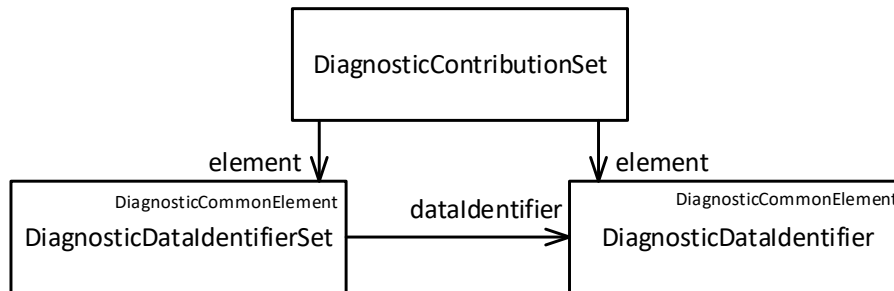


Figure 4.6: Visualization of example scenario for the indirect reference to [DiagnosticCommonElement](#)

4.2.9 Diagnostic Protocol

[TPS_DEXT_01124] Semantics of meta-class [DiagnosticProtocol](#)

Upstream requirements: [RS_DEXT_00059](#)

[The meta-class [DiagnosticProtocol](#) can be used to describe the usage of different diagnostic protocols as well as their priority.]

Class	DiagnosticProtocol			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticContribution			
Note	This meta-class represents the ability to define a diagnostic protocol. Tags: atp.recommendedPackage=DiagnosticProtocols			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , Multilanguage , Referrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnostic Connection	DiagnosticConnection	*	ref	This represents the collection of applicable Diagnostic Connections for this DiagnosticProtocol. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=diagnosticConnection.diagnosticConnection, diagnosticConnection.variationPoint.shortLabel vh.latestBindingTime=postBuild





Class	DiagnosticProtocol			
priority	PositiveInteger	0..1	attr	This represents the priority of the diagnostic protocol in comparison to other diagnostic protocols. Lower numeric values represent higher protocol priority: • 0 - Highest protocol priority • 255 - Lowest protocol priority Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
protocolKind	NameToken	0..1	attr	This identifies the applicable protocol.
sendRespPend OnTransToBoot	Boolean	0..1	attr	The purpose of this attribute is to define whether or not the ECU should send a NRC 0x78 (response pending) before transitioning to the bootloader (in this case the attribute shall be set to "true") or if the transition shall be initiated without sending NRC 0x78 (in this case the attribute shall be set to "false"). Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
serviceTable	DiagnosticServiceTable	0..1	ref	This represents the service table applicable for the given diagnostic protocol. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=serviceTable.diagnosticServiceTable, serviceTable.variationPoint.shortLabel vh.latestBindingTime=postBuild

Table 4.15: DiagnosticProtocol

[constr_1794] Existence of attribute [DiagnosticProtocol.priority](#)


Imposition time: IT_Dext

[For each [DiagnosticProtocol](#), attribute [priority](#) shall exist.]

[constr_1795] Existence of attribute [DiagnosticProtocol.protocolKind](#)

Imposition time: IT_Dext

[For each [DiagnosticProtocol](#), attribute [protocolKind](#) shall exist.]

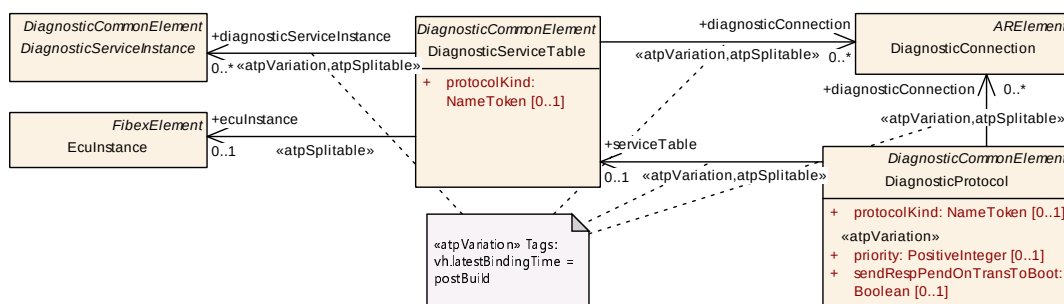
Figure 4.7: Modeling of [DiagnosticProtocol](#)

Each [DiagnosticProtocol](#) refers to at most one [DiagnosticServiceTable](#) and to a collection of [DiagnosticConnections](#).

Please note that both [DiagnosticServiceTable](#) and [DiagnosticProtocol](#) have an attribute named [protocolKind](#).

Class	DiagnosticServiceTable			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticContribution			
Note	This meta-class represents a model of a diagnostic service table, i.e. the UDS services applicable for a given ECU. Tags: atp.recommendedPackage=DiagnosticServiceTables			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnostic Connection	DiagnosticConnection	*	ref	This represents the DiagnosticConnection that is taken for handling the data transmission for the enclosing DiagnosticServiceTable. It is possible to refer to more than one diagnostic Connections in order to support more than one diagnostic tester. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=diagnosticConnection.diagnosticConnection, diagnosticConnection.variationPoint.shortLabel vh.latestBindingTime=postBuild
diagnostic ServiceInstance	DiagnosticServiceInstance	*	ref	This represents the collection of DiagnosticService Instances to be considered in the scope of this Diagnostic ServiceTable. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=diagnosticServiceInstance.diagnosticService Instance, diagnosticServiceInstance.variationPoint.short Label vh.latestBindingTime=postBuild
eculInstance	EculInstance	0..1	ref	This represents the applicable EculInstance for this DiagnosticServiceTable. Stereotypes: atpSplitable Tags: atp.Splitkey=eculInstance
protocolKind	NameToken	0..1	attr	This identifies the applicable protocol.

Table 4.16: DiagnosticServiceTable

[constr_10573] Existence of attribute [DiagnosticServiceTable.diagnosticServiceInstance](#)

Imposition time: IT_Dext

[For each [DiagnosticServiceTable](#), attribute [diagnosticServiceInstance](#) shall exist.]

[constr_1797] Existence of attribute [DiagnosticServiceTable.protocolKind](#)

Imposition time: IT_Dext

[For each [DiagnosticServiceTable](#), attribute [protocolKind](#) shall exist.]

The attribute `DiagnosticServiceTable.protocolKind` shall be used to define the applicability of a `DiagnosticServiceTable` for a given protocol before the formal definition of the protocol even exists.

In other words, the attribute gives the designer of the `DiagnosticServiceTable` a means to express an intention about the usage of the `DiagnosticServiceTable`.

The attribute `DiagnosticServiceTable.protocolKind`, on the other hand, is used to define the actual nature of the `DiagnosticProtocol`.

By means of `DiagnosticProtocol.serviceTable` both “ends” of this aspect are put together and therefore it is reasonable to express a constraint about the value of attribute `protocolKind`.

[constr_1405] Value of `DiagnosticProtocol.serviceTable` vs. `DiagnosticServiceTable.protocolKind`

Imposition time: `IT_Dext`

[If the reference `DiagnosticProtocol.serviceTable` exists then the value of `DiagnosticProtocol.protocolKind` shall be identical to the value of `DiagnosticServiceTable.protocolKind`.]

[TPS_DEXT_01006] The role of `DiagnosticServiceTables`

Upstream requirements: `RS_DEXT_00039`

[The existence of a `DiagnosticServiceTable` creates a formal relation between a collection of `DiagnosticServiceInstances` and the `DiagnosticConnection` that formalizes a *conduit* for specific pairs of diagnostic request and response messages taken to transmit the diagnostic service invocations from a tester to the applicable instance of the AUTOSAR diagnostic stack and convey the response of the diagnostic stack back to the tester.

In particular, this means that a `DiagnosticServiceTable` describes the set of `DiagnosticServiceInstances` that are available via `DiagnosticConnection` which is finally a request message to address a diagnostic service to an `ECU` and a response message to be used by the `ECU` to respond to the service.]

Class	DiagnosticConnection			
Package	M2::AUTOSARTemplates::SystemTemplate::DiagnosticConnection			
Note	DiagnosticConncection that is used to describe the relationship between several TP connections. Tags: atp.recommendedPackage=DiagnosticConnections			
Base	ARElement , ARObject , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	DiagnosticConnection			
functional Request	TpConnectionIdent	*	ref	Reference to functional request messages.
periodic ResponseUudt	PduTriggering	*	ref	Reference to UUDT responses.
physical Request	TpConnectionIdent	0..1	ref	Reference to a physical request message.
response	TpConnectionIdent	0..1	ref	In the vast majority of cases a response is required. However, there are also cases where providing the response is not possible and/or not allowed.
responseOn Event	TpConnectionIdent	0..1	ref	Reference to a ROE message. Tags: atp.Status=obsolete

Table 4.17: DiagnosticConnection

Class	TpConnectionIdent			
Package	M2::AUTOSARTemplates::SystemTemplate::DiagnosticConnection			
Note	This meta-class is created to add the ability to become the target of a reference to the non-Referrable Tp Connection.			
Base	ARObject, Referrable			
Aggregated by	TpConnection.ident			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.18: TpConnectionIdent

[Example 4.2](#) shows an exemplary definition of a [DiagnosticServiceTable](#).

Example 4.2

\$14 - GroupOfDTC: 0xFFFFFFFF

\$19 - Subfunction: \$02, Subfunction \$06

\$22 - DataID: 0x1111, DataID: 0x2222

\$2E - DataID: 0x1111, DataID: 0x2222

\$2F - IO-ID:0x3333

[TPS_DEXT_01091] Relation between a [DiagnosticServiceTable](#) and one or more [DiagnosticConnections](#)

Upstream requirements: [RS_DEXT_00039](#)

[In principle, the relation between a [DiagnosticServiceTable](#) and one or more [DiagnosticConnections](#) can be established in two possible ways:

- By means of the reference [DiagnosticServiceTable.diagnosticConnection](#). This way, the concept of protocols and their priorities relative to each other is **not** considered.

- By means of the references `DiagnosticProtocol.diagnosticConnection` and `DiagnosticProtocol.serviceTable`. This way, the existence of several protocols and their priorities **is positively considered**.

]

Please note that alternatives mentioned in [TPS_DEXT_01091] may or may not be handled as alternatives in actual projects. It may be possible that in a first modeling step protocols are ignored entirely and therefore the respective relations are created by means of `DiagnosticServiceTable.diagnosticConnection`.

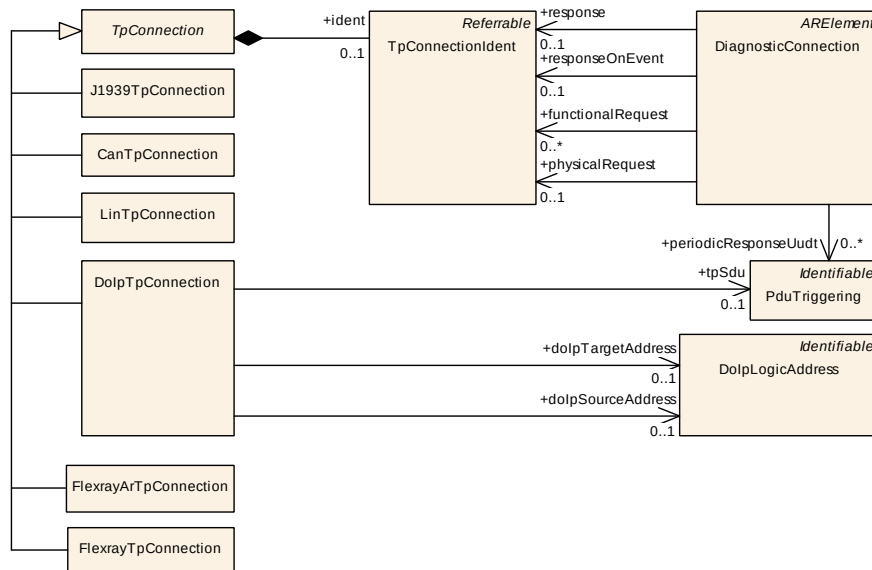


Figure 4.8: Modeling of `DiagnosticConnection`

Later in time and as the project progresses, protocols may become a thing and are consequently introduced in the model. In response to this change, the relation in question is now created by means of the references `DiagnosticProtocol.diagnosticConnection` and `DiagnosticProtocol.serviceTable`.

However, the existing relation created by means of the reference `DiagnosticServiceTable.diagnosticConnection` is not necessarily required to be removed. It may just as well continue to exist. However, in this case an obvious consistency rule as described in [constr_1406] applies.

[constr_1406] `DiagnosticServiceTable.diagnosticConnection` vs. `DiagnosticProtocol.diagnosticConnection`

Imposition time: IT_Dext

[If a `DiagnosticServiceTable` exists that fulfills the following conditions:

- reference `DiagnosticServiceTable.diagnosticConnection` exists
- the `DiagnosticServiceTable` is referenced by means of `DiagnosticProtocol.serviceTable`

then all of the `DiagnosticConnections` referenced by means of `DiagnosticServiceTable.diagnosticConnection` shall also be referenced in the role `diagnosticConnection` from a `DiagnosticProtocol` that in turn references the respective `DiagnosticServiceTable` in the role `DiagnosticProtocol.serviceTable`.]

4.2.10 Diagnostic Common Properties

[TPS_DEXT_01007] Common properties of a `DiagnosticExtract`

Upstream requirements: `RS_DEXT_00001`, `RS_DEXT_00050`

[There are some properties of a `DiagnosticExtract` that are shared among all elements of the `DiagnosticExtract`. These properties are modeled by means of the meta-class `DiagnosticCommonProps`.]

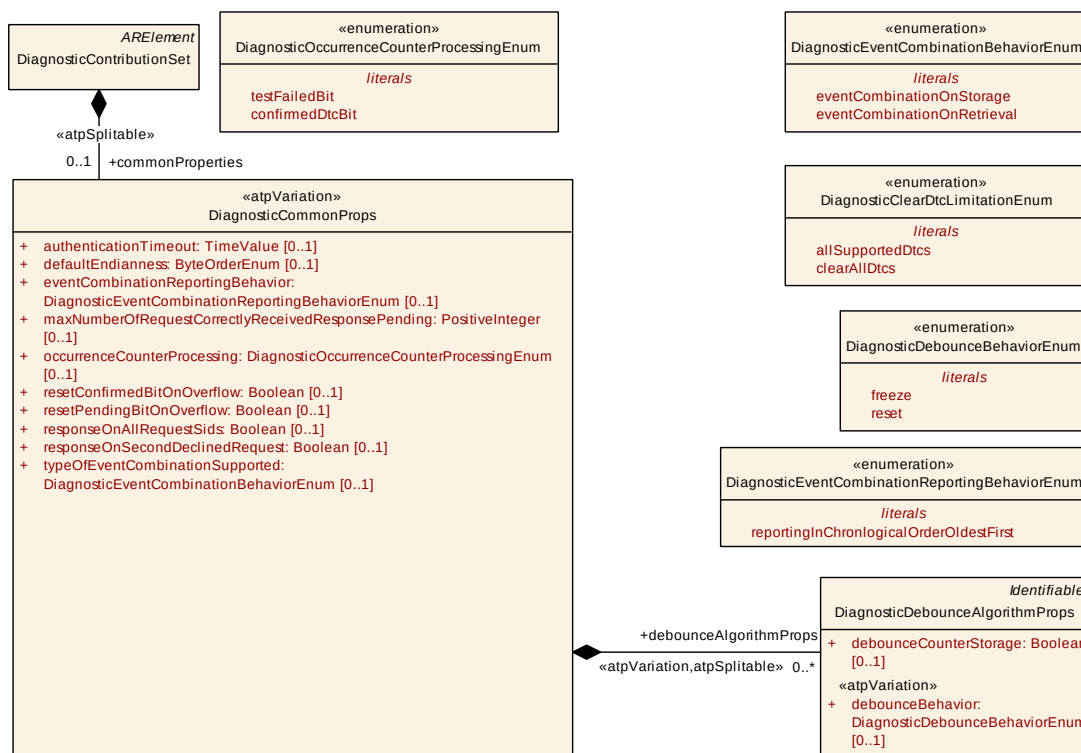


Figure 4.9: Common Diagnostic Properties

[TPS_DEXT_01008] `DiagnosticContributionSet` defines the scope for the application of the common diagnostic properties

Upstream requirements: `RS_DEXT_00001`, `RS_DEXT_00050`

[`DiagnosticContributionSet` aggregates `DiagnosticCommonProps` and by this means defines the scope for the application of the common diagnostic properties.]

[constr_10042] Existence of attribute `DiagnosticCommonProps.defaultEndianness`*Imposition time: IT_Dext*

[One of the following conditions shall be fulfilled:

- `DiagnosticCommonProps.defaultEndianness` exists.
- The attribute `DiagnosticParameter.dataElement.swDataDefProps.baseType.baseTypeDefinition.baseTypeEncoding` exist for **all** `DiagnosticParameters` defined in the context of the `DiagnosticContributionSet`.

]

[constr_10043] Existence of attribute `DiagnosticCommonProps.resetConfirmedBitOnOverflow`*Imposition time: IT_Dext*[Attribute `DiagnosticCommonProps.resetConfirmedBitOnOverflow` shall exist.]**[constr_10044] Existence of attribute `DiagnosticCommonProps.occurrenceCounterProcessing`***Imposition time: IT_Dext*[If, in the context of a `DiagnosticContributionSet`, a `DiagnosticDemProvidedDataMapping` exists where attribute `DiagnosticDemProvidedDataMapping.dataProvider` is set to the value `DEM_OCCCTR`, then attribute `DiagnosticCommonProps.occurrenceCounterProcessing` shall exist.]The following primitive attributes of meta-class `DiagnosticCommonProps` are optional:

- `maxNumberOfRequestCorrectlyReceivedResponsePending`
- `responseOnAllRequestSids`
- `responseOnSecondDeclinedRequest`

[constr_10089] Existence of attribute `DiagnosticCommonProps.eventCombinationReportingBehavior`*Imposition time: IT_Dext*[Attribute `DiagnosticCommonProps.eventCombinationReportingBehavior` is always optional and shall be set to the value `DiagnosticEventCombinationReportingBehaviorEnum.reportingInChronologicalOrderOldestFirst` only if attribute `DiagnosticCommonProps.typeOfEventCombinationSupported` is

set to the value `DiagnosticEventCombinationBehaviorEnum.eventCombinationOnRetrieval`.

If it is missing, then the reporting order is not specified.]

Class	«atpVariation» DiagnosticCommonProps			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticCommonProps			
Note	This meta-class aggregates a number of common properties that are shared among a diagnostic extract. Tags: vh.latestBindingTime=codeGenerationTime			
Base	ARObject			
Aggregated by	DiagnosticContributionSet.commonProperties			
Attribute	Type	Mult.	Kind	Note
authentication Timeout	TimeValue	0..1	attr	This attribute defines the time (in seconds) that the authentication state is maintained in default-session if there is no communication from the authenticated client.
debounce AlgorithmProps	DiagnosticDebounce AlgorithmProps	*	aggr	Defines the used debounce algorithms relevant in the context of the enclosing DiagnosticCommonProps. Usually, there is a variety of debouncing algorithms to take into account and therefore the multiplicity of this aggregation is set to 0..*. Note: This atpSplitable property has no atp.Splitkey due to atpVariation (PropertySetPattern). Stereotypes: atpSplitable; atpVariation Tags: vh.latestBindingTime=postBuild
default Endianness	ByteOrderEnum	0..1	attr	Defines the default endianness of the data belonging to a DID or RID which is applicable if the DiagnosticData Element does not define the endianness via the swData DefProps.baseType attribute.
event Combination Reporting Behavior	DiagnosticEvent CombinationReporting BehaviorEnum	0..1	attr	In case of EventCombination on Retrieval, this attribute specifies if a specific order of reporting is to be maintained.
maxNumberOf Request Correctly Received Response Pending	PositiveInteger	0..1	attr	Maximum number of negative responses with response code 0x78 (requestCorrectlyReceived-ResponsePending) allowed per request. DCM will send a negative response with response code 0x10 (generalReject), in case the limit value gets reached. Value 0xFF means that no limit number of NRC 0x78 response apply.
occurrence Counter Processing	DiagnosticOccurrence CounterProcessing Enum	0..1	attr	This attribute defines the consideration of the fault confirmation process for the occurrence counter.
resetConfirmed BitOnOverflow	Boolean	0..1	attr	This attribute defines, whether the confirmed bit is reset or not while an event memory entry will be displaced.
resetPendingBit OnOverflow	Boolean	0..1	attr	This attribute defines, whether the pending bit is reset or not while an event memory entry will be displaced. In order to be compliant to ISO 14229-1 [1], this parameter needs to be set to "false".
responseOnAll RequestSids	Boolean	0..1	attr	If set to FALSE the DCM will not respond to diagnostic request that contains a service ID which is in the range from 0x40 to 0x7F or in the range from 0xC0 to 0xFF (Response IDs).





Class	«atpVariation» DiagnosticCommonProps			
responseOnSecondDeclinedRequest	Boolean	0..1	attr	Defines the reaction upon a second request (ClientB) that can not be processed (e.g. due to priority assessment). TRUE: when the second request (Client B) can not be processed, it shall be answered with NRC21 BusyRepeat Request. FALSE: when the second request (Client B) can not be processed, it shall not be responded.
typeOfEventCombinationSupported	DiagnosticEventCombinationBehaviorEnum	0..1	attr	Select type of Event Combination support.

Table 4.19: DiagnosticCommonProps

[constr_10419] Existence of the attribute DiagnosticCommonProps.resetPendingBitOnOverflow

Imposition time: IT_Dext

[Attribute DiagnosticCommonProps.resetPendingBitOnOverflow shall exist.]

Enumeration	DiagnosticOccurrenceCounterProcessingEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticCommonProps
Note	The occurrence counter triggering types.
Aggregated by	DiagnosticCommonProps.occurrenceCounterProcessing
Literal	Description
confirmedDtcBit	The occurrence counter is incremented when TestFailed bit transitions from 0 to 1 if the fault confirmation was successful (ConfirmedDTC bit is already set). Tags: atp.EnumerationLiteralIndex=0
testFailedBit	The occurrence counter is incremented when TestFailed bit transitions from 0 to 1 (and the fault confirmation is not considered). Tags: atp.EnumerationLiteralIndex=1

Table 4.20: DiagnosticOccurrenceCounterProcessingEnum

Enumeration	DiagnosticTypeOfDtcSupportedEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode
Note	Supported Dtc Types
Aggregated by	DiagnosticMemoryDestinationPrimary.typeOfDtcSupported
Literal	Description
iso11992_4	ISO11992-4 DTC format Tags: atp.EnumerationLiteralIndex=0 xml.name=ISO-11992--4
iso14229_1	ISO14229-1 DTC format (3 byte format) Tags: atp.EnumerationLiteralIndex=1 xml.name=ISO-14229--1





Enumeration	DiagnosticTypeOfDtcSupportedEnum
iso15031_6	ISO15031-6 DTC format (2 byte format) Tags: atp.EnumerationLiteralIndex=2 xml.name=ISO-15031--6
saeJ1939_73	SAEJ1939-73 DTC format Tags: atp.EnumerationLiteralIndex=3 xml.name=SAE-J-1939--73
saeJ2012_da	SAE_J2012-DA_DTCFormat_00 (3 byte format) Tags: atp.EnumerationLiteralIndex=4 xml.name=SAE-J-2012--DA

Table 4.21: DiagnosticTypeOfDtcSupportedEnum

Enumeration	ByteOrderEnum
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::PrimitiveTypes
Note	When more than one byte is stored in the memory the order of those bytes may differ depending on the architecture of the processing unit. If the least significant byte is stored at the lowest address, this architecture is called little endian and otherwise it is called big endian. ByteOrder is very important in case of communication between different PUs or ECUs.
Aggregated by	ApSomeipTransformationProps.byteOrder, BaseTypeDirectDefinition.byteOrder , DiagnosticCommonProps.defaultEndianness , ISignalToIPduMapping.packingByteOrder, MultiplexedIPdu.selectorField ByteOrder, PduToFrameMapping.packingByteOrder, SegmentPosition.segmentByteOrder, SOMEIP TransformationDescription.byteOrder, System.containerIPduHeaderByteOrder
Literal	Description
mostSignificantByte First	Most significant byte shall come at the lowest address (also known as BigEndian or as Motorola-Format) Tags: atp.EnumerationLiteralIndex=0
mostSignificantByte Last	Most significant byte shall come highest address (also known as LittleEndian or as Intel-Format) Tags: atp.EnumerationLiteralIndex=1
opaque	For opaque data endianness conversion has to be configured to Opaque. See AUTOSAR COM Specification for more details. Tags: atp.EnumerationLiteralIndex=2

Table 4.22: ByteOrderEnum

Enumeration	DiagnosticEventCombinationBehaviorEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticCommonProps
Note	Select type of Event Combination support
Aggregated by	DiagnosticCommonProps.typeOfEventCombinationSupported
Literal	Description
eventCombination OnRetrieval	Event combination on retrieval is used to combine events. For each event an individual event memory entry is created, while reporting the data via UDS, the data is combined. Tags: atp.EnumerationLiteralIndex=1
eventCombination OnStorage	Event combination on storage is used to combine events. Only one memory entry exists for each DTC which is also reported via UDS. Tags: atp.EnumerationLiteralIndex=0

Table 4.23: DiagnosticEventCombinationBehaviorEnum

Enumeration	DiagnosticEventCombinationReportingBehaviorEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticCommonProps
Note	Select reporting format of events. Applicable only for Event Combination on Retrieval.
Aggregated by	DiagnosticCommonProps.eventCombinationReportingBehavior
Literal	Description
reportingIn ChronologicalOrder OldestFirst	The reporting order for event combination on retrieval is the chronological storage order of the events Tags: atp.EnumerationLiteralIndex=0

Table 4.24: DiagnosticEventCombinationReportingBehaviorEnum

4.3 Diagnostic Services

4.3.1 Introduction

The meta-model for the diagnostic services according to AUTOSAR, to a large degree, takes over aspects of the description of diagnostic services according to the definition of *Unified Diagnostic Services (UDS)* as of [17, ISO 14229].

4.3.2 Diagnostic Service Instance vs. Diagnostic Service Class

When it comes to diagnostic services, the meta-model distinguishes between the concept of a diagnostic service *instance* vs. the concept of a diagnostic service *class*.

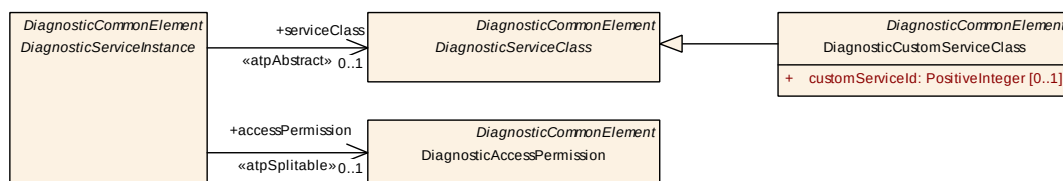


Figure 4.10: Common service elements

As the terminology suggests, the diagnostic service *instance* (formalized as [DiagnosticServiceInstance](#)) implements a concrete use of a diagnostic service in a given context whereas purpose of the diagnostic service *class* (formalized as [DiagnosticServiceClass](#)) is to provide properties that are shared among all existing diagnostic service *instances* in the model.

[constr_1329] Existence of concrete sub-classes of [DiagnosticServiceClass](#) in the context created by a [DiagnosticContributionSet](#)

Imposition time: IT_Dext

[One of the following mutually exclusive conditions shall apply for the existence of any concrete sub-class of [DiagnosticServiceClass](#) in the context created by a [DiagnosticContributionSet](#):

- The subclass of `DiagnosticServiceClass` (except `DiagnosticCustomServiceClass`) shall only appear once in the context created by a `DiagnosticContributionSet`.
- A `DiagnosticCustomServiceClass` with a given value of attribute `customServiceId` shall only appear once in the context created by a `DiagnosticContributionSet`.
- If the subclass of `DiagnosticServiceClass` (except `DiagnosticCustomServiceClass`) appears multiple times in the context created by a `DiagnosticContributionSet`, then all instances of the sub-class of `DiagnosticServiceClass` shall have identical values for all of their attributes.

In case of aggregations, the number of aggregated elements shall be identical and the values of primitive attributes of aggregated elements shall again be identical.

]

This means that multiple instances of `DiagnosticCustomServiceClass` may exist in the context of a `DiagnosticContributionSet`, as long as the value of attribute `customServiceId` is different for all occurrences of `DiagnosticCustomServiceClass`.

The background of [constr_1329] is obviously related to the semantics of `DiagnosticServiceClass` which is to define model attributes that are shared among all `DiagnosticServiceInstances`.

This would not be possible if more than one `DiagnosticServiceClass` with a diverging set of attribute values exists.

Class	<i>DiagnosticServiceClass</i> (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::CommonService			
Note	This meta-class provides the ability to define common properties that are shared among all instances of sub-classes of <code>DiagnosticServiceInstance</code> .			
Base	<i>ARElement</i> , <i>ARObject</i> , <i>CollectableElement</i> , <i>DiagnosticCommonElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
Subclasses	<code>DiagnosticAuthenticationClass</code> , <code>DiagnosticClearDiagnosticInformationClass</code> , <code>DiagnosticClearResetEmissionRelatedInfoClass</code> , <code>DiagnosticComControlClass</code> , <code>DiagnosticControlDTCSettingClass</code> , <code>DiagnosticCustomServiceClass</code> , <code>DiagnosticDataTransferClass</code> , <code>DiagnosticDynamicallyDefineDataIdentifierClass</code> , <code>DiagnosticEcuResetClass</code> , <code>DiagnosticIoControlClass</code> , <code>DiagnosticReadDTCInformationClass</code> , <code>DiagnosticReadDataByIdentifierClass</code> , <code>DiagnosticReadDataByPeriodicIDClass</code> , <code>DiagnosticReadMemoryByAddressClass</code> , <code>DiagnosticReadScalingDataByIdentifierClass</code> , <code>DiagnosticRequestControlOfOnBoardDeviceClass</code> , <code>DiagnosticRequestCurrentPowertrainDataClass</code> , <code>DiagnosticRequestDownloadClass</code> , <code>DiagnosticRequestEmissionRelatedDTCClass</code> , <code>DiagnosticRequestEmissionRelatedDTCPermanentStatusClass</code> , <code>DiagnosticRequestFileTransferClass</code> , <code>DiagnosticRequestOnBoardMonitoringTestResultsClass</code> , <code>DiagnosticRequestPowertrainFreezeFrameDataClass</code> , <code>DiagnosticRequestUploadClass</code> , <code>DiagnosticRequestVehicleInfoClass</code> , <code>DiagnosticResponseOnEventClass</code> , <code>DiagnosticRoutineControlClass</code> , <code>DiagnosticSecurityAccessClass</code> , <code>DiagnosticSessionControlClass</code> , <code>DiagnosticTransferExitClass</code> , <code>DiagnosticWriteDataByIdentifierClass</code> , <code>DiagnosticWriteMemoryByAddressClass</code>			
Aggregated by	<i>ARPackageElement</i>			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.25: DiagnosticServiceClass

Class	DiagnosticServiceInstance (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::CommonService			
Note	This represents a concrete instance of a diagnostic service.			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	DiagnosticAuthentication , DiagnosticClearDiagnosticInformation , DiagnosticClearResetEmissionRelatedInfo , DiagnosticComControl , DiagnosticControlDTCSetting , DiagnosticCustomServiceInstance , DiagnosticDataByIdentifier , DiagnosticDynamicallyDefineDataIdentifier , DiagnosticEcuReset , DiagnosticIOControl , DiagnosticMemoryByAddress , DiagnosticReadDTCInformation , DiagnosticReadDataByPeriodicID , DiagnosticRequestControlOfOnBoardDevice , DiagnosticRequestCurrentPowertrainData , DiagnosticRequestEmissionRelatedDTC , DiagnosticRequestEmissionRelatedDTCPermanentStatus , DiagnosticRequestFileTransfer , DiagnosticRequestOnBoardMonitoringTestResults , DiagnosticRequestPowertrainFreezeFrameData , DiagnosticRequestVehicleInfo , DiagnosticResponseOnEvent , DiagnosticRoutineControl , DiagnosticSecurityAccess , DiagnosticSessionControl			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
access Permission	DiagnosticAccessPermission	0..1	ref	This represents the collection of DiagnosticAccessPermissions that allow for the execution of the referencing DiagnosticServiceInstance .. Stereotypes: atpSplitable Tags: atp.Splitkey=accessPermission
serviceClass	DiagnosticServiceClass	0..1	ref	This represents the corresponding "class", i.e. this meta-class provides properties that are shared among all instances of applicable sub-classes of DiagnosticServiceInstance . The subclasses that affected by this pattern implement references to the applicable "class"-role that substantiate this abstract reference. Stereotypes: atpAbstract

Table 4.26: DiagnosticServiceInstance

[constr_1798] Existence of [DiagnosticServiceInstance.serviceClass](#)

Imposition time: IT_Dext

[For each subclass of [DiagnosticServiceInstance](#), a reference with the abstract role [serviceClass](#) shall exist to a matching subclass of [DiagnosticServiceClass](#).

This rule applies unless a rule for a specific combination of matching sub-classes of [DiagnosticServiceInstance](#) and [DiagnosticServiceClass](#) exists.]

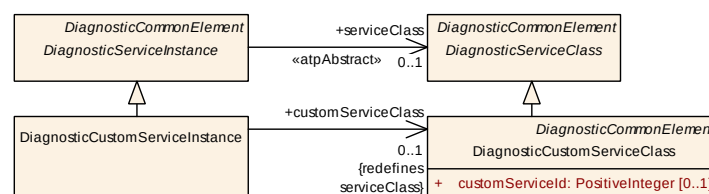


Figure 4.11: Modeling of custom service instance

[TPS_DEXT_01147] Support for custom service instance

Upstream requirements: [RS_DEXT_00047](#)

[Meta-class [DiagnosticCustomServiceInstance](#) can be used to define the existence of an instance of a custom diagnostic service.]

Custom services can obviously not be configured using standardized attributes, but there is the ability to use [Sdg](#) in the context of [adminData](#) for this purpose.

There is no obligation for a given tool to be able to properly process the definition of the custom service instance.

Class	DiagnosticCustomServiceInstance			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::CustomServiceInstance			
Note	This meta-class has the ability to define an instance of a custom diagnostic service. Tags: atp.recommendedPackage=DiagnosticCustomInstances			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
customServiceClass	DiagnosticCustomServiceClass	0..1	ref	Reference to the corresponding DiagnosticCustomServiceClass.

Table 4.27: DiagnosticCustomServiceInstance

Class	DiagnosticCustomServiceClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::CommonService			
Note	This represents the ability to define a custom diagnostic service class and assign an ID to it. Further configuration is not foreseen from the point of view of the diagnostic extract and consequently needs to be done on the level of ECUC. Tags: atp.recommendedPackage=DiagnosticCustomServiceClasses			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
customServiceId	PositiveInteger	0..1	attr	This attribute may only be used for the definition of custom services. The values shall not overlap with existing standardized service IDs.

Table 4.28: DiagnosticCustomServiceClass

[constr_1330] Custom service identifier shall not overlap with standardized service identifiers

Imposition time: [IT_Dext](#)

[The value of the attribute [DiagnosticCustomServiceClass.customServiceId](#) shall not be set to any of the values reserved for standardized service identifiers as defined by the, see [\[17, ISO 14229-1\]](#).]

4.3.3 Diagnostic Access Permission

This chapter discusses the concept of an *access permission* used in the context of the Dcm.

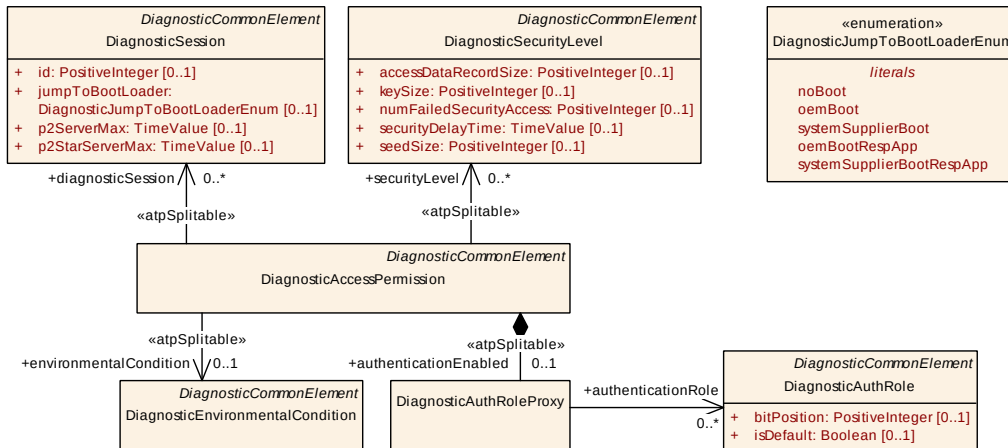


Figure 4.12: Common model elements relevant for the Dcm

[TPS_DEXT_01139] Semantics of the references from **DiagnosticAccessPermission**

Upstream requirements: [RS_DEXT_00040](#), [RS_DEXT_00041](#), [RS_DEXT_00042](#)

[The semantics of the references from **DiagnosticAccessPermission** to

- **DiagnosticSession** in the role `diagnosticSession`.
- **DiagnosticSecurityLevel** in the role `securityLevel`
- **DiagnosticEnvironmentalCondition** in the role `environmentalCondition`
- **DiagnosticAuthRoleProxy** in the role `authenticationEnabled`.

in terms of how access permission is granted is subject to the specification of the Dcm, see [10, SWS Diagnostic Communication Manager].]

The semantics of the model elements referenced from **DiagnosticAccessPermission** is described in the following sections of this document:

- **DiagnosticSession** is described in [Section 4.3.4](#).
- **DiagnosticSecurityLevel** is described in [Section 4.3.5](#).
- **DiagnosticAuthRoleProxy** is described in [Section 4.3.6](#).
- **DiagnosticEnvironmentalCondition** is described in [Section 4.3.7](#).

The `DiagnosticAccessPermission` is used to describe the ability (or the lack thereof) to execute a diagnostic service depending on the referenced `DiagnosticSecurityLevel` and `DiagnosticSession` (see [Figure 4.12](#)).

[TPS_DEXT_01070] Description of textually semi-formal formulated pre- and run-conditions for the validity of `DiagnosticAccessPermission`

Upstream requirements: [RS_DEXT_00041](#)

[AUTOSAR supports the description of textually formulated semi-formal pre- and run-conditions for the validity of `DiagnosticAccessPermission`.

This can be done by means of the attribute `DiagnosticAccessPermission.introduction.structuredReq`.]

For more details regarding the modeling of the semi-formal text please refer to [Figure 4.4](#).

An example of how the definition of pre- and run-conditions may look like in ARXML is sketched in [Listing B.9](#).

To make this approach work it is important to standardize possible values of the attribute `category` such that the semi-formal semantics of the definition of pre- and run-conditions is protected by regulation of the AUTOSAR standard.

[TPS_DEXT_01071] Standardized values of `DiagnosticAccessPermission.introduction.structuredReq`

Upstream requirements: [RS_DEXT_00041](#), [RS_DEXT_00045](#)

[The following possible values of `DiagnosticAccessPermission.introduction.structuredReq` are standardized by AUTOSAR:

- **DIAG_ACCESS_PERM_PRE_COND**: this value describes the pre-condition of the corresponding `DiagnosticAccessPermission`.
- **DIAG_ACCESS_PERM_RUN_COND**: this value describes the run-condition of the corresponding `DiagnosticAccessPermission`.

]

Please find an example for the application of standardized values according to [\[TPS_DEXT_01071\]](#) in [Section B.5](#).

Class	DiagnosticAccessPermission			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm			
Note	This represents the specification of whether a given service can be accessed according to the existence of meta-classes referenced by a particular DiagnosticAccessPermission. In other words, this meta-class acts as a mapping element between several (otherwise unrelated) pieces of information that are put into context for the purpose of checking for access rights. Tags: atp.recommendedPackage=DiagnosticAccessPermissions			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
authentication Enabled	DiagnosticAuthRoleProxy	0..1	aggr	The existence of this aggregation indicates that an authentication is foreseen. The details are clarified by the aggregated class. Stereotypes: atp.Splittable Tags: atp.Splitkey=authenticationEnabled
diagnostic Session	DiagnosticSession	*	ref	This represents the associated DiagnosticSessions Stereotypes: atp.Splittable Tags: atp.Splitkey=diagnosticSession
environmental Condition	DiagnosticEnvironmentalCondition	0..1	ref	This represents the environmental conditions associated with the access permission. Stereotypes: atp.Splittable Tags: atp.Splitkey=environmentalCondition
securityLevel	DiagnosticSecurityLevel	*	ref	This represents the associated DiagnosticSecurityLevels Stereotypes: atp.Splittable Tags: atp.Splitkey=securityLevel

Table 4.29: DiagnosticAccessPermission

Class	DiagnosticSession			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm			
Note	This meta-class represents the ability to define a diagnostic session. Tags: atp.recommendedPackage=DiagnosticSessions			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
id	PositiveInteger	0..1	attr	This is the numerical identifier used to identify the DiagnosticSession in the scope of diagnostic workflow
jumpToBoot Loader	DiagnosticJumpToBootLoaderEnum	0..1	attr	This attribute represents the ability to define whether this diagnostic session allows to jump to Bootloader (OEM Bootloader or System Supplier Bootloader). If this diagnostic session doesn't allow to jump to Bootloader the value JumpToBootLoaderEnum.noBoot shall be chosen.
p2ServerMax	TimeValue	0..1	attr	This is the session value for P2ServerMax in seconds (per Session Control). The AUTOSAR configuration standard is to use SI units, so this parameter is defined as a float value in seconds.





Class	DiagnosticSession			
p2StarServerMax	TimeValue	0..1	attr	This is the session value for P2*ServerMax in seconds (per Session Control). The AUTOSAR configuration standard is to use SI units, so this parameter is defined as a float value in seconds.

Table 4.30: DiagnosticSession

Enumeration	DiagnosticJumpToBootLoaderEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm
Note	This enumeration contains the options for jumping to a boot loader.
Aggregated by	DiagnosticSession.jumpToBootLoader
Literal	Description
noBoot	This diagnostic session doesn't allow to jump to Bootloader. Tags: atp.EnumerationLiteralIndex=0
oemBoot	This diagnostic session allows to jump to OEM Bootloader. In this case the bootloader send the final response. Tags: atp.EnumerationLiteralIndex=1
oemBootRespApp	This diagnostic session allows to jump to OEM Bootloader and application sends final response. Tags: atp.EnumerationLiteralIndex=3
systemSupplierBoot	This diagnostic session allows to jump to System Supplier Bootloader. In this case the bootloader send the final response. Tags: atp.EnumerationLiteralIndex=2
systemSupplierBootRespApp	This diagnostic session allows to jump to System Supplier Bootloader and application sends final response. Tags: atp.EnumerationLiteralIndex=4

Table 4.31: DiagnosticJumpToBootLoaderEnum

4.3.4 Diagnostic Session

At runtime, [DiagnosticSessions](#) are used to create a context for the execution of diagnostic functionality. Servers usually support a variety of different [DiagnosticSessions](#). It is possible to switch between [DiagnosticSessions](#) at runtime.

[TPS_DEXT_01011] Semantics of [DiagnosticSession.id](#)

Upstream requirements: [RS_DEXT_00040](#)

[The value of the attribute [DiagnosticSession.id](#) has a given semantics according to [17, ISO 14229-1]. For the sake of completeness, the dedicated values of [DiagnosticSession.id](#) are:

0x01 This represents the *default session*. This session has a specific semantics in the context of diagnostics communication such that e.g. any diagnostic service that is supposed to execute in the *default session* cannot require any reference to a [DiagnosticSecurityLevel](#).

0x02 This represents the *programming session*.

0x03 This represents the *extended diagnostic session*.

0x04 This represents the *safety system diagnostic session*.

0x40..0x5F This value range is reserved for *manufacturer-specific use*.

0x60..0x7E This value range is reserved for *supplier-specific use*.

]

4.3.5 Diagnostic Security Level

[TPS_DEXT_01012] Rationale for the modeling of the multiplicity of [DiagnosticAccessPermission.securityLevel](#)

Upstream requirements: [RS_DEXT_00041](#), [RS_DEXT_00042](#)

[The multiplicity of [DiagnosticAccessPermission.securityLevel](#) has been set to 0..* with the following motivation:

- The [DiagnosticSession](#) where the attribute [DiagnosticSession.id](#) is set to 0x01 shall **not** be associated with a [DiagnosticSecurityLevel](#).
- There are no associated [DiagnosticSecurityLevels](#) required. As a consequence, the execution of the [DiagnosticServiceInstance](#) that references the given [DiagnosticAccessPermission](#) is always possible.

]

Class	DiagnosticSecurityLevel			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm			
Note	This meta-class represents the ability to define a security level considered for diagnostic purposes. Tags: atp.recommendedPackage=DiagnosticSecurityLevels			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
accessDataRecordSize	PositiveInteger	0..1	attr	This represents the size of the AccessDataRecord used in GetSeed. Unit:byte.
keySize	PositiveInteger	0..1	attr	This represents the size of the security key. Unit: byte.
numFailedSecurityAccess	PositiveInteger	0..1	attr	This represents the number of failed security accesses after which the delay time is activated.
securityDelayTime	TimeValue	0..1	attr	This represents the delay time after a failed security access. Unit: second.
seedSize	PositiveInteger	0..1	attr	This represents the size of the security seed. Unit: byte.

Table 4.32: DiagnosticSecurityLevel

[constr_1419] Value of **DiagnosticSecurityLevel.accessDataRecordSize**

Imposition time: IT_Dext

[If the attribute **DiagnosticSecurityLevel.accessDataRecordSize** exists then its value shall be greater than zero.]

4.3.6 Diagnostic Authentication

[TPS_DEXT_01188] Attribute **DiagnosticAccessPermission.authenticationEnabled does not exist** [If the aggregation of meta-class **DiagnosticAuthRoleProxy** in the role **DiagnosticAccessPermission.authenticationEnabled** does not exist, then no authentication checks are done and the service is processed.]

Class	DiagnosticAuthRoleProxy			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm			
Note	This meta-class indicates that an authentication is generally foreseen. The question whether the authentication is done in general or whether it is done role-specific depends on the existence of references to DiagAuthRole .			
Base	<i>ARObject</i>			
Aggregated by	DiagnosticAccessPermission.authenticationEnabled , DiagnosticMemoryDestinationUserDefined.authenticationEnabled			
Attribute	Type	Mult.	Kind	Note
authentication Role	DiagnosticAuthRole	*	ref	This reference identifies the authenticationRole applicable for the enclosing DiagnosticAccessPermission .

Table 4.33: DiagnosticAuthRoleProxy

[TPS_DEXT_01189] Attribute **DiagnosticAccessPermission.authenticationEnabled exists** [The existence of the aggregation of meta-class **DiagnosticAuthRoleProxy** in the role **DiagnosticAccessPermission.authenticationEnabled** indicates that an authentication by means of further checks is foreseen in the context of the enclosing **DiagnosticAccessPermission**.]

The concrete nature of the further check mentioned in [TPS_DEXT_01189] is defined by [TPS_DEXT_01190] and [TPS_DEXT_01191].

There are use cases where diagnostic services shall explicitly not have any authentication role and the corresponding service is only accessible via the dynamic access list of certificates.

[TPS_DEXT_01190] Attribute **DiagnosticAccessPermission.authenticationEnabled exists, but **DiagnosticAuthRoleProxy.authenticationRole** does**

not exist [If no further [DiagnosticAuthRoleProxy.authenticationRole](#) is defined, then the service is checked against the current dynamic access list.]

There are use cases where diagnostic service shall be subject to specific authentication roles.

[TPS_DEXT_01191] Attribute [DiagnosticAccessPermission.authenticationEnabled](#) and [DiagnosticAuthRoleProxy.authenticationRole](#) exist [If the [DiagnosticAccessPermission](#), in addition to support authentication in general, also needs to consider specific authentication roles, then these roles can be specified by means of the reference to [DiagnosticAuthRole](#) in the role [DiagnosticAuthRoleProxy.authenticationRole](#).]

[TPS_DEXT_01154] Semantics of meta-class [DiagnosticAuthRole](#) [Meta-class [DiagnosticAuthRole](#) provides support for role-based authentication authentication.

In particular, it supports the existence of different roles and the assignment of different rights (e.g. access a given [DiagnosticDataIdentifier](#)) to any of these roles.

The rights are defined in the form of a bitfield that is associated with a given role. In other words, the implementation of this “roles and rights” concept is that a bitfield is associated with a textual label (that describes the role).]

Class	DiagnosticAuthRole			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm			
Note	This meta-class represents the ability to specify an authentication role that can be used to deliver fine-grained access rights. Tags: atp.recommendedPackage=DiagnosticAuthRoles			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
bitPosition	PositiveInteger	0..1	attr	This attribute allows for the specification of the position of the enclosing role in a bitfield of roles.
isDefault	Boolean	0..1	attr	This attribute indicates whether the enclosing role is considered a default role.

Table 4.34: DiagnosticAuthRole

Please note that the value of [DiagnosticAuthRole.bitPosition](#) contributes to the “normative” definition of the “roles and rights” matrix. This matrix is typically defined individually by each [OEM](#) and applies for all projects in the [OEM](#)’s organization.

The model relations of [DiagnosticAuthRole](#) are depicted in [Figure 4.12](#).

Example 4.3

An example of such a matrix is sketched in [Figure 4.13](#). For more information please refer to the document [10, SWS Diagnostic Communication Manager].

	Development	Production	After Sales	Extended User	ePTI	Unused	Unused	Unused
Bit	7	6	5	4	3	2	1	0
Certificate	0	0	1	1	0	0	0	0
Service List								
Service 0x28	0	0	1	1	0	0	0	0
Service 0x11 01	0	0	1	0	0	0	0	0
RID 0x5678	0	1	0	0	0	0	0	0

Figure 4.13: Example “roles and rights” matrix

[constr_10038] Restriction for the usage of `DiagnosticAccessPermission.authenticationEnabled`

Imposition time: `IT_Dext`

[Attribute `DiagnosticAccessPermission.authenticationEnabled` shall not exist if the `DiagnosticAccessPermission` is referenced from

- `DiagnosticRequestCurrentPowertrainData`
- `DiagnosticRequestPowertrainFreezeFrameData`
- `DiagnosticRequestEmissionRelatedDTC`
- `DiagnosticClearResetEmissionRelatedInfo`
- `DiagnosticRequestOnBoardMonitoringTestResults`
- `DiagnosticRequestControlOfOnBoardDevice`
- `DiagnosticRequestVehicleInfo`
- `DiagnosticRequestEmissionRelatedDTCPermanentStatus`
- sub-classes of `DiagnosticAuthentication`

]

4.3.7 Diagnostic Environmental Condition

In some cases, diagnostic functionality can only be executed if the vehicle is in a (safe) state that allows for the respective diagnostics function. For example, one such condition is that the vehicle is not driving, i.e. vehicle speed == 0.

The meta-class `DiagnosticEnvironmentalCondition` formalizes the idea of a condition which is evaluated during runtime of the ECU by looking at “environmental” states (such as the mentioned vehicle speed).

`DiagnosticEnvironmentalConditions` are based on the active modes in the application software or basic software or by comparison of `DiagnosticDataElements` with constant values. Atomic conditions can be combined by logical operations to form more complex conditions.

Please note that it is possible to create a nested hierarchy (of arbitrary depth) of `DiagnosticEnvConditionFormula`. This modeling is supported by the fact that `DiagnosticEnvConditionFormula` inherits from and, at the same time, aggregates `DiagnosticEnvConditionFormulaPart`.

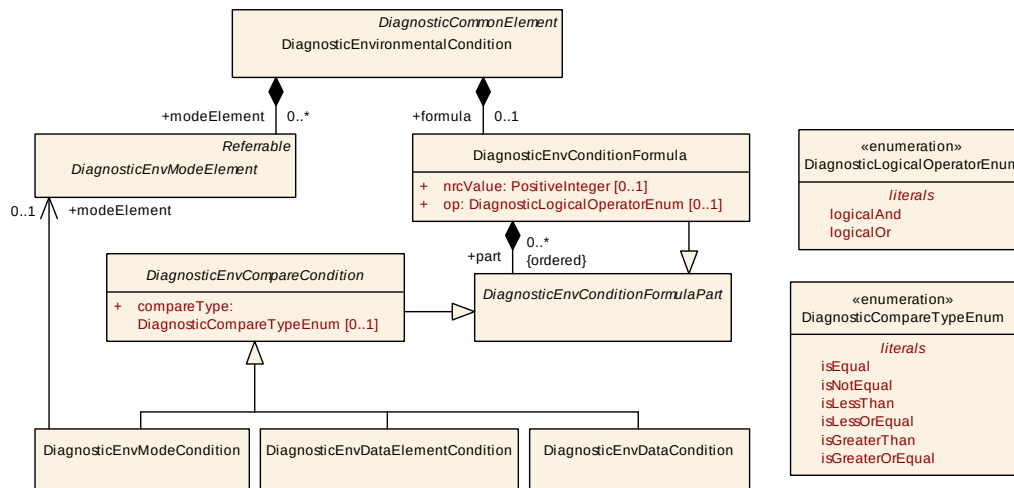


Figure 4.14: Formal modeling of the consideration of environmental conditions

Class	DiagnosticEnvironmentalCondition			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::EnvironmentalCondition			
Note	The meta-class <code>DiagnosticEnvironmentalCondition</code> formalizes the idea of a condition which is evaluated during runtime of the ECU by looking at "environmental" states (e.g. one such condition is that the vehicle is not driving, i.e. vehicle speed == 0). Tags: atp.recommendedPackage=DiagnosticEnvironmentalConditions			
Base	<code>ARElement</code> , <code>ARObject</code> , <code>CollectableElement</code> , <code>DiagnosticCommonElement</code> , <code>Identifiable</code> , <code>Multilanguage</code> , <code>Referrable</code> , <code>PackageableElement</code> , <code>Referrable</code>			
Aggregated by	<code>ARPackage.element</code>			
Attribute	Type	Mult.	Kind	Note
formula	<code>DiagnosticEnvConditionFormula</code>	0..1	aggr	This attribute represents the formula part of the <code>DiagnosticEnvironmentalCondition</code> .
modeElement	<code>DiagnosticEnvModeElement</code>	*	aggr	This aggregation contains a representation of Mode Declarations in the context of a <code>DiagnosticEnvironmentalCondition</code> .

Table 4.35: DiagnosticEnvironmentalCondition

[constr_1799] Existence of `DiagnosticEnvironmentalCondition.formula`*Imposition time:* `IT_Dext`

[For each `DiagnosticEnvironmentalCondition`, the aggregation of `DiagnosticEnvConditionFormula` in the role `formula` shall exist.]

4.3.7.1 Environmental Condition Formula

The core part of a `DiagnosticEnvironmentalCondition` is the `DiagnosticEnvConditionFormula`.

[TPS_DEXT_01113] Evaluation of a `DiagnosticEnvConditionFormula`*Upstream requirements:* `RS_DEXT_00079`

[A `DiagnosticEnvConditionFormula` embodies the computation instruction that is to be evaluated at runtime to determine if the `DiagnosticEnvironmentalCondition` is currently present (i.e. the formula is evaluated to `true`) or not (otherwise).

The `DiagnosticEnvConditionFormula` itself consists of `parts` which are combined by the logical operations represented by the attribute `op`.]

Class	DiagnosticEnvConditionFormula			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::EnvironmentalCondition			
Note	A <code>DiagnosticEnvConditionFormula</code> embodies the computation instruction that is to be evaluated at runtime to determine if the <code>DiagnosticEnvironmentalCondition</code> is currently present (i.e. the formula is evaluated to <code>true</code>) or not (otherwise). The formula itself consists of parts which are combined by the logical operations specified by <code>DiagnosticEnvConditionFormula.op</code>. If a diagnostic functionality cannot be executed because an environmental condition fails then the diagnostic stack shall send a negative response code (NRC) back to the client. The value of the NRC is directly related to the specific formula and is therefore formalized in the attribute <code>DiagnosticEnvConditionFormula.nrcValue</code>.			
Base	<code>ARObject</code> , <code>DiagnosticEnvConditionFormulaPart</code>			
Aggregated by	<code>DiagnosticEnvConditionFormula.part</code> , <code>DiagnosticEnvironmentalCondition.formula</code>			
Attribute	Type	Mult.	Kind	Note
<code>nrcValue</code>	<code>PositiveInteger</code>	0..1	attr	This attribute represents the concrete NRC value that shall be returned if the condition fails.
<code>op</code>	<code>DiagnosticLogicalOperatorEnum</code>	0..1	attr	This attribute represents the concrete operator (supported operators: <code>and</code> , <code>or</code>) of the condition formula.
<code>part (ordered)</code>	<code>DiagnosticEnvConditionFormulaPart</code>	*	aggr	This aggregation represents the collection of formula parts that can be combined by logical operators.

Table 4.36: DiagnosticEnvConditionFormula**[constr_1800] Existence of `DiagnosticEnvConditionFormula.op`***Imposition time:* `IT_Dext`

[For each `DiagnosticEnvConditionFormula`, that attribute `op` shall exist.]

Enumeration	DiagnosticLogicalOperatorEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::EnvironmentalCondition
Note	Logical AND and OR operation (&,)
Aggregated by	DiagnosticEnvConditionFormula.op
Literal	Description
logicalAnd	Logical AND Tags: atp.EnumerationLiteralIndex=0
logicalOr	Logical OR Tags: atp.EnumerationLiteralIndex=1

Table 4.37: DiagnosticLogicalOperatorEnum

Class	DiagnosticEnvConditionFormulaPart (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::EnvironmentalCondition			
Note	A DiagnosticEnvConditionFormulaPart can either be a atomic condition, e.g. a DiagnosticEnvCompareCondition, or a DiagnosticEnvConditionFormula, again, which allows arbitrary nesting.			
Base	ARObject			
Subclasses	DiagnosticEnvCompareCondition , DiagnosticEnvConditionFormula			
Aggregated by	DiagnosticEnvConditionFormula.part			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.38: DiagnosticEnvConditionFormulaPart

[TPS_DEXT_01114] [DiagnosticEnvConditionFormula](#) that has no **parts**

Upstream requirements: [RS_DEXT_00079](#)

[A [DiagnosticEnvConditionFormula](#) that has no **parts** shall be evaluated to false. This rule shall apply independently of the value of [DiagnosticEnvConditionFormula.op](#).]

[TPS_DEXT_01115] [DiagnosticEnvConditionFormula](#) that has one **part**

Upstream requirements: [RS_DEXT_00079](#)

[A [DiagnosticEnvConditionFormula](#) that has one **part** shall be evaluated to the evaluation result of this part. This rule shall apply independently of the value of [DiagnosticEnvConditionFormula.op](#).]

[TPS_DEXT_01116] [DiagnosticEnvConditionFormula](#) that has more than one **part**

Upstream requirements: [RS_DEXT_00079](#)

[The evaluation result of a [DiagnosticEnvConditionFormula](#) with more than one **part** shall be calculated by combining the results of the **parts** with the logical Operation specified by [DiagnosticEnvConditionFormula.op](#).

The evaluation shall be done in a “short-cut” manner, i.e. following the rules for the evaluation of the logical operators in C.

The consequences of this approach are:

- The `parts` shall be evaluated in the specified order starting at the first element. This is why the aggregation of `part` is decorated by the `ordered` qualifier.
- after the evaluation of each `part` a check shall be executed if it is still possible that the evaluation of the remaining `parts` (to `true` or `false`) could change the overall result.
- As soon as a change of the overall result is no longer possible, i.e. any of the following conditions evaluates to `false`:
 - there are no `parts` left
 - the current `part` was evaluated to `false` and `DiagnosticEnvConditionFormula.op == DiagnosticLogicalOperatorEnum.logicalAnd`
 - the current `part` was evaluated to `true` and `DiagnosticEnvConditionFormula.op == DiagnosticLogicalOperatorEnum.logicalOr`

the evaluation of the `parts` shall be finalized and the evaluation result of the current `part` shall be considered the overall evaluation result of the formula.

Regarding the strategy for returning `NRC` values please refer to the specification of the [10, SWS Diagnostic Communication Manager].

]

[TPS_DEXT_01117] Semantics of `DiagnosticEnvConditionFormula.nrcValue`

Upstream requirements: [RS_DEXT_00079](#)

[If a diagnostic functionality cannot be executed because an environmental condition fails, i.e. the formula is evaluated to `false`, then the diagnostic stack shall send an optional negative response code (`NRC`) back to the client (if it is present).

If no value for `NRC` is defined then a pre-defined `NRC` value as defined in the [10, SWS Diagnostic Communication Manager] will be sent back. The value of the `NRC` is directly related to the specific `DiagnosticEnvConditionFormula` and is therefore formalized in the attribute `DiagnosticEnvConditionFormula.nrcValue`.]

[constr_1464] Allowed value range of `DiagnosticEnvConditionFormula.nrcValue`

Imposition time: [IT_Dext](#)

[The value of attribute `DiagnosticEnvConditionFormula.nrcValue` shall be limited to the interval [1..255].]

The rationale for the existence of [\[constr_1464\]](#) is provided by [\[17, ISO 14229-1\]](#).

4.3.7.2 Atomic Conditions

Atomic conditions in the context of a [DiagnosticEnvConditionFormula](#) are described by means of meta-class [DiagnosticEnvCompareConditions](#). The formulation of [DiagnosticEnvCompareConditions](#) is based on the idea of a comparison at runtime of some variable data with a constant value.

The actual type of the comparison ($=$, $\neq$, $<$, $\leq$, ...) is specified by means of the attribute [DiagnosticEnvCompareCondition.compareType](#).

Class	DiagnosticEnvCompareCondition (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::EnvironmentalCondition			
Note	DiagnosticCompareConditions are atomic conditions. They are based on the idea of a comparison at runtime of some variable data with something constant. The type of the comparison ($=$, $\neq$, $<$, $\leq$, ...) is specified in DiagnosticCompareCondition.compareType .			
Base	ARObject, DiagnosticEnvConditionFormulaPart			
Subclasses	DiagnosticEnvDataCondition , DiagnosticEnvDataElementCondition , DiagnosticEnvModeCondition			
Aggregated by	DiagnosticEnvConditionFormulaPart			
Attribute	Type	Mult.	Kind	Note
compareType	DiagnosticCompareTypeEnum	0..1	attr	This attributes represents the concrete type of the comparison.

Table 4.39: DiagnosticEnvCompareCondition

[constr_1801] Existence of [DiagnosticEnvCompareCondition.compareType](#)

Imposition time: IT_Dext

[For each [DiagnosticEnvCompareCondition](#), that attribute [compareType](#) shall exist.]

[DiagnosticEnvCompareCondition](#) is an abstract meta-class that acts as a base class for two concrete meta-classes designed to handle different operand types.

Enumeration	DiagnosticCompareTypeEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::EnvironmentalCondition
Note	Enumeration for the type of a comparison of values usually expressed by the following operators: $=$, $\neq$, $<$, $\leq$, $>$, $\geq$
Aggregated by	DiagnosticEnvCompareCondition.compareType
Literal	Description
isEqual	equal Tags: atp.EnumerationLiteralIndex=0
isGreaterOrEqual	greater than or equal Tags: atp.EnumerationLiteralIndex=5
isGreaterThan	greater than Tags: atp.EnumerationLiteralIndex=4





Enumeration	DiagnosticCompareTypeEnum
isLessOrEqual	less than or equal Tags: atp.EnumerationLiteralIndex=3
isLessThan	less than Tags: atp.EnumerationLiteralIndex=2
isNotEqual	not equal Tags: atp.EnumerationLiteralIndex=1

Table 4.40: DiagnosticCompareTypeEnum


The specific sub-classes (the details are explained in [Section 4.3.7.2.1](#), [Section 4.3.7.2.2](#), and [Section 4.3.7.2.3](#)) of [DiagnosticEnvCompareCondition](#) support a different set of attributes of [DiagnosticCompareTypeEnum](#) for setting the value of attribute [DiagnosticEnvCompareCondition.compareType](#).

4.3.7.2.1 Data Condition to DID

[TPS_DEXT_01118] Semantics of [DiagnosticEnvDataCondition](#)

Upstream requirements: [RS_DEXT_00079](#)

[The meta-class [DiagnosticEnvDataCondition](#) represents an atomic condition that compares the current value of the referenced [DiagnosticDataElement](#) with a constant value defined by the [ValueSpecification](#) aggregated in the role [compareValue](#).]

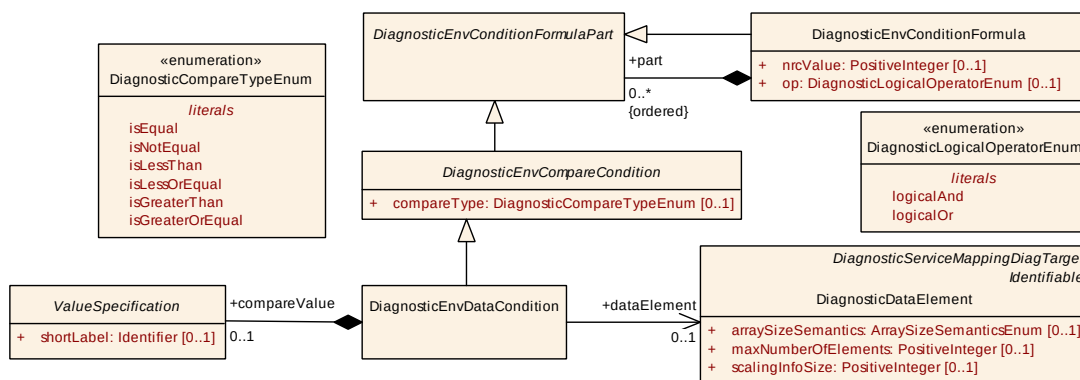Figure 4.15: Usage of [DiagnosticEnvDataCondition](#)

[TPS_DEXT_01168] Allowed values of [compareType](#) in the context of a [DiagnosticEnvDataCondition](#)

Upstream requirements: [RS_DEXT_00079](#)

[Within the context of a [DiagnosticEnvDataCondition](#) all values of [DiagnosticCompareTypeEnum](#) are supported for the inherited attribute [compareType](#).]

Class	DiagnosticEnvDataCondition			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::EnvironmentalCondition			
Note	A DiagnosticEnvDataCondition is an atomic condition that compares the current value of the referenced DiagnosticDataElement with a constant value defined by the ValueSpecification. All compareTypes are supported.			
Base	ARObject, DiagnosticEnvCompareCondition , DiagnosticEnvConditionFormulaPart			
Aggregated by	DiagnosticEnvConditionFormula.part			
Attribute	Type	Mult.	Kind	Note
compareValue	ValueSpecification	0..1	aggr	This attribute represents a fixed compare value taken to evaluate the compare condition.
dataElement	DiagnosticDataElement	0..1	ref	This reference represents the related diagnostic data element.

Table 4.41: DiagnosticEnvDataCondition

[constr_1802] Existence of [DiagnosticEnvDataCondition.compareValue](#)

Imposition time: IT_Dext

[For each [DiagnosticEnvDataCondition](#), that attribute [compareValue](#) shall exist.]

[constr_1803] Existence of [DiagnosticEnvDataCondition.dataElement](#)

Imposition time: IT_Dext

[For each [DiagnosticEnvDataCondition](#), that attribute [dataElement](#) shall exist.]

4.3.7.2.2 Data Condition to Data Element owned by Application

[TPS_DEXT_01165] Semantics of [DiagnosticEnvDataElementCondition](#)

Upstream requirements: RS_DEXT_00079

[The meta-class [DiagnosticEnvDataElementCondition](#) represents an atomic condition that compares the current value of the referenced [DataPrototype](#) with a constant value defined by the [ValueSpecification](#) aggregated in the role [compareValue](#).]

[TPS_DEXT_01166] Usage of [DiagnosticEnvDataElementCondition](#) in top-down and bottom-up scenarios

Upstream requirements: RS_DEXT_00079

[Meta-class [DiagnosticEnvDataElementCondition](#) supports the definition of access to a [DataPrototype](#) owned by the application:

- If the application software exists (i.e. a top-down development process is in place) at the time when the [DiagnosticEnvDataElementCondition](#) is created,

then the reference in the role `dataPrototype` can be used to identify the target `DataPrototype` right away.

- If the application software does **not** exist (i.e. a bottom-up development process is in place) at the time when the `DiagnosticEnvDataElementCondition` is created, then the aggregation of `SwDataDefProps` in the role `swDataDef-Props` shall exist.

In this case, the properties (`baseTypeEncoding`, `baseTypeSize`) of the `DataPrototype` (most likely identified by the integrator) taken for the comparison can be formally described.

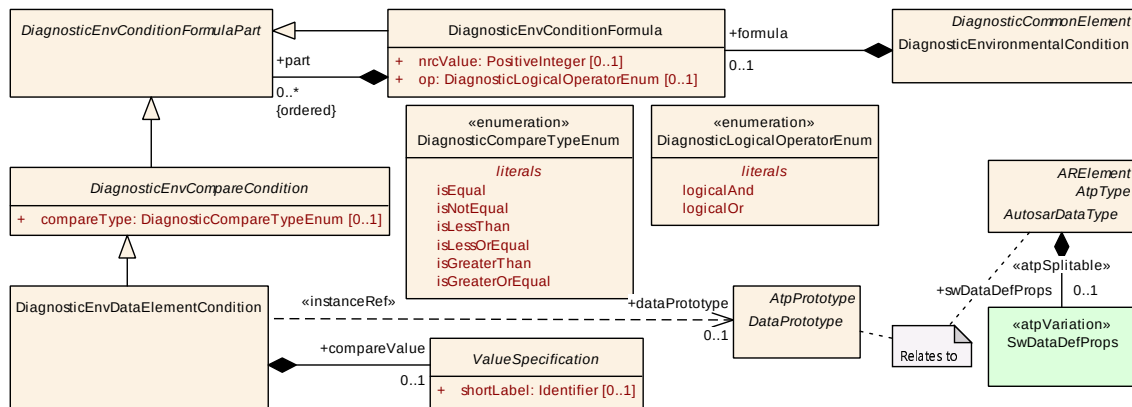


Figure 4.16: Usage of `DiagnosticEnvDataElementCondition` in a top-down development scenario

Class	DiagnosticEnvDataElementCondition			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::EnvironmentalCondition			
Note	This meta-class represents the ability to formulate a diagnostic environment condition based on the value of a data element owned by the application software.			
Base	ARObject, DiagnosticEnvCompareCondition , DiagnosticEnvConditionFormulaPart			
Aggregated by	DiagnosticEnvConditionFormula.part			
Attribute	Type	Mult.	Kind	Note
compareValue	ValueSpecification	0..1	aggr	This aggregation represents the definition of the compare value against which the value taken from the application software shall be compared.
dataPrototype	DataPrototype	0..1	iref	This instanceRef represent the ability to access a data element owned by the application software on the AUTOSAR classic platform. InstanceRef implemented by: DataPrototypeInSystemInstanceRef
swDataDef Props	SwDataDefProps	0..1	aggr	Via this aggregation it is possible to describe the properties of the data that is obtained from the application for the environmental condition. Stereotypes: atpSplitable Tags: atp.Splitkey=swDataDefProps

Table 4.42: DiagnosticEnvDataElementCondition

[constr_10115] Existence of attributes of `DiagnosticEnvDataElementCondition` if the reference in the role `dataPrototype` exists

Imposition time: `IT_Dext`

[If the reference in the role `DiagnosticEnvDataElementCondition.dataPrototype` exists, then

- the aggregation in the role `compareValue` shall exist and
- the aggregation in the role `swDataDefProps` shall not exist.

]

[constr_10116] Existence of attributes of `DiagnosticEnvDataElementCondition` if the reference in the role `dataPrototype` does not exist

Imposition time: `IT_Dext`

[If the reference in the role `DiagnosticEnvDataElementCondition.dataPrototype` does **not** exist, then the aggregations in the role

- `compareValue` and
- `swDataDefProps`

shall exist.]

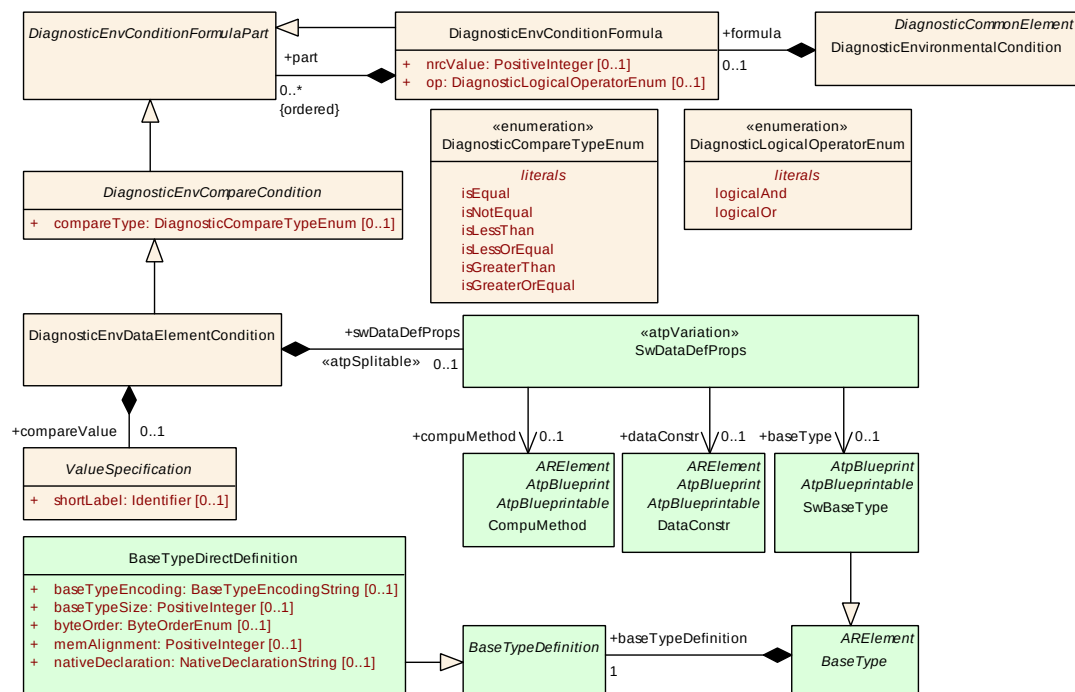


Figure 4.17: Usage of `DiagnosticEnvDataElementCondition` in a bottom-up development scenario

[constr_10117] Existence of attributes of `DiagnosticEnvDataElementCondition.swDataDefProps`*Imposition time:* `IT_Dext`

[

Attribute of <code>SwDataDefProps</code>	Attribute Existence
<code>baseType</code>	1
<code>compuMethod</code>	0..1
<code>dataConstr</code>	0..1

]

[TPS_DEXT_01167] Relevance of `CompuMethod` and `DataConstr` for the definition of `DiagnosticEnvDataElementCondition`*Upstream requirements:* `RS_DEXT_00079`

[The references `SwDataDefProps.compuMethod` and `dataConstr` can be used to define the data semantics of the data obtained from the application software such that – where applicable – the `compareValue` can be defined in the physical domain, i.e. as a `ApplicationValueSpecification`.]

4.3.7.2.3 Mode Condition**[TPS_DEXT_01119] Semantics of `DiagnosticEnvModeCondition`***Upstream requirements:* `RS_DEXT_00079`

[The meta-class `DiagnosticEnvModeCondition` represents an atomic condition that compares the current value of the referenced `ModeDeclarationGroupPrototype` with the value of a `ModeDeclaration` taken as the reference value.]

The concrete modeling of this aspect is sketched in [Figure F.4](#).

Please note that the `ModeDeclarationGroupPrototype` as well as the applicable `ModeDeclaration` are both referenced in the concrete modeling of the attribute `DiagnosticEnvSwcModeElement.mode`.

The idea behind this modeling approach (for more information, please refer to [Figure F.4](#)) is that the `ModeDeclaration` can only be a member of the specific `ModeDeclarationGroup` taken to type the respective `ModeDeclarationGroupPrototype` anyway.

Admittedly, this relation could be expressed by means of two references and a formal constraint **or** it could be expressed by way of a **single** reference that's implying an

interpreting of the model in a specific way. AUTOSAR opts for the latter alternative, which is detailed by [TPS_DEXT_01120].

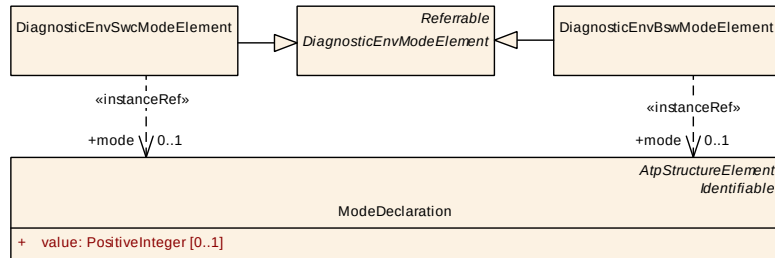


Figure 4.18: Specializations of **DiagnosticEnvModeElement**

[TPS_DEXT_01120] Comparison of the value of a **ModeDeclarationGroupPrototype** with a **ModeDeclaration**

Upstream requirements: RS_DEXT_00079

[For the comparison of the value of a **ModeDeclarationGroupPrototype** with a **ModeDeclaration**, two alternatives apply, depending on whether mode condition is executed in application software (swc) or basic software (bsw):

- The **ModeDeclarationGroupPrototype** referenced in the role **DiagnosticEnvSwcModeElement.mode.contextModeDeclarationGroup** shall be compared to the **ModeDeclaration** referenced in the role **DiagnosticEnvSwcModeElement.mode.targetMode**.
- The **ModeDeclarationGroupPrototype** referenced in the role **DiagnosticEnvBswModeElement.mode.contextModeDeclarationGroup** shall be compared to the **ModeDeclaration** referenced in the role **DiagnosticEnvBswModeElement.mode.targetMode**.

]

Please note that the two alternatives mentioned in [TPS_DEXT_01120] are described in Figure 4.18.

[constr_1466] Allowed values of **compareType** in the context of a **DiagnosticEnvModeCondition**

Imposition time: IT_Dext

[Within the context of a **DiagnosticEnvDataCondition** **only a subset** of the values of **DiagnosticCompareTypeEnum** is supported for the inherited attribute **compareType**, namely:

- **DiagnosticCompareTypeEnum.isEqual**
- **DiagnosticCompareTypeEnum.isNotEqual**

]

[constr_1467] References in [DiagnosticEnvModeCondition](#)*Imposition time:* [IT_Dext](#)

[In a [DiagnosticEnvModeCondition](#) the reference [modeElement](#) shall only point to a [DiagnosticEnvModeElement](#) that is aggregated inside the same [DiagnosticEnvironmentalCondition](#) as the [DiagnosticEnvModeCondition](#) itself.]

Please note that the main benefit of the existence of the dedicated meta-class [DiagnosticEnvModeElement](#) is to keep the (serialized) model clean. Given the fulfillment of [\[constr_1467\]](#), the potentially lengthy [InstanceRef](#) for identifying the operands of a mode comparison does not (if applicable) have to be repeated but can be reused multiple times in the context of the enclosing [DiagnosticEnvironmentalCondition](#).

Class	DiagnosticEnvModeCondition			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::EnvironmentalCondition			
Note	DiagnosticEnvModeCondition are atomic condition based on the comparison of the active Mode Declaration in a ModeDeclarationGroupPrototype with the constant value of a ModeDeclaration. The formulation of this condition uses only one DiagnosticEnvElement, which contains enough information to deduce the variable part (i.e. the part that changes at runtime) as well as the constant part of the comparison. Only DiagnosticCompareTypeEnum.isEqual or DiagnosticCompareTypeEnum.isNotEqual are eligible values for DiagnosticAtomicCondition.compareType.			
Base	ARObject, DiagnosticEnvCompareCondition , DiagnosticEnvConditionFormulaPart			
Aggregated by	DiagnosticEnvConditionFormula.part			
Attribute	Type	Mult.	Kind	Note
modeElement	DiagnosticEnvModeElement	0..1	ref	This reference represents both the ModeDeclaration GroupPrototype and the ModeDeclaration relevant for the mode comparison.

Table 4.43: DiagnosticEnvModeCondition**[constr_1804] Existence of [DiagnosticEnvModeCondition.modeElement](#)***Imposition time:* [IT_Dext](#)

[For each [DiagnosticEnvModeCondition](#), that attribute [modeElement](#) shall exist.]

Class	DiagnosticEnvModeElement (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::EnvironmentalCondition			
Note	All ModeDeclarations that are referenced in a DiagnosticEnvModeCondition shall be defined as a DiagnosticEnvModeElement of this DiagnosticEnvironmentalCondition. This concept keeps the ARXML clean: It avoids that the DiagnosticEnvConditionFormula is cluttered by lengthy InstanceRef definitions. Furthermore, it allows that an InstanceRef only needs to be defined once and can be used multiple times in the different DiagnosticEnvModeConditions.			
Base	ARObject, Referrable			





Class	DiagnosticEnvModeElement (abstract)			
Subclasses	DiagnosticEnvBswModeElement , DiagnosticEnvSwcModeElement			
Aggregated by	DiagnosticEnvironmentalCondition.modeElement			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.44: DiagnosticEnvModeElement

Class	DiagnosticEnvSwcModeElement			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::EnvironmentalCondition			
Note	This meta-class represents the ability to refer to a ModeDeclaration in a concrete System context.			
Base	ARObject, DiagnosticEnvModeElement , Referrable			
Aggregated by	DiagnosticEnvironmentalCondition.modeElement			
Attribute	Type	Mult.	Kind	Note
mode	ModeDeclaration	0..1	iref	This reference identifies both the ModeDeclarationGroup Prototype and the ModeDeclaration for the specific mode comparison. InstanceRef implemented by: PModeInSystemInstanceRef

Table 4.45: DiagnosticEnvSwcModeElement

[constr_1805] Existence of [DiagnosticEnvSwcModeElement.mode](#)

Imposition time: [IT_Dext](#)

[For each [DiagnosticEnvSwcModeElement](#), that attribute [mode](#) shall exist.]

Class	DiagnosticEnvBswModeElement			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::EnvironmentalCondition			
Note	This meta-class represents the ability to refer to a specific ModeDeclaration in the scope of a BswModule Description.			
Base	ARObject, DiagnosticEnvModeElement , Referrable			
Aggregated by	DiagnosticEnvironmentalCondition.modeElement			
Attribute	Type	Mult.	Kind	Note
mode	ModeDeclaration	0..1	iref	This reference identifies both the ModeDeclarationGroup Prototype and the ModeDeclaration for the specific mode comparison. InstanceRef implemented by: ModeInBswModuleDescriptionInstanceRef

Table 4.46: DiagnosticEnvBswModeElement

[constr_1806] Existence of [DiagnosticEnvBswModeElement.mode](#)

Imposition time: [IT_Dext](#)

[For each [DiagnosticEnvBswModeElement](#), that attribute [mode](#) shall exist.]

4.3.8 Diagnostic Services supported by AUTOSAR

The following sub-chapters describe the modeling of the collection of relevant diagnostic services as defined in the [17, ISO 14229-1]. This means that the definition of the AUTOSAR *DiagnosticExtract* does not explicitly support the total collection of diagnostic services as defined by [17, ISO 14229-1].

Some diagnostic services compiled in this document define so-called sub-functions that need to be identified to fully specify the nature of the respective diagnostic service.

[TPS_DEXT_01013] Specification of sub-functions by means of attribute *DiagnosticServiceInstance.category*

Upstream requirements: RS_DEXT_00049, RS_DEXT_00051

[

In all cases where a diagnostic service defines a sub-function according to [17, ISO 14229-1], the value of the attribute *category* of the applicable sub-class of *DiagnosticServiceInstance* can be used to specify the applicable sub-function as a textual token.

Constraints are defined to clarify the existence of standardized values of the attribute *category* for the given sub-function. This implies that an instance of the given sub-class of *DiagnosticServiceInstance* only has a single sub-function at a time.]

[TPS_DEXT_01045] Supported diagnostic services in the scope of this document

Upstream requirements: RS_DEXT_00003, RS_DEXT_00004, RS_DEXT_00005, RS_DEXT_00006, RS_DEXT_00007, RS_DEXT_00008, RS_DEXT_00009, RS_DEXT_00010, RS_DEXT_00011, RS_DEXT_00012, RS_DEXT_00013, RS_DEXT_00014, RS_DEXT_00015, RS_DEXT_00016, RS_DEXT_00017, RS_DEXT_00018, RS_DEXT_00019, RS_DEXT_00020, RS_DEXT_00021, RS_DEXT_00022

[

ID	Service
0x10	SessionControl
0x11	EcuReset
0x14	ClearDiagnosticInformation
0x19	ReadDTCInformation
0x22	ReadDataByIdentifier
0x23	ReadMemoryByAddress
0x24	ReadScalingDataByIdentifier
0x27	SecurityAccess
0x28	CommunicationControl
0x29	Authentication
0x2A	ReadDataByPeriodicIdentifier



△

ID	Service
0x2C	DynamicallyDefineDataIdentifier
0x2E	WriteDataByIdentifier
0x2F	IOControl
0x31	RoutineControl
0x34	RequestDownload
0x35	RequestUpload
0x36	TransferData
0x37	RequestTransferExit
0x3D	WriteMemoryByAddress
0x85	ControlDTCSetting
0x86	ResponseOnEvent

]

[TPS_DEXT_01014] Possible values of the **category** attribute for diagnostic services

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00051](#)

[AUTOSAR claims the right to standardize the possible values of the attribute **category** for given diagnostic services.]

If applicable, AUTOSAR allows for the usage of values of the attribute **category** other than the standardized values.

In this case, however, proprietary values of the attribute **category** shall be prefixed with a company-specific name fragment (as demonstrated in [Example 4.4](#)) in order to avoid collisions that could occur if or when the list of possible values claimed by the AUTOSAR standard itself is extended.

Example 4.4

```

<AR-PACKAGE>
  <SHORT-NAME>DiagnosticExtractExample</SHORT-NAME>
  <ELEMENTS>
    <DIAGNOSTIC-ECU-RESET>
      <SHORT-NAME>ResetTheHardWay</SHORT-NAME>
      <CATEGORY>ACME_REALLY_HARD_RESET</CATEGORY>
    </DIAGNOSTIC-ECU-RESET>
  </ELEMENTS>
</AR-PACKAGE>

```

Listing 4.1: Example for the definition of a custom **category**

4.3.8.1 SessionControl

This chapter describes the modeling of diagnostic services `SessionControl` (0x10). The obvious goal of the service is to support the switching from one diagnostic session to another.

[TPS_DEXT_01081] Modeling of `DiagnosticSessionControl`

Upstream requirements: [RS_DEXT_00003](#), [RS_DEXT_00040](#)

[For the purpose of providing a means to specify the switching from one diagnostic session to another diagnostic session, `DiagnosticSessionControl` refers to a `DiagnosticSession` in the role `diagnosticSession`.]

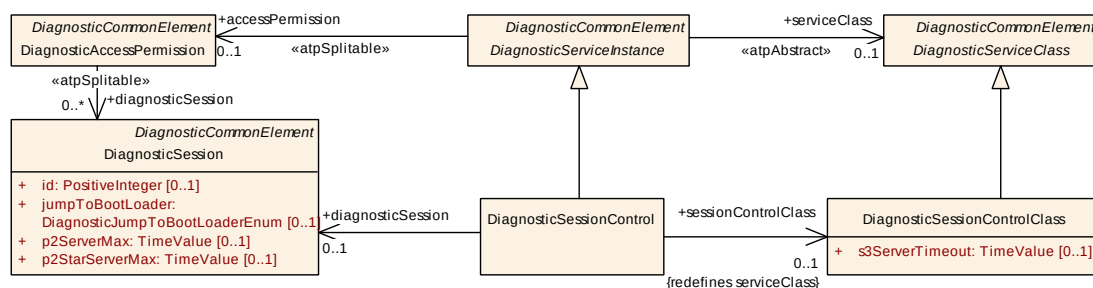


Figure 4.19: Modeling of diagnostic service `SessionControl` (0x10)

According to [17, ISO 14229-1], the diagnostic service `SessionControl` defines sub-functions.

[TPS_DEXT_01039] Identification of the sub-function of `DiagnosticSessionControl`

Upstream requirements: [RS_DEXT_00003](#), [RS_DEXT_00051](#)

[In the case of `DiagnosticSessionControl` it would not be a good idea to encode the applicable sub-function by means of the attribute `DiagnosticSessionControl.category`.

Actually, the possible sub-functions are strongly related to the concept of the diagnostic session, represented by the meta-class `DiagnosticSession`.

The latter, in turn, has an attribute `id` that directly corresponds to the number of the applicable sub-function for `DiagnosticSessionControl`.

In other words, the sub-function of `DiagnosticSessionControl` is identified by means of the reference `DiagnosticSessionControl.diagnosticSession`.]

[TPS_DEXT_01082] Existence of [DiagnosticSessionControl.diagnosticSession](#)*Upstream requirements:* [RS_DEXT_00003](#), [RS_DEXT_00040](#)

[The idea of modeling the sub-function of [DiagnosticSessionControl](#) by means of the reference [DiagnosticSessionControl.diagnosticSession](#) implies that the applicable [DiagnosticSession](#) already exists at the time when the given [DiagnosticSessionControl](#) is created.

It is assumed that this will always be the case because the definition of [DiagnosticSessions](#) is part of laying the groundwork⁵ for diagnostic communication.]

It is hard to foresee a scenario where the [DiagnosticSessions](#) are defined near the very end of the work-flow that leads to a complete [DiagnosticExtract](#).

Class	DiagnosticSessionControl			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::SessionControl			
Note	This represents an instance of the "Session Control" diagnostic service. Tags: atp.recommendedPackage=DiagnosticSessionControls			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnosticSession	DiagnosticSession	0..1	ref	This represents the applicable DiagnosticSessions
sessionControlClass	DiagnosticSessionControlClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticSessionControl in the given context.

Table 4.47: DiagnosticSessionControl**[constr_1818] Existence of reference [DiagnosticSessionControl.diagnosticSession](#)***Imposition time:* [IT_Dext](#)

[For each [DiagnosticSessionControl](#), the reference to [DiagnosticSession](#) in the role [diagnosticSession](#) shall exist.]

Class	DiagnosticSessionControlClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::SessionControl			
Note	This meta-class contains attributes shared by all instances of the "Session Control" diagnostic service. Tags: atp.recommendedPackage=DiagnosticSessionControls			



⁵This is similar to the definition of commonly used data types in a software development project



Class	DiagnosticSessionControlClass			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, DiagnosticServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
s3ServerTimeout	TimeValue	0..1	attr	Time for the server to keep a diagnostic session other than the default session active while not receiving any diagnostic request message.

Table 4.48: DiagnosticSessionControlClass

[constr_10440] Restriction for the minimum value of attribute `DiagnosticSessionControlClass.s3ServerTimeout`

Imposition time: IT_Dext

[The value of attribute `DiagnosticSessionControlClass.s3ServerTimeout` shall be **greater than or equal to 5.0.**]

4.3.8.2 SecurityAccess

This chapter describes the modeling of diagnostic services `SecurityAccess` (0x27).

[TPS_DEXT_01053] Existence of `DiagnosticSecurityAccess.securityLevel`

Upstream requirements: RS_DEXT_00009, RS_DEXT_00042

[The configuration of a given `DiagnosticSecurityAccess` is considered incomplete until the reference in the role `DiagnosticSecurityAccess.securityLevel` exists.]

The meaning of [TPS_DEXT_01053] is that the reference may be missing in intermediate steps of the configuration work flow. But at the point in time when ECU configuration is generated from the `DiagnosticExtract` the reference is needed to be able to make sense of the model for the given `DiagnosticSecurityAccess`.

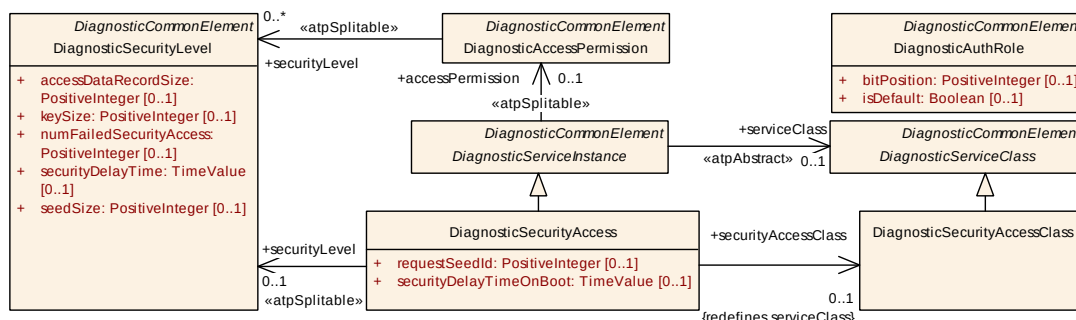


Figure 4.20: Modeling of diagnostic service `SecurityAccess` (0x27)

Please note that (as already explained in [Section 4.3.8](#)) the sub-functions of this service are modeled by means of the `category` attribute.

In response to conceptual differences between many other diagnostic services and `SecurityAccess`, the applicable sub-functions for the diagnostic service `SecurityAccess` are **not** defined by means of the attribute `DiagnosticSecurityAccess.category`.

[TPS_DEXT_01036] Work-flow within the execution of the diagnostic service `SecurityAccess`

Upstream requirements: [RS_DEXT_00009](#)

[The work-flow within the execution of the diagnostic service `SecurityAccess` basically boils down to the tester sending the request to obtain a *seed* from the diagnostic stack and then sending back a *key* to the stack.

Thus, the sub-functions could be generically be described as *requestSeed* and *sendKey*, which is precisely what the [17, ISO 14229-1] does.

According to this logic, the *requestSeed* could get a specific number assigned to identify the sub-function and then the *sendKey* sub-function would get assigned the number of the *requestSeed* sub-function + 1. Again, this is fully in line with the [17, ISO 14229-1].]

However, there is further dimension to take into account, namely the `DiagnosticSecurityLevel`. According to [17, ISO 14229-1], different security levels make different numbers for the sub-function identifier.

[TPS_DEXT_01037] Semantics of `DiagnosticSecurityAccess.requestSeedId`

Upstream requirements: [RS_DEXT_00009](#)

[The attribute `DiagnosticSecurityAccess.requestSeedId` shall be used to define the number of the sub-function of the diagnostic service `SecurityAccess` according to the intended security level.]

[constr_1342] Possible values for `DiagnosticSecurityAccess.requestSeedId`

Imposition time: `IT_Dext`

[The value of the attribute `DiagnosticSecurityAccess.requestSeedId` shall **only be set to an odd number**⁶.

The supported value range consists of the following list:

- all odd numbers in the closed interval **0x01 .. 0x41**

⁶The even numbers are reserved for the identification of the corresponding *sendKey* sub-function, as explained by [TPS_DEXT_01036].

- **0x5F** (this corresponds to the case of *end-of-life activation of on-board pyrotechnic devices according to [18, ISO 26021-2]*)
- all odd numbers in the closed interval **0x61 .. 0x7E**

]

In contrast to a similar situation in the case of the diagnostic service `SessionControl` (see [Section 4.3.8.1](#)), there is no real evidence that a `DiagnosticSecurityLevel` always exists before the referencing `DiagnosticSecurityAccess` is created in order to properly establish the reference in the role `DiagnosticSecurityAccess.securityLevel`.

[TPS_DEXT_01038] Motivation for making the reference `DiagnosticSecurityAccess.securityLevel` `<<atpSplitable>>`

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00009](#), [RS_DEXT_00042](#)

[The reference `DiagnosticSecurityAccess.securityLevel` needs to be decorated with the stereotype `<<atpSplitable>>` in order to advertise the idea that the reference to a corresponding `DiagnosticSecurityLevel` is created (potentially in a different artifact) some time after the actual creation of the given `DiagnosticSecurityAccess`.]

Of course, if the `DiagnosticSecurityLevel` factually exists before the definition of `DiagnosticSecurityAccess` the reference can directly be inserted into the model.

Class	DiagnosticSecurityAccess			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::SecurityAccess			
Note	This represents an instance of the "Security Access" diagnostic service. Tags: atp.recommendedPackage=DiagnosticSecurityAccesss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
requestSeedId	PositiveInteger	0..1	attr	This would be 0x01, 0x03, 0x05, ... The sendKey id can be computed by adding 1 to the requestSeedId
securityAccessClass	DiagnosticSecurityAccessClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all <code>DiagnosticSecurityAccess</code> in the given context.
securityDelayTimeOnBoot	TimeValue	0..1	attr	Start delay timer on power on in seconds. This delay indicates the time after ECU boot power-on where no security access request is accepted.





Class	DiagnosticSecurityAccess			
securityLevel	DiagnosticSecurityLevel	0..1	ref	This reference identifies the applicable security level for the security access. Stereotypes: atp.Splittable Tags: atp.Splitkey=securityLevel

Table 4.49: DiagnosticSecurityAccess

[constr_1816] Existence of attribute [DiagnosticSecurityAccess.requestSeedId](#)*Imposition time:* IT_Dext

[For each [DiagnosticSecurityAccess](#), the attribute [requestSeedId](#) shall exist at least once.]

[constr_1817] Existence of attribute [DiagnosticSecurityAccess.securityLevel](#)*Imposition time:* IT_Dext

[For each [DiagnosticSecurityAccess](#), the attribute [securityLevel](#) shall exist at least once.]

[constr_10045] Existence of attribute [DiagnosticSecurityAccessClass.securityDelayTimeOnBoot](#)*Imposition time:* IT_Dext

[Attribute [DiagnosticSecurityAccessClass.securityDelayTimeOnBoot](#) shall exist.]

Class	DiagnosticSecurityAccessClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::SecurityAccess			
Note	This meta-class contains attributes shared by all instances of the "Security Access" diagnostic service. Tags: atp.recommendedPackage=DiagnosticSecurityAccess			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
—	—	—	—	—

Table 4.50: DiagnosticSecurityAccessClass

4.3.8.3 Authentication

This chapter describes the modeling of the diagnostic service `Authentication` (0x29). The purpose of this service is to allow the tester to identify itself to the ECU, and thereby gain access to services allowed for its “role”.

The modeling of the diagnostic service `Authentication` follows the pattern established for other diagnostic services. In particular, meta-class `DiagnosticAuthentication` represents an instance of the service while meta-class `DiagnosticAuthenticationClass` carries configuration that is shared by all instances of the service.

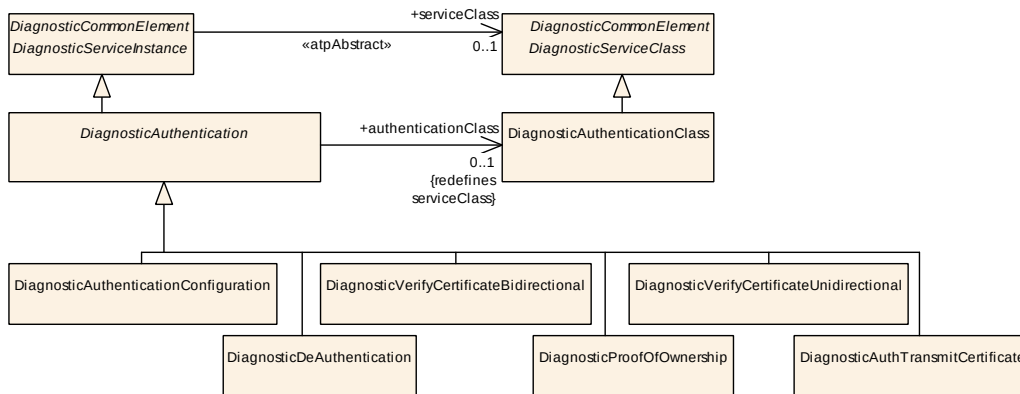


Figure 4.21: Modeling of diagnostic service Authentication (0x29)

[TPS_DEXT_01158] Sub-Functions for diagnostic service Authentication [The following sub functions are supported for the diagnostic service `Authentication`:

- De-authentication, formalized by meta-class `DiagnosticDeAuthentication`.
- Verify certificate unidirectional, formalized by meta-class `DiagnosticVerifyCertificateUnidirectional`.
- Verify certificate bidirectional, formalized by meta-class `DiagnosticVerifyCertificateBidirectional`.
- Proof of ownership, formalized by meta-class `DiagnosticProofOfOwnership`.
- Authentication configuration, formalized by meta-class `DiagnosticAuthenticationConfiguration`.

]

[TPS_DEXT_01159] Supported authentication methods for diagnostic service Authentication [The modeling of the `Authentication` service only provides support for a PKI certificate exchange.]

[constr_10091] Mandatory subfunction of diagnostic service Authentication

Imposition time: IT_Dext

[If the diagnostic service Authentication is supported, then the following sub-functions shall be configured:

- De-authentication, formalized by meta-class [DiagnosticDeAuthentication](#).
- Proof of ownership, formalized by meta-class [DiagnosticProofOfOwnership](#).
- Authentication configuration, formalized by meta-class [DiagnosticAuthenticationConfiguration](#).
- One of
 - Verify certificate unidirectional, formalized by meta-class [DiagnosticVerifyCertificateUnidirectional](#).
 - Verify certificate bidirectional, formalized by meta-class [DiagnosticVerifyCertificateBidirectional](#).

]

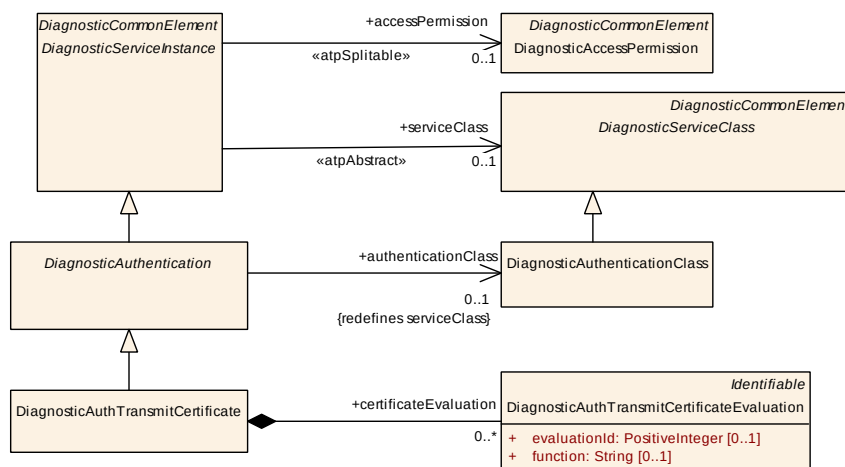


Figure 4.22: Modeling of certificate transmission within the context of the diagnostic service Authentication (0x29)

[TPS_DEXT_01192] Semantics of attribute [DiagnosticAuthTransmitCertificateEvaluation.evaluationId](#) [The attribute [DiagnosticAuthTransmitCertificateEvaluation.evaluationId](#) is used to define the evaluation id used for the sub-function transferCertificate (0x04).

The value of this attribute is not standardized by either the [17, ISO 14229-1] or AUTOSAR and therefore has an OEM-specific meaning.]

Class	DiagnosticAuthentication (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Authentication			
Note	This meta-class represents the ability to configure the usage of the UDS service Authentication in the Diagnostic extract.			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	DiagnosticAuthTransmitCertificate , DiagnosticAuthenticationConfiguration , DiagnosticDeAuthentication , DiagnosticProofOfOwnership , DiagnosticVerifyCertificateBidirectional , DiagnosticVerifyCertificateUnidirectional			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
authentication Class	DiagnosticAuthenticationClass	0..1	ref	This represents the corresponding "class", i.e. this meta-class provides properties that are shared among all instances of applicable sub-classes of DiagnosticService Instance. The subclasses that affected by this pattern implement references to the applicable "class"-role that substantiate this abstract reference.

Table 4.51: DiagnosticAuthentication

Class	DiagnosticAuthenticationClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Authentication			
Note	This meta-class contains configuration shared by all instances of the Authentication diagnostic service. Tags: atp.recommendedPackage=DiagnosticAuthentications			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.52: DiagnosticAuthenticationClass

Class	DiagnosticAuthenticationConfiguration			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Authentication			
Note	This meta-class represents the subfunction to configure the authentication. Tags: atp.recommendedPackage=DiagnosticAuthentications			
Base	ARElement , ARObject , CollectableElement , DiagnosticAuthentication , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.53: DiagnosticAuthenticationConfiguration

Class	DiagnosticVerifyCertificateBidirectional			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Authentication			
Note	This meta-class represents the subfunction to do a bidirectional verification of the certificate. Tags: atp.recommendedPackage=DiagnosticAuthentications			





Class	DiagnosticVerifyCertificateBidirectional			
Base	ARElement , ARObject , CollectableElement , DiagnosticAuthentication , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.54: DiagnosticVerifyCertificateBidirectional

Class	DiagnosticVerifyCertificateUnidirectional			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Authentication			
Note	This meta-class represents the subfunction to do a unidirectional verification of the certificate. Tags: atp.recommendedPackage=DiagnosticAuthentications			
Base	ARElement , ARObject , CollectableElement , DiagnosticAuthentication , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.55: DiagnosticVerifyCertificateUnidirectional

Class	DiagnosticDeAuthentication			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Authentication			
Note	This meta-class represents the subfunction to remove the authentication Tags: atp.recommendedPackage=DiagnosticAuthentications			
Base	ARElement , ARObject , CollectableElement , DiagnosticAuthentication , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.56: DiagnosticDeAuthentication

Class	DiagnosticProofOfOwnership			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Authentication			
Note	This meta-class represents the subfunction to provide proof of ownership. Tags: atp.recommendedPackage=DiagnosticAuthentications			
Base	ARElement , ARObject , CollectableElement , DiagnosticAuthentication , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.57: DiagnosticProofOfOwnership

Class	DiagnosticAuthTransmitCertificate			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Authentication			
Note	This meta-class represents the sub-function to transmit a certificate Tags: atp.recommendedPackage=DiagnosticAuthTransmitCertificates			
Base	ARElement , ARObject , CollectableElement , DiagnosticAuthentication , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
certificate Evaluation	DiagnosticAuthTransmitCertificateEvaluation	*	aggr	This aggregation represents a collection of certificate evaluation configurations.

Table 4.58: DiagnosticAuthTransmitCertificate

[TPS_DEXT_01193] Semantics of attribute [DiagnosticAuthTransmitCertificateEvaluation.function](#) [The attribute [DiagnosticAuthTransmitCertificateEvaluation.function](#) is used to define the actual semantics of the corresponding [evaluationId](#) used for the sub-function [transferCertificate](#) (0x04).]

[TPS_DEXT_01194] Standardized value of attribute [DiagnosticAuthTransmitCertificateEvaluation.function](#) [AUTOSAR defines the value **FUNCTION_SECURE_CODING** as the only standardized value of attribute [DiagnosticAuthTransmitCertificateEvaluation.function](#).]

Please note that in case it is ensured that a proprietary value of attribute [DiagnosticAuthTransmitCertificateEvaluation.function](#) does not clash with a potential future extension of the standardized values of attribute [DiagnosticAuthTransmitCertificateEvaluation.function](#), it is positively possible to use a value other than the value standardized by [\[TPS_DEXT_01194\]](#).

For example, the avoidance of a potential name clash can be ensured by using a company-specific prefix within the proprietary value.

Class	DiagnosticAuthTransmitCertificateEvaluation			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::Authentication			
Note	This meta-class represents the ability to configure a certificate evaluation in the context of a diagnostic authentication.			
Base	ARObject , Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	DiagnosticAuthTransmitCertificate.certificateEvaluation			
Attribute	Type	Mult.	Kind	Note
evaluationId	PositiveInteger	0..1	attr	This attribute represents the ID of the certificate evaluation.
function	String	0..1	attr	This attribute represents the description of the actual semantics of the corresponding evaluation ID.

Table 4.59: DiagnosticAuthTransmitCertificateEvaluation

4.3.8.4 EcuReset

This chapter describes the modeling of diagnostic services `EcuReset` (0x11).

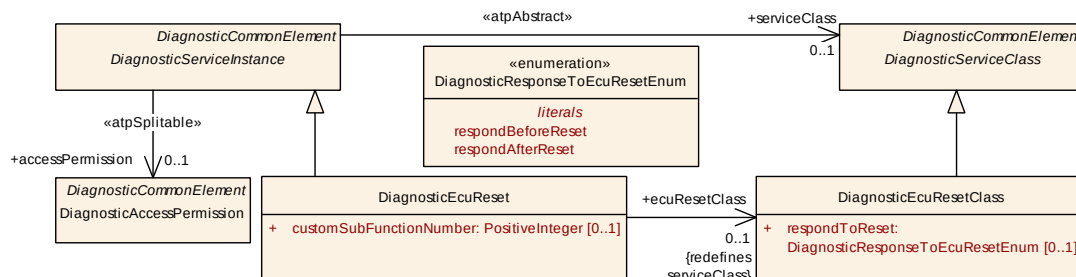


Figure 4.23: Modeling of diagnostic service EcuReset (0x11)

Class	DiagnosticEcuReset			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::EcuReset			
Note	This represents an instance of the "ECU Reset" diagnostic service. Tags: atp.recommendedPackage=DiagnosticEcuResets			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
customSubFunctionNumber	PositiveInteger	0..1	attr	This attribute shall be used to define a custom sub-function number if none of the standardized values of category shall be used.
ecuResetClass	DiagnosticEcuResetClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticEcuReset in the given context.

Table 4.60: DiagnosticEcuReset

Class	DiagnosticEcuResetClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::EcuReset			
Note	This meta-class contains attributes shared by all instances of the "Ecu Reset" diagnostic service. Tags: atp.recommendedPackage=DiagnosticEcuResets			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
respondToReset	DiagnosticResponseToEcuResetEnum	0..1	attr	This attribute defines whether the response to the Ecu Reset service shall be transmitted before or after the actual reset.

Table 4.61: DiagnosticEcuResetClass

Enumeration	DiagnosticResponseToEcuResetEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::EcuReset
Note	This enumeration controls the point in time in which a response to the reception of an EcuReset service shall be generated.
Aggregated by	DiagnosticEcuResetClass.respondToReset
Literal	Description
respondAfterReset	Answer to EcuReset service should come after the reset. Tags: atp.EnumerationLiteralIndex=0
respondBeforeReset	Answer to EcuReset service should come before the reset. Tags: atp.EnumerationLiteralIndex=1

Table 4.62: DiagnosticResponseToEcuResetEnum

Please note that (as already explained in [Section 4.3.8](#)) the `SubFunctions` of this service are modeled by means of the `category` attribute.

[TPS_DEXT_01056] Applicable values for [DiagnosticEcuReset.category](#)

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00004](#), [RS_DEXT_00051](#)

[The following values of the attribute [DiagnosticEcuReset.category](#) are standardized by AUTOSAR:

- `HARD_RESET`
- `KEY_OFF_ON_RESET`
- `SOFT_RESET`
- `ENABLE_RAPID_POWER_SHUT_DOWN`
- `DISABLE_RAPID_POWER_SHUT_DOWN`

The meaning of these values is described in the applicable [\[17, ISO 14229-1\]](#).

[TPS_DEXT_01019] Correspondence of `category` values to numerical values mentioned in the ISO 14229-1

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00004](#), [RS_DEXT_00051](#)

[The [\[17, ISO 14229-1\]](#) standard document defines specific numerical values for the sub-functions of the diagnostic service `EcuReset`.

The correspondence of the numerical values to the pre-defined values of `category` according to [\[TPS_DEXT_01056\]](#) is pretty obvious because the definition of values defined in [\[TPS_DEXT_01056\]](#) has been directly inspired by the [\[17, ISO 14229-1\]](#) standard document.]

[TPS_DEXT_01020] Manufacturer-specific values for sub-functions of service EcuReset

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00004](#), [RS_DEXT_00051](#)

[The [\[17, ISO 14229-1\]](#) standard document, beyond the standardized numerical values for sub-functions, reserves a numerical range of subFunction identifiers for manufacturer- or supplier-specific use.

In this case it is possible to define further values for [category](#), provided that a custom prefix is used to avoid potential name clashes with further extensions of the AUTOSAR standard, namely [\[TPS_DEXT_01056\]](#).]

[TPS_DEXT_01021] Semantics of [DiagnosticEcuReset.customSubFunctionNumber](#)

Upstream requirements: [RS_DEXT_00004](#), [RS_DEXT_00047](#), [RS_DEXT_00051](#)

[The attribute [DiagnosticEcuReset.customSubFunctionNumber](#) has been introduced to allow for the specification of a manufacturer- or supplier-specific value to represent the custom sub-function in the diagnostic communication.

The tuple created by the values of attributes [DiagnosticEcuReset.category](#) and [DiagnosticEcuReset.customSubFunctionNumber](#) fully specifies identification of the manufacturer- or supplier-specific sub-function.]

[constr_1331] Existence of [DiagnosticEcuReset.customSubFunctionNumber](#)

Imposition time: [IT_Dext](#)

[The attribute [DiagnosticEcuReset.customSubFunctionNumber](#) shall only exist if the value of [DiagnosticEcuReset.category](#) is outside the standardized set of values as defined by [\[TPS_DEXT_01056\]](#).]

[constr_1332] Value range for [DiagnosticEcuReset.customSubFunctionNumber](#)

Imposition time: [IT_Dext](#)

[The allowed value for [DiagnosticEcuReset.customSubFunctionNumber](#) shall always be within the closed interval **0x40 .. 0x7E**.]

4.3.8.5 CommunicationControl

This chapter describes the modeling of diagnostic services [CommunicationControl](#) (0x28). The purpose of this diagnostic service is to enable or disable [ISignalIPduGroups](#).

However, the actual implementation of the enabling or disabling is obviously not executed directly within the diagnostic stack. It requires some interaction with the BswM that in turn implements the enabling algorithm.

Therefore, the meta-class modeled for this purpose does not need to refer to `ISignalIPduGroups` but implements a mode request to the BswM.

[TPS_DEXT_01057] Allowed values of `DiagnosticComControl.category`

Upstream requirements: `RS_DEXT_00001`, `RS_DEXT_00010`, `RS_DEXT_00051`

[The sub-functions of the diagnostic services `CommunicationControl` are identified by means of the attribute `DiagnosticComControl.category`. Standardized values of `DiagnosticComControl.category` are:

- `ENABLE_RX_AND_TX`
- `DISABLE_RX_AND_TX`
- `ENABLE_RX_AND_DISABLE_TX`
- `DISABLE_RX_AND_ENABLE_TX`
- `ENABLE_RX_AND_DISABLE_TX_WITH_ENHANCED_ADDRESS_INFORMATION`
- `ENABLE_RX_AND_TX_WITH_ENHANCED_ADDRESS_INFORMATION`

The meaning of these values is described in the applicable [17, ISO 14229-1].]

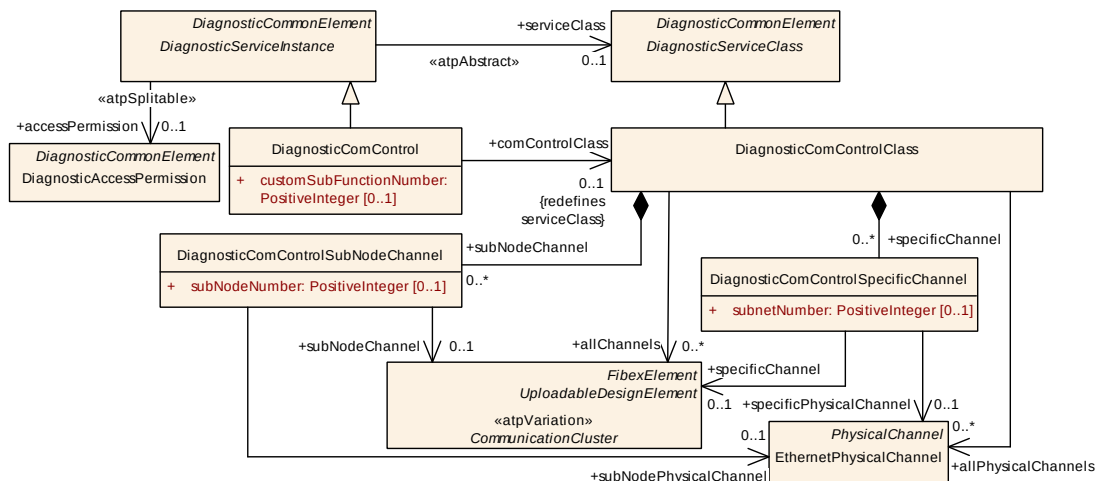


Figure 4.24: Modeling of diagnostic service `CommunicationControl` (0x28)

[TPS_DEXT_01029] Correspondence of `category` values to numerical values mentioned in the ISO 14229-1

Upstream requirements: `RS_DEXT_00001`, `RS_DEXT_00010`, `RS_DEXT_00051`

[The [17, ISO 14229-1] standard document defines specific numerical values for the sub-functions of the diagnostic service `CommunicationControl`.

The correspondence of the numerical values to the pre-defined values of `category` according to [TPS_DEXT_01057] is pretty obvious because the definition of values defined in [TPS_DEXT_01057] has been directly inspired by the [17, ISO 14229-1] standard document.]

[TPS_DEXT_01030] Manufacturer-specific values for sub-functions of service `CommunicationControl`

Upstream requirements: [RS_DEXT_00010](#), [RS_DEXT_00047](#), [RS_DEXT_00051](#)

[The [17, ISO 14229-1] standard document, beyond the standardized numerical values for sub-functions, reserves a numerical range of subFunction identifiers for manufacturer-specific use.

In this case it is possible to define further values for `category`, provided that a custom prefix is used to avoid potential name clashes with further extensions of the AUTOSAR standard, namely [TPS_DEXT_01057].]

[TPS_DEXT_01031] Semantics of `DiagnosticComControl.customSubFunctionNumber`

Upstream requirements: [RS_DEXT_00010](#), [RS_DEXT_00047](#), [RS_DEXT_00051](#)

[The attribute `DiagnosticComControl.customSubFunctionNumber` has been introduced to allow for the specification of a manufacturer-or supplier-specific value to represent the custom sub-function in the diagnostic communication.

The tuple created by the values of attributes `DiagnosticComControl.category` and `DiagnosticComControl.customSubFunctionNumber` fully specifies identification of the manufacturer- or supplier-specific sub-function.]

[constr_1334] Existence of `DiagnosticComControl.customSubFunctionNumber`

Imposition time: `IT_Dext`

[The attribute `DiagnosticComControl.customSubFunctionNumber` shall only exist if the value of `DiagnosticComControl.category` is outside the standardized set of values as defined by [TPS_DEXT_01057].]

[constr_1335] Possible values for `DiagnosticComControl.customSubFunctionNumber`

Imposition time: `IT_Dext`

[Given the fulfillment of [constr_1334], the value of a given `DiagnosticComControl.customSubFunctionNumber` shall always be within the closed interval `0x40 .. 0x5F` (for manufacturer-specific sub-functions) or the closed interval `0x60 .. 0x7E` (for supplier-specific sub-functions).]

[TPS_DEXT_01032] Impact of the `DiagnosticComControlClass` on the state management for `CommunicationClusters`

Upstream requirements: `RS_DEXT_00010`

[The impact of the `DiagnosticComControlClass` on the state management for `CommunicationClusters` can have two alternative consequences:

- All `CommunicationClusters` are affected. For this purpose the attribute `allChannels` has the ability to identify the applicable `CommunicationClusters`.

It may seem counterintuitive to require a reference to all applicable `CommunicationClusters` when the expected semantics is actually to define an impact on **all** of them.

However, there could be private `CommunicationClusters` that are not participating in the diagnostics work-flow: These need to be kept out of scope and therefore the explicit identification of applicable `CommunicationClusters` makes sense.

- A selected number of `CommunicationClusters` is affected. This is conceptually different from the other use case in that it requires an additional attribute that keeps a `subnetNumber` that is typically assigned by the `OEM` role.

]

In most cases, a reference to the `CommunicationCluster` would be sufficient as the subject of state management on the respective bus system. In other words, the `CommunicationCluster` corresponds to a ComM channel.

Currently, the only exception from this rule is Ethernet, where - with respect to communication management - each VLAN (modeled as a `EthernetPhysicalChannel`) can be managed by an own ComM channel.

As a consequence, the modeling of the `DiagnosticComControlClass` needs to take the `PhysicalChannel` into account. On the other hand, the bus systems where a reference to a `CommunicationCluster` perfectly fits the needs would be better served if the `CommunicationCluster` is eligible as a reference target.

Therefore, [TPS_DEXT_01032] clarifies the semantics of references to `CommunicationCluster` while [TPS_DEXT_01186] focuses on the specific role of the `EthernetPhysicalChannel` in the context of the diagnostic service `CommunicationControl`.

[TPS_DEXT_01186] Impact of the `DiagnosticComControlClass` on the state management for VLANs

Upstream requirements: `RS_DEXT_00010`

[The impact of the `DiagnosticComControlClass` on the state management for VLANs can have two alternative consequences:

- All VLANs are affected. For this purpose, the reference in the role `allPhysicalChannels` has the ability to identify the applicable VLAN.

It may seem counterintuitive to require a reference to all applicable VLANs when the expected semantics is actually to define an impact on all of them.

However, there could be private VLANs that are not participating in the diagnostics work-flow: These need to be kept out of scope and therefore the explicit identification of applicable VLANs makes sense.

- A selected number of VLANs is affected. This is conceptually different from the other use case in that it requires an additional attribute that keeps a `subnetNumber` that is typically assigned by the `OEM` role.

]

Class	«atpVariation» CommunicationCluster (abstract)			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
Note	The CommunicationCluster is the main element to describe the topological connection of communicating ECUs. A cluster describes the ensemble of ECUs, which are linked by a communication medium of arbitrary topology (bus, star, ring, ...). The nodes within the cluster share the same communication protocol, which may be event-triggered, time-triggered or a combination of both. A CommunicationCluster aggregates one or more physical channels. Tags: vh.latestBindingTime=postBuild			
Base	ARElement , ARObject , CollectableElement , FibexElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable , UploadableDesignElement , UploadablePackageElement			
Subclasses	AbstractCanCluster, EthernetCluster, FlexrayCluster, LinCluster, UserDefinedCluster			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
baudrate	PositiveUnlimitedInteger	0..1	attr	Channels speed in bits/s.
physical Channel	PhysicalChannel	*	aggr	This relationship defines which channel element belongs to which cluster. A channel shall be assigned to exactly one cluster, whereas a cluster may have one or more channels. Note: This atpSplittable property has no atp.Splitkey due to atpVariation (PropertySetPattern). Stereotypes: atpSplittable; atpVariation Tags: vh.latestBindingTime=systemDesignTime
protocolName	String	0..1	attr	The name of the protocol used.
protocolVersion	String	0..1	attr	The version of the protocol used.

Table 4.63: CommunicationCluster

[constr_1336] Applicable value range for `DiagnosticComControlSpecificChannel.subnetNumber`

Imposition time: `IT_Dext`

[The value of attribute `DiagnosticComControlSpecificChannel.subnetNumber` shall be within the closed interval **1 .. 14**.]

Please note that the regulation implied by [constr_1336] has not been introduced on an arbitrary basis but gets its conceptual background from the [17, ISO 14229-1] standard document.

Obviously, a diagnostic service with the name `CommunicationControl` will have an impact on the enclosing ECU's mode management. This impact, however, is not defined by any further attributes or references, the `DiagnosticComControl` is the impact.

By defining a `DiagnosticComControl` and setting the category to one of the applicable values (e.g. `ENABLE_RX_AND_TX`), it is possible to express the intended semantics to the full extent.

[constr_1337] Allowed value range for attribute `DiagnosticComControlSubNodeChannel.subNodeNumber`

Imposition time: `IT_Dext`

[The value of attribute `DiagnosticComControlSubNodeChannel.subNodeNumber` shall not exceed the closed interval 0 .. 65535.]

[TPS_DEXT_01074] Difference between the attributes `DiagnosticComControlClass.specificChannel` and `DiagnosticComControlClass.subNodeChannel`

Upstream requirements: `RS_DEXT_00010`

[The semantical difference between the attributes `DiagnosticComControlClass.specificChannel` and `DiagnosticComControlClass.subNodeChannel` is that `DiagnosticComControlClass.specificChannel` actually refers to a `CommunicationCluster` whereas `DiagnosticComControlClass.subNodeChannel` basically refers to a `CommunicationCluster` to which the nodes with the given identification numbers are connected.]

[constr_10122] Existence of attribute `DiagnosticComControlSubNodeChannel.subNodeChannel`

Imposition time: `IT_Dext`

[Attribute `DiagnosticComControlSubNodeChannel.subNodeChannel` shall only exist if the value of `DiagnosticComControl.category` is set to either

- `ENABLE_RX_AND_DISABLE_TX_WITH_ENHANCED_ADDRESS_INFORMATION`
or
- `ENABLE_RX_AND_TX_WITH_ENHANCED_ADDRESS_INFORMATION`.

]

Class	DiagnosticComControl			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl			
Note	This represents an instance of the "Communication Control" diagnostic service. Tags: atp.recommendedPackage=DiagnosticCommunicationControls			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
comControl Class	DiagnosticComControl Class	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticComControl in the given context.
customSub Function Number	PositiveInteger	0..1	attr	This attribute shall be used to define a custom sub-function number if none of the standardized values of category shall be used.

Table 4.64: DiagnosticComControl

Class	DiagnosticComControlSpecificChannel			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl			
Note	This represents the ability to add further attributes to the definition of a specific channel that is subject to the diagnostic service "communication control".			
Base	ARObject			
Aggregated by	DiagnosticComControlClass.specificChannel			
Attribute	Type	Mult.	Kind	Note
specificChannel	CommunicationCluster	0..1	ref	This represents the affected CommunicationCluster in the role specificChannel
specificPhysical Channel	EthernetPhysical Channel	0..1	ref	This represents the affected specific EthernetPhysical Channel.
subnetNumber	PositiveInteger	0..1	attr	This represents the applicable subnet number (which is an arbitrary number ranging from 1..14)

Table 4.65: DiagnosticComControlSpecificChannel

Class	DiagnosticComControlClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl			
Note	This meta-class contains attributes shared by all instances of the "Communication Control" diagnostic service. Tags: atp.recommendedPackage=DiagnosticCommunicationControls			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	DiagnosticComControlClass			
allChannels	CommunicationCluster	*	ref	This reference represents the semantics that all available channels shall be affected. It is still necessary to refer to individual CommunicationClusters because there could be private CommunicationClusters in the System Extract that are not subject to the service "communication control". By referring to the applicable CommunicationClusters it can be made sure that only the affected Communication Clusters are accessed.
allPhysical Channels	EthernetPhysical Channel	*	ref	This reference represents the semantics that all available channels shall be affected. It is still necessary to refer to individual EthernetPhysicalChannels because there could be private VLANs (and thus private EthernetPhysical Channels) in the System Extract that are not subject to the service "communication control". By referring to the applicable EthernetPhysicalChannels it can be made sure that only the affected EthernetPhysical Channels are accessed. Tags: xml.namePlural=ALL-PHYSICAL-CHANNELS
specificChannel	DiagnosticComControl SpecificChannel	*	aggr	This represents the ability to add additional attributes to the case that only specific channels are supposed to be considered,
subNode Channel	DiagnosticComControl SubNodeChannel	*	aggr	This attribute represents the ability to add further attributes to the definition of a specific sub-node channel that is subject to the diagnostic service "communication control".

Table 4.66: DiagnosticComControlClass

Class	DiagnosticComControlSubNodeChannel			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl			
Note	This represents the ability to add further attributes to the definition of a specific sub-node channel that is subject to the diagnostic service "communication control".			
Base	ARObject			
Aggregated by	DiagnosticComControlClass.subNodeChannel			
Attribute	Type	Mult.	Kind	Note
subNode Channel	CommunicationCluster	0..1	ref	This represents the affected CommunicationCluster in the role subNodeChannel
subNode Number	PositiveInteger	0..1	attr	This represents the applicable subNode number. The value corresponds to the request message parameter nodeIdentificationNumber of diagnostic service CommunicationControl (0x28).
subNode Physical Channel	EthernetPhysical Channel	0..1	ref	This represents the affected sub-node EthernetPhysical Channel.

Table 4.67: DiagnosticComControlSubNodeChannel

4.3.8.6 ControlDTCSetting

This chapter describes the modeling of diagnostic services `ControlDTCSetting` (0x85). The purpose of the diagnostic service is to let the tester tell the diagnostic stack to either stop or resume the updating of a diagnostic trouble code.

[TPS_DEXT_01075] standardized values for the attribute **DiagnosticControlDTCSetting.category**

Upstream requirements: RS_DEXT_00001, RS_DEXT_00021, RS_DEXT_00051

[AUTOSAR does not standardize any of the possible values for the attribute **DiagnosticControlDTCSetting.category**.]

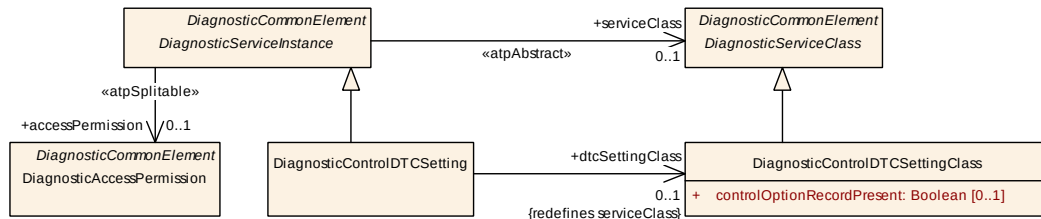


Figure 4.25: Modeling of diagnostic service ControlDTCSetting (0x85)

Class	DiagnosticControlDTCSetting			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ControlDTCSetting			
Note	This represents an instance of the "Control DTC Setting" diagnostic service. Tags: atp.recommendedPackage=DiagnosticControlDtcSettings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dtcSettingClass	DiagnosticControlDTCSettingClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticControlDTCSetting in the given context.

Table 4.68: DiagnosticControlDTCSetting

Class	DiagnosticControlDTCSettingClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ControlDTCSetting			
Note	This meta-class contains attributes shared by all instances of the "Control DTC Setting" diagnostic service. Tags: atp.recommendedPackage=DiagnosticControlDtcSettings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
controlOptionRecordPresent	Boolean	0..1	attr	This represents the decision whether the DTCSetting ControlOptionRecord (see ISO 14229-1) is in general supported in the request message.

Table 4.69: DiagnosticControlDTCSettingClass

4.3.8.7 DataByIdentifier

This chapter describes the modeling of diagnostic services `ReadDataByIdentifier` (0x22) and `WriteDataByIdentifier` (0x2E).

The purpose of this diagnostic service is to enable a tester to request the values of data records from the AUTOSAR diagnostics stack. The data records are identified by a formally modeled `DiagnosticDataIdentifier`.

The modeling of this diagnostic service comprises the two meta-classes `DiagnosticReadDataByIdentifier` and `DiagnosticWriteDataByIdentifier`. These meta-classes both need to specify the set of `DiagnosticDataIdentifiers` and the set of applicable `DiagnosticAccessPermissions`.

As these properties are shared between instances of `DiagnosticReadDataByIdentifier` and `DiagnosticWriteDataByIdentifier`, an abstract base class named `DiagnosticDataByIdentifier` has been created that provides the actual references to `DiagnosticDataIdentifier` and `DiagnosticAccessPermission`.

The ability to read multiple DIDs at run-time is controlled via attribute `DiagnosticReadDataByIdentifierClass.maxDidToRead` and therefore it is sufficient to (at configuration-time) limit the multiplicity of attribute `dataIdentifier` to 1.

Please note that the reference `DiagnosticDataByIdentifier.dataIdentifier` goes to `DiagnosticAbstractDataIdentifier`. This modeling approach allows to actually reference any of the meta-classes that inherit from `DiagnosticAbstractDataIdentifier`.

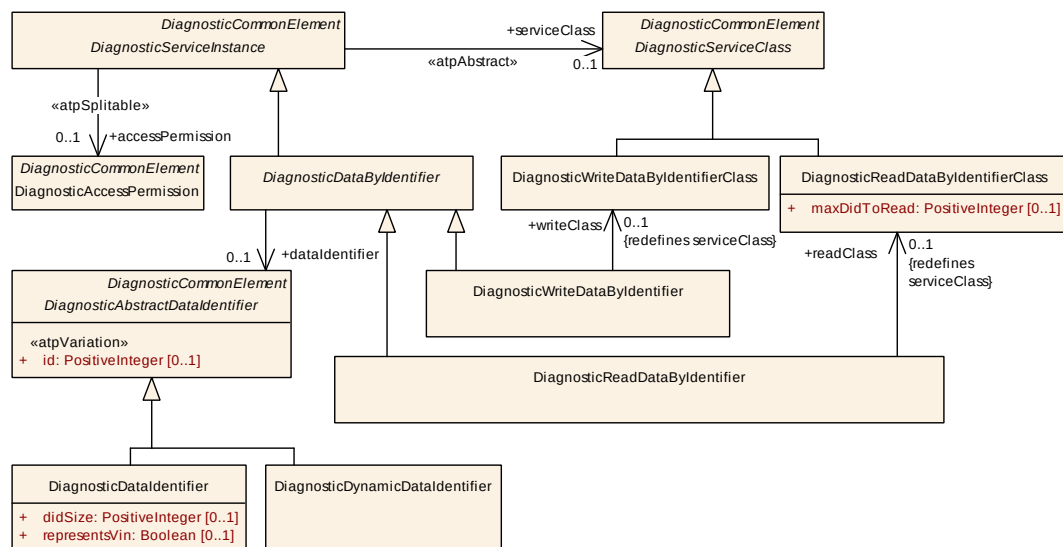


Figure 4.26: Modeling of diagnostic services `ReadDataByIdentifier` (0x22) and `WriteDataByIdentifier` (0x2E)

Class	DiagnosticReadDataByIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DataByIdentifier			
Note	This represents an instance of the "Read Data by Identifier" diagnostic service. Tags: atp.recommendedPackage=DiagnosticDataByIdentifiers			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticDataByIdentifier , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
readClass	DiagnosticReadDataByIdentifierClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticReadDataByIdentifier in the given context.

Table 4.70: DiagnosticReadDataByIdentifier

[constr_1807] Existence of reference [DiagnosticDataByIdentifier.dataIdentifier](#)

Imposition time: [IT_Dext](#)

[For each [DiagnosticDataByIdentifier](#), the reference [dataIdentifier](#) shall exist.]

The modeling of [DiagnosticDataByIdentifier](#) represents concrete instances of diagnostic services within a [DiagnosticExtract](#). However, there are attributes that are shared among all instances of [DiagnosticReadDataByIdentifier](#).

For this purpose the dedicated service class [DiagnosticReadDataByIdentifierClass](#) has been introduced.

Class	DiagnosticWriteDataByIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DataByIdentifier			
Note	This represents an instance of the "Write Data by Identifier" diagnostic service. Tags: atp.recommendedPackage=DiagnosticDataByIdentifiers			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticDataByIdentifier , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
writeClass	DiagnosticWriteDataByIdentifierClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticWriteDataByIdentifier in the given context.

Table 4.71: DiagnosticWriteDataByIdentifier

Class	DiagnosticWriteDataByIdentifierClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DataByIdentifier			
Note	This meta-class contains attributes shared by all instances of the "Write Data by Identifier" diagnostic service. Tags: atp.recommendedPackage=DiagnosticDataByIdentifiers			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.72: DiagnosticWriteDataByIdentifierClass

Class	DiagnosticDataByIdentifier (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DataByIdentifier			
Note	This represents an abstract base class for all diagnostic services that access data by identifier.			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	DiagnosticReadDataByIdentifier , DiagnosticReadScalingDataByIdentifier , DiagnosticWriteDataByIdentifier			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dataIdentifier	DiagnosticAbstractDataIdentifier	0..1	ref	This represents the linked DiagnosticDataIdentifier.

Table 4.73: DiagnosticDataByIdentifier

Class	DiagnosticReadDataByIdentifierClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DataByIdentifier			
Note	This meta-class contains attributes shared by all instances of the "Read Data by Identifier" diagnostic service. Tags: atp.recommendedPackage=DiagnosticDataByIdentifiers			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
maxDidToRead	PositiveInteger	0..1	attr	This attribute represents the maximum number of allowed DIDs in a single instance of DiagnosticReadDataByIdentifier.

Table 4.74: DiagnosticReadDataByIdentifierClass

Please note that it is possible to create a reference to a concrete [DiagnosticDataIdentifier](#) from different [DiagnosticServiceInstances](#).

Class	DiagnosticValueNeeds			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	Specifies the general needs on the configuration of the Diagnostic Communication Manager (DCM) which are not related to a particular item (e.g. a PID). The main use case is the mapping of service ports to the DCM which are not related to a particular item. In the case of using a sender receiver communicated value, the related value shall be taken via assigned Data in the role "signalBasedDiagnostics". In case of using a client/server communicated value, the related value shall be communicated via the port referenced by assignedPort. The details of this communication (e.g. appropriate naming conventions) are specified in the related software specifications (SWS).			
Base	ARObject, DiagnosticCapabilityElement, Identifiable , MultilanguageReferrable , Referrable , ServiceNeeds			
Aggregated by	BswServiceDependency.serviceNeeds , SwcServiceDependency.serviceNeeds			
Attribute	Type	Mult.	Kind	Note
dataLength	PositiveInteger	0..1	attr	This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute represents the length of data (in bytes) provided for this particular PID signal.
diagnosticValueAccess	DiagnosticValueAccessEnum	0..1	attr	This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data can be read and written or whether it is to be handled read-only.
fixedLength	Boolean	0..1	attr	This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.
processingStyle	DiagnosticProcessingStyleEnum	0..1	attr	This attribute controls whether interaction requires the software-component to react synchronously on a request or whether it processes the request in background but still the DCM has to issue the call again to eventually obtain the result of the request.

Table 4.75: DiagnosticValueNeeds

Enumeration	DiagnosticValueAccessEnum
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds
Note	Defines the access of the configured diagnostic current values which will be used by the Dem or Dcm module.
Aggregated by	DiagnosticValueNeeds.diagnosticValueAccess
Literal	Description
readOnly	The access to the data element is limited to read-only. This is typically used to read-out diagnostic information (e.g. current values). Tags: atp.EnumerationLiteralIndex=0
readWrite	The value of the diagnostic data element is classified as configurable (read and write access is possible). Tags: atp.EnumerationLiteralIndex=1
writeOnly	The access to the data element is limited to write-only. This supports the use case where the Dcm just writes data to the application software without the intention to read it back, Tags: atp.EnumerationLiteralIndex=2

Table 4.76: DiagnosticValueAccessEnum

Enumeration	DiagnosticProcessingStyleEnum
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds
Note	This meta-class represents the ability to define the processing style of diagnostic requests.
Aggregated by	DiagnosticValueNeeds.processingStyle
Literal	Description
processingStyle Asynchronous	The software-component processes the request in background but still the Dcm has to issue the call again to eventually obtain the result of the request. Tags: atp.EnumerationLiteralIndex=0
processingStyle AsynchronousWith Error	The software-component processes the request in background but still the Dcm has to issue the call again to eventually obtain the result of the request or handle error code. Tags: atp.EnumerationLiteralIndex=1
processingStyle Synchronous	The software-component is supposed to react synchronously on the request. Tags: atp.EnumerationLiteralIndex=2

Table 4.77: DiagnosticProcessingStyleEnum

[TPS_DEXT_01146] Support for service ReadScalingDataByIdentifier (0x24)

Upstream requirements: [RS_DEXT_00007](#), [RS_DEXT_00034](#)

[The AUTOSAR Diagnostic Extract supports the configuration of UDS service ReadScalingDataByIdentifier (0x24). For this purpose meta-classes [DiagnosticReadScalingDataByIdentifier](#) and [DiagnosticReadScalingDataByIdentifierClass](#) shall be used.]

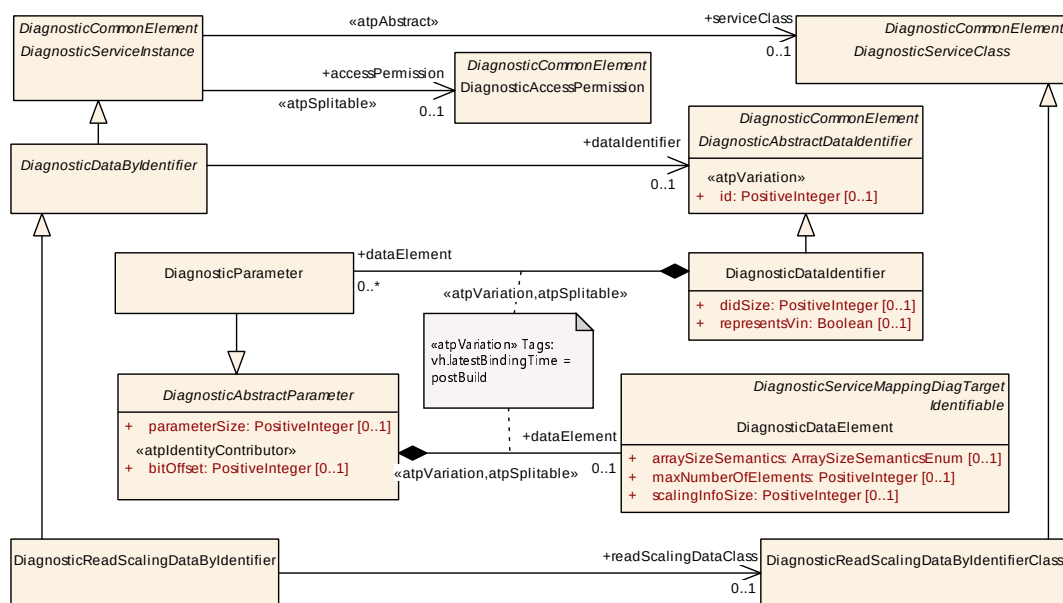


Figure 4.27: Modeling of diagnostic services ReadScalingDataByIdentifier (0x24)

[constr_1623] Restriction on [DiagnosticReadScalingDataByIdentifier.dataIdentifier](#)*Imposition time:* [IT_Dext](#)

[The reference [DiagnosticReadScalingDataByIdentifier.dataIdentifier](#) shall only refer to a [DiagnosticDataIdentifier](#).]

[constr_1624] Existence of [DiagnosticDataElement.scalingInfoSize](#)*Imposition time:* [IT_Dext](#)

[The attribute [DiagnosticDataElement.scalingInfoSize](#) shall only exist if the enclosing [DiagnosticAbstractParameter](#) is aggregated by a [DiagnosticDataIdentifier](#) that is referenced by a [DiagnosticReadScalingDataByIdentifier](#) in the role [DiagnosticReadScalingDataByIdentifier.dataIdentifier](#).]

Class	DiagnosticReadScalingDataByIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DataByIdentifier			
Note	This represents an instance of the "Read Scaling Data by Identifier" diagnostic service. Tags: atp.recommendedPackage=DiagnosticDataByIdentifiers			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticDataByIdentifier , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
readScalingDataClass	DiagnosticReadScalingDataByIdentifierClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticReadScalingDataByIdentifier in the given context.

Table 4.78: DiagnosticReadScalingDataByIdentifier

Class	DiagnosticReadScalingDataByIdentifierClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DataByIdentifier			
Note	This meta-class contains attributes shared by all instances of the "Read Scaling Data by Identifier" diagnostic service. Tags: atp.recommendedPackage=DiagnosticDataByIdentifiers			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.79: DiagnosticReadScalingDataByIdentifierClass

4.3.8.8 IOControl

This chapter describes the modeling of diagnostic services `InputOutputControl` (0x2F). The purpose of this service is to provide the tester with the ability to override values exchanged with the AUTOSAR hardware abstraction.

[TPS_DEXT_01015] Meaning of attributes of `DiagnosticIOControl`

Upstream requirements: [RS_DEXT_00014](#)

[The attributes `freezeCurrentState`, `resetToDefault`, and `shortTermAdjustment` represent the capabilities of the server rather than a concrete request message.]

[TPS_DEXT_01016] The capability `returnControlToEcu`

Upstream requirements: [RS_DEXT_00014](#)

[According to the statement made by [\[TPS_DEXT_01015\]](#), there is no formal means provided to configure the capability to execute `returnControlToEcu`. This lack of configuration is intentional because the capability is always available and cannot be revoked anyway.]

[TPS_DEXT_01017] Meaning of `DiagnosticIOControl.dataIdentifier`

Upstream requirements: [RS_DEXT_00014](#), [RS_DEXT_00034](#)

[The `DiagnosticIOControl.dataIdentifier` is taken for specifying the payload for the service.

However, in some cases `dataIdentifier` models the payload of the request message (`DiagnosticIOControl.shortTermAdjustment` is set to true) and in some cases it represents the payload of the response message.]

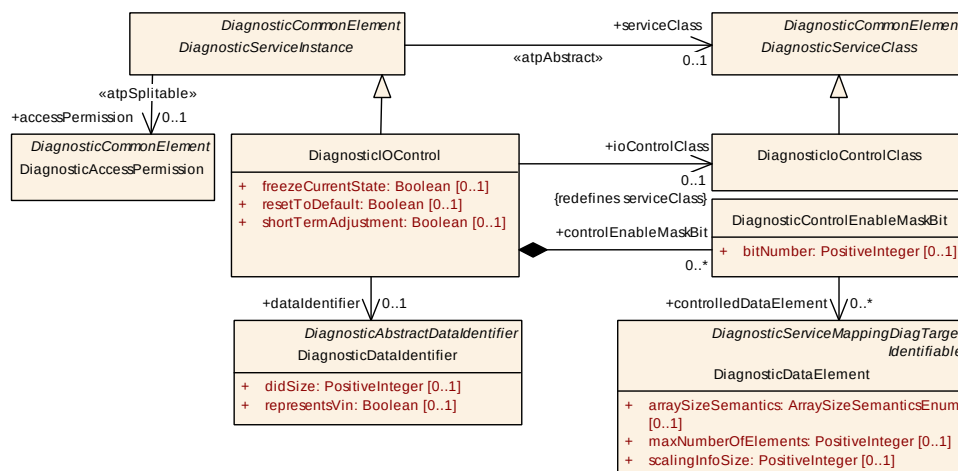


Figure 4.28: Modeling of diagnostic service `IOControl` (0x2F)

Please note that the referenced `dataIdentifier` itself may aggregate several `DiagnosticDataElements`.

At run-time, only some `DiagnosticDataElements` may be relevant for a specific execution of the service `InputOutputControl`. For this purpose, the diagnostic message contains the so-called `ControlEnableMaskRecord` (for more information, please refer to [SWS_DCM_00581]).

[TPS_DEXT_01089] Definition of an *identifier* of a `DiagnosticIOControl`

Upstream requirements: [RS_DEXT_00037](#)

[The *identifier* of a `DiagnosticIOControl` is defined by the attribute `DiagnosticIOControl.dataIdentifier.id`.]

Class	DiagnosticIOControl			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::IOControl			
Note	This represents an instance of the "I/O Control" diagnostic service. Tags: atp.recommendedPackage=DiagnosticIOControls			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
controlEnableMaskBit	DiagnosticControlEnableMaskBit	*	aggr	This aggregation represents the control mask record consisting of single bits.
dataIdentifier	DiagnosticDataIdentifier	0..1	ref	This represents the corresponding DiagnosticData Identifier
freezeCurrentState	Boolean	0..1	attr	Setting this attribute to true represents the ability of the Dcm to execute a freezeCurrentState.
ioControlClass	DiagnosticIOControlClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticIOControl in the given context.
resetToDefault	Boolean	0..1	attr	Setting this attribute to true represents the ability of the Dcm to execute a resetToDefault.
shortTermAdjustment	Boolean	0..1	attr	Setting this attribute to true represents the ability of the Dcm to execute a shortTermAdjustment.

Table 4.80: DiagnosticIOControl

Class	DiagnosticIOControlClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::IOControl			
Note	This meta-class contains attributes shared by all instances of the "IO Control" diagnostic service. Tags: atp.recommendedPackage=DiagnosticIOControls			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.81: DiagnosticIOControlClass

[TPS_DEXT_01018] InputOutput Control does not define any sub-functions

Upstream requirements: [RS_DEXT_00014](#), [RS_DEXT_00051](#)

[The diagnostic service InputOutput Control does not define any sub-functions, therefore the value of [DiagnosticIOControl.category](#) does not need to be constrained.]

[TPS_DEXT_01150] Semantics of meta-class [DiagnosticControlEnableMaskBit](#)

Upstream requirements: [RS_DEXT_00014](#), [RS_DEXT_00034](#)

[By aggregating [DiagnosticControlEnableMaskBit](#) at [DiagnosticIOControl](#) it is possible to specify **I/O control channels** in the diagnostic extract.

The reference [DiagnosticControlEnableMaskBit.controlledDataElement](#) identifies all [DiagnosticDataElements](#) that belong to the I/O control channel represented by the bit in the control mask record.]

Class	DiagnosticIoControlNeeds			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	Specifies the general needs on the configuration of the Diagnostic Communication Manager (DCM) which are not related to a particular item (e.g. a PID). The main use case is the mapping of service ports to the Dcm which are not related to a particular item.			
Base	ARObject , DiagnosticCapabilityElement , Identifiable , MultilanguageReferrable , Referrable , ServiceNeeds			
Aggregated by	BswServiceDependency.serviceNeeds , SwcServiceDependency.serviceNeeds			
Attribute	Type	Mult.	Kind	Note
currentValue	DiagnosticValueNeeds	0..1	ref	Reference to the DiagnosticValueNeeds indicating the access to the current value via signalBasedDiagnostics .
freezeCurrentStateSupported	Boolean	0..1	attr	This attribute determines, if the referenced port supports temporary freezing of I/O value.
resetToDefaultSupported	Boolean	0..1	attr	This represents a flag for the existence of the ResetToDefault operation in the service interface.
shortTermAdjustmentSupported	Boolean	0..1	attr	This attribute determines, if the referenced port supports temporarily setting of I/O value to a specific value provided by the diagnostic tester.

Table 4.82: DiagnosticIoControlNeeds

Class	DiagnosticControlEnableMaskBit			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::IOControl			
Note	This meta-class has the ability to represent one bit in the control enable mask record.			
Base	ARObject			
Aggregated by	DiagnosticIOControl.controlEnableMaskBit			
Attribute	Type	Mult.	Kind	Note
bitNumber	PositiveInteger	0..1	attr	This attribute represents the bit number of the bit in the control mask record. Bit number 0 is the most significant bit (MSB) in the first byte of the CEMR in the network presentation.





Class	DiagnosticControlEnableMaskBit			
controlledDataElement	DiagnosticDataElement	*	ref	This reference represents the collection of Diagnostic DataElements that are controlled by this bit of the control mask record.

Table 4.83: DiagnosticControlEnableMaskBit

Please note that the modeling of the [controlEnableMaskBit](#) intentionally does not use the `ordered` annotation to assign bit numbers to the aggregated [DiagnosticControlEnableMaskBits](#).

The control mask record does not necessarily have to be used from top to bottom without gaps.

Example 4.5

Bit 3 could be unused, but 0,1, and 4 could be used.

[constr_1721] [DiagnosticControlEnableMaskBit.bitNumber](#) shall be unique

Imposition time: [IT_Dext](#)

[Within the context of the enclosing [DiagnosticIOControl](#) the value of attribute [DiagnosticIOControl.controlEnableMaskBit.bitNumber](#) shall be unique.]

Please note that within the context of a [DiagnosticIOControl](#), it is **not** required to have 0 as the lowest value of aggregated [DiagnosticIOControl.controlEnableMaskBit.bitNumber](#).

[constr_1722] Relation between reference [DiagnosticIOControl.dataIdentifier](#) and attribute [DiagnosticIOControl.controlEnableMaskBit](#)

Imposition time: [IT_Dext](#)

[Any [DiagnosticDataElement](#) referenced in the role [DiagnosticIOControl.controlEnableMaskBit.controlledDataElement](#) shall be defined in the scope of the [DiagnosticDataIdentifier](#) that is referenced in the role [DiagnosticIOControl.dataIdentifier](#).]

4.3.8.9 RoutineControl

This chapter describes the modeling of diagnostic services [RoutineControl](#) (0x31). The purpose of this diagnostic service is to execute a piece of code, a [DiagnosticRoutine](#), on the diagnostic stack at the request of the tester.

[Diagnostic Routines](#) consist of up to three possible components:

- Start Routine

- Stop Routine
- Request Routine Results

The impact of this architecture on the meta-model is described by [TPS_DEXT_01077]:

[TPS_DEXT_01077] Modeling of [DiagnosticRoutine](#)

Upstream requirements: [RS_DEXT_00015](#)

[From the meta-modeling point of view, the semantics of [DiagnosticRoutine](#) is created by aggregating three further meta-classes that represent subfunctions of service RoutineControl (0x31):

- [DiagnosticStartRoutine](#)
- [DiagnosticStopRoutine](#)
- [DiagnosticRequestRoutineResults](#)

]

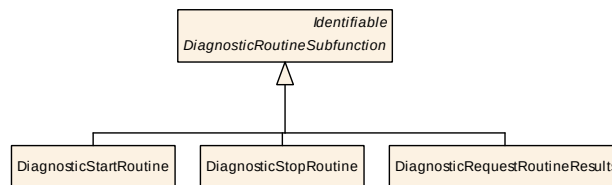


Figure 4.29: Abstract base class for subfunctions of diagnostic service RoutineControl (0x31)

Class	<i>DiagnosticRoutineSubfunction</i> (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class acts as an abstract base class to routine subfunctions.			
Base	ARObject, Identifiable , MultilanguageReferrable , Referrable			
Subclasses	DiagnosticRequestRoutineResults , DiagnosticStartRoutine , DiagnosticStopRoutine			
Attribute	Type	Mult.	Kind	Note
access Permission	DiagnosticAccess Permission	0..1	ref	This reference represents the access permission of the owning routine subfunction.

Table 4.84: DiagnosticRoutineSubfunction

[TPS_DEXT_01088] Semantics of [DiagnosticRoutine.id](#)

Upstream requirements: [RS_DEXT_00036](#)

[The attribute [DiagnosticRoutine.id](#) represents the so-called *identifier* of the [DiagnosticRoutine](#).]

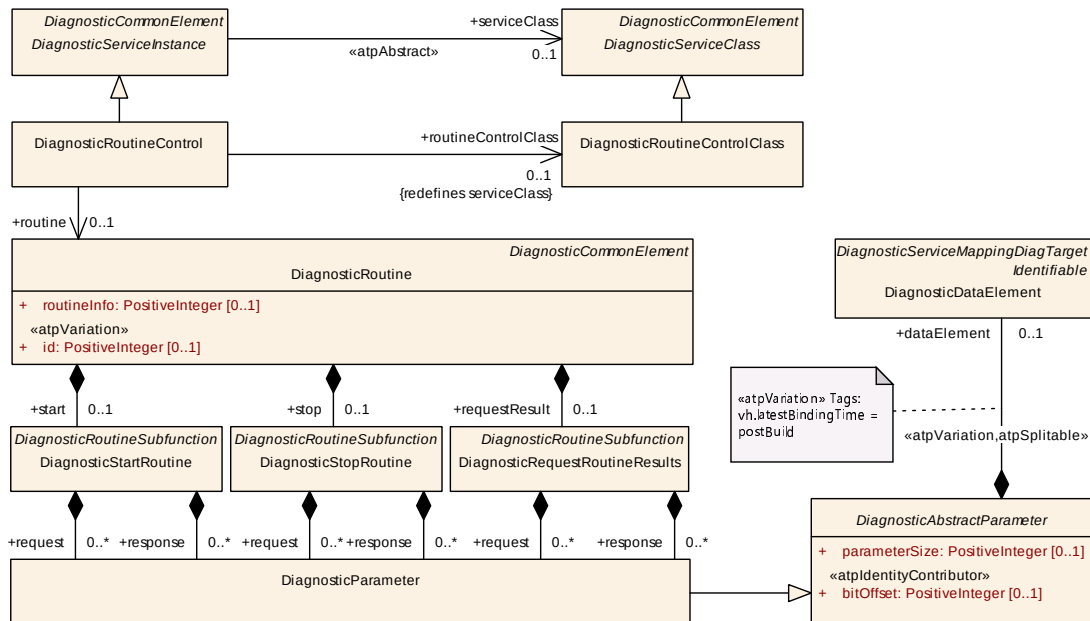


Figure 4.30: Modeling of diagnostic service RoutineControl1 (0x31)

[TPS_DEXT_01078] Not possible to use the attribute **category** for the identification of the sub-function of diagnostic service RoutineControl1

Upstream requirements: [RS_DEXT_00015](#), [RS_DEXT_00051](#)

[In the case of [DiagnosticRoutine](#), it is not possible to use the attribute **category** for the identification of the sub-function.]

The sub-functions actually have different properties i.e. the arguments to a [DiagnosticRoutine](#) that require a dedicated modeling for this purpose.

[TPS_DEXT_01079] Modeling of the arguments to a [DiagnosticRoutine](#)

Upstream requirements: [RS_DEXT_00015](#)

[The arguments to a [DiagnosticRoutine](#) are modeled by means of [DiagnosticParameter](#) that is aggregated in the following roles:

- [DiagnosticStartRoutine.request](#)
- [DiagnosticStartRoutine.response](#)
- [DiagnosticStopRoutine.request](#)
- [DiagnosticStopRoutine.response](#)
- [DiagnosticRequestRoutineResults.request](#)
- [DiagnosticRequestRoutineResults.response](#)

]

A [DiagnosticParameter](#), in turn, aggregates a [DiagnosticDataElement](#) (see [Section 4.2.1](#)) in the role [dataElement](#).

[TPS_DEXT_01080] Diagnostic Routine needs to be started

Upstream requirements: [RS_DEXT_00015](#)

[The standard document [\[17, ISO 14229-1\]](#) does not foresee the existence of a [Diagnostic Routine](#) that is already executing at boot time. Therefore, a [Diagnostic Routine](#) needs to be started at some point in order to make sense of it.]

[constr_1339] Existence of [DiagnosticRoutine.start](#)

Imposition time: [IT_Dext](#)

[In a complete [DiagnosticExtract](#), the attribute [DiagnosticRoutine.start](#) shall always exist for any given [DiagnosticRoutine](#).]

[TPS_DEXT_01035] Existence of [DiagnosticRoutine.stop](#) and [DiagnosticRoutine.requestResult](#)

Upstream requirements: [RS_DEXT_00015](#)

[In contrast to [DiagnosticRoutine.start](#) (as clarified by [\[constr_1339\]](#)), the existence of [DiagnosticRoutine.stop](#) and [DiagnosticRoutine.requestResult](#) is truly optional.]

[constr_1340] Consistency of [DiagnosticServiceSwMapping](#) with respect to synchronously called [DiagnosticRoutines](#)

Imposition time: [IT_Dext](#)

[Each [DiagnosticServiceSwMapping](#) that references a [DiagnosticRoutineControl](#) that only aggregates a [DiagnosticStartRoutine](#) in the role [start](#) shall only reference a [SwcServiceDependency](#) or [BswServiceDependency](#) that in turn aggregates a [DiagnosticRoutineNeeds](#) with attribute [diagRoutineType](#) set to [DiagnosticRoutineTypeEnum.synchronous](#).]

[constr_1341] Consistency of [DiagnosticServiceSwMapping](#) with respect to asynchronously called [DiagnosticRoutines](#)

Imposition time: [IT_Dext](#)

[Each [DiagnosticServiceSwMapping](#) that references a [DiagnosticRoutineControl](#) that aggregates a [DiagnosticStopRoutine](#) and/or [DiagnosticRequestRoutineResults](#) in the role [stop](#) or [requestResult](#) shall only reference a [SwcServiceDependency](#) or [BswServiceDependency](#) that in turn aggregates a [DiagnosticRoutineNeeds](#) with attribute [diagRoutineType](#) set to [DiagnosticRoutineTypeEnum.asynchronous](#).]



Figure 4.31: Permission is granted per subfunction

The `DiagnosticRoutineControl` service is the only UDS service with both subfunction and identifier. The [17, ISO 14229-1] treats the service with respect to session and security as a service with identifier.

In other words a `DiagnosticRoutine`—with its three subfunctions `start`, `stop` and `requestResult`—for the same identifier can have only `DiagnosticAccessPermission` with the same referenced `DiagnosticSession` and `DiagnosticSecurityLevel`.

However, different `DiagnosticEnvironmentalConditions` may exist for the subfunctions of a `DiagnosticRoutine` with the same identifier (`DiagnosticRoutine.id`).

[constr_1772] Unique `DiagnosticSession` and `DiagnosticSecurityLevel` for diagnostic routines that have the same identifier

Imposition time: IT_Dext

[All `DiagnosticAccessPermissions` referenced from `DiagnosticRoutines` where attribute `DiagnosticRoutine.id` has the identical value shall refer to the identical set of `DiagnosticSession` and `DiagnosticSecurityLevel`.]

For this purpose, the reference from the abstract base class⁷ `DiagnosticRoutineSubfunction` to `DiagnosticAccessPermission` in the role `accessPermission` exists (see Figure 4.31).

Consequently, the reference from meta-class `DiagnosticRoutineControl` (via its abstract base class `DiagnosticServiceInstance`) to meta-class `DiagnosticAccessPermission` has no meaning.

[constr_1612] Reference from `DiagnosticRoutineControl` to `DiagnosticAccessPermission` has no meaning

Imposition time: IT_Dext

[The reference from `DiagnosticRoutineControl` (via its abstract base class `DiagnosticServiceInstance`) in the role `accessPermission` to meta-class `DiagnosticAccessPermission` shall not be used.]

⁷of meta-classes `DiagnosticStartRoutine`, `DiagnosticStopRoutine`, and `DiagnosticRequestRoutineResults`

Class	DiagnosticRoutine			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class represents the ability to define a diagnostic routine. Tags: atp.recommendedPackage=DiagnosticRoutines			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
id	PositiveInteger	0..1	attr	This is the numerical identifier used to identify the DiagnosticRoutine in the scope of diagnostic workflow Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
requestResult	DiagnosticRequestRoutineResults	0..1	aggr	This represents the ability to request the result of a running routine.
routineInfo	PositiveInteger	0..1	attr	This represents the routine info byte. The info byte contains a manufacturer-specific value (for the identification of record identifiers) that is reported to the tester. Other use cases for this attribute are mentioned in ISO 27145 and ISO 26021.
start	DiagnosticStartRoutine	0..1	aggr	This represents the ability to start a routine
stop	DiagnosticStopRoutine	0..1	aggr	This represents the ability to stop a running routine.

Table 4.85: DiagnosticRoutine

[constr_1815] Existence of attribute [DiagnosticRoutine.id](#)

Imposition time: IT_Dext

[For each [DiagnosticRoutine](#), the attribute [id](#) shall exist at least once.]

Class	DiagnosticStartRoutine			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This represents the ability to start a diagnostic routine.			
Base	ARObject , DiagnosticRoutineSubfunction , Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	DiagnosticRoutine.start			
Attribute	Type	Mult.	Kind	Note
request	DiagnosticParameter	*	aggr	This represents the request parameters.
response	DiagnosticParameter	*	aggr	This represents the response parameters.

Table 4.86: DiagnosticStartRoutine

Class	DiagnosticStopRoutine			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This represents the ability to stop a diagnostic routine.			
Base	ARObject , DiagnosticRoutineSubfunction , Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	DiagnosticRoutine.stop			
Attribute	Type	Mult.	Kind	Note





Class	DiagnosticStopRoutine			
request	DiagnosticParameter	*	aggr	This represents the request parameters.
response	DiagnosticParameter	*	aggr	This represents the response parameters.

Table 4.87: DiagnosticStopRoutine

Class	DiagnosticRequestRoutineResults			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class represents the ability to define the result of a diagnostic routine execution.			
Base	ARObject , DiagnosticRoutineSubfunction , Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	DiagnosticRoutine.requestResult			
Attribute	Type	Mult.	Kind	Note
request	DiagnosticParameter	*	aggr	This represents the request parameters.
response	DiagnosticParameter	*	aggr	This represents the response parameters.

Table 4.88: DiagnosticRequestRoutineResults

Class	DiagnosticRoutineControl			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::RoutineControl			
Note	This represents an instance of the "Routine Control" diagnostic service. Tags: atp.recommendedPackage=DiagnosticRoutineControls			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
routine	DiagnosticRoutine	0..1	ref	This refers to the applicable DiagnosticRoutine.
routineControl Class	DiagnosticRoutine ControlClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticRoutineControl in the given context.

Table 4.89: DiagnosticRoutineControl

[constr_10100] Existence of [DiagnosticRoutineControl.routine](#)

Imposition time: [IT_Dext](#)

[For each [DiagnosticRoutineControl](#), the attribute [routine](#) shall exist.]

Class	DiagnosticRoutineControlClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::RoutineControl			
Note	This meta-class contains attributes shared by all instances of the "Routine Control" diagnostic service. Tags: atp.recommendedPackage=DiagnosticRoutineControls			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			





Class	DiagnosticRoutineControlClass			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.90: DiagnosticRoutineControlClass

Class	DiagnosticRoutineNeeds			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	Specifies the general needs on the configuration of the Diagnostic Communication Manager (Dcm) which are not related to a particular item (e.g. a PID). The main use case is the mapping of service ports to the Dcm which are not related to a particular item.			
Base	<i>ARObject</i> , <i>DiagnosticCapabilityElement</i> , Identifiable , MultilanguageReferrable , Referrable , ServiceNeeds			
Aggregated by	BswServiceDependency.serviceNeeds , SwcServiceDependency.serviceNeeds			
Attribute	Type	Mult.	Kind	Note
diagRoutineType	DiagnosticRoutineTypeEnum	0..1	attr	This denotes the type of diagnostic routine which is implemented by the referenced server port.

Table 4.91: DiagnosticRoutineNeeds

Enumeration	DiagnosticRoutineTypeEnum			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	This enumerator specifies the different types of diagnostic routines.			
Aggregated by	DiagnosticRoutineNeeds.diagRoutineType			
Literal	Description			
asynchronous	This indicates that the diagnostic server is not blocked while the diagnostic routine is running. Tags: atp.EnumerationLiteralIndex=0			
synchronous	This indicates that the diagnostic routine blocks the diagnostic server in the ECU while the routine is running. Tags: atp.EnumerationLiteralIndex=1			

Table 4.92: DiagnosticRoutineTypeEnum

4.3.8.10 DynamicallyDefineDataIdentifier

This chapter describes the modeling of diagnostic services `DynamicallyDefineDataIdentifier` (0x2C). The purpose of the service is to allow for defining data identifiers (DID) at run-time.

By this means it is possible to combine existing diagnostic data into a single DID.

This semantics is reflected by the modeling of the meta-class `DynamicallyDefineDataIdentifier` that refers to a `DiagnosticDynamicDataIdentifier` in the role `dataIdentifier`.

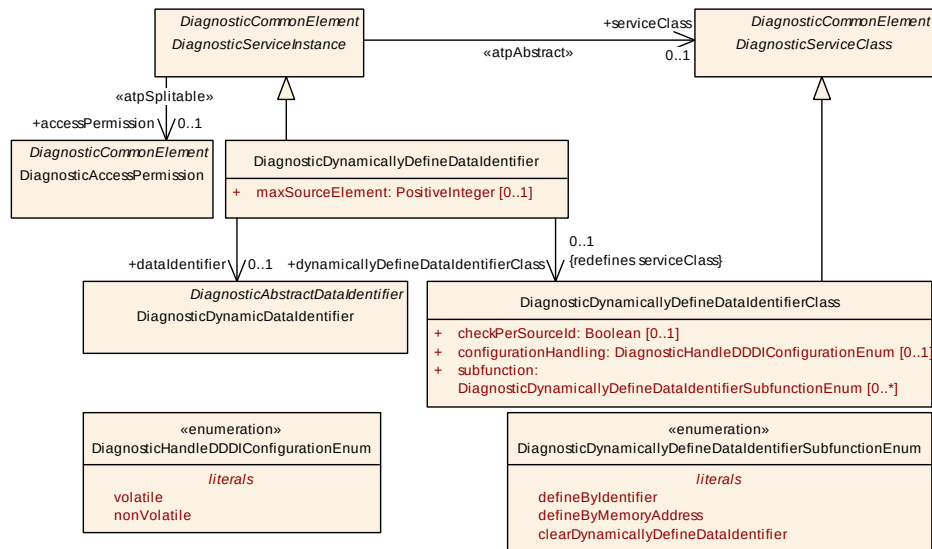


Figure 4.32: Modeling of diagnostic service `DynamicallyDefineDataIdentifier` (0x2C)

Also, the `D diagnosticDynamicallyDefineDataIdentifier` inherits a reference to `accessPermission` from `DiagnosticServiceInstance`.

[constr_1421] Consistency of `D diagnosticDynamicallyDefineDataIdentifierClass.subfunction`

Imposition time: IT_Dext

[The values of `D diagnosticDynamicallyDefineDataIdentifierClass.subfunction` shall not repeat, i.e. every value of `D diagnosticDynamicallyDefineDataIdentifierSubfunctionEnum` shall at most appear once in the `subfunction` attribute.]

Class	DiagnosticDynamicallyDefineDataIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DynamicallyDefineDataIdentifier			
Note	This represents an instance of the "Dynamically Define Data Identifier" diagnostic service. Tags: atp.recommendedPackage=DiagnosticDynamicallyDefineDataIdentifiers			
Base	ARElement, ARObj ect, CollectableElement, DiagnosticCommonElement, DiagnosticServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dataIdentifier	DiagnosticDynamicData Identifier	0..1	ref	This represents the applicable DiagnosticDynamicData Identifier.
dynamically DefineData IdentifierClass	DiagnosticDynamically DefineDataIdentifier Class	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticDynamicallyDefine DataIdentifier in the given context.
maxSource Element	PositiveInteger	0..1	attr	This represents the maximum number of source elements of the dynamically created DID.

Table 4.93: DiagnosticDynamicallyDefineDataIdentifier

[constr_1808] Existence of reference [DiagnosticDynamicallyDefineDataIdentifier.dataIdentifier](#)

Imposition time: IT_Dext

[For each [DiagnosticDynamicallyDefineDataIdentifier](#), the reference to [DiagnosticDynamicDataIdentifier](#) in the role [dataIdentifier](#) shall exist.]

Class	DiagnosticDynamicallyDefineDataIdentifierClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DynamicallyDefineDataIdentifier			
Note	This meta-class contains attributes shared by all instances of the "Dynamically Define Data Identifier" diagnostic service. Tags: atp.recommendedPackage=DiagnosticDynamicallyDefineDataIdentifiers			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
checkPerSourceId	Boolean	0..1	attr	If set to TRUE, the Dcm module shall check the session, security and mode dependencies per source DIDs with a ReadDataByIdentifier (0x22) with DID in the range 0xF200 to 0xF3FF. If set to FALSE, the Dcm module shall not check the session, security and mode dependencies per source DIDs with a ReadDataByIdentifier (0x22) with DID in the range 0xF200 to 0xF3FF.
configurationHandling	DiagnosticHandleDDDIConfigurationEnum	0..1	attr	This configuration switch defines whether DDDID definition is handled as non-volatile information or not.
subfunction	DiagnosticDynamicallyDefineDataIdentifierSubfunctionEnum	*	attr	This attribute contains a list of applicable subfunctions for all DiagnosticDynamicallyDefineDataIdentifier that reference the DiagnosticDynamicallyDefineDataIdentifierClass .

Table 4.94: DiagnosticDynamicallyDefineDataIdentifierClass

Enumeration	DiagnosticHandleDDDIConfigurationEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DynamicallyDefineDataIdentifier
Note	This meta-class represents the options for controlling how the configuration of the DynamicallyDefineDataIdentifiers is done in the given context.
Aggregated by	DiagnosticDynamicallyDefineDataIdentifierClass.configurationHandling
Literal	Description
nonVolatile	This indicates that the configuration of DynamicallyDefineDataIdentifier shall be stored as non-volatile data. Tags: atp.EnumerationLiteralIndex=0
volatile	This indicates that the configuration of DynamicallyDefineDataIdentifier shall be handled as volatile data. Tags: atp.EnumerationLiteralIndex=1

Table 4.95: DiagnosticHandleDDDIConfigurationEnum

Enumeration	DiagnosticDynamicallyDefineDataIdentifierSubfunctionEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::DynamicallyDefineDataIdentifier
Note	This meta-class contains a list of possible subfunctions for the UDS service 0x2C.
Aggregated by	DiagnosticDynamicallyDefineDataIdentifierClass.subfunction
Literal	Description
clearDynamicallyDefineDataIdentifier	Clear the specified dynamic data identifier. Tags: atp.EnumerationLiteralIndex=0
defineByIdentifier	The definition of dynamic data identifier shall be done via a reference to a diagnostic data identifier. Tags: atp.EnumerationLiteralIndex=1
defineByMemoryAddress	The definition of dynamic data identifier shall be done via a reference to a memory address. Tags: atp.EnumerationLiteralIndex=2

Table 4.96: DiagnosticDynamicallyDefineDataIdentifierSubfunctionEnum

4.3.8.11 ReadDataByPeriodicIdentifier

This chapter describes the modeling of diagnostic services `ReadDataByPeriodicIdentifier` (0x2A).

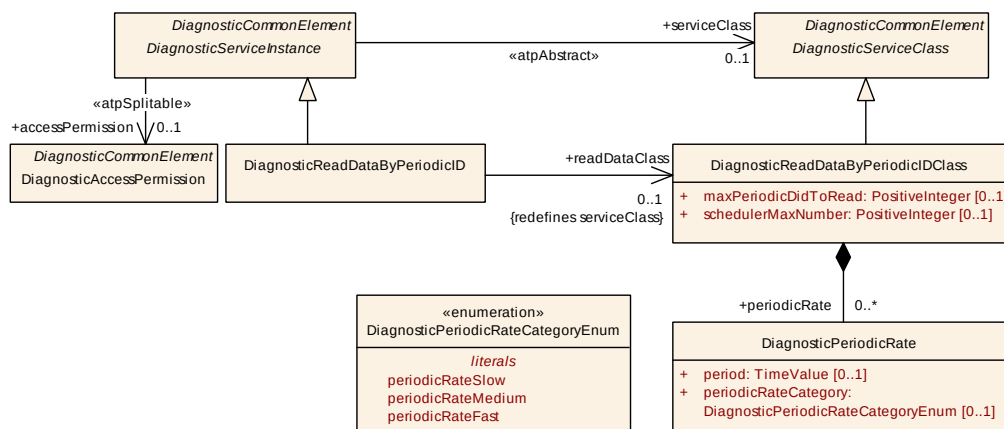


Figure 4.33: Modeling of diagnostic service `ReadDataByPeriodicIdentifier` (0x2A)

[constr_1338] Maximum number of aggregated `DiagnosticReadDataByPeriodicIDClass.periodicRate`

Imposition time: IT_Dext

[The number of aggregated `periodicRate` within the context of one `DiagnosticReadDataByPeriodicIDClass` shall be within the closed interval 1..3.]

Class	DiagnosticReadDataByPeriodicID			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID			
Note	This represents an instance of the "Read Data by periodic Identifier" diagnostic service. Tags: atp.recommendedPackage=DiagnosticReadDataByPeriodicIds			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
readDataClass	DiagnosticReadDataByPeriodicIDClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticReadDataByPeriodicID in the given context.

Table 4.97: DiagnosticReadDataByPeriodicID

Class	DiagnosticReadDataByPeriodicIDClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID			
Note	This meta-class contains attributes shared by all instances of the "Read Data by periodic Identifier" diagnostic service. Tags: atp.recommendedPackage=DiagnosticReadDataByPeriodicIds			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
maxPeriodicDidToRead	PositiveInteger	0..1	attr	This represents the maximum number of data identifiers that can be included in one request.
periodicRate	DiagnosticPeriodicRate	*	aggr	This represents the description of a collection of periodic rates in which the service can be executed.
schedulerMaxNumber	PositiveInteger	0..1	attr	This represents the maximum number of periodic data identifiers that can be scheduled in parallel.

Table 4.98: DiagnosticReadDataByPeriodicIDClass

[constr_1810] Existence of aggregation [DiagnosticReadDataByPeriodicIDClass.periodicRate](#)

Imposition time: IT_Dext

[For each [DiagnosticReadDataByPeriodicIDClass](#), the aggregation of [DiagnosticPeriodicRate](#) in the role [periodicRate](#) shall exist at least once.]

[constr_1811] Existence of attribute [DiagnosticReadDataByPeriodicIDClass.maxPeriodicDidToRead](#)

Imposition time: IT_Dext

[For each [DiagnosticReadDataByPeriodicIDClass](#), the attribute [maxPeriodicDidToRead](#) shall exist at least once.]

[constr_1812] Existence of attribute [DiagnosticReadDataByPeriodicIDClass.schedulerMaxNumber](#)

Imposition time: IT_Dext

[For each [DiagnosticReadDataByPeriodicIDClass](#), the attribute [schedulerMaxNumber](#) shall exist at least once.]

Class	DiagnosticPeriodicRate			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID			
Note	This represents the ability to define a periodic rate for the specification of the "read data by periodic ID" diagnostic service.			
Base	ARObject			
Aggregated by	DiagnosticReadDataByPeriodicIDClass.periodicRate			
Attribute	Type	Mult.	Kind	Note
period	TimeValue	0..1	attr	This represents the period of the DiagnosticPeriodicRate in seconds.
periodicRate Category	DiagnosticPeriodicRate CategoryEnum	0..1	attr	This attribute represents the category of the periodic rate.

Table 4.99: DiagnosticPeriodicRate

[constr_1763] Existence of attribute [DiagnosticPeriodicRate.periodicRateCategory](#)

Imposition time: IT_Dext

[For each [DiagnosticPeriodicRate](#), the attribute [periodicRateCategory](#) shall exist.]

Enumeration	DiagnosticPeriodicRateCategoryEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID
Note	This meta-class provides possible values for the setting of the periodic rate.
Aggregated by	DiagnosticPeriodicRate.periodicRateCategory
Literal	Description
periodicRateFast	This value represents a fast periodic rate. Tags: atp.EnumerationLiteralIndex=0
periodicRate Medium	This value represents a medium periodic rate. Tags: atp.EnumerationLiteralIndex=1
periodicRateSlow	This value represents a slow periodic rate. Tags: atp.EnumerationLiteralIndex=2

Table 4.100: DiagnosticPeriodicRateCategoryEnum

The meaning of the values defined in [DiagnosticPeriodicRateCategoryEnum](#) is described in the applicable [17, ISO 14229-1].

4.3.8.12 ResponseOnEvent

This chapter describes the modeling of diagnostic services `ResponseOnEvent` (0x86). The purpose of this service is to instruct the AUTOSAR diagnostic stack with respect to the starting or stopping of sending responses to a specific event to the tester.

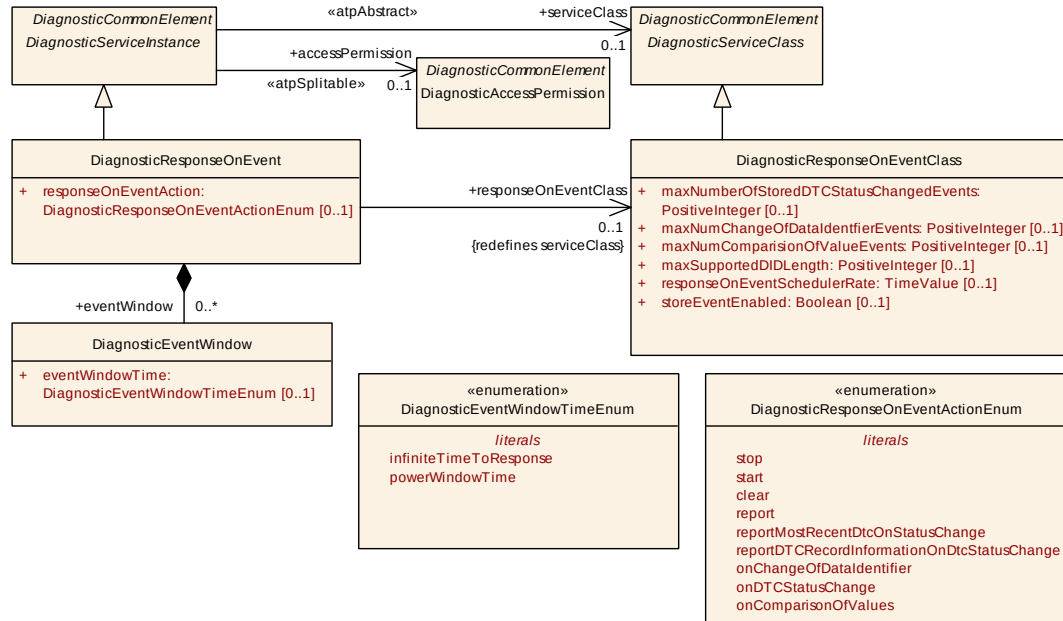


Figure 4.34: Modeling of diagnostic service `ResponseOnEvent` (0x86)

Class	DiagnosticResponseOnEvent			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent			
Note	This represents an instance of the "Response on Event" diagnostic service. Tags: atp.recommendedPackage=DiagnosticResponseOnEvents			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
eventWindow	DiagnosticEventWindow	*	aggr	This represents the applicable DiagnosticEventWindows
responseOnEventAction	DiagnosticResponseOnEventActionEnum	0..1	attr	Defines sub-functions of the service ResponseOnEvent.
responseOnEventClass	DiagnosticResponseOnEventClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticResponseOnEvent in the given context.

Table 4.101: DiagnosticResponseOnEvent

Class	DiagnosticResponseOnEventClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent			
Note	This represents the ability to define common properties for all instances of the "Response on Event" diagnostic service. Tags: atp.recommendedPackage=DiagnosticResponseOnEvents			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
maxNumberOfStoredDTCStatusChangedEvents	PositiveInteger	0..1	attr	The maximum number of DTCs that can be stored as DTCs with change status within one ResponseOnEvent SchedulerRate interval.
maxNumChangeOfDataIdentifierEvents	PositiveInteger	0..1	attr	The maximum number of events that can be simultaneously configured with sub function onChangeOfDataIdentifier.
maxNumComparisonOfValueEvents	PositiveInteger	0..1	attr	The maximum number of events that can be simultaneously configured with sub function onComparisonOfValues.
maxSupportedDIDLength	PositiveInteger	0..1	attr	The maximum number of measurable data bytes allowed for each DID that is used for comparison or data change.
responseOnEventSchedulerRate	TimeValue	0..1	attr	The call rate of the periodic scheduler to compare the values of the DataIdentifier (DID) or to detect DTC status changes.
storeEventEnabled	Boolean	0..1	attr	Specifies if the storeEvent functionality of the ResponseOnEvent diagnostic service shall be supported or not. If set to true, the storeEvent functionality is available. If set to false the storeEvent functionality is not available.

Table 4.102: DiagnosticResponseOnEventClass

[constr_10577] Existence of [DiagnosticResponseOnEventClass.storeEventEnabled](#)

Imposition time: IT_Dext

[For each [DiagnosticResponseOnEventClass](#), the attribute [storeEventEnabled](#) shall exist.]

Class	DiagnosticEventWindow			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent			
Note	This represents the ability to define the characteristics of the applicable event window			
Base	ARObject			
Aggregated by	DiagnosticResponseOnEvent.eventWindow			
Attribute	Type	Mult.	Kind	Note
eventWindowTime	DiagnosticEventWindowTimeEnum	0..1	attr	This attribute clarifies the validity of the eventWindow

Table 4.103: DiagnosticEventWindow

Enumeration	DiagnosticEventWindowTimeEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent
Note	This represents the ability to define the semantics of the event window.
Aggregated by	DiagnosticEventWindow.eventWindowTime
Literal	Description
infiniteTimeToResponse	This value specifies that the event window shall stay active for an infinite amount of time (e.g. open window until power off). Tags: atp.EnumerationLiteralIndex=3
powerWindowTime	This enumeration value specifies that the server shall send response on event messages until the server is powered down. The server stops sending response on event messages with the power down and will send no more response on event messages after server is up again. Tags: atp.EnumerationLiteralIndex=4

Table 4.104: DiagnosticEventWindowTimeEnum

Enumeration	DiagnosticResponseOnEventActionEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent
Note	This meta-class has the ability to define sub-functions of the UDS service ResponseOnEvent.
Aggregated by	DiagnosticResponseOnEvent.responseOnEventAction
Literal	Description
clear	Clears the configured events. Tags: atp.EnumerationLiteralIndex=2
onChangeOfDataIdentifier	Reports based on change of data identifier. Tags: atp.EnumerationLiteralIndex=6
onComparisonOfValues	Triggered if data condition is met (e.g. RPM over 5000 1/min). Tags: atp.EnumerationLiteralIndex=8
onDTCStatusChange	Reports based on change of DTC status. Tags: atp.EnumerationLiteralIndex=7
report	Reports the activated events. Tags: atp.EnumerationLiteralIndex=3
reportDTCRecordInformationOnDtcStatusChange	Reports the DTC record-related information based on a DTC status change. (Subfunction 0x09) Tags: atp.EnumerationLiteralIndex=5
reportMostRecentDtcOnStatusChange	Triggers the report of the most recent failed or confirmed DTC (Subfunction 0x08). Tags: atp.EnumerationLiteralIndex=4
start	Starts the response on event service. Tags: atp.EnumerationLiteralIndex=1
stop	Stops the response on event service. Tags: atp.EnumerationLiteralIndex=0

Table 4.105: DiagnosticResponseOnEventActionEnum

4.3.8.13 ReadDTCInformation

This chapter describes the modeling of diagnostic services `ReadDTCInformation` (0x19). The purpose of this service is to enable a tester to read a `Diagnostic Trouble Code` from the AUTOSAR `Dcm`, see [10, SWS Diagnostic Communication

Manager] (that, in turn, fetches the information from the AUTOSAR Dem, see [11, SWS Diagnostic Event Manager]).

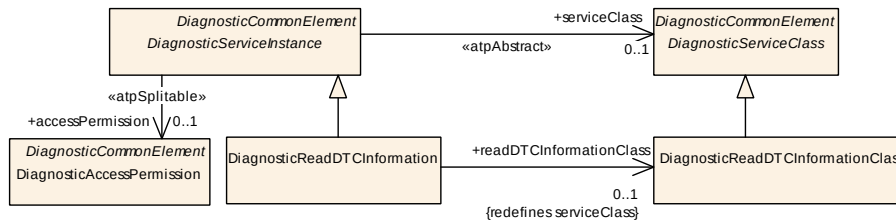


Figure 4.35: Modeling of diagnostic service ReadDTCInformation (0x19)

[TPS_DEXT_01034] Sub-functions of the service ReadDTCInformation

Upstream requirements: [RS_DEXT_00006](#), [RS_DEXT_00051](#)

[The diagnostics service `ReadDTCInformation` defines a number of sub-functions that are, as far as the modeling in AUTOSAR goes, identified by a textual identifier.

These sub-functions are **not** modeled explicitly but can be specified by defining a `DiagnosticReadDTCInformation` and by setting the `DiagnosticReadDTCInformation.category` to the identifier of the respective sub-function.

The possible values, as far as the AUTOSAR standard is concerned, are defined by [TPS_DEXT_01060].]

[TPS_DEXT_01060] Applicable values for `DiagnosticReadDTCInformation.category`

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00006](#), [RS_DEXT_00051](#)

[The following values of the attribute `DiagnosticReadDTCInformation.category` are standardized by AUTOSAR:

- `REPORT_NUMBER_OF_DTC_BY_STATUS_MASK`
- `REPORT_DTC_BY_STATUS_MASK`
- `REPORT_NUMBER_OF_EMISSIONS_OBD_DTC_BY_STATUS_MASK`
- `REPORT_EMISSIONS_OBD_DTC_BY_STATUS_MASK`
- `REPORT_DTC_SNAPSHOT_IDENTIFICATION`
- `REPORT_DTC_SNAPSHOT_RECORD_BY_DTC_NUMBER`
- `REPORT_DTC_STORED_DATA_BY_RECORD_NUMBER`
- `REPORT_DTC_EXT_DATA_RECORD_BY_DTC_NUMBER`
- `REPORT_NUMBER_OF_DTC_BY_SEVERITY_MASK_RECORD`
- `REPORT_DTC_BY_SEVERITY_MASK_RECORD`
- `REPORT_SEVERITY_INFORMATION_OF_DTC`

- REPORT_SUPPORTED_DTC
- REPORT_FIRST_TEST_FAILED_DTC
- REPORT_FIRST_CONFIRMED_DTC
- REPORT_MOST_RECENT_TEST_FAILED_DTC
- REPORT_MOST_RECENT_CONFIRMED_DTC
- REPORT_DTC_FAULT_DETECTION_COUNTER
- REPORT_DTC_WITH_PERMANENT_STATUS
- REPORT_DTC_EXT_DATA_RECORD_BY_RECORD_NUMBER
- REPORT_USER_DEF_MEMORY_DTC_BY_STATUS_MASK
- REPORT_USER_DEF_MEMORY_DTC_SNAPSHOT_RECORD_BY_DTC_NUMBER
- REPORT_USER_DEF_MEMORY_DTC_EXT_DATA_RECORD_BY_DTC_NUMBER
- REPORT_WWH_OBD_DTC_BY_MASK_RECORD
- REPORT_WWH_OBD_DTC_WITH_PERMANENT_STATUS
- REPORT_SUPPORTED_DTC_EXT_DATA_RECORD
- REPORT_DTC_INFORMATION_BY_DTC_READINESS_GROUP_IDENTIFIER

The meanings of these values are described in the applicable [17, ISO 14229-1].]

Please note that there is nothing to configure for [DiagnosticReadDTCInformation](#) beyond its mere existence.

Class	DiagnosticReadDTCInformation			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ReadDTCInformation			
Note	This represents an instance of the "Read DTC Information" diagnostic service. Tags: atp.recommendedPackage=DiagnosticReadDtcInformations			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
read DTCInformation Class	DiagnosticReadDTC InformationClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticRead DTCInformation in the given context.

Table 4.106: DiagnosticReadDTCInformation

Class	DiagnosticReadDTCInformationClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ReadDTCInformation			
Note	This meta-class contains attributes shared by all instances of the "ReadDTCInformation" diagnostic service. Tags: atp.recommendedPackage=DiagnosticReadDtcInformations			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.107: DiagnosticReadDTCInformationClass

4.3.8.14 ClearDiagnosticInformation

This chapter describes the modeling of diagnostic services `ClearDiagnosticInformation` (0x14). As the name suggests, the purpose of the service is to clear diagnostic information in the AUTOSAR diagnostics stack.

Please note that there is nothing to configure for `DiagnosticClearDiagnosticInformation` beyond its mere existence.

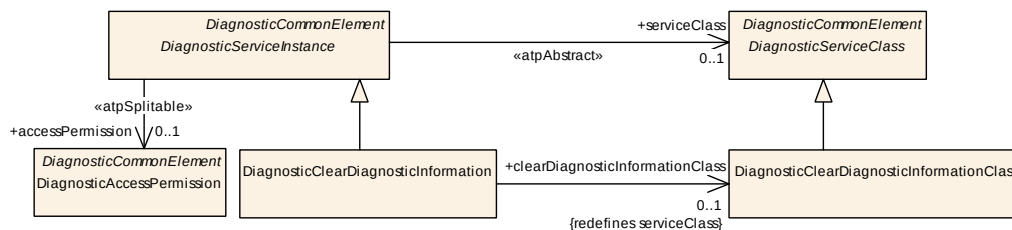


Figure 4.36: Modeling of diagnostic service ClearDiagnosticInformation (0x14)

Class	DiagnosticClearDiagnosticInformation			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ClearDiagnosticInfo			
Note	This represents an instance of the "Clear Diagnostic Information" diagnostic service. Tags: atp.recommendedPackage=DiagnosticClearDiagnosticInformations			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
clearDiagnosticInformationClass	DiagnosticClearDiagnosticInformationClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticClearDiagnosticInformation in the given context.

Table 4.108: DiagnosticClearDiagnosticInformation

Class	DiagnosticClearDiagnosticInformationClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::ClearDiagnosticInfo			
Note	This meta-class contains attributes shared by all instances of the "Clear Diagnostic Information" diagnostic service. Tags: atp.recommendedPackage=DiagnosticClearDiagnosticInformations			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.109: DiagnosticClearDiagnosticInformationClass**[TPS_DEXT_01022] ClearDiagnosticInformation does not define any sub-functions**

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00005](#), [RS_DEXT_00051](#)

[The diagnostic service `ClearDiagnosticInformation` does not define any sub-functions, therefore the value of `DiagnosticClearDiagnosticInformation.category` does not need to be constrained.]

4.3.8.15 Memory Services

This chapter describes the modeling of diagnostic services for memory access (0x23, 0x3D, 0x34-0x37). The purpose of these services is to access memory on the diagnostic stack on request of the tester.

The service description for accessing memory for diagnostic purposes is modeled by the abstract meta-class `DiagnosticMemoryByAddress`. It is supposed to provide all model properties relevant for the memory access.

The description of memory access, to some extent, requires a formal description of the memory segments to take into account. For this purpose the meta-class `DiagnosticMemoryIdentifier` has been introduced and referenced by `DiagnosticMemoryAddressableRangeAccess` in the role `memoryRange`.

The intent of this modeling was not to provide a generic memory model but to allow for the specification of memory properties just as far as diagnostics is concerned.

The aggregation of `DiagnosticMemoryIdentifier` at `DiagnosticMemoryByAddress` may or may not be relevant for an OEM. However, there is certainly a use case for adding this information to a `DiagnosticExtract` that goes back from a tier-1 supplier to an OEM as sort of documentation of the diagnostic configuration.

As `DiagnosticMemoryByAddress` represents a generic base class for all kinds of diagnostic memory access, it is also necessary to model the particular sub-classes that address specific use cases for diagnostic memory access.

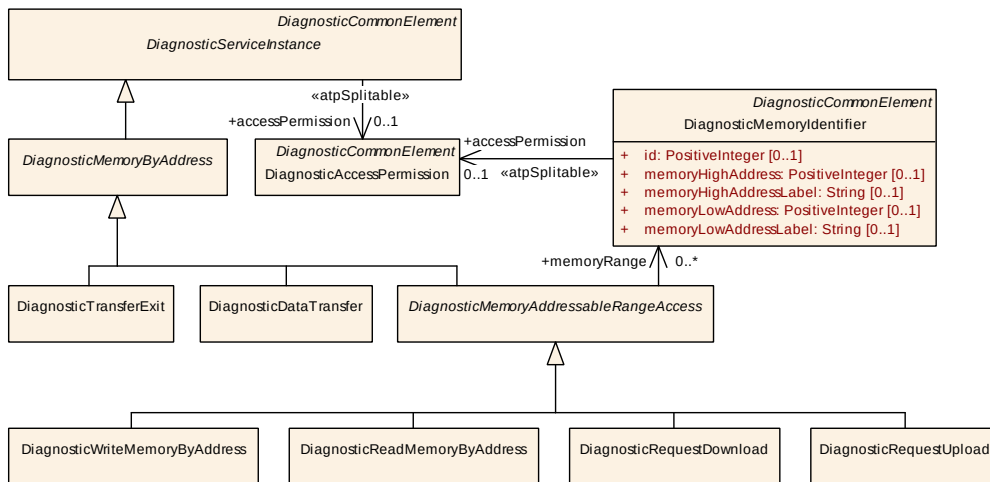


Figure 4.37: Modeling of diagnostic services Memory (0x23, 0x3D, 0x34-0x37)

These sub-classes are conceptually on the same level as other sub-classes of `DiagnosticServiceInstance`.

In other words, the case of memory access deviates from the modeling of other diagnostic services such that there is one further abstract base class involved.

[constr_1333] Existence of attributes of meta-class `DiagnosticMemoryIdentifier`

Imposition time: `IT_Dext`

[If a `DiagnosticMemoryIdentifier` is referenced in the role `memoryRange` by a `DiagnosticRequestDownload` or a `DiagnosticRequestUpload`, then the attributes

- `memoryLowAddress`
- `memoryLowAddressLabel`
- `memoryHighAddress`
- `memoryHighAddressLabel`
- `accessPermission`

shall **not** exist for the referenced `DiagnosticMemoryIdentifier`.]

[constr_1411] Existence of attribute `DiagnosticMemoryIdentifier.memoryHighAddressLabel` vs. `DiagnosticMemoryIdentifier.memoryHighAddress`

Imposition time: `IT_Dext`

[At most **one** of the attributes in the following list shall exist:

- `DiagnosticMemoryIdentifier.memoryHighAddressLabel`
- `DiagnosticMemoryIdentifier.memoryHighAddress`

]

[constr_1412] Existence of [DiagnosticMemoryIdentifier.memoryLowAddressLabel](#) vs. [DiagnosticMemoryIdentifier.memoryLowAddress](#)*Imposition time: IT_Dext*[At most **one** of the attributes in the following list shall exist:

- [DiagnosticMemoryIdentifier.memoryLowAddressLabel](#)
- [DiagnosticMemoryIdentifier.memoryLowAddress](#)

]

Please note that it does not make sense to describe a memory address in this context **both** numerically **and** symbolically. If the address is described at all (see [[constr_1333](#)]) then it shall be done **either** symbolically or numerically. This is the motivation of the existence of [[constr_1411](#)] and [[constr_1412](#)].

Class	<i>DiagnosticMemoryByAddress</i> (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This represents an abstract base class for diagnostic services that deal with accessing memory by address.			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	DiagnosticDataTransfer , DiagnosticMemoryAddressableRangeAccess , DiagnosticTransferExit			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.110: DiagnosticMemoryByAddress

Class	<i>DiagnosticMemoryAddressableRangeAccess</i> (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This abstract base class			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMemoryByAddress , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	DiagnosticReadMemoryByAddress , DiagnosticRequestDownload , DiagnosticRequestUpload , DiagnosticWriteMemoryByAddress			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
memoryRange	DiagnosticMemoryIdentifier	*	ref	This represents the formal description of the memory segment to which the DiagnosticMemoryByAddress applies.

Table 4.111: DiagnosticMemoryAddressableRangeAccess

Class	DiagnosticMemoryIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This meta-class represents the ability to define memory properties from the diagnostics point of view. Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
access Permission	DiagnosticAccessPermission	0..1	ref	This represents that access permission defined for the specific DiagnosticMemoryIdentifier. Stereotypes: atp.Splitable Tags: atp.Splitkey=accessPermission
id	PositiveInteger	0..1	attr	This represents the identification of the memory segment.
memoryHigh Address	PositiveInteger	0..1	attr	This represents the upper bound for addresses of the memory segment.
memoryHigh AddressLabel	String	0..1	attr	This represents a symbolic label for the upper bound for addresses of the memory segment.
memoryLow Address	PositiveInteger	0..1	attr	This represents the lower bound for addresses of the memory segment.
memoryLow AddressLabel	String	0..1	attr	This represents a symbolic label for the lower bound for addresses of the memory segment.

Table 4.112: DiagnosticMemoryIdentifier

Class	DiagnosticWriteMemoryByAddress			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This represents an instance of the "Write Memory by Address" diagnostic service. Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMemoryAddressableRangeAccess , DiagnosticMemoryByAddress , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
writeClass	DiagnosticWriteMemoryByAddressClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticWritememoryBy Address in the given context.

Table 4.113: DiagnosticWriteMemoryByAddress

Class	DiagnosticWriteMemoryByAddressClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This meta-class contains attributes shared by all instances of the "Write Memory by Address" diagnostic service. Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.114: DiagnosticWriteMemoryByAddressClass

[TPS_DEXT_01023] WriteMemoryByAddress does not define any sub-functions

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00020](#), [RS_DEXT_00051](#)

[The diagnostic service WriteMemoryByAddress does not define any sub-functions, therefore the value of [DiagnosticWriteMemoryByAddress.category](#) does not need to be constrained.]

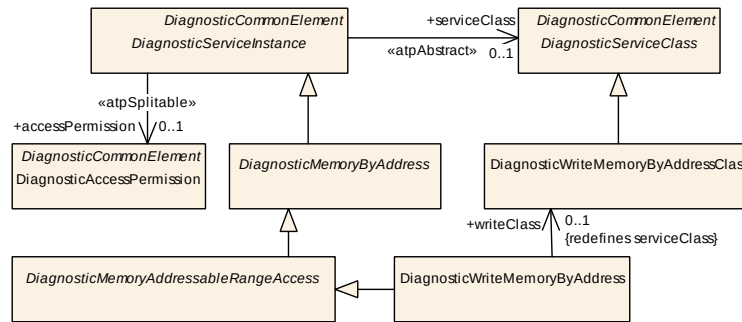


Figure 4.38: Modeling of diagnostic service WriteMemoryByAddress (0x3D)

Class	DiagnosticReadMemoryByAddress			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This represents an instance of the "Read Memory by Address" diagnostic service. Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMemoryAddressableRangeAccess , DiagnosticMemoryByAddress , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
readClass	DiagnosticReadMemoryByAddressClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticReadMemoryByAdressst in the given context.

Table 4.115: DiagnosticReadMemoryByAddress

Class	DiagnosticReadMemoryByAddressClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This meta-class contains attributes shared by all instances of the "Read Memory by Address" diagnostic service. Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.116: DiagnosticReadMemoryByAddressClass

[TPS_DEXT_01024] ReadMemoryByAddress does not define any sub-functions

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00008](#), [RS_DEXT_00051](#)

[The diagnostic service `ReadMemoryByAddress` does not define any sub-functions, therefore the value of `DiagnosticReadMemoryByAddress.category` does not need to be constrained.]

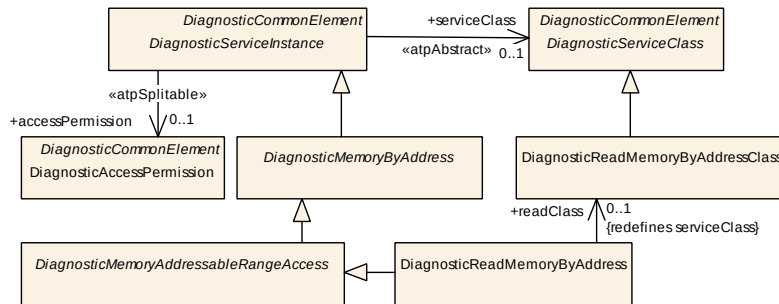


Figure 4.39: Modeling of diagnostic service ReadMemoryByAddress (0x23)

Class	DiagnosticTransferExit			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This represents an instance of the "Transfer Exit" diagnostic service. Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMemoryByAddress , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
transferExit Class	DiagnosticTransferExit Class	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticTransferExit in the given context.

Table 4.117: DiagnosticTransferExit

Class	DiagnosticTransferExitClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This meta-class contains attributes shared by all instances of the "Transfer Exit" diagnostic service. Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
—	—	—	—	—

Table 4.118: DiagnosticTransferExitClass

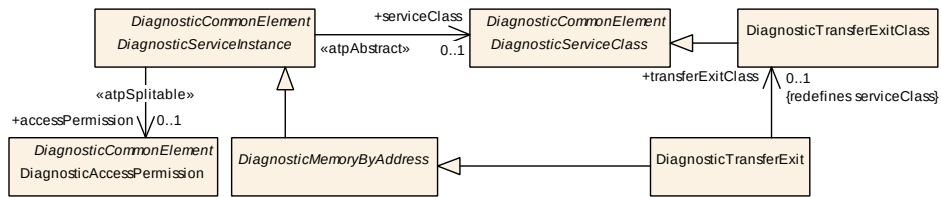


Figure 4.40: Modeling of diagnostic service TransferExit (0x37)

[TPS_DEXT_01025] TransferExit does not define any sub-functions

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00019](#), [RS_DEXT_00051](#)

[The diagnostic service TransferExit does not define any sub-functions, therefore the value of [DiagnosticTransferExit.category](#) does not need to be constrained.]

Class	DiagnosticDataTransfer			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This represents an instance of the "Data Transfer" diagnostic service. Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMemoryByAddress , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
data Transfer Class	DiagnosticDataTransfer Class	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticDataTransfer in the given context.

Table 4.119: DiagnosticDataTransfer

Class	DiagnosticDataTransferClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This meta-class contains attributes shared by all instances of the "Data Transfer" diagnostic service. Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
—	—	—	—	—

Table 4.120: DiagnosticDataTransferClass

[TPS_DEXT_01026] DataTransfer does not define any sub-functions

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00018](#), [RS_DEXT_00051](#)

[The diagnostic service `DataTransfer` does not define any sub-functions, therefore the value of `DiagnosticDataTransfer.category` does not need to be constrained.]

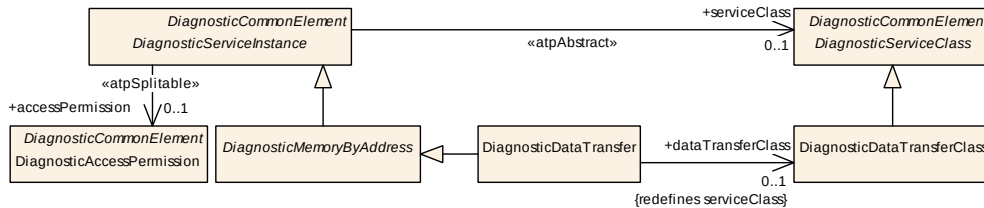


Figure 4.41: Modeling of diagnostic service DataTransfer (0x36)

Class	DiagnosticRequestDownload			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This represents an instance of the "Request Download" diagnostic service. Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMemoryAddressableRangeAccess , DiagnosticMemoryByAddress , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
request DownloadClass	DiagnosticRequestDownloadClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestDownload in the given context.

Table 4.121: DiagnosticRequestDownload

Class	DiagnosticRequestDownloadClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This meta-class contains attributes shared by all instances of the "Request Download" diagnostic service. Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
—	—	—	—	—

Table 4.122: DiagnosticRequestDownloadClass

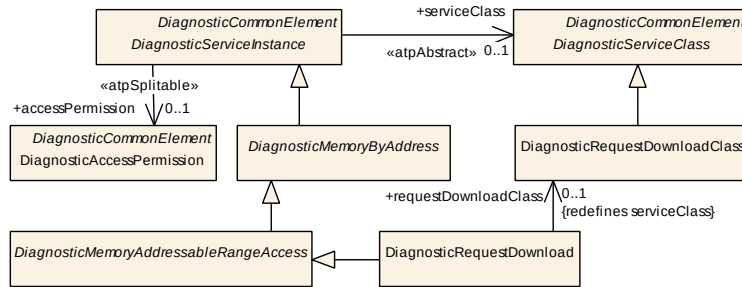


Figure 4.42: Modeling of diagnostic service RequestDownload (0x34)

[TPS_DEXT_01027] RequestDownload does not define any sub-functions

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00016](#), [RS_DEXT_00051](#)

[The diagnostic service RequestDownload does not define any sub-functions, therefore the value of [DiagnosticRequestDownload.category](#) does not need to be constrained.]

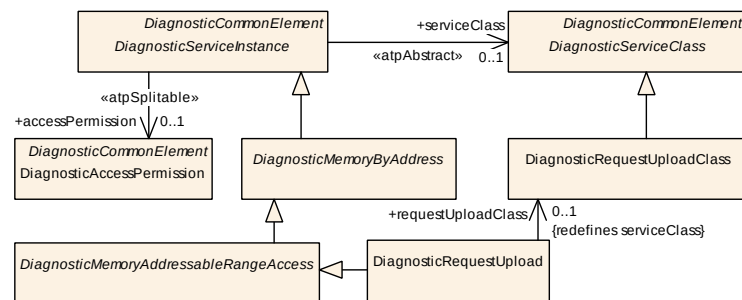


Figure 4.43: Modeling of diagnostic service RequestUpload (0x35)

Class	DiagnosticRequestUpload			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This represents an instance of the "Request Upload" diagnostic service. Tags: atp.recommendedPackage=DiagnosticMemoryByAddress			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMemoryAddressableRangeAccess , DiagnosticMemoryByAddress , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
requestUpload Class	DiagnosticRequestUploadClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestUpload in the given context.

Table 4.123: DiagnosticRequestUpload

Class	DiagnosticRequestUploadClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress			
Note	This meta-class contains attributes shared by all instances of the "Request Upload" diagnostic service. Tags: atp.recommendedPackage=DiagnosticMemoryByAdresss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.124: DiagnosticRequestUploadClass

[TPS_DEXT_01028] RequestUpload does not define any sub-functions

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00017](#), [RS_DEXT_00051](#)

[The diagnostic service `RequestUpload` does not define any sub-functions, therefore the value of `DiagnosticRequestUpload.category` does not need to be constrained.]

4.3.8.16 RequestFileTransfer

This chapter describes the modeling of diagnostic services `RequestFileTransfer` (0x38). The purpose of the service is the triggering of the transfer of a *file* from or to the AUTOSAR diagnostic stack.

Please note that there is nothing to configure for `DiagnosticRequestFileTransfer` beyond its mere existence.

[TPS_DEXT_01090] Diagnostic service RequestFileTransfer does not define any sub-functions

Upstream requirements: [RS_DEXT_00057](#)

[The diagnostic service `RequestFileTransfer` does not define any sub-functions. Therefore, the usage of the attribute `category` is not constrained for meta-class `DiagnosticRequestFileTransfer`.]

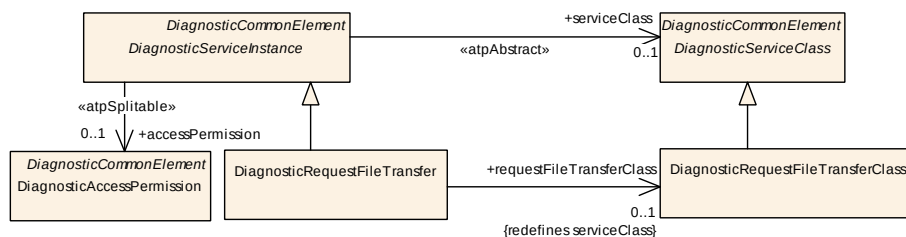


Figure 4.44: Modeling of diagnostic service RequestFileTransfer (0x38)

Class	DiagnosticRequestFileTransfer			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::RequestFileTransfer			
Note	This diagnostic service instance implements the UDS service 0x38. Tags: atp.recommendedPackage=DiagnosticRequestFileTransfers			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
requestFileTransferClass	DiagnosticRequestFileTransferClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestFileTransfer in the given context.

Table 4.125: DiagnosticRequestFileTransfer

Class	DiagnosticRequestFileTransferClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::DiagnosticService::RequestFileTransfer			
Note	This meta-class contains attributes shared by all instances of the "Request File transfer" diagnostic service. Tags: atp.recommendedPackage=DiagnosticRequestFileTransfers			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.126: DiagnosticRequestFileTransferClass

4.3.9 OBD Diagnostic Services supported by AUTOSAR

Support for diagnostic services for on-board diagnostics (OBD) (see [19, ISO 15031-5]) requires the definition of further meta-classes similar to e.g. [DiagnosticDataIdentifier](#) or [DiagnosticRoutine](#).

[TPS_DEXT_01092] Semantics of [DiagnosticParameterIdentifier](#)

Upstream requirements: [RS_DEXT_00068](#)

[The meta-class [DiagnosticParameterIdentifier](#) is used to reflect the concept of the so-called Parameter Identifiers (PID) in the diagnostic extract. A [DiagnosticParameterIdentifier](#) defines the following properties:

- Each [DiagnosticParameterIdentifier](#) gets a numerical ID carried in the attribute [DiagnosticParameterIdentifier.id](#).
- [DiagnosticParameterIdentifier](#) may also contain a so-called *Support Info Byte*, modeled as [DiagnosticSupportInfoByte](#).

- The definition of a `DiagnosticParameterIdentifier` also contains a list of data associated with the PID. This list is modeled as an aggregation of `DiagnosticParameter`.

]

As already mentioned in [TPS_DEXT_01092], the `DiagnosticParameterIdentifier` shall not be confused with the `DiagnosticParameter`. The latter is used “inside” the definition of `DiagnosticParameterIdentifier`, but also in `DiagnosticDataIdentifier` or `DiagnosticRoutine`, to define one (out of potentially many) piece of information held in the scope of a `DiagnosticParameterIdentifier`.

[constr_1447] Restrictions for the value of `DiagnosticParameterIdentifier.id`

Imposition time: IT_Dext

[The values 0x00, 0x20, 0x40, 0x60, 0x80, 0xA0, 0xC0, and 0xE0 are not allowed to appear in the value of `DiagnosticParameterIdentifier.id`.]

[constr_1448] Interval of `DiagnosticParameterIdentifier.id`

Imposition time: IT_Dext

[The allowed interval for values of `DiagnosticParameterIdentifier.id` shall not exceed [0..255].]

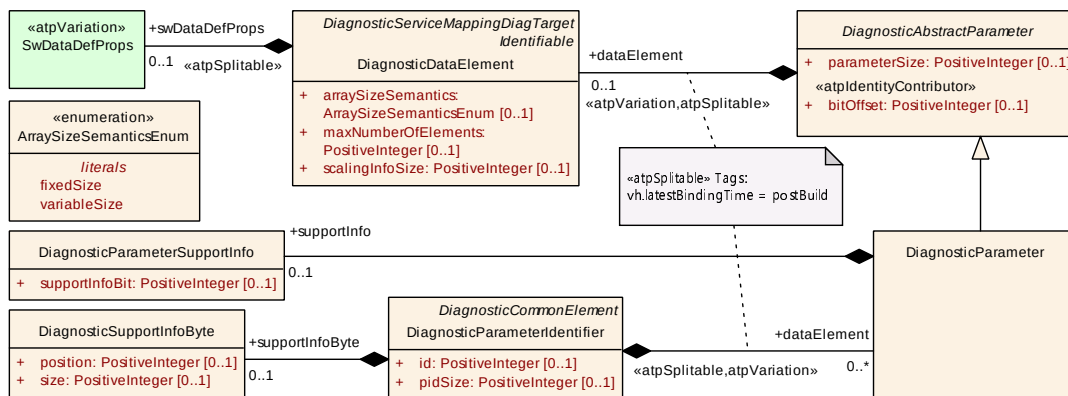


Figure 4.45: Modeling of the `DiagnosticParameterIdentifier`

[constr_10370] Restriction regarding the role `DiagnosticParameterIdentifier.dataElement`

Imposition time: IT_Dext

[A `DiagnosticParameter` that is aggregated by a `DiagnosticParameterIdentifier` in the role `dataElement` shall not aggregate in the role `ident` a `DiagnosticParameterIdent` that in turn aggregates in the role `subElement` a `DiagnosticParameterElement`.]

The rationale for [constr_10370] is that the usage of `DiagnosticParameter` in the context of the `DiagnosticParameterIdentifier` is typically limited to a few primitive values does not have a need for nested structured `DiagnosticParameter`.

[constr_1449] PID shall only carry a fixed-length collection of data

Imposition time: IT_Dext

[The value of `DiagnosticParameterIdentifier.dataElement.dataElement.arraySizeSemantics` shall not be set to `variableSize`.]

[constr_1750] Existence of attribute `DiagnosticParameterIdentifier.pidSize`

Imposition time: IT_Dext

[Attribute `DiagnosticParameterIdentifier.pidSize` is only relevant if a gap exists at the end of the `DiagnosticParameterIdentifier`. If this gap does not exist, the size of the `DiagnosticParameterIdentifier` can be computed.]

Class	DiagnosticParameterIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class represents the ability to model a diagnostic parameter identifier (PID) for the purpose of executing on-board diagnostics (OBD). Tags: atp.recommendedPackage=DiagnosticParameterIdentifiers			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dataElement	DiagnosticParameter	*	aggr	This represents the data carried by the DiagnosticParameterIdentifier. Stereotypes: atp.Splittable; atp.Variation Tags: atp.Splitkey=dataElement.bitOffset, dataElement.ident.shortName, dataElement.variationPoint.shortLabel vh.latestBindingTime=postBuild
id	PositiveInteger	0..1	attr	This is the numerical identifier used to identify the DiagnosticParameterIdentifier in the scope of diagnostic workflow (see SAE J1979-DA).





Class	DiagnosticParameterIdentifier			
pidSize	PositiveInteger	0..1	attr	The size of the entire PID can be greater than the sum of the data elements because padding might be applied. Unit: byte.
supportInfoByte	DiagnosticSupportInfoByte	0..1	aggr	This represents the supported information associated with the DiagnosticParameterIdentifier.

Table 4.127: DiagnosticParameterIdentifier

[constr_1819] Existence of attribute [DiagnosticParameterIdentifier.id](#)

Imposition time: IT_Dext

[For each [DiagnosticParameterIdentifier](#), attribute `id` shall exist.]

[constr_10545] Existence of [DiagnosticParameterIdentifier.dataElement](#).

Imposition time: IT_Dext

[For each [DiagnosticParameterIdentifier](#), at least one aggregation of [DiagnosticParameter](#) in the role [DiagnosticParameterIdentifier.dataElement](#) shall exist.]

Class	DiagnosticParameterSupportInfo			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This represents a way to define which bit of the supportInfo is representing this part of the PID			
Base	ARObject			
Aggregated by	DiagnosticParameter.supportInfo			
Attribute	Type	Mult.	Kind	Note
supportInfoBit	PositiveInteger	0..1	attr	defines the bit in the SupportInfo byte, which represents the PID DataElement pidSize / position / size. Unit: byte.

Table 4.128: DiagnosticParameterSupportInfo

Class	DiagnosticSupportInfoByte			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class defines the support information (typically byte A) to declare the usability of the Data Elements within the so-called packeted PIDs (e.g. PID\$68).			
Base	ARObject			
Aggregated by	DiagnosticDataIdentifier.supportInfoByte , DiagnosticParameterIdentifier.supportInfoByte			
Attribute	Type	Mult.	Kind	Note
position	PositiveInteger	0..1	attr	This represents the position of the supportInfo in the PID. Unit: byte.
size	PositiveInteger	0..1	attr	This represents the size of the supportInfo within the PID. Unit: byte.

Table 4.129: DiagnosticSupportInfoByte

4.3.9.1 OBD Mode 0x01 (RequestCurrentPowertrainDiagnosticData)

The service `RequestCurrentPowertrainDiagnosticData` is modeled in [Figure 4.46](#).

[TPS_DEXT_01125] Support for diagnostic service `RequestCurrentPowertrainDiagnosticData`

Upstream requirements: [RS_DEXT_00069](#)

[The modeling support for the OBD diagnostic service `RequestCurrentPowertrainDiagnosticData` utilizes the new meta-class `DiagnosticParameterIdentifier` such that the meta-class `DiagnosticRequestCurrentPowertrainData` maintains a reference to `DiagnosticParameterIdentifier` in the role `pid`.]

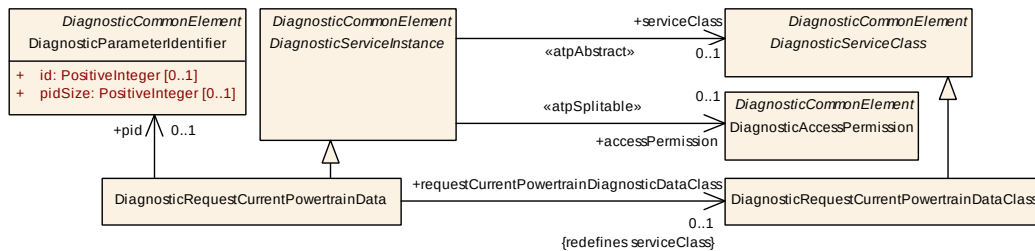


Figure 4.46: Modeling of diagnostic service for OBD Mode 0x01

Class	DiagnosticRequestCurrentPowertrainData			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x01_RequestCurrentPowertrainDiagnosticData			
Note	This meta-class represents the ability to model an instance of the OBD mode 0x01 service. Tags: atp.recommendedPackage=DiagnosticRequestCurrentPowertrainDatas			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
pid	DiagnosticParameterIdentifier	0..1	ref	This represents the PID associated with this instance of the OBD mode 0x01 service.
requestCurrentPowertrainDiagnosticDataClass	DiagnosticRequestCurrentPowertrainDataClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestCurrentPowertrainData in the given context.

Table 4.130: DiagnosticRequestCurrentPowertrainData

[constr_1820] Existence of reference `DiagnosticRequestCurrentPowertrainData.pid`

Imposition time: `IT_Dext`

[For each `DiagnosticRequestCurrentPowertrainData`, the reference to `DiagnosticParameterIdentifier` in the role `pid` shall exist.]

Class	DiagnosticRequestCurrentPowertrainDataClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x01_RequestCurrentPowertrainDiagnosticData			
Note	This meta-class represents the ability to define common properties for all instances of the "Request current Powertrain Data" OBD diagnostic service. Tags: atp.recommendedPackage=DiagnosticRequestCurrentPowertrainDatas			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
—	—	—	—	—

Table 4.131: DiagnosticRequestCurrentPowertrainDataClass

4.3.9.2 OBD Mode 0x02 (RequestPowertrainFreezeFrameData)

The service `RequestPowertrainFreezeFrameData` is modeled in [Figure 4.47](#).

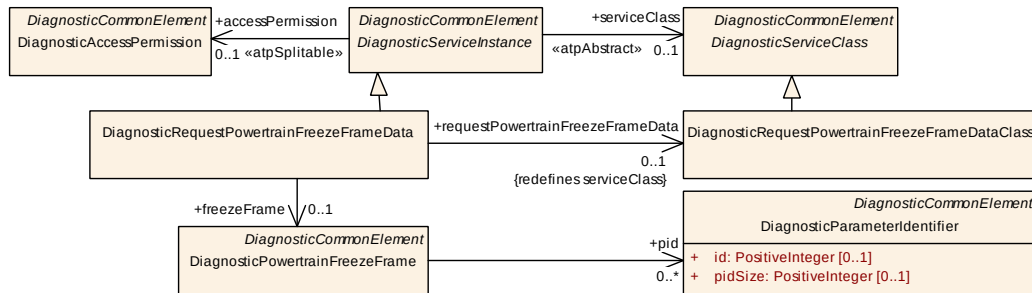


Figure 4.47: Modeling of diagnostic service for OBD Mode 0x02

[TPS_DEXT_01126] Support of OBD service `RequestPowertrainFreezeFrameData`

Upstream requirements: [RS_DEXT_00070](#)

[The modeling support for the OBD diagnostic service `RequestPowertrainFreezeFrameData` utilizes the new meta-class `DiagnosticParameterIdentifier` such that the meta-class `DiagnosticRequestCurrentPowertrainData` maintains a reference to `DiagnosticParameterIdentifier` in the role `pid`.]

Class	DiagnosticRequestPowertrainFreezeFrameData			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x02_RequestPowertrainFreezeFrameData			
Note	This meta-class represents the ability to model an instance of the OBD mode 0x02 service. Tags: atp.recommendedPackage=DiagnosticPowertrainFreezeFrames			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
freezeFrame	DiagnosticPowertrainFreezeFrame	0..1	ref	This represents the associated freeze-frame.
request Powertrain FreezeFrame Data	DiagnosticRequestPowertrainFreezeFrameDataClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestPowertrainFreezeFrameData in the given context.

Table 4.132: DiagnosticRequestPowertrainFreezeFrameData

[constr_1821] Existence of reference [DiagnosticRequestPowertrainFreezeFrameData.freezeFrame](#)*Imposition time:* IT_Dext

[For each [DiagnosticRequestPowertrainFreezeFrameData](#), the reference to [DiagnosticParameterIdentifier](#) in the role [freezeFrame](#) shall exist.]

Class	DiagnosticRequestPowertrainFreezeFrameDataClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x02_RequestPowertrainFreezeFrameData			
Note	This meta-class represents the ability to define common properties for all instances of the "Request Powertrain Freeze Frame Data" OBD diagnostic service. Tags: atp.recommendedPackage=DiagnosticPowertrainFreezeFrames			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.133: DiagnosticRequestPowertrainFreezeFrameDataClass

Class	DiagnosticPowertrainFreezeFrame			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x02_RequestPowertrainFreezeFrameData			
Note	This meta-class represents a powertrain-related freeze-frame. In theory, this meta-class would need an additional id attribute. However, legal regulations requires only a single value for this attribute anyway. Tags: atp.recommendedPackage=DiagnosticPowertrainFreezeFrames			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			





Class	DiagnosticPowertrainFreezeFrame			
Attribute	Type	Mult.	Kind	Note
pid	DiagnosticParameter Identifier	*	ref	This represents the PID associated with this instance of the OBD mode 0x02 service.

Table 4.134: DiagnosticPowertrainFreezeFrame

4.3.9.3 OBD Mode 0x03 / 0x07 (RequestEmissionRelatedDiagnosticTroubleCodes)

[TPS_DEXT_01127] Semantics of meta-class DiagnosticRequestEmissionRelatedDTC

Upstream requirements: RS_DEXT_00071

[Two very similar OBD services, subsumed as RequestEmissionRelatedDiagnosticTroubleCodes are supported by means of the meta-class DiagnosticRequestEmissionRelatedDTC.]

The modeling is sketched in Figure 4.48.

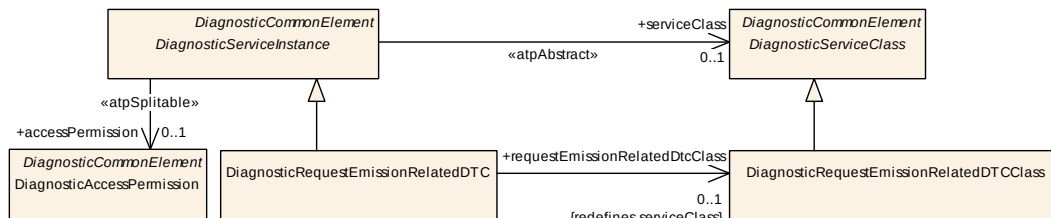


Figure 4.48: Modeling of diagnostic service for OBD Modes 0x03, 0x07

Class	DiagnosticRequestEmissionRelatedDTC			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x03_0x07_RequestEmissionRelatedDTC			
Note	This meta-class represents the ability to model an instance of the OBD mode 0x03/0x07 service. Tags: atp.recommendedPackage=DiagnosticRequestEmissionRelatedDTCs			
Base	ARElement, ARObjct, CollectableElement, DiagnosticCommonElement, DiagnosticServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
request Emission RelatedDtc Class	DiagnosticRequest EmissionRelatedDTC Class	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestEmissionRelatedDTC in the given context.

Table 4.135: DiagnosticRequestEmissionRelatedDTC

Class	DiagnosticRequestEmissionRelatedDTCClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x03_0x07_RequestEmissionRelatedDTC			
Note	This meta-class represents the ability to define common properties for all instances of the "Request Emission Related DTC" OBD diagnostic service. Tags: atp.recommendedPackage=DiagnosticRequestEmissionRelatedDTCs			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, DiagnosticServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.136: DiagnosticRequestEmissionRelatedDTCClass

4.3.9.4 OBD Mode 0x04 (ClearResetEmissionRelatedDiagnosticInformation)

[TPS_DEXT_01128] Semantics of meta-class DiagnosticClearResetEmissionRelatedInfo

Upstream requirements: RS_DEXT_00072

[The OBD diagnostic service ClearResetEmissionRelatedDiagnosticInformation is supported by means of the meta-class DiagnosticClearResetEmissionRelatedInfo.]

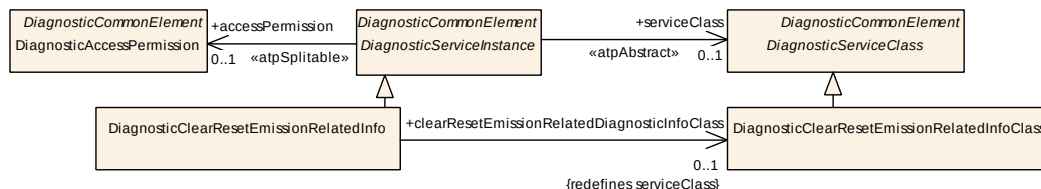


Figure 4.49: Modeling of diagnostic service for OBD Mode 0x04

The modeling is sketched in Figure 4.49.

Class	DiagnosticClearResetEmissionRelatedInfo			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x04_ClearResetEmissionRelatedInfo			
Note	This meta-class represents the ability to model an instance of the OBD mode 0x04 service. Tags: atp.recommendedPackage=DiagnosticClearResetEmissionRelatedInfos			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, DiagnosticServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–





Class	DiagnosticClearResetEmissionRelatedInfo			
clearResetEmissionRelatedDiagnosticInfoClass	DiagnosticClearResetEmissionRelatedInfoClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticClearResetEmissionRelatedInfo in the given context.

Table 4.137: DiagnosticClearResetEmissionRelatedInfo

Class	DiagnosticClearResetEmissionRelatedInfoClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x04_ClearResetEmissionRelatedInfo			
Note	This meta-class represents the ability to define common properties for all instances of the "Clear Reset Emission Related Data" OBD diagnostic service. Tags: atp.recommendedPackage=DiagnosticClearResetEmissionRelatedInfos			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.138: DiagnosticClearResetEmissionRelatedInfoClass

4.3.9.5 OBD Mode 0x06 (RequestOnBoardMonitoringTestResults)

[TPS_DEXT_01129] Support for OBD diagnostic service RequestOnBoardMonitoringTestResults

Upstream requirements: [RS_DEXT_00073](#)

[The OBD diagnostic service RequestOnBoardMonitoringTestResults is supported by means of meta-class [DiagnosticRequestOnBoardMonitoringTestResults](#) that refers to the representation of the test result modeled as meta-class [DiagnosticTestResult](#)]

The modeling is sketched in [Figure 4.50](#).

In general, the mode 0x06 supports the querying of supported test identifiers from a given server. However, this functionality is not supported in AUTOSAR, hence the existence of [\[constr_1462\]](#).

[constr_1462] Restrictions for the value of [DiagnosticTestResult.testIdentifier.id](#)

Imposition time: [IT_Dext](#)

[The values 0x00, 0x20, 0x40, 0x60, 0x80, 0xA0, 0xC0, and 0xE0 are not allowed to appear in the value of [DiagnosticTestResult.testIdentifier.id](#).]

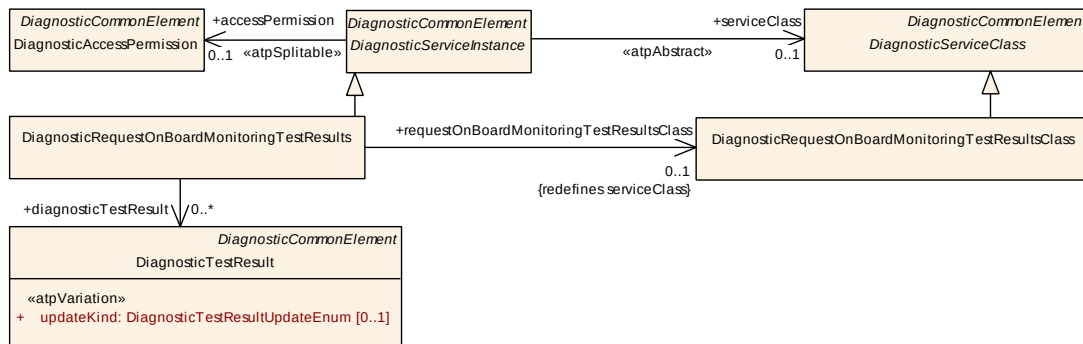


Figure 4.50: Modeling of diagnostic service for OBD Mode 0x06

[TPS_DEXT_01141] Definition of a collection of test results

Upstream requirements: [RS_DEXT_00073](#)

It is possible to assign a collection of test results to the mode 0x06.

For this purpose, `DiagnosticRequestOnBoardMonitoringTestResults` shall refer to multiple `DiagnosticTestResults` in the role `diagnosticTestResult` that in turn refers to the identical `DiagnosticMeasurementIdentifier` in the role `monitoredIdentifier` (taken as the identification of related test results in downstream processing of a diagnostic extract). |

Class	DiagnosticRequestOnBoardMonitoringTestResults			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x06_RequestOnBoardMonitoringTestResults			
Note	This meta-class represents the ability to model an instance of the OBD mode 0x06 service. Tags: atp.recommendedPackage=DiagnosticRequestOnBoardMonitoringTestResultss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnosticTestResult	DiagnosticTestResult	*	ref	This reference identifies the applicable collection of test identifiers for setting up a request message for mode 0x06.
requestOnBoardMonitoringTestResultsClass	DiagnosticRequestOnBoardMonitoringTestResultsClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestOnBoardMonitoringTestResults in the given context.

Table 4.139: DiagnosticRequestOnBoardMonitoringTestResults

Class	DiagnosticRequestOnBoardMonitoringTestResultsClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x06_RequestOnBoardMonitoringTestResults			
Note	This meta-class represents the ability to define common properties for all instances of the "Request On-Board Monitoring Test Results" OBD diagnostic service. Tags: atp.recommendedPackage=DiagnosticRequestOnBoardMonitoringTestResultss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.140: DiagnosticRequestOnBoardMonitoringTestResultsClass

4.3.9.6 OBD Mode 0x08 (RequestControlOfOnBoardDevice)

[TPS_DEXT_01130] Support of OBD diagnostic service RequestControlOfOnBoardDevice

Upstream requirements: [RS_DEXT_00074](#)

[The [OBD](#) diagnostic service [RequestControlOfOnBoardDevice](#) is supported by means of meta-class [DiagnosticRequestControlOfOnBoardDevice](#) that in turn refers to a [DiagnosticTestRoutineIdentifier](#) in the role [testId](#)]

The modeling is sketched in [Figure 4.51](#).

In general, the mode 0x06 supports the querying of supported test routine identifiers from a given server. However, this functionality is not supported in AUTOSAR, hence the existence of [\[constr_1461\]](#).

[constr_1461] Restrictions for the value of [DiagnosticTestRoutineIdentifier.id](#)

Imposition time: [IT_Dext](#)

[The values 0x00, 0x20, 0x40, 0x60, 0x80, 0xA0, 0xC0, and 0xE0 are not allowed to appear in the value of [DiagnosticTestRoutineIdentifier.id](#).]

Class	DiagnosticRequestControlOfOnBoardDevice			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x08_RequestControlOfOnBoardDevice			
Note	This meta-class represents the ability to model an instance of the OBD mode 0x08 service. Tags: atp.recommendedPackage=DiagnosticRequestControlOfOnBoardDevices			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceInstance , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			





Class	DiagnosticRequestControlOfOnBoardDevice			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
requestControlOfOnBoardDeviceClass	DiagnosticRequestControlOfOnBoardDeviceClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestControlOfOnBoardDevice in the given context.
testId	DiagnosticTestRoutineIdentifier	0..1	ref	This represents the test Id for the mode 0x08.

Table 4.141: DiagnosticRequestControlOfOnBoardDevice

[constr_1822] Existence of reference **DiagnosticRequestControlOfOnBoardDevice.testId**

Imposition time: IT_Dext

[For each **DiagnosticRequestControlOfOnBoardDevice**, the reference to **DiagnosticParameterIdentifier** in the role **testId** shall exist.]

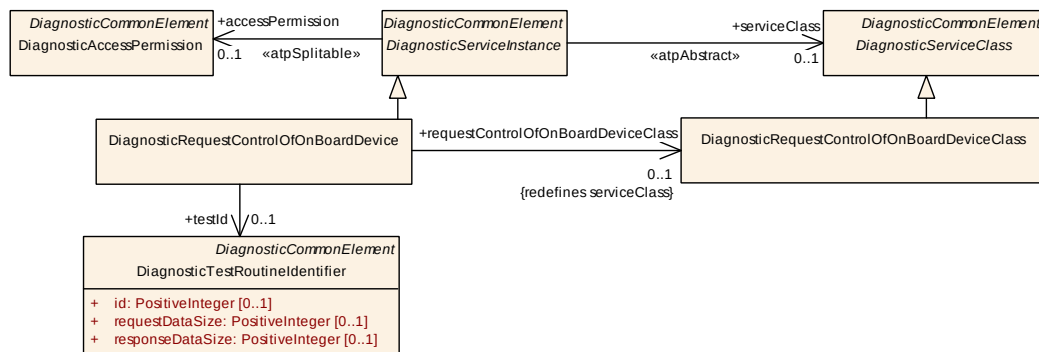


Figure 4.51: Modeling of diagnostic service for OBD Mode 0x08

Class	DiagnosticRequestControlOfOnBoardDeviceClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x08_RequestControlOfOnBoardDevice			
Note	This meta-class represents the ability to define common properties for all instances of the "Request Control Of On-Board Device" OBD diagnostic service. Tags: atp.recommendedPackage=DiagnosticRequestControlOfOnBoardDevices			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, DiagnosticServiceClass, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
—	—	—	—	—

Table 4.142: DiagnosticRequestControlOfOnBoardDeviceClass

Class	DiagnosticTestRoutineIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x08_RequestControlOfOnBoard Device			
Note	This represents the test id of the DiagnosticTestIdentifier. Tags: atp.recommendedPackage=DiagnosticTestRoutineIdentifier			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , Multilanguage Referrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
id	PositiveInteger	0..1	attr	This represents the numerical id of the DiagnosticTest Identifier (see SAE J1979-DA).
requestDataSize	PositiveInteger	0..1	attr	This represents the specified data size for the request message. Unit: byte.
responseDataSize	PositiveInteger	0..1	attr	This represents the specified data size for the response message. Unit:byte.

Table 4.143: DiagnosticTestRoutineIdentifier

[constr_1823] Existence of attribute [DiagnosticTestRoutineIdentifier.id](#)

Imposition time: IT_Dext

[For each [DiagnosticTestRoutineIdentifier](#), attribute [id](#) shall exist.]

[constr_1824] Existence of attribute [DiagnosticTestRoutineIdentifier.requestDataSize](#)

Imposition time: IT_Dext

[For each [DiagnosticTestRoutineIdentifier](#), attribute [requestDataSize](#) shall exist.]

[constr_1825] Existence of attribute [DiagnosticTestRoutineIdentifier.responseDataSize](#)

Imposition time: IT_Dext

[For each [DiagnosticTestRoutineIdentifier](#), attribute [responseDataSize](#) shall exist.]

4.3.9.7 OBD Mode 0x09 (RequestVehicleInformation)

[TPS_DEXT_01131] Support for OBD diagnostic service RequestVehicleInformation

Upstream requirements: [RS_DEXT_00075](#)

[The [OBD](#) diagnostic service [RequestVehicleInformation](#) is supported by means of meta-class [DiagnosticRequestVehicleInfo](#) that in turn references a [DiagnosticInfoType](#) in the role [infoType](#).]

The modeling is sketched in Figure 4.52.

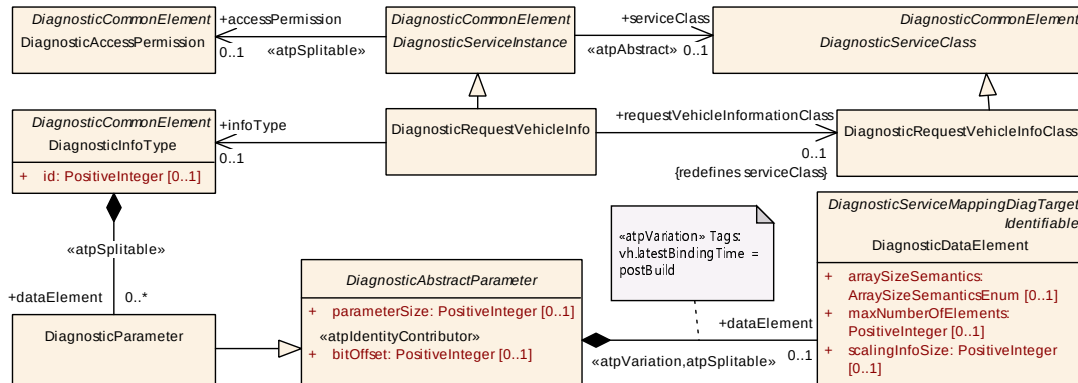


Figure 4.52: Modeling of diagnostic service for OBD Mode 0x09

[constr_1460] Restrictions for the value of DiagnosticInfoType.id

Imposition time: IT_Dext

[The values 0x00, 0x20, 0x40, 0x60, 0x80, 0xA0, 0xC0, and 0xE0 are not allowed to appear in the value of DiagnosticInfoType.id.]

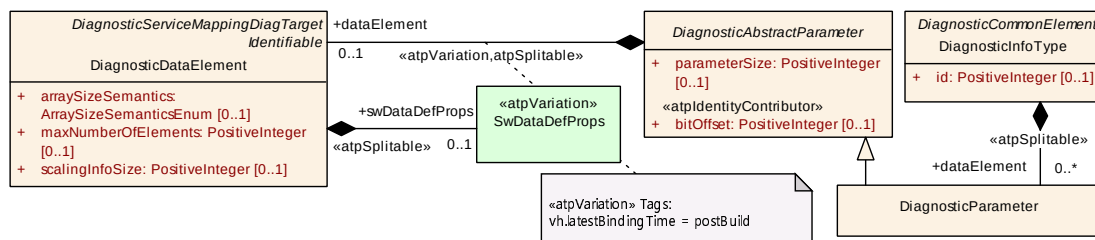


Figure 4.53: Modeling of DiagnosticInfoType

[constr_1749] Existence of DiagnosticInfoType.dataElement

Imposition time: IT_Dext

[For each DiagnosticInfoType, at least one aggregation of DiagnosticParameter in the role dataElement shall exist.]

Class	DiagnosticRequestVehicleInfo			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x09_RequestVehicleInformation			
Note	This meta-class represents the ability to model an instance of the OBD mode 0x09 service. Tags: atp.recommendedPackage=DiagnosticRequestVehicleInfos			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, DiagnosticServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	DiagnosticRequestVehicleInfo			
infoType	DiagnosticInfoType	0..1	ref	This represents the info type associated with the mode 0x09 service.
requestVehicleInformationClass	DiagnosticRequestVehicleInfoClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequesVehicleInfo in the given context.

Table 4.144: DiagnosticRequestVehicleInfo

[constr_1826] Existence of reference [DiagnosticRequestVehicleInfo.infoType](#)

Imposition time: IT_Dext

[For each [DiagnosticRequestVehicleInfo](#), the reference to [DiagnosticParameterIdentifier](#) in the role [infoType](#) shall exist.]

Class	DiagnosticRequestVehicleInfoClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x09_RequestVehicleInformation			
Note	This meta-class represents the ability to define common properties for all instances of the "Request Vehicle Info" OBD diagnostic service. Tags: atp.recommendedPackage=DiagnosticRequestVehicleInfos			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.145: DiagnosticRequestVehicleInfoClass

Class	DiagnosticInfoType			
Package	M2::AUTOSARTemplates::DiagnosticExtract::CommonDiagnostics			
Note	This meta-class represents the ability to model an OBD info type. Tags: atp.recommendedPackage=DiagnosticInfoTypes			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dataElement	DiagnosticParameter	*	aggr	This represents the data associated with the enclosing DiagnosticInfoType. Stereotypes: atp.Splitable Tags: atp.Splitkey=dataElement.bitOffset, dataElement.ident.shortName
id	PositiveInteger	0..1	attr	This attribute represents the value of InfoType (see SAE J1979-DA).

Table 4.146: DiagnosticInfoType

[constr_1827] Existence of attribute `DiagnosticInfoType.id`

Imposition time: `IT_Dext`

[For each `DiagnosticInfoType`, attribute `id` shall exist.]

4.3.9.8 OBD Mode 0x0A (RequestEmissionRelatedDiagnosticTroubleCodesPermanentStatus)

[TPS_DEXT_01132] Support for OBD diagnostic service RequestEmissionRelatedDiagnosticTroubleCodesPermanentStatus

Upstream requirements: `RS_DEXT_00076`

[The OBD diagnostic service RequestEmissionRelatedDiagnosticTroubleCodesPermanentStatus is supported by means of meta-class `DiagnosticRequestEmissionRelatedDTCPermanentStatus`.]

The modeling is sketched in Figure 4.54.

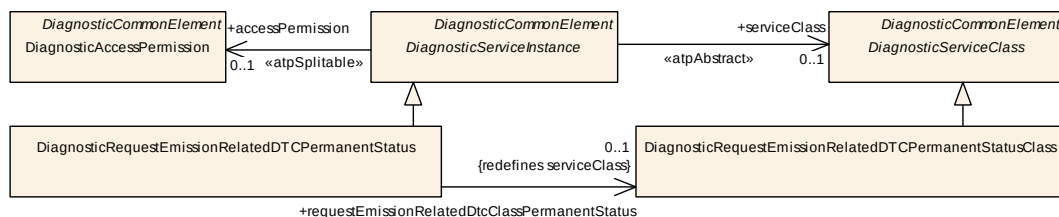


Figure 4.54: Modeling of diagnostic service for OBD Modes 0x0A

Class	DiagnosticRequestEmissionRelatedDTCPermanentStatus			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x0A_RequestEmissionRelatedDTCPermanentStatus			
Note	This meta-class represents the ability to model an instance of the OBD mode 0x0A service. Tags: atp.recommendedPackage=DiagnosticRequestEmissionRelatedDTCPermanentStatuss			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, DiagnosticServiceInstance, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
requestEmissionRelatedDtcClassPermanentStatus	DiagnosticRequestEmissionRelatedDTCPermanentStatusClass	0..1	ref	This reference substantiates that abstract reference in the role serviceClass for this specific concrete class. Thereby, the reference represents the ability to access shared attributes among all DiagnosticRequestEmissionRelatedDTCPermanentStatus in the given context.

Table 4.147: DiagnosticRequestEmissionRelatedDTCPermanentStatus

Class	DiagnosticRequestEmissionRelatedDTCPermanentStatusClass			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dcm::ObdService::Mode_0x0A_RequestEmissionRelatedDTCPermanentStatus			
Note	This meta-class represents the ability to define common properties for all instances of the "Request Emission Related DTC Permanent Status" OBD diagnostic service. Tags: atp.recommendedPackage=DiagnosticRequestEmissionRelatedDTCPermanentStatuss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticServiceClass , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.148: DiagnosticRequestEmissionRelatedDTCPermanentStatusClass

4.3.10 UDS Diagnostic Services for supporting WWH-OBD

[TPS_DEXT_01133] Support for WWH-OBD within the diagnostic extract

Upstream requirements: [RS_DEXT_00077](#)

[A support for [WWH-OBD](#) (see [20, ISO 27145-3]) within the diagnostic extract involves the usage of the following [UDS](#) services and their respective subfunctions:

DiagnosticReadDataByIdentifier (0x22) where the value of attribute [DiagnosticDataIdentifier.id](#) inside the interval defined by the [OBD](#) range, i.e.:

- F400-F4FF
- F600-F6FF
- F800-F8FF

Please note that the usage of this diagnostic service in an implementation of [WWH-OBD](#) corresponds to the existence of a [DiagnosticValueNeeds](#) on the side of an [AtomicSwComponentType](#) that interacts with the diagnostic service.

DiagnosticRoutineControl (0x31) where the value of attribute [DiagnosticRoutine.id](#) is inside the interval defined by the [OBD](#) range, i.e. E000-E0FF. Please note that the usage of this diagnostic service in an implementation of [WWH-OBD](#) corresponds to the existence of a [DiagnosticRoutineNeeds](#) on the side of an [AtomicSwComponentType](#) that implements routines executed within the diagnostic service.

DiagnosticClearDiagnosticInformation (0x14)

DiagnosticReadDTCInformation (0x19) with the subfunctions (0x4, 0x6, 0x42)

]

When used in a [WWH-OBD](#) environment, meta-class [DiagnosticRoutine](#) utilizes the attribute [routineInfo](#) to support the configuration of the diagnostic response. In a

pure UDS environment (except in an application of [18, ISO 26021-2]) the attribute has no semantics.

4.4 Diagnostic Event Handling

4.4.1 Introduction

This sub-chapter describes the meta-model elements that define the handling of and the functionality around diagnostic events.

In a standard AUTOSAR Basic Software architecture, the definitions based on the model elements described in this sub-chapter are realized by the Diagnostic Event Manager (Dem) module.

The following figure gives an overview on the model elements related to the diagnostic event functionality.

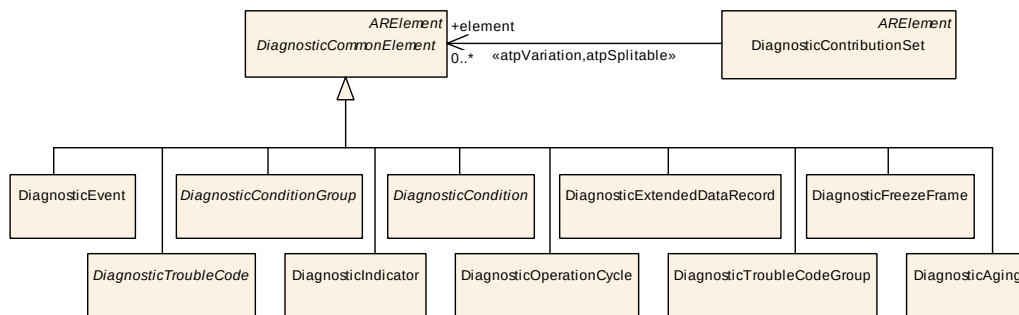


Figure 4.55: Common model elements relevant for the Dem

For the definition of the diagnostic event functionality, a number of model elements are derived from `DiagnosticCommonElement`. These elements are described in the following sub-chapters.

4.4.2 DiagnosticEvent

4.4.2.1 Overview

[TPS_DEXT_01083] Semantics of a `DiagnosticEvent`

Upstream requirements: [RS_DEXT_00023](#)

[A `DiagnosticEvent` - the atomic unit handled by the Dem module - has to be defined together with its properties which affect the event handling behavior and possible interfaces to software-components.]

[Figure 4.56](#) depicts the definition of `DiagnosticEvent` together with its properties.

The `DiagnosticExtract` allows the definition of an arbitrary number of `DiagnosticEvents`.

Although the exchange of a `DiagnosticExtract` between companies usually involves `DiagnosticEvents` related to SWC functionality, the event kind BSW is also supported in order to enable definition of handling of BSW events (e.g. definition of associated `DiagnosticTroubleCode`).

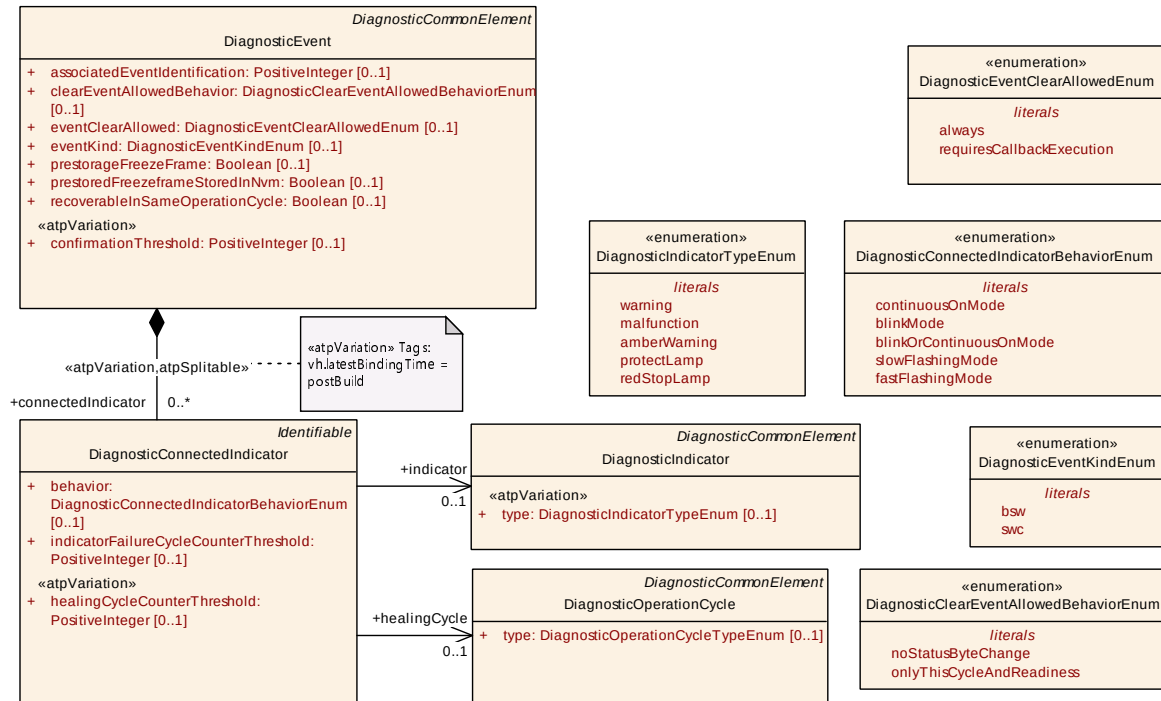


Figure 4.56: Modeling of DiagnosticEvent

[TPS_DEXT_03011] Clearing request for a `DiagnosticEvent`

Upstream requirements: [RS_DEXT_00023](#)

[Furthermore, a clearing request for a `DiagnosticEvent` might require invocation of a callback to a SWC in order to allow or to prohibit the clearing operation.

The expectation on this callback interface can be expressed using the attribute `eventClearAllowed`:

- `always` indicates that a clearing request for the `DiagnosticEvent` shall **unconditionally be executed**.
- In case of `requiresCallbackExecution`, the **execution of a callback shall decide whether the clearing is permitted**.

In other words, the implementation of this decision is up to the developer of the corresponding `AtomicSwComponentType`.

The latter shall define a [SwcServiceDependency](#) with appropriate [DiagnosticEventNeeds](#) and a [RoleBasedPortAssignment](#) where the value of the attribute `role` is set to `CallbackClearEventAllowed`.

]

Class	DiagnosticEvent			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent			
Note	This element is used to configure DiagnosticEvents. Tags: atp.recommendedPackage=DiagnosticEvents			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , Multilanguage , Referrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
associated Event Identification	PositiveInteger	0..1	attr	This attribute represents the identification number that is associated with the enclosing DiagnosticEvent and allows to identify it when placed into a snapshot record or extended data record storage. This value can be reported as internal data element in snapshot records or extended data records.
clearEvent Allowed Behavior	DiagnosticClearEvent AllowedBehaviorEnum	0..1	attr	This attribute defines the resulting UDS status byte for the related event, which shall not be cleared according to the ClearEventAllowed callback
confirmation Threshold	PositiveInteger	0..1	attr	This attribute defines the number of operation cycles with a failed result before a confirmed DTC is set to 1. The semantic of this attribute is a by "1" increased value compared to the confirmation threshold of the "trip counter" mentioned in ISO 14229-1 in figure D.4. A value of "1" defines the immediate confirmation of the DTC along with the first reported failed. This is also sometimes called "zero trip DTC". A value of "2" defines a DTC confirmation in the operation cycle after the first occurred failed. A value of "2" is typically used in the US for OBD DTC confirmation. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
connected Indicator	DiagnosticConnected Indicator	*	aggr	Event specific description of Indicators. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=connectedIndicator.shortName, connectedIndicator.variationPoint.shortLabel vh.latestBindingTime=postBuild
eventClear Allowed	DiagnosticEventClear AllowedEnum	0..1	attr	This attribute defines whether the Dem has access to a "ClearEventAllowed" callback.
eventKind	DiagnosticEventKind Enum	0..1	attr	This attribute is used to distinguish between SWC and BSW events.
prestorage FreezeFrame	Boolean	0..1	attr	This attribute describes whether the Prestorage of Freeze Frames is supported by the assigned event or not. true: Prestorage of FreezeFrames is supported false: Prestorage of FreezeFrames is not supported





Class	DiagnosticEvent			
prestoredFreezeFrameStoredInNvm	Boolean	0..1	attr	If the Event uses a prestored freeze-frame (using the operations PrestoreFreezeFrame and ClearPrestoredFreezeFrame of the service interface DiagnosticMonitor) this attribute indicates if the Event requires the data to be stored in non-volatile memory. TRUE = Dem shall store the prestored data in non-volatile memory, FALSE = Data can be lost at shutdown (not stored in Nvm)
recoverableInSameOperationCycle	Boolean	0..1	attr	If the attribute is set to true then reporting PASSED will reset the indication of a failed test in the current operation cycle. If the attribute is set to false then reporting PASSED will be ignored and not lead to a reset of the indication of a failed test.

Table 4.149: DiagnosticEvent

Enumeration	DiagnosticClearEventAllowedBehaviorEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent
Note	This enumeration defines the possible behavior for clear event allowed
Aggregated by	DiagnosticEvent.clearEventAllowedBehavior
Literal	Description
noStatusByteChange	The event status byte keeps unchanged. Tags: atp.EnumerationLiteralIndex=0
onlyThisCycleAndReadiness	The OperationCycle and readiness bits of the event status byte are reset. Tags: atp.EnumerationLiteralIndex=1

Table 4.150: DiagnosticClearEventAllowedBehaviorEnum

Class	RoleBasedPortAssignment			
Package	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::ServiceMapping			
Note	This class specifies an assignment of a role to a particular service port (RPortPrototype or PPort Prototype) of an AtomicSwComponentType. With this assignment, the role of the service port can be mapped to a specific ServiceNeeds element, so that a tool is able to create the correct connector.			
Base	ARObject			
Aggregated by	NvBlockDescriptor.clientServerPort, SwcServiceDependency.assignedPort			
Attribute	Type	Mult.	Kind	Note
portPrototype	PortPrototype	0..1	ref	Service PortPrototype used in the assigned role. This PortPrototype shall either belong to the same AtomicSw ComponentType as the SwcInternalBehavior which owns the ServiceDependency or to the same NvBlockSw ComponentType as the NvBlockDescriptor.
role	Identifier	0..1	attr	This is the role of the assigned Port in the given context. The value shall be a shortName of the Blueprint of a Port Interface as standardized in the Software Specification of the related AUTOSAR Service.

Table 4.151: RoleBasedPortAssignment

[TPS_DEXT_01085] DiagnosticEvent can be connected to one or multiple indicators*Upstream requirements:* RS_DEXT_00023

[A [DiagnosticEvent](#) can be connected to one or multiple indicators (modeled by means of aggregating [DiagnosticIndicator](#) in the role [connectedIndicator](#)) of a certain type and with certain behavior.]

Class	DiagnosticConnectedIndicator			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent			
Note	Description of indicators that are defined per DiagnosticEvent.			
Base	ARObject, Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	DiagnosticEvent.connectedIndicator			
Attribute	Type	Mult.	Kind	Note
behavior	DiagnosticConnectedIndicatorBehaviorEnum	0..1	attr	Behavior of the linked indicator.
healingCycle	DiagnosticOperationCycle	0..1	ref	The deactivation of indicators per event is defined as healing of a diagnostic event. The operation cycle in which the warning indicator will be switched off is defined here.
healingCycle Counter Threshold	PositiveInteger	0..1	attr	This attribute defines the number of healing cycles for the WarningIndicatorOffCriteria Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
indicator	DiagnosticIndicator	0..1	ref	Reference to the used indicator.
indicatorFailure CycleCounter Threshold	PositiveInteger	0..1	attr	This attribute defines the number of failure cycles for the WarningIndicatorOnCriteria. Please note that this attribute is not relevant for the Adaptive Platform.

Table 4.152: DiagnosticConnectedIndicator**[constr_1829] Existence of reference DiagnosticConnectedIndicator.indicator***Imposition time:* IT_Dext

[For each [DiagnosticConnectedIndicator](#), the reference to [DiagnosticIndicator](#) in the role [indicator](#) shall exist.]

[constr_1761] Existence of attribute DiagnosticConnectedIndicator.healingCycle*Imposition time:* IT_Dext

[[DiagnosticConnectedIndicator.healingCycle](#) shall **only exist** if the value of [DiagnosticConnectedIndicator.healingCycleCounterThreshold](#) is **not equal to 0**.]

Enumeration	DiagnosticEventClearAllowedEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent
Note	Denotes whether clearing of events is allowed.
Aggregated by	DiagnosticEvent.eventClearAllowed
Literal	Description
always	The clearing is allowed unconditionally. Tags: atp.EnumerationLiteralIndex=0
requiresCallback Execution	In case the clearing of a Diagnostic Event has to be allowed or prohibited through the SWC interface CallbackClearEventAllowed, the SWC has to indicate this by defining appropriate ServiceNeeds (i.e. DiagnosticEventNeeds). Tags: atp.EnumerationLiteralIndex=2

Table 4.153: DiagnosticEventClearAllowedEnum

Enumeration	DiagnosticEventKindEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent
Note	Applicability of the diagnostic event.
Aggregated by	DiagnosticEvent.eventKind
Literal	Description
bsw	The event is assigned to a BSW module. Tags: atp.EnumerationLiteralIndex=0
swc	The event is assigned to a SWC. Tags: atp.EnumerationLiteralIndex=1

Table 4.154: DiagnosticEventKindEnum

Enumeration	DiagnosticConnectedIndicatorBehaviorEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent
Note	Behavior of the indicator.
Aggregated by	DiagnosticConnectedIndicator.behavior
Literal	Description
blinkMode	The indicator blinks when the event has status FAILED. Tags: atp.EnumerationLiteralIndex=0
blinkOrContinuous OnMode	The indicator is active and blinks when the event has status FAILED. Tags: atp.EnumerationLiteralIndex=1
continuousOnMode	The indicator is active when the event has status FAILED. Tags: atp.EnumerationLiteralIndex=2
fastFlashingMode	Flash Indicator Lamp should be set to "Fast Flash". Tags: atp.EnumerationLiteralIndex=3
slowFlashingMode	Flash Indicator Lamp should be set to "Slow Flash". Tags: atp.EnumerationLiteralIndex=4

Table 4.155: DiagnosticConnectedIndicatorBehaviorEnum

4.4.2.2 Textual description

[TPS_DEXT_01067] Textually formulated content attached to [DiagnosticEvent](#)

Upstream requirements: [RS_DEXT_00023](#), [RS_DEXT_00045](#)

[The definition of a [DiagnosticEvent](#) also consists of textually formulated content that is formalized in structure but cannot be formalized in content.

The purpose of this content is to define e.g. a mature condition that relates to the specific [DiagnosticEvent](#).]

[TPS_DEXT_01068] Textual description with respect to the [DiagnosticEvent](#)

Upstream requirements: [RS_DEXT_00023](#), [RS_DEXT_00045](#)

[Textual description that has the character of requirements with respect to the [DiagnosticEvent](#) shall be provided by means of the meta-class [StructuredReq](#), i.e. by means of [introduction.structuredReq](#).]

Class	StructuredReq			
Package	M2::MSR::Documentation::BlockElements::RequirementsTracing			
Note	This represents a structured requirement. This is intended for a case where specific requirements for features are collected. Note that this can be rendered as a labeled list.			
Base	ARObject , DocumentViewSelectable , Identifiable , MultilanguageReferrable , Paginateable , Referrable , Traceable			
Aggregated by	DocumentationBlock.structuredReq			
Attribute	Type	Mult.	Kind	Note
appliesTo	StandardNameEnum	*	attr	This attribute represents the platform the requirement is assigned to. Tags: xml.namePlural=APPLIES-TO-DEPENDENCIES xml.sequenceOffset=25
conflicts	DocumentationBlock	0..1	aggr	This represents an informal specification of conflicts. Tags: xml.sequenceOffset=40
date	DateTime	1	attr	This represents the date when the requirement was initiated. Tags: xml.sequenceOffset=5
dependencies	DocumentationBlock	0..1	aggr	This represents an informal specification of dependencies. Note that upstream tracing should be formalized in the property trace provided by the superclass Traceable . Tags: xml.sequenceOffset=30
description	DocumentationBlock	0..1	aggr	This represents the general description of the requirement. Tags: xml.sequenceOffset=10
importance	String	1	attr	This allows to represent the importance of the requirement. Tags: xml.sequenceOffset=8





Class	StructuredReq			
issuedBy	String	1	attr	This represents the person, organization or authority which issued the requirement. Tags: xml.sequenceOffset=6
rationale	DocumentationBlock	0..1	aggr	This represents the rationale of the requirement. Tags: xml.sequenceOffset=20
remark	DocumentationBlock	0..1	aggr	This represents an informal remark. Note that this is not modeled as annotation, since these remark is still essential part of the requirement. Tags: xml.sequenceOffset=60
supportingMaterial	DocumentationBlock	0..1	aggr	This represents an informal specification of the supporting material. Tags: xml.sequenceOffset=50
testedItem	Traceable	*	ref	This association represents the ability to trace on the same specification level. This supports for example the of acceptance tests. Tags: xml.sequenceOffset=70
type	String	1	attr	This attribute allows to denote the type of requirement to denote for example is it an "enhancement", "new feature" etc. Tags: xml.sequenceOffset=7
useCase	DocumentationBlock	0..1	aggr	This describes the relevant use cases. Note that formal references to use cases should be done in the trace relation. Tags: xml.sequenceOffset=35

Table 4.156: StructuredReq

Enumeration	StandardNameEnum
Package	M2::AUTOSARTemplates::GenericStructure::DocumentationOnM1
Note	This enumeration lists all allowed standard abbreviations.
Aggregated by	AppliedStandard.appliesTo, StructuredReq.appliesTo
Literal	Description
AP	This values represents the Adaptive Platform. Tags: atp.EnumerationLiteralIndex=0
CP	This Value represents the Classic Platform. Tags: atp.EnumerationLiteralIndex=1
FO	This values represents the Foundation. Tags: atp.EnumerationLiteralIndex=2

Table 4.157: StandardNameEnum

For more details regarding the modeling of the semi-formal text please refer to [Figure 4.4](#).

[TPS_DEXT_01069] Standardized values of `DiagnosticEvent.introduction.structuredReq`

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00023](#), [RS_DEXT_00045](#)

[The following possible values of `DiagnosticEvent.introduction.structuredReq` are standardized by AUTOSAR:

- `DIAG_EVENT_MON_COND`: this value describes the monitoring condition of the corresponding `DiagnosticEvent`.
- `DIAG_EVENT_MON_TYPE`: this value describes the monitoring type of the corresponding `DiagnosticEvent`.
- `DIAG_EVENT_MON_RATE`: this value describes the monitoring rate for the corresponding `DiagnosticEvent`.
- `DIAG_EVENT_MAT_COND`: this value describes a mature condition of the `DiagnosticEvent`.
- `DIAG_EVENT_DEMAT_COND`: this value describes a de-mature condition of the `DiagnosticEvent`.
- `DIAG_EVENT_AGING`: this value describes the behavior of the `DiagnosticEvent` regarding aging.
- `DIAG_EVENT_LIMP_IN_ACT`: this value describes the associated limp-in action for the `DiagnosticEvent`.
- `DIAG_EVENT_MAT_TIME`: this value describes the mature time for the corresponding `DiagnosticEvent`, i.e. how long or how often the fault must exist.
- `DIAG_EVENT_DEMAT_TIME`: this value describes the de-mature time for the corresponding `DiagnosticEvent`, i.e. how long or how often must the OK conditions be fulfilled.

]

Please find an example definition of a mature condition in [Section B.3](#).

4.4.2.3 Associated Event Identification

[TPS_DEXT_01151] Semantics of attribute `DiagnosticEvent.associatedEventIdentification`

Upstream requirements: [RS_DEXT_00023](#)

[Use cases exist where `DiagnosticEvents` are not associated with the `DiagnosticTroubleCode` but the occurrence of the event shall nonetheless be reported as part of the `troubleCodeProps.snapshotRecordContent.dataIdentifier` of a given `DiagnosticTroubleCodeUds`.

[constr_1768] Existence of attribute `DiagnosticEvent.associatedEventIdentification`

[Attribute `DiagnosticEvent.associatedEventIdentification` shall exist if the respective `DiagnosticEvent` is mapped to a `DiagnosticTroubleCodeUds` and one of the following conditions is fulfilled:

- 185 of 750

that has attribute `dataProvider` set to the value `DEM_EVENT_ASSOCIATED_IDENTIFICATION`.

- The reference `DiagnosticTroubleCodeUds.troubleCodeProps.extendedDataRecord` exists and the referenced `DiagnosticExtendedDataRecord` aggregates at least one `recordElement.dataElement` that is also referenced by a `DiagnosticDemProvidedDataMapping` that has attribute `dataProvider` set to the value `DEM_EVENT_ASSOCIATED_IDENTIFICATION`.

]

The use case described in [TPS_DEXT_01151] and [constr_1768] is depicted in Figure 4.57.

Please note that [constr_1768] only describes the minimum viable scenario for the usage of attribute `DiagnosticEvent.associatedEventIdentification`.

It is also possible that more than one `DiagnosticDataElement` exists that is referenced by a `DiagnosticDemProvidedDataMapping` where attribute `dataProvider` is set to the value `DEM_EVENT_ASSOCIATED_IDENTIFICATION`.

4.4.3 DiagnosticTroubleCode

`DiagnosticTroubleCodes` (i.e. the ECU external view on diagnostic events) are defined together with their properties and mapped to `DiagnosticEvents` using `DiagnosticEventToTroubleCodeUdsMapping`.

[TPS_DEXT_03012] Three kinds of DTCs

Upstream requirements: RS_DEXT_00024

[There are three kinds of DTCs represented as specializations of `DiagnosticTroubleCode`:

- the DTCs (`DiagnosticTroubleCodeUds`)
- the OBD-related DTCs (`DiagnosticTroubleCodeObd`)
- the [21, SAE J1939-73]-related DTCs (`DiagnosticTroubleCodeJ1939`)

Properties individual to such a DTC specialization are modeled as attributes of `DiagnosticTroubleCodeUds`, `DiagnosticTroubleCodeObd` and `DiagnosticTroubleCodeJ1939`, respectively.]

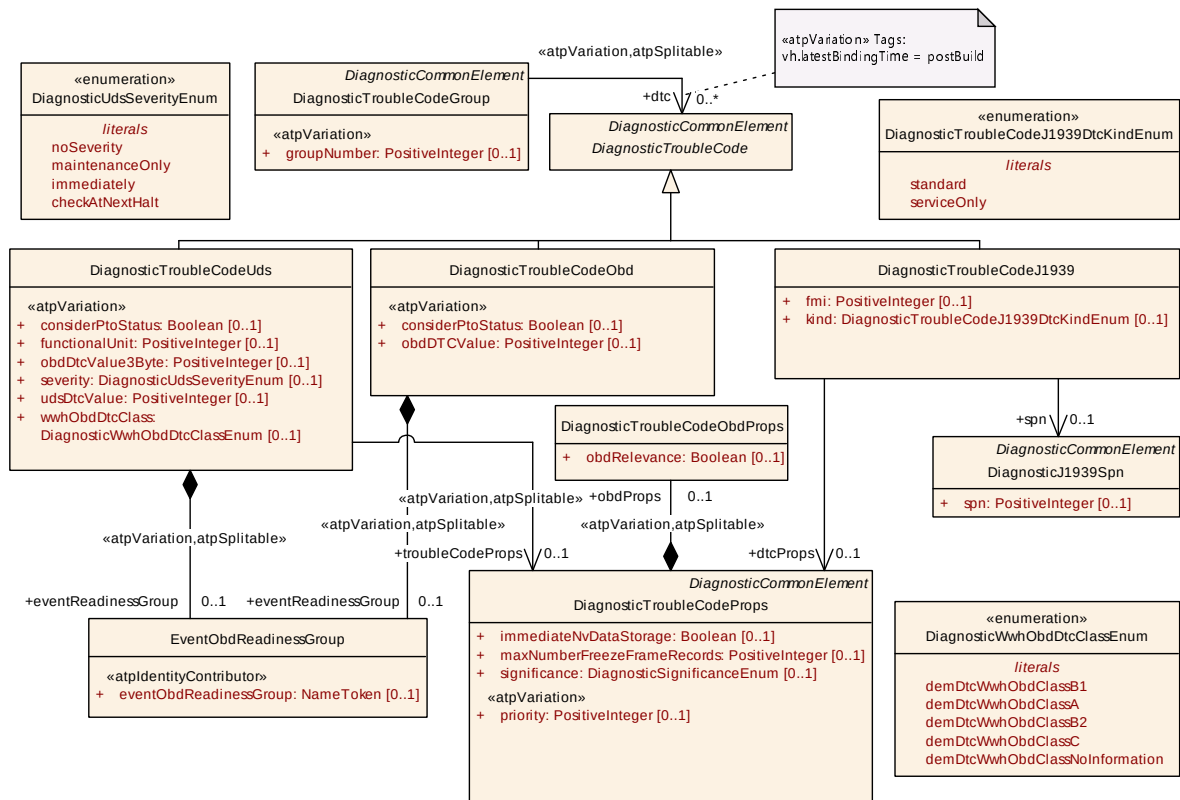


Figure 4.58: Modeling of DiagnosticTroubleCode

Class	DiagnosticTroubleCodeUds			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode			
Note	This element is used to describe diagnostic trouble codes (DTCs). Tags: atp.recommendedPackage=DiagnosticTroubleCodes			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticTroubleCode , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
considerPtoStatus	Boolean	0..1	attr	This attribute describes the affection of the event by the Dem PTO handling. true: the event is affected by the Dem PTO handling. false: the event is not affected by the Dem PTO handling. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
eventReadinessGroup	EventObdReadinessGroup	0..1	aggr	This attribute specifies the Event OBD Readiness group for PID \$01 and PID \$41 computation. This attribute is only applicable for emission-related ECUs. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=eventReadinessGroup.eventObdReadinessGroup, eventReadinessGroup.variationPoint.shortLabel vh.latestBindingTime=postBuild





Class	DiagnosticTroubleCodeUds			
functionalUnit	PositiveInteger	0..1	attr	This attribute specifies a 1-byte value which identifies the corresponding basic vehicle / system function which reports the DTC. This parameter is necessary for the report of severity information. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
obdDtcValue3Byte	PositiveInteger	0..1	attr	3 Byte OBD DTC value based on the definition from SAE J2012. The existence of this attribute is only required if separated UDS and OBD DTC values are used for SAE J1979-2. If this attribute does not exist, then UDS DTC values are used with J1979-2. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
severity	DiagnosticUdsSeverityEnum	0..1	attr	DTC severity according to ISO 14229-1. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
troubleCodeProps	DiagnosticTroubleCodeProps	0..1	ref	Defined properties associated with the DemDTC. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=troubleCodeProps.diagnosticTroubleCodeProps, troubleCodeProps.variationPoint.shortLabel vh.latestBindingTime=postBuild
udsDtcValue	PositiveInteger	0..1	attr	Unique Diagnostic Trouble Code value for UDS. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
wwhObdDtcClass	DiagnosticWwhObdDtcClassEnum	0..1	attr	This attribute is used to identify (if applicable) the corresponding severity class of an WWH-OB DTC. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime

Table 4.158: DiagnosticTroubleCodeUds

[constr_1757] Existence of attribute [DiagnosticTroubleCodeUds.udsDtcValue](#)*Imposition time:* IT_Dext[For each [DiagnosticTroubleCodeUds](#), attribute [udsDtcValue](#) shall exist.]

Class	DiagnosticTroubleCodeObd			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode			
Note	This element is used to define OBD-relevant DTCs. Tags: atp.recommendedPackage=DiagnosticTroubleCodes			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticTroubleCode , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	DiagnosticTroubleCodeObd			
considerPtoStatus	Boolean	0..1	attr	This attribute describes the affection of the event by the Dem PTO handling. true: the event is affected by the Dem PTO handling. false: the event is not affected by the Dem PTO handling. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
eventReadinessGroup	EventObdReadinessGroup	0..1	aggr	This aggregation allows for the variant definition of the attribute eventObdReadinessGroup. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=eventReadinessGroup.eventObdReadinessGroup, eventReadinessGroup.variationPoint.shortLabel vh.latestBindingTime=postBuild
obdDTCValue	PositiveInteger	0..1	attr	Unique Diagnostic Trouble Code value for OBD. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime

Table 4.159: DiagnosticTroubleCodeObd

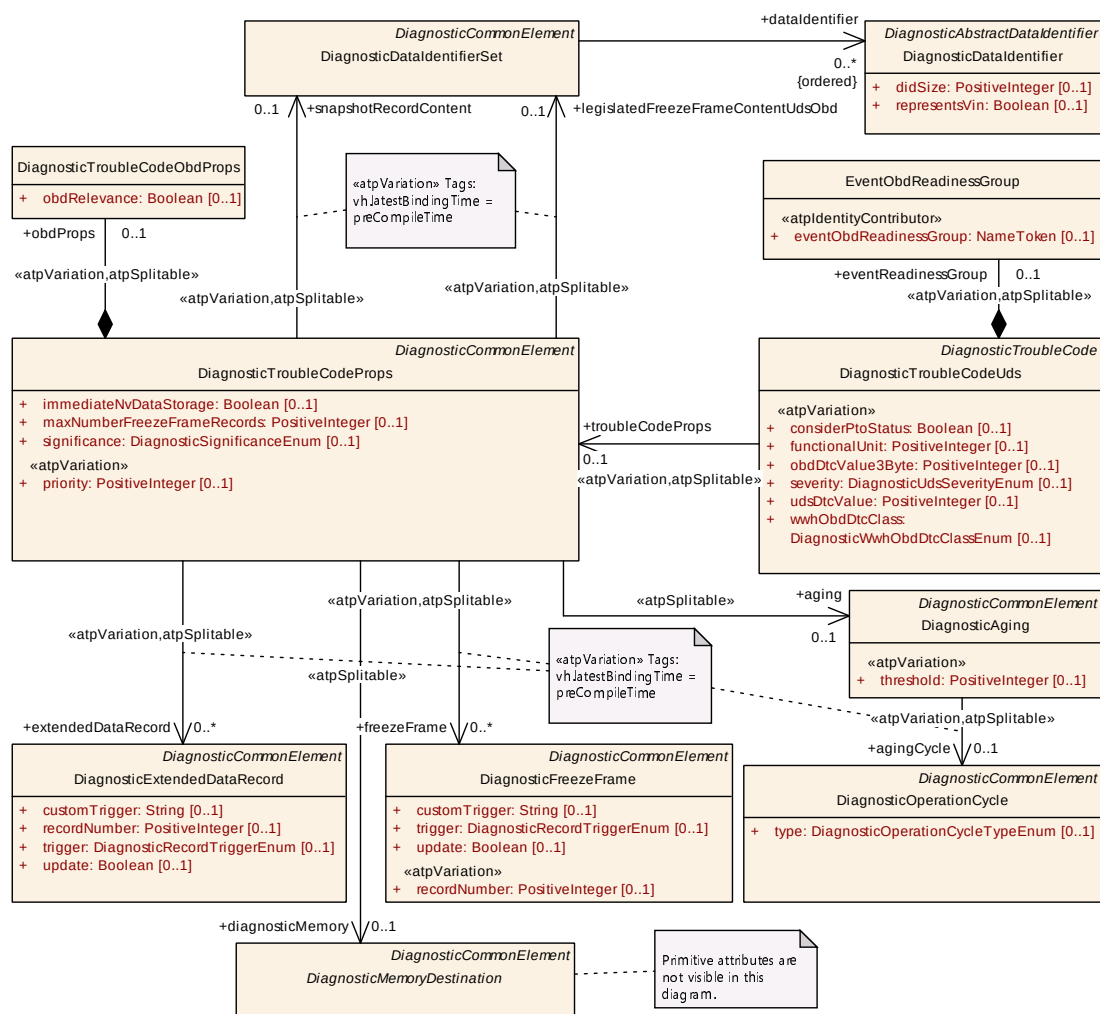


Figure 4.59: Modeling of DiagnosticTroubleCodeUds

[constr_10088] Relation between event and DTC without event combination*Imposition time:* IT_Dext

[If attribute `DiagnosticCommonProps.typeOfEventCombinationSupported` is not configured, then all `DiagnosticTroubleCodeUds` that refer to a `DiagnosticTroubleCodeProps` in the role `troubleCodeProps` that in turn refers to a `DiagnosticMemoryDestination` in the role `diagnosticMemory` shall only be referenced by at most one `DiagnosticEventToTroubleCodeUdsMapping`.]

[TPS_DEXT_03013] Common properties of a DTC*Upstream requirements:* RS_DEXT_00024

[Properties that are often common for a group of `DiagnosticTroubleCodeUds` elements are modeled as attributes of `DiagnosticTroubleCodeProps`.]

Class	EventObdReadinessGroup			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode			
Note	This meta-class represents the ability to define the value of attribute <code>eventObdReadinessGroup</code> . It is only introduced to allow for a variant modeling of this attribute.			
Base	ARObject			
Aggregated by	<code>DiagnosticTroubleCodeObd.eventReadinessGroup</code> , <code>DiagnosticTroubleCodeUds.eventReadinessGroup</code>			
Attribute	Type	Mult.	Kind	Note
eventObdReadinessGroup	<code>NameToken</code>	0..1	attr	This attribute specifies the Event OBD Readiness group for PID \$01 and PID \$41 computation. This attribute is only applicable for emission-related ECUs. Stereotypes: <code>atpIdentityContributor</code>

Table 4.160: EventObdReadinessGroup**[constr_1758] Existence of attribute `DiagnosticTroubleCodeObd.obdDTCValue`***Imposition time:* IT_Dext

[For each `DiagnosticTroubleCodeObd`, attribute `obdDTCValue` shall exist.]

[constr_1349] Value of `udsDtcValue` shall be unique*Imposition time:* IT_Dext

[The value of `DiagnosticTroubleCodeUds.udsDtcValue` shall be unique for all `DiagnosticTroubleCodeUds` that refer to the same `DiagnosticMemoryDestination` via the reference `DiagnosticTroubleCodeUds.troubleCodeProps.diagnosticMemory`.]

Class	DiagnosticTroubleCode (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode			
Note	A diagnostic trouble code defines a unique identifier that is shown to the diagnostic tester.			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	DiagnosticTroubleCodeJ1939 , DiagnosticTroubleCodeObd , DiagnosticTroubleCodeUds			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.161: DiagnosticTroubleCode

[TPS_DEXT_03014] Semantics of [DiagnosticTroubleCodeGroup](#)

Upstream requirements: [RS_DEXT_00024](#)

[The [DiagnosticTroubleCodeGroup](#) element is used to define groups of DTCs that belong together. Each [DiagnosticTroubleCodeGroup](#) has its own [groupNumber](#) value assigned.]

Class	DiagnosticTroubleCodeGroup			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode			
Note	The diagnostic trouble code group defines the DTCs belonging together and thereby forming a group. Tags: atp.recommendedPackage=DiagnosticTroubleCodes			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dtc	DiagnosticTroubleCode	*	ref	This represents the collection of DiagnosticTroubleCodes defined by this DiagnosticTroubleCodeGroup. Stereotypes: atp.Splitable; atp.Variation Tags: atp.Splitkey=dtc.diagnosticTroubleCode, dtc.variation Point.shortLabel vh.latestBindingTime=postBuild
groupNumber	PositiveInteger	0..1	attr	This represents the base number of the DTC group. Stereotypes: atp.Variation Tags: vh.latestBindingTime=preCompileTime

Table 4.162: DiagnosticTroubleCodeGroup

[constr_1830] Existence of [DiagnosticTroubleCodeGroup.groupNumber](#)

Imposition time: [IT_Dext](#)

[For each [DiagnosticTroubleCodeGroup](#), attribute [groupNumber](#) shall exist.]

[constr_1350] Value of `DiagnosticTroubleCodeGroup.groupNumber` shall be unique*Imposition time:* `IT_Dext`

[The value of `DiagnosticTroubleCodeGroup.groupNumber` shall be unique to any other DTC and DTC group value.]

[constr_1351] Value of `DiagnosticTroubleCodeGroup.groupNumber`*Imposition time:* `IT_Dext`

[To be compliant to ISO, the value of `DiagnosticTroubleCodeGroup.groupNumber` shall be set as defined in [17, ISO 14229-1].]

[TPS_DEXT_03000] ISO 14229-1 reserves values of `DiagnosticTroubleCodeGroup.groupNumber`*Upstream requirements:* `RS_DEXT_00024`

[Any values other than those mentioned in [constr_1351] are reserved by [17, ISO 14229-1].]

[constr_1352] Existence of `maxNumberFreezeFrameRecords` vs. `freezeFrame`*Imposition time:* `IT_Dext`

[If the attribute `DiagnosticTroubleCodeProps.maxNumberFreezeFrameRecords` exists then the attribute `DiagnosticTroubleCodeProps.freezeFrame` shall not exist or vice versa.]

[constr_1353] Applicability of [constr_1352]*Imposition time:* `IT_Dext`

[[constr_1352] shall apply in the identical way (either one or the other attribute shall exist) for all `DiagnosticTroubleCodeProps` within the context of all `DiagnosticContributionSets` of category `DIAGNOSTIC_ECU_EXTRACT` that refer to the same `EcuInstance`.]

[constr_1354] Existence of attribute `DiagnosticTroubleCodeProps.snapshotRecordContent`*Imposition time:* `IT_Dext`

[If one of the attributes `DiagnosticTroubleCodeProps.maxNumberFreezeFrameRecords` or `DiagnosticTroubleCodeProps.freezeFrame` exists then the attribute `DiagnosticTroubleCodeProps.snapshotRecordContent` shall exist.]

[TPS_DEXT_01064] Textually formulated content attached to [DiagnosticTroubleCode](#)*Upstream requirements:* [RS_DEXT_00024](#), [RS_DEXT_00045](#)

[The definition of a [DiagnosticTroubleCode](#) also consists of textually formulated content that is formalized in structure but cannot be formalized in content.

The purpose of this content is to define e.g. an error text or the possible cause that relates to the specific [DiagnosticTroubleCode](#).]

[TPS_DEXT_01065] Different approaches to provide semi-formal textual content attached to a [DiagnosticTroubleCode](#)*Upstream requirements:* [RS_DEXT_00024](#), [RS_DEXT_00045](#)

[There are different approaches to provide semi-formal textual content attached to a [DiagnosticTroubleCode](#):

- Textual description that has the character of descriptions of the [DiagnosticTroubleCode](#) shall be provided by means of the meta-class [TraceableText](#), i.e. by means of [introduction.trace](#).
- Textual description that characterizes the [DiagnosticTroubleCode](#) with respect to the *ODX long name* shall be provided by means of the attribute [longName](#).

]

Class	TraceableText			
Package	M2::MSR::Documentation::BlockElements::RequirementsTracing			
Note	Represents a paragraph level text which can be referenced in order to establish tracing. It supports specific tracing of document items as specified in [TPS_STDT_00098]. The following approach applies: • shortName: represents the tag for tracing • longName: represents the headline • category: represents the kind of the tagged text			
Base	ARObject , DocumentViewSelectable , Identifiable , MultilanguageReferrable , Paginateable , Referrable , Traceable			
Aggregated by	DocumentationBlock.trace			
Attribute	Type	Mult.	Kind	Note
text	DocumentationBlock	1	aggr	This represents the text to which the tag applies. Tags: xml.roleElement=false xml.roleWrapperElement=false xml.sequenceOffset=30 xml.typeElement=false xml.typeWrapperElement=false

Table 4.163: TraceableText

Class	MultilanguageReferrable (abstract)			
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::Identifiable			
Note	Instances of this class can be referred to by their identifier (while adhering to namespace borders). They also may have a longName. But they are not considered to contribute substantially to the overall structure of an AUTOSAR description. In particular it does not contain other Referrables.			
Base	ARObject, Referrable			
Subclasses	Caption, DefItem, DocumentationContext, Identifiable , SdgCaption, TraceReferrable , Traceable			
Attribute	Type	Mult.	Kind	Note
longName	MultilanguageLongName	0..1	aggr	This specifies the long name of the object. Long name is targeted to human readers and acts like a headline.

Table 4.164: MultilanguageReferrable

Class	MultilanguageLongName			
Package	M2::MSR::Documentation::TextModel::MultilanguageData			
Note	This meta-class represents the ability to specify a long name which acts in the role of a headline. It is intended for human readers. Per language it should be around max 80 characters.			
Base	ARObject			
Aggregated by	AliasNameAssignment.label, GeneralAnnotation.label, MultilanguageReferrable.longName , Note.label, Prms.label, ValueGroup.label			
Attribute	Type	Mult.	Kind	Note
l4	LLongName	1..*	aggr	This is the long name in one particular language. Tags: xml.roleElement=true xml.roleWrapperElement=false xml.sequenceOffset=20 xml.typeElement=false xml.typeWrapperElement=false

Table 4.165: MultilanguageLongName

Class	«atpMixedString» LLongName			
Package	M2::MSR::Documentation::TextModel::LanguageDataModel			
Note	MixedContentForLongNames in one particular language. The language is denoted in the attribute l.			
Base	ARObject, LanguageSpecific , MixedContentForLongName			
Aggregated by	MultilanguageLongName.l4			
Attribute	Type	Mult.	Kind	Note
blueprintValue	String	0..1	attr	This represents a description that documents how the value shall be defined when deriving objects from the blueprint. Tags: atp.Status=draft xml.attribute=true

Table 4.166: LLongName

For more details regarding the modeling of the semi-formal text please refer to [Figure 4.4](#).

The usage of [TraceableText](#) and [StructuredReq](#) alone would not qualify as a semi-formal textual attachment. It is necessary to standardize the value of the [category](#) in order to get some level of semi-formal textual description.

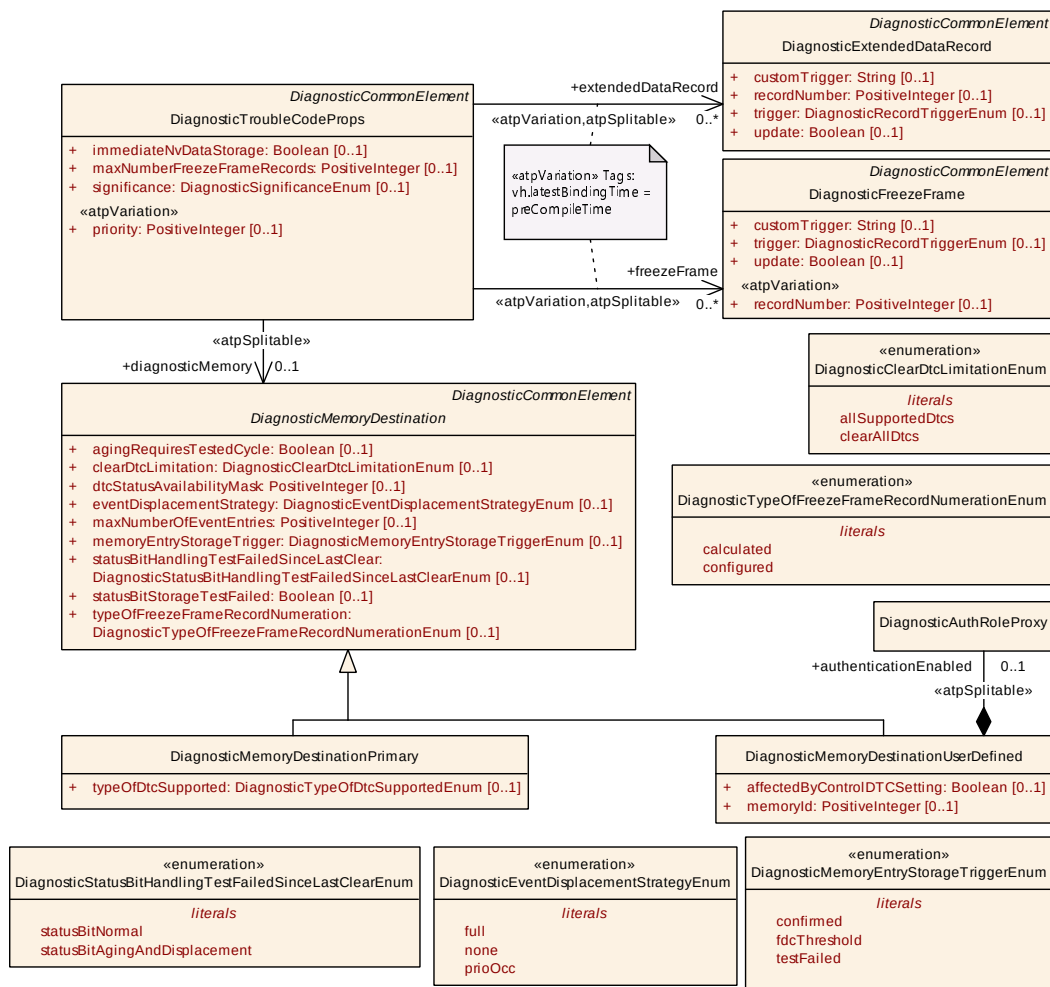


Figure 4.60: Modeling of **DiagnosticMemoryDestination**

[TPS_DEXT_01066] Standardized values of **DiagnosticTroubleCode.introduction.trace**

Upstream requirements: [RS_DEXT_00001](#), [RS_DEXT_00024](#), [RS_DEXT_00045](#)

[The following possible values of **DiagnosticTroubleCode.introduction.trace** are standardized by AUTOSAR:

- **DIAG_DTC_ERROR_TEXT**: this value shall be used to describe an error text.
- **DIAG_DTC_REP_ACT**: this value describes the associated repair for the corresponding **DiagnosticTroubleCode**.
- **DIAG_DTC_CUS_PER_SYMP**: this value describes the possible customer perception symptom for the corresponding **DiagnosticTroubleCode**.
- **DIAG_DTC_POSS_CAUSE**: This value describes the possible cause for the corresponding **DiagnosticTroubleCode**.

]

An example for the definition of a semi-formal textual description by means of [TraceableText](#) can be found in [Section B.4](#).

[constr_1378] Value of [DiagnosticMemoryDestinationUserDefined.memoryId](#)

Imposition time: [IT_Dext](#)

[Within the scope of one [DiagnosticContributionSet](#), no two (or more) [DiagnosticMemoryDestinationUserDefineds](#) shall exist that share the same value for attribute [DiagnosticMemoryDestinationUserDefined.memoryId](#)]

In other words, the value of the attribute [DiagnosticMemoryDestinationUserDefined.memoryId](#) shall be unique within any given [DiagnosticExtract](#).

Class	<i>DiagnosticMemoryDestination</i> (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticMemoryDestination			
Note	This abstract meta-class represents a possible memory destination for a diagnostic event.			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	DiagnosticMemoryDestinationPrimary , DiagnosticMemoryDestinationUserDefined			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
agingRequiresTestedCycle	Boolean	0..1	attr	Defines whether the aging cycle counter is processed every aging cycles or else only tested aging cycle are considered. If the attribute is set to TRUE: only tested aging cycle are considered for aging cycle counter. If the attribute is set to FALSE: aging cycle counter is processed every aging cycle. On the classic platform, the value of this attribute has to be identical for each DiagnosticMemoryDestination .
clearDtcLimitation	DiagnosticClearDtcLimitationEnum	0..1	attr	Defines the scope of the DEM_ClearDTC Api. On the classic platform, the value of this attribute has to be identical for each DiagnosticMemoryDestination .
dtcStatusAvailabilityMask	PositiveInteger	0..1	attr	Mask for the supported DTC status bits by the Dem.
eventDisplacementStrategy	DiagnosticEventDisplacementStrategyEnum	0..1	attr	This attribute defines, whether support for event displacement is enabled or not, and which displacement strategy is followed.
maxNumberOfEventEntries	PositiveInteger	0..1	attr	This attribute fixes the maximum number of event entries in the fault memory.
memoryEntryStorageTrigger	DiagnosticMemoryEntryStorageTriggerEnum	0..1	attr	Describes the trigger to allocate an event memory entry.
statusBitHandlingTestFailedSinceLastClear	DiagnosticStatusBitHandlingTestFailedSinceLastClearEnum	0..1	attr	This attribute defines, whether the aging and displacement mechanism shall be applied to the "Test FailedSinceLastClear" status bits. On the classic platform, the value of this attribute has to be identical for each DiagnosticMemoryDestination .





Class	DiagnosticMemoryDestination (abstract)			
statusBitStorageTestFailed	Boolean	0..1	attr	This parameter is used to activate/deactivate the permanent storage of the "TestFailed" status bits. true: storage activated false: storage deactivated
typeOfFreezeFrameRecordNumeration	DiagnosticTypeOfFreezeFrameRecordNumerationEnum	0..1	attr	This attribute defines the type of assigning freeze frame record numbers for event-specific freeze frame records.

Table 4.167: DiagnosticMemoryDestination

[constr_10421] Existence of attribute DiagnosticMemoryDestination.dtcStatusAvailabilityMask*Imposition time: IT_Dext*[For each DiagnosticMemoryDestination, attribute `dtcStatusAvailabilityMask` shall exist.]**[constr_10422] Existence of attribute DiagnosticMemoryDestination.eventDisplacementStrategy***Imposition time: IT_Dext*[For each DiagnosticMemoryDestination, attribute `eventDisplacementStrategy` shall exist.]**[constr_10423] Existence of attribute DiagnosticMemoryDestination.maxNumberOfEventEntries***Imposition time: IT_Dext*[For each DiagnosticMemoryDestination, attribute `maxNumberOfEventEntries` shall exist.]

Enumeration	DiagnosticMemoryEntryStorageTriggerEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticMemoryDestination
Note	Trigger types to allocate an event memory entry.
Aggregated by	DiagnosticMemoryDestination.memoryEntryStorageTrigger
Literal	Description
confirmed	Status information of UDS DTC status bit 3 Tags: atp.EnumerationLiteralIndex=0
fdcThreshold	Threshold to allocate an event memory entry and to capture the Freeze Frame. Tags: atp.EnumerationLiteralIndex=1
testFailed	Status information of UDS DTC status bit 0. Tags: atp.EnumerationLiteralIndex=3

Table 4.168: DiagnosticMemoryEntryStorageTriggerEnum

Enumeration	DiagnosticClearDtcLimitationEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticMemoryDestination
Note	Scope of the DEM_ClearDTC Api.
Aggregated by	DiagnosticMemoryDestination.clearDtcLimitation
Literal	Description
allSupportedDtc	DEM_ClearDtc API accepts all supported DTC values. Tags: atp.EnumerationLiteralIndex=0
clearAllDtc	DEM_ClearDtc API accepts ClearAllDTCs only. Tags: atp.EnumerationLiteralIndex=1

Table 4.169: DiagnosticClearDtcLimitationEnum

Enumeration	DiagnosticEventDisplacementStrategyEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticMemoryDestination
Note	Defines the displacement strategy.
Aggregated by	DiagnosticMemoryDestination.eventDisplacementStrategy
Literal	Description
full	Event memory entry displacement is enabled, by consideration of priority active/passive status, and occurrence. Tags: atp.EnumerationLiteralIndex=0
none	Event memory entry displacement is disabled. Tags: atp.EnumerationLiteralIndex=1
prioOcc	Event memory entry displacement is enabled, by consideration of priority and occurrence (but without active/passive status). Tags: atp.EnumerationLiteralIndex=2

Table 4.170: DiagnosticEventDisplacementStrategyEnum

Enumeration	DiagnosticStatusBitHandlingTestFailedSinceLastClearEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode
Note	This enumeration controls whether the aging and displacement mechanism shall be applied to the 'TestFailedSinceLastClear' status bits.
Aggregated by	DiagnosticMemoryDestination.statusBitHandlingTestFailedSinceLastClear
Literal	Description
statusBitAgingAndDisplacement	The "TestFailedSinceLastClear" status bits are reset to 0, if aging or displacement applies. Tags: atp.EnumerationLiteralIndex=0
statusBitNormal	Aging and displacement has no impact on the "TestFailedSinceLastClear" status bits. Tags: atp.EnumerationLiteralIndex=1

Table 4.171: DiagnosticStatusBitHandlingTestFailedSinceLastClearEnum

Enumeration	DiagnosticTypeOfFreezeFrameRecordNumerationEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticMemoryDestination
Note	FreezeFrame record numeration type
Aggregated by	DiagnosticMemoryDestination.typeOfFreezeFrameRecordNumeration
Literal	Description





Enumeration	DiagnosticTypeOfFreezeFrameRecordNumerationEnum
calculated	Freeze frame records will be numbered consecutive starting by 1 in their chronological order. Tags: atp.EnumerationLiteralIndex=0
configured	Freeze frame records will be numbered based on the given configuration in their chronological order. Tags: atp.EnumerationLiteralIndex=1

Table 4.172: DiagnosticTypeOfFreezeFrameRecordNumerationEnum

Class	DiagnosticMemoryDestinationPrimary			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticMemoryDestination			
Note	This represents a primary memory for a diagnostic event. Tags: atp.recommendedPackage=DiagnosticMemoryDestinations			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMemoryDestination , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
typeOfDtcSupported	DiagnosticTypeOfDtcSupportedEnum	0..1	attr	This attribute defines the format returned by Dem_Dcm GetTranslationType and does not relate to/influence the supported Dem functionality.

Table 4.173: DiagnosticMemoryDestinationPrimary

Class	DiagnosticMemoryDestinationUserDefined			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticMemoryDestination			
Note	This represents a user-defined memory for a diagnostic event. Tags: atp.recommendedPackage=DiagnosticMemoryDestinations			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMemoryDestination , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
affectedByControlDTCSetting	Boolean	0..1	attr	This attribute configures how the content of the memory is affected by an active ControlDTCSetting or not: • If the attribute is set to true, the user-defined fault memory is not updated if ControlDTCSetting is off. • If the attribute is set to false, the user defined fault memory is updated even if ControlDTCSetting is off.
authenticationEnabled	DiagnosticAuthRoleProxy	0..1	aggr	The existence of this aggregation indicates that an authentication is foreseen. The details are clarified by the aggregated class. Stereotypes: atp.Splitable Tags: atp.Splitkey=authenticationEnabled
memoryId	PositiveInteger	0..1	attr	This represents the identifier of the user-defined memory.

Table 4.174: DiagnosticMemoryDestinationUserDefined

[constr_1379] Existence of [DiagnosticMemoryDestinationPrimary](#)Imposition time: [IT_Dext](#)[Within the scope of one [DiagnosticContributionSet](#) only one [DiagnosticMemoryDestinationPrimary](#) shall exist.]

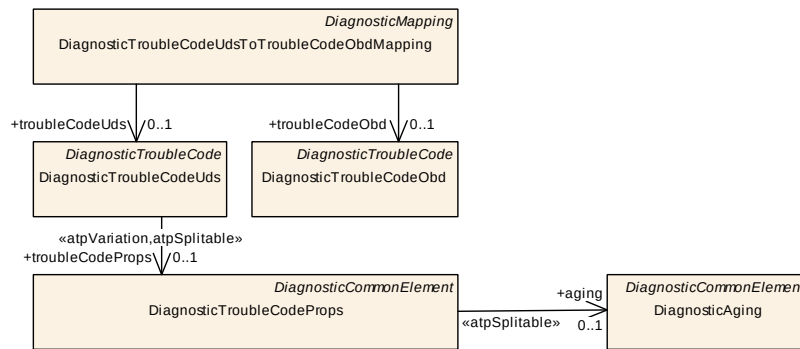


Figure 4.61: Mapping of UDS DTC to OBD DTC

[TPS_DEXT_01094] **Semantics of meta-class `DiagnosticTroubleCodeUdsToTroubleCodeObdMapping`** [The meta-class `DiagnosticTroubleCodeUdsToTroubleCodeObdMapping` can be used to associate a `DiagnosticTroubleCodeUds` with a `DiagnosticTroubleCodeObd`.]

[constr_10522] **OBD trouble code shall only be placed in primary fault memory**

Imposition time: IT_Dext

[If a `DiagnosticTroubleCodeUds` that is referenced in the role `DiagnosticTroubleCodeUdsToTroubleCodeObdMapping.troubleCodeUds` in turn references a `DiagnosticTroubleCodeProps` in the role `troubleCodeProps`, and if the `DiagnosticTroubleCodeProps` refers to a `DiagnosticMemoryDestination` in the role `diagnosticMemory`, then the referenced `diagnosticMemory` shall be a `DiagnosticMemoryDestinationPrimary`.]

Class	DiagnosticTroubleCodeProps			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode			
Note	This element defines common Dtc properties that can be reused by different DTCs. Tags: atp.recommendedPackage=DiagnosticTroubleCodePropss			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
aging	DiagnosticAging	0..1	ref	Reference to an aging algorithm in case that an aging/unlearning of the event is allowed. Stereotypes: atpSplitable Tags: atp.Splitkey=aging
diagnostic Memory	DiagnosticMemoryDestination	0..1	ref	Reference to the applicable DiagnosticMemory Destination. Stereotypes: atpSplitable Tags: atp.Splitkey=diagnosticMemory





Class	DiagnosticTroubleCodeProps			
extendedDataRecord	DiagnosticExtendedDataRecord	*	ref	Defines the links to an extended data class sampler. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=extendedDataRecord.diagnosticExtendedDataRecord, extendedDataRecord.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
freezeFrame	DiagnosticFreezeFrame	*	ref	Define the links to a freeze frame class sampler. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=freezeFrame.diagnosticFreezeFrame, freezeFrame.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
immediateNvDataStorage	Boolean	0..1	attr	Change description for Class immediateNvDataStorage in table "Table A.111: DiagnosticTroubleCodeProps": Switch to enable immediate storage triggering of an according event memory entry persistently to NVRAM. true: immediate non-volatile storage triggering on first occurrence and shutdown. false: immediate non-volatile storage triggering on shutdown.
legislatedFreezeFrameContentUdsObd	DiagnosticDataIdentifierSet	0..1	ref	This reference identifies the layout of legislated freeze frames used for emission related diagnostics over the UDS protocol such as OBD on UDS or WWH-OBD. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=legislatedFreezeFrameContentUdsObd.diagnosticDataIdentifierSet, legislatedFreezeFrameContentUdsObd.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
maxNumberFreezeFrameRecords	PositiveInteger	0..1	attr	This attribute defines the number of according freeze frame records, which can maximal be stored for this event. Therefore all these freeze frame records have the same freeze frame class.
obdProps	DiagnosticTroubleCodeObdProps	0..1	aggr	This aggregation is used to define OBD-relevant properties for a Diagnostic Trouble Code Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=obdProps, obdProps.variationPoint.shortLabel vh.latestBindingTime=postBuild
priority	PositiveInteger	0..1	attr	Priority of the event, in view of full event buffer. A lower value means higher priority. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
significance	DiagnosticSignificanceEnum	0..1	attr	Significance of the event, which indicates additional information concerning fault classification and resolution.
snapshotRecordContent	DiagnosticDataIdentifierSet	0..1	ref	This represents the freeze frame layout as a set of DIDs. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=snapshotRecordContent.diagnosticDataIdentifierSet, snapshotRecordContent.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

Table 4.175: DiagnosticTroubleCodeProps

Class	DiagnosticTroubleCodeObdProps			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode			
Note	This meta-class provides attributes for the configuration of OBD properties in the context of Diagnostic Trouble Code.			
Base	ARObject			
Aggregated by	DiagnosticTroubleCodeProps.obdProps			
Attribute	Type	Mult.	Kind	Note
obdRelevance	Boolean	0..1	attr	The attribute controls whether the enclosing DTC is relevant for OBD.

Table 4.176: DiagnosticTroubleCodeObdProps

[constr_1831] Existence of [DiagnosticTroubleCodeProps.priority](#)

Imposition time: IT_Dext

[For each [DiagnosticTroubleCodeProps](#), attribute [priority](#) shall exist.]

Class	DiagnosticTroubleCodeUdsToTroubleCodeObdMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	This meta-class represents the ability to associate a UDS trouble code to an OBD trouble code. Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
troubleCodeObd	DiagnosticTroubleCodeObd	0..1	ref	This represents the OBD DTC referenced in the mapping between UDS and OBD DTCs.
troubleCodeUds	DiagnosticTroubleCodeUds	0..1	ref	This represents the UDS DTC referenced in the mapping between UDS and OBD DTCs.

Table 4.177: DiagnosticTroubleCodeUdsToTroubleCodeObdMapping

[constr_10524] Existence of role [DiagnosticTroubleCodeUdsToTroubleCodeObdMapping.troubleCodeObd](#)

Imposition time: IT_Dext

[For each [DiagnosticTroubleCodeUdsToTroubleCodeObdMapping](#), the reference in the role [troubleCodeObd](#) shall exist.]

[constr_10523] Existence of role [DiagnosticTroubleCodeUdsToTroubleCodeObdMapping.troubleCodeUds](#)

Imposition time: IT_Dext

[For each [DiagnosticTroubleCodeUdsToTroubleCodeObdMapping](#), the reference in the role [troubleCodeUds](#) shall exist.]

Enumeration	DiagnosticSignificanceEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode
Note	Significance level of a diagnostic event.
Aggregated by	DiagnosticTroubleCodeProps.significance
Literal	Description
fault	Failure, which affects the component/ECU itself. Tags: atp.EnumerationLiteralIndex=0
occurrence	Issue, which indicates additional information concerning insufficient system behavior. Tags: atp.EnumerationLiteralIndex=1

Table 4.178: DiagnosticSignificanceEnum

Enumeration	DiagnosticUdsSeverityEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode
Note	Severity types for a DTC according to ISO 14229-1.
Aggregated by	DiagnosticTroubleCodeUds.severity
Literal	Description
checkAtNextHalt	Check at next halt. Tags: atp.EnumerationLiteralIndex=0
immediately	Check immediately. Tags: atp.EnumerationLiteralIndex=1
maintenanceOnly	Maintenance required. Tags: atp.EnumerationLiteralIndex=2
noSeverity	No severity information available. Tags: atp.EnumerationLiteralIndex=3

Table 4.179: DiagnosticUdsSeverityEnum

Class	DiagnosticDataIdentifierSet			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode			
Note	This represents the ability to define a list of DiagnosticDataIdentifiers that can be reused in different contexts. Tags: atp.recommendedPackage=DiagnosticDataIdentifierSets			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , Multilanguage , Referrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dataIdentifier (ordered)	DiagnosticDataIdentifier	*	ref	Reference to an ordered list of Data Identifiers.

Table 4.180: DiagnosticDataIdentifierSet

Enumeration	DiagnosticWwhObdDtcClassEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode
Note	This meta-class represents the ability to model severity classes of an WWH-OBd DTC.
Aggregated by	DiagnosticTroubleCodeUds.wwhObdDtcClass
Literal	Description





Enumeration	DiagnosticWwhObdDtcClassEnum
demDtcWwhObdClassA	This attribute represents the severity class A. Tags: atp.EnumerationLiteralIndex=0
demDtcWwhObdClassB1	This attribute represents the severity class B1. Tags: atp.EnumerationLiteralIndex=1
demDtcWwhObdClassB2	This attribute represents the severity class B2. Tags: atp.EnumerationLiteralIndex=2
demDtcWwhObdClassC	This attribute represents the severity class C. Tags: atp.EnumerationLiteralIndex=3
demDtcWwhObdClassNoInformation	This attribute represents the option to intentionally not describe a dedicated severity class of an WWH-OBBDTC. Tags: atp.EnumerationLiteralIndex=4

Table 4.181: DiagnosticWwhObdDtcClassEnum

4.4.4 DiagnosticExtendedDataRecord

[TPS_DEXT_03008] Semantics of **DiagnosticExtendedDataRecord**

Upstream requirements: [RS_DEXT_00032](#)

[A **DiagnosticExtendedDataRecord** contains **DiagnosticDataElements** that are ordered by the **bitOffset**.]

[constr_1355] Value of **extendedDataRecord.recordNumber**

Imposition time: [IT_Dext](#)

[To be compliant to ISO, the value of **extendedDataRecord.recordNumber** shall be set in the interval as defined in [17, ISO 14229-1].]

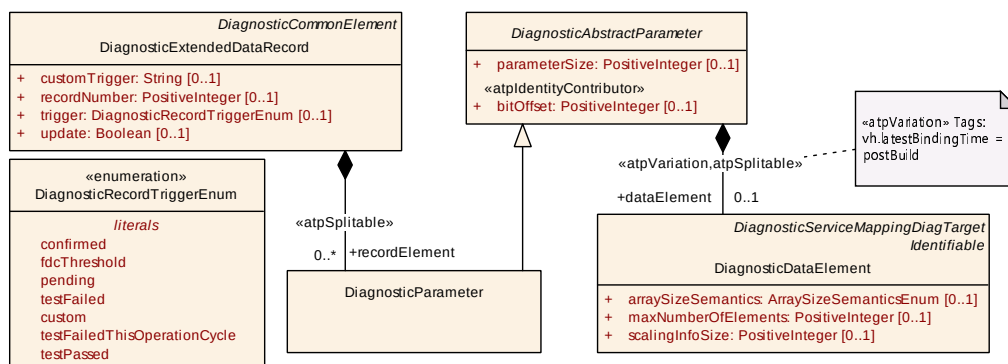


Figure 4.62: Modeling of DiagnosticExtendedDataRecord

[constr_1509] Value of `extendedDataRecord.recordNumber` shall be unique within primary fault memory*Imposition time: IT_Dext*

[For all `DiagnosticTroubleCodeProps` that refer to `DiagnosticMemoryDestinationPrimary` in the role `diagnosticMemory` there shall be no two `extendedDataRecord.recordNumber` with the same value.]

[constr_1511] Value of `extendedDataRecord.recordNumber` shall be unique within user-defined fault memory*Imposition time: IT_Dext*

[For all `DiagnosticTroubleCodeProps` that refer to `DiagnosticMemoryDestinationUserDefined` in the role `diagnosticMemory` there shall be no two `extendedDataRecord.recordNumber` with the same value for any `DiagnosticMemoryDestinationUserDefined` referenced as `DiagnosticTroubleCodeProps.diagnosticMemory` with a given value of `memoryId`.]

[constr_10371] `DiagnosticDataElements` owned by a `DiagnosticExtendedDataRecord`*Imposition time: IT_Dext*

[Within the context of `DiagnosticExtendedDataRecord`, all aggregated `DiagnosticParameter` in the role `recordElement` shall not aggregate any `DiagnosticParameter` which in turn aggregates (via the aggregation of `DiagnosticParameterIdent`) a `DiagnosticParameterElement`.

In addition, gaps between individual elements (defined by the begin of an individual `DiagnosticDataElement`, as indicated by `DiagnosticParameter.bitOffset`, and the length of the aggregated `DiagnosticDataElement`) shall **not** exist.

Any individual `DiagnosticDataElement` contained (via the aggregation of `DiagnosticParameter` in the role `recordElement`) in the `DiagnosticExtendedDataRecord` shall satisfy **one of the following conditions**:

- The `DiagnosticDataElement` does **not** define the attribute `maxNumberOfElements` at all.
- The modeling of attribute `DiagnosticDataElement.maxNumberOfElements` shall follow the description in [TPS_DEXT_01001].

]

The rationale for [constr_10371] is that the usage of `DiagnosticParameter` in the context of the `DiagnosticExtendedDataRecord` is typically limited to a few primitive values does not have a need for nested structured `DiagnosticParameter`.

[TPS_DEXT_01143] Definition of a custom trigger for an extended data record

Upstream requirements: [RS_DEXT_00033](#)

[It is possible to define a custom trigger for the capturing of an extended data record. The custom nature, however, severely limits the possibilities for a formal description of such a trigger. Therefore, AUTOSAR can only provide a means to verbally describe how the custom trigger shall operate.

For this purpose the attribute [DiagnosticExtendedDataRecord.customTrigger](#) has been defined.]

[constr_1616] Existence of attribute [DiagnosticExtendedDataRecord.customTrigger](#)

Imposition time: [IT_Dext](#)

[The attribute [DiagnosticExtendedDataRecord.customTrigger](#) shall only exist if the attribute [DiagnosticExtendedDataRecord.trigger](#) is set to the value [DiagnosticRecordTriggerEnum.custom](#).]

Class	DiagnosticExtendedDataRecord			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticExtendedDataRecord			
Note	Description of an extended data record. Tags: atp.recommendedPackage=DiagnosticExtendedDataRecords			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , Multilanguage , Referrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
customTrigger	String	0..1	attr	This attribute shall be taken to verbally describe the nature of the custom trigger.
recordElement	DiagnosticParameter	*	aggr	Defined DataElements in the extended record element. Stereotypes: atpSplittable Tags: atp.Splitkey=recordElement.bitOffset, recordElement.ident.shortName
recordNumber	PositiveInteger	0..1	attr	This attribute specifies an unique identifier for an extended data record.
trigger	DiagnosticRecordTriggerEnum	0..1	attr	This attribute specifies the primary trigger to allocate an event memory entry.
update	Boolean	0..1	attr	This attribute defines when an extended data record is captured. true: This extended data record is captured every time. false: This extended data record is only captured for new event memory entries.

Table 4.182: DiagnosticExtendedDataRecord

[constr_1756] Existence of attributes `DiagnosticExtendedDataRecord.trigger` and `update`*Imposition time:* `IT_Dext`

[For each `DiagnosticExtendedDataRecord`, attributes `trigger` and `update` shall only exist if at least one `DiagnosticDataElement` is aggregated by a `DiagnosticExtendedDataRecord.recordElement` in the role `dataElement` to which no reference in the role `DiagnosticDemProvidedDataMapping.dataElement` exists.]

[constr_1760] Existence of `DiagnosticExtendedDataRecord.recordElement`*Imposition time:* `IT_Dext`

[For each `DiagnosticExtendedDataRecord`, at least one aggregation of `DiagnosticParameter` in the role `recordElement` shall exist.]

[constr_1832] Existence of `DiagnosticExtendedDataRecord.recordNumber`*Imposition time:* `IT_Dext`

[For each `DiagnosticExtendedDataRecord`, attribute `recordNumber` shall exist.]

[constr_1859] Usage of `DiagnosticRecordTriggerEnum.testFailedThisOperationCycle`*Imposition time:* `IT_Dext`

[The enumeration value `DiagnosticRecordTriggerEnum.testFailedThisOperationCycle` shall only be used in the context of meta-class `DiagnosticFreezeFrame`.]

[constr_10364] Usage of `DiagnosticRecordTriggerEnum.testPassed`*Imposition time:* `IT_Dext`

[The enumeration value `DiagnosticRecordTriggerEnum.testPassed` shall only be used in context of `DiagnosticExtendedDataRecord.trigger`.]

The meaning of [constr_10364] is that the use of `DiagnosticRecordTriggerEnum.testPassed` in `DiagnosticFreezeFrame` is explicitly not allowed.

Enumeration	<code>DiagnosticRecordTriggerEnum</code>
Package	<code>M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticFreezeFrame</code>
Note	Triggers to allocate an event memory entry.
Aggregated by	<code>DiagnosticExtendedDataRecord.trigger</code> , <code>DiagnosticFreezeFrame.trigger</code>
Literal	Description





Enumeration	DiagnosticRecordTriggerEnum
confirmed	capture on "Confirmed" Tags: atp.EnumerationLiteralIndex=0
custom	implement custom capture Tags: atp.EnumerationLiteralIndex=4
fdcThreshold	capture on "FDC Threshold" Tags: atp.EnumerationLiteralIndex=1
pending	capture on "Pending" Tags: atp.EnumerationLiteralIndex=2
testFailed	capture on "Test Failed" Tags: atp.EnumerationLiteralIndex=3
testFailedThis OperationCycle	Test Failed This Operation Cycle. Tags: atp.EnumerationLiteralIndex=5
testPassed	Capture on testFailed bit transition 1 --> 0. Tags: atp.EnumerationLiteralIndex=6

Table 4.183: DiagnosticRecordTriggerEnum

4.4.5 DiagnosticFreezeFrame

[TPS_DEXT_03009] Semantics of **DiagnosticFreezeFrame**

Upstream requirements: [RS_DEXT_00033](#)

[A **DiagnosticFreezeFrame** needs an ordered list of references to **DiagnosticDataIdentifiers**. However, this reference is not modeled directly but in the context of meta-class **DiagnosticTroubleCodeProps**.]

For more details, please refer to [Figure 4.58](#).

[constr_1357] Value of **freezeFrame.recordNumber**

Imposition time: [IT_Dext](#)

[To be compliant to ISO, the value of **freezeFrame.recordNumber** shall be set in the interval as defined in [\[17, ISO 14229-1\]](#).]

[constr_1512] **freezeFrame.recordNumber** shall be unique within primary fault memory

Imposition time: [IT_Dext](#)

[For all **DiagnosticTroubleCodeProps** that refer to **DiagnosticMemoryDestinationPrimary** in the role **diagnosticMemory** there shall be no two **freezeFrame.recordNumber** with the same value.]

[constr_1514] `freezeFrame.recordNumber` shall be unique within user-defined fault memory*Imposition time:* `IT_Dext`

[For all `DiagnosticTroubleCodeProps` that refer to `DiagnosticMemoryDestinationUserDefined` in the role `diagnosticMemory` there shall be no two `freezeFrame.recordNumber` with the same value for any `DiagnosticMemoryDestinationUserDefined` referenced as `DiagnosticTroubleCodeProps.diagnosticMemory` with a given value of `memoryId`.]

Class	DiagnosticFreezeFrame			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticFreezeFrame			
Note	This element describes combinations of DIDs for a non OBD relevant freeze frame. Tags: atp.recommendedPackage=DiagnosticFreezeFrames			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
customTrigger	String	0..1	attr	This attribute shall be taken to verbally describe the nature of the custom trigger.
recordNumber	PositiveInteger	0..1	attr	This attribute defines a record number for a freeze frame record. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
trigger	DiagnosticRecordTriggerEnum	0..1	attr	This attribute defines the primary trigger to allocate an event memory entry.
update	Boolean	0..1	attr	This attribute defines the approach when the freeze frame record is stored/updated. true: FreezeFrame record is captured every time. false: FreezeFrame record is only captured for new event memory entries.

Table 4.184: DiagnosticFreezeFrame**[TPS_DEXT_01144] Definition of a custom trigger for a freeze frame***Upstream requirements:* [RS_DEXT_00033](#)

[It is possible to define a custom trigger for the capturing of a freeze frame. The custom nature, however, severely limits the possibilities for a formal description of such a trigger. Therefore, AUTOSAR can only provide a means to verbally describe how the custom trigger shall operate.

For this purpose the attribute `DiagnosticFreezeFrame.customTrigger` has been defined.]

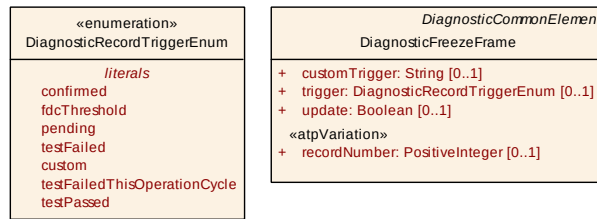


Figure 4.63: Modeling of DiagnosticFreezeFrame

[constr_1617] Existence of attribute `DiagnosticFreezeFrame.customTrigger`

Imposition time: IT_Dext

[The attribute `DiagnosticFreezeFrame.customTrigger` shall only exist if the attribute `DiagnosticFreezeFrame.trigger` is set to the value `DiagnosticRecordTriggerEnum.custom`.]

[constr_1833] Existence of `DiagnosticFreezeFrame.trigger`

Imposition time: IT_Dext

[For each `DiagnosticFreezeFrame`, attribute `trigger` shall exist.]

4.4.6 DiagnosticCondition

[TPS_DEXT_03010] Combination of `DiagnosticConditions` to `DiagnosticConditionGroups`

Upstream requirements: RS_DEXT_00027, RS_DEXT_00028, RS_DEXT_00030, RS_DEXT_00031

[`DiagnosticConditions` are combined to `DiagnosticConditionGroups` and define a certain number of checks (e.g. correct voltage range) before the event report is accepted or the event gets qualified.]

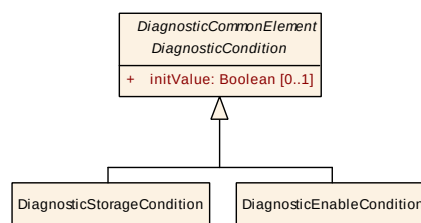


Figure 4.64: Modeling of DiagnosticCondition

[TPS_DEXT_03001] Different types of conditions

Upstream requirements: [RS_DEXT_00027](#)

[There are two different types of conditions: [DiagnosticEnableConditions](#) and [DiagnosticStorageCondition](#):

- As long as the [DiagnosticEnableCondition](#) is not fulfilled, the event reports are not valid and therefore will not be accepted.
- As long as the [DiagnosticStorageCondition](#) is not fulfilled, the event is not stored in the event memory.

]

Class	<i>DiagnosticCondition</i> (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticCondition			
Note	Abstract element for StorageConditions and EnableConditions.			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	DiagnosticEnableCondition , DiagnosticStorageCondition			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
initValue	Boolean	0..1	attr	Defines the initial status for enable or disable of acceptance/storage of event reports of a diagnostic event. The value is the initialization after power up (before this condition is reported the first time). true: acceptance/storage of a diagnostic event enabled false: acceptance/storage of a diagnostic event disabled

Table 4.185: DiagnosticCondition

[constr_1834] Existence of [DiagnosticCondition.initValue](#)

Imposition time: [IT_Dext](#)

[For each [DiagnosticCondition](#), attribute [initValue](#) shall exist.]

Class	<i>DiagnosticEnableCondition</i>			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticCondition			
Note	Specification of an enable condition. Tags: atp.recommendedPackage=DiagnosticConditions			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticCondition , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.186: DiagnosticEnableCondition

Class	DiagnosticStorageCondition			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticCondition			
Note	Specification of a storage condition. Tags: atp.recommendedPackage=DiagnosticConditions			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, DiagnosticCondition, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.187: DiagnosticStorageCondition

4.4.7 Diagnostic Debouncing

[TPS_DEXT_01048] Actual algorithm for the diagnostic event debouncing

Upstream requirements: [RS_DEXT_00023](#), [RS_DEXT_00053](#)

[The actual algorithm for the debouncing is represented by subclasses of [DiagEventDebounceAlgorithm](#) aggregated in the role [DiagnosticDebounceAlgorithmProps.debounceAlgorithm](#).]

In other words, the debouncing of diagnostic events can be formulated in three different ways:

- The [DiagEventDebounceCounterBased](#) represents the ability to implement a counter-based debouncing.
- The [DiagEventDebounceTimeBased](#) represents the ability to implement a time-based debouncing.
- The [DiagEventDebounceMonitorInternal](#) represents the ability to implement the debouncing inside the implementation of the diagnostic monitor itself.

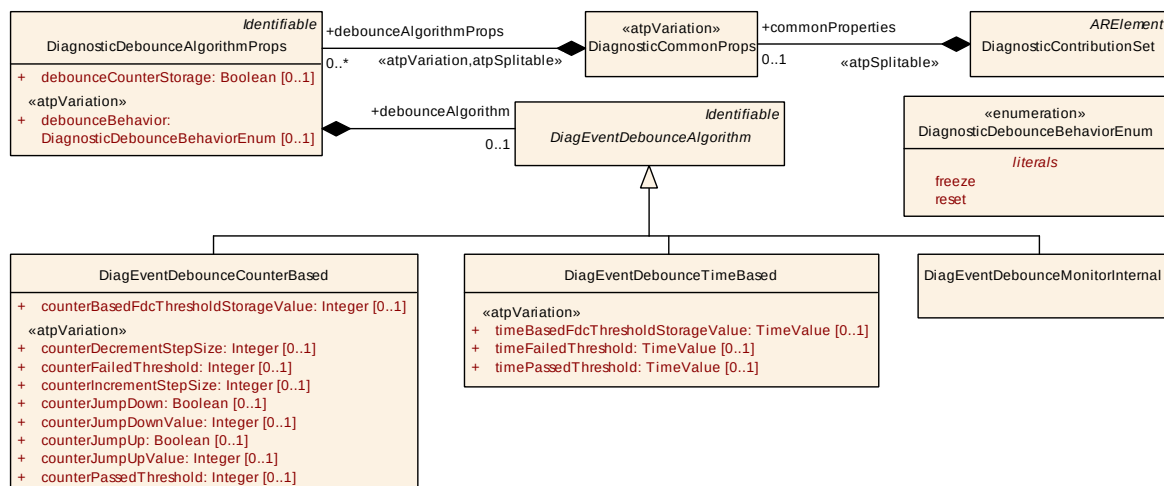


Figure 4.65: Details of [DiagnosticDebounceAlgorithmProps](#)

[constr_1359] Condition for the existence of attribute `DiagnosticDebounceAlgorithmProps.debounceCounterStorage`*Imposition time:* IT_Dext

[Attribute `debounceCounterStorage` of meta-class `DiagnosticDebounceAlgorithmProps` shall only exist if the aggregation of attribute `debounceAlgorithm` at `DiagnosticDebounceAlgorithmProps` actually aggregates a `DiagEventDebounceCounterBased`.]

Class	DiagnosticDebounceAlgorithmProps			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm			
Note	Defines properties for the debounce algorithm class.			
Base	ARObject, Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	DiagnosticCommonProps.debounceAlgorithmProps			
Attribute	Type	Mult.	Kind	Note
debounce Algorithm	DiagEventDebounceAlgorithm	0..1	aggr	This represents the actual debounce algorithm.
debounce Behavior	DiagnosticDebounceBehaviorEnum	0..1	attr	This attribute defines how the event debounce algorithm will behave, if a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
debounce CounterStorage	Boolean	0..1	attr	Switch to store the debounce counter value non-volatile or not. true: debounce counter value shall be stored non-volatile false: debounce counter value is volatile Please note that this attribute is not relevant for the adaptive platform.

Table 4.188: DiagnosticDebounceAlgorithmProps**[constr_10418] Existence of attribute `DiagnosticDebounceAlgorithmProps.debounceAlgorithm`***Imposition time:* IT_Dext

[For each `DiagnosticDebounceAlgorithmProps`, attribute `debounceAlgorithm` shall exist.]

Class	DiagEventDebounceAlgorithm (abstract)
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds
Note	This class represents the ability to specify the pre-debounce algorithm which is selected and/or required by the particular monitor. This class inherits from <code>Identifiable</code> in order to allow further documentation of the expected or implemented debouncing and to use the category for the identification of the expected / implemented debouncing.
Base	ARObject, Identifiable , MultilanguageReferrable , Referrable





Class	DiagEventDebounceAlgorithm (abstract)			
Subclasses	DiagEventDebounceCounterBased , DiagEventDebounceMonitorInternal , DiagEventDebounceTimeBased			
Aggregated by	DiagnosticDebounceAlgorithmProps.debounceAlgorithm , DiagnosticEventNeeds.diagEventDebounceAlgorithm			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.189: DiagEventDebounceAlgorithm

Class	DiagEventDebounceCounterBased			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	This meta-class represents the ability to indicate that the counter-based debounce algorithm shall be used by the DEM for this diagnostic monitor. This is related to set the ECUC choice container DemDebounceAlgorithmClass to DemDebounceCounterBased.			
Base	ARObject , DiagEventDebounceAlgorithm , Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	DiagnosticDebounceAlgorithmProps.debounceAlgorithm , DiagnosticEventNeeds.diagEventDebounceAlgorithm			
Attribute	Type	Mult.	Kind	Note
counterBasedFdcThresholdStorageValue	Integer	0..1	attr	Threshold to allocate an event memory entry and to capture the Freeze Frame.
counterDecrementStepSize	Integer	0..1	attr	This value shall be taken to decrement the internal debounce counter. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
counterFailedThreshold	Integer	0..1	attr	This value defines the event-specific limit that indicates the "failed" counter status. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
counterIncrementStepSize	Integer	0..1	attr	This value shall be taken to increment the internal debounce counter. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
counterJumpDown	Boolean	0..1	attr	This value activates or deactivates the counter jump-down behavior. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
counterJumpDownValue	Integer	0..1	attr	This value represents the initial value of the internal debounce counter if the counting direction changes from incrementing to decrementing. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
counterJumpUp	Boolean	0..1	attr	This value activates or deactivates the counter jump-up behavior. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime





Class	DiagEventDebounceCounterBased			
counterJumpUp Value	Integer	0..1	attr	This value represents the initial value of the internal debounce counter if the counting direction changes from decrementing to incrementing. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
counterPassed Threshold	Integer	0..1	attr	This value defines the event-specific limit that indicates the "passed" counter status. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime

Table 4.190: DiagEventDebounceCounterBased

[constr_1835] Existence of `DiagEventDebounceCounterBased.counterDecrementStepSize`

Imposition time: IT_Dext

[For each `DiagEventDebounceCounterBased`, attribute `counterDecrementStepSize` shall Existence.]

[constr_1836] Existence of `DiagEventDebounceCounterBased.counterIncrementStepSize`

Imposition time: IT_Dext

[For each `DiagEventDebounceCounterBased`, attribute `counterIncrementStepSize` shall exist.]

[constr_1837] Existence of `DiagEventDebounceCounterBased.counterFailedThreshold`

Imposition time: IT_Dext

[For each `DiagEventDebounceCounterBased`, attribute `counterFailedThreshold` shall exist.]

[constr_1838] Existence of `DiagEventDebounceCounterBased.counterPassedThreshold`

Imposition time: IT_Dext

[For each `DiagEventDebounceCounterBased`, attribute `counterPassedThreshold` shall exist.]

[constr_1766] Existence of `DiagEventDebounceCounterBased.counterJumpDownValue`

Imposition time: IT_Dext

[For each `DiagEventDebounceCounterBased`, attribute `counterJumpDownValue` shall only exist if attribute `counterJumpDown` exists and is set to `true`.]

[constr_1767] Existence of `DiagEventDebounceCounterBased.counterJumpUpValue`

Imposition time: `IT_Dext`

[For each `DiagEventDebounceCounterBased`, attribute `counterJumpUpValue` shall only exist if attribute `counterJumpUp` exists and is set to `true`.]

Class	DiagEventDebounceTimeBased			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	This meta-class represents the ability to indicate that the time-based pre-debounce algorithm shall be used by the Dem for this diagnostic monitor. This is related to set the EcuC choice container <code>DemDebounceAlgorithmClass</code> to <code>DemDebounceTimeBase</code>.			
Base	<code>ARObject</code> , <code>DiagEventDebounceAlgorithm</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>Referrable</code>			
Aggregated by	<code>DiagnosticDebounceAlgorithmProps.debounceAlgorithm</code> , <code>DiagnosticEventNeeds.diagEventDebounceAlgorithm</code>			
Attribute	Type	Mult.	Kind	Note
<code>timeBasedFdcThresholdStorageValue</code>	<code>TimeValue</code>	<code>0..1</code>	<code>attr</code>	Threshold to allocate an event memory entry and to capture the Freeze Frame. Stereotypes: <code>atpVariation</code> Tags: <code>vh.latestBindingTime=preCompileTime</code>
<code>timeFailedThreshold</code>	<code>TimeValue</code>	<code>0..1</code>	<code>attr</code>	This value represents the event-specific delay indicating the "failed" status. Stereotypes: <code>atpVariation</code> Tags: <code>vh.latestBindingTime=preCompileTime</code>
<code>timePassedThreshold</code>	<code>TimeValue</code>	<code>0..1</code>	<code>attr</code>	This value represents the event-specific delay indicating the "passed" status. Stereotypes: <code>atpVariation</code> Tags: <code>vh.latestBindingTime=preCompileTime</code>

Table 4.191: DiagEventDebounceTimeBased

[constr_1839] Existence of attribute `DiagEventDebounceTimeBased.timeFailedThreshold`

Imposition time: `IT_Dext`

[For each `DiagEventDebounceTimeBased`, attribute `timeFailedThreshold` shall exist.]

[constr_1840] Existence of attribute `DiagEventDebounceTimeBased.timePassedThreshold`

Imposition time: `IT_Dext`

[For each `DiagEventDebounceTimeBased`, attribute `timePassedThreshold` shall exist.]

Class	DiagEventDebounceMonitorInternal			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	This meta-class represents the ability to indicate that no Dem pre-debounce algorithm shall be used for this diagnostic monitor. The SWC might implement an internal debouncing algorithm and report qualified (debounced) results to the Dem/DM.			
Base	ARObject, DiagEventDebounceAlgorithm , Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	DiagnosticDebounceAlgorithmProps.debounceAlgorithm , DiagnosticEventNeeds.diagEventDebounceAlgorithm			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.192: DiagEventDebounceMonitorInternal

Enumeration	DiagnosticDebounceBehaviorEnum	
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm	
Note	Event debounce algorithm behavior options.	
Aggregated by	DiagnosticDebounceAlgorithmProps.debounceBehavior	
Literal	Description	
freeze	The event debounce counter will be frozen with the current value and will not change while a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. After all related enable conditions are fulfilled and ControlDTCSetting of the related event is enabled again, the event qualification will continue with the next report of the event (i.e. SetEventStatus). Tags: atp.EnumerationLiteralIndex=0	
reset	The event debounce counter will be reset to initial value if a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. The qualification of the event will be restarted with the next valid event report. Tags: atp.EnumerationLiteralIndex=1	

Table 4.193: DiagnosticDebounceBehaviorEnum

4.4.8 DiagnosticConditionGroup

[TPS_DEXT_01084] Semantics of [DiagnosticConditionGroups](#)

Upstream requirements: [RS_DEXT_00023](#), [RS_DEXT_00028](#), [RS_DEXT_00029](#)

[[DiagnosticConditionGroups](#) are used to collect [DiagnosticConditions](#) that in turn are assigned to [DiagnosticEvents](#).]

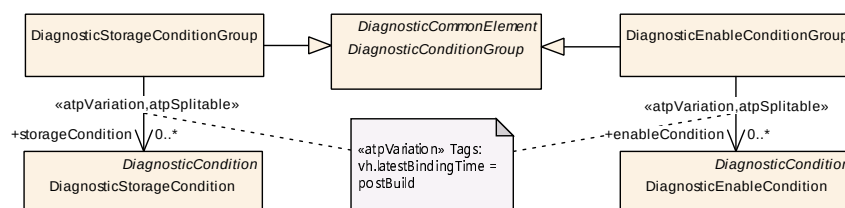


Figure 4.66: Modeling of DiagnosticConditionGroup

Class	DiagnosticConditionGroup (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticConditionGroup			
Note	Abstract element for StorageConditionGroups and EnableConditionGroups.			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	DiagnosticEnableConditionGroup , DiagnosticStorageConditionGroup			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.194: DiagnosticConditionGroup

Class	DiagnosticEnableConditionGroup			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticConditionGroup			
Note	Enable condition group which includes one or several enable conditions. Tags: atp.recommendedPackage=DiagnosticConditions			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticConditionGroup , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
enableCondition	DiagnosticEnableCondition	*	ref	Reference to enableConditions that are part of the EnableConditionGroup. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=enableCondition.diagnosticEnableCondition, enableCondition.variationPoint.shortLabel vh.latestBindingTime=postBuild

Table 4.195: DiagnosticEnableConditionGroup

[constr_1841] Existence of [DiagnosticEnableConditionGroup.enableCondition](#)

Imposition time: [IT_Dext](#)

[For each [DiagnosticEnableConditionGroup](#), attribute [enableCondition](#) shall exist.]

Class	DiagnosticStorageConditionGroup			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticConditionGroup			
Note	Storage condition group which includes one or several storage conditions. Tags: atp.recommendedPackage=DiagnosticConditions			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticConditionGroup , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	DiagnosticStorageConditionGroup			
storage Condition	DiagnosticStorageCondition	*	ref	Reference to storageConditions that are part of the StorageConditionGroup. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=storageCondition.diagnosticStorageCondition, storageCondition.variationPoint.shortLabel vh.latestBindingTime=postBuild

Table 4.196: DiagnosticStorageConditionGroup

[constr_1842] Existence of [DiagnosticStorageConditionGroup.storageCondition](#)

Imposition time: IT_Dext

[For each [DiagnosticStorageConditionGroup](#), attribute [storageCondition](#) shall exist.]

4.4.9 DiagnosticOperationCycle

[TPS_DEXT_01087] Semantics of [DiagnosticOperationCycle](#)

Upstream requirements: RS_DEXT_00054

[Different types of [DiagnosticOperationCycles](#) are supported and defined by the [type](#) attribute, e.g. the time between ignition on and ignition off.]

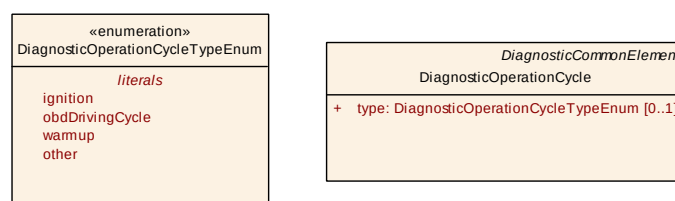


Figure 4.67: Modeling of DiagnosticOperationCycle

Class	DiagnosticOperationCycle			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticOperationCycle			
Note	Definition of an operation cycle that is the base of the event qualifying and for Dem scheduling. Tags: atp.recommendedPackage=DiagnosticOperationCycles			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
type	DiagnosticOperationCycleTypeEnum	0..1	attr	Operation cycles types for the Dem.

Table 4.197: DiagnosticOperationCycle

Enumeration	DiagnosticOperationCycleTypeEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticOperationCycle
Note	Operation cycles types used to identify certain Operation cycles with a certain semantics.
Aggregated by	DiagnosticOperationCycle.type
Literal	Description
ignition	Ignition ON / OFF cycle Tags: atp.EnumerationLiteralIndex=0
obdDrivingCycle	OBD Driving cycle Tags: atp.EnumerationLiteralIndex=1
other	further operation cycle Tags: atp.EnumerationLiteralIndex=2
warmup	OBD Warm up cycle Tags: atp.EnumerationLiteralIndex=5

Table 4.198: DiagnosticOperationCycleTypeEnum

4.4.10 DiagnosticAging

[TPS_DEXT_03021] Aging

Upstream requirements: [RS_DEXT_00055](#)

[It is possible to remove a specific event from the event memory, if its fault conditions are not fulfilled for a certain period of time. This process is called as aging or unlearning.]

This semantics is formalized by means of the meta-class [DiagnosticAging](#).]

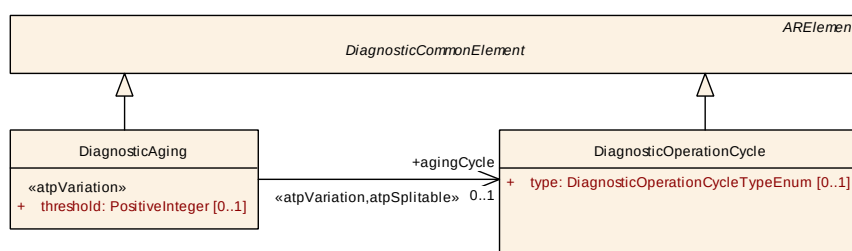


Figure 4.68: Modeling of [DiagnosticAging](#)

Class	DiagnosticAging
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticAging
Note	Defines the aging algorithm. Tags: atp.recommendedPackage=DiagnosticAgings
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , Multilanguage , Referrable , PackageableElement , Referrable
Aggregated by	ARPackage.element





Class	DiagnosticAging			
Attribute	Type	Mult.	Kind	Note
agingCycle	DiagnosticOperation Cycle	0..1	ref	This represents the applicable aging cycle. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=agingCycle.diagnosticOperationCycle, aging Cycle.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
threshold	PositiveInteger	0..1	attr	Number of aging cycles needed to unlearn/delete the event. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime

Table 4.199: DiagnosticAging

[constr_1848] Existence of attribute **DiagnosticAging.agingCycle**

Imposition time: IT_Dext

[For each **DiagnosticAging**, attribute **agingCycle** shall exist.]

[constr_1849] Existence of attribute **DiagnosticAging.threshold**

Imposition time: IT_Dext

[For each **DiagnosticAging**, attribute **threshold** shall exist.]

4.4.11 DiagnosticIndicator

[TPS_DEXT_03022] Different kinds of **DiagnosticIndicators**

Upstream requirements: RS_DEXT_00056

[Different **types** of Indicators can be defined with the **DiagnosticIndicator** element. For this, the attribute **DiagnosticIndicator.type** shall be used.]

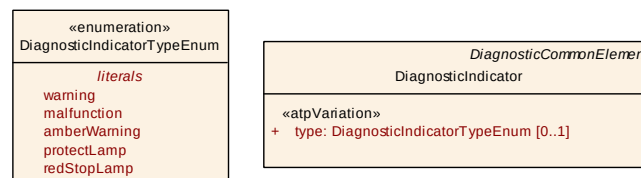


Figure 4.69: Modeling of **DiagnosticIndicator**

Class	DiagnosticIndicator			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticIndicator			
Note	Definition of an indicator. Tags: atp.recommendedPackage=DiagnosticIndicators			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , Multilanguage , Referrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
type	DiagnosticIndicatorTypeEnum	0..1	attr	Defines the type of the indicator. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime

Table 4.200: DiagnosticIndicator

Enumeration	DiagnosticIndicatorTypeEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticIndicator
Note	Type of an indicator.
Aggregated by	DiagnosticIndicator.type , IndicatorStatusNeeds.type
Literal	Description
amberWarning	Amber Warning Lamp Tags: atp.EnumerationLiteralIndex=0
malfunction	Malfunction Indicator Lamp Tags: atp.EnumerationLiteralIndex=1
protectLamp	Protect Lamp Tags: atp.EnumerationLiteralIndex=2
redStopLamp	Red Stop Lamp Tags: atp.EnumerationLiteralIndex=3
warning	Warning Tags: atp.EnumerationLiteralIndex=4

Table 4.201: DiagnosticIndicatorTypeEnum

4.4.12 DiagnosticTestResult

The meta-class [DiagnosticTestResult](#) allows for a formal definition of a diagnostic test result.

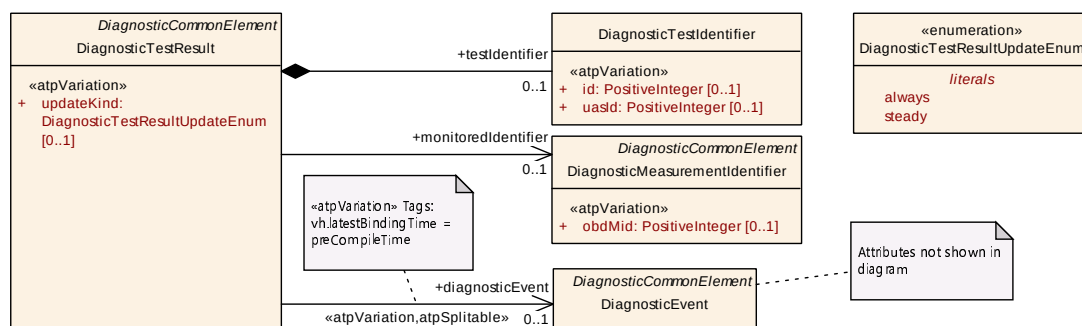


Figure 4.70: Modeling of [DiagnosticTestResult](#)

The purpose of this meta-class is to support the reporting of the latest test results back to a client. This is of special importance for the OBD service mode 0x06, see [Section 4.3.9.5](#).

Class	DiagnosticTestResult			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTestResult			
Note	This meta-class represents the ability to define diagnostic test results. Tags: atp.recommendedPackage=DiagnosticTestResults			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , Multilanguage , Referrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnosticEvent	DiagnosticEvent	0..1	ref	This attribute represents the diagnostic event that is related to the diagnostic test result. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=diagnosticEvent.diagnosticEvent, diagnosticEvent.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
monitoredIdentifier	DiagnosticMeasurementIdentifier	0..1	ref	This attribute represents the related diagnostic monitored identifier.
testIdentifier	DiagnosticTestIdentifier	0..1	aggr	This attribute represents the applicable test identifier.
updateKind	DiagnosticTestResultUpdateEnum	0..1	attr	This attribute controls the update behavior of the enclosing DiagnosticTestResult. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime

Table 4.202: DiagnosticTestResult

[constr_1850] Existence of aggregation [DiagnosticTestResult.testIdentifier](#)

Imposition time: IT_Dext

[For each [DiagnosticTestResult](#), the aggregation of meta-class [DiagnosticTestIdentifier](#) in the role [testIdentifier](#) shall exist.]

[constr_1851] Existence of reference [DiagnosticTestResult.monitoredIdentifier](#)

Imposition time: IT_Dext

[For each [DiagnosticTestResult](#), the reference to meta-class [DiagnosticTestIdentifier](#) in the role [monitoredIdentifier](#) shall exist.]

Enumeration	DiagnosticTestResultUpdateEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTestResult
Note	This meta-class represents the ability to define the update behavior of a DiagnosticTestResult.
Aggregated by	DiagnosticTestResult.updateKind





Enumeration	DiagnosticTestResultUpdateEnum
Literal	Description
always	Any DTR result reported by the monitor is used by the Dem. Tags: atp.EnumerationLiteralIndex=0
steady	The Dem accepts reported DTRs only when the configured debouncing mechanism is stable at the FAIL or PASS limit. Tags: atp.EnumerationLiteralIndex=1

Table 4.203: DiagnosticTestResultUpdateEnum

Class	DiagnosticTestIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTestResult			
Note	This meta-class represents the ability to create a diagnostic test identifier.			
Base	ARObject			
Aggregated by	DiagnosticTestResult.testIdentifier			
Attribute	Type	Mult.	Kind	Note
id	PositiveInteger	0..1	attr	This represents the numerical id associated with the diagnostic test identifier. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
uasId	PositiveInteger	0..1	attr	This represents the unit and scaling Id of the diagnostic test result. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime

Table 4.204: DiagnosticTestIdentifier

[constr_10412] Existence of attribute [DiagnosticTestIdentifier.id](#)

Imposition time: IT_Dext

[For each [DiagnosticTestIdentifier](#), attribute [id](#) shall exist.]

[constr_10413] Existence of attribute [DiagnosticTestIdentifier.uasId](#)

Imposition time: IT_Dext

[For each [DiagnosticTestIdentifier](#), attribute [uasId](#) shall exist.]

Class	DiagnosticMeasurementIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTestResult			
Note	This meta-class represents the ability to describe a measurement identifier. Tags: atp.recommendedPackage=DiagnosticMeasurementIdentifiers			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , Multilanguage , Referrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	DiagnosticMeasurementIdentifier			
obdMid	PositiveInteger	0..1	attr	This represents the numerical measurement Id Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime

Table 4.205: DiagnosticMeasurementIdentifier

[constr_10414] Existence of attribute **DiagnosticMeasurementIdentifier.obdMid**

Imposition time: IT_Dext

[For each **DiagnosticMeasurementIdentifier**, attribute **obdMid** shall exist.]

Please note that a very similar modeling exists in the form of **ObdMonitorServiceNeeds.updateKind** in the context of the [8, TPS Software Component Template].

The implementer of the software-component is aware of the way the software-component uses debouncing and how it calls the Dem.

The implementer of the software-component has all the information needed to set a proper value for the attribute **ObdMonitorServiceNeeds.updateKind**.

The author of the DEXT model, on the other end, might notice that a diagnostics software-component is broken, and might use the DEXT model as a work-around to fix a wrong setting of **ObdMonitorServiceNeeds.updateKind** by means of **DiagnosticTestResult.updateKind**.

4.4.13 OBD-related aspects of Dem Configuration

The support for OBD-related (see [19, ISO 15031-5]) modeling requires the addition of some pretty global (i.e. on the level of an entire ECU) attribute that could be added to the **EcuInstance**.

However, this would not align with the idea of a decentralized configuration of the diagnostic stack where information is added at a point in time when an actual **EcuInstance** is not yet available.

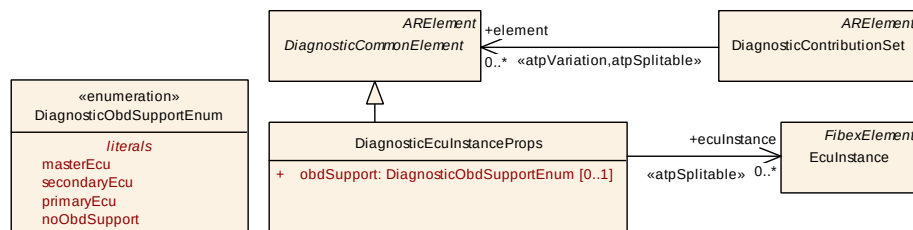


Figure 4.71: Modeling of **DiagnosticEcuInstanceProps**

Therefore, the attributes applying for the ECU-level are added to the meta-class `DiagnosticEcuInstanceProps`.

[TPS_DEXT_01122] Indication whether a `EcuInstance` supports OBD

Upstream requirements: `RS_DEXT_00048`, `RS_DEXT_00058`

[The attribute `DiagnosticEcuInstanceProps.obdSupport` is taken to define whether a given `EcuInstance` shall support OBD and in which way OBD shall be supported on this Ecu.]

Class	DiagnosticEcuInstanceProps			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticContribution			
Note	This meta-class represents the ability to model properties that are specific for a given <code>EcuInstance</code> but on the other hand represent purely diagnostic-related information. In the spirit of decentralized configuration it is therefore possible to specify the diagnostic-related information related to a given <code>EcuInstance</code> even if the <code>EcuInstance</code> does not yet exist. Tags: atp.recommendedPackage=DiagnosticEcuInstancePropss			
Base	<code>ARElement</code> , <code>ARObject</code> , <code>CollectableElement</code> , <code>DiagnosticCommonElement</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>PackageableElement</code> , <code>Referrable</code>			
Aggregated by	<code>ARPackage.element</code>			
Attribute	Type	Mult.	Kind	Note
ecuInstance	<code>EcuInstance</code>	*	ref	This represents the actual <code>EcuInstance</code> to which the information contained in the <code>DiagnosticEcuInstance</code> contribute. Stereotypes: atp.Splitable Tags: atp.Splitkey=ecuInstance
obdSupport	<code>DiagnosticObdSupportEnum</code>	0..1	attr	This attribute is used to specify the role (if applicable) in which the <code>DiagnosticEcuInstance</code> supports OBD.

Table 4.206: DiagnosticEcuInstanceProps

[constr_1852] Existence of attribute `DiagnosticEcuInstanceProps.obdSupport`

Imposition time: `IT_Dext`

[For each `DiagnosticEcuInstanceProps`, attribute `obdSupport` shall exist.]

Enumeration	DiagnosticObdSupportEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticContribution
Note	This meta-class represents the ability to model the roles in which a participation in OBD is foreseen. At the moment, this applies exclusively to the Dem. However, future extension of the Dcm may require this setting as well.
Aggregated by	<code>DiagnosticEcuInstanceProps.obdSupport</code>
Literal	Description
masterEcu	This represent the role "master ECU". Tags: atp.EnumerationLiteralIndex=0





Enumeration	DiagnosticObdSupportEnum
noObdSupport	This represents the ability to explicitly specify that no participation in OBD is foreseen. Tags: atp.EnumerationLiteralIndex=1
primaryEcu	This represents the role "primary ECU". Tags: atp.EnumerationLiteralIndex=2
secondaryEcu	This represents the role "secondary ECU". Tags: atp.EnumerationLiteralIndex=3

Table 4.207: DiagnosticObdSupportEnum

Another OBD-related feature of the Dem is the support for the computation of the *In-Use-Monitor Performance Ratio* (**IUMPR**). It is possible to define a so-called **DiagnosticIumprGroup** that encapsulates the computation of a group of **DiagnosticEvents**.

The modeling of the **DiagnosticIumprDenominatorGroup** supports the configuration of additional environmental conditions that shall be applied on the increment of the IUMPR denominator.

From the modeling point of view, neither **DiagnosticIumprGroup** nor **DiagnosticIumprDenominatorGroup** reference the associated **DiagnosticEvent** directly.

But since the **DiagnosticIumpr** referenced in the role **iumpr** in turn references at most one **DiagnosticEvent** the resulting relation effectively boils down to **DiagnosticIumprGroup** and **DiagnosticIumprDenominatorGroup** being able to precisely define the collection of affected **DiagnosticEvents**.

[TPS_DEXT_01148] Standardized values of **DiagnosticIumprGroup.category**

Upstream requirements: **RS_DEXT_00078**

[The semantics of meta-class **DiagnosticIumprGroup** is identified by means of the value of attribute **DiagnosticIumprGroup.category**.

Standardized values of attribute **DiagnosticIumprGroup.category** are:

- IUMPR_AFRI1
- IUMPR_AFRI2
- IUMPR_BOOSTPRS
- IUMPR_CAT1
- IUMPR_CAT2
- IUMPR_EGR
- IUMPR_EGSENSOR
- IUMPR_EVAP
- IUMPR_FLSYS

- IUMPR_NMHCCAT
- IUMPR_NOXADSORB
- IUMPR_NOXCAT
- IUMPR_OXS1
- IUMPR_OXS2
- IUMPR_PF1
- IUMPR_PF2
- IUMPR_PMFILTER
- IUMPR_PRIVATE
- IUMPR_SAIR
- IUMPR_SECOXS1
- IUMPR_SECOXS2

]

[TPS_DEXT_01149] Standardized values of `DiagnosticIumprDenominatorGroup.category`

Upstream requirements: [RS_DEXT_00078](#)

[The semantics of meta-class `DiagnosticIumprDenominatorGroup` is identified by means of the value of attribute `DiagnosticIumprDenominatorGroup.category`.

Standardized values of attribute `DiagnosticIumprDenominatorGroup.category` are:

- IUMPR_DENOMINATOR_500_MILES
- IUMPR_DENOMINATOR_COLDSTART
- IUMPR_DENOMINATOR_EVAP
- IUMPR_DENOMINATOR_NONE
- IUMPR_DENOMINATOR_PHYSICAL_API
- IUMPR_DENOMINATOR_CSERS
- IUMPR_DENOMINATOR_CSERS_API
- IUMPR_DENOMINATOR_EVAPPURGEFLOW

]

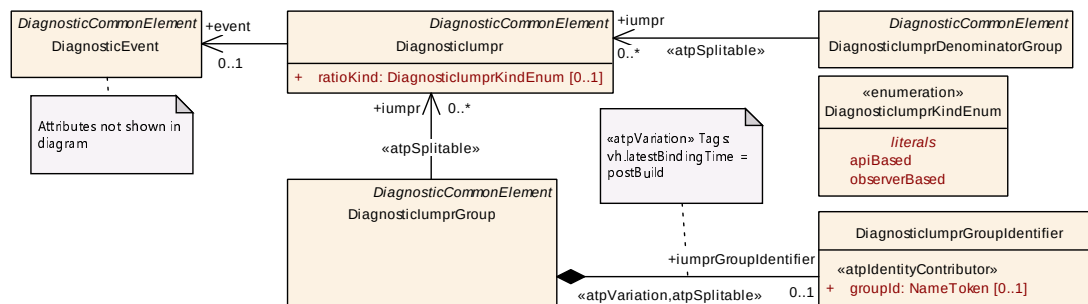


Figure 4.72: Modeling of IUMPR handling for diagnostic events

[TPS_DEXT_01156] Further definition of the semantics of DiagnosticIumpr

Upstream requirements: [RS_DEXT_00078](#)

[The semantics of meta-class `DiagnosticIumpr` in terms of how the ratio is produced can be further specified by attribute `ratioKind`.]

Class	DiagnosticIumpr			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent			
Note	This meta-class represents the ability to model the in-use monitor performance ratio. The latter computes to the number of times a fault could have been found divided by the number of times the vehicle conditions have been properly fulfilled. Tags: atp.recommendedPackage=DiagnosticIumprs			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
event	DiagnosticEvent	0..1	ref	This reference represents the DiagnosticEvent that corresponds to the IUMPR computation.
ratioKind	DiagnosticIumprKindEnum	0..1	attr	This attribute controls the behavior of how the ratio is calculated.

Table 4.208: Diagnosticlump...

Enumeration	DiagnosticlumpPrKindEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent
Note	This enumeration is used to control the ratio calculation behavior.
Aggregated by	DiagnosticlumpPr.ratioKind
Literal	Description
apiBased	The calculation is based on the usage of an API. Tags: atp.EnumerationLiteralIndex=0
observerBased	The calculation is based on the usage of an observer. Tags: atp.EnumerationLiteralIndex=1

Table 4.209: DiagnosticlumpPrKindEnum

Class	DiagnosticIumprGroup			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent			
Note	This meta-class represents the ability to model a IUMPR groups. Tags: atp.recommendedPackage=DiagnosticIumprGroups			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
iumpr	DiagnosticIumpr	*	ref	This reference collects DiagnosticIumpr to a DiagnosticIumprGroup. Stereotypes: atpSplittable Tags: atp.Splitkey=iumpr
iumprGroupIdentifier	DiagnosticIumprGroupIdentifier	0..1	aggr	This aggregation allows for the variant modeling of the groupIdentifier. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=iumprGroupIdentifier.groupId, iumprGroupIdentifier.variationPoint.shortLabel vh.latestBindingTime=postBuild

Table 4.210: DiagnosticIumprGroup

[constr_1853] Existence of attribute [DiagnosticIumprGroup.iumprGroupIdentifier](#)

Imposition time: IT_Dext

[For each [DiagnosticIumprGroup](#), attribute [iumprGroupIdentifier](#) shall exist.]

Class	DiagnosticIumprGroupIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent			
Note	This meta-class provides the ability to the define the group identifier for an IumprGroup.			
Base	ARObject			
Aggregated by	DiagnosticIumprGroup.iumprGroupIdentifier			
Attribute	Type	Mult.	Kind	Note
groupId	NameToken	0..1	attr	This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName. Stereotypes: atpIdentityContributor

Table 4.211: DiagnosticIumprGroupIdentifier

[constr_1854] Existence of attribute [DiagnosticIumprGroupIdentifier.groupId](#)

Imposition time: IT_Dext

[For each [DiagnosticIumprGroupIdentifier](#), attribute [groupId](#) shall exist.]

Class	DiagnosticIumprDenominatorGroup			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent			
Note	This meta-class represents the ability to model a IUMPR denominator groups. Tags: atp.recommendedPackage=DiagnosticIumprDenominatorGroup			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , Multilanguage , Referrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
iumpr	DiagnosticIumpr	*	ref	This reference collects DiagnosticIumpr to a DiagnosticIumprDenominatorGroup. Stereotypes: atp.Splitable Tags: atp.Splitkey=iumpr

Table 4.212: DiagnosticIumprDenominatorGroup

4.4.13.1 Dem Configuration for OBD-II

[TPS_DEXT_01111] Legislative freeze frame for the OBD-II case

Upstream requirements: [RS_DEXT_00077](#)

[For the implementation of OBD-II, the legislative freeze frame is obtained from running the [OBD Mode 0x02](#) service, modeled by means of meta-class [DiagnosticPowertrainFreezeFrame](#).]

Please note that the meta-class [DiagnosticTroubleCodeObd](#) is only applicable for the implementation of OBD-II.

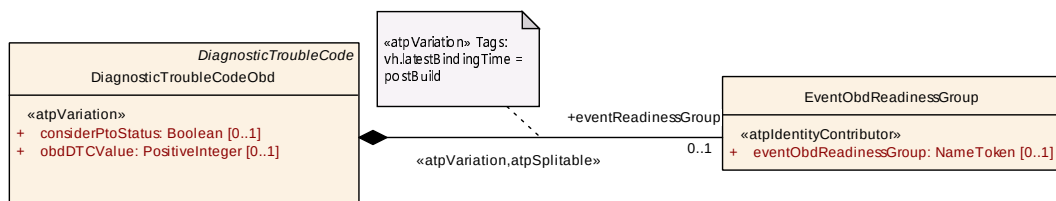


Figure 4.73: Modeling of DTCs for OBD-II

4.4.13.2 Dem Configuration for WWH-OBd

[TPS_DEXT_01112] Definition of a diagnostic trouble code for the implementation of WWH-OBd

Upstream requirements: [RS_DEXT_00077](#)

[The definition of a diagnostic trouble code for the implementation of [WWH-OBd](#) implies the existence of a [DiagnosticTroubleCodeUds](#) where attribute [wwhObdDtcClass](#) is set to any value other than [demDtcWwhObdClassNoInformation](#).]

[TPS_DEXT_01093] Definition of legislative freeze frame for WWWH-OBD

Upstream requirements: [RS_DEXT_00077](#)

[The legislative WWWH-OBD freeze frame is identified by the reference [DiagnosticTroubleCodeProps.freezeFrame](#) where attribute [recordNumber](#) is set to the value 0.

Optionally, the existence of a reference in the role [DiagnosticTroubleCodeProps.extendedDataRecord](#) with attribute [recordNumber](#) set to the value 90 is supported.]

4.5 Functional Inhibition

4.5.1 Introduction

Conceptually, the Fim (see [13, SWS Function Inhibition Manager]) is closely related to the DEM since it handles the relation of functionality (expressed via the so-called *function identifier*, or in short-form: *Fid*) and linked [DiagnosticEvents](#).

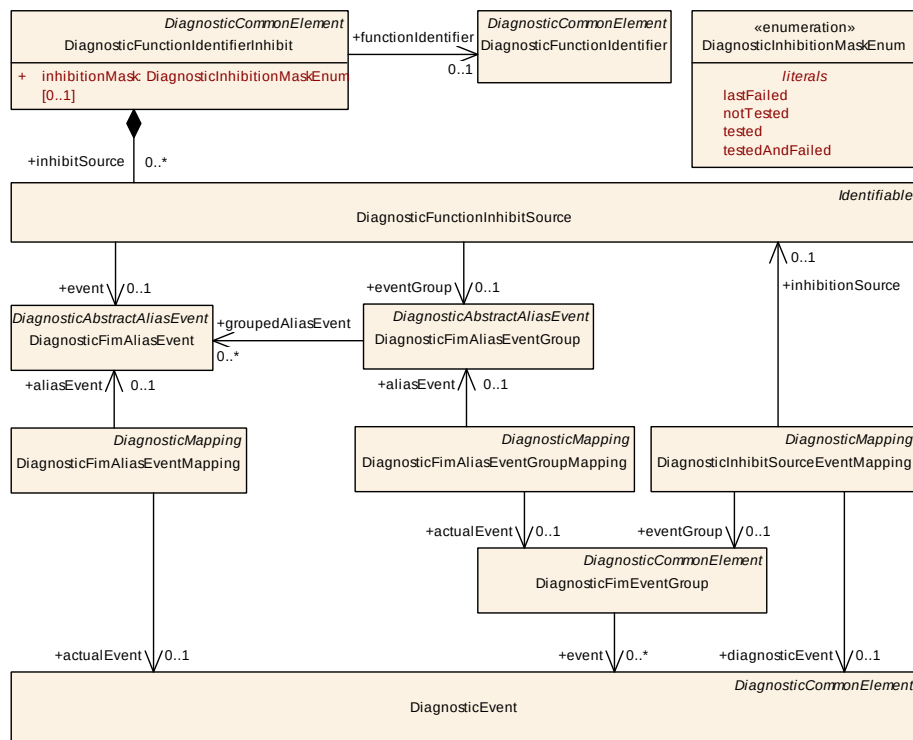


Figure 4.74: Big Picture of [FIM](#) diagnostics configuration

An overview of the configuration with regard to function inhibition is depicted in [Figure 4.74](#). The description of the relevant mapping classes related to functional inhibition (e.g. [DiagnosticFimAliasEventMapping](#)) is available in [Section 5.4](#).

4.5.2 Alias Events

The close relation of [FIM](#) and [DEM](#) may have consequences in a distributed configuration: it may not be possible to configure the [FIM](#) before the [DEM](#) is configured because model elements (especially [DiagnosticEvent](#)) from the [DEM](#) configuration are required to model the [FIM](#) configuration.

This leads to the definition of [DiagnosticFimAliasEvents](#) that can be taken to model the [FIM](#) configuration even if no [DEM](#) configuration exists or if configurations with different [DEM](#) event names shall be considered for the final projects.

Please note, however, that the definition of [DiagnosticFimAliasEvents](#) is not mandatory for the configuration of the [FIM](#). It is possible to directly take the existence of [DiagnosticEvents](#) into account and thereby bypass the definition of [DiagnosticFimAliasEvents](#).

Class	DiagnosticFimAliasEvent			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Fim			
Note	This meta-class is used to represent a given event semantics. However, the name of the actual events used in a specific project is sometimes not defined yet, not known or not in the responsibility of the author. Therefore, the DiagnosticFimAliasEvent has a reference to the actual DiagnosticEvent and by this the final connection is created. Tags: atp.recommendedPackage=DiagnosticFimAliasEvents			
Base	ARElement , ARObject , CollectableElement , DiagnosticAbstractAliasEvent , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.213: DiagnosticFimAliasEvent

Class	DiagnosticAbstractAliasEvent (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent			
Note	This meta-class represents an abstract base class for all diagnostic alias events.			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	DiagnosticFimAliasEvent , DiagnosticFimAliasEventGroup			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.214: DiagnosticAbstractAliasEvent

4.5.3 Function Identifier

The support of the [FIM](#) as an extension of the [DEM](#) meta-model requires the modeling of additional meta-classes to describe the various ways of possible mappings between [DiagnosticEvents](#) and Fids (or, in terms of the meta-model, [DiagnosticFunctionIdentifier](#)).

[TPS_DEXT_01121] Semantics of [DiagnosticFunctionIdentifier](#)

Upstream requirements: [RS_DEXT_00060](#)

[A [DiagnosticFunctionIdentifier](#) can be inhibited by different sources, i.e. in different ways:

Event This corresponds to the [DiagnosticEvent](#).

Fim Event Group This represents a group of events that is defined in the scope of the [FIM](#) (within the [FIM](#) terminology, this is also known as a *summary event*). In the meta-model, a *Fim Event Group* is represented by means of meta-class [DiagnosticFimEventGroup](#).

To emphasize the locality the corresponding meta-class has been named [DiagnosticFimEventGroup](#). [DiagnosticFimEventGroup](#) is able to reference 0..* [DiagnosticEvents](#) in the role *event*.

This way, the membership of [DiagnosticEvents](#) in the hypothetical group of events formed by the [DiagnosticFimEventGroup](#) is expressed.

]

Please note that [DiagnosticEvent](#) is discussed in [Section 4.4.2](#). Finally all sources will refer to [DiagnosticEvents](#).

Class	DiagnosticFunctionIdentifier			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Fim			
Note	This meta-class represents a diagnostic function identifier (a.k.a. FID). Tags: atp.recommendedPackage=DiagnosticFunctionIdentifiers			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , Multilanguage , Referrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 4.215: DiagnosticFunctionIdentifier

Class	DiagnosticFunctionIdentifierInhibit			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Fim			
Note	This meta-class represents the ability to define the inhibition of a specific function identifier within the Fim configuration. Tags: atp.recommendedPackage=DiagnosticFunctionIdentifierInhibits			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , Multilanguage , Referrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
function Identifier	DiagnosticFunctionIdentifier	0..1	ref	This represents the corresponding function identifier.
inhibitionMask	DiagnosticInhibitionMaskEnum	0..1	attr	This represents the value of the inhibition mask behavior.





Class	DiagnosticFunctionIdentifierInhibit			
inhibitSource	DiagnosticFunctionInhibitSource	*	aggr	This represents a collection of DiagnosticFunctionInhibit Source that contribute to the configuration of the enclosing DiagnosticFunctionIdentifierInhibit.

Table 4.216: DiagnosticFunctionIdentifierInhibit

[constr_1855] Existence of attribute [DiagnosticFunctionIdentifierInhibit.inhibitionMask](#)

Imposition time: [IT_Dext](#)

[For each [DiagnosticFunctionIdentifierInhibit](#), attribute [inhibitionMask](#) shall exist.]

Class	DiagnosticFunctionInhibitSource			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Fim			
Note	This meta-class represents the ability to define an inhibition source in the context of the Fim configuration.			
Base	ARObject , Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	DiagnosticFunctionIdentifierInhibit.inhibitSource			
Attribute	Type	Mult.	Kind	Note
event	DiagnosticFimAliasEvent	0..1	ref	This represents the alias event applicable for the referencing inhibition source.
eventGroup	DiagnosticFimAliasEventGroup	0..1	ref	This represents the event group applicable for the referencing inhibition source.

Table 4.217: DiagnosticFunctionInhibitSource

Enumeration	DiagnosticInhibitionMaskEnum
Package	M2::AUTOSARTemplates::DiagnosticExtract::Fim
Note	This meta-class represents the ability to define different kinds of inhibition mask behavior.
Aggregated by	DiagnosticFunctionIdentifierInhibit.inhibitionMask
Literal	Description
lastFailed	This represents the inhibition mask behavior "last failed". Tags: atp.EnumerationLiteralIndex=0
notTested	This represents the inhibition mask behavior "not tested". Tags: atp.EnumerationLiteralIndex=1
tested	This represents the inhibition mask behavior "tested". Tags: atp.EnumerationLiteralIndex=3
testedAndFailed	This represents the inhibition mask behavior "tested and failed". Tags: atp.EnumerationLiteralIndex=2

Table 4.218: DiagnosticInhibitionMaskEnum

[TPS_DEXT_01096] Semantics of [DiagnosticFunctionInhibitSource](#)*Upstream requirements:* [RS_DEXT_00060](#)

[The *function inhibition* itself is modeled by means of a different meta-class named [DiagnosticFunctionIdentifierInhibit](#). This meta-class, in turn, references the [DiagnosticFunctionIdentifier](#) and it also aggregates 0..* instances of a further meta-class named [DiagnosticFunctionInhibitSource](#).

[DiagnosticFunctionInhibitSource](#) inherits from [Identifiable](#) in order to be able to utilize attributes like [desc](#), [adminData](#), and [introduction](#) for the purpose of textually explaining the reason for defining a certain inhibit source.]

[TPS_DEXT_01097] Standardized value of [StructuredReq.category](#) for the modeling of [DiagnosticFunctionInhibitSource](#)*Upstream requirements:* [RS_DEXT_00060](#)

[If [DiagnosticFunctionInhibitSource.introduction.structuredReq](#) is used to document the reason for a specific function inhibition then [DiagnosticFunctionInhibitSource.introduction.structuredReq.category](#) shall be set to the value `InhibitReason`.]

[constr_1453] References from [DiagnosticFunctionInhibitSource](#)*Imposition time:* [IT_Dext](#)

[Each [DiagnosticFunctionInhibitSource](#) may either reference one of the following meta-classes in their respective roles:

- [DiagnosticFimAliasEventMapping](#) in the role `event`
- [DiagnosticFimAliasEventGroupMapping](#) in the role `eventGroup`

]

The semantics of meta-classes [DiagnosticFimAliasEventMapping](#) and [DiagnosticFimAliasEventGroupMapping](#) is described in [Section 5.4.2](#).

Class	DiagnosticFimEventGroup			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Fim			
Note	This meta-class represents the ability to model a Fim event group, also known as a summary event in Fim terminology. This represents a group of single diagnostic events. Tags: atp.recommendedPackage=DiagnosticFimEventGroups			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
event	DiagnosticEvent	*	ref	This reference represents the way of grouping diagnostic events into a summary event in the context of the Fim.

Table 4.219: DiagnosticFimEventGroup

[TPS_DEXT_01098] Semantics of attribute `DiagnosticFunctionInhibit-`
`Source.event`

Upstream requirements: RS_DEXT_00060, RS_DEXT_00061

[If the reference `DiagnosticFunctionInhibitSource.event` exists this means the inhibition applies for a single `DiagnosticEvent`]

[TPS_DEXT_01099] Semantics of attribute `DiagnosticFunctionInhibit-`
`Source.eventGroup`

Upstream requirements: RS_DEXT_00060, RS_DEXT_00061

[If the reference `DiagnosticFunctionInhibitSource.eventGroup` exists this means that the inhibition effectively applies for a group of `DiagnosticEvents` where the actual grouping is defined in the scope of the `FIM`.]

4.6 Diagnostics on J1939

4.6.1 Introduction

Diagnostics on J1939 is to some extent similar to the “rest of the world”. In other words, J1939 uses a Dcm and a Dem similarly as other communication networks do.

On the other hand, there are significant differences between J1939 and the “rest of the world” that justify the creation of a separate chapter that focuses entirely on how a diagnostic extract for J1939 shall look like.

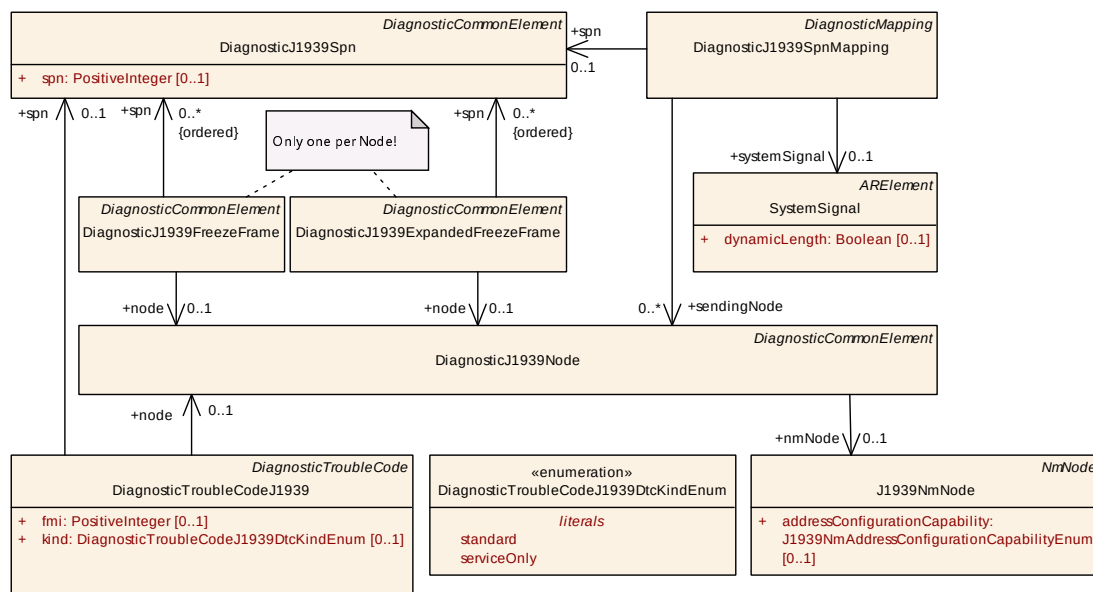


Figure 4.75: Big Picture of J1939 diagnostics configuration

That said, a support for Dcm-related model elements for J1939 is mainly happening in the domain of the [5, TPS System Template] rather than in the scope of this document.

The actual configuration of services supported by the J1939Dcm is done by assigning DMx messages in the System Description.

The mapping of the J1939DcmIPdu to the diagnostic services of J1939 Dcm happens during derivation to EcuC.

In the following sections this document focuses on explaining the modeling with respect to the Dem.

An overview to the configuration of J1939 diagnostics is depicted in Figure 4.75. The description of the relevant mapping classes related to J1939 (e.g. DiagnosticJ1939SpnMapping) is available in Section 5.5.

4.6.2 Suspect Parameter Number

In the J1939 terminology, a *Suspect Parameter Number* represents a signal identifier. The numerical value of this signal identifier is stored in the attribute DiagnosticJ1939Spn.spn.

Conceptually, the *Suspect Parameter Number* binds to the SystemSignal, i.e. by attaching a *Suspect Parameter Number* to a SystemSignal a J1939 signal is created.

At the first sight, it may seem like a good idea to attach the spn attribute to the SystemSignal itself. However, this would place a very specific J1939-related model semantics in a very prominent place.

This just doesn't seem right and thanks to the existence of meta-class DiagnosticJ1939SpnMapping (see Section 5.5.1) it is possible to "inject" the J1939 signal identifier into a SystemSignal without actually touching the SystemSignal.

Class	DiagnosticJ1939Spn			
Package	M2::AUTOSARTemplates::DiagnosticExtract::J1939			
Note	This meta-class represents the ability to model a J1939 Suspect Parameter Number (SPN). Tags: atp.recommendedPackage=DiagnosticJ1939Spns			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
spn	PositiveInteger	0..1	attr	This attribute represents the concrete numerical identification for the enclosing SPN.

Table 4.220: DiagnosticJ1939Spn

[constr_1856] Existence of attribute `DiagnosticJ1939Spn.spn`*Imposition time: IT_Dext*

[For each `DiagnosticJ1939Spn`, attribute `spn` shall exist.]

4.6.3 J1939Dcm-related Modeling

The modeling of the J1939Dcm-related configuration within the Diagnostic Extract extends to the definition of a new attribute of meta-class `J1939Cluster`. The latter provides an attribute named `networkId`. For more information, please refer to [5, TPS System Template].

The actual configuration of the services supported by J1939Dcm is done by assigning DMx messages in the System Description.

4.6.4 Dem-related Modeling

The modeling of Dem-related support for J1939 is centered around the `DiagnosticJ1939Node`. This meta-class literally acts as a sort of “inverted”⁸ hub for all the Dem-related model elements. The `DiagnosticJ1939Node` represents a specific function, or in terms of the J1939 terminology, a *Controller Application*.

This aspect is stressed in Figure 4.75.

Since, according to the J1939 concept, each *controller application* represents an independent entity in terms of network management, the following constraint applies:

[constr_1455] Relation of `DiagnosticJ1939Node` to `J1939NmNode`*Imposition time: IT_Dext*

[Each `J1939NmNode` shall only be referenced in the role `nmNode` by a single `DiagnosticJ1939Node`.]

J1939 supports the capturing of information similar to the definition of `DiagnosticFreezeFrame`, as explained in Section 4.4.5. In the case of J1939, however, two different kinds of freeze frames can be defined:

[TPS_DEXT_01104] Difference between `DiagnosticJ1939FreezeFrame` and `DiagnosticJ1939ExpandedFreezeFrame`*Upstream requirements: RS_DEXT_00065*

[A `DiagnosticJ1939FreezeFrame` is transmitted via J1939 **DM04** while a `DiagnosticJ1939ExpandedFreezeFrame` is transmitted via J1939 **DM24/DM25**.]

⁸Meaning: several meta-classes are referencing the `DiagnosticJ1939Node`.

[TPS_DEXT_01105] Relation of [DiagnosticJ1939Spn](#) to [DiagnosticJ1939FreezeFrame](#) and [DiagnosticJ1939ExpandedFreezeFrame](#)

Upstream requirements: [RS_DEXT_00065](#)

[It is possible that a given [DiagnosticJ1939Spn](#) is referenced by both a [DiagnosticJ1939FreezeFrame](#) and a [DiagnosticJ1939ExpandedFreezeFrame](#).

In other words, the *Suspect Parameter Number* can be part of a normal freeze frame and, at the same time, an expanded freeze frame.]

Class	DiagnosticJ1939FreezeFrame			
Package	M2::AUTOSARTemplates::DiagnosticExtract::J1939			
Note	This meta-class represents the ability to model a J1939 Freeze Frame. Tags: atp.recommendedPackage=DiagnosticJ1939FreezeFrames			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
node	DiagnosticJ1939Node	0..1	ref	This represents the DiagnosticJ1939Node to which the J1939 freeze frame is associated.
spn (ordered)	DiagnosticJ1939Spn	*	ref	This represents the collection of SPNs that make the J1939 Freeze Frame.

Table 4.221: DiagnosticJ1939FreezeFrame

Class	DiagnosticJ1939ExpandedFreezeFrame			
Package	M2::AUTOSARTemplates::DiagnosticExtract::J1939			
Note	This meta-class represents the ability to model an expanded J1939 Freeze Frame. Tags: atp.recommendedPackage=DiagnosticJ1939ExpandedFreezeFrames			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
node	DiagnosticJ1939Node	0..1	ref	This represents the DiagnosticJ1939Node to which the J1939 expanded freeze frame is associated.
spn (ordered)	DiagnosticJ1939Spn	*	ref	This represents the collection of SPNs that make the expanded J1939 Freeze Frame.

Table 4.222: DiagnosticJ1939ExpandedFreezeFrame

Enumeration	DiagnosticTroubleCodeJ1939DtcKindEnum			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode			
Note	This meta-class represents the ability to further specify a J1939 DTC in terms of its semantics.			
Aggregated by	DiagnosticTroubleCodeJ1939.kind			
Literal	Description			
serviceOnly	this represents a DTC that is only relevant for service in a garage, reported by e.g. DM53. Tags: atp.EnumerationLiteralIndex=0			
standard	This represents a non-specific DTC reported by e.g. DM1. Tags: atp.EnumerationLiteralIndex=1			

Table 4.223: DiagnosticTroubleCodeJ1939DtcKindEnum

[constr_1456] Valid interval for attribute [DiagnosticTroubleCodeJ1939.fmi](#)*Imposition time:* [IT_Dext](#)

[The value of the attribute [DiagnosticTroubleCodeJ1939.fmi](#) shall be in the interval 0..31.]

Please note that the rationale for the existence of [\[constr_1456\]](#) as well as the meaning of the individual values of the attribute [fmi](#) can be found in the respective [\[21, SAE J1939\]](#) specification.

Class	DiagnosticTroubleCodeJ1939			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticTroubleCode			
Note	This meta-class represents the ability to model specific trouble-code related properties for J1939. Tags: <code>atp.recommendedPackage=DiagnosticTroubleCodes</code>			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticTroubleCode , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dtcProps	DiagnosticTroubleCodeProps	0..1	ref	Defined properties associated with the J1939 DTC.
fmi	PositiveInteger	0..1	attr	This attribute represents the behavior of the Failure Mode Indicator.
kind	DiagnosticTroubleCodeJ1939DtcKindEnum	0..1	attr	This attribute further specifies the DTC in terms of its semantics.
node	DiagnosticJ1939Node	0..1	ref	This represents the related DiagnosticJ1939Node.
spn	DiagnosticJ1939Spn	0..1	ref	This represents the related SPN.

Table 4.224: DiagnosticTroubleCodeJ1939**[constr_1780] Existence of attribute [DiagnosticTroubleCodeJ1939.fmi](#)***Imposition time:* [IT_Dext](#)

[For each [DiagnosticTroubleCodeJ1939](#), attribute [fmi](#) shall exist.]

[constr_1781] Existence of attribute [DiagnosticTroubleCodeJ1939.spn](#)*Imposition time:* [IT_Dext](#)

[For each [DiagnosticTroubleCodeJ1939](#), attribute [spn](#) shall exist.]

[TPS_DEXT_01107] Definition of service-only DTC*Upstream requirements:* [RS_DEXT_00067](#)

[It is possible to specify whether given [DTCs](#) on J1939 are only relevant for a service session in a garage or workshop. The common property of service-only [DTCs](#) is that they shall be located in a memory section that is exclusively used by service-only [DTCs](#).]

The statement made by [\[TPS_DEXT_01107\]](#) needs to be secured by two constraints:

[constr_1457] Service-only DTCs shall refer to a common memory section*Imposition time:* IT_Dext

[All `DiagnosticTroubleCodeJ1939` with attribute `kind` set to the value `serviceOnly` that reference the same `DiagnosticJ1939Node` shall also reference the same `DiagnosticTroubleCodeProps.diagnosticMemory`.]

[constr_1458] Reference to `DiagnosticMemoryDestination`*Imposition time:* IT_Dext

[A `DiagnosticMemoryDestination` that is referenced by a `DiagnosticTroubleCodeJ1939.dtcProps.diagnosticMemory` where the value of attribute `DiagnosticTroubleCodeJ1939.kind` is set to `serviceOnly` shall **not be referenced by any other** `DiagnosticTroubleCodeJ1939` where attribute `kind` is set to any other value than `serviceOnly`.]

5 Diagnostic Mapping

5.1 Introduction

This chapter contains a description of how specific diagnostic resources can be associated

- with each other to form a new kind of model semantics that goes beyond the meaning the individual diagnostic resources that are affected by the combination, typically implemented by means of a specialized subclass of [DiagnosticMapping](#), or
- with model elements in either the application software or other places in the basic software stack. In this case the connection is typically created by means of subclasses of [DiagnosticSwMapping](#).

The mapping concept of the [DiagnosticExtract](#) template has been designed to support the decentralized and independent definition of diagnostic requirements that can be linked together at a late point during the development process.

It also supports the use of mapping contributions collected from various sources in order to reduce manual mapping work by the [ECU](#) integrator.

Class	<i>DiagnosticMapping</i> (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	Abstract element for different kinds of diagnostic mappings.			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	CpSwClusterResourceToDiagDataElemMapping , CpSwClusterResourceToDiagFunctionIdMapping , CpSwClusterToDiagEventMapping , CpSwClusterToDiagRoutineSubfunctionMapping , DiagnosticAuthTransmitCertificateMapping , DiagnosticDemProvidedDataMapping , DiagnosticEventToDebounceAlgorithmMapping , DiagnosticEventToEnableConditionGroupMapping , DiagnosticEventToOperationCycleMapping , DiagnosticEventToSecurityEventMapping , DiagnosticEventToStorageConditionGroupMapping , DiagnosticEventToTroubleCodeJ1939Mapping , DiagnosticEventToTroubleCodeUdsMapping , DiagnosticFimAliasEventGroupMapping , DiagnosticFimAliasEventMapping , DiagnosticInhibitSourceEventMapping , DiagnosticLumprToFunctionIdentifierMapping , DiagnosticJ1939SpnMapping , DiagnosticMasterToSlaveEventMapping , DiagnosticSecureCodingMapping , DiagnosticSecurityEventReportingModeMapping , DiagnosticSwMapping , DiagnosticTroubleCodeUdsToTroubleCodeObdMapping			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
provider SoftwareCluster	CpSoftwareCluster	0..1	ref	This reference can be used in an early design phase to associate an element of a diagnostic extract with an existing provided CPSoftwareCluster. Tags: atp.Status=draft
requester SoftwareCluster	CpSoftwareCluster	0..1	ref	This reference can be used in an early design phase to associate an element of a diagnostic extract with an existing requested CPSoftwareCluster. Tags: atp.Status=draft

Table 5.1: DiagnosticMapping

The description of the modeling of diagnostic resources can be roughly divided into five sections

- A section dedicated to the mapping of diagnostic services, see [Section 5.2](#).
- A section dedicated to the mapping in the context of event handling, see [Section 5.3](#).
- A section dedicated to the mapping in the context of the functional inhibition, see [Section 5.4](#).
- A section dedicated to the mapping in the context of the diagnostics on J1939, see [Section 5.5](#).
- A section dedicated to the mapping in the context of the software-clusters on the *AUTOSAR classic Platform*, see [Section 5.6](#).

5.2 Mapping of Diagnostic Services

Automotive diagnostics interacts with both application software and basic software in various ways that can be formalized using the AUTOSAR meta-model. This chapter contains a description of the formalization of this interaction along with the applicable constraints.

[TPS_DEXT_01040] Use case where the [DiagnosticExtract](#) refers to software-components

Upstream requirements: [RS_DEXT_00052](#)

[This is a list of the potential use case where the [DiagnosticExtract](#) refers to software-components in general and [PortPrototypes](#) in the context of either [CompositionSwComponentTypes](#) or [AtomicSwComponentTypes](#):

- [DiagnosticExtract](#) refers to [PortPrototype](#) (for the access to [dataElement](#)) or [SwcServiceDependency](#) in the context of a [AtomicSwComponentType](#) embedded in the hierarchy created by the [rootSoftwareComposition](#).
- [DiagnosticExtract](#) refers to a [PortPrototype](#)(for the access to [dataElement](#)) or [SwcServiceDependency](#) in the context of a [AtomicSwComponentType](#) embedded in the hierarchy created by a [CompositionSwComponentType](#) that is nowhere aggregated (for the time being).
- [DiagnosticExtract](#) refers to a [PortPrototype](#) (for the access to [dataElement](#)) or [SwcServiceDependency](#) in the context of an [AtomicSwComponentType](#).
- [DiagnosticExtract](#) refers to a [BswServiceDependency](#).

]

Class	SwcServiceDependency			
Package	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::ServiceMapping			
Note	Specialization of ServiceDependency in the context of an SwcInternalBehavior. It allows to associate ports, port groups and (in special cases) data defined for an atomic software component to a given ServiceNeeds element.			
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable , MultilanguageReferrable , Referrable , ServiceDependency			
Aggregated by	AdaptiveSwcInternalBehavior.serviceDependency, AtpClassifier.atpFeature, SwcInternalBehavior.serviceDependency			
Attribute	Type	Mult.	Kind	Note
assignedData	RoleBasedData Assignment	*	aggr	Defines the role of an associated data object of the same component. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=assignedData, assignedData.variation Point.shortLabel vh.latestBindingTime=preCompileTime
assignedPort	RoleBasedPort Assignment	*	aggr	Defines the role of an associated port of the same component. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=assignedPort, assignedPort.variation Point.shortLabel vh.latestBindingTime=preCompileTime
representedPort Group	PortGroup	0..1	ref	This reference specifies an association between the ServiceNeeds and a PortGroup, for example to request a communication mode which applies for communication via these ports. The referred PortGroup shall be local to this atomic SWC, but via the links between the Port Groups, a tool can evaluate this information such that all the ports linked via this port group on the same ECU can be found.
serviceNeeds	ServiceNeeds	0..1	aggr	The associated ServiceNeeds.

Table 5.2: SwcServiceDependency

Class	BswServiceDependency			
Package	M2::AUTOSARTemplates::BswModuleTemplate::BswBehavior			
Note	Specialization of ServiceDependency in the context of an BswInternalBehavior. It allows to associate BswModuleEntries and data defined for a BSW module or cluster to a given ServiceNeeds element.			
Base	ARObject, ServiceDependency			
Aggregated by	BswInternalBehavior.serviceDependency			
Attribute	Type	Mult.	Kind	Note
assignedData	RoleBasedData Assignment	*	aggr	Defines the role of an associated data object (owned by this module or cluster) in the context of the ServiceNeeds element. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=assignedData, assignedData.variation Point.shortLabel vh.latestBindingTime=preCompileTime





Class	BswServiceDependency			
assignedEntryRole	RoleBasedBswModuleEntryAssignment	*	aggr	Defines the role of an associated BswModuleEntry in the context of the ServiceNeeds element. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=assignedEntryRole, assignedEntryRole.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
ident	BswServiceDependencyIdent	0..1	aggr	This adds the ability to become referable to BswServiceDependency. Stereotypes: atpIdentityContributor Tags: xml.sequenceOffset=-100
serviceNeeds	ServiceNeeds	0..1	aggr	The associated ServiceNeeds.

Table 5.3: BswServiceDependency

Figure 5.1 provides an overview of mapping classes related to diagnostic services.

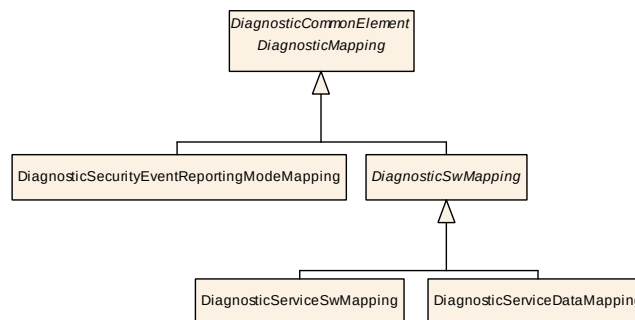


Figure 5.1: Modeling of the DiagnosticMapping in the context of diagnostic services

Please note that the references in the roles

- DiagnosticServiceDataMapping.diagnosticParameter
- DiagnosticServiceDataMapping.diagnosticDataElement
- DiagnosticServiceSwMapping.diagnosticParameter
- DiagnosticServiceSwMapping.diagnosticDataElement

Would technically have to be made variant because of the variant aggregation

- DiagnosticDataIdentifier.dataElement resp.
- DiagnosticParameterIdentifier.dataElement and finally
- DiagnosticAbstractParameter.dataElement.

However, such a change cannot be achieved in a backwards-compatible way and the less elegant, but existing mechanism of implementing the variation points (where applicable) by means of referencing

- DiagnosticServiceDataMapping and
- DiagnosticServiceSwMapping

from `DiagnosticContributionSet` in the role `element` is considered less harmful in this specific case.

In other words, the missing variability in the mentioned references shall be compensated by creating additional `DiagnosticServiceDataMapping` and `DiagnosticServiceSwMapping` and creating references to `DiagnosticDataElement` resp. `DiagnosticParameterIdent` from these new instances of the mapping classes.

5.2.1 Diagnostic Service Data Mapping

Please note that the Dcm is in general entitled to both read and write a `dataElement`. This applies even if the corresponding `PortPrototype` is a `PPortPrototype`. This means that the diagnostic service data mapping is limited to `SenderReceiverInterface`.

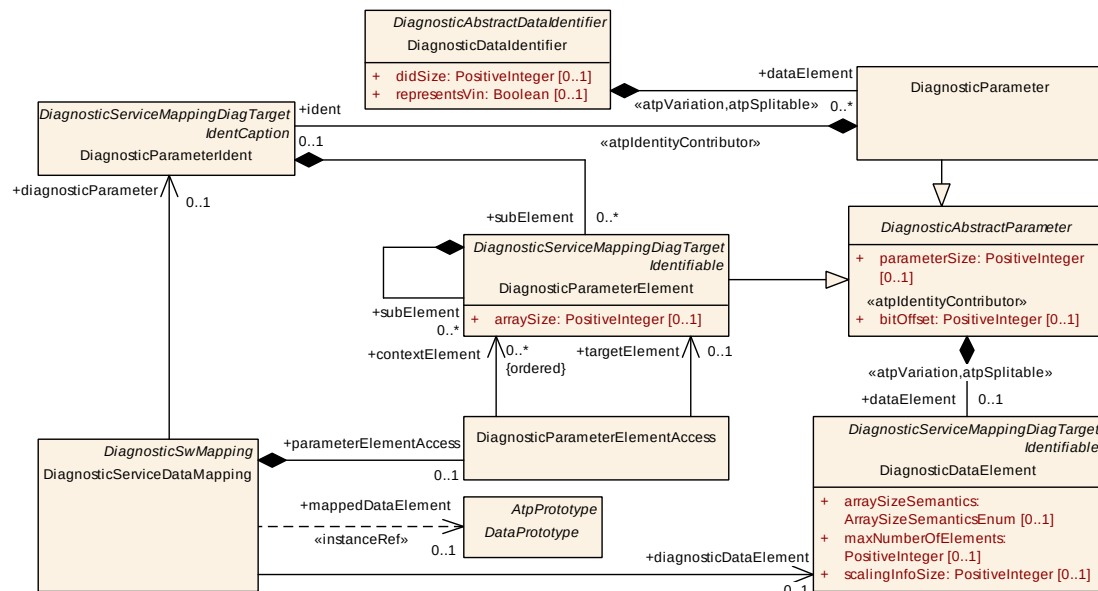


Figure 5.2: Dcm service data mapping

[TPS_DEXT_01178] Semantics of `DiagnosticServiceDataMapping.parameterElementAccess` [A reference to given `DiagnosticParameterElement` may need more than one reference in order to be able to resolve the element position in nested array-shaped `DiagnosticParameterElements`.

Therefore the meta-class `DiagnosticParameterElementAccess` utilizes the following references:

- `contextElement` covers the ability to provide references to array elements in nested array-shaped `DiagnosticParameterElements`
- `targetElement` defines the reference to the final target `DiagnosticParameterElement`.

]

For clarification, this means that a reference to a [DiagnosticParameterElement](#) inside a deeply nested structure of [DiagnosticParameterElements](#) **only requires the [targetElement](#) if no array-semantics exists** on any intermediary level of the nested [DiagnosticParameterElements](#).

The reference in the role [contextElement](#) is only required to identify array elements on intermediary levels of the nested structure.

[TPS_DEXT_01041] Semantics of attribute [DiagnosticServiceDataMapping.diagnosticDataElement](#)

Upstream requirements: [RS_DEXT_00052](#)

[By means of the attribute [DiagnosticServiceDataMapping.diagnosticDataElement](#) it is possible to specify that the Dcm has access to

- a [dataElement](#) in a [PortPrototype](#) typed by a [SenderReceiverInterface](#) or
- an [nvData](#) in a [PortPrototype](#) typed by an [NvDataInterface](#).

This type of data access is suitable for the diagnostic services [ReadDataByIdentifier](#) (0x22), [WriteDataByIdentifier](#) (0x2E), and [InputOutputControl](#) (0x2F).]

Class	DiagnosticServiceDataMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::ServiceMapping			
Note	This represents the ability to define a mapping of a diagnostic service to a software-component. This kind of service mapping is applicable for the usage of SenderReceiverInterfaces or event/notifier semantics in ServiceInterfaces on the adaptive platform. Tags: atp.recommendedPackage=DiagnosticServiceMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , DiagnosticSwMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnosticDataElement	DiagnosticDataElement	0..1	ref	This represents the applicable payload that corresponds to the referenced DataPrototype in the role mappedDataElement or (in case of a usage on the adaptive platform) mappedApDataElement.
diagnosticParameter	DiagnosticParameterIdent	0..1	ref	This represents the applicable payload that corresponds to the referenced DataPrototype in the role mappedDataElement. Tags: xml.sequenceOffset=20
mappedDataElement	DataPrototype	0..1	iref	This represents the dataElement in the application software that is accessed for diagnostic purpose. This role is applicable on the classic platform. InstanceRef implemented by: DataPrototypeInSystemInstanceRef





Class	DiagnosticServiceDataMapping			
parameter ElementAccess	DiagnosticParameter ElementAccess	0..1	aggr	This aggregation represents the single point of access to the reference to one specific DiagnosticParameter Element.

Table 5.4: DiagnosticServiceDataMapping

Class	DiagnosticParameterElementAccess			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::ServiceMapping			
Note	This meta-class acts as a single point for defining structured references to a specific Diagnostic ParameterElement.			
Base	ARObject			
Aggregated by	DiagnosticServiceDataMapping.parameterElementAccess , DiagnosticServiceSwMapping.parameter ElementAccess			
Attribute	Type	Mult.	Kind	Note
contextElement (ordered)	DiagnosticParameter Element	*	ref	This represents the context of an applicable payload that corresponds to the referenced DataPrototype in the role mappedDataElement. Tags: xml.sequenceOffset=10
targetElement	DiagnosticParameter Element	0..1	ref	This represents the target reference of an applicable payload that corresponds to the referenced Data Prototype in the role mappedDataElement. Tags: xml.sequenceOffset=20

Table 5.5: DiagnosticParameterElementAccess

[constr_1828] Existence of referenced from [DiagnosticServiceDataMapping](#)*Imposition time: IT_Dext*[For each [DiagnosticServiceDataMapping](#), the following references shall exist:

- Reference to a [DiagnosticServiceMappingDiagTarget](#), i.e. one of
 - Reference to [DiagnosticDataElement](#) in the role [diagnostic-DataElement](#)
 - Reference to [DiagnosticParameterIdent](#) in the role [diagnosticPa-rameter](#)
 - Reference to [DiagnosticParameterElement](#) in the roles
 - * [contextElement](#) (optional)
 - * [targetElement](#)
 from within [parameterElementAccess](#)
- Reference to [DataPrototype](#) in the role [mappedDataElement](#)

]

[constr_1343] Simultaneous existence of the attributes `DiagnosticServiceDataMapping.diagnosticDataElement` and `DiagnosticDataByIdentifier.dataIdentifier`*Imposition time:* IT_Dext

[A `DiagnosticServiceDataMapping.diagnosticDataElement` shall also be aggregated by a `DiagnosticDataByIdentifier` in the role `dataIdentifier.dataElement.dataElement`.]

Please note that [constr_1343] shall only apply for the step in the methodology where the `DiagnosticExtract` is considered complete to the point that the configuration of the Dcm and Dem can be derived. Any intermediate step, e.g. hand-over from OEM to tier-1 supplier does not actually enforce [constr_1343].

In other words, [constr_1343] makes sure that there is a connection between the `DiagnosticServiceDataMapping` and the corresponding `DiagnosticReadDataByIdentifier` or `DiagnosticWriteDataByIdentifier`.

Only by this means the diagnostic service becomes fully usable.

The modeling of the reference `DiagnosticServiceDataMapping.mappedDataElement` only supports the case where the target `DataPrototype` is typed by an `ApplicationDataType`.

Class	ApplicationPrimitiveDataType			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::Datatypes			
Note	A primitive data type defines a set of allowed values. Tags: atp.recommendedPackage=ApplicationDataTypes			
Base	ARElement , ARObject , ApplicationDataType , AtpBlueprint , AtpBlueprintable , AtpClassifier , AtpType , AutosarDataType , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 5.6: ApplicationPrimitiveDataType

Class	ImplementationDataType			
Package	M2::AUTOSARTemplates::CommonStructure::ImplementationDataTypes			
Note	Describes a reusable data type on the implementation level. This will typically correspond to a typedef in C-code. Tags: atp.recommendedPackage=ImplementationDataTypes			
Base	ARElement , ARObject , AbstractImplementationDataType , AtpBlueprint , AtpBlueprintable , AtpClassifier , AtpType , AutosarDataType , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–





Class	ImplementationDataType			
dynamicArraySizeProfile	String	0..1	attr	Specifies the profile which the array will follow in case this data type is a variable size array.
isStructWithOptionalElement	Boolean	0..1	attr	This attribute is only valid if the attribute category is set to STRUCTURE. If set to true, this attribute indicates that the ImplementationDataType has been created with the intention to define at least one element of the structure as optional.
subElement (ordered)	ImplementationDataTypeElement	*	aggr	Specifies an element of an array, struct, or union data type. The aggregation of ImplementationDataTypeElement is subject to variability with the purpose to support the conditional existence of elements inside a ImplementationDataType representing a structure. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=subElement.shortName, subElement.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
symbolProps	SymbolProps	0..1	aggr	This represents the SymbolProps for the ImplementationDataType. Stereotypes: atpSplitable Tags: atp.Splitkey=symbolProps.shortName
typeEmitter	NameToken	0..1	attr	This attribute is used to control which part of the AUTOSAR toolchain is supposed to trigger data type definitions.

Table 5.7: ImplementationDataType

Please refer to [8, TPS Software Component Template] for a detailed explanation of the meaning of the value of a data type `category`.

[constr_1345] DiagnosticDataElement shall not (finally) be aggregated by a DiagnosticRoutine

Imposition time: IT_Dext

[A DiagnosticDataElement that is referenced by a DiagnosticServiceDataMapping shall not (finally) be aggregated by a DiagnosticRoutine.]

[TPS_DEXT_01042] Dem uses DiagnosticServiceDataMapping

Upstream requirements: RS_DEXT_00052

[There is a use case for the Dem to utilize a DiagnosticServiceDataMapping such that elements of a DiagnosticExtendedDataRecord are fetched from dataElements in an ApplicationSwComponentType.

Therefore, [constr_1345] does intentionally not exclude the aggregation of DiagnosticDataElement by DiagnosticExtendedDataRecord in the context of DiagnosticServiceDataMapping.]

Class	ApplicationSwComponentType			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components			
Note	The ApplicationSwComponentType is used to represent the application software. Tags: atp.recommendedPackage=SwComponentTypes			
Base	ARElement , ARObject , AtomicSwComponentType , AtpBlueprint , AtpBlueprintable , AtpClassifier , AtpType , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable , SwComponentType			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 5.8: ApplicationSwComponentType

[constr_1584] DiagnosticDataElement shall not be used more than once in I/O Control instance

Imposition time: IT_Dext

[A given [DiagnosticDataElement](#) shall not be used by more than one [DiagnosticServiceDataMapping](#) that in turn refers to a [DataPrototype](#) defined in the context of a [DataInterface](#) that is used to type a [PortPrototype](#) that in turn is referenced by a [RoleBasedPortAssignment](#) where attribute *role* is set to the value `IOControlRequest`.]

[TPS_DEXT_01179] Existence of reference to DiagnosticParameterIdent in the role diagnosticParameter [If the reference [DiagnosticServiceDataMapping.diagnosticParameter](#) exists, then the intention is to map a composite [DataPrototype](#) to a [DiagnosticParameter](#) in one piece.

This means that the elements of the composite [DataPrototype](#) would be placed one after the other starting at the *bitOffset* of the referenced [DiagnosticParameter](#).]

Please find examples for the application of [DiagnosticServiceDataMapping](#) to the nested definition of [DiagnosticParameters](#) in [Section B.2](#).

5.2.2 Diagnostic Service Data Mapping for OBD

[constr_1450] Service mapping for ODB mode 0x01 for DiagnosticParameterIdentifier

Imposition time: IT_Dext

[If a [DiagnosticServiceSwMapping](#) or [DiagnosticServiceDataMapping](#) refers to a [DiagnosticRequestCurrentPowertrainData](#) and a [DiagnosticDataElement](#) that is aggregated by a [DiagnosticParameterIdentifier](#) then then one of two alternative model configurations shall exist:

- `SwcServiceDependency` referenced by the same `DiagnosticServiceSwMapping` or `DiagnosticServiceDataMapping` shall aggregate an `ObdPidServiceNeeds` in the role `serviceNeeds`.
- The `BswServiceDependencyIdent` referenced by the same `DiagnosticServiceSwMapping` shall aggregate an `ObdPidServiceNeeds` in the role `serviceNeeds`.

]

[constr_1451] Service mapping for OBD mode 0x09 for `DiagnosticInfoType`

Imposition time: `IT_Dext`

[if a `DiagnosticServiceSwMapping` refers to `DiagnosticRequestVehicleInfo` and a `DiagnosticDataElement` that is aggregated by a `DiagnosticInfoType` then one of two alternative model configurations shall exist:

- The `SwcServiceDependency` referenced by the same `DiagnosticServiceSwMapping` shall aggregate a `ObdInfoServiceNeeds` in the role `serviceNeeds`.
- The `BswServiceDependencyIdent` referenced by the same `DiagnosticServiceSwMapping` shall aggregate an `ObdInfoServiceNeeds` in the role `serviceNeeds`.

]

[constr_1452] Service mapping for OBD mode 0x08 for `DiagnosticInfoType`

Imposition time: `IT_Dext`

[if a `DiagnosticServiceSwMapping` refers to a `DiagnosticRequestControlOfOnBoardDevice` then the `SwcServiceDependency` referenced by the same `DiagnosticServiceSwMapping` shall aggregate an `ObdControlServiceNeeds` in the role `serviceNeeds`.]

Class	ObdInfoServiceNeeds			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	Specifies the abstract needs of a component or module on the configuration of OBD Services in relation to a given InfoType (OBD Service 09) which is supported by this component or module.			
Base	<code>ARObject</code> , <code>DiagnosticCapabilityElement</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>Referrable</code> , <code>ServiceNeeds</code>			
Aggregated by	<code>BswServiceDependency.serviceNeeds</code> , <code>SwcServiceDependency.serviceNeeds</code>			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–


Table 5.9: ObdInfoServiceNeeds

Class	ObdPidServiceNeeds			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	Specifies the abstract needs of a component or module on the configuration of OBD Services in relation to a particular PID (parameter identifier) which is supported by this component or module. In case of using a client/server communicated value, the related value shall be communicated via the port referenced by assignedPort. The details of this communication (e.g. appropriate naming conventions) are specified in the related software specifications (SWS).			
Base	ARObject, DiagnosticCapabilityElement, Identifiable, MultilanguageReferrable, Referrable, Service Needs			
Aggregated by	BswServiceDependency.serviceNeeds, SwcServiceDependency.serviceNeeds			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 5.10: ObdPidServiceNeeds

Class	ObdControlServiceNeeds			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	Specifies the abstract needs of a component or module on the configuration of OBD Service 08 (request control of on-board system) in relation to a particular test-Identifier (TID) supported by this component or module.			
Base	ARObject, DiagnosticCapabilityElement, Identifiable, MultilanguageReferrable, Referrable, Service Needs			
Aggregated by	BswServiceDependency.serviceNeeds, SwcServiceDependency.serviceNeeds			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 5.11: ObdControlServiceNeeds

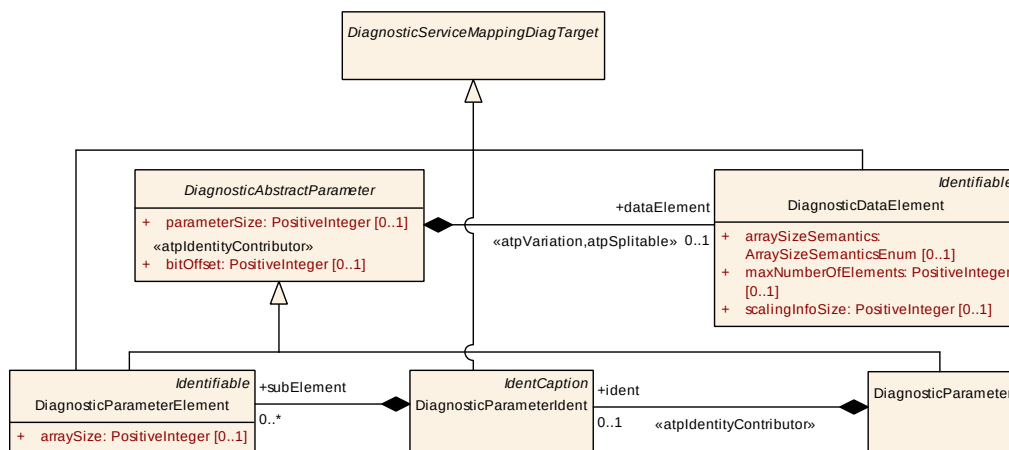
Figure 5.3: Abstract Base class **DiagnosticServiceMappingDiagTarget** for reference targets on the diagnostic end

[TPS_DEXT_01177] Utility of DiagnosticServiceMappingDiagTarget [The mapping between data in the application software and elements of a **DiagnosticAbstractDataIdentifier**, as implemented by **DiagnosticServiceSwMapping** and **DiagnosticServiceDataMapping**, supports different access points on the diagnostic end.

In order to facilitate the handling and description of the relationship, abstract class [DiagnosticServiceMappingDiagTarget](#) has been defined.]

The modeling of the [DiagnosticServiceMappingDiagTarget](#) is sketched in [Figure 5.3](#).

Leveraging the concept of the [DiagnosticServiceMappingDiagTarget](#), different cases have to be considered in the configuration of this mapping, depending on the direction of the communication.

Class	<i>DiagnosticServiceMappingDiagTarget</i> (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::ServiceMapping			
Note	This meta-class serves as a base class for diagnostics-related targets of subclasses of DiagnosticSw Mapping			
Base	<i>ARObject</i>			
Subclasses	DiagnosticDataElement , DiagnosticParameterElement , DiagnosticParameterIdent			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 5.12: DiagnosticServiceMappingDiagTarget

The first case affects the reading of data from the application into a [DID](#). The applicable modeling options for the creation of the [DiagnosticServiceSwMapping](#) and [DiagnosticServiceDataMapping](#) in this case is described by [\[TPS_DEXT_01184\]](#).

In [\[TPS_DEXT_01184\]](#), the column labeled “Symmetric Read/Write possible” indicates whether it would be possible to write the received information back to the application.

[TPS_DEXT_01184] Use cases for reading data from the application [

Source mappedDataElement/ accessedDataPrototype	Target DiagnosticServiceMappingDiagTarget	Symmetric Read/Write possible
primitive or flat array	DiagnosticDataElement	Yes
composite	DiagnosticParameterIdent	Yes
element of composite	DiagnosticDataElement	No
element of composite	DiagnosticParameterElement	No

]

The second case affects the writing of data from a [DID](#) to the application. The applicable modeling options for the creation of the [DiagnosticServiceSwMapping](#) and [DiagnosticServiceDataMapping](#) in this case is described by [\[TPS_DEXT_01185\]](#).

[TPS_DEXT_01185] Use cases for writing data to the application [

Source DiagnosticServiceMappingDiagTarget	Target mappedDataElement/ accessedDataPrototype	Symmetric Read/Write possible
DiagnosticDataElement	primitive or flat array	Yes
DiagnosticParameterIdent	composite	Yes
DiagnosticParameterElement	Element of composite	No
DiagnosticParameterElement	primitive	No

]

In [TPS_DEXT_01185], the column labeled “Symmetric Read/Write possible” indicates whether it would be possible to read the received information back **from** the application.

5.2.3 Diagnostic Service Software Mapping

The diagnostic service software mapping is limited to [ClientServerInterface](#) or a direct function call (in the case of basic software or complex driver).

Class	ClientServerInterface			
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
Note	A client/server interface declares a number of operations that can be invoked on a server by a client. Tags: atp.recommendedPackage=PortInterfaces			
Base	ARElement , ARObject , AtpBlueprint , AtpBlueprintable , AtpClassifier , AtpType , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , PortInterface , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
operation	ClientServerOperation	*	aggr	ClientServerOperation(s) of this ClientServerInterface. Stereotypes: atp.Splittable; atp.Variation Tags: atp.Splitkey=operation.shortName, operation.variation Point.shortLabel vh.latestBindingTime=blueprintDerivationTime
possibleError	ApplicationError	*	aggr	Application errors that are defined as part of this interface.

Table 5.13: ClientServerInterface

The following constraint only applies to the case where I/O Control is implemented via sender-receiver-communication (see [TPS_SWCT_01654])

[TPS_DEXT_01043] Purpose of [DiagnosticServiceSwMapping](#)

Upstream requirements: [RS_DEXT_00052](#)

[The meta-class [DiagnosticServiceSwMapping](#) has been introduced to support the creation of a relationship between the definition of a given diagnostic service to the [SwcServiceDependency](#) (if the service applies to the application software) or [BswServiceDependency](#) (if the service applies to the basic software).]

It is required to use the applicable form of reference to the target `SwcServiceDependency` depending on the context of the enclosing `AtomicSwComponentType`.

Access to the data in the application is implemented using client/server communication, i.e. the information is passed by means of `ArgumentDataPrototypes` owned by `ClientServerOperations`.

In principle, the information obtained from the application can be typed by a composite data type of arbitrary structure. The composite data type defined in the application context may be associated with nested structure inside the corresponding `DiagnosticAbstractDataIdentifier` (resp. `DiagnosticRoutineSubfunction`) and it may happen that only a subset of the composite data type is associated with the `DiagnosticParameterElements` of the nested definition of the `DiagnosticAbstractDataIdentifier/DiagnosticRoutineSubfunction`.

Therefore, in the case of a mapping from complex type to nested DID structure, the purpose of the `DiagnosticServiceSwMapping` is not only to identify the `DiagnosticParameterElement`, but also the `DataPrototype` inside a composite `ArgumentDataPrototype`.

[TPS_DEXT_01181] Existence of references to subclasses of `DiagnosticServiceMappingDiagTarget` [Within the context of a `DiagnosticServiceSwMapping`, there are two references and one aggregation available that provide the ability to refer to subclasses of `DiagnosticServiceMappingDiagTarget`:

`diagnosticDataElement` This reference is the preferred approach if the mapping affects a primitive `DataPrototype` or a `DataPrototype` that represents an array of a primitive `AutosarDataType` that is mapped to a `DiagnosticDataElement` that is not a member of a nested `DiagnosticParameter`.

`parameterElementAccess` This aggregation is reserved for the case that a `DataPrototype` is mapped to a level inside the nested definition of a `DiagnosticParameter`, i.e. if `DiagnosticParameter.ident.subElement` exists.

In this case, the reference `accessedDataPrototype` shall also exist in order to define the element in the composite `AutosarDataType` that corresponds to the referenced `parameterElementAccess.targetElement`.

`diagnosticParameter` This option is applicable if a `DataPrototype` shall be mapped to the root `DiagnosticParameter` (that defines a nested substructure, i.e. `DiagnosticParameter.ident.subElement` shall exist in this case).

In this case, the structure of the composite `DataPrototype` shall match the nested structure of the `DiagnosticParameter` and the `DiagnosticParameterElements` shall not have any gaps in their placement.

]

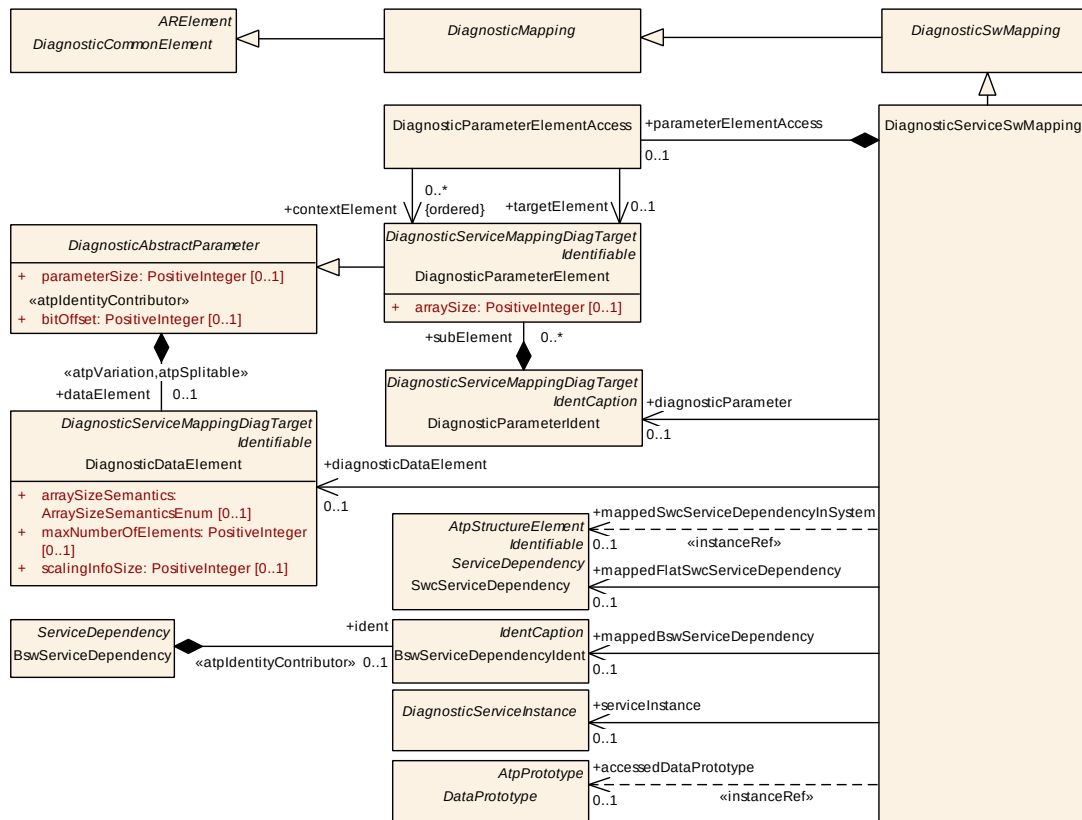


Figure 5.4: Dcm service software mapping

[TPS_DEXT_01182] Use case for the existence of reference **DiagnosticServiceSwMapping.accessedDataPrototype** [The reference in the role **DiagnosticServiceSwMapping.accessedDataPrototype** shall be used to identify a **DataPrototype** inside a **ArgumentDataPrototype** such that the referenced **DataPrototype** – rather than the entire **ArgumentDataPrototype** – becomes the subject of the mapping to either

- the referenced **diagnosticDataElement** (i.e. mapping to a flat primitive element of the enclosing **DiagnosticAbstractDataIdentifier/DiagnosticRoutineSubfunction**) or
- the referenced **parameterElementAccess.targetElement** (i.e. mapping to an element of a nested structure inside the enclosing **DiagnosticAbstractDataIdentifier/DiagnosticRoutineSubfunction**).

]

Class	DiagnosticSwMapping (abstract)			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	This represents the ability to define a mapping between a diagnostic information (at this point there is no way to become more specific about the semantics) to a software-component.			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	DiagnosticEnableConditionPortMapping , DiagnosticEventPortMapping , DiagnosticFimFunctionMapping , DiagnosticJ1939SwMapping , DiagnosticOperationCyclePortMapping , DiagnosticServiceDataMapping , DiagnosticServiceSwMapping , DiagnosticStorageConditionPortMapping			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 5.14: DiagnosticSwMapping

Class	DiagnosticServiceSwMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::ServiceMapping			
Note	This represents the ability to define a mapping of a diagnostic service to a software-component or a basic-software module. If the former is used then this kind of service mapping is applicable for the usage of ClientServerInterfaces. Tags: atp.recommendedPackage=DiagnosticServiceMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , DiagnosticSwMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
accessedData Prototype	DataPrototype	0..1	iref	This instanceRef identifies the DataPrototype that is supposed to be accessed in the context of the operation argument. InstanceRef implemented by: DataPrototypeInClientServerInterfaceInstanceRef
diagnosticData Element	DiagnosticDataElement	0..1	ref	This represents a DiagnosticDataElement required to execute the respective diagnostic service in the context of the diagnostic service mapping,
diagnostic Parameter	DiagnosticParameter Ident	0..1	ref	This represents the applicable payload that corresponds to the referenced DataPrototype in the role mappedData Element.
mappedBsw Service Dependency	BswService DependencyIdent	0..1	ref	This is supposed to represent a reference to a Bsw ServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.
mappedFlatSwc Service Dependency	SwcService Dependency	0..1	ref	This represents the ability to refer to an AtomicSw ComponentType that is available without the definition of how it will be embedded into the component hierarchy.
mappedSwc Service DependencyIn System	SwcService Dependency	0..1	iref	This represents the ability to point into the component hierarchy (under possible consideration of the root SoftwareComposition) InstanceRef implemented by: SwcServiceDependencyInSystemInstanceRef
parameter ElementAccess	DiagnosticParameter ElementAccess	0..1	aggr	This aggregation represents the single point of access to the reference to one specific DiagnosticParameter Element.
serviceInstance	DiagnosticService Instance	0..1	ref	This represents the service instance that needs to be considered in this diagnostics service mapping.

Table 5.15: DiagnosticServiceSwMapping

[TPS_DEXT_01044] BswServiceDependency needs to act as the target of a reference*Upstream requirements:* [RS_DEXT_00052](#)

[The intention of [DiagnosticServiceSwMapping.mappedBswServiceDependency](#) is to refer to a [BswServiceDependency](#) in the same way as e.g. [DiagnosticServiceSwMapping.mappedFlatSwcServiceDependency](#) does.

However, [BswServiceDependency](#) is not derived from meta-class [Referrable](#) and can therefore never become the target of a reference like [DiagnosticServiceSwMapping.mappedBswServiceDependency](#).

The remedy for this issue is to define meta-class [BswServiceDependencyIdent](#) that inherits from [IdentCaption](#) that in turn inherits from [Referrable](#).

Then, by aggregating [BswServiceDependencyIdent](#) at [BswServiceDependency](#) in the role [ident](#) [BswServiceDependency](#) can **factually** become the target of the reference and thus the original idea of [DiagnosticServiceSwMapping.mappedBswServiceDependency](#) becomes feasible.]

Please find further details in [Figure 5.4](#).

Please note that the introduction [\[TPS_DEXT_01044\]](#), although being dangerously close to a hack, is necessary to keep the AUTOSAR XML Schema fully backwards-compatible.

In other words, if [BswServiceDependency](#) were updated to inherit from [Referrable](#) the consequence would be that all existing AUTOSAR models that contain instances [BswServiceDependency](#) would suddenly become invalid because [Referrable.shortName](#) is a mandatory attribute in the AUTOSAR XML Schema.

Class	BswServiceDependencyIdent			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::ServiceMapping			
Note	This meta-class is created to add the ability to become the target of a reference to the non-Referrable BswServiceDependency .			
Base	ARObject , AtpClassifier , AtpFeature , AtpStructureElement , IdentCaption , Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	AtpClassifier.atpFeature , BswServiceDependency.ident			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table 5.16: BswServiceDependencyIdent

[constr_1346] Allowed values of [DiagnosticServiceSwMapping.serviceInstance](#)*Imposition time:* [IT_Dext](#)

[The applicability of the [DiagnosticServiceSwMapping](#) is limited to predefined set of diagnostic services.

By regulation of the AUTOSAR standard, `DiagnosticServiceSwMapping.serviceInstance` shall only point to the following sub-classes of `DiagnosticServiceInstance`:

- `DiagnosticRoutine`
- `DiagnosticSecurityAccess`
- `DiagnosticReadDataByIdentifier`
- `DiagnosticWriteDataByIdentifier`
- `DiagnosticIOControl`

]

[constr_1347] Existence of attributes of `DiagnosticServiceSwMapping`

Imposition time: `IT_Dext`

[For any given `DiagnosticServiceSwMapping`, **one and only one of** the following references shall exist:

- `DiagnosticServiceSwMapping.mappedFlatSwcServiceDependency`
- `DiagnosticServiceSwMapping.mappedSwcServiceDependencyInSystem`
- `DiagnosticServiceSwMapping.mappedBswServiceDependency`

]

[constr_1347], among further clarifications, reflects the fact that at most a single `SwcServiceDependency` can be referenced by a `DiagnosticServiceSwMapping` and this `SwcServiceDependency` cannot be identified by both `mappedSwcServiceDependencyInSystem` and `mappedFlatSwcServiceDependency`.

5.2.4 Diagnostic Secure Coding

The term “secure coding” describes a procedure to write data into the non-volatile memory of the ECU, that is authenticated by the vehicle manufacturer and therefore inhibits write access to unauthorized persons.

Coding data in general contain vehicle configuration information and can be used activate functions in the ECU software or change its behavior.

The configuration information is persisted and ECU applications dynamically read this information to adapt the behavior to the individual configurations.

To give vehicle manufacturers control over who is writing which data, the ECU shall accept only coding data that is signed the vehicle manufacturers private key. In this

sequence before secure data is written a vehicle manufacturer certificate containing a public key is required.

In a next step the configuration data is written into a temporary memory and only with a valid signature that matches the certificate's public key the data accepted and persisted.

[TPS_DEXT_01187] References from [DiagnosticSecureCodingMapping](#) to [DiagnosticRoutine](#) [The [DiagnosticRoutine](#) referenced by meta-class [DiagnosticSecureCodingMapping](#) in the role [validation](#) is responsible for finalizing the coding procedure.

The finalization consists mainly of the verification of the procedure and the persistent storage of the coding information after a successful verification.]

5.2.5 Diagnostic Authentication Transmit Certificate Mapping

[TPS_DEXT_01195] Semantics of the [DiagnosticAuthTransmitCertificateMapping](#) [Meta-class [DiagnosticAuthTransmitCertificateMapping](#) is used to associate the diagnostic service instance for the certificate transmit (i.e., [DiagnosticAuthTransmitCertificateEvaluation](#) that is aggregated by [DiagnosticAuthTransmitCertificate](#)) with the description of the properties of the corresponding cryptographic certificate, represented by meta-class [CryptoServiceCertificate](#).]

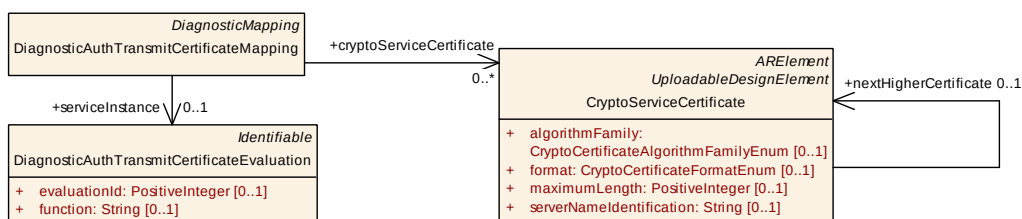


Figure 5.5: Modeling of meta-class [DiagnosticAuthTransmitCertificateMapping](#)

Class	DiagnosticAuthTransmitCertificateMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	This meta-class represents the ability to associate a CryptoServiceCertificate with a DiagnosticAuth CertificateEvaluation with the purpose to configure the evaluation of the certificate. Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	DiagnosticAuthTransmitCertificateMapping			
cryptoServiceCertificate	CryptoServiceCertificate	*	ref	This reference identifies the description of the applicable crypto certificate.
serviceInstance	DiagnosticAuthTransmitCertificateEvaluation	0..1	ref	This reference identifies the applicable DiagnosticAuthTransmitCertificate service instance (via the aggregation in the role certificateEvaluation).

Table 5.17: DiagnosticAuthTransmitCertificateMapping

5.2.6 Security Event Reporting Mode Mapping

The reporting mode of particular security events (see [22, TPS Security Extract Template]) can be updated via diagnostic services.

[TPS_DEXT_01152] Semantics of meta-class DiagnosticSecurityEventReportingModeMapping

Status: DRAFT

Upstream requirements: RS_DEXT_00081

[For this purpose, it is necessary to reserve a spot in a DID over which the new value for the reporting mode can be transferred from a diagnostic tester to the diagnostic stack on the target Ecu, and from there to the IdsM, see [23, SWS Intrusion Detection Manager].

From the modeling point of view, this relation is created by means of meta-class DiagnosticSecurityEventReportingModeMapping.]

It is important to understand that this mapping is used to formalize the relation of two basic software modules to each other. No kind of application software is involved in this relation.

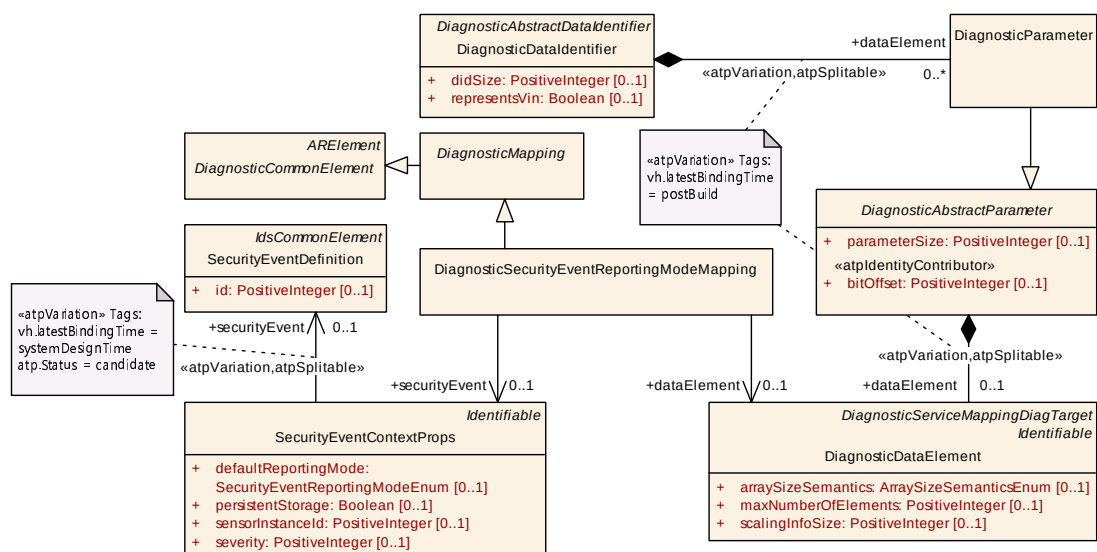


Figure 5.6: Modeling of the security event reporting mode mapping

Class	DiagnosticSecurityEventReportingModeMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::ServiceMapping			
Note	This meta-class represents the ability to associate a location in a DID with a security event. The purpose of this mapping is that the location in the DID contains the setting of the reporting mode for the specific security event. This means that the reporting mode of the security event can be set via the diagnostic service WriteDataByIdentifier. Tags: atp.Status=candidate atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dataElement	DiagnosticDataElement	0..1	ref	This reference identifies the data element that carries the information about the reporting mode. Tags: atp.Status=candidate
securityEvent	SecurityEventContext Props	0..1	ref	This reference identifies the mapped security event. Tags: atp.Status=candidate

Table 5.18: DiagnosticSecurityEventReportingModeMapping

[constr_10024] Existence of reference in the role [DiagnosticSecurityEventReportingModeMapping.dataElement](#)

Status: DRAFT
Imposition time: IT_Dext

[For each [DiagnosticSecurityEventReportingModeMapping](#), the reference to [DiagnosticDataElement](#) in the role [dataElement](#) shall exist.]

[constr_10025] Existence of reference in the role [DiagnosticSecurityEventReportingModeMapping.securityEvent](#)

Status: DRAFT
Imposition time: IT_Dext

[For each [DiagnosticSecurityEventReportingModeMapping](#), the reference to [SecurityEventContextProps](#) in the role [securityEvent](#) shall exist.]

5.3 Event-related Diagnostic Mapping

This chapter describes the various mappings (see [Figure 5.7](#)) in the context of the description of diagnostic events.

[Figure 5.7](#) gives an overview on the different types of mappings available for diagnostic event handling.

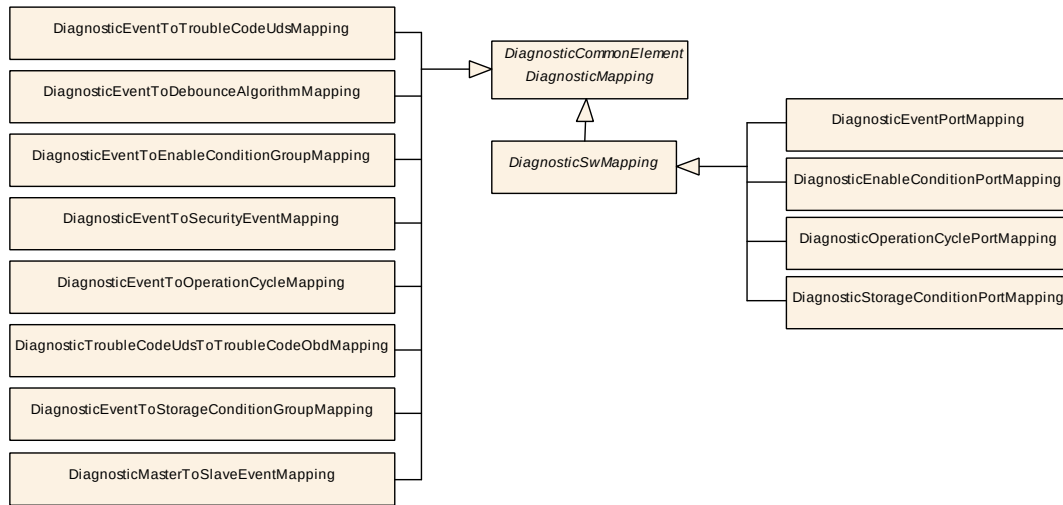


Figure 5.7: Modeling of event-related Diagnostic Mapping

[TPS_DEXT_03002] Two kind of mappings

Upstream requirements: [RS_DEXT_00023](#), [RS_DEXT_00052](#)

[For diagnostic event handling, there are two kinds of mappings:

- Mapping between a [DiagnosticEvent](#) and another diagnostic resource. For this purpose, a sub-class of [DiagnosticMapping](#) is used.
- Mapping between a [DiagnosticEvent](#) and a SWC service port. For this purpose, a subclass of [DiagnosticSwMapping](#) is used.

]

5.3.1 DiagnosticEvent to DtcUds Mapping

[TPS_DEXT_03003] Semantics of [DiagnosticEventToTroubleCodeUdsMapping](#)

Upstream requirements: [RS_DEXT_00023](#), [RS_DEXT_00024](#), [RS_DEXT_00025](#)

[The [DiagnosticEventToTroubleCodeUdsMapping](#) is used to assign one (1:1) or multiple (n:1) [DiagnosticEvents](#) to a [DiagnosticTroubleCodeUds](#).

In case of n:1, multiple instances of [DiagnosticEventToTroubleCodeUdsMapping](#) with the same reference of role [troubleCodeUds](#) but different references of role [diagnosticEvent](#) have to be defined.]




Figure 5.8: DiagnosticEventToDtcUdsMapping

Class	DiagnosticEventToTroubleCodeUdsMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	Defines which UDS Diagnostic Trouble Code is applicable for a DiagnosticEvent. Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnosticEvent	DiagnosticEvent	0..1	ref	Reference to a DiagnosticEvent to which a UDS Diagnostic Trouble Code is assigned.
troubleCodeUds	DiagnosticTroubleCodeUds	0..1	ref	Reference to an UDS Diagnostic Trouble Code assigned to a DiagnosticEvent.

Table 5.19: DiagnosticEventToTroubleCodeUdsMapping

5.3.2 DiagnosticEvent to DiagnosticOperationCycle Mapping

[TPS_DEXT_01086] Reference to [DiagnosticOperationCycle](#)

Upstream requirements: [RS_DEXT_00024](#), [RS_DEXT_00054](#)

[A [DiagnosticEvent](#) needs to be assigned to exactly one [DiagnosticOperationCycle](#).]




Figure 5.9: DiagnosticEventToOperationCycleMapping

Class	DiagnosticEventToOperationCycleMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	Defines which OperationCycle is applicable for a DiagnosticEvent. Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnosticEvent	DiagnosticEvent	0..1	ref	Reference to a DiagnosticEvent to which an Operation Cycle is assigned.
operationCycle	DiagnosticOperationCycle	0..1	ref	Reference to an OperationCycle assigned to a Diagnostic Event.

Table 5.20: DiagnosticEventToOperationCycleMapping

5.3.3 DiagnosticEvent to DebounceAlgorithm Mapping

[TPS_DEXT_03004] DiagnosticEvent and DiagnosticDebounceAlgorithm-Props

Upstream requirements: RS_DEXT_00023, RS_DEXT_00053

[If a [DiagnosticEvent](#) has to be debounced, it shall be mapped to the appropriate [DiagnosticDebounceAlgorithmProps](#).]

[TPS_DEXT_03005] Existence of DiagnosticEventToDebounceAlgorithmMapping

Upstream requirements: RS_DEXT_00023, RS_DEXT_00053

[The [DiagnosticEventToDebounceAlgorithmMapping](#) shall not be created if the [DiagnosticEvent](#) is not debounced.]




Figure 5.10: DiagnosticEventToDebounceAlgorithmMapping

Class	DiagnosticEventToDebounceAlgorithmMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	Defines which Debounce Algorithm is applicable for a DiagnosticEvent. Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
debounceAlgorithm	DiagnosticDebounceAlgorithmProps	0..1	ref	Reference to a DebounceAlgorithm assigned to a DiagnosticEvent.
diagnosticEvent	DiagnosticEvent	0..1	ref	Reference to a DiagnosticEvent to which a Debounce Algorithm is assigned.

Table 5.21: DiagnosticEventToDebounceAlgorithmMapping

The details regarding the formalization of debouncing behavior are depicted in [Figure 4.65](#).

In particular, [DiagnosticCommonProps](#) aggregates [DiagnosticDebounceAlgorithmProps](#) in the role [debounceAlgorithmProps](#). The [DiagnosticDebounceAlgorithmProps](#) itself does not actually represent the debouncing algorithm but provides attributes relevant for the actual debouncing algorithm.

5.3.4 DiagnosticEvent to EnableConditionGroup Mapping

[TPS_DEXT_03015] EnableConditions have to be put into a [DiagnosticEnableConditionGroup](#)

Upstream requirements: [RS_DEXT_00023](#), [RS_DEXT_00026](#), [RS_DEXT_00028](#)

[EnableConditions that are assigned to a [DiagnosticEvent](#) have to be put into a [DiagnosticEnableConditionGroup](#) since only a group of EnableConditions can be mapped to a [DiagnosticEvent](#).]

[constr_1361] Number of [DiagnosticEventToEnableConditionGroupMapping](#) elements per [DiagnosticEvent](#)

Imposition time: [IT_Dext](#)

[The mapping element [DiagnosticEventToEnableConditionGroupMapping](#) shall be created no more than once per [DiagnosticEvent](#).

If several [DiagnosticEventToEnableConditionGroupMapping](#) elements referring to the same [DiagnosticEvent](#) are defined, then the Enable Condition Group mapping shall be regarded as defective.]




Figure 5.11: DiagnosticEventToEnableConditionGroupMapping

Class	DiagnosticEventToEnableConditionGroupMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	Defines which EnableConditionGroup is applicable for a DiagnosticEvent. Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnosticEvent	DiagnosticEvent	0..1	ref	Reference to a DiagnosticEvent to which an Enable ConditionGroup is assigned.
enableCondition Group	DiagnosticEnableConditionGroup	0..1	ref	Reference to an EnableConditionGroup assigned to a DiagnosticEvent.

Table 5.22: DiagnosticEventToEnableConditionGroupMapping

5.3.5 DiagnosticEvent to StorageConditionGroup Mapping

[TPS_DEXT_03016] StorageConditions have to be put into a DiagnosticStorageConditionGroup

Upstream requirements: RS_DEXT_00023, RS_DEXT_00027, RS_DEXT_00029

[StorageConditions that are assigned to a DiagnosticEvent have to be put into a DiagnosticStorageConditionGroup since only a group of StorageConditions can be mapped to a DiagnosticEvent.]

[constr_1362] Number of DiagnosticEventToStorageConditionGroupMapping elements per DiagnosticEvent

Imposition time: IT_Dext

[The mapping element DiagnosticEventToStorageConditionGroupMapping shall be created no more than once or once per DiagnosticEvent.]

If several DiagnosticEventToStorageConditionGroupMapping elements referring to the same DiagnosticEvent are defined, then the Storage Condition Group mapping shall be regarded as defective.]




Figure 5.12: DiagnosticEventToStorageConditionGroupMapping

[TPS_DEXT_03006] Values of the individual DiagnosticStorageConditions

Upstream requirements: RS_DEXT_00027

[The values of the individual DiagnosticStorageConditions need to be algorithmically evaluated in order to find out whether or not the storage of the DiagnosticEvent is permitted.]

The algorithm that is supposed to be implemented for this purpose is documented in [SWS_Dem_00459].]

Class	DiagnosticEventToStorageConditionGroupMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	Defines which StorageConditionGroup is applicable for a DiagnosticEvent. Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, DiagnosticMapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	DiagnosticEventToStorageConditionGroupMapping			
diagnosticEvent	DiagnosticEvent	0..1	ref	Reference to a DiagnosticEvent to which a StorageConditionGroup is assigned.
storageConditionGroup	DiagnosticStorageConditionGroup	0..1	ref	Reference to a StorageConditionGroup assigned to a DiagnosticEvent.

Table 5.23: DiagnosticEventToStorageConditionGroupMapping

5.3.6 DiagnosticEvent to Port Mapping

[TPS_DEXT_03007] Semantics of [DiagnosticEventPortMapping](#)

Upstream requirements: [RS_DEXT_00023](#), [RS_DEXT_00052](#)

[A [DiagnosticEventPortMapping](#) defines which [SwcServiceDependencies](#) of a [AtomicSwComponentType](#) or [BswServiceDependency](#) of a [BswModuleDescription](#) have to be connected to which [DiagnosticEvent](#).

This is realized by defining a [DiagnosticEventPortMapping](#) referencing a [DiagnosticEvent](#) and (using `<<instanceRef>>`) an instance of [SwcServiceDependency](#) (or [BswServiceDependency](#)).]

If such an instance is not yet available, an ordinary reference to [SwcServiceDependency](#) can be given alternatively (i.e. without specifying a certain instance).

In this way, the ECU integrator is able to directly derive the actual mapping between SWC (or BSW) service ports and the ports of the Service Components during ECU configuration.

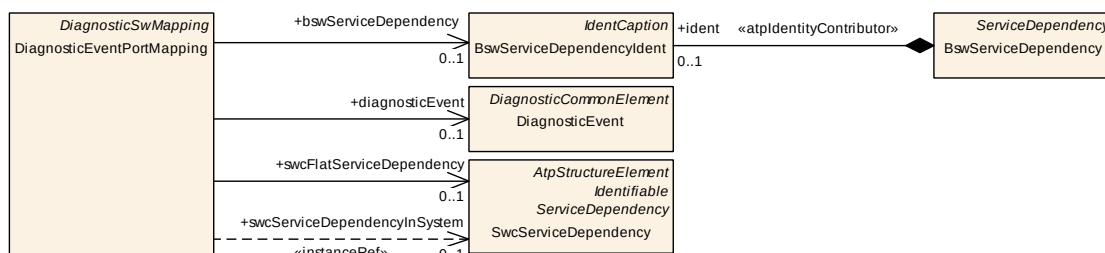


Figure 5.13: DiagnosticEventPortMapping

[constr_1435] Debouncing in the presence of a [DiagnosticEventPortMapping](#)

Imposition time: [IT_Dext](#)

[If a [DiagnosticEventPortMapping](#) exists and the enclosed [DiagnosticEventPortMapping.diagnosticEvent](#) is also referenced by a [DiagnosticEventToDebounceAlgorithmMapping](#) then the concrete subclass of the respective [DiagnosticEventToDebounceAlgorithmMapping.debounceAlgorithm.debounceAlgorithm](#) shall be identical to the [DiagnosticEventPortMapping](#).

`swcServiceDependencyInSystem/swcFlatServiceDependency.service-Needs.diagEventDebounceAlgorithm`.

It is assumed that the target of reference `DiagnosticEventPortMapping.swcServiceDependencyInSystem` resp. `swcFlatServiceDependency` aggregates a `DiagnosticEventNeeds`.]

Class	DiagnosticEventPortMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	Defines to which SWC service ports the DiagnosticEvent is mapped. Tags: <code>atp.recommendedPackage=DiagnosticMappings</code>			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , DiagnosticSwMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
<code>bswServiceDependency</code>	BswServiceDependencyIdent	0..1	ref	Reference to a BswServiceDependency that links ServiceNeeds to BswModuleEntries.
<code>diagnosticEvent</code>	DiagnosticEvent	0..1	ref	Reference to the DiagnosticEvent that is assigned to SWC service ports.
<code>swcFlatServiceDependency</code>	SwcServiceDependency	0..1	ref	Reference to a SwcServiceDependencyType that links ServiceNeeds to SWC service ports.
<code>swcServiceDependencyInSystem</code>	SwcServiceDependency	0..1	iref	Instance reference to a SwcServiceDependency that links ServiceNeeds to SWC service ports. InstanceRef implemented by: SwcServiceDependencyInSystemInstanceRef

Table 5.24: DiagnosticEventPortMapping

[constr_1843] Existence of reference [DiagnosticEventPortMapping.diagnosticEvent](#)

Imposition time: `IT_Dext`

[For each [DiagnosticEventPortMapping](#), the reference to [DiagnosticEvent](#) in the role `diagnosticEvent` shall exist.]

[constr_1762] Existence of references owned by [DiagnosticEventPortMapping](#)

Imposition time: `IT_Dext`

[For each [DiagnosticEventPortMapping](#), only one of the references

- to [BswServiceDependency](#) in the role `bswServiceDependency`
- to [SwcServiceDependency](#) in the role `swcFlatServiceDependency`
- to [SwcServiceDependency](#) in the role `swcServiceDependencyInSystem`

shall exist.]

5.3.7 DiagnosticOperationCycle to Port Mapping

[TPS_DEXT_03017] Semantics of [DiagnosticOperationCyclePortMapping](#)

Upstream requirements: [RS_DEXT_00052](#), [RS_DEXT_00053](#)

[A [DiagnosticOperationCyclePortMapping](#) defines which SWC service port(s) have to be connected to which [DiagnosticOperationCycle](#).

This is realized by defining a [DiagnosticOperationCyclePortMapping](#) referencing a [DiagnosticOperationCycle](#) and an instance of [SwcServiceDependency](#).]

If such an instance is not yet available, an ordinary reference to [SwcServiceDependency](#) can be given alternatively (i.e. without specifying a certain instance).




Figure 5.14: DiagnosticOperationCyclePortMapping

Class	DiagnosticOperationCyclePortMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	Defines to which SWC service ports the DiagnosticOperationCycle is mapped. Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , DiagnosticSwMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
operationCycle	DiagnosticOperationCycle	0..1	ref	Reference to the DiagnosticOperationCycle that is assigned to SWC service ports.
swcFlatServiceDependency	SwcServiceDependency	0..1	ref	Reference to a SwcServiceDependencyType that links ServiceNeeds to SWC service ports.
swcServiceDependencyInSystem	SwcServiceDependency	0..1	iref	Instance reference to a SwcServiceDependency that links ServiceNeeds to SWC service ports. InstanceRef implemented by: SwcServiceDependencyInSystemInstanceRef

Table 5.25: DiagnosticOperationCyclePortMapping

[constr_1844] Existence of reference [DiagnosticOperationCyclePortMapping.operationCycle](#)

Imposition time: [IT_Dext](#)

[For each [DiagnosticOperationCyclePortMapping](#), the reference to [DiagnosticOperationCycle](#) in the role [operationCycle](#) shall exist.]

[constr_1759] Existence of references owned by **DiagnosticOperationCyclePortMapping**

Imposition time: IT_Dext

[For each **DiagnosticOperationCyclePortMapping**, only one of the following references

- to **SwcServiceDependency** in the role **swcFlatServiceDependency**
- to **SwcServiceDependency** in the role **swcServiceDependencyInSystem**

shall exist.]

5.3.8 DiagnosticEnableCondition to Port Mapping

[TPS_DEXT_03018] Semantics of **DiagnosticEnableConditionPortMapping**

Upstream requirements: RS_DEXT_00026, RS_DEXT_00052

[A **DiagnosticEnableConditionPortMapping** defines which SWC service port(s) have to be connected to which **DiagnosticEnableCondition**. This is realized by defining a **DiagnosticEnableConditionPortMapping** referencing a **DiagnosticEnableCondition** and an instance of **SwcServiceDependency**.]

If such an instance is not yet available, an ordinary reference to **SwcServiceDependency** can be given alternatively (i.e. without specifying a certain instance).

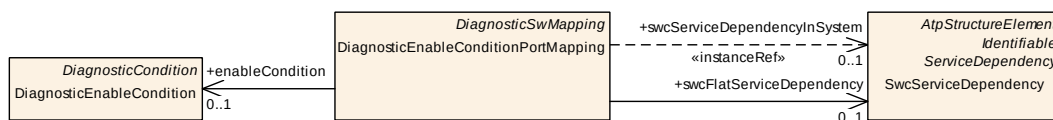


Figure 5.15: **DiagnosticEnableConditionPortMapping**

[constr_1752] Existence of references owned by **DiagnosticEnableConditionPortMapping**

Imposition time: IT_Dext

[For each **DiagnosticEnableConditionPortMapping**, only one of the following references

- to **SwcServiceDependency** in the role **swcFlatServiceDependency**
- to **SwcServiceDependency** in the role **swcServiceDependencyInSystem**

may exist.]

Class	DiagnosticEnableConditionPortMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	Defines to which SWC service ports the DiagnosticEnableCondition is mapped. Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, DiagnosticMapping, DiagnosticSwMapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
enableCondition	DiagnosticEnableCondition	0..1	ref	Reference to the EnableCondition which is mapped to a SWC service port.
swcFlatServiceDependency	SwcServiceDependency	0..1	ref	Reference to a SwcServiceDependencyType that links ServiceNeeds to SWC service ports. This reference can be used in early stages of the development in order to identify the SwcServiceDependency without a full System Context.
swcServiceDependencyInSystem	SwcServiceDependency	0..1	iref	Instance reference to a SwcServiceDependency that links ServiceNeeds to SWC service ports. InstanceRef implemented by: SwcServiceDependencyInSystemInstanceRef

Table 5.26: DiagnosticEnableConditionPortMapping

[constr_1845] Existence of reference DiagnosticEnableConditionPortMapping.enableCondition

Imposition time: IT_Dext

[For each DiagnosticEnableConditionPortMapping, the reference to DiagnosticEnableCondition in the role enableCondition shall exist.]

5.3.9 DiagnosticStorageCondition to Port Mapping

[TPS_DEXT_03019] Semantics of DiagnosticStorageConditionPortMapping

Upstream requirements: RS_DEXT_00027, RS_DEXT_00052

[A DiagnosticStorageConditionPortMapping defines which SWC service port(s) have to be connected to which DiagnosticStorageCondition. This is realized by defining a DiagnosticStorageConditionPortMapping referencing a DiagnosticStorageCondition and an instance of SwcServiceDependency.]

If such an instance is not yet available, an ordinary reference to SwcServiceDependency can be given alternatively (i.e. without specifying a certain instance).




Figure 5.16: DiagnosticStorageConditionPortMapping

[constr_1753] Existence of references owned by [DiagnosticStorageConditionPortMapping](#)

Imposition time: IT_Dext

[For each [DiagnosticStorageConditionPortMapping](#), only one of the following references

- to [SwcServiceDependency](#) in the role [swcFlatServiceDependency](#)
- to [SwcServiceDependency](#) in the role [swcServiceDependencyInSystem](#)

may exist.]

Class	DiagnosticStorageConditionPortMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	Defines to which SWC service ports with DiagnosticStorageConditionNeeds the DiagnosticStorageCondition is mapped. Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , DiagnosticSwMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnosticStorageCondition	DiagnosticStorageCondition	0..1	ref	Reference to the StorageCondition which is mapped to a SWC service port with DiagnosticStorageConditionNeeds.
swcFlatServiceDependency	SwcServiceDependency	0..1	ref	Reference to a SwcServiceDependencyType that links ServiceNeeds to SWC service ports.
swcServiceDependencyInSystem	SwcServiceDependency	0..1	iref	Instance reference to a SwcServiceDependency that links ServiceNeeds to SWC service ports. InstanceRef implemented by: SwcServiceDependencyInSystemInstanceRef

Table 5.27: DiagnosticStorageConditionPortMapping

[constr_1846] Existence of reference [DiagnosticStorageConditionPortMapping.diagnosticStorageCondition](#)

Imposition time: IT_Dext

[For each [DiagnosticStorageConditionPortMapping](#), the reference to [DiagnosticStorageCondition](#) in the role [diagnosticStorageCondition](#) shall exist.]

5.3.10 Dem Provided Data Mapping

[TPS_DEXT_03020] Semantics of **DiagnosticDemProvidedDataMapping**

Upstream requirements: [RS_DEXT_00043](#), [RS_DEXT_00052](#)

[The meta-class **DiagnosticDemProvidedDataMapping** does not seem to fulfill the condition for representing a mapping class because it only has one reference to a **DiagnosticDataElement** in the role **dataElement**.

However, the specific nature of this mapping is that the second element (the **DiagnosticDemProvidedDataMapping.dataProvider**) that is supposed to take place in the mapping cannot precisely be modeled as a single meta-class.

Therefore, there is no better way than to model the **DiagnosticDemProvidedDataMapping.dataProvider** by a **NameToken**.

The semantics of this mapping is to further qualify the access to the **DiagnosticDataElement** referenced in the role **dataElement** from within the Dem.]

[TPS_DEXT_01142] Standardized values for attribute **DiagnosticDemProvidedDataMapping.dataProvider**

Upstream requirements: [RS_DEXT_00043](#), [RS_DEXT_00052](#)

[

Standardized value	Description
DEM_AGINGCTR_DOWNCNT	Map down-counting Dem-internal aging counter.
DEM_AGINGCTR_UPCNT	Map up-counting Dem-internal aging counter.
DEM_AGINGCTR_UPCNT_FIRST_ACTIVE	Map up-counting Dem-internal aging counter, starting at 1 when aging starts.
DEM_CLR_DIST	Distance since diagnostic trouble codes cleared.
DEM_CLR_TIME	Time since diagnostic trouble codes cleared.
DEM_CURRENT_FDC	Map Dem-internal fault detection counter.
DEM_CYCLES_TESTED_SINCE_FIRST_FAILED	Map Dem-internal Operation Cycle Counter - Tested cycles since first failed excluding test not complete, max. range: 1 byte.
DEM_CYCLES_SINCE_FIRST_FAILED	Map Dem-internal Operation Cycle Counter - cycles since first failed.
DEM_CYCLES_TESTED_SINCE_LAST_FAILED	Map Dem-internal Operation Cycle Counter - Tested cycles since last failed excluding test not complete, max. range: 1 byte.
DEM_CYCLES_SINCE_LAST_FAILED	Map Dem-internal Operation Cycle Counter - cycles since last failed.
DEM_DTC_PRIORITY	DTC priority statically assigned to this DTC.
DEM_FAILED_CYCLES	Map Dem-internal Operation Cycle Counter - failed cycles.
DEM_MAX_FDC_DURING_CURRENT_CYCLE	Map Dem-internal DTC Fault Detection Counter maximum value during current operation cycle.
DEM_MAX_FDC_SINCE_LAST_CLEAR	Map Dem-internal DTC Fault Detection Counter maximum value since last clear.
DEM_MIL_DIST	Distance traveled While MIL is activated.





DEM_MIL_TIME	Time run by the engine while MIL is activated.
DEM_OCCCTR	Map Dem-internal occurrence counter.
DEM_OVFLIND	Map Dem-internal overflow indication.
DEM_SIGNIFICANCE	Map (static) Dem-internal event significance.
DEM_WARM_UPS	Number of warm-ups since diagnostic trouble codes cleared.
DEM_J1939LAMP_STATUS	Current state of applicable lamp(s) for this DTC in SAE J1939 DM31 format.
DEM_EVENT_ASSOCIATED_IDENTIFICATION	Static event identification value associated to an event, see [TPS_DEXT_01151].
IN_USE_MONITOR_PERFORMANCE_RATIO	IUMPR ratio according to [24, SAE J1979-2].
DIAGNOSTIC_TEST_RESULT	DTR test values according to [24, SAE J1979-2].
MONITOR_ACTIVITY_DATA	Monitor activity data according to [24, SAE J1979-2].

]

Please note that, where applicable, AUTOSAR allows for the usage of values of the attribute `DiagnosticDemProvidedDataMapping.dataProvider` other than the values standardized by [TPS_DEXT_01142].

In this case, however, proprietary values of the attribute `DiagnosticDemProvidedDataMapping.dataProvider` shall be prefixed with a company-specific name fragment in order to avoid collisions that could occur if or when the list of possible values claimed by the AUTOSAR standard itself is extended.

[constr_1782] Usage of internal data elements only for extended data records

Imposition time: IT_Dext

[A `DiagnosticDemProvidedDataMapping` shall **only** refer to a `DiagnosticDataElement` that is aggregated by a `DiagnosticExtendedDataRecord` in the role `recordElement.dataElement`.]

Please note the existence of [constr_1756].

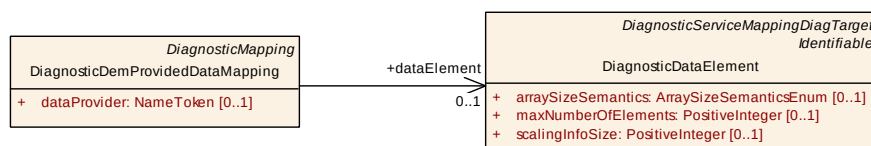


Figure 5.17: Modeling of the `DiagnosticDemProvidedDataMapping`

Class	DiagnosticDemProvidedDataMapping
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::ServiceMapping
Note	This represents the ability to define the nature of a data access for a <code>DiagnosticDataElement</code> in the Dem. Tags: atp.recommendedPackage=DiagnosticServiceMappings





Class	DiagnosticDemProvidedDataMapping			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, DiagnosticMapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dataElement	DiagnosticDataElement	0..1	ref	This represents the DiagnosticDataElement for which the access is further qualified by the DiagnosticDemProvided DataMapping.
dataProvider	NameToken	0..1	attr	This represents the ability to further specify the access within the Dem.

Table 5.28: DiagnosticDemProvidedDataMapping

[constr_1847] Existence of reference DiagnosticDemProvidedDataMapping.dataElement*Imposition time: IT_Dext*

[For each DiagnosticDemProvidedDataMapping, the reference to DiagnosticDataElement in the role dataElement shall exist.]

5.3.11 Master to Slave Event Mapping

AUTOSAR provides the ability to associate multiple diagnostic events in the way that the reporting of one event (also known as the master event) from a diagnostic monitor automatically triggers the reporting of one or more other diagnostic events (also known as slave events) with the same test result.

Please note that the existence of the DiagnosticMasterToSlaveEventMapping is primarily motivated by the need to store the result of event reporting simultaneously in different fault memories within the affected ECU.

As a consequence, a model that references a given DiagnosticEvent as both masterEvent and slaveEvent shall be considered broken, as further clarified in [constr_1590].

In the same spirit, a model where one specific DiagnosticEvent is referenced more than once in the role masterEvent or the role slaveEvent is also considered broken.

[constr_1590] DiagnosticEvent referenced in the role masterEvent or slaveEvent*Imposition time: IT_Dext*

[Any given DiagnosticEvent shall at most once be referenced from a DiagnosticMasterToSlaveEventMapping.]

A diagnostic slave event shall never be reported directly by a diagnostic monitor. Slave events are exclusively reported internally in the Dem. This important aspect is covered by [constr_1591].

[constr_1591] DiagnosticEvent referenced as slaveEvent shall not be reported by diagnostic monitor

Imposition time: IT_Dext

[Any DiagnosticEvent that is referenced in the role DiagnosticMasterToSlaveEventMapping.slaveEvent shall not be referenced in the role DiagnosticEventPortMapping.diagnosticEvent and vice versa.]

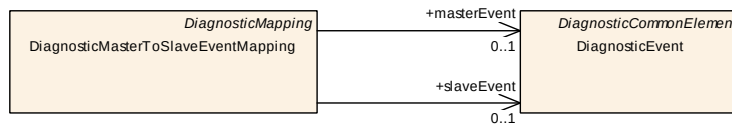


Figure 5.18: Modeling of the DiagnosticMasterToSlaveEventMapping

Class	DiagnosticMasterToSlaveEventMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	This meta-class provides the ability to map a master diagnostic event with a slave diagnostic event such that reporting of the master event with a given value also reports the slave event with the same value Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement, ARObject, CollectableElement, DiagnosticCommonElement, DiagnosticMapping, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
masterEvent	DiagnosticEvent	0..1	ref	This represents the master diagnostic event.
slaveEvent	DiagnosticEvent	0..1	ref	This represents the slave diagnostic event.

Table 5.29: DiagnosticMasterToSlaveEventMapping

5.3.12 Diagnostic Event to Security Event Mapping

AUTOSAR provides the ability to define so-called security events (formalized by meta-class SecurityEventDefinition) to indicate a possible intrusion into an AUTOSAR system.

The details are described in the specification of the [22, TPS Security Extract Template].

[TPS_DEXT_01153] Semantics of meta-class **DiagnosticEventToSecurityEventMapping**

Status: DRAFT

Upstream requirements: [RS_DEXT_00080](#)

[The occurrence of some security events need to be persisted in the context of the Dem.

Technically, this mechanism boils down to a reporting of a diagnostic event in response to the occurrence of a security event.

This approach is made possible by the existence of the **DiagnosticEventToSecurityEventMapping**.]

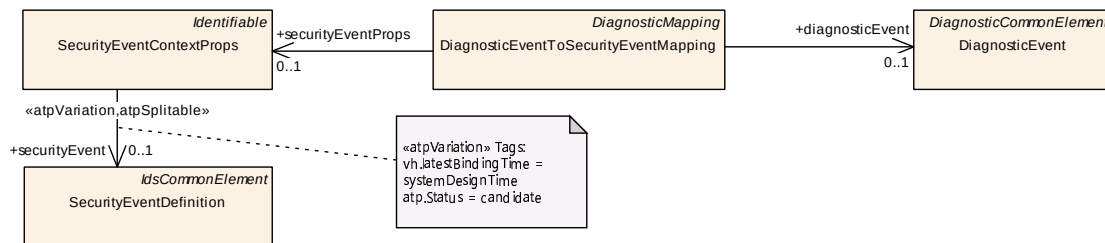


Figure 5.19: Modeling of the **DiagnosticEventToSecurityEventMapping**

Class	DiagnosticEventToSecurityEventMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	This meta-class represents the ability to map a security event that is defined in the context of the Security Extract to a diagnostic event defined on the context of the DiagnosticExtract. Tags: atp.Status=candidate atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnosticEvent	DiagnosticEvent	0..1	ref	This reference identifies the applicable diagnostic event. Tags: atp.Status=candidate
securityEvent Props	SecurityEventContext Props	0..1	ref	This reference identifies the qualification of the applicable security event Tags: atp.Status=candidate

Table 5.30: DiagnosticEventToSecurityEventMapping

[constr_10026] Existence of reference in the role **DiagnosticEventToSecurityEventMapping.diagnosticEvent**

Status: DRAFT

Imposition time: [IT_Dext](#)

[For each **DiagnosticEventToSecurityEventMapping**, the reference to **DiagnosticEvent** in the role **diagnosticEvent** shall exist.]

[constr_10027] Existence of reference in the role `DiagnosticEventToSecurityEventMapping.securityEventProps`*Status:* DRAFT*Imposition time:* IT_Dext

[For each `DiagnosticEventToSecurityEventMapping`, the reference to `SecurityEventContextProps` in the role `securityEventProps` shall exist.]

It is important to understand that the mapping to a security event is **not** directed at `SecurityEventDefinition`. This meta-class represents a high-level design object that needs some more context in order to be considered in a specific project.

This additional context is provided by `SecurityEventContextProps`, which consequently becomes the target of the reference in the role `DiagnosticEventToSecurityEventMapping.securityEventProps`.

At first glance, it may seem that the definition of the `DiagnosticEventToSecurityEventMapping` and the existence of attribute `SecurityEventContextProps.persistentStorage` create a certain level of redundancy. However, this is not really the case.

This means in particular that the existence of `SecurityEventContextProps.persistentStorage` can be used to indicate the need to persist the respective security event.

The corresponding `DiagnosticEventToSecurityEventMapping` may be created later in the workflow where the formal information which security event shall be persisted represents an important input to the workflow.

Class	SecurityEventContextProps			
Package	M2::AUTOSARTemplates::SecurityExtractTemplate			
Note	This meta-class specifies the <code>SecurityEventDefinition</code> to be mapped to an <code>IdsmInstance</code> and adds mapping-dependent properties of this security event valid only for this specific mapping. Tags: atp.Status=candidate			
Base	<code>ARObject</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>Referrable</code>			
Aggregated by	<code>SecurityEventContextMapping.mappedSecurityEvent</code>			
Attribute	Type	Mult.	Kind	Note
default ReportingMode	<code>SecurityEventReportingModeEnum</code>	0..1	attr	This attribute defines the default reporting mode for the referenced security event. Tags: atp.Status=candidate
persistent Storage	Boolean	0..1	attr	This attribute controls whether qualified reportings of the referenced security event shall be stored persistently by the mapped <code>IdsmInstance</code> or not. Tags: atp.Status=candidate





Class	SecurityEventContextProps			
securityEvent	SecurityEventDefinition	0..1	ref	This reference defines the security event that is mapped and enriched by SecurityEventMappingProps with mapping dependent properties. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=securityEvent.securityEventDefinition, securityEvent.variationPoint.shortLabel atp.Status=candidate vh.latestBindingTime=systemDesignTime
sensorInstance Id	PositiveInteger	0..1	attr	This attribute defines the ID of the security sensor that detects the referenced security event. Tags: atp.Status=candidate
severity	PositiveInteger	0..1	attr	This attribute defines how critical/severe the referenced security event is. Please note that currently, the severity level meanings of specific integer values is not specified by AUTOSAR but left to the party responsible for the IDS system design (e.g. the OEM). Tags: atp.Status=candidate

Table 5.31: SecurityEventContextProps

Class	SecurityEventDefinition			
Package	M2::AUTOSARTemplates::SecurityExtractTemplate			
Note	This meta-class defines a security-related event as part of the intrusion detection system. Tags: atp.Status=candidate atp.recommendedPackage=SecurityEventDefinitions			
Base	ARElement , ARObject , CollectableElement , Identifiable , IdsCommonElement , MultilanguageReferrable , PackageableElement , Referrable , UploadableDesignElement , UploadablePackageElement			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
eventSymbol Name	SymbolProps	0..1	aggr	This aggregation defines optionally an alternative Event Name for the SecurityEventDefinition in case there is a collision of shortNames. Stereotypes: atpSplittable Tags: atp.Splitkey=eventSymbolName.shortName atp.Status=candidate
id	PositiveInteger	0..1	attr	This attribute represents the numerical identification of the defined security event. The identification shall be unique within the scope of the IDS. Tags: atp.Status=candidate
securityEvent ContextData Definition	SecurityEventContext DataDefinition	*	ref	Definition of additional context data that is reported with the security event in order to better support the analysis of a possible security threat. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=securityEventContextDataDefinition.security EventContextDataDefinition, securityEventContextData Definition.variationPoint.shortLabel atp.Status=candidate vh.latestBindingTime=systemDesignTime

Table 5.32: SecurityEventDefinition

5.4 Mapping of Function Inhibition

The relevant mappings in the context of function inhibition are depicted in [Figure 5.20](#).

The description of the modeling of the mapping in the context of functional inhibition can be roughly divided the following sections:

- The mapping between an inhibition source and a diagnostic event is described in [Section 5.4.1](#).
- The alias event mapping is described in [Section 5.4.2](#).
- The mapping between a functional identifier and a diagnostic monitor is described in [Section 5.4.3](#).
- The mapping between a functional identifier and an [IUMPR](#) is described in [Section 5.4.4](#).

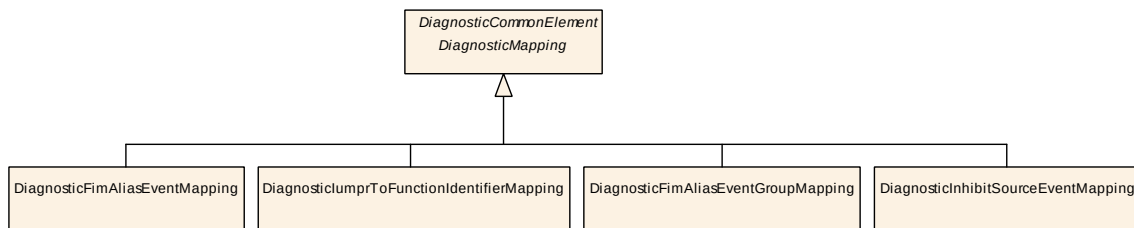


Figure 5.20: Modeling of the [DiagnosticMapping](#) in the context of function inhibition

5.4.1 Mapping between Inhibition Source and Diagnostic Event

The configuration of the Fim requires the clarification of the relation between a particular inhibition source (modeled as [DiagnosticFunctionInhibitSource](#)) and one or many diagnostic events (modeled as [DiagnosticEvent](#)).

The easiest way to provide this information is the usage of the [DiagnosticInhibitSourceEventMapping](#) that is able to create an association between a [DiagnosticFunctionInhibitSource](#) on the one hand and either a [DiagnosticEvent](#) or a [DiagnosticFimEventGroup](#) on the other hand.

This is only possible if the [DiagnosticEvents](#) referenced by the [DiagnosticInhibitSourceEventMapping](#) already exist. This existence is subject to the development workflow and may or may not apply. For more details, please refer to [Figure 4.74](#).

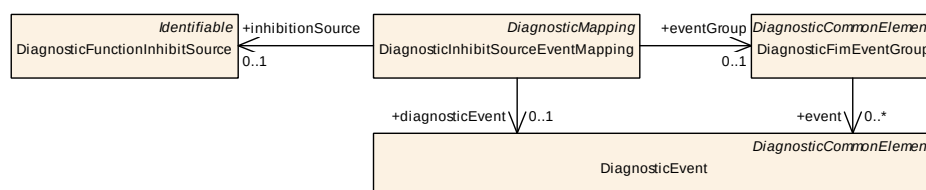


Figure 5.21: Modeling of the [DiagnosticInhibitSourceEventMapping](#)

Class	DiagnosticInhibitSourceEventMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::FimMapping			
Note	This meta-class represents the ability to map a DiagnosticFunctionInhibitSource directly to alternatively one DiagnosticEvent or one DiagnosticFimSummaryEvent. This model element shall be used if the approach via the alias events is not applicable, i.e. when diagnostic events defined by the Dem are already available at the time the Fim configuration within the diagnostic extract is created. Tags: atp.recommendedPackage=DiagnosticInhibitSourceEventMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnosticEvent	DiagnosticEvent	0..1	ref	This represents the reference to the diagnostic event.
eventGroup	DiagnosticFimEventGroup	0..1	ref	This represents the reference to the event group
inhibitionSource	DiagnosticFunctionInhibitSource	0..1	ref	This represents the reference to the inhibition source.

Table 5.33: DiagnosticInhibitSourceEventMapping

5.4.2 Alias Event Mapping

[TPS_DEXT_01095] Definition of “alias” diagnostic event for the creation of a Fim configuration in the diagnostic extract

Upstream requirements: [RS_DEXT_00061](#), [RS_DEXT_00062](#)

[A pre-configuration of the Fim function inhibition can be created on the basis of the following meta-classes:

[DiagnosticFimAliasEventMapping](#) in this case the definition of “alias” diagnostic event corresponds to a single [DiagnosticEvent](#)

[DiagnosticFimAliasEventGroupMapping](#) in this case the definition of a group of “alias” diagnostic events corresponds to a group of single [DiagnosticEvents](#)

]

Ultimately, the modeling approach for the Fim starts at the definition of the concept of a function itself by means of the meta-class [DiagnosticFunctionIdentifier](#).

[TPS_DEXT_01100] Consequence of the existence of [DiagnosticFimAliasEventMapping](#)

Upstream requirements: [RS_DEXT_00060](#), [RS_DEXT_00061](#)

[The references from meta-class [DiagnosticFimAliasEventMapping](#) in the roles [actualEvent](#) and [aliasEvent](#) do not necessarily have to exist at the same time. The following rules apply:

Only [actualEvent](#) exists: In this case there is no [DiagnosticFimAliasEvent](#) available and the actual [DiagnosticEvent](#) can directly be taken for creating the Fim configuration.

Only [aliasEvent](#) exists: In this case the configuration is considered incomplete and only defines the intended semantics from the point of view of a pre-configuration of the Fim.

Both [actualEvent](#) and [aliasEvent](#) exist: In this case it is obvious that the configuration has undergone a pre-configuration step in which a [DiagnosticFimAliasEvent](#) has been used. However, since the [DiagnosticEvent](#) in the role [actualEvent](#) exists the Diagnostic Extract is considered complete with respect to this aspect of the Fim configuration.

]

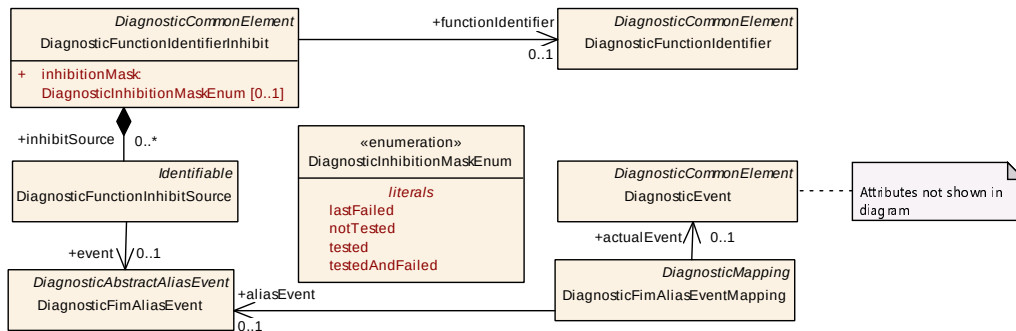


Figure 5.22: Inhibition of events in Fim for diagnostics configuration

Class	DiagnosticFimAliasEventMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Dem::DiagnosticEvent			
Note	This meta-class represents the ability to model the mapping of a DiagnosticEvent to a DiagnosticAlias Event. By this means the "preliminary" modeling by way of a DiagnosticAliasEvent is further substantiated. Tags: atp.recommendedPackage=DiagnosticFimEventMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
actualEvent	DiagnosticEvent	0..1	ref	This represents the reference to the actual diagnostic event.
aliasEvent	DiagnosticFimAlias Event	0..1	ref	This represents the reference to the alias event.

Table 5.34: DiagnosticFimAliasEventMapping

[TPS_DEXT_01101] Consequence of the existence of **DiagnosticFimAliasEventGroupMapping**

Upstream requirements: RS_DEXT_00060, RS_DEXT_00061

[The references from meta-class **DiagnosticFimAliasEventGroupMapping** in the roles **actualEvent** and **aliasEvent** do not necessarily have to exist at the same time. The following rules apply:

Only **actualEvent exists:** In this case there is no **DiagnosticFimAliasEventGroup** available and the actual **DiagnosticFimEventGroup** can directly be taken for creating the Fim configuration.

Only **aliasEvent exists:** In this case the configuration is considered incomplete and only defines the intended semantics from the point of view of a pre-configuration of the Fim.

Both **actualEvent and **aliasEvent** exist:** In this case it is obvious that the configuration has undergone a pre-configuration step in which a **DiagnosticFimAliasEventGroup** has been used. However, since the **DiagnosticFimEventGroup** in the role **actualEvent** exists the Diagnostic Extract is considered complete with respect to this aspect of the Fim configuration.

]

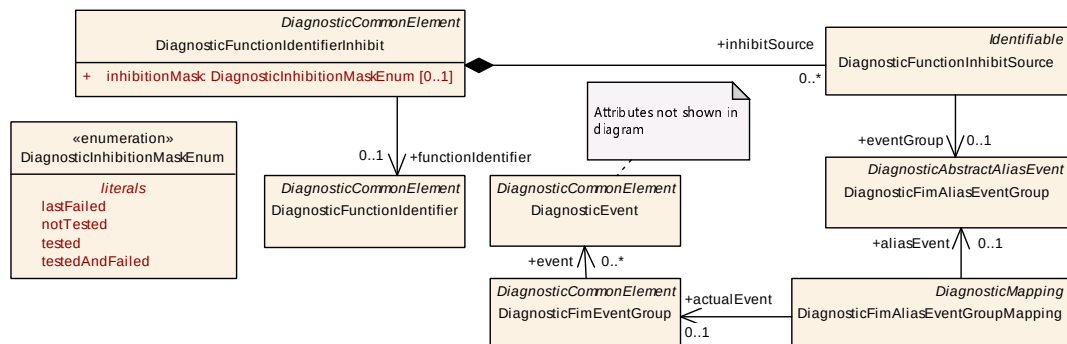


Figure 5.23: Inhibition of event groups in Fim for diagnostics configuration

Class	DiagnosticFimAliasEventGroup			
Package	M2::AUTOSARTemplates::DiagnosticExtract::Fim			
Note	This meta-class represents the ability to define an alias for a Fim summarized event. This alias can be used in early phases of the configuration process until a further refinement is possible. Tags: atp.recommendedPackage=DiagnosticFimAliasEventGroups			
Base	ARElement, ARObject, CollectableElement, DiagnosticAbstractAliasEvent, DiagnosticCommonElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	DiagnosticFimAliasEventGroup			
groupedAliasEvent	DiagnosticFimAliasEvent	*	ref	By means of this reference the grouping of Diagnostic AliasEvents within the DiagnosticFimSummaryEvent can be specified.

Table 5.35: DiagnosticFimAliasEventGroup

Class	DiagnosticFimAliasEventGroupMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::FimMapping			
Note	This meta-class represents the ability to map a DiagnosticFimEventGroup to a DiagnosticFimAliasEvent Group. By this means the "preliminary" modeling by way of a DiagnosticFimAliasEventGroup is further substantiated. Tags: atp.recommendedPackage=DiagnosticFimAliasEventGroupMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
actualEvent	DiagnosticFimEventGroup	0..1	ref	This represents the reference to the actual summary event.
aliasEvent	DiagnosticFimAliasEventGroup	0..1	ref	This represents the reference to the alias summary event.

Table 5.36: DiagnosticFimAliasEventGroupMapping

5.4.3 Mapping of Function Identifiers to interested software-components

Beside the ability to model a function inhibition itself, it is equally important that this inhibition can be queried from or pushed to interested software-components.

This relation can be expressed by means of the [DiagnosticFimFunctionMapping](#). The details are sketched in [Figure 5.24](#).

[TPS_DEXT_01102] Semantics of [DiagnosticFimFunctionMapping](#)

Upstream requirements: [RS_DEXT_00063](#)

[The meta-class [DiagnosticFimFunctionMapping](#) represents the ability to map a [DiagnosticFunctionIdentifier](#) to a [SwcServiceDependency](#) that addresses function inhibition.]

[constr_1454] [DiagnosticFimFunctionMapping](#) shall only reference a [SwcServiceDependency](#) that aggregates [FunctionInhibitionNeeds](#)

Imposition time: [IT_Dext](#)

[A [DiagnosticFimFunctionMapping](#) shall only reference a [SwcServiceDependency](#) that aggregates [FunctionInhibitionNeeds](#) in the role [serviceNeeds](#).]

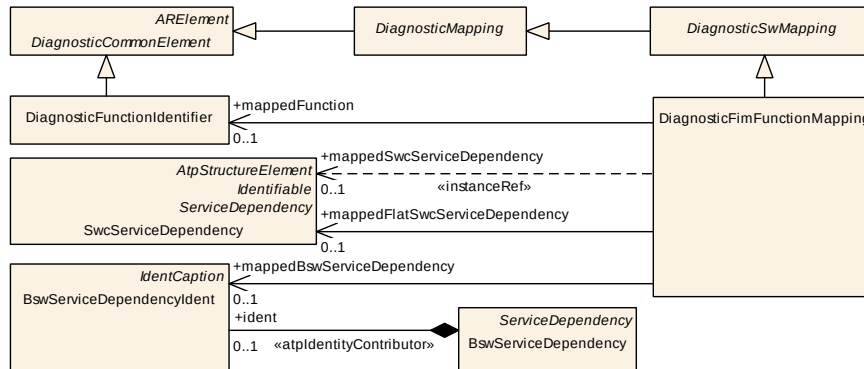


Figure 5.24: Mapping of function identifiers to the corresponding monitors

The modeling of this mapping is closely related to the existing modeling of mappings that involve [SwcServiceDependency](#) in the context of the diagnostic extract.

Class	DiagnosticFimFunctionMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::ServiceMapping			
Note	This meta-class represents the ability to define a mapping between a function identifier (FID) and the corresponding SwcServiceDependency in the application software resp. basic software. Tags: atp.recommendedPackage=DiagnosticFimFunctionMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , DiagnosticSwMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
mappedBsw Service Dependency	BswServiceDependencyIdent	0..1	ref	This is supposed to represent a reference to a Bsw ServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.
mappedFlatSwc Service Dependency	SwcServiceDependency	0..1	ref	This represents the ability to refer to an AtomicSw ComponentType that is available without the definition of how it will be embedded into the component hierarchy.
mapped Function	DiagnosticFunctionIdentifier	0..1	ref	This represents the mapped FID.
mappedSwc Service Dependency	SwcServiceDependency	0..1	iref	This represents the ability to point into the component hierarchy (under possible consideration of the root SoftwareComposition). InstanceRef implemented by: SwcServiceDependencyInSystemInstanceRef

Table 5.37: DiagnosticFimFunctionMapping

Class	FunctionInhibitionNeeds			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	Specifies the abstract needs on the configuration of the Function Inhibition Manager for one Function Identifier (FID). This class currently contains no attributes. Its name can be regarded as a symbol identifying the FID from the viewpoint of the component or module which owns this class.			
Base	ARObject , Identifiable , MultilanguageReferrable , Referrable , ServiceNeeds			
Aggregated by	BswServiceDependency.serviceNeeds , SwcServiceDependency.serviceNeeds			
Attribute	Type	Mult.	Kind	Note
—	—	—	—	—

Table 5.38: FunctionInhibitionNeeds

5.4.4 Diagnostic IUMPR to Function Identifier Mapping

[TPS_DEXT_01157] Semantics of `DiagnosticIumprToFunctionIdentifierMapping`

Upstream requirements: `RS_DEXT_00078`

[The existence of a `DiagnosticIumprToFunctionIdentifierMapping` indicates that the computation of the IUMPR can be inhibited by the FIM.]




Figure 5.25: Modeling of the `DiagnosticIumprToFunctionIdentifierMapping`

Class	DiagnosticIumprToFunctionIdentifierMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	This meta-class represents the ability to associate a DiagnosticFunctionIdentifier with a DiagnosticIumpr. Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
function Identifier	DiagnosticFunctionIdentifier	0..1	ref	This reference identifies the applicable Diagnostic FunctionIdentifier.
iumpr	DiagnosticIumpr	0..1	ref	This reference identifies the applicable DiagnosticIumpr.

Table 5.39: DiagnosticIumprToFunctionIdentifierMapping

[constr_10084] Existence of `DiagnosticIumprToFunctionIdentifierMapping.iumpr`

Imposition time: `IT_Dext`

[For all `DiagnosticIumprToFunctionIdentifierMapping`, the reference in the role `iumpr` shall exist.]

[constr_10085] Existence of `DiagnosticIumprToFunctionIdentifierMapping.functionIdentifier`

Imposition time: `IT_Dext`

[For all `DiagnosticIumprToFunctionIdentifierMapping`, the reference in the role `functionIdentifier` shall exist.]

5.5 J1939-related DiagnosticMapping

The relevant mappings in the context of diagnostics on J1939 are depicted in [Figure 5.26](#).

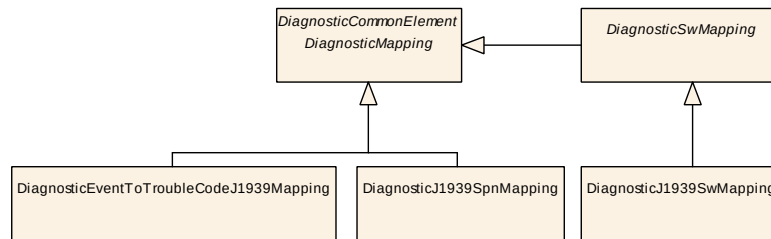


Figure 5.26: Modeling of the [DiagnosticMapping](#) in the context of J1939

The description of the modeling of the mapping in the context of functional inhibition can be roughly divided the following sections:

- The [SPN](#) mapping is described in [Section 5.5.1](#).
- The mapping between a software-components and controller applications is described in [Section 5.5.2](#).
- The mapping between a diagnostic event and a J1939 [DTC](#) is described in [Section 5.5.3](#).

5.5.1 SPN Mapping

[TPS_DEXT_01103] Semantics of meta-class [DiagnosticJ1939SpnMapping](#)

Upstream requirements: [RS_DEXT_00064](#)

[The [DiagnosticJ1939SpnMapping](#) has the ability to associate a [DiagnosticJ1939Spn](#) with a [SystemSignal](#). By this means it is possible to express that a given [SystemSignal](#) is taken to transport a J1939 *Suspect Parameter Number*.]

Please note that the modeling of the [DiagnosticJ1939SpnMapping](#) also implies that the same [SPN](#) can be sent by different [J1939NmNodes](#). This ability is positively supported.

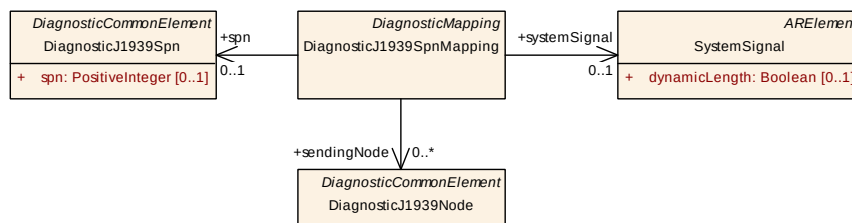


Figure 5.27: Modeling of the [DiagnosticJ1939SpnMapping](#)

[TPS_DEXT_01106] Relation of Controller Application to SPN

Upstream requirements: [RS_DEXT_00064](#)

[It is technically possible that several *Controller Applications*, formally represented by the meta-class [DiagnosticJ1939Node](#), can send the same *Suspect Parameter Number*.

In response to this specific characteristic of the J1939 approach, the multiplicity of the reference [DiagnosticJ1939SpnMapping.sendingNode](#) has been set to 0..*.]

Class	DiagnosticJ1939SpnMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::DiagnosticJ1939Mapping			
Note	This meta-class represents the ability to define a mapping between an SPN and a SystemSignal. The existence of a mapping means that neither the SPN nor the SystemSignal need to be updated if the relation between the two changes. Tags: atp.recommendedPackage=DiagnosticJ1939SpnMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
sendingNode	DiagnosticJ1939Node	*	ref	This additional reference has a supporting role in that it identifies all sending nodes of a given SPN. It is positively possible that a given SPN is sent by more than one node. Even though the reference targets the DiagnosticJ1939Node the semantics of the reference is bound to the J1939NmNode that is in turn referenced by the DiagnosticJ1939Node .
spn	DiagnosticJ1939Spn	0..1	ref	This reference goes to the SPN that shall be associated with a SystemSignal.
systemSignal	SystemSignal	0..1	ref	This reference goes to the SystemSignal that shall be associated with an SPN.

Table 5.40: DiagnosticJ1939SpnMapping

Class	DiagnosticJ1939Node			
Package	M2::AUTOSARTemplates::DiagnosticExtract::J1939			
Note	This meta-class represents the diagnostic configuration of a J1939 Nm node, which in turn represents a "virtual Ecu" on the J1939 communication bus. Tags: atp.recommendedPackage=DiagnosticJ1939Nodes			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
nmNode	J1939NmNode	0..1	ref	This represents the reference to the "virtual Ecu" to which the enclosing DiagnosticJ1939Node is associated.

Table 5.41: DiagnosticJ1939Node

5.5.2 Mapping between Software-Components and Controller Applications

Another aspect of the modeling of J1939 diagnostics is that a mapping between the [DiagnosticJ1939Node](#) (which formally represents a *Controller Application*) and the AUTOSAR way of specifying a “function” (by means of the meta-class [SwComponentPrototype](#)) is required.

This leads to the definition of the [DiagnosticJ1939SwMapping](#).

[TPS_DEXT_01108] Purpose of the [DiagnosticJ1939SwMapping](#)

Upstream requirements: [RS_DEXT_00066](#)

[The purpose of the [DiagnosticJ1939SwMapping](#) is to associate a [SwComponentPrototype](#) with a [DiagnosticJ1939Node](#). By this means a concrete functionality is mapped to the abstract J1939 *Controller Application*.]

Please note that the basis for this mapping is the existence of a [CompositionSwComponentType](#) rather than a [System](#). The mapping can therefore (and this is the main motivation for this kind of modeling) be done independently of the deployment to a concrete project.

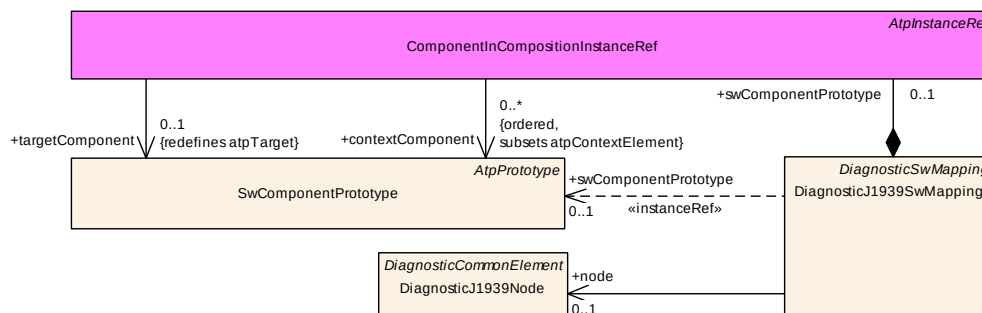


Figure 5.28: Mapping between Software-Components and Controller Applications

Class	DiagnosticJ1939SwMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::DiagnosticJ1939Mapping			
Note	This meta-class represents the ability to map a piece of application software to a J1939DiagnosticNode. By this means the diagnostic configuration can be associated with the application software. Tags: atp.recommendedPackage=DiagnosticJ1939SwMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , DiagnosticSwMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
node	DiagnosticJ1939Node	0..1	ref	This represents the mapped DiagnosticJ1939Node.
swComponentPrototype	SwComponentPrototype	0..1	iref	This represents the mapped SwComponentPrototype. InstanceRef implemented by: ComponentInCompositionInstanceRef

Table 5.42: DiagnosticJ1939SwMapping

5.5.3 Mapping between DiagnosticEvent and J1939 DTC

[TPS_DEXT_01145] Semantics of meta-class **DiagnosticEventToTroubleCodeJ1939Mapping**

Upstream requirements: RS_DEXT_00067

[The **DiagnosticEventToTroubleCodeJ1939Mapping** is used to assign one (1:1) or multiple (n:1) **DiagnosticEvents** to a **DiagnosticTroubleCodeJ1939**.

In case of an n:1 mapping, multiple instances of **DiagnosticEventToTroubleCodeJ1939Mapping** with the same reference of role **troubleCodeJ1939** but different references of role **diagnosticEvent** have to be defined.]




Figure 5.29: Mapping between **DiagnosticEvent** and **DiagnosticTroubleCodeJ1939**

Class	DiagnosticEventToTroubleCodeJ1939Mapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::DiagnosticJ1939Mapping			
Note	By means of this meta-class it is possible to associate a DiagnosticEvent to a DiagnosticTroubleCodeJ1939 . Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
diagnosticEvent	DiagnosticEvent	0..1	ref	Reference to a DiagnosticEvent to which a J1939 Diagnostic Trouble Code is assigned.
troubleCode J1939	DiagnosticTroubleCodeJ1939	0..1	ref	Reference to a J1939 Diagnostic Trouble Code to which a DiagnosticEvent is assigned.

Table 5.43: **DiagnosticEventToTroubleCodeJ1939Mapping**

[constr_1857] Existence of the reference **DiagnosticEventToTroubleCodeJ1939Mapping.diagnosticEvent**

Imposition time: IT_Dext

[For each **DiagnosticEventToTroubleCodeJ1939Mapping**, reference **diagnosticEvent** shall exist.]

[constr_1858] Existence of the attribute **DiagnosticEventToTroubleCodeJ1939Mapping.troubleCodeJ1939**

Imposition time: IT_Dext

[For each **DiagnosticEventToTroubleCodeJ1939Mapping**, attribute **troubleCodeJ1939** shall exist.]

5.6 Diagnostic Configuration of CP Software Clusters

On the *AUTOSAR classic platform*, the so called “CP Software Cluster” (formalized by meta-class `CpSoftwareCluster`) provides an approach for a modular decomposition of an `ECU` into components that can be independently developed and tested.

Thanks to its modular and decentralized nature, the Diagnostic Extract is capable of supporting the diagnostic configuration of a CP Software Cluster.

However, there are some aspects where the development and integration of CP Software Clusters with the corresponding Diagnostic Extract can be improved. These aspects are described in this chapter.

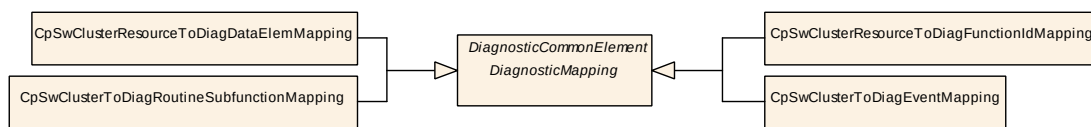


Figure 5.30: Subclasses of `DiagnosticMapping` that are relevant for the configuration of `CpSoftwareCluster`

The description of the modeling of the mapping in the context of CP software clusters can be roughly divided the following sections:

- The association of the diagnostic mapping with the CP software cluster is described in [Section 5.6.1](#).
- The mapping between a DEXT elements and software cluster resources is described in [Section 5.6.2](#).
- The mapping between a diagnostic event and software cluster resources is described in [Section 5.6.3](#).
- The mapping between a diagnostic data element and software cluster resources is described in [Section 5.6.4](#).
- The mapping between a diagnostic routines and software cluster resources is described in [Section 5.6.5](#).
- The mapping between a function identifiers and software cluster resources is described in [Section 5.6.6](#).

5.6.1 Association of Diagnostic Mapping with a CP Software Cluster

[TPS_DEXT_01160] Semantics of the reference `DiagnosticMapping.providerSoftwareCluster`

Status: DRAFT

[In early stages of the design of a CP Software Cluster, it is possible to express the relevance of a given `DiagnosticMapping` for a specific `CpSoftwareCluster` that

is not yet on a level of detail such that the `DiagnosticMapping` would be able to refer to the final target of the mapping on the side of the application software.

For this purpose, the reference in the role `DiagnosticMapping.providerSoftwareCluster` can be used to refer to a CP Software Cluster in a *providing* role.

Conversely, the reference in the role `DiagnosticMapping.requesterSoftwareCluster` can be used to refer to a CP Software Cluster in a *requesting* role.]




Figure 5.31: Reference from `DiagnosticMapping` to `CpSoftwareCluster`

5.6.2 Mapping between DEXT elements and CP Software Cluster Resources

Meta-class `CpSoftwareClusterResource` is described in the [5, TPS System Template]. It represents a location in memory that is reserved e.g. for conveying information between CP Software Clusters.

By creating a mapping between an element of a Diagnostic Extract and a `CpSoftwareClusterResource` it is possible to already designate specific `CpSoftwareClusterResources` for the communication of diagnostic information even before the `SwComponentTypes` and `SwComponentPrototypes` within the `CpSoftwareCluster` are fully specified, i.e. the creation of a complete `DiagnosticMapping` becomes a possibility.

Class	<code>CpSoftwareClusterResource</code> (abstract)			
Package	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
Note	Represents a single resource required or provided by a CP Software Cluster. Tags: atp.recommendedPackage=Resources			
Base	<code>ARObject</code> , <code>Identifiable</code> , <code>MultilanguageReferrable</code> , <code>Referrable</code>			
Subclasses	<code>CpSoftwareClusterCommunicationResource</code> , <code>CpSoftwareClusterServiceResource</code>			
Aggregated by	<code>CpSoftwareClusterResourcePool.resource</code>			
Attribute	Type	Mult.	Kind	Note
dependent Resource	<code>RoleBasedResourceDependency</code>	*	aggr	Link to a resource which depends on this resource to implement them.
globalResource Id	<code>PositiveInteger</code>	0..1	attr	A unique identifiers per resource used for the connection process. The identifier is required to be unique in the scope of a single machine. If software clusters are designed to be reused on multiple machines the uniqueness requirements applies for all the intended machines.





Class	CpSoftwareClusterResource (abstract)			
isMandatory	Boolean	0..1	attr	This attribute indicates, that the resource is mandatory to operate the Software Cluster. If the resource is not provided on the machine the connection process of any Software Cluster requiring this resource gets aborted.

Table 5.44: CpSoftwareClusterResource

Class	RoleBasedResourceDependency			
Package	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
Note	This class specifies a dependency between CpSoftwareClusterResources.			
Base	ARObject			
Aggregated by	CpSoftwareClusterResource.dependentResource			
Attribute	Type	Mult.	Kind	Note
resource	CpSoftwareClusterResource	0..1	ref	Reference to resource for which the dependency is depicted.
role	Identifier	0..1	attr	This is attributes characterizes the kind of dependency

Table 5.45: RoleBasedResourceDependency

5.6.3 Mapping between Diagnostic Events and CP Software Cluster Resources

[TPS_DEXT_01161] Mapping between a DiagnosticEvent and a CpSoftwareClusterResource

Status: DRAFT

[The creation of a mapping between a DiagnosticEvent and a CpSoftwareClusterResource by means of a CpSwClusterToDiagEventMapping supports the configuration of the reporting of diagnostic events respectively the querying of the event status across the boundaries of a CpSoftwareCluster.]




Figure 5.32: Mapping between DiagnosticEvent and CpSoftwareClusterResource

Class	CpSwClusterToDiagEventMapping
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::CpSoftwareCluster
Note	This meta-class represents the ability to associate a CpSoftwareClusterResource with a Diagnostic Event. This allows for indicating that the CpSoftwareClusterResource is used to convey the reporting or status query of the mapped DiagnosticEvent. Tags: atp.Status=draft atp.recommendedPackage=CpSoftwareClusterToDiagMappings





Class	CpSwClusterToDiagEventMapping			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
cpSoftwareClusterResource	CpSoftwareClusterResource	0..1	ref	This reference identifies the mapped CpSoftwareClusterResource. Tags: atp.Status=draft
diagnosticEvent	DiagnosticEvent	0..1	ref	This reference identifies the mapped DiagnosticEvent. Tags: atp.Status=draft


Table 5.46: CpSwClusterToDiagEventMapping

5.6.4 Mapping between Diagnostic Data Elements and CP Software Cluster Resources

[TPS_DEXT_01162] Mapping between a [DiagnosticDataElement](#) and a [CpSoftwareClusterResource](#)

Status: DRAFT

[The creation of a mapping between a [DiagnosticDataElement](#) and a [CpSoftwareClusterResource](#) by means of a [CpSwClusterResourceToDiagDataElemMapping](#) supports the configuration of the transport of an element of a DID across the boundaries of a [CpSoftwareCluster](#).]

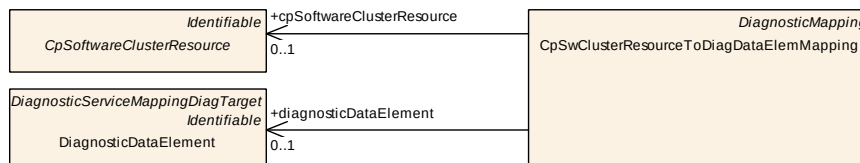Figure 5.33: Mapping between [DiagnosticEvent](#) and [CpSoftwareClusterResource](#)

Class	CpSwClusterResourceToDiagDataElemMapping
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::CpSoftwareCluster
Note	This meta-class represents the ability to associate a CpSoftwareClusterResource with a DiagnosticDataElement. This allows for indicating that the CpSoftwareClusterResource is used to convey the DiagnosticDataElement. Tags: atp.Status=draft atp.recommendedPackage=CpSoftwareClusterToDiagMappings
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable
Aggregated by	ARPackage.element





Class	CpSwClusterResourceToDiagDataElemMapping			
Attribute	Type	Mult.	Kind	Note
cpSoftwareClusterResource	CpSoftwareClusterResource	0..1	ref	This represents the affected CpSoftwareClusterResource. Tags: atp.Status=draft
diagnosticDataElement	DiagnosticDataElement	0..1	ref	This reference represents the affected DiagnosticDataElement. Tags: atp.Status=draft

Table 5.47: CpSwClusterResourceToDiagDataElemMapping

5.6.5 Mapping between Diagnostic Routines and CP Software Cluster Resources

[TPS_DEXT_01163] Mapping between a [DiagnosticRoutineSubfunction](#) and a [CpSoftwareClusterResource](#)

Status: DRAFT

[The creation of a mapping between a concrete sub-class of [DiagnosticRoutineSubfunction](#) and a [CpSoftwareClusterResource](#) by means of a [CpSwClusterToDiagRoutineSubfunctionMapping](#) supports configuration of the transport of call and return arguments of a diagnostic routine call across the boundaries of a [CpSoftwareCluster](#).]

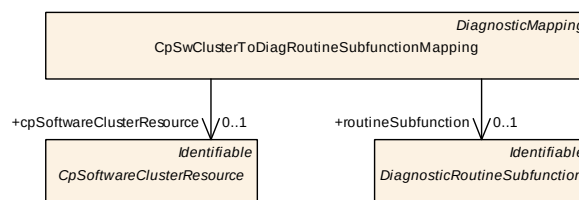


Figure 5.34: Mapping between [DiagnosticRoutineSubfunction](#) and [CpSoftwareClusterResource](#)

Class	CpSwClusterToDiagRoutineSubfunctionMapping
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::CpSoftwareCluster
Note	This meta-class represents the ability to associate a CpSoftwareClusterResource with a subfunction of a DiagnosticRoutine. This allows for indicating that the CpSoftwareClusterResource is used to convey the calling or result return of the mapped DiagnosticRoutine. Tags: atp.Status=draft atp.recommendedPackage=CpSoftwareClusterToDiagMappings
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable
Aggregated by	ARPackage.element





Class	CpSwClusterToDiagRoutineSubfunctionMapping			
Attribute	Type	Mult.	Kind	Note
cpSoftwareClusterResource	CpSoftwareClusterResource	0..1	ref	This reference identifies the mapped CpSoftwareClusterResource. Tags: atp.Status=draft
routineSubfunction	DiagnosticRoutineSubfunction	0..1	ref	This reference identifies the mapped subfunction of a DiagnosticRoutine. Tags: atp.Status=draft


Table 5.48: CpSwClusterToDiagRoutineSubfunctionMapping

5.6.6 Mapping between Diagnostic Function Identifiers and CP Software Cluster Resources

[TPS_DEXT_01164] Mapping between a [DiagnosticFunctionIdentifier](#) and a [CpSoftwareClusterResource](#)

Status: DRAFT

[The creation of a mapping between a [DiagnosticFunctionIdentifier](#) and a [CpSoftwareClusterResource](#) by means of a [CpSwClusterResourceToDiagFunctionIdMapping](#) supports the configuration of the transport of the execution permission associated with a [DiagnosticFunctionIdentifier](#) across the boundaries of a [CpSoftwareCluster](#).]

Figure 5.35: Mapping between [DiagnosticFunctionIdentifier](#) and [CpSoftwareClusterResource](#)

Class	CpSwClusterResourceToDiagFunctionIdMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping::CpSoftwareCluster			
Note	This meta-class represents the ability to associate a CpSoftwareClusterResource with a subfunction of a DiagnosticFunctionIdentifier. This allows for indicating that the CpSoftwareClusterResource is used to convey the execution permission associated with the mapped function identifier. Tags: atp.Status=draft atp.recommendedPackage=CpSoftwareClusterToDiagMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	CpSwClusterResourceToDiagFunctionIdMapping			
cpSoftwareClusterResource	CpSoftwareClusterResource	0..1	ref	This reference identifies the mapped CpSoftwareClusterResource. Tags: atp.Status=draft
functionIdentifier	DiagnosticFunctionIdentifier	0..1	ref	This reference identifies the mapped DiagnosticFunctionIdentifier. Tags: atp.Status=draft

Table 5.49: CpSwClusterResourceToDiagFunctionIdMapping

A Reference Material

This chapter contains some relevant reference material for this specification.

A.1 Imposition Times of Constraints

The constraints formulated in this document could have different *actual* imposition times which denote the steps in the workflow when the respective constraint has to be imposed.

Some imposition times “include” other imposition times, an example for this relation is discussed in the [Table A.1](#)

The imposition times that are considered applicable in the scope of this document¹ are listed in [Table A.1](#).

Please note that the imposition times are intentionally rendered as technical terms such that it is possible to link back from each constraint to the definition of the affected imposition time in [Table A.1](#).

Imposition Time	Description	Motivation
IT_Dext	Creation of the Diagnostic Extract is finished	This imposition time is applicable to both the AUTOSAR adaptive platform and the AUTOSAR classic platform the at the time when the DEXT is complete.

Table A.1: Imposition Times of constraints in this document

The constraints in this document are also applicable to the *AUTOSAR adaptive platform*, unless a constraint exist in the context of the [7, AUTOSAR TPS Manifest Specification] that overrules a corresponding constraint in this document.

A.2 Abbreviations

The following table contains a list of abbreviations used in the scope of this document along with the spelled-out meaning of each of the abbreviations.

Abbreviation	meaning
API	Application Programming Interface
BSW	Basic Software
BswM	Basic Software Manager
CAN	Controller Area Network
CSE	Codes for Scaling Units



¹Different imposition times may be defined in the context of other AUTOSAR standard documents



Abbreviation	meaning
DCM	Diagnostics Communication Manager
DCY	Driving Cycle
DEM	Diagnostics Event Manager
DID	Diagnostic Identifier
DTC	Diagnostic Trouble Code
DTR	Diagnostic Test Result
DoIP	Diagnostics over IP
ECU	Electrical Control Unit
ECUC	ECU Configuration
FID	Function Identifier
FIM	Function Inhibition Manager
GID	Group Identifier
ID	Identifier
IO	Input/Output
IP	Internet Protocol
IUMPR	In-Use Monitor Performance Ratio
ISO	International Organization for Standardization
LIN	Local Interconnect Network
NRC	Negative Response Code
OBD	On-Board Diagnostic
ODX	Open Diagnostic Data Exchange
OEM	Original Equipment Manufacturer
PDU	Protocol Data Unit
PID	Parameter Identifier
PKI	Public-Key Infrastructure
PTO	Power Take Off
RA	Routing Activation
RAM	Random Access Memory
RID	Routine Identifier
ROE	Response on Event
ROM	Read-Only Memory
RTE	Run-Time Environment
RS	Requirements Specification
RX	Receive
SPN	Suspect Parameter Number
SW	Software
SWC	Software Component
SWCD	Software Component Description
TID	Test Identifier
TPS	Template Specification
TX	Transmit
SWS	Software Specification
UDS	Unified Diagnostic Services
UML	Unified Modeling Language





<i>Abbreviation</i>	<i>meaning</i>
VFB	Virtual Functional Bus
VIN	Vehicle Identification Number
WWH-OBD	World-Wide Harmonized On-Board Diagnostics
XML	Extensible Markup Language
XSD	XML Schema Definition

Table A.2: Abbreviations used in the scope of this Document

A.3 Requirements Tracing

The following table references the requirements specified in the [25, RS Diagnostic Extract Template] and links to the fulfillment of these.

Requirement	Description	Satisfied by
[RS_DEXT_00001]	Diagnostic data exchange	[TPS_DEXT_01003] [TPS_DEXT_01004] [TPS_DEXT_01005] [TPS_DEXT_01007] [TPS_DEXT_01008] [TPS_DEXT_01014] [TPS_DEXT_01019] [TPS_DEXT_01020] [TPS_DEXT_01022] [TPS_DEXT_01023] [TPS_DEXT_01024] [TPS_DEXT_01025] [TPS_DEXT_01026] [TPS_DEXT_01027] [TPS_DEXT_01028] [TPS_DEXT_01029] [TPS_DEXT_01038] [TPS_DEXT_01046] [TPS_DEXT_01047] [TPS_DEXT_01055] [TPS_DEXT_01056] [TPS_DEXT_01057] [TPS_DEXT_01060] [TPS_DEXT_01066] [TPS_DEXT_01069] [TPS_DEXT_01075]
[RS_DEXT_00003]	SessionControl	[TPS_DEXT_01039] [TPS_DEXT_01045] [TPS_DEXT_01081] [TPS_DEXT_01082]
[RS_DEXT_00004]	ECUReset	[TPS_DEXT_01019] [TPS_DEXT_01020] [TPS_DEXT_01021] [TPS_DEXT_01045] [TPS_DEXT_01056]
[RS_DEXT_00005]	ClearDiagnosticInformation	[TPS_DEXT_01022] [TPS_DEXT_01045]
[RS_DEXT_00006]	ReadDTCInformation	[TPS_DEXT_01034] [TPS_DEXT_01045] [TPS_DEXT_01060]
[RS_DEXT_00007]	ReadDataByIdentifier	[TPS_DEXT_01045] [TPS_DEXT_01146]
[RS_DEXT_00008]	ReadMemoryByAddress	[TPS_DEXT_01024] [TPS_DEXT_01045]
[RS_DEXT_00009]	SecurityAccess	[TPS_DEXT_01036] [TPS_DEXT_01037] [TPS_DEXT_01038] [TPS_DEXT_01045] [TPS_DEXT_01053]
[RS_DEXT_00010]	CommunicationControl	[TPS_DEXT_01029] [TPS_DEXT_01030] [TPS_DEXT_01031] [TPS_DEXT_01032] [TPS_DEXT_01045] [TPS_DEXT_01057] [TPS_DEXT_01074] [TPS_DEXT_01186]
[RS_DEXT_00011]	ReadDataByPeriodicIdentifier	[TPS_DEXT_01045]
[RS_DEXT_00012]	DynamicallyDefineDataIdentifier	[TPS_DEXT_01045]
[RS_DEXT_00013]	WriteDataByIdentifier	[TPS_DEXT_01045]
[RS_DEXT_00014]	IOControl	[TPS_DEXT_01015] [TPS_DEXT_01016] [TPS_DEXT_01017] [TPS_DEXT_01018] [TPS_DEXT_01045] [TPS_DEXT_01150]
[RS_DEXT_00015]	RoutineControl	[TPS_DEXT_01035] [TPS_DEXT_01045] [TPS_DEXT_01077] [TPS_DEXT_01078] [TPS_DEXT_01079] [TPS_DEXT_01080]
[RS_DEXT_00016]	RequestDownload	[TPS_DEXT_01027] [TPS_DEXT_01045]
[RS_DEXT_00017]	RequestUpload	[TPS_DEXT_01028] [TPS_DEXT_01045]
[RS_DEXT_00018]	TransferData	[TPS_DEXT_01026] [TPS_DEXT_01045]
[RS_DEXT_00019]	RequestTransferExit	[TPS_DEXT_01025] [TPS_DEXT_01045]
[RS_DEXT_00020]	WriteMemoryByAddress	[TPS_DEXT_01023] [TPS_DEXT_01045]
[RS_DEXT_00021]	ControlDTCSetting	[TPS_DEXT_01045] [TPS_DEXT_01075]
[RS_DEXT_00022]	ResponseOnEvent	[TPS_DEXT_01045]
[RS_DEXT_00023]	Configuration of events	[TPS_DEXT_01048] [TPS_DEXT_01067] [TPS_DEXT_01068] [TPS_DEXT_01069] [TPS_DEXT_01083] [TPS_DEXT_01084] [TPS_DEXT_01085] [TPS_DEXT_01151] [TPS_DEXT_03002] [TPS_DEXT_03003] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03007] [TPS_DEXT_03011] [TPS_DEXT_03015] [TPS_DEXT_03016]
[RS_DEXT_00024]	Configuration of DTCs	[TPS_DEXT_01064] [TPS_DEXT_01065] [TPS_DEXT_01066] [TPS_DEXT_01086] [TPS_DEXT_03000] [TPS_DEXT_03003] [TPS_DEXT_03012] [TPS_DEXT_03013] [TPS_DEXT_03014]
[RS_DEXT_00025]	Combined Events	[TPS_DEXT_03003]
[RS_DEXT_00026]	Enable Conditions	[TPS_DEXT_03015] [TPS_DEXT_03018]





Requirement	Description	Satisfied by
[RS_DEXT_00027]	Storage Conditions	[TPS_DEXT_03001] [TPS_DEXT_03006] [TPS_DEXT_03010] [TPS_DEXT_03016] [TPS_DEXT_03019]
[RS_DEXT_00028]	Enable Condition Groups	[TPS_DEXT_01084] [TPS_DEXT_03010] [TPS_DEXT_03015]
[RS_DEXT_00029]	Storage Condition Groups	[TPS_DEXT_01084] [TPS_DEXT_03016]
[RS_DEXT_00030]	Assignment of Enable Condition Groups	[TPS_DEXT_03010]
[RS_DEXT_00031]	Assignment of Storage Condition Group	[TPS_DEXT_03010]
[RS_DEXT_00032]	Configuration of Extended Data Records	[TPS_DEXT_03008]
[RS_DEXT_00033]	Configuration of Snapshot Records	[TPS_DEXT_01143] [TPS_DEXT_01144] [TPS_DEXT_03009]
[RS_DEXT_00034]	Description of Data Identifiers	[TPS_DEXT_01000] [TPS_DEXT_01001] [TPS_DEXT_01002] [TPS_DEXT_01017] [TPS_DEXT_01072] [TPS_DEXT_01134] [TPS_DEXT_01135] [TPS_DEXT_01136] [TPS_DEXT_01138] [TPS_DEXT_01146] [TPS_DEXT_01150] [TPS_DEXT_01172]
[RS_DEXT_00035]	Description of Dynamic Data Identifiers	[TPS_DEXT_01000] [TPS_DEXT_01172]
[RS_DEXT_00036]	Description of Routine Identifiers	[TPS_DEXT_01088]
[RS_DEXT_00037]	Description of I/O Identifiers	[TPS_DEXT_01089]
[RS_DEXT_00038]	Description of nested elements of DIDs and RIDs	[TPS_DEXT_01001] [TPS_DEXT_01002]
[RS_DEXT_00039]	Diagnostic Service Table	[TPS_DEXT_01006] [TPS_DEXT_01091]
[RS_DEXT_00040]	Diagnostic Sessions	[TPS_DEXT_01011] [TPS_DEXT_01081] [TPS_DEXT_01082] [TPS_DEXT_01139]
[RS_DEXT_00041]	Access Permissions	[TPS_DEXT_01012] [TPS_DEXT_01070] [TPS_DEXT_01071] [TPS_DEXT_01139]
[RS_DEXT_00042]	Security Levels	[TPS_DEXT_01012] [TPS_DEXT_01038] [TPS_DEXT_01053] [TPS_DEXT_01139]
[RS_DEXT_00043]	Description of data elements	[TPS_DEXT_01142] [TPS_DEXT_03020]
[RS_DEXT_00044]	Derivation of related ECU-C parameter	[TPS_DEXT_01140]
[RS_DEXT_00045]	Textual descriptions	[TPS_DEXT_01064] [TPS_DEXT_01065] [TPS_DEXT_01066] [TPS_DEXT_01067] [TPS_DEXT_01068] [TPS_DEXT_01069] [TPS_DEXT_01071]
[RS_DEXT_00047]	Custom Diagnostic Service	[TPS_DEXT_01021] [TPS_DEXT_01030] [TPS_DEXT_01031] [TPS_DEXT_01147]
[RS_DEXT_00048]	Diagnostic Properties that are specific for one ECU	[TPS_DEXT_01055] [TPS_DEXT_01122]
[RS_DEXT_00049]	Properties of individual diagnostic services	[TPS_DEXT_01013]
[RS_DEXT_00050]	Properties of all diagnostic services of a given kind	[TPS_DEXT_01007] [TPS_DEXT_01008]
[RS_DEXT_00051]	Subfunctions of Diagnostic Services	[TPS_DEXT_01013] [TPS_DEXT_01014] [TPS_DEXT_01018] [TPS_DEXT_01019] [TPS_DEXT_01020] [TPS_DEXT_01021] [TPS_DEXT_01022] [TPS_DEXT_01023] [TPS_DEXT_01024] [TPS_DEXT_01025] [TPS_DEXT_01026] [TPS_DEXT_01027] [TPS_DEXT_01028] [TPS_DEXT_01029] [TPS_DEXT_01030] [TPS_DEXT_01031] [TPS_DEXT_01034] [TPS_DEXT_01039] [TPS_DEXT_01056] [TPS_DEXT_01057] [TPS_DEXT_01060] [TPS_DEXT_01075] [TPS_DEXT_01078]





Requirement	Description	Satisfied by
[RS_DEXT_00052]	Mapping of diagnostic services to the PortPrototypes of Application SwComponentTypes	[TPS_DEXT_01040] [TPS_DEXT_01041] [TPS_DEXT_01042] [TPS_DEXT_01043] [TPS_DEXT_01044] [TPS_DEXT_01142] [TPS_DEXT_03002] [TPS_DEXT_03007] [TPS_DEXT_03017] [TPS_DEXT_03018] [TPS_DEXT_03019] [TPS_DEXT_03020]
[RS_DEXT_00053]	Debouncing of diagnostic events	[TPS_DEXT_01048] [TPS_DEXT_03004] [TPS_DEXT_03005] [TPS_DEXT_03017]
[RS_DEXT_00054]	Operation cycles	[TPS_DEXT_01086] [TPS_DEXT_01087]
[RS_DEXT_00055]	Aging	[TPS_DEXT_03021]
[RS_DEXT_00056]	Indicator	[TPS_DEXT_03022]
[RS_DEXT_00057]	RequestFileTransfer	[TPS_DEXT_01090]
[RS_DEXT_00058]	Indicate that an ECU supports ODB	[TPS_DEXT_01122]
[RS_DEXT_00059]	Support for different protocols	[TPS_DEXT_01124]
[RS_DEXT_00060]	Function	[TPS_DEXT_01096] [TPS_DEXT_01097] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01101] [TPS_DEXT_01121]
[RS_DEXT_00061]	Relationship between functions and diagnostic events	[TPS_DEXT_01095] [TPS_DEXT_01098] [TPS_DEXT_01099] [TPS_DEXT_01100] [TPS_DEXT_01101]
[RS_DEXT_00062]	Pre-configuration of the Fim when the Dem configuration is not yet available	[TPS_DEXT_01095]
[RS_DEXT_00063]	Relation between functions on Fim level and software-components	[TPS_DEXT_01102]
[RS_DEXT_00064]	Definition of an SPN	[TPS_DEXT_01103] [TPS_DEXT_01106]
[RS_DEXT_00065]	Definition of freeze frames on J1939	[TPS_DEXT_01104] [TPS_DEXT_01105]
[RS_DEXT_00066]	Mapping between a J1939 controller application and a software-component	[TPS_DEXT_01108]
[RS_DEXT_00067]	Definition of J1939 DTC	[TPS_DEXT_01107] [TPS_DEXT_01145]
[RS_DEXT_00068]	Definition of a Diagnostic Parameter Identifier	[TPS_DEXT_01092]
[RS_DEXT_00069]	Support for OBD Mode 0x01 (RequestCurrentPowertrainDiagnosticData)	[TPS_DEXT_01125]
[RS_DEXT_00070]	Support for OBD Mode 0x02 (RequestPowertrainFreezeFrameData)	[TPS_DEXT_01126]
[RS_DEXT_00071]	Support for OBD ModeModes 0x03 / 0x07 / 0x0A (RequestEmissionRelatedDiagnosticTroubleCodes)	[TPS_DEXT_01127]
[RS_DEXT_00072]	Support for OBD Mode 0x04 (ClearResetEmissionRelatedDiagnosticInformation)	[TPS_DEXT_01128]
[RS_DEXT_00073]	Support for OBD Mode 0x06 (RequestOnBoardMonitoringTestResults)	[TPS_DEXT_01129] [TPS_DEXT_01141]
[RS_DEXT_00074]	Support for OBD Mode 0x08 (RequestControlOfOnBoardDevice)	[TPS_DEXT_01130]
[RS_DEXT_00075]	Support for OBD Mode 0x09 (RequestVehicleInformation)	[TPS_DEXT_01131]
[RS_DEXT_00076]	Definition of Diagnostic Test Identifier	[TPS_DEXT_01132]





Requirement	Description	Satisfied by
[RS_DEXT_00077]	Description of the utilization of UDS for supporting WWH-OBD	[TPS_DEXT_01093] [TPS_DEXT_01111] [TPS_DEXT_01112] [TPS_DEXT_01133]
[RS_DEXT_00078]	Support for In Use Monitor Performance Ratio	[TPS_DEXT_01148] [TPS_DEXT_01149] [TPS_DEXT_01156] [TPS_DEXT_01157]
[RS_DEXT_00079]	Support for environment conditions	[TPS_DEXT_01113] [TPS_DEXT_01114] [TPS_DEXT_01115] [TPS_DEXT_01116] [TPS_DEXT_01117] [TPS_DEXT_01118] [TPS_DEXT_01119] [TPS_DEXT_01120] [TPS_DEXT_01165] [TPS_DEXT_01166] [TPS_DEXT_01167] [TPS_DEXT_01168]
[RS_DEXT_00080]	Support for persisting Security Events	[TPS_DEXT_01153]
[RS_DEXT_00081]	Support for updating the Reporting Mode of Security Events	[TPS_DEXT_01152]

Table A.3: Requirements Tracing

B Examples

This section contains a collection of examples for **select modeling aspects** discussed in this document.

Please note that it is not foreseen to create examples for every single aspect of using the model elements discussed in this document.

B.1 Examples of the Definition of nested Diagnostic Parameters

This section contains examples for the definition of nested [DiagnosticParameters](#). The background is explained in [Section 4.2.4](#).

B.1.1 Simple Nesting Example

The most simple example for a nested [DiagnosticParameter](#) is sketched in [Figure B.1](#). It consists of just one nesting level and the aggregated [DiagnosticParameterElements](#) named “X” and “Y” that are located – one after the other – at the start of the enclosing [DiagnosticParameter](#) named “A”.

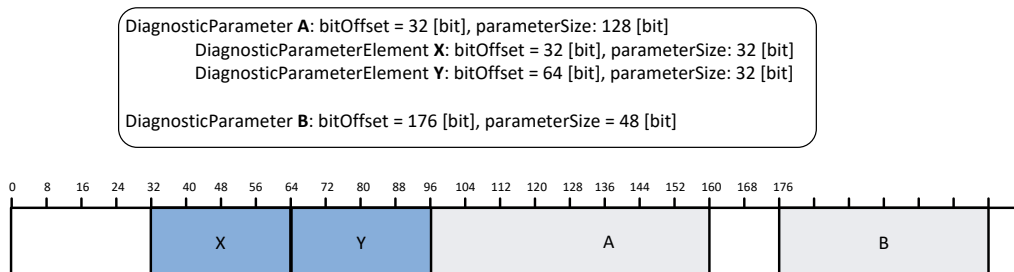


Figure B.1: Example for the definition of a simple structure inside the definition of a [DiagnosticParameter](#)

As sketched in [Figure B.1](#), the nested [DiagnosticParameterElements](#) **do not cover the entire slot** reserved by the enclosing [DiagnosticParameter](#).

The free space that is not allocated for the nested [DiagnosticParameterElements](#) **cannot be claimed by other [DiagnosticParameters](#)**, it is reserved for future extensions of the enclosing [DiagnosticParameter](#) “A”.

The simplified (i.e. stripped down to the bare minimum) modeling of the [Diagnostic-DataIdentifier](#) (which would look similar for the modeling of a [DiagnosticRoutineSubfunction](#)) sketched in [Figure B.1](#) is contained in [Listing B.1](#).

```
<DIAGNOSTIC-DATA-IDENTIFIER>
  <SHORT-NAME>NestedAligned</SHORT-NAME>
```

```

<DATA-ELEMENTS>
  <DIAGNOSTIC-PARAMETER>
    <BIT-OFFSET>32</BIT-OFFSET>
    <PARAMETER-SIZE>128</PARAMETER-SIZE>
    <IDENT>
      <SHORT-NAME>A</SHORT-NAME>
      <SUB-ELEMENTS>
        <DIAGNOSTIC-PARAMETER-ELEMENT>
          <SHORT-NAME>X</SHORT-NAME>
          <CATEGORY>LEAF</CATEGORY>
          <BIT-OFFSET>32</BIT-OFFSET>
          <DATA-ELEMENTS>
            <DIAGNOSTIC-DATA-ELEMENT>
              <SHORT-NAME>X</SHORT-NAME>
            </DIAGNOSTIC-DATA-ELEMENT>
          </DATA-ELEMENTS>
        </DIAGNOSTIC-PARAMETER-ELEMENT>
        <DIAGNOSTIC-PARAMETER-ELEMENT>
          <SHORT-NAME>Y</SHORT-NAME>
          <CATEGORY>LEAF</CATEGORY>
          <BIT-OFFSET>64</BIT-OFFSET>
          <DATA-ELEMENTS>
            <DIAGNOSTIC-DATA-ELEMENT>
              <SHORT-NAME>Y</SHORT-NAME>
            </DIAGNOSTIC-DATA-ELEMENT>
          </DATA-ELEMENTS>
        </DIAGNOSTIC-PARAMETER-ELEMENT>
      </SUB-ELEMENTS>
    </IDENT>
  </DIAGNOSTIC-PARAMETER>
</DATA-ELEMENTS>
</DIAGNOSTIC-DATA-IDENTIFIER>

```

Listing B.1: Example for the definition of a simple structure with aligned `DiagnosticParameterElement` inside the definition of a `DiagnosticParameter`

B.1.2 Simple Nesting Example with Gaps

Another, slightly more complicated example is sketched in [Figure B.2](#). In contrast to the example depicted in [Figure B.1](#), the two sketched `DiagnosticParameterElements` named “X” and “Y” are not aligned with the start location of the enclosing `DiagnosticParameter` and each other.

In this specific case, future extensions of the enclosing `DiagnosticParameter` can be done in the free space at the start, in between “X” and “Y”, and up to the tail of the slot claimed by the enclosing `DiagnosticParameter` “A”.

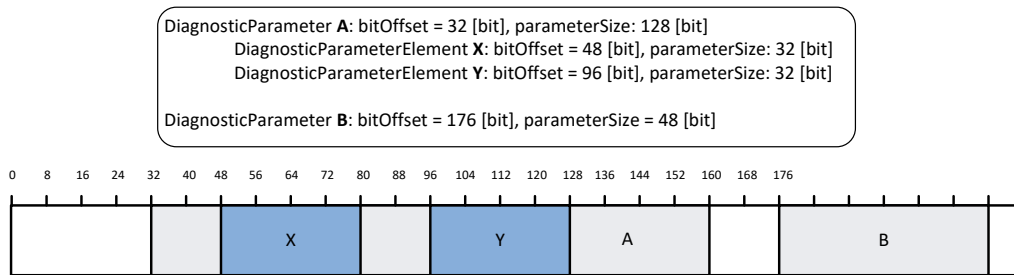


Figure B.2: Example for the definition of a simple structure with gaps inside the definition of a [DiagnosticParameter](#)

The simplified (i.e. stripped down to the bare minimum) modeling of the [DiagnosticDataIdentifier](#) (which would look similar for the modeling of a [DiagnosticRoutineSubfunction](#)) sketched in [Figure B.2](#) is contained in [Listing B.2](#).

```

<DATA-ELEMENTS>
  <DIAGNOSTIC-PARAMETER>
    <BIT-OFFSET>32</BIT-OFFSET>
    <PARAMETER-SIZE>128</PARAMETER-SIZE>
    <IDENT>
      <SHORT-NAME>A</SHORT-NAME>
      <SUB-ELEMENTS>
        <DIAGNOSTIC-PARAMETER-ELEMENT>
          <SHORT-NAME>X</SHORT-NAME>
          <CATEGORY>LEAF</CATEGORY>
          <BIT-OFFSET>48</BIT-OFFSET>
          <DATA-ELEMENTS>
            <DIAGNOSTIC-DATA-ELEMENT>
              <SHORT-NAME>X</SHORT-NAME>
            </DIAGNOSTIC-DATA-ELEMENT>
          </DATA-ELEMENTS>
        </DIAGNOSTIC-PARAMETER-ELEMENT>
        <DIAGNOSTIC-PARAMETER-ELEMENT>
          <SHORT-NAME>Y</SHORT-NAME>
          <CATEGORY>LEAF</CATEGORY>
          <BIT-OFFSET>96</BIT-OFFSET>
          <DATA-ELEMENTS>
            <DIAGNOSTIC-DATA-ELEMENT>
              <SHORT-NAME>Y</SHORT-NAME>
            </DIAGNOSTIC-DATA-ELEMENT>
          </DATA-ELEMENTS>
        </DIAGNOSTIC-PARAMETER-ELEMENT>
      </SUB-ELEMENTS>
    </IDENT>
  </DIAGNOSTIC-PARAMETER>
</DATA-ELEMENTS>
</DIAGNOSTIC-DATA-IDENTIFIER>

```

Listing B.2: Example for the definition of a simple structure with aligned [DiagnosticParameterElement](#) inside the definition of a [DiagnosticParameter](#)

B.1.3 Two-Level Nesting Example

As emphasized by the example in [Figure B.3](#), it would be possible to specify a structure inside a [DiagnosticParameter](#) that has gaps

- at the start, i.e. between the start of the [DiagnosticParameter](#) and the first [DiagnosticParameterElement](#),
- in between the placement of [DiagnosticParameterElements](#),
- at the tail, i.e. between the placement of the last [DiagnosticParameterElement](#) and the tail of the [DiagnosticParameter](#).

In other words, it is not required that sub-elements are placed one directly after the other in their respective context. Similarly, a [DID](#) that hosts a [DiagnosticParameter](#) could also have gaps

- at the start, i.e.s between the start of the [DiagnosticAbstractDataIdentifier](#) resp. [DiagnosticRoutineSubfunction](#) and the first [DiagnosticParameter](#),
- in between the placement of [DiagnosticParameters](#),
- at the tail, i.e.s between the placement of the last [DiagnosticParameter](#) and the tail of the [DiagnosticAbstractDataIdentifier/DiagnosticRoutineSubfunction](#).

As indicated by [Figure 4.2](#), the nested definition is applied by utilizing the roles

- [DiagnosticParameter.ident.subElement](#) and
- [DiagnosticParameterElement.subElement](#).

An example for the definition of a nested structure inside the definition of [DiagnosticParameter](#) can be found in [Figure B.3](#).

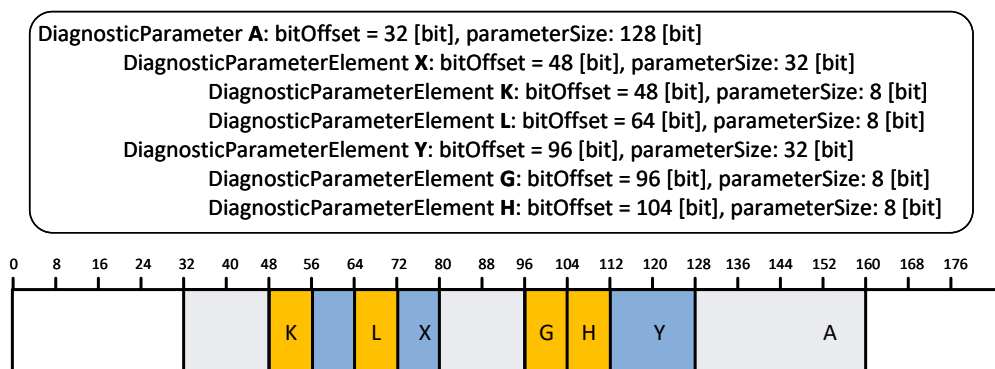


Figure B.3: Example for the definition of a nested structure inside the definition of a [DiagnosticParameter](#)

The example postulates the existence of a `DiagnosticParameter` named “A” inside the definition of a given `DiagnosticDataIdentifier` (which could also be a `DiagnosticRoutineSubfunction`).

The `DiagnosticParameter` named “A” defines two `subElements` named “X” and “Y”. “X”, in turn, defines two `subElements` named “K” and “L”. Conversely, “Y” has two `subElements` named “G” and “H”.

Listing B.3 picks up the example depicted in Figure B.3 and describes how a very minimal modeling of the essential model elements looks like.

```
<DIAGNOSTIC-DATA-IDENTIFIER>
  <SHORT-NAME>NestedMapping</SHORT-NAME>
  <DATA-ELEMENTS>
    <DIAGNOSTIC-PARAMETER>
      <BIT-OFFSET>32</BIT-OFFSET>
      <PARAMETER-SIZE>128</PARAMETER-SIZE>
      <IDENT>
        <SHORT-NAME>A</SHORT-NAME>
        <SUB-ELEMENTS>
          <DIAGNOSTIC-PARAMETER-ELEMENT>
            <SHORT-NAME>X</SHORT-NAME>
            <CATEGORY>STRUCTURE</CATEGORY>
            <BIT-OFFSET>48</BIT-OFFSET>
            <PARAMETER-SIZE>32</PARAMETER-SIZE>
            <SUB-ELEMENTS>
              <DIAGNOSTIC-PARAMETER-ELEMENT>
                <SHORT-NAME>K</SHORT-NAME>
                <CATEGORY>LEAF</CATEGORY>
                <BIT-OFFSET>48</BIT-OFFSET>
                <DATA-ELEMENTS>
                  <DIAGNOSTIC-DATA-ELEMENT>
                    <SHORT-NAME>K</SHORT-NAME>
                  </DIAGNOSTIC-DATA-ELEMENT>
                </DATA-ELEMENTS>
              </DIAGNOSTIC-PARAMETER-ELEMENT>
              <DIAGNOSTIC-PARAMETER-ELEMENT>
                <SHORT-NAME>L</SHORT-NAME>
                <CATEGORY>LEAF</CATEGORY>
                <BIT-OFFSET>64</BIT-OFFSET>
                <DATA-ELEMENTS>
                  <DIAGNOSTIC-DATA-ELEMENT>
                    <SHORT-NAME>L</SHORT-NAME>
                  </DIAGNOSTIC-DATA-ELEMENT>
                </DATA-ELEMENTS>
              </DIAGNOSTIC-PARAMETER-ELEMENT>
            </SUB-ELEMENTS>
          </DIAGNOSTIC-PARAMETER-ELEMENT>
          <DIAGNOSTIC-PARAMETER-ELEMENT>
            <SHORT-NAME>Y</SHORT-NAME>
            <CATEGORY>STRUCTURE</CATEGORY>
            <BIT-OFFSET>96</BIT-OFFSET>
            <PARAMETER-SIZE>32</PARAMETER-SIZE>
            <SUB-ELEMENTS>
              <DIAGNOSTIC-PARAMETER-ELEMENT>
                <SHORT-NAME>G</SHORT-NAME>
```



```

<CATEGORY>LEAF</CATEGORY>
<BIT-OFFSET>96</BIT-OFFSET>
<DATA-ELEMENTS>
  <DIAGNOSTIC-DATA-ELEMENT>
    <SHORT-NAME>G</SHORT-NAME>
  </DIAGNOSTIC-DATA-ELEMENT>
</DATA-ELEMENTS>
</DIAGNOSTIC-PARAMETER-ELEMENT>
<DIAGNOSTIC-PARAMETER-ELEMENT>
  <SHORT-NAME>H</SHORT-NAME>
  <CATEGORY>LEAF</CATEGORY>
  <BIT-OFFSET>104</BIT-OFFSET>
  <DATA-ELEMENTS>
    <DIAGNOSTIC-DATA-ELEMENT>
      <SHORT-NAME>H</SHORT-NAME>
    </DIAGNOSTIC-DATA-ELEMENT>
  </DATA-ELEMENTS>
</DIAGNOSTIC-PARAMETER-ELEMENT>
</SUB-ELEMENTS>
</DIAGNOSTIC-PARAMETER-ELEMENT>
</SUB-ELEMENTS>
</IDENT>
</DIAGNOSTIC-PARAMETER>
</DATA-ELEMENTS>
</DIAGNOSTIC-DATA-IDENTIFIER>

```

Listing B.3: Example for the definition of a nested structure inside the definition of a [DiagnosticParameter](#)

B.1.4 Array of Struct Example

This example (as depicted in [Figure B.4](#)) assumes that the [DiagnosticParameter](#) is representing an array of RGB color values that are stored in a structure of three elements (representing the R, G, and B values).

The example also shows that it is possible to define the size of the array element (in this case: 32 bit) greater than the actually used data real estate (in this case 24 bit) occupied by the mentioned structure in each array element.

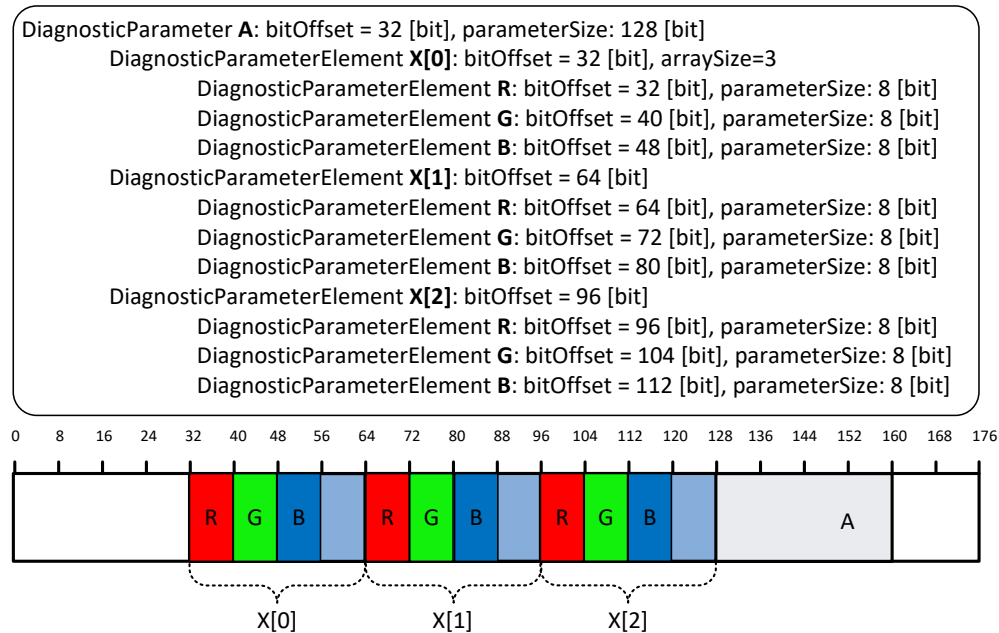


Figure B.4: Example for the definition of a **DiagnosticParameter** that represents an array of structures

The model depicted in [Figure B.4](#) is also sketched in a minimal way in [Listing B.4](#).

```
<DIAGNOSTIC-DATA-IDENTIFIER>
  <SHORT-NAME>DidArrayOfStruct</SHORT-NAME>
  <DATA-ELEMENTS>
    <DIAGNOSTIC-PARAMETER>
      <BIT-OFFSET>32</BIT-OFFSET>
      <PARAMETER-SIZE>128</PARAMETER-SIZE>
      <IDENT>
        <SHORT-NAME>A</SHORT-NAME>
        <SUB-ELEMENTS>
          <DIAGNOSTIC-PARAMETER-ELEMENT>
            <SHORT-NAME>X</SHORT-NAME>
            <CATEGORY>ARRAY</CATEGORY>
            <BIT-OFFSET>32</BIT-OFFSET>
            <PARAMETER-SIZE>32</PARAMETER-SIZE>
            <ARRAY-SIZE>3</ARRAY-SIZE>
            <SUB-ELEMENTS>
              <DIAGNOSTIC-PARAMETER-ELEMENT>
                <SHORT-NAME>R</SHORT-NAME>
                <CATEGORY>LEAF</CATEGORY>
                <BIT-OFFSET>32</BIT-OFFSET>
                <DATA-ELEMENTS>
                  <DIAGNOSTIC-DATA-ELEMENT>
                    <SHORT-NAME>R</SHORT-NAME>
                  </DIAGNOSTIC-DATA-ELEMENT>
                </DATA-ELEMENTS>
              </DIAGNOSTIC-PARAMETER-ELEMENT>
            </SUB-ELEMENTS>
          </DIAGNOSTIC-PARAMETER-ELEMENT>
        </SUB-ELEMENTS>
      </IDENT>
    </DIAGNOSTIC-PARAMETER>
  </DATA-ELEMENTS>
</DIAGNOSTIC-DATA-IDENTIFIER>
```

```

    <SHORT-NAME>G</SHORT-NAME>
    <CATEGORY>LEAF</CATEGORY>
    <BIT-OFFSET>40</BIT-OFFSET>
    <DATA-ELEMENTS>
      <DIAGNOSTIC-DATA-ELEMENT>
        <SHORT-NAME>G</SHORT-NAME>
      </DIAGNOSTIC-DATA-ELEMENT>
    </DATA-ELEMENTS>
  </DIAGNOSTIC-PARAMETER-ELEMENT>
<DIAGNOSTIC-PARAMETER-ELEMENT>
  <SHORT-NAME>B</SHORT-NAME>
  <CATEGORY>LEAF</CATEGORY>
  <BIT-OFFSET>48</BIT-OFFSET>
  <DATA-ELEMENTS>
    <DIAGNOSTIC-DATA-ELEMENT>
      <SHORT-NAME>B</SHORT-NAME>
    </DIAGNOSTIC-DATA-ELEMENT>
  </DATA-ELEMENTS>
</DIAGNOSTIC-PARAMETER-ELEMENT>
</SUB-ELEMENTS>
</DIAGNOSTIC-PARAMETER-ELEMENT>
</SUB-ELEMENTS>
</IDENT>
</DIAGNOSTIC-PARAMETER>
</DATA-ELEMENTS>
</DIAGNOSTIC-DATA-IDENTIFIER>

```

Listing B.4: Example for the definition of an array of structures inside the definition of a [DiagnosticParameter](#)

B.2 Examples of Diagnostic Service Data Mapping

This section provides examples of mapping scenarios that target more or less complex data objects defined by means of a [DiagnosticParameter](#) and [DiagnosticParameterElement](#) as well as the corresponding definition of a composite [Autosar-DataPrototype](#).

The background is explained in [Section 5.2.1](#).

B.2.1 Simple Structure

[Figure B.5](#) provides a sketch of a simple example situation for the application of [\[TPS_DEXT_01179\]](#).

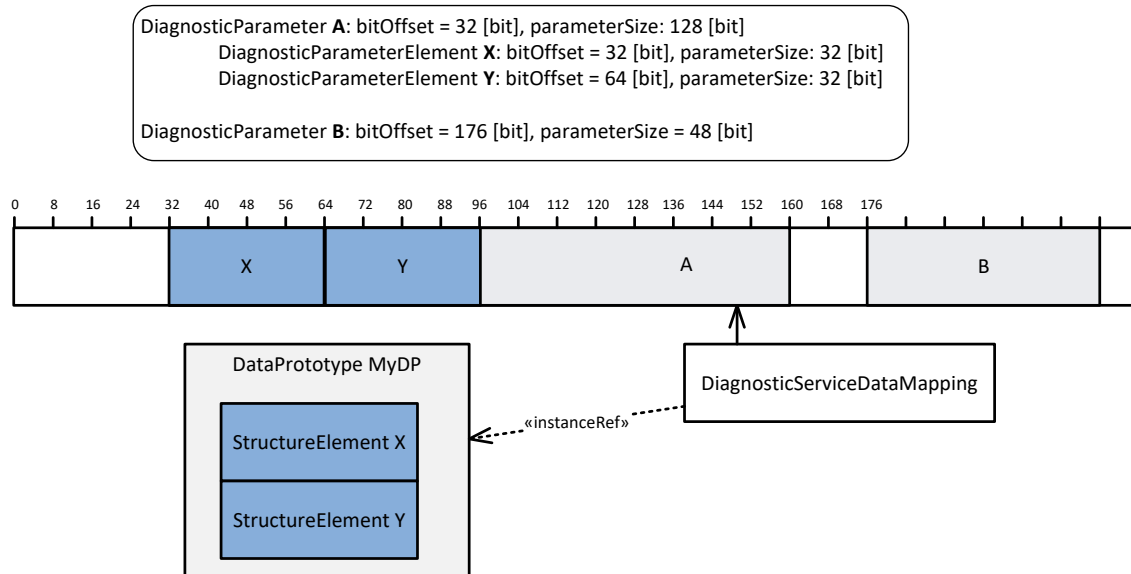


Figure B.5: Example for the mapping of a nested structure to an aligned [DiagnosticParameter](#)

As indicated in the example, the mapped [DiagnosticParameter](#) is larger than required and therefore leaves room for a later extension of the mapped data structure without the need to update the layout of the [DiagnosticDataIdentifier](#).

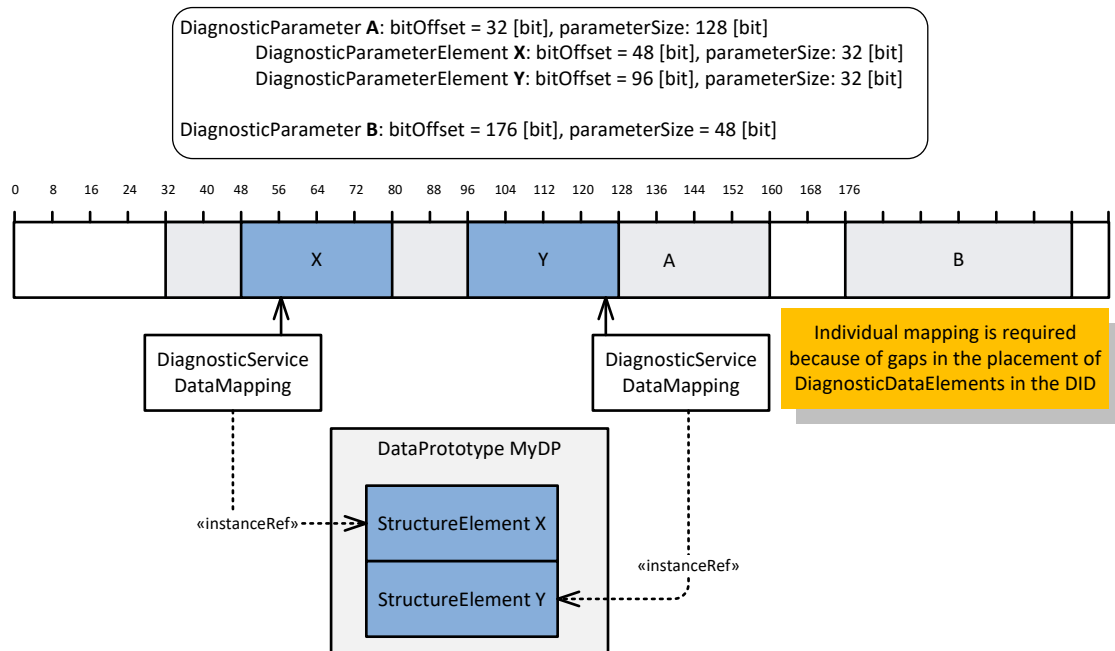


Figure B.6: Example for the mapping of a simple nested structure to a [DiagnosticParameter](#)

[TPS_DEXT_01180] Existence of reference to **DiagnosticParameterElement** in the role **diagnosticParameter** [If the reference `DiagnosticServiceDataMapping.diagnosticParameter` exists, then the intention is to map a primitive (or composite) `DataPrototype` to a `DiagnosticParameterElement` in one piece.

This means that the elements of the composite `DataPrototype` would not have to be placed one after the other starting at the `bitOffset` of the referenced `DiagnosticParameter`. Gaps are positively supported.]

The consequence of [TPS_DEXT_01180] is sketched in Figure B.6 for the case of a simple nesting of non-aligned `DiagnosticParameterElements`.

B.2.2 Nested Structure

A more complex situation is sketched in Figure B.7. In this case, the mapping is configured such that “leaf” elements named “K” and “L” are mapped and there is also the depiction of how the mapping on an intermediate level (`DiagnosticParameterElement` named “Y”) would look like.

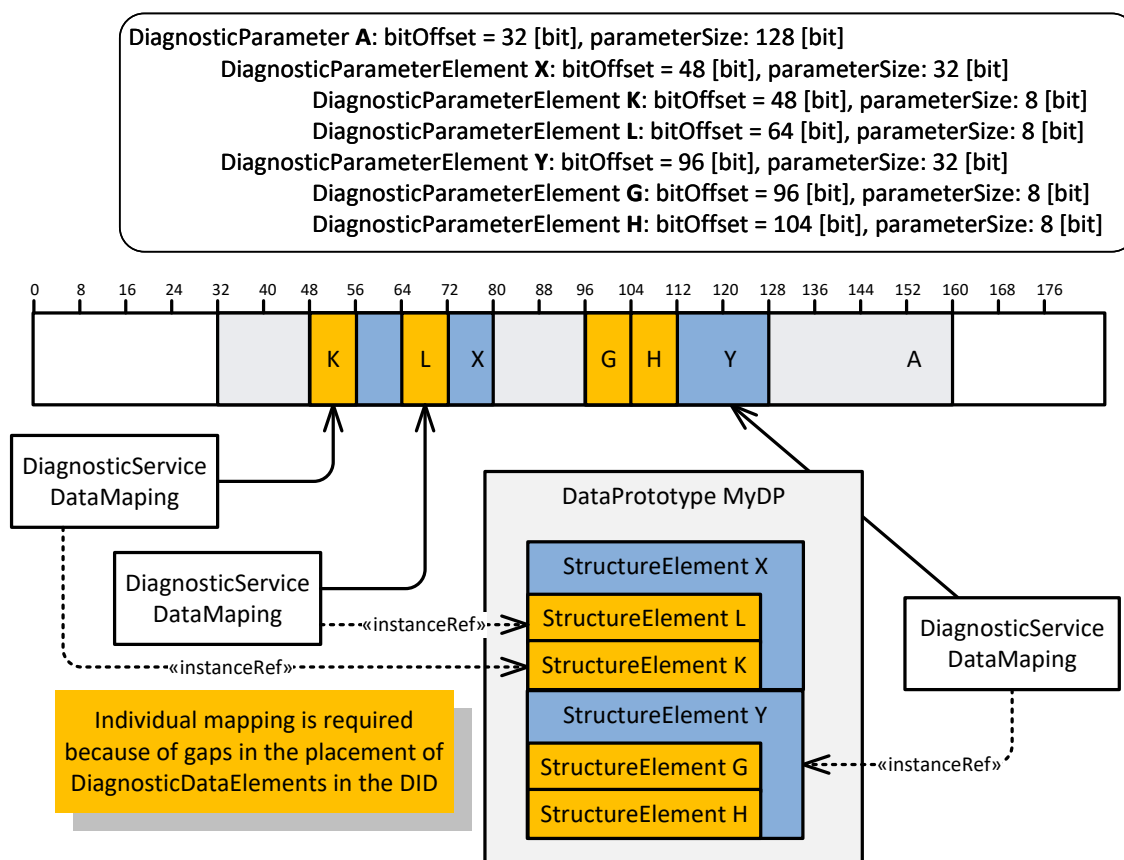


Figure B.7: Example for the mapping of a nested structure to a **DiagnosticParameterElement**

Please note that (as indicated in the sketch depicted in [Figure B.7](#)), individual mappings are required for situations where gaps exist in the placement of [DiagnosticParameterElements](#) in the context of the enclosing [DiagnosticParameter](#) or [DiagnosticParameterElement](#).

B.2.3 Array of Structure

The next example (as depicted in [Figure B.8](#)) explains how the mapping to array of composite data objects works.

More specifically, the mapping example corresponds to the example discussed in [Section B.1.4](#), resp. [Figure B.4](#).

In this example, the content of the first array element in the example (X[0]) has been mapped element by element (i.e. "R", "G", and "B") for diagnostics purposes only.

It would also be possible to map the entire array elements, as indicated by the mapping of X[1] and X[2].

The individual mapping of an element of the structure is explained in more detail within [Figure B.8](#)¹.

```
<DIAGNOSTIC-SERVICE-DATA-MAPPING>
  <SHORT-NAME>R0ToR0</SHORT-NAME>
  <MAPPED-DATA-ELEMENT-IREF>
    <CONTEXT-PORT-REF DEST="P-PORT-PROTOTYPE">/SwComponentTypes/MySwc/
      RgbArrayPort</CONTEXT-PORT-REF>
    <CONTEXT-DATA-PROTOTYPE-REF DEST="APPLICATION-ARRAY-ELEMENT" INDEX="0">
      /ApplicationDataTypes/ArrayOfRgbStructType/arrayElement</CONTEXT-
        DATA-PROTOTYPE-REF>
    <TARGET-DATA-PROTOTYPE-REF DEST="APPLICATION-RECORD-ELEMENT">/
      ApplicationDataTypes/RgbStructType/R</TARGET-DATA-PROTOTYPE-REF>
  </MAPPED-DATA-ELEMENT-IREF>
  <PARAMETER-ELEMENT-ACCESS>
    <CONTEXT-ELEMENT-REFS>
      <CONTEXT-ELEMENT-REF DEST="DIAGNOSTIC-PARAMETER-ELEMENT" INDEX="0">/
        DiagnosticDataElements/DidArrayOfStruct/A/X</CONTEXT-ELEMENT-REF>
    </CONTEXT-ELEMENT-REFS>
    <TARGET-ELEMENT-REF DEST="DIAGNOSTIC-PARAMETER-ELEMENT">/
      DiagnosticDataElements/DidArrayOfStruct/A/X/R</TARGET-ELEMENT-REF>
  </PARAMETER-ELEMENT-ACCESS>
</DIAGNOSTIC-SERVICE-DATA-MAPPING>
```

Listing B.5: Example for the mapping of an element of a structure that itself represents an array element

Please note that in this specific case **two** references to [DiagnosticParameterElement](#) are needed to properly identify the mapped [DiagnosticParameterElement](#).

¹Please note that the InstanceRef for the identification of the [DataPrototype](#) in the application software intentionally starts at the level of [PortPrototype](#) to keep things simple and the complexity of the example model only as high as needed for this purpose.

The first reference (in the role `DiagnosticServiceDataMapping.parameterElementAccess.contextElement`) is used to identify the array element (note the appearance of the `index` XML attribute).

The second reference (in the role `DiagnosticServiceDataMapping.parameterElementAccess.targetElement`) identifies the element of the structure.

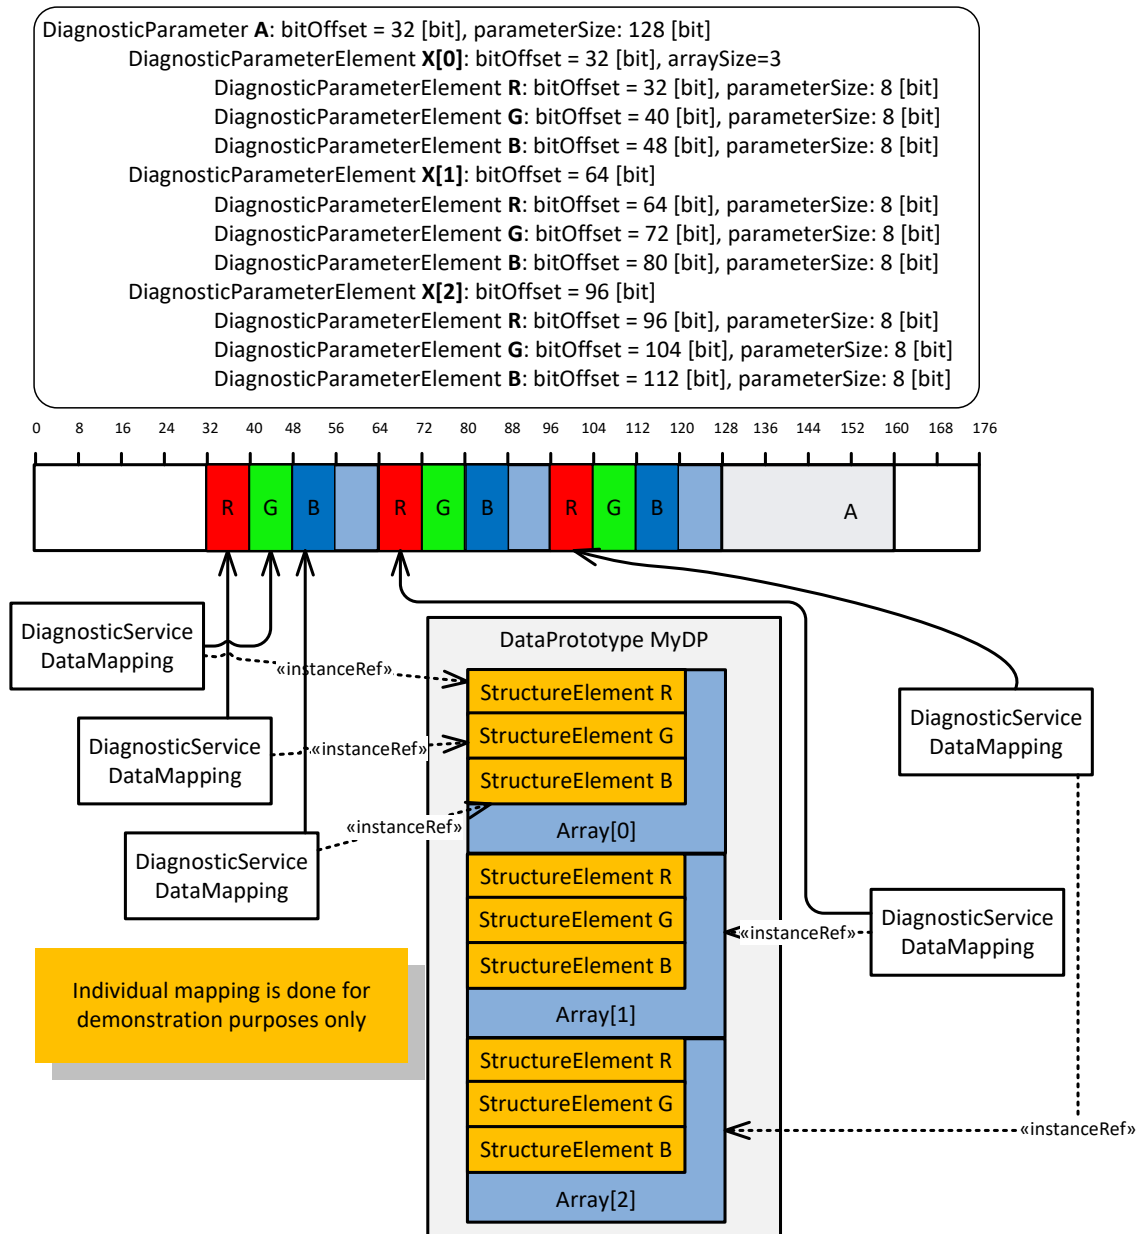


Figure B.8: Example for the mapping of a `DiagnosticParameter` that represents an array of structures

The mapping of the entire array elements is sketched in [Listing B.6](#).

Obviously, in this case only a single reference (in the role `DiagnosticService-DataMapping.parameterElementAccess.targetElement`) to a `Diagnostic-ParameterElement` – including the `index` XML attribute, in this case set to “1” – is needed.

```
<DIAGNOSTIC-SERVICE-DATA-MAPPING>
  <SHORT-NAME>XltoArray1</SHORT-NAME>
  <MAPPED-DATA-ELEMENT-IREF>
    <CONTEXT-PORT-REF DEST="P-PORT-PROTOTYPE">/SwComponentTypes/MySwc/
      RgbArrayPort</CONTEXT-PORT-REF>
    <TARGET-DATA-PROTOTYPE-REF DEST="APPLICATION-ARRAY-ELEMENT" INDEX="1">/
      ApplicationDataTypes/ArrayOfRgbStructType/arrayElement</TARGET-DATA-
        PROTOTYPE-REF>
  </MAPPED-DATA-ELEMENT-IREF>
  <PARAMETER-ELEMENT-ACCESS>
    <TARGET-ELEMENT-REF DEST="DIAGNOSTIC-PARAMETER-ELEMENT" INDEX="1">/
      DiagnosticDataElements/DidArrayOfStruct/A/X</TARGET-ELEMENT-REF>
  </PARAMETER-ELEMENT-ACCESS>
</DIAGNOSTIC-SERVICE-DATA-MAPPING>
```

Listing B.6: Example for the mapping of an entire array element

B.3 Examples of the Definition of Mature and De-Mature Condition

The following ARXML fragment exemplifies the usage of `StructuredReq` along with the standardized values of the attribute `category` to attach semi-formal textual descriptions of an exemplary mature condition and a de-mature condition to a `DiagnosticEvent` according to [TPS_DEXT_01069].

```
<DIAGNOSTIC-EVENT>
  <SHORT-NAME>ExampleEvent_0001</SHORT-NAME>
  <INTRODUCTION>
    <STRUCTURED-REQ>
      <SHORT-NAME>MatureCondition</SHORT-NAME>
      <CATEGORY>DIAG_EVENT_MAT_COND</CATEGORY>
      <DESCRIPTION>
        <P>
          <L-1 L="EN">This DTC is set if System Voltage is below 9 Volts</L-1>
        </P>
      </DESCRIPTION>
    </STRUCTURED-REQ>
    <STRUCTURED-REQ>
      <SHORT-NAME>DematureCondition</SHORT-NAME>
      <CATEGORY>DIAG_EVENT_DEMAT_COND</CATEGORY>
      <DESCRIPTION>
        <P>
          <L-1 L="EN">This DTC is set if System Voltage is above 10 Volts<
            XFILE>
              <SHORT-NAME>Requirement_Specification</SHORT-NAME>
              <URL>http://autosar.org</URL>
            </XFILE>
          </L-1>
        </P>
      </DESCRIPTION>
    </STRUCTURED-REQ>
  </INTRODUCTION>
</DIAGNOSTIC-EVENT>
```



```

    </P>
  </DESCRIPTION>
</STRUCTURED-REQ>
</INTRODUCTION>
<CLEAR-EVENT-BEHAVIOR>ONLY-THIS-CYCLE-AND-READINESS</CLEAR-EVENT-BEHAVIOR>
  >
<EVENT-CLEAR-ALLOWED>ALWAYS</EVENT-CLEAR-ALLOWED>
<EVENT-FAILURE-CYCLE-COUNTER-THRESHOLD>100</EVENT-FAILURE-CYCLE-COUNTER-THRESHOLD>
<EVENT-KIND>SWC</EVENT-KIND>
<PRESTORAGE-FREEZE-FRAME>>false</PRESTORAGE-FREEZE-FRAME>
</DIAGNOSTIC-EVENT>

```

Listing B.7: Example for the definition of a semi-formal textual element in the context of a [DiagnosticEvent](#)

B.4 Examples of the Definition of semi-formal Textual Description

The following ARXML fragment exemplifies the usage of [TraceableText](#) along with the standardized values of the attribute [category](#) to attach semi-formal textual descriptions to a [DiagnosticTroubleCodeUds](#). For more information, please refer to [\[TPS_DEXT_01066\]](#).

```

<DIAGNOSTIC-TROUBLE-CODE-UDS>
  <SHORT-NAME>ExampleDTC_0001</SHORT-NAME>
  <LONG-NAME>
    <L-4 L="EN">My little ODX long name</L-4>
  </LONG-NAME>
  <DESC>
    <L-2 L="EN">This DTC is a System Error DTC</L-2>
  </DESC>
  <INTRODUCTION>
    <TRACE>
      <SHORT-NAME>MyErrorText</SHORT-NAME>
      <CATEGORY>DIAG_DTC_ERROR_TEXT</CATEGORY>
      <P>
        <L-1 L="LA">Lorem ipsum dolor sit amet, consectetur adipisicing elit</L-1>
      </P>
    </TRACE>
  </INTRODUCTION>
  <DTC-PROPS-REF DEST="DIAGNOSTIC-TROUBLE-CODE-PROPS">/AUTOSAR/UseCase_230/ExampleDTC_0001_Props</DTC-PROPS-REF>
  <FUNCTIONAL-UNIT>1</FUNCTIONAL-UNIT>
  <SEVERITY>CHECK-AT-NEXT-HALT</SEVERITY>
  <UDS-DTC-VALUE>0x000001</UDS-DTC-VALUE>
</DIAGNOSTIC-TROUBLE-CODE-UDS>

```

Listing B.8: Example for the definition of a semi-formal textual element in the context of a [DiagnosticTroubleCode](#)

B.5 Examples of the Definition of Pre- and Run-Condition

The following ARXML fragment exemplifies the usage of `StructuredReq` along with the standardized values of the attribute `category` to attach semi-formal textual descriptions to a `DiagnosticAccessPermission`. For more information, please refer to [TPS_DEXT_01071].

```
<DIAGNOSTIC-ACCESS-PERMISSION>
  <SHORT-NAME>exampleAccessPermission</SHORT-NAME>
  <INTRODUCTION>
    <STRUCTURED-REQ>
      <SHORT-NAME>precondition</SHORT-NAME>
      <CATEGORY>DIAG_ACCESS_PERM_PRE_COND</CATEGORY>
      <DESCRIPTION>
        <P>
          <L-1 L="EN">This is a textual description of a pre-condition</L-1>
        </P>
      </DESCRIPTION>
    </STRUCTURED-REQ>
    <STRUCTURED-REQ>
      <SHORT-NAME>runcondition</SHORT-NAME>
      <CATEGORY>DIAG_ACCESS_PERM_RUN_COND</CATEGORY>
      <DESCRIPTION>
        <P>
          <L-1 L="EN">This is a textual description of a run-condition</L-1>
        </P>
      </DESCRIPTION>
    </STRUCTURED-REQ>
  </INTRODUCTION>
  <DIAGNOSTIC-SESSION-REFS>
    <DIAGNOSTIC-SESSION-REF DEST="DIAGNOSTIC-SESSION">/AUTOSAR/UseCase_230/
      ExampleSession</DIAGNOSTIC-SESSION-REF>
  </DIAGNOSTIC-SESSION-REFS>
  <SECURITY-LEVEL-REFS>
    <SECURITY-LEVEL-REF DEST="DIAGNOSTIC-SECURITY-LEVEL">/AUTOSAR/
      UseCase_230/ExampleSecurityLevel</SECURITY-LEVEL-REF>
  </SECURITY-LEVEL-REFS>
</DIAGNOSTIC-ACCESS-PERMISSION>
```

Listing B.9: Example for the definition of pre- and run-conditions for `DiagnosticAccessPermission`

C Mentioned Class Tables

For the sake of completeness, this chapter contains a set of class tables representing meta-classes mentioned in the context of this document but which are not contained directly in the scope of describing specific meta-model semantics.

Class	ARElement (abstract)			
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::ARPackage			
Note	An element that can be defined stand-alone, i.e. without being part of another element (except for packages of course).			
Base	<i>ARObject</i> , <i>CollectableElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>PackageableElement</i> , <i>Referrable</i>			
Subclasses	AclObjectSet, AclOperation, AclPermission, AclRole, AliasNameSet, ApplicabilityInfoSet, Application Partition, <i>AutosarDataType</i> , <i>BaseType</i> , BlueprintMappingSet, BswEntryRelationshipSet, <i>BswModuleDescription</i> , BswModuleEntry, BuildActionManifest, CalibrationParameterValueSet, ClientIdDefinitionSet, ClientServerInterfaceToBswModuleEntryBlueprintMapping, Collection, <i>CompuMethod</i> , Consistency NeedsBlueprintSet, ConstantSpecification, ConstantSpecificationMappingSet, <i>CpSoftwareCluster</i> , Cp SoftwareClusterBinaryManifestDescriptor, CpSoftwareClusterMappingSet, CpSoftwareClusterResource Pool, CryptoEllipticCurveProps, <i>CryptoServiceCertificate</i> , CryptoServiceKey, CryptoServicePrimitive, CryptoServiceQueue, CryptoSignatureScheme, <i>DataConstr</i> , DataExchangePoint, DataTransformation Set, DataTypeMappingSet, DdsCpConfig, <i>DiagnosticCommonElement</i> , <i>DiagnosticConnection</i> , <i>DiagnosticContributionSet</i> , DltContext, DltEcu, Documentation, E2EProfileCompatibilityProps, Ecuc DefinitionCollection, EcucDestinationUriDefSet, EcucModuleConfigurationValues, EcucModuleDef, Ecuc ValueCollection, EndToEndProtectionSet, EthIpProps, EthTcpIpCmpProps, EthTcpIpProps, <i>EvaluatedVariantSet</i> , FMFeature, FMFeatureMap, FMFeatureModel, FMFeatureSelectionSet, FirewallRule, Flat Map, GeneralPurposeConnection, HwCategory, HwElement, HwType, <i>IEEE1722TpConnection</i> , IPsec ConfigProps, IPv6ExtHeaderFilterSet, <i>IdsCommonElement</i> , IdsDesign, <i>Implementation</i> , ImpositionTime DefinitionGroup, InterpolationRoutineMappingSet, J1939ControllerApplication, KeywordSet, LifeCycle InfoSet, LifeCycleStateDefinitionGroup, LogAndTraceMessageCollectionSet, MacSecGlobalKeyProps, MacSecParticipantSet, McFunction, McGroup, <i>ModeDeclarationGroup</i> , ModeDeclarationMappingSet, Os TaskProxy, PhysicalDimension, PhysicalDimensionMappingSet, <i>PortInterface</i> , PortInterfaceMappingSet, PortPrototypeBlueprint, <i>PostBuildVariantCriterion</i> , PostBuildVariantCriterionValueSet, PredefinedVariant, RapidPrototypingScenario, SdgDef, <i>SecureComProps</i> , SignalServiceTranslationPropsSet, SomeipSd ClientEventGroupTimingConfig, SomeipSdClientServiceInstanceConfig, SomeipSdServerEventGroup TimingConfig, SomeipSdServerServiceInstanceConfig, SwAddrMethod, SwAxisType, SwComponent MappingConstraints, <i>SwComponentType</i> , SwRecordLayout, <i>SwSystemconst</i> , SwSystemconstantValue Set, SwcBswMapping, <i>System</i> , <i>SystemSignal</i> , SystemSignalGroup, TDCpSoftwareClusterMappingSet, TopOptionFilterSet, <i>TimingExtension</i> , TlsConnectionGroup, TlvDataIdDefinitionSet, TransformationProps Set, <i>Unit</i> , UnitGroup, <i>UploadablePackageElement</i> , ViewMapSet			
Aggregated by	<i>ARPackage.element</i>			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table C.1: ARElement

Class	ARPackage			
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::ARPackage			
Note	AUTOSAR package, allowing to create top level packages to structure the contained ARElements. ARPackages are open sets. This means that in a file based description system multiple files can be used to partially describe the contents of a package. This is an extended version of MSR's SW-SYSTEM.			
Base	<i>ARObject</i> , <i>AtpBlueprint</i> , <i>AtpBlueprintable</i> , <i>CollectableElement</i> , <i>Identifiable</i> , <i>MultilanguageReferrable</i> , <i>Referrable</i>			
Aggregated by	<i>ARPackage.arPackage</i> , <i>AUTOSAR.arPackage</i>			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–





Class	ARPackage			
arPackage	ARPackage	*	aggr	This represents a sub package within an ARPackage, thus allowing for an unlimited package hierarchy. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=arPackage.shortName, arPackage.variationPoint.shortLabel vh.latestBindingTime=blueprintDerivationTime xml.sequenceOffset=30
element	PackageableElement	*	aggr	Elements that are part of this package Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=element.shortName, element.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime xml.sequenceOffset=20
referenceBase	ReferenceBase	*	aggr	This denotes the reference bases for the package. This is the basis for all relative references within the package. The base needs to be selected according to the base attribute within the references. Stereotypes: atpSplitable Tags: atp.Splitkey=referenceBase.shortLabel xml.sequenceOffset=10

Table C.2: ARPackage

Class	AUTOSAR			
Package	M2::AUTOSARTemplates::AutosarTopLevelStructure			
Note	Root element of an AUTOSAR description, also the root element in corresponding XML documents. Tags: xml.globalElement=true			
Base	ARObject			
Attribute	Type	Mult.	Kind	Note
adminData	AdminData	0..1	aggr	This represents the administrative data of an Autosar file. Stereotypes: atpSplitable Tags: atp.Splitkey=adminData xml.sequenceOffset=10
arPackage	ARPackage	*	aggr	This is the top level package in an AUTOSAR model. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=arPackage.shortName, arPackage.variationPoint.shortLabel vh.latestBindingTime=blueprintDerivationTime xml.sequenceOffset=30
fileInfoComment	FileInfoComment	0..1	aggr	This represents a possibility to provide a structured comment in an AUTOSAR file. Stereotypes: atpStructuredComment Tags: xml.roleElement=true xml.sequenceOffset=-10 xml.typeElement=false





Class	AUTOSAR			
introduction	DocumentationBlock	0..1	aggr	This represents an introduction on the Autosar file. It is intended for example to represent disclaimers and legal notes. Tags: xml.sequenceOffset=20

Table C.3: AUTOSAR

Class	<i>ApplicationDataType</i> (abstract)			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::Datatypes			
Note	ApplicationDataType defines a data type from the application point of view. Especially it should be used whenever something "physical" is at stake. An ApplicationDataType represents a set of values as seen in the application model, such as measurement units. It does not consider implementation details such as bit-size, endianness, etc. It should be possible to model the application level aspects of a VFB system by using ApplicationData Types only.			
Base	ARElement , ARObject , AtpBlueprint , AtpBlueprintable , AtpClassifier , AtpType , AutosarDataType , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	ApplicationCompositeDataType , ApplicationPrimitiveDataType			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table C.4: ApplicationDataType

Class	<i>ApplicationValueSpecification</i>			
Package	M2::AUTOSARTemplates::CommonStructure::Constants			
Note	This meta-class represents values for DataPrototypes typed by ApplicationDataTypes (this includes in particular compound primitives). For further details refer to ASAM CDF 2.0. This meta-class corresponds to some extent with SW-INSTANCE in ASAM CDF 2.0.			
Base	ARObject , CompositeRuleBasedValueArgument , ValueSpecification			
Aggregated by	ApplicationAssocMapElementValueSpecification.key, ApplicationAssocMapElementValueSpecification.value, ArrayValueSpecification.element, CalibrationParameterValue.applInitValue, CalibrationParameterValue.implInitValue, CompositeRuleBasedValueSpecification.compoundPrimitiveArgument, ConstantSpecification.valueSpec, CryptoServiceKey.developmentValue, DiagnosticEnvDataCondition.compareValue, DiagnosticEnvDataElementCondition.compareValue, FieldSenderComSpec.initValue, ISignal.initValue, ISignal.receptionDefaultValue, ISignal.timeoutSubstitutionValue, NonqueuedReceiverComSpec.initValue, NonqueuedReceiverComSpec.timeoutSubstitutionValue, NonqueuedSenderComSpec.initValue, NvProvideComSpec.ramBlockInitValue, NvProvideComSpec.romBlockInitValue, NvRequireComSpec.initValue, ParameterDataPrototype.initValue, ParameterProvideComSpec.initValue, ParameterRequireComSpec.initValue, PersistencyDataRequiredComSpec.initValue, PersistencyKeyValuePair.initValue, PortDefinedArgumentValue.value, PortPrototypeBlueprintInitValue.value, RecordValueSpecification.field, SomeipEventDeployment.eventReceptionDefaultValue, StateManagementCompareCondition.compareValue, SwDataDefProps.invalidValue, UserDefinedEventDeployment.eventReceptionDefaultValue, VariableDataPrototype.initValue			
Attribute	Type	Mult.	Kind	Note
category	Identifier	0..1	attr	Specifies to which category of ApplicationDataType this ApplicationValueSpecification can be applied (e.g. as an initial value), thus imposing constraints on the structure and semantics of the contained values, see [constr_1006] and [constr_1519].





Class	ApplicationValueSpecification			
swAxisCont (ordered)	SwAxisCont	*	aggr	This represents the axis values of a Compound Primitive Data Type (curve or map). The first swAxisCont describes the x-axis, the second swAxisCont describes the y-axis, the third swAxisCont describes the z-axis. In addition to this, the axis can be denoted in swAxisIndex.
swValueCont	SwValueCont	0..1	aggr	This represents the values of a Compound Primitive Data Type.

Table C.5: ApplicationValueSpecification

Class	ArgumentDataPrototype			
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
Note	An argument of an operation, much like a data element, but also carries direction information and is owned by a particular ClientServerOperation.			
Base	ARObject, AtpFeature, AtpPrototype, AutosarDataPrototype, DataPrototype, Identifiable, Multilanguage Referrable, Referrable			
Aggregated by	AtpClassifier.atpFeature, ClientServerOperation.argument			
Attribute	Type	Mult.	Kind	Note
direction	ArgumentDirection Enum	0..1	attr	This attribute specifies the direction of the argument prototype.
serverArgument ImplPolicy	ServerArgumentImpl PolicyEnum	0..1	attr	This defines how the argument type of the servers RunnableEntity is implemented. If the attribute is not defined this has the same semantics as if the attribute is set to the value useArgumentType for primitive arguments and structures.

Table C.6: ArgumentDataPrototype

Class	AtomicSwComponentType (abstract)			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components			
Note	An atomic software component is atomic in the sense that it cannot be further decomposed and distributed across multiple ECUs.			
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, SwComponentType			
Subclasses	ApplicationSwComponentType, ComplexDeviceDriverSwComponentType, EcuAbstractionSwComponentType, NvBlockSwComponentType, SensorActuatorSwComponentType, ServiceProxySwComponentType, ServiceSwComponentType			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
internalBehavior	SwcInternalBehavior	0..1	aggr	The SwcInternalBehaviors owned by an AtomicSw ComponentType can be located in a different physical file. Therefore the aggregation is <<atpSplitable>>. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=internalBehavior.shortName, internalBehavior.variationPoint.shortLabel vh.latestBindingTime=preCompileTime





Class	AtomicSwComponentType (abstract)			
symbolProps	SymbolProps	0..1	aggr	This represents the SymbolProps for the AtomicSw ComponentType. Stereotypes: atpSplittable Tags: atp.Splitkey=symbolProps.shortName

Table C.7: AtomicSwComponentType

Class	AtpInstanceRef (abstract)			
Package	M2::AUTOSARTemplates::GenericStructure::AbstractStructure			
Note	An M0 instance of a classifier may be represented as a tree rooted at that instance, where under each node come the sub-trees representing the instances which act as features under that node. An instance ref specifies a navigation path from any M0 tree-instance of the base (which is a classifier) to a leaf (which is an instance of the target).			
Base	ARObject			
Subclasses	AnyInstanceRef, ApplicationCompositeElementInPortInterfaceInstanceRef, ComponentInCompositionInstanceRef, ComponentInSystemInstanceRef, DataPrototypeInPortInterfaceInstanceRef , DataPrototypeInSystemInstanceRef , InnerDataPrototypeGroupInCompositionInstanceRef, InnerPortGroupInCompositionInstanceRef, InnerRunnableEntityGroupInCompositionInstanceRef, InstanceEventInCompositionInstanceRef, ModeDeclarationGroupPrototypeInSystemInstanceRef, ModeGroupInAtomicSwcInstanceRef , ModelInBswModuleDescriptionInstanceRef , ModelInSwcInstanceRef, OperationArgumentInComponentInstanceRef, OperationInAtomicSwcInstanceRef , OperationInSystemInstanceRef, PModelInSystemInstanceRef , ParameterDataPrototypeInSystemInstanceRef, ParameterInAtomicSWCTypeInstanceRef, PortGroupInSystemInstanceRef, PortInCompositionTypeInstanceRef , RModelInAtomicSwcInstanceRef, RteEventInCompositionInstanceRef, RteEventInEcuInstanceRef, RteEventInSystemInstanceRef, RunnableEntityInCompositionInstanceRef, SwcServiceDependencyInSystemInstanceRef , TriggerInAtomicSwcInstanceRef , TriggerInSystemInstanceRef, VariableAccessInEcuInstanceRef, VariableDataPrototypeInCompositionInstanceRef, VariableDataPrototypeInSystemInstanceRef, VariableInAtomicSWCTypeInstanceRef, VariableInAtomicSwcInstanceRef , VariableInComponentInstanceRef			
Attribute	Type	Mult.	Kind	Note
atpBase	AtpClassifier	1	ref	This is the base from which the navigation path starts. Stereotypes: atpAbstract; atpDerived
atpContext Element (ordered)	AtpPrototype	*	ref	This is one particular step in the navigation path. Stereotypes: atpAbstract
atpTarget	AtpFeature	1	ref	This is the target of the instance ref. In other words it is the terminal of the navigation path. Stereotypes: atpAbstract

Table C.8: AtpInstanceRef

Class	AutosarDataPrototype (abstract)			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::DataPrototypes			
Note	Base class for prototypical roles of an AutosarDataType.			
Base	ARObject, AtpFeature, AtpPrototype, DataPrototype , Identifiable , MultilanguageReferrable , Referrable			
Subclasses	ArgumentDataPrototype , ParameterDataPrototype, VariableDataPrototype			
Aggregated by	AtpClassifier.atpFeature			
Attribute	Type	Mult.	Kind	Note
type	AutosarDataType	0..1	trf	This represents the corresponding data type. Stereotypes: isOfType

Table C.9: AutosarDataPrototype

Class	AutosarDataType (abstract)			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::Datatypes			
Note	Abstract base class for user defined AUTOSAR data types for software.			
Base	ARElement , ARObject , AtpClassifier , AtpType , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	AbstractImplementationDataType , ApplicationDataType			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
swDataDef Props	SwDataDefProps	0..1	aggr	The properties of this AutosarDataType. Stereotypes: atpSplitable Tags: atp.Splitkey=swDataDefProps

Table C.10: AutosarDataType

Class	BaseType (abstract)			
Package	M2::MSR::AsamHdo::BaseTypes			
Note	This abstract meta-class represents the ability to specify a platform dependent base type.			
Base	ARElement , ARObject , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	SwBaseType			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
baseType Definition	BaseTypeDefinition	1	aggr	This is the actual definition of the base type. Tags: xml.roleElement=false xml.roleWrapperElement=false xml.sequenceOffset=20 xml.typeElement=false xml.typeWrapperElement=false

Table C.11: BaseType

Class	BaseTypeDirectDefinition			
Package	M2::MSR::AsamHdo::BaseTypes			
Note	This BaseType is defined directly (as opposite to a derived BaseType)			
Base	ARObject , BaseTypeDefinition			
Aggregated by	BaseType.baseTypeDefinition			
Attribute	Type	Mult.	Kind	Note
baseType Encoding	BaseTypeEncoding String	0..1	attr	This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. Tags: xml.sequenceOffset=90
baseTypeSize	PositiveInteger	0..1	attr	Describes the length of the data type specified in the container in bits. Tags: xml.sequenceOffset=70
byteOrder	ByteOrderEnum	0..1	attr	This attribute specifies the byte order of the base type. Tags: xml.sequenceOffset=110





Class	BaseTypeDirectDefinition			
memAlignment	PositiveInteger	0..1	attr	This attribute describes the alignment of the memory object in bits. E.g. "8" specifies, that the object in question is aligned to a byte while "32" specifies that it is aligned four byte. If the value is set to "0" the meaning shall be interpreted as "unspecified". Tags: xml.sequenceOffset=100
native Declaration	NativeDeclarationString	0..1	attr	This attribute describes the declaration of such a base type in the native programming language, primarily in the Programming language C. This can then be used by a code generator to include the necessary declarations into a header file. For example BaseType with shortName: "MyUnsignedInt" native Declaration: "unsigned short" Results in typedef unsigned short MyUnsignedInt; If the attribute is not defined the referring Implementation DataTypes will not be generated as a typedef by RTE. If a nativeDeclaration type is given it shall fulfill the characteristic given by BaseTypeEncoding and BaseType Size. This is required to ensure the consistent handling and interpretation by software components, RTE, COM and MCM systems. Tags: xml.sequenceOffset=120

Table C.12: BaseTypeDirectDefinition

Class	BswModuleDescription			
Package	M2::AUTOSARTemplates::BswModuleTemplate::BswOverview			
Note	Root element for the description of a single BSW module or BSW cluster. In case it describes a BSW module, the short name of this element equals the name of the BSW module. Tags: atp.recommendedPackage=BswModuleDescriptions			
Base	ARElement , ARObject , AtpBlueprint , AtpBlueprintable , AtpClassifier , AtpFeature , AtpStructureElement , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element , AtpClassifier.atpFeature			
Attribute	Type	Mult.	Kind	Note
bswModule Dependency	BswModuleDependency	*	aggr	Describes the dependency to another BSW module. Stereotypes: atp.Splitable; atp.Variation Tags: atp.Splitkey=bswModuleDependency.shortName, bswModuleDependency.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=20
bswModule Documentation	SwComponent Documentation	0..1	aggr	This adds a documentation to the BSW module. Stereotypes: atp.Splitable; atp.Variation Tags: atp.Splitkey=bswModuleDocumentation, bswModuleDocumentation.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=6





Class	BswModuleDescription			
expectedEntry	BswModuleEntry	*	ref	Indicates an entry which is required by this module. Replacement of outgoingCallback / requiredEntry. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=expectedEntry.bswModuleEntry, expectedEntry.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
implementedEntry	BswModuleEntry	*	ref	Specifies an entry provided by this module which can be called by other modules. This includes "main" functions, interrupt routines, and callbacks. Replacement of providedEntry / expectedCallback. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=implementedEntry.bswModuleEntry, implementedEntry.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
internalBehavior	BswInternalBehavior	*	aggr	The various BswInternalBehaviors associated with a Bsw ModuleDescription can be distributed over several physical files. Therefore the aggregation is <<atp Splitable>>. Stereotypes: atpSplitable Tags: atp.Splitkey=internalBehavior.shortName xml.sequenceOffset=65
moduleId	PositiveInteger	0..1	attr	Refers to the BSW Module Identifier defined by the AUTOSAR standard. For non-standardized modules, a proprietary identifier can be optionally chosen. Tags: xml.sequenceOffset=5
providedClientServerEntry	BswModuleClientServerEntry	*	aggr	Specifies that this module provides a client server entry which can be called from another partition or core. This entry is declared locally to this context and will be connected to the requiredClientServerEntry of another or the same module via the configuration of the BSW Scheduler. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=providedClientServerEntry.shortName, providedClientServerEntry.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=45
providedData	VariableDataPrototype	*	aggr	Specifies a data prototype provided by this module in order to be read from another partition or core. The providedData is declared locally to this context and will be connected to the requiredData of another or the same module via the configuration of the BSW Scheduler. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=providedData.shortName, providedData.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=55





Class	BswModuleDescription			
providedModeGroup	ModeDeclarationGroup Prototype	*	aggr	A set of modes which is owned and provided by this module or cluster. It can be connected to the required ModeGroups of other modules or clusters via the configuration of the BswScheduler. It can also be synchronized with modes provided via ports by an associated ServiceSwComponentType, EcuAbstractionSwComponentType or ComplexDeviceDriverSwComponentType. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=providedModeGroup.shortName, providedModeGroup.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=25
releasedTrigger	Trigger	*	aggr	A Trigger released by this module or cluster. It can be connected to the requiredTriggers of other modules or clusters via the configuration of the BswScheduler. It can also be synchronized with Triggers provided via ports by an associated ServiceSwComponentType, EcuAbstractionSwComponentType or ComplexDeviceDriverSwComponentType. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=releasedTrigger.shortName, releasedTrigger.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=35
requiredClientServerEntry	BswModuleClientServerEntry	*	aggr	Specifies that this module requires a client server entry which can be implemented on another partition or core. This entry is declared locally to this context and will be connected to the providedClientServerEntry of another or the same module via the configuration of the BSW Scheduler. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=requiredClientServerEntry.shortName, requiredClientServerEntry.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=50
requiredData	VariableDataPrototype	*	aggr	Specifies a data prototype required by this module in order to be provided from another partition or core. The required Data is declared locally to this context and will be connected to the providedData of another or the same module via the configuration of the BswScheduler. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=requiredData.shortName, requiredData.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=60





Class	BswModuleDescription			
requiredModeGroup	ModeDeclarationGroup Prototype	*	aggr	Specifies that this module or cluster depends on a certain mode group. The requiredModeGroup is local to this context and will be connected to the providedModeGroup of another module or cluster via the configuration of the BswScheduler. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=requiredModeGroup.shortName, requiredModeGroup.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=30
requiredTrigger	Trigger	*	aggr	Specifies that this module or cluster reacts upon an external trigger. This requiredTrigger is declared locally to this context and will be connected to the providedTrigger of another module or cluster via the configuration of the BswScheduler. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=requiredTrigger.shortName, requiredTrigger.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=40

Table C.13: BswModuleDescription

Class	ClientServerOperation			
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
Note	An operation declared within the scope of a client/server interface.			
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	ApplicationInterface.command, AtpClassifier.atpFeature, ClientServerInterface.operation , DiagnosticDataElementInterface.read, DiagnosticDataIdentifierInterface.read, DiagnosticDataIdentifierInterface.write, DiagnosticRoutineInterface.requestResult, DiagnosticRoutineInterface.start, DiagnosticRoutineInterface.stop, PhmRecoveryActionInterface.recovery, ServiceInterface.method			
Attribute	Type	Mult.	Kind	Note
argument (ordered)	ArgumentDataPrototype	*	aggr	An argument of this ClientServerOperation Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=argument.shortName, argument.variationPoint.shortLabel vh.latestBindingTime=blueprintDerivationTime
diagArgIntegrity	Boolean	0..1	attr	This attribute shall only be used in the implementation of diagnostic routines to support the case where input and output arguments are allocated in a shared buffer and might unintentionally overwrite input arguments by tentative write operations to output arguments. This situation can happen during sliced execution or while output parameters are arrays (call by reference). The value true means that the ClientServerOperation is aware of the usage of a shared buffer and takes precautions to avoid unintentional overwrite of input arguments. If the attribute does not exist or is set to false the Client ServerOperation does not have to consider the usage of a shared buffer.
possibleError	ApplicationError	*	ref	Possible errors that may be raised by the referring operation.

Table C.14: ClientServerOperation

Class	CompositionSwComponentType			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Composition			
Note	A CompositionSwComponentType aggregates SwComponentPrototypes (that in turn are typed by SwComponentTypes) as well as SwConnectors for primarily connecting SwComponentPrototypes among each others and towards the surface of the CompositionSwComponentType. By this means, a hierarchical structures of software-components can be created. Tags: atp.recommendedPackage=SwComponentTypes			
Base	ARElement , ARObject , AtpBlueprint , AtpBlueprintable , AtpClassifier , AtpType , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable , SwComponentType			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
component	SwComponentPrototype	*	aggr	The instantiated components that are part of this composition. The aggregation of SwComponentPrototype is subject to variability with the purpose to support the conditional existence of a SwComponentPrototype. Please be aware: if the conditional existence of SwComponentPrototypes is resolved post-build, the deselected SwComponentPrototypes are still contained in the ECUs build but the instances are inactive in that they are not scheduled by the RTE. The aggregation is marked as atpSplitable in order to allow the addition of service components to the ECU extract during the ECU integration. The use case for having 0 components owned by the CompositionSwComponentType could be to deliver an empty CompositionSwComponentType to e.g. a supplier for filling the internal structure. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=component.shortName, component.variationPoint.shortLabel vh.latestBindingTime=postBuild
connector	SwConnector	*	aggr	SwConnectors have the principal ability to establish a connection among PortPrototypes. They can have many roles in the context of a CompositionSwComponentType. Details are refined by subclasses. The aggregation of SwConnectors is subject to variability with the purpose to support variant data flow. The aggregation is marked as atpSplitable in order to allow the extension of the ECU extract with AssemblySwConnectors between ApplicationSwComponentTypes and ServiceSwComponentTypes during the ECU integration. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=connector.shortName, connector.variationPoint.shortLabel vh.latestBindingTime=postBuild
constantValueMapping	ConstantSpecificationMappingSet	*	ref	Reference to the ConstantSpecificationMapping to be applied for initValues of PPortComSpecs and RPortComSpec. Stereotypes: atpSplitable Tags: atp.Splitkey=constantValueMapping





Class	CompositionSwComponentType			
dataType Mapping	DataTypeMappingSet	*	ref	Reference to the <code>DataTypeMappingSet</code> to be applied for the used <code>ApplicationDataTypes</code> in <code>PortInterfaces</code>. Background: when developing subsystems it may happen that <code>ApplicationDataTypes</code> are used on the surface of <code>CompositionSwComponentTypes</code>. In this case it would be reasonable to be able to also provide the intended mapping to the <code>ImplementationDataTypes</code>. However, this mapping shall be informal and not technically binding for the implementors mainly because the RTE generator is not concerned about the <code>CompositionSwComponentTypes</code>. Rationale: if the mapping of <code>ApplicationDataTypes</code> on the delegated and inner <code>PortPrototype</code> matches then the mapping to <code>ImplementationDataTypes</code> is not impacting compatibility. Stereotypes: <code>atpSplitable</code> Tags: <code>atp.Splitkey=dataTypeMapping</code>
instantiation RTEEventProps	InstantiationRTEEvent Props	*	aggr	This allows to define instantiation specific properties for RTE Events, in particular for instance specific scheduling. Stereotypes: <code>atpSplitable</code>; <code>atpVariation</code> Tags: <code>atp.Splitkey=instantiationRTEEventProps.shortLabel</code>, <code>instantiationRTEEventProps.variationPoint.shortLabel</code> <code>vh.latestBindingTime=codeGenerationTime</code>
physical Dimension Mapping	PhysicalDimension MappingSet	0..1	ref	This reference identifies the <code>PhysicalDimensionMappingSet</code> that is applicable in the context of the enclosing <code>CompositionSwComponentType</code>. The <code>PhysicalDimensionMappings</code> contained in the <code>PhysicalDimensionMappingSet</code> shall be taken into account for the assessment of the compatibility of <code>PhysicalDimensions</code> in the context of creation of a <code>PortInterfaceMapping</code> in the scope of the <code>CompositionSwComponentType</code>.

Table C.15: CompositionSwComponentType

Class	CompuMethod			
Package	M2::MSR::AsamHdo::ComputationMethod			
Note	This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant. Tags: <code>atp.recommendedPackage=CompuMethods</code>			
Base	ARElement , ARObject , AtpBlueprint , AtpBlueprintable , CollectableElement , Identifiable , Multilanguage Referrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	CompuMethod			
compuInternalToPhys	Compu	0..1	aggr	This specifies the computation from internal values to physical values. Stereotypes: atpSplitable Tags: atp.Splitkey=compuInternalToPhys xml.sequenceOffset=80
compuPhysToInternal	Compu	0..1	aggr	This represents the computation from physical values to the internal values. Stereotypes: atpSplitable Tags: atp.Splitkey=compuPhysToInternal xml.sequenceOffset=90
displayFormat	DisplayFormatString	0..1	attr	This property specifies, how the physical value shall be displayed e.g. in documents or measurement and calibration tools. Tags: xml.sequenceOffset=20
unit	Unit	0..1	ref	This is the physical unit of the Physical values for which the CompuMethod applies. Tags: xml.sequenceOffset=30

Table C.16: CompuMethod

Class	CpSoftwareCluster			
Package	M2::AUTOSARTemplates::SystemTemplate::SoftwareCluster			
Note	This meta class provides the ability to define a CP Software Cluster. Each CP Software Cluster can be integrated and build individually. It defines the sub-set of hierarchical tree(s) of Software Components belonging to this CP Software Cluster. Resources required or provided by this CP Software Cluster are given in the according mappings. Tags: atp.recommendedPackage=CpSoftwareClusters			
Base	ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
softwareClusterId	PositiveInteger	0..1	attr	This attribute represents the value of the id of the corresponding CP software cluster.
swComponentAssignment	SwComponentPrototypeAssignment	*	aggr	This is the collection of SwComponentPrototype Assignments Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=swComponentAssignment, swComponentAssignment.variationPoint.shortLabel vh.latestBindingTime=postBuild
swComposition	CompositionSwComponentType	*	ref	Software Components in the context of a CompositionSwComponentType belonging to this CP Software Cluster. This reference can be used to describe the belonging SWCs when the CP Software Cluster is described out of the context of a System, e.g. reusable CP Software Cluster. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=swComposition.compositionSwComponentType, swComposition.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime

Table C.17: CpSoftwareCluster

Class	CryptoServiceCertificate			
Package	M2::AUTOSARTemplates::SystemTemplate::SecureCommunication			
Note	This meta-class represents the ability to model a cryptographic certificate. Tags: atp.recommendedPackage=CryptoServiceCertificates			
Base	ARElement , ARObject , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable , UploadableDesignElement , UploadablePackageElement			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
algorithmFamily	CryptoCertificate AlgorithmFamilyEnum	0..1	attr	This attribute represents a description of the family of crypto algorithm used to generate public key and signature of the cryptographic certificate.
format	CryptoCertificateFormat Enum	0..1	attr	This attribute can be used to provide information about the format used to create the certificate
maximum Length	PositiveInteger	0..1	attr	This attribute represents the ability to define the maximum length of the certificate in bytes.
nextHigher Certificate	CryptoService Certificate	0..1	ref	The reference identifies the next higher certificate in the certificate chain.
serverName Identification	String	0..1	attr	Server Name Indication (SNI) is needed if the IP address hosts multiple servers (on the same port), each of them using a different certificate. If the client sends the SNI to the Server in the client hello, the server looks the SNI up in its certificate list and uses the certificate identified by the SNI.

Table C.18: CryptoServiceCertificate

Class	DataConstr			
Package	M2::MSR::AsamHdo::Constraints::GlobalConstraints			
Note	This meta-class represents the ability to specify constraints on data. Tags: atp.recommendedPackage=DataConstrs			
Base	ARElement , ARObject , AtpBlueprint , AtpBlueprintable , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dataConstrRule	DataConstrRule	*	aggr	This is one particular rule within the data constraints. Tags: xml.roleElement=true xml.roleWrapperElement=true xml.sequenceOffset=30 xml.typeElement=false xml.typeWrapperElement=false

Table C.19: DataConstr

Class	DataInterface (abstract)			
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
Note	The purpose of this meta-class is to act as an abstract base class for subclasses that share the semantics of being concerned about data (as opposed to e.g. operations).			
Base	ARElement , ARObject , AtpBlueprint , AtpBlueprintable , AtpClassifier , AtpType , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , PortInterface , Referrable			
Subclasses	NvDataInterface , ParameterInterface , SenderReceiverInterface			
Aggregated by	ARPackage.element			





Class	DataInterface (abstract)			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table C.20: DataInterface

Class	DataPrototype (abstract)			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Datatype::DataPrototypes			
Note	Base class for prototypical roles of any data type.			
Base	ARObject, AtpFeature, AtpPrototype, Identifiable , MultilanguageReferrable , Referrable			
Subclasses	ApplicationCompositeElementDataPrototype, AutosarDataPrototype			
Aggregated by	AtpClassifier.atpFeature			
Attribute	Type	Mult.	Kind	Note
swDataDef Props	SwDataDefProps	0..1	aggr	This property allows to specify data definition properties which apply on data prototype level. Stereotypes: atpSplitable Tags: atp.Splitkey=swDataDefProps

Table C.21: DataPrototype

Class	DiagnosticEventNeeds			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	Specifies the abstract needs on the configuration of the Diagnostic Event Manager for one diagnostic event. Its shortName can be regarded as a symbol identifying the diagnostic event from the viewpoint of the component or module which owns this element. In case the diagnostic event specifies a production error, the shortName shall be the name of the production error.			
Base	ARObject, DiagnosticCapabilityElement, Identifiable , MultilanguageReferrable , Referrable , ServiceNeeds			
Aggregated by	BswServiceDependency.serviceNeeds, SwcServiceDependency.serviceNeeds			
Attribute	Type	Mult.	Kind	Note
deferringFid	FunctionInhibitionNeeds	*	ref	This reference contains the link to a function identifier within the FiM which is used by the monitor before delivering a result.
diagEvent Debounce Algorithm	DiagEventDebounce Algorithm	0..1	aggr	Specifies the abstract need on the Debounce Algorithm applied by the Diagnostic Event Manager.
inhibitingFid	FunctionInhibitionNeeds	0..1	ref	This represents the primary Function Inhibition Identifier used for inhibition of the diagnostic monitor. The FID might either inhibit the monitoring of a symptom or the reporting of detected faults.
inhibiting SecondaryFid	FunctionInhibitionNeeds	*	ref	This represents the secondary Function Inhibition Identifier used for inhibition of the diagnostic monitor. Any of the FID inhibitions leads to an inhibition of the monitoring of a symptom or the reporting of detected faults.





Class	DiagnosticEventNeeds			
prestoredFreezeFrameStoredInNvm	Boolean	0..1	attr	If the Event uses a prestored freeze-frame (using the operations PrestoreFreezeFrame and ClearPrestoredFreezeFrame of the service interface DiagnosticMonitor) this attribute indicates if the Event requires the data to be stored in non-volatile memory. TRUE = Dem shall store the prestored data in non-volatile memory, FALSE = Data can be lost at shutdown (not stored in Nvm).
usesMonitorData	Boolean	0..1	attr	This attribute defines whether additional monitor data shall be added to the reporting of events.

Table C.22: DiagnosticEventNeeds

Class	DiagnosticSecureCodingMapping			
Package	M2::AUTOSARTemplates::DiagnosticExtract::DiagnosticMapping			
Note	This meta-class acts a mapping element to select diagnostic service instances that are used in the secure coding procedure. Besides, there are already defined diagnostic capabilities they furthermore have a additional semantics that is used during the secure coding process. In particular, this class references write data by identifier instances that mandatory require a secure coding and this class references a diagnostic routine control that is used to provide the signature and to persist the data in non-volatile memory. Tags: atp.recommendedPackage=DiagnosticMappings			
Base	ARElement , ARObject , CollectableElement , DiagnosticCommonElement , DiagnosticMapping , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dataIdentifier	DiagnosticWriteDataByIdentifier	*	ref	Refer to write data by identifier instances that have the semantics to be a secure coding DID.
validation	DiagnosticStartRoutine	0..1	ref	Refer to a routine control that is used to authenticate and persist the secure coding data.

Table C.23: DiagnosticSecureCodingMapping

Class	EcuInstance			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
Note	ECUInstances are used to define the ECUs used in the topology. The type of the ECU is defined by a reference to an ECU specified with the ECU resource description. Tags: atp.recommendedPackage=EcuInstances			
Base	ARObject , CollectableElement , FibexElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
associatedCommunicationPduGroup	ISignalIPduGroup	*	ref	With this reference it is possible to identify which ISignalIPduGroups are applicable for which Communication Connector/ ECU. Only top level ISignalIPduGroups shall be referenced by an EcuInstance. If an ISignalIPduGroup contains other ISignalIPduGroups than these contained ISignalIPduGroups shall not be referenced by the EcuInstance. Contained ISignalIPduGroups are associated to an Ecu Instance via the top level ISignalIPduGroup.





Class	EcucInstance			
associatedConsumedProvidedServiceInstanceGroup	ConsumedProvidedServiceInstanceGroup	*	ref	With this reference it is possible to identify which ConsumedProvidedServiceInstanceGroups are applicable for which EcucInstance. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=associatedConsumedProvidedServiceInstanceGroup.consumedProvidedServiceInstanceGroup, associatedConsumedProvidedServiceInstanceGroup.variationPoint.shortLabel vh.latestBindingTime=postBuild
associatedPdurIPduGroup	PdurIPduGroup	*	ref	With this reference it is possible to identify which PdurIPdu Groups are applicable for which Communication Connector/ ECU.
channelSynchronousWakeup	Boolean	0..1	attr	If this parameter is available and set to true, then all available channels will be woken up as soon as at least one channel wakeup occurs. If PNCs are configured, then all PNCs will be requested upon a channel wakeup.
clientIdRange	ClientIdRange	0..1	aggr	Restriction of the Client Identifier for this Ecu to an allowed range of numerical values. The Client Identifier of the transaction handle is generated by the client RTE for inter-Ecu Client/Server communication.
comConfigurationGwTimeBase	TimeValue	0..1	attr	The period between successive calls to Com_Main FunctionRouteSignals of the AUTOSAR COM module in seconds.
comConfigurationRxTimeBase	TimeValue	0..1	attr	The period between successive calls to Com_Main FunctionRx of the AUTOSAR COM module in seconds.
comConfigurationTxTimeBase	TimeValue	0..1	attr	The period between successive calls to Com_Main FunctionTx of the AUTOSAR COM module in seconds.
comEnableMDTForCyclicTransmission	Boolean	0..1	attr	Enables for the Com module of this EcucInstance the minimum delay time monitoring for cyclic and repeated transmissions (TransmissionModeTiming has cyclic Timing assigned or eventControlledTiming with numberOfRepetitions > 0).
commController	CommunicationController	*	aggr	CommunicationControllers of the ECU. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=commController.shortName, commController.variationPoint.shortLabel vh.latestBindingTime=postBuild
connector	CommunicationConnector	*	aggr	All channels controlled by a single controller. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=connector.shortName, connector.variationPoint.shortLabel vh.latestBindingTime=postBuild
dltConfig	DltConfig	0..1	aggr	Describes the Dlt configuration on this EcucInstance.
dolpConfig	DolpConfig	0..1	aggr	Dolp configuration on this EcucInstance. Tags: atp.Status=draft
ecuTaskProxy	OsTaskProxy	*	ref	Reference to OsTaskProxies assigned to the Ecu Instance. Stereotypes: atpSplitable Tags: atp.Splitkey=ecuTaskProxy





Class	EcuInstance			
ethSwitchPortGroupDerivation	Boolean	0..1	attr	Defines whether the derivation of SwitchPortGroups based on VLAN and/or CouplingPort.pncMapping shall be performed for this EcuInstance. If not defined the derivation shall not be done.
firewallRule	StateDependentFirewall	*	ref	Firewall rules defined in the context of an EcuInstance. Tags: atp.Status=candidate
partition	EcuPartition	*	aggr	Optional definition of Partitions within an Ecu.
pncNmRequest	Boolean	0..1	attr	Defines if this EcuInstance shall request Nm on all its PhysicalChannels which have Nm variant set to FULL each time a PNC is requested.
pncPrepareSleepTimer	TimeValue	0..1	attr	Time in seconds the PNC state machine shall wait in PNC_PREPARE_SLEEP.
pncSynchronousWakeup	Boolean	0..1	attr	If this parameter is available and set to true then all available PNCs will be woken up as soon as a channel wakeup occurs. This is ensured by adding all PNCs to all channel wakeup sources during upstream mapping.
pnResetTime	TimeValue	0..1	attr	Specifies the runtime of the reset timer in seconds. This reset time is valid for the reset of PN requests in the EIRA and in the ERA.
sleepModeSupported	Boolean	0..1	attr	Specifies whether the ECU instance may be put to a "low power mode" • true: sleep mode is supported • false: sleep mode is not supported Note: This flag may only be set to "true" if the feature is supported by both hardware and basic software.
tcplplcmpProps	EthTcplplcmpProps	0..1	ref	EcuInstance specific ICMP (Internet Control Message Protocol) attributes
tcplpProps	EthTcplpProps	0..1	ref	EcuInstance specific Tcplp Stack attributes.
v2xSupported	V2xSupportEnum	0..1	attr	This attribute is used to control the existence of the V2X stack on the given EcuInstance.
wakeUpOverBusSupported	Boolean	0..1	attr	Driver support for wakeup over Bus.

Table C.24: EcuInstance

Class	EthernetPhysicalChannel			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology			
Note	The EthernetPhysicalChannel represents a VLAN or an untagged channel. An untagged channel is modeled as an EthernetPhysicalChannel without an aggregated VLAN.			
Base	ARObject, Identifiable , MultilanguageReferrable , PhysicalChannel , Referrable			
Aggregated by	CommunicationCluster.physicalChannel			
Attribute	Type	Mult.	Kind	Note
networkEndpoint	NetworkEndpoint	*	aggr	Collection of NetworkEndpoints that are used in the VLAN. Stereotypes: atp.Splittable Tags: atp.Splitkey=networkEndpoint.shortName
soAdConfig	SoAdConfig	0..1	aggr	SoAd Configuration for one specific Physical Channel. Stereotypes: atp.Splittable Tags: atp.Splitkey=soAdConfig
vlan	VlanConfig	0..1	aggr	VLAN Configuration.

Table C.25: EthernetPhysicalChannel

Class	EvaluatedVariantSet			
Package	M2::AUTOSARTemplates::GenericStructure::VariantHandling			
Note	This meta class represents the ability to express if a set of ARElements is able to support one or more particular variants. In other words, for a given set of evaluatedElements this meta class represents a table of evaluated variants, where each PredefinedVariant represents one column. In this column each descendant sw SystemconstantValue resp. postbuildVariantCriterionValue represents one entry. In a graphical representation each swSystemconstantValueSet / postBuildVariantCriterionValueSet could be used as an intermediate headline in the table column. If the approvalStatus is "APPROVED" it expresses that the collection of CollectableElements is known be valid for the given evaluatedVariants. Note that the EvaluatedVariantSet is a CollectableElement. This allows to establish a hierarchy of EvaluatedVariantSets. Tags: atp.recommendedPackage=EvaluatedVariantSets			
Base	ARElement, AObject, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
approvalStatus	NameToken	1	attr	Defines the approval status of a predefined variant. Two values are predefined: "APPROVED" and "REJECTED": - Approved variants are known to work. - Rejected variants are known NOT to work. Further values can be approved on a per-company basis; within AUTOSAR only "APPROVED" and "REJECTED" should be recognized.
evaluated Element	CollectableElement	*	ref	This represents a particular element which is evaluated in context of the EvaluatedVariants. The approvalStatus applies to this element (and all of its descendants). In other words, the referenced elements are those that were considered when the predefined variant was evaluated.
evaluated Variant	PredefinedVariant	*	ref	This metaclass represents one particular variant which was evaluated. LowerMultiplicity is set to 0 to support a stepwise approach.

Table C.26: EvaluatedVariantSet

Class	ISignal			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
Note	Signal of the Interaction Layer. The RTE supports a "signal fan-out" where the same System Signal is sent in different SignalIPdus to multiple receivers. To support the RTE "signal fan-out" each SignalIPdu contains ISignals. If the same System Signal is to be mapped into several SignalIPdus there is one ISignal needed for each ISignalToIPduMapping. ISignals describe the Interface between the Precompile configured RTE and the potentially Postbuild configured Com Stack (see ECUC Parameter Mapping). In case of the SystemSignalGroup an ISignal shall be created for each SystemSignal contained in the SystemSignalGroup. Tags: atp.recommendedPackage=ISignals			
Base	ARElement, AObject, CollectableElement, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, UploadableDesignElement, UploadablePackageElement			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	ISignal			
data Transformation	DataTransformation	0..1	ref	Optional reference to a DataTransformation which represents the transformer chain that is used to transform the data that shall be placed inside this ISignal. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=dataTransformation.dataTransformation, dataTransformation.variationPoint.shortLabel vh.latestBindingTime=codeGenerationTime
dataTypePolicy	DataTypePolicyEnum	0..1	attr	With the aggregation of SwDataDefProps an ISignal specifies how it is represented on the network. This representation follows a particular policy. Note that this causes some redundancy which is intended and can be used to support flexible development methodology as well as subsequent integrity checks. If the policy "networkRepresentationFromComSpec" is chosen the network representation from the ComSpec that is aggregated by the PortPrototype shall be used. If the "override" policy is chosen the requirements specified in the PortInterface and in the ComSpec are not fulfilled by the networkRepresentationProps. In case the System Description doesn't use a complete Software Component Description (VFB View) the "legacy" policy can be chosen.
initValue	ValueSpecification	0..1	aggr	Optional definition of a ISignal's initValue in case the System Description doesn't use a complete Software Component Description (VFB View). This supports the inclusion of legacy system signals. This value can be used to configure the Signal's "Init Value". If a full DataMapping exist for the SystemSignal this information may be available from a configured Sender ComSpec and ReceiverComSpec. In this case the initvalues in SenderComSpec and/or ReceiverComSpec override this optional value specification. Further restrictions apply from the RTE specification.
iSignalProps	ISignalProps	0..1	aggr	Additional optional ISignal properties that may be stored in different files. Stereotypes: atpSplitable Tags: atp.Splitkey=iSignalProps
iSignalType	ISignalTypeEnum	0..1	attr	This attribute defines whether this iSignal is an array that results in a UINT8_N / UINT8_DYN ComSignalType in the COM configuration or a primitive type.
length	UnlimitedInteger	0..1	attr	Size of the signal in bits. The size needs to be derived from the mapped VariableDataPrototype according to the mapping of primitive DataTypes to BaseTypes as used in the RTE. Indicates maximum size for dynamic length signals. The ISignal length of zero bits is allowed.





Class	ISignal			
network Representation Props	SwDataDefProps	0..1	aggr	Specification of the actual network representation. The usage of SwDataDefProps for this purpose is restricted to the attributes compuMethod and baseType. The optional baseType attributes "memAlignment" and "byteOrder" shall not be used. The attribute "dataPolicy" in the SystemTemplate element defines whether this network representation shall be ignored and the information shall be taken over from the network representation of the ComSpec. If "override" is chosen by the system integrator the network representation can violate against the requirements defined in the PortInterface and in the network representation of the ComSpec. In case that the System Description doesn't use a complete Software Component Description (VFB View) this element is used to configure "ComSignalDataInvalid Value" and the Data Semantics. Stereotypes: atpSplittable Tags: atp.Splitkey=networkRepresentationProps
reception DefaultValue (ordered)	ValueSpecification	*	aggr	Value used to fill data on the receiver side, if less then expected data is received. The value is expected to cover the entire expected ISignal network payload.
systemSignal	SystemSignal	0..1	ref	Reference to the System Signal that is supposed to be transmitted in the ISignal.
timeout Substitution Value	ValueSpecification	0..1	aggr	Defines and enables the ComTimeoutSubstitution for this ISignal.
transformation ISignalProps	TransformationISignal Props	*	aggr	A transformer chain consists of an ordered list of transformers. The ISignal specific configuration properties for each transformer are defined in the TransformationISignalProps class. The transformer configuration properties that are common for all ISignals are described in the TransformationTechnology class. Stereotypes: atpSplittable Tags: atp.Splitkey=transformationISignalProps

Table C.27: ISignal

Class	ISignalIPduGroup			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
Note	The AUTOSAR COM Layer is able to start and to stop sending and receiving configurable groups of I-Pdus during runtime. An ISignalIPduGroup contains either ISignalIPdus or ISignalIPduGroups. Tags: atp.recommendedPackage=ISignaliPduGroup			
Base	ARObject, CollectableElement, FibexElement, Identifiable , MultilanguageReferrable , Packageable Element, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
communication Direction	Communication DirectionType	0..1	attr	This attribute determines in which direction IPdus that are contained in this IPduGroup will be transmitted (communication direction can be either In or Out).





Class	ISignalPduGroup			
communication Mode	String	0..1	attr	This attribute defines the use-case for this ISignalPdu Group (e.g. diagnostic, debugging etc.). For example, in a diagnostic mode all IPdus - which are not involved in diagnostic - are disabled. The use cases are not limited to a fixed enumeration and can be specified as a string.
contained ISignalPdu Group	ISignalPduGroup	*	ref	An I-Pdu group can be included in other I-Pdu groups. Contained I-Pdu groups shall not be referenced by the EcuInstance.
iSignalPdu	ISignalPdu	*	ref	Reference to a set of Signal I-Pdus, which are contained in the ISignal I-Pdu Group. atpVariation: The content of a ISignal I-Pdu group can vary (->vehicle modes). Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=iSignalPdu.iSignalPdu, iSignal IPdu.variationPoint.shortLabel vh.latestBindingTime=postBuild
nmPdu	NmPdu	*	ref	Reference to a set of NmPdus with NmUserData, which are contained in the ISignalPduGroup. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=nmPdu.nmPdu, nmPdu.variationPoint.short Label vh.latestBindingTime=postBuild

Table C.28: ISignalPduGroup

Class	<i>IdentCaption</i> (abstract)			
Package	M2::AUTOSARTemplates::SWComponentTemplate::RPTScenario			
Note	This meta-class represents the caption. This allows having some meta-classes optionally identifiable.			
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable , MultilanguageReferrable , Referrable			
Subclasses	BswServiceDependencyIdent , DiagnosticParameterIdent , ExternalTriggeringPointIdent, ModeAccess PointIdent			
Aggregated by	AtpClassifier.atpFeature			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table C.29: IdentCaption

Class	<i>Identifiable</i> (abstract)			
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::Identifiable			
Note	Instances of this class can be referred to by their identifier (within the namespace borders). In addition to this, Identifiables are objects which contribute significantly to the overall structure of an AUTOSAR description. In particular, Identifiables might contain Identifiables.			
Base	ARObject, MultilanguageReferrable , Referrable			





Class	Identifiable (abstract)			
Subclasses	ARPackage, AbstractDolpLogicAddressProps, AbstractEvent, AbstractImplementationDataTypeElement, AbstractSecurityEventFilter, AbstractSecurityIdsmInstanceFilter, AbstractServiceInstance, AppOsTaskProxyToEcuTaskProxyMapping, ApplicationEndpoint, ApplicationError, ApplicationPartitionToEcuPartitionMapping, AppliedStandard, AsynchronousServerCallResultPoint, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpFeature, AutosarOperationArgumentInstance, AutosarVariableInstance, BinaryManifestAddressableObject, BinaryManifestItemDefinition, BinaryManifestResource, BinaryManifestResourceDefinition, BlockState, BswInternalTriggeringPoint, BswModuleDependency, BuildActionEntity, BuildActionEnvironment, CanTpAddress, CanTpChannel, CanTpNode, Chapter, ClassContentConditional, ClientIdDefinition, ClientServerOperation, Code, CollectableElement, ComManagementMapping, CommConnectorPort, CommunicationConnector, CommunicationController, Compiler, ConsistencyNeeds, ConsumedEventGroup, CouplingElementAbstractDetails, CouplingPort, CouplingPortAbstractShaper, CouplingPortStructuralElement, CpSoftwareClusterResource, CpSoftwareClusterResourceToApplicationPartitionMapping, CpSoftwareClusterToApplicationPartitionMapping, CpSoftwareClusterToEcuInstanceMapping, CpSoftwareClusterToResourceMapping, CryptoServiceMapping, DataPrototypeGroup, DataPrototypeTransformationPropsIdent, DataTransformation, DdsCpDomain, DdsCpPartition, DdsCpQosProfile, DdsCpTopic, DependencyOnArtifact, DiagEventDebounceAlgorithm, DiagnosticAuthTransmitCertificateEvaluation, DiagnosticConnectedIndicator, DiagnosticDataElement, DiagnosticDebounceAlgorithmProps, DiagnosticFunctionInhibitSource, DiagnosticParameterElement, DiagnosticRoutineSubfunction, DltApplication, DltArgument, DltLogChannel, DltMessage, DolpInterface, DolpLogicAddress, DolpRoutingActivation, ECUMapping, EOCExecutableEntityRefAbstract, EcuPartition, EcucContainerValue, EcucDefinitionElement, EcucDestinationUriDef, EcucEnumerationLiteralDef, EcucQuery, EcucValidationCondition, EndToEndProtection, EthernetWakeUpSleepOnDataLineConfig, EventHandler, ExclusiveArea, ExecutableEntity, ExecutionTime, FMAttributeDef, FMFeatureMapAssertion, FMFeatureMapCondition, FMFeatureMapElement, FMFeatureRelation, FMFeatureRestriction, FMFeatureSelection, FlatInstanceDescriptor, FlexrayArTpNode, FlexrayTpConnectionControl, FlexrayTpNode, FlexrayTpPduPool, FrameTriggering, GeneralParameter, GlobalTimeGateway, GlobalTimeMaster, GlobalTimeSlave, HeapUsage, HwAttributeDef, HwAttributeLiteralDef, HwPin, HwPinGroup, IEEE1722TpAcfBus, IEEE1722TpAcfBusPart, IPSecRule, IPv6ExtHeaderFilterList, ISignalToIPduMapping, ISignalTriggering, IdentCaption, ImpositionTime, InternalTriggeringPoint, J1939SharedAddressCluster, J1939TpNode, Keyword, LifeCycleState, LinScheduleTable, LinTpNode, Linker, MacAddressVlanMembership, MacMulticastGroup, MacSecKeyParticipant, McDataInstance, MemorySection, ModeDeclaration, ModeDeclarationMapping, ModeSwitchPoint, NetworkEndpoint, NmCluster, NmEcu, NmNode, NvBlockDescriptor, PackageableElement, ParameterAccess, PduActivationRoutingGroup, PduToFrameMapping, PduTriggering, PerInstanceMemory, PhysicalChannel, PortElementToCommunicationResourceMapping, PortGroup, PortInterfaceMapping, ResourceConsumption, RootSwCompositionPrototype, RptComponent, RptContainer, RptExecutableEntity, RptExecutableEntityEvent, RptExecutionContext, RptProfile, RptServicePoint, RteEventInCompositionSeparation, RteEventInCompositionToOsTaskProxyMapping, RteEventInSystemSeparation, RteEventInSystemToOsTaskProxyMapping, RunnableEntityGroup, SdgAttribute, SdgClass, SecOcJobRequirement, SecureCommunicationAuthenticationProps, SecureCommunicationFreshnessProps, SecurityEventContextDataElement, SecurityEventContextProps, ServerCallPoint, ServiceNeeds, SignalServiceTranslationElementProps, SignalServiceTranslationEventProps, SignalServiceTranslationProps, SocketAddress, SomeIpTpChannel, SpecElementReference, StackUsage, StaticSocketConnection, StructuredReq, SwGenericAxisParamType, SwServiceArg, SwcServiceDependency, SwcToApplicationPartitionMapping, SwcToEcuMapping, SwcToImplMapping, SwitchAsynchronousTrafficShaperGroupEntry, SwitchFlowMeteringEntry, SwitchStreamFilterActionDestPortModification, SwitchStreamFilterEntry, SwitchStreamFilterRule, SwitchStreamGateEntry, SwitchStreamIdentification, SystemMapping, SystemSignalGroupToCommunicationResourceMapping, SystemSignalToCommunicationResourceMapping, TDCpSoftwareClusterMapping, TDCpSoftwareClusterResourceMapping, TcpOptionFilterList, TimingClock, TimingClockSyncAccuracy, TimingCondition, TimingConstraint, TimingDescription, TimingExtensionResource, TimingModelInstance, TlsCryptoCipherSuite, TlsCryptoCipherSuiteProps, Topic1, TpAddress, TraceableTable, TraceableText, TracedFailure, TransformationSignalPropsIdent, TransformationProps, TransformationTechnology, Trigger, VariableAccess, VariationPointProxy, ViewMap, VlanConfig, WaitPoint			
Attribute	Type	Mult.	Kind	Note
adminData	AdminData	0..1	aggr	This represents the administrative data for the identifiable object. Stereotypes: atpSplittable Tags: atp.Splitkey=adminData xml.sequenceOffset=-40





Class	Identifiable (abstract)			
annotation	Annotation	*	aggr	Possibility to provide additional notes while defining a model element (e.g. the ECU Configuration Parameter Values). These are not intended as documentation but are mere design notes. Tags: xml.sequenceOffset=-25
category	CategoryString	0..1	attr	The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints. Tags: xml.sequenceOffset=-50
desc	MultiLanguageOverviewParagraph	0..1	aggr	This represents a general but brief (one paragraph) description what the object in question is about. It is only one paragraph! Desc is intended to be collected into overview tables. This property helps a human reader to identify the object in question. More elaborate documentation, (in particular how the object is built or used) should go to "introduction". Tags: xml.sequenceOffset=-60
introduction	DocumentationBlock	0..1	aggr	This represents more information about how the object in question is built or is used. Therefore it is a DocumentationBlock. Tags: xml.sequenceOffset=-30
uuid	String	0..1	attr	The purpose of this attribute is to provide a globally unique identifier for an instance of a meta-class. The values of this attribute should be globally unique strings prefixed by the type of identifier. For example, to include a DCE UUID as defined by The Open Group, the UUID would be preceded by "DCE:". The values of this attribute may be used to support merging of different AUTOSAR models. The form of the UUID (Universally Unique Identifier) is taken from a standard defined by the Open Group (was Open Software Foundation). This standard is widely used, including by Microsoft for COM (GUIDs) and by many companies for DCE, which is based on CORBA. The method for generating these 128-bit IDs is published in the standard and the effectiveness and uniqueness of the IDs is not in practice disputed. If the id namespace is omitted, DCE is assumed. An example is "DCE:2fac1234-31f8-11b4-a222-08002b34c003". The uuid attribute has no semantic meaning for an AUTOSAR model and there is no requirement for AUTOSAR tools to manage the timestamp. Tags: xml.attribute=true

Table C.30: Identifiable

Class	InternalBehavior (abstract)			
Package	M2::AUTOSARTemplates::CommonStructure::InternalBehavior			
Note	Common base class (abstract) for the internal behavior of both software components and basic software modules/clusters.			
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable , MultilanguageReferrable , Referrable			
Subclasses	BswInternalBehavior, SwcInternalBehavior			
Aggregated by	AtpClassifier.atpFeature			
Attribute	Type	Mult.	Kind	Note





Class	InternalBehavior (abstract)			
constantMemory	ParameterDataPrototype	*	aggr	Describes a read only memory object containing characteristic value(s) implemented by this InternalBehavior. The shortName of ParameterDataPrototype has to be equal to the "C" identifier of the described constant. The characteristic value(s) might be shared between SwComponentPrototypes of the same SwComponentType. The aggregation of constantMemory is subject to variability with the purpose to support variability in the software component or module implementations. Typically different algorithms in the implementation are requiring different number of memory objects. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=constantMemory.shortName, constantMemory.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
constantValueMapping	ConstantSpecificationMappingSet	*	ref	Reference to the ConstantSpecificationMapping to be applied for the particular InternalBehavior Stereotypes: atpSplitable Tags: atp.Splitkey=constantValueMapping
dataTypeMapping	DataTypeMappingSet	*	ref	Reference to the DataTypeMapping to be applied for the particular InternalBehavior Stereotypes: atpSplitable Tags: atp.Splitkey=dataTypeMapping
exclusiveArea	ExclusiveArea	*	aggr	This specifies an ExclusiveArea for this InternalBehavior. The exclusiveArea is local to the component resp. module. The aggregation of ExclusiveAreas is subject to variability. Note: the number of ExclusiveAreas might vary due to the conditional existence of RunnableEntities or BswModuleEntities. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=exclusiveArea.shortName, exclusiveArea.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
exclusiveAreaNestingOrder	ExclusiveAreaNestingOrder	*	aggr	This represents the set of ExclusiveAreaNestingOrder owned by the InternalBehavior. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=exclusiveAreaNestingOrder.shortName, exclusiveAreaNestingOrder.variationPoint.shortLabel vh.latestBindingTime=preCompileTime





Class	InternalBehavior (abstract)			
staticMemory	VariableDataPrototype	*	aggr	Describes a read and writeable static memory object representing measurement variables implemented by this software component. The term "static" is used in the meaning of "non-temporary" and does not necessarily specify a linker encapsulation. This kind of memory is only supported if supportsMultipleInstantiation is FALSE. The shortName of the VariableDataPrototype has to be equal with the 'C' identifier of the described variable. The aggregation of staticMemory is subject to variability with the purpose to support variability in the software component's implementations. Typically different algorithms in the implementation are requiring different number of memory objects. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=staticMemory.shortName, static Memory.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

Table C.31: InternalBehavior

Class	«atpVariation» J1939Cluster			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::Fibex4Can::CanTopology			
Note	J1939 specific cluster attributes. Tags: atp.recommendedPackage=CommunicationClusters			
Base	ARElement, ARObjct, AbstractCanCluster, CollectableElement, CommunicationCluster, FibexElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, UploadableDesignElement, UploadablePackageElement			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
networkId	PositiveInteger	0..1	attr	This represents the network ID for the J1939 cluster.
re-quest2Support	Boolean	0..1	attr	Enables support for the Request2 PGN (RQST2).
usesAddress Arbitration	Boolean	0..1	attr	Defines whether the nodes attached to this channel use an initial address claim, and whether they react to contending address claims of other nodes. True: The initial address claim is sent, and the node reacts to address claims of other nodes. False: The node only sends an address claim upon request, and does not care for contending address claims.

Table C.32: J1939Cluster

Class	J1939DcmIPdu
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication
Note	Represents the IPdus handled by J1939Dcm. Tags: atp.recommendedPackage=Pdus
Base	ARElement, ARObjct, CollectableElement, FibexElement, IPdu, Identifiable, MultilanguageReferrable, PackageableElement, Pdu, Referrable, UploadableDesignElement, UploadablePackageElement
Aggregated by	ARPackage.element





Class	J1939DcmIPdu			
Attribute	Type	Mult.	Kind	Note
diagnostic MessageType	PositiveInteger	0..1	attr	This attribute is used to identify the actual DMx message, e.g 1 means DM01, etc.

Table C.33: J1939DcmIPdu

Class	J1939NmNode			
Package	M2::AUTOSARTemplates::SystemTemplate::NetworkManagement			
Note	J1939 specific NM Node attributes.			
Base	ARObject, Identifiable , MultilanguageReferrable , NmNode, Referrable			
Aggregated by	NmCluster.nmNode			
Attribute	Type	Mult.	Kind	Note
address Configuration Capability	J1939NmAddress ConfigurationCapability Enum	0..1	attr	Defines the Address Configuration Capability of the J1939NmNode (corresponding to an SAE J1939 Controller Application, CA).
nodeName	J1939NodeName	0..1	aggr	NodeName configuration

Table C.34: J1939NmNode

Class	ModeDeclaration			
Package	M2::AUTOSARTemplates::CommonStructure::ModeDeclaration			
Note	Declaration of one Mode. The name and semantics of a specific mode is not defined in the meta-model.			
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	AtpClassifier.atpFeature, ModeDeclarationGroup.modeDeclaration			
Attribute	Type	Mult.	Kind	Note
value	PositiveInteger	0..1	attr	The RTE shall take the value of this attribute for generating the source code representation of this Mode Declaration.

Table C.35: ModeDeclaration

Class	ModeDeclarationGroup			
Package	M2::AUTOSARTemplates::CommonStructure::ModeDeclaration			
Note	A collection of Mode Declarations. Also, the initial mode is explicitly identified. Tags: atp.recommendedPackage=ModeDeclarationGroups			
Base	ARElement , ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable , MultilanguageReferrable , PackageableElement, Referrable , UploadableDesignElement, UploadablePackageElement			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
initialMode	ModeDeclaration	0..1	ref	The initial mode of the ModeDeclarationGroup. This mode is active before any mode switches occurred.





Class	ModeDeclarationGroup			
mode Declaration	ModeDeclaration	*	aggr	The ModeDeclarations collected in this ModeDeclaration Group. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=modeDeclaration.shortName, mode Declaration.variationPoint.shortLabel vh.latestBindingTime=blueprintDerivationTime
modeManager ErrorBehavior	ModeErrorBehavior	0..1	aggr	This represents the ability to define the error behavior expected by the mode manager in case of errors on the mode user side (e.g. terminated mode user).
modeTransition	ModeTransition	*	aggr	This represents the available ModeTransitions of the ModeDeclarationGroup
modeUserError Behavior	ModeErrorBehavior	0..1	aggr	This represents the definition of the error behavior expected by the mode user in case of errors on the mode manager side (e.g. terminated mode manager).
onTransition Value	PositiveInteger	0..1	attr	The value of this attribute shall be taken into account by the RTE generator for programmatically representing a value used for the transition between two statuses.

Table C.36: ModeDeclarationGroup

Class	ModeDeclarationGroupPrototype			
Package	M2::AUTOSARTemplates::CommonStructure::ModeDeclaration			
Note	The ModeDeclarationGroupPrototype specifies a set of Modes (ModeDeclarationGroup) which is provided or required in the given context.			
Base	ARObject, AtpFeature, AtpPrototype, Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	AtpClassifier.atpFeature, BswModuleDescription.providedModeGroup , BswModuleDescription.requiredModeGroup , FirewallStateSwitchInterface.firewallStateMachine, FunctionGroupSet.functionGroup, Mode SwitchInterface.modeGroup, Process.processStateMachine, StateManagementStateNotification.state Machine			
Attribute	Type	Mult.	Kind	Note
swCalibration Access	SwCalibrationAccess Enum	0..1	attr	This allows for specifying whether or not the enclosing ModeDeclarationGroupPrototype can be measured at run-time.
type	ModeDeclarationGroup	0..1	tref	The "collection of ModeDeclarations" (= ModeDeclaration Group) supported by a component Stereotypes: isOfType

Table C.37: ModeDeclarationGroupPrototype

Class	ModelInBswModuleDescriptionInstanceRef			
Package	M2::AUTOSARTemplates::BswModuleTemplate::BswOverview::InstanceRefs			
Note				
Base	ARObject, AtpInstanceRef			
Aggregated by	BswEvent.disabledInMode, BswModeSwitchEvent.mode, DiagnosticEnvBswModeElement.mode			
Attribute	Type	Mult.	Kind	Note
base	BswModuleDescription	0..1	ref	Stereotypes: atpDerived Tags: xml.sequenceOffset=10
contextMode Declaration Group	ModeDeclarationGroup Prototype	0..1	ref	Tags: xml.sequenceOffset=20
targetMode	ModeDeclaration	0..1	ref	Tags: xml.sequenceOffset=30

Table C.38: ModelInBswModuleDescriptionInstanceRef

Primitive	NameToken
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::PrimitiveTypes
Note	This is an identifier as used in xml, e.g. xml-names. Typical usages are, for example, the names of type emitters, protocols, or profiles. For details see NMTOKEN definition on the W3C website (https://www.w3.org/TR/xml/#NT-Nmtoken). Note: Although NameToken supports a wide range of characters, the actually allowed patterns for a certain attribute typed by NameToken may be further restricted by the specification of that attribute. Tags: xml.xsd.customType=NMTOKEN-STRING xml.xsd.type=NMTOKEN

Table C.39: NameToken

Class	NvDataInterface			
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
Note	A non volatile data interface declares a number of VariableDataPrototypes to be exchanged between non volatile block components and atomic software components. Tags: atp.recommendedPackage=PortInterfaces			
Base	ARElement , ARObject , AtpBlueprint , AtpBlueprintable , AtpClassifier , AtpType , CollectableElement , DataInterface , Identifiable , MultilanguageReferrable , PackageableElement , PortInterface , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
nvData	VariableDataPrototype	*	aggr	The VariableDataPrototype of this nv data interface.

Table C.40: NvDataInterface

Class	ObdMonitorServiceNeeds			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	Specifies the abstract needs of a component or module on the configuration of OBD Services in relation to a particular on-board monitoring test supported by this component or module. (OBD Service 06).			
Base	ARObject , DiagnosticCapabilityElement , Identifiable , MultilanguageReferrable , Referrable , ServiceNeeds			
Aggregated by	BswServiceDependency.serviceNeeds , SwcServiceDependency.serviceNeeds			
Attribute	Type	Mult.	Kind	Note
applicationData Type	ApplicationDataType	0..1	ref	reference to an ApplicationDataType that describes the scaling of the data reported by the software-component to the Dem.
eventNeeds	DiagnosticEventNeeds	0..1	ref	This reference identifies the corresponding diagnostic event.
unitAndScaling Id	PositiveInteger	0..1	attr	Unit and scaling ID according to ISO 15031-5.
updateKind	DiagnosticMonitor UpdateKindEnum	0..1	attr	This attribute indicates the settings for the acceptance of updates to the Dem.

Table C.41: ObdMonitorServiceNeeds

Class	PPortPrototype			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components			
Note	Component port providing a certain port interface.			
Base	ARObject , AbstractProvidedPortPrototype , AtpBlueprintable , AtpFeature , AtpPrototype , Identifiable , MultilanguageReferrable , PortPrototype , Referrable			





Class	PPortPrototype			
Aggregated by	AtpClassifier.atpFeature, SwComponentType.port			
Attribute	Type	Mult.	Kind	Note
provided Interface	PortInterface	0..1	tref	The interface that this port provides. Stereotypes: isOfType

Table C.42: PPortPrototype

Class	PhysicalChannel (abstract)			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreTopology			
Note	A physical channel is the transmission medium that is used to send and receive information between communicating ECUs. Each CommunicationCluster has at least one physical channel. Bus systems like CAN and LIN only have exactly one PhysicalChannel. A FlexRay cluster may have more than one PhysicalChannels that may be used in parallel for redundant communication. An ECU is part of a cluster if it contains at least one controller that is connected to at least one channel of the cluster.#			
Base	ARObject, Identifiable , MultilanguageReferrable , Referrable			
Subclasses	AbstractCanPhysicalChannel, EthernetPhysicalChannel , FlexrayPhysicalChannel, LinPhysicalChannel, UserDefinedPhysicalChannel			
Aggregated by	CommunicationCluster.physicalChannel			
Attribute	Type	Mult.	Kind	Note
comm Connector	Communication Connector	*	ref	Reference to the ECUInstance via a Communication Connector to which the channel is connected. atpVariation: Variable assignment of Physical Channels to different CommunicationConnectors is expressed with this variation. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=commConnector.communicationConnector, commConnector.variationPoint.shortLabel vh.latestBindingTime=postBuild
frameTriggering	FrameTriggering	*	aggr	One frame triggering is defined for exactly one channel. Channels may have assigned an arbitrary number of frame triggerings. atpVariation: If signals/PDUs/frames are variable, the corresponding triggerings shall be variable, too. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=frameTriggering.shortName, frameTriggering.variationPoint.shortLabel vh.latestBindingTime=postBuild
iSignal Triggering	ISignalTriggering	*	aggr	One ISignalTriggering is defined for exactly one channel. Channels may have assigned an arbitrary number of ISignaltriggerings. atpVariation: If signals/PDUs/frames are variable, the corresponding triggerings shall be variable, too. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=iSignalTriggering.shortName, iSignalTriggering.variationPoint.shortLabel vh.latestBindingTime=postBuild





Class	<i>PhysicalChannel</i> (abstract)			
managed Physical Channel	PhysicalChannel	*	ref	Reference between a channel with role managing channel and a channel with role managed channel.
pduTriggering	PduTriggering	*	aggr	One PduTriggering is defined for exactly one channel. Channels may have assigned an arbitrary number of I-Pdu triggerings. atpVariation: If signals/PDUs/frames are variable, the corresponding triggerings shall be variable, too. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=pduTriggering.shortName, pduTriggering.variationPoint.shortLabel vh.latestBindingTime=postBuild

Table C.43: PhysicalChannel

Class	<i>PortInterface</i> (abstract)			
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
Note	Abstract base class for an interface that is either provided or required by a port of a software component.			
Base	ARElement , ARObject , AtpBlueprint , AtpBlueprintable , AtpClassifier , AtpType , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	ClientServerInterface , DataInterface , ModeSwitchInterface , TriggerInterface			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
isService	Boolean	0..1	attr	This flag is set if the PortInterface is to be used for communication between an • ApplicationSwComponentType or • ServiceProxySwComponentType or • SensorActuatorSwComponentType or • ComplexDeviceDriverSwComponentType • ServiceSwComponentType • EcuAbstractionSwComponentType and a ServiceSwComponentType (namely an AUTOSAR Service) located on the same ECU. Otherwise the flag is not set. Stereotypes: atpVariation Tags: vh.latestBindingTime=blueprintDerivationTime
serviceKind	ServiceProviderEnum	0..1	attr	This attribute provides further details about the nature of the applied service.

Table C.44: PortInterface

Class	<i>PortPrototype</i> (abstract)			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components			
Note	Base class for the ports of an AUTOSAR software component. The aggregation of PortPrototypes is subject to variability with the purpose to support the conditional existence of ports.			
Base	ARObject , AtpBlueprintable , AtpFeature , AtpPrototype , Identifiable , MultilanguageReferrable , Referrable			
Subclasses	AbstractProvidedPortPrototype , AbstractRequiredPortPrototype			





Class	PortPrototype (abstract)			
Aggregated by	AtpClassifier.atpFeature, SwComponentType.port			
Attribute	Type	Mult.	Kind	Note
clientServer Annotation	ClientServerAnnotation	*	aggr	Annotation of this PortPrototype with respect to client/server communication.
delegatedPort Annotation	DelegatedPortAnnotation	0..1	aggr	Annotations on this delegated port.
ioHwAbstractionServer Annotation	IoHwAbstractionServerAnnotation	*	aggr	Annotations on this IO Hardware Abstraction port.
modePort Annotation	ModePortAnnotation	*	aggr	Annotations on this mode port.
nvDataPort Annotation	NvDataPortAnnotation	*	aggr	Annotations on this non volatile data port.
parameterPort Annotation	ParameterPortAnnotation	*	aggr	Annotations on this parameter port.
senderReceiver Annotation	SenderReceiverAnnotation	*	aggr	Collection of annotations of this ports sender/receiver communication.
triggerPort Annotation	TriggerPortAnnotation	*	aggr	Annotations on this trigger port.

Table C.45: PortPrototype

Class	PostBuildVariantCriterion			
Package	M2::AUTOSARTemplates::GenericStructure::VariantHandling			
Note	This class specifies one particular PostBuildVariantSelector. Tags: atp.recommendedPackage=PostBuildVariantCriteriaions			
Base	ARElement , AObject , AtpDefinition , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
compuMethod	CompuMethod	1	ref	The compuMethod specifies the possible values for the variant criterion serving as an enumerator.

Table C.46: PostBuildVariantCriterion

Primitive	Ref			
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::PrimitiveTypes			
Note	This primitive denotes a name based reference. For detailed syntax see the xsd.pattern. • first slash (relative or absolute reference) [optional] • Identifier [required] • a sequence of slashes and Identifiers [optional] This primitive is used by the meta-model tools to create the references. Tags: xml.xsd.customType=REF xml.xsd.pattern=?[a-zA-Z][a-zA-Z0-9_]{0,127}/([a-zA-Z][a-zA-Z0-9_]{0,127})* xml.xsd.type=string			
Attribute	Type	Mult.	Kind	Note





Primitive	Ref			
base	Identifier	0..1	attr	This attribute reflects the base to be used for this reference. Tags: xml.attribute=true
blueprintValue	String	0..1	attr	This represents a description that documents how the value shall be defined when deriving objects from the blueprint. Tags: atp.Status=draft xml.attribute=true
index	PositiveInteger	0..1	attr	This attribute supports the use case to point on specific elements in an array. This is in particular required if arrays are used to implement particular data objects. The counting of array indices starts with the value 0, i.e. the index of the first array element is 0. Tags: xml.attribute=true

Table C.47: Ref

Class	Referrable (abstract)			
Package	M2::AUTOSARTemplates::GenericStructure::GeneralTemplateClasses::Identifiable			
Note	Instances of this class can be referred to by their identifier (while adhering to namespace borders).			
Base	ARObject			
Subclasses	AtpDefinition, BswDistinguishedPartition, BswModuleCallPoint, BswModuleClientServerEntry, BswVariableAccess, CouplingPortTrafficClassAssignment, DiagnosticEnvModeElement , EthernetPriorityRegeneration, ExclusiveAreaNestingOrder, HwDescriptionEntity, ImplementationProps, LinSlaveConfigIdent, ModeTransition, MultilanguageReferrable , PncMappingIdent, SingleLanguageReferrable , SoConlPduIdentifier, SocketConnectionBundle, TimeSyncServerConfiguration, TpConnectionIdent			
Attribute	Type	Mult.	Kind	Note
shortName	Identifier	1	attr	This specifies an identifying shortName for the object. It needs to be unique within its context and is intended for humans but even more for technical reference. Stereotypes: atpIdentityContributor Tags: xml.enforceMinMultiplicity=true xml.sequenceOffset=-100
shortNameFragment	ShortNameFragment	*	aggr	This specifies how the Referrable.shortName is composed of several shortNameFragments. Tags: xml.sequenceOffset=-90

Table C.48: Referrable

Class	Sdg
Package	M2::MSR::AsamHdo::SpecialData
Note	Sdg (SpecialDataGroup) is a generic model which can be used to keep arbitrary information which is not explicitly modeled in the meta-model. Sdg can have various contents as defined by sdgContentsType. Special Data should only be used moderately since all elements should be defined in the meta-model. Thereby SDG should be considered as a temporary solution when no explicit model is available. If an sdg Caption is available, it is possible to establish a reference to the sdg structure.
Base	ARObject





Class	Sdg			
Aggregated by	AdminData.sdg, BuildActionEnvironment.sdg, BuildActionInvoker.sdg, BuildActionIoElement.sdg, File InfoComment.sdg, RptHook.sdg, SdgContents.sdg, VariationPoint.sdg			
Attribute	Type	Mult.	Kind	Note
gid	NameToken	1	attr	This attributes specifies an identifier. Gid comes from the SGML/XML-Term "Generic Identifier" which is the element name in XML. The role of this attribute is the same as the name of an XML - element. Tags: xml.attribute=true
sdgCaption	SdgCaption	0..1	aggr	This aggregation allows to assign the properties of Identifiable to the sdg. By this, a shortName etc. can be assigned to the Sdg. Stereotypes: atpIdentityContributor Tags: xml.sequenceOffset=20
sdgContents Type	SdgContents	0..1	aggr	This is the content of the Sdg. Tags: xml.roleElement=false xml.roleWrapperElement=false xml.sequenceOffset=30 xml.typeElement=false xml.typeWrapperElement=false

Table C.49: Sdg

Class	SenderReceiverInterface			
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
Note	A sender/receiver interface declares a number of data elements to be sent and received. Tags: atp.recommendedPackage=PortInterfaces			
Base	ARElement , ARObject , AtpBlueprint , AtpBlueprintable , AtpClassifier , AtpType , CollectableElement , DataInterface , Identifiable , MultilanguageReferrable , PackageableElement , PortInterface , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dataElement	VariableDataPrototype	*	aggr	The data elements of this SenderReceiverInterface.
invalidation Policy	InvalidationPolicy	*	aggr	InvalidationPolicy for a particular dataElement
metaDataItem Set	MetaDataItemSet	*	aggr	This aggregation defines fixed sets of meta-data items associated with dataElements of the enclosing Sender ReceiverInterface

Table C.50: SenderReceiverInterface

Class	ServiceNeeds (abstract)			
Package	M2::AUTOSARTemplates::CommonStructure::ServiceNeeds			
Note	This expresses the abstract needs that a Software Component or Basic Software Module has on the configuration of an AUTOSAR Service to which it will be connected. "Abstract needs" means that the model abstracts from the Configuration Parameters of the underlying Basic Software.			
Base	ARObject , Identifiable , MultilanguageReferrable , Referrable			





Class	ServiceNeeds (abstract)			
Subclasses	BswMgrNeeds, ChargeManagerNeeds, ComMgrUserNeeds, CryptoKeyManagementNeeds, CryptoServiceJobNeeds, CryptoServiceNeeds, <i>DiagnosticCapabilityElement</i> , DltUserNeeds, <i>DolpServiceNeeds</i> , EcuStateMgrUserNeeds, ErrorTracerNeeds, FunctionInhibitionAvailabilityNeeds, <i>FunctionInhibitionNeeds</i> , GeneralPurposeTimerServiceNeeds, GlobalSupervisionNeeds, HardwareTestNeeds, IdsMgrCustomTimestampNeeds, IdsMgrNeeds, IndicatorStatusNeeds, J1939DcmDm19Support, J1939RmIncomingRequestServiceNeeds, J1939RmOutgoingRequestServiceNeeds, NvBlockNeeds, SecureOnBoardCommunicationNeeds, SupervisedEntityCheckpointNeeds, SupervisedEntityNeeds, SyncTimeBaseMgrUserNeeds, V2xDataManagerNeeds, V2xFacUserNeeds, V2xMUserNeeds, VendorSpecificServiceNeeds			
Aggregated by	BswServiceDependency.serviceNeeds , SwcServiceDependency.serviceNeeds			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table C.51: ServiceNeeds

Class	SwBaseType			
Package	M2::MSR::AsamHdo::BaseTypes			
Note	This meta-class represents a base type used within ECU software. Tags: atp.recommendedPackage=BaseTypes			
Base	ARElement , ARObject , AtpBlueprint , AtpBlueprintable , BaseType , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

Table C.52: SwBaseType

Class	SwComponentPrototype			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Composition			
Note	Role of a software component within a composition.			
Base	ARObject , AtpFeature , AtpPrototype , Identifiable , MultilanguageReferrable , Referrable			
Aggregated by	AtpClassifier.atpFeature , CompositionSwComponentType.component			
Attribute	Type	Mult.	Kind	Note
type	SwComponentType	0..1	tref	Type of the instance. Stereotypes: isOfType

Table C.53: SwComponentPrototype

Class	SwComponentType (abstract)			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components			
Note	Base class for AUTOSAR software components.			
Base	ARElement , ARObject , AtpBlueprint , AtpBlueprintable , AtpClassifier , AtpType , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Subclasses	AtomicSwComponentType , CompositionSwComponentType , ParameterSwComponentType			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	SwComponentType (abstract)			
consistency Needs	ConsistencyNeeds	*	aggr	This represents the collection of ConsistencyNeeds owned by the enclosing SwComponentType. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=consistencyNeeds.shortName, consistencyNeeds.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
port	PortPrototype	*	aggr	The PortPrototypes through which this SwComponent Type can communicate. The aggregation of PortPrototype is subject to variability with the purpose to support the conditional existence of PortPrototypes. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=port.shortName, port.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
portGroup	PortGroup	*	aggr	A port group being part of this component. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=portGroup.shortName, portGroup.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
swcMapping Constraint	SwComponentMapping Constraints	*	ref	Reference to constraints that are valid for this Sw ComponentType.
swComponent Documentation	SwComponent Documentation	0..1	aggr	This adds a documentation to the SwComponentType. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=swComponentDocumentation, swComponentDocumentation.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=-10
unitGroup	UnitGroup	*	ref	This allows for the specification of which UnitGroups are relevant in the context of referencing SwComponentType.

Table C.54: SwComponentType

Class	SwSystemconst			
Package	M2::MSR::DataDictionary::SystemConstant			
Note	This element defines a system constant which serves an input to select a particular variation point. In particular a system constant serves as an operand of the binding function (swSyscond) in a Variation point. Note that the binding process can only happen if a value was assigned to to the referenced system constants. Tags: atp.recommendedPackage=SwSystemconsts			
Base	ARElement, ARObject, AtpDefinition, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note





Class	SwSystemconst			
swDataDef Props	SwDataDefProps	0..1	aggr	This denotes the data definition properties of the system constant. This supports to express the limits and optionally a conversion within the internal to physical values by a compu method. Stereotypes: atpSplitable Tags: atp.Splitkey=swDataDefProps xml.sequenceOffset=40

Table C.55: SwSystemconst

Class	System			
Package	M2::AUTOSARTemplates::SystemTemplate			
Note	The top level element of the System Description. The System description defines five major elements: Topology, Software, Communication, Mapping and Mapping Constraints. The System element directly aggregates the elements describing the Software, Mapping and Mapping Constraints; it contains a reference to an ASAM FIBEX description specifying Communication and Topology. Tags: atp.recommendedPackage=Systems			
Base	ARElement , ARObject , AtpClassifier , AtpFeature , AtpStructureElement , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable , UploadableDesignElement , UploadablePackageElement			
Aggregated by	ARPackage.element , AtpClassifier.atpFeature			
Attribute	Type	Mult.	Kind	Note
clientId DefinitionSet	ClientIdDefinitionSet	*	ref	Set of Client Identifiers that are used for inter-ECU client-server communication in the System.
containerIPdu HeaderByte Order	ByteOrderEnum	0..1	attr	Defines the byteOrder of the header in ContainerIPdus.
ecuExtract Version	RevisionLabelString	0..1	attr	Version number of the Ecu Extract.
fibexElement	FibexElement	*	ref	Reference to ASAM FIBEX elements specifying Communication and Topology. All Fibex Elements used within a System Description shall be referenced from the System Element. atpVariation: In order to describe a product-line, all Fibex Elements can be optional. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=fibexElement.fibexElement, fibex Element.variationPoint.shortLabel vh.latestBindingTime=postBuild
interpolation Routine MappingSet	InterpolationRoutine MappingSet	*	ref	This reference identifies the InterpolationRoutineMapping Sets that are relevant in the context of the enclosing System.
j1939Shared AddressCluster	J1939SharedAddress Cluster	*	aggr	Collection of J1939Clusters that share a common address space for the routing of messages. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=j1939SharedAddressCluster.shortName, j1939SharedAddressCluster.variationPoint.shortLabel vh.latestBindingTime=postBuild





Class	System			
mapping	SystemMapping	*	aggr	Aggregation of all mapping aspects (mapping of SW components to ECUs, mapping of data elements to signals, and mapping constraints). In order to support OEM / Tier 1 interaction and shared development for one common System this aggregation is atpSplittable and atpVariation. The content of System Mapping can be provided by several parties using different names for the SystemMapping. This element is not required when the System description is used for a network-only use-case. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=mapping.shortName, mapping.variationPoint.shortLabel vh.latestBindingTime=postBuild
pncVectorLength	PositiveInteger	0..1	attr	Length of the partial networking request release information vector (in bytes).
pncVectorOffset	PositiveInteger	0..1	attr	Absolute offset (with respect to the NM-PDU) of the partial networking request release information vector that is defined in bytes as an index starting with 0.
rootSoftwareComposition	RootSwCompositionPrototype	0..1	aggr	Aggregation of the root software composition, containing all software components in the System in a hierarchical structure. This element is not required when the System description is used for a network-only use-case. atpVariation: The RootSwCompositionPrototype can vary. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=rootSoftwareComposition.shortName, rootSoftwareComposition.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime
swCluster	CpSoftwareCluster	*	ref	CP Software Clusters of this System Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=swCluster.cpSoftwareCluster, swCluster.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime
systemDocumentation	Chapter	*	aggr	Possibility to provide additional documentation while defining the System. The System documentation can be composed of several chapters. Stereotypes: atpSplittable; atpVariation Tags: atp.Splitkey=systemDocumentation.shortName, systemDocumentation.variationPoint.shortLabel vh.latestBindingTime=systemDesignTime xml.sequenceOffset=-10
systemVersion	RevisionLabelString	0..1	attr	Version number of the System Description.

Table C.56: System

Class	SystemSignal			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication			
Note	The system signal represents the communication system's view of data exchanged between SW components which reside on different ECUs. The system signals allow to represent this communication in a flattened structure, with exactly one system signal defined for each data element prototype sent and received by connected SW component instances. Tags: atp.recommendedPackage=SystemSignals			
Base	ARElement , ARObject , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
dynamicLength	Boolean	0..1	attr	The length of dynamic length signals is variable in run-time. Only a maximum length of such a signal is specified in the configuration (attribute length in ISignal element).
physicalProps	SwDataDefProps	0..1	aggr	Specification of the physical representation. Stereotypes: atp.Splitable Tags: atp.Splitkey=physicalProps

Table C.57: SystemSignal

Class	Unit			
Package	M2::MSR::AsamHdo::Units			
Note	This is a physical measurement unit. All units that might be defined should stem from SI units. In order to convert one unit into another factor and offset are defined. For the calculation from SI-unit to the defined unit the factor (factorSiToUnit) and the offset (offsetSiToUnit) are applied as follows: $x \{unit\} := y * \{siUnit\} * factorSiToUnit \{unit\} / \{siUnit\} + offsetSiToUnit \{unit\}$ For the calculation from a unit to SI-unit the reciprocal of the factor (factorSiToUnit) and the negation of the offset (offsetSiToUnit) are applied. $y \{siUnit\} := (x * \{unit\} - offsetSiToUnit \{unit\}) / (factorSiToUnit \{unit\} / \{siUnit\})$ Tags: atp.recommendedPackage=Units			
Base	ARElement , ARObject , CollectableElement , Identifiable , MultilanguageReferrable , PackageableElement , Referrable			
Aggregated by	ARPackage.element			
Attribute	Type	Mult.	Kind	Note
displayName	SingleLanguageUnitNames	0..1	aggr	This specifies how the unit shall be displayed in documents or in user interfaces of tools. The displayName corresponds to the Unit.Display in an ASAM MCD-2MC file. Tags: xml.sequenceOffset=20
factorSiToUnit	Float	0..1	attr	This is the factor for the conversion from SI Units to units. The inverse is used for conversion from units to SI Units. Tags: xml.sequenceOffset=30
offsetSiToUnit	Float	0..1	attr	This is the offset for the conversion from and to siUnits. Tags: xml.sequenceOffset=40
physicalDimension	PhysicalDimension	0..1	ref	This association represents the physical dimension to which the unit belongs to. Note that only values with units of the same physical dimensions might be converted. Tags: xml.sequenceOffset=50

Table C.58: Unit

Class	ValueSpecification (abstract)			
Package	M2::AUTOSARTemplates::CommonStructure::Constants			
Note	Base class for expressions leading to a value which can be used to initialize a data object.			
Base	ARObject			
Subclasses	AbstractRuleBasedValueSpecification, ApplicationValueSpecification, CompositeValueSpecification, ConstantReference, NotAvailableValueSpecification, NumericalValueSpecification, ReferenceValueSpecification, TextValueSpecification			
Aggregated by	ApplicationAssocMapElementValueSpecification.key, ApplicationAssocMapElementValueSpecification.value, ArrayValueSpecification.element, CalibrationParameterValue.applInitValue, CalibrationParameterValue.implInitValue, ConstantSpecification.valueSpec, CryptoServiceKey.developmentValue, DiagnosticEnvDataCondition.compareValue, DiagnosticEnvDataElementCondition.compareValue, FieldSenderComSpec.initValue, ISignal.initValue, ISignal.receptionDefaultValue, ISignal.timeoutSubstitutionValue, NonqueuedReceiverComSpec.initValue, NonqueuedReceiverComSpec.timeoutSubstitutionValue, NonqueuedSenderComSpec.initValue, NvProvideComSpec.ramBlockInitValue, NvProvideComSpec.ramBlockInitValue, NvRequireComSpec.initValue, ParameterDataPrototype.initValue, ParameterProvideComSpec.initValue, ParameterRequireComSpec.initValue, PersistencyDataRequiredComSpec.initValue, PersistencyKeyValuePair.initValue, PortDefinedArgumentValue.value, PortPrototypeBlueprintInitValue.value, RecordValueSpecification.field, SomeipEventDeployment.eventReceptionDefaultValue, StateManagementCompareCondition.compareValue, SwDataDefProps.invalidValue, UserDefinedEventDeployment.eventReceptionDefaultValue, VariableDataPrototype.initValue			
Attribute	Type	Mult.	Kind	Note
shortLabel	Identifier	0..1	attr	This can be used to identify particular value specifications for human readers, for example elements of a record type.

Table C.59: ValueSpecification

Class	VariationPoint			
Package	M2::AUTOSARTemplates::GenericStructure::VariantHandling			
Note	This meta-class represents the ability to express a "structural variation point". The container of the variation point is part of the selected variant if swSyscond evaluates to true and each postBuildVariant Criterion is fulfilled.			
Base	ARObject			
Attribute	Type	Mult.	Kind	Note
blueprintCondition	DocumentationBlock	0..1	aggr	This represents a description that documents how the variation point shall be resolved when deriving objects from the blueprint. Note that variationPoints are not allowed within a blueprintCondition. Tags: xml.sequenceOffset=28
desc	MultiLanguageOverviewParagraph	0..1	aggr	This allows to describe shortly the purpose of the variation point. Tags: xml.sequenceOffset=20
formalBlueprintGenerator	BlueprintGenerator	0..1	aggr	This represents a description that documents how the variation point shall be resolved when deriving objects from the blueprint by using ARMQL. Note that variationPoints are not allowed within a formalBlueprintGenerator. Tags: atp.Status=draft xml.sequenceOffset=30
postBuildVariantCondition	PostBuildVariantCondition	*	aggr	This is the set of post build variant conditions which all shall be fulfilled in order to (postbuild) bind the variation point. Tags: xml.sequenceOffset=40





Class	VariationPoint			
sdg	Sdg	0..1	aggr	An optional special data group is attached to every variation point. These data can be used by external software systems to attach application specific data. For example, a variant management system might add an identifier, an URL or a specific classifier. Tags: xml.sequenceOffset=50
shortLabel	Identifier	0..1	attr	This provides a name to the particular variation point to support the RTE generator. It is necessary for supporting splittable aggregations and if binding time is later than codeGenerationTime, as well as some RTE conditions. It needs to be unique with in the enclosing Identifiables with the same ShortName. Stereotypes: atpIdentityContributor Tags: xml.sequenceOffset=10
swSyscond	ConditionByFormula	0..1	aggr	This condition acts as Binding Function for the Variation Point. Note that the multiplicity is 0..1 in order to support pure postBuild variants. Tags: xml.sequenceOffset=30

Table C.60: VariationPoint

D Glossary

Artifact This is a Work Product Definition that provides a description and definition for tangible work product types. Artifacts may be composed of other artifacts ([26]).

At a high level, an artifact is represented as a single conceptual file.

AUTOSAR Tool This is a software tool which supports one or more tasks defined as AUTOSAR tasks in the methodology. Depending on the supported tasks, an AUTOSAR tool can act as an authoring tool, a converter tool, a processor tool or as a combination of those (see separate definitions).

AUTOSAR Authoring Tool An AUTOSAR Tool used to create and modify AUTOSAR XML Descriptions. Example: System Description Editor.

AUTOSAR Converter Tool An AUTOSAR Tool used to create AUTOSAR XML files by converting information from other AUTOSAR XML files. Example: ECU Flattener

AUTOSAR Definition This is the definition of parameters which can have values. One could say that the parameter values are Instances of the definitions. But in the meta model hierarchy of AUTOSAR, definitions are also instances of the meta model and therefore considered as a description. Examples for AUTOSAR definitions are: [PortPrototype](#), [PostBuildVariantCriterion](#), [SwSystem-const](#).

AUTOSAR XML Description In AUTOSAR this means "filled Template". In fact an AUTOSAR XML description is the XML representation of an AUTOSAR model.

The AUTOSAR XML description can consist of several files. Each individual file represents an AUTOSAR partial model and shall validate successfully against the AUTOSAR XML schema.

AUTOSAR Meta-Model This is an UML2.0 model that defines the language for describing AUTOSAR systems. The AUTOSAR meta-model is an UML representation of the AUTOSAR templates. UML2.0 class diagrams are used to describe the attributes and their interrelationships. Stereotypes, UML tags and OCL expressions (object constraint language) are used for defining specific semantics and constraints.

AUTOSAR Meta-Model Tool The AUTOSAR Meta-Model Tool is the tool that generates different views (class tables, list of constraints, diagrams, XML Schema etc.) on the AUTOSAR meta-model.

AUTOSAR Model This is a representation of an AUTOSAR product. The AUTOSAR model represents aspects suitable to the intended use according to the AUTOSAR methodology.

Strictly speaking, this is an instance of the AUTOSAR meta-model. The information contained in the AUTOSAR model can be anything that is representable according to the AUTOSAR meta-model.

AUTOSAR Partial Model In AUTOSAR, the possible partitioning of models is marked in the meta-model by `<<atpSplittable>>`. One partial model is represented in an AUTOSAR XML description by one file. The partial model does not need to fulfill all semantic constraints applicable to an AUTOSAR model.

AUTOSAR Processor Tool An AUTOSAR Tool used to create non-AUTOSAR files by processing information from AUTOSAR XML files. Example: RTE Generator

AUTOSAR Specification Element An AUTOSAR Specification Element is a named element that is part of an AUTOSAR specification. Examples: requirement, constraint, specification item, class or attribute in the meta model, methodology, deliverable, methodology activity, model element, bsw module etc.

AUTOSAR Template The term "Template" is used in AUTOSAR to describe the format different kinds of descriptions. The term template comes from the idea, that AUTOSAR defines a kind of form which shall be filled out in order to describe a model. The filled form is then called the description.

In fact the AUTOSAR templates are now defined as a meta-model.

AUTOSAR Validation Tool A specialized `AUTOSAR Tool` which is able to check an AUTOSAR model against the rules defined by a profile.

AUTOSAR XML Schema This is a W3C XML schema that defines the language for exchanging AUTOSAR models. This Schema is derived from the AUTOSAR meta-model. The AUTOSAR XML Schema defines the AUTOSAR data exchange format.

Blueprint This is a model from which other models can be derived by copy and refinement. Note that in contrast to meta model resp. types, this process is *not* an instantiation.

Instance Generally this is a particular exemplar of a model or of a type.

Life Cycle Life Cycle is the course of development/evolutionary stages of a model element during its life time.

Meta-Model This defines the building blocks of a model. In that sense, a Meta-Model represents the language for building models.

Meta-Data This includes pertinent information about data, including information about the authorship, versioning, access-rights, timestamps etc.

Model A Model is an simplified representation of reality. The model represents the aspects suitable for an intended purpose.

Partial Model This is a part of a model which is intended to be persisted in one particular artifact.

Pattern in GST This is an approach to simplify the definition of the meta model by applying a model transformation. This transformation creates an enhanced model out of an annotated model.

Profile Authoring Support Data Data that is used for efficient authoring of a profile. E.g. list of referable constraints, meta-classes, meta-attributes or other reusable model assets (blueprints)

Profile Authoring Tool A specialized AUTOSAR Tool which focuses on the authoring of profiles for data exchange points. It e.g. provides support for the creation of profiles from scratch, modification of existing profiles or composition of existing profiles.

Profile Compatibility Checker Tool A specialized AUTOSAR Tool which focuses on checking the compatibility of profiles for data exchange. Note that this compatibility check includes manual compatibility checks by engineers and automated assistance using more formal algorithms.

Profile Consistency Checker Tool A specialized AUTOSAR Tool which focuses on checking the consistency of profiles.

Property A property is a structural feature of an object. As an example a "connector" has the properties "receive port" and "send port"

Properties are made variant by the `<<atpVariation>>`.

Prototype This is the implementation of a role of a type within the definition of another type. In other words a type may contain Prototypes that in turn are typed by "Types". Each one of these prototypes becomes an instance when this type is instantiated.

Type A type provides features that can appear in various roles of this type.

Value This is a particular value assigned to a "Definition".

Variability Variability of a system is its quality to describe a set of variants. These variants are characterized by variant specific property settings and / or selections. As an example, such a system property selection manifests itself in a particular "receive port" for a connection.

This is implemented using the `<<atpVariation>>`.

Variant A system variant is a concrete realization of a system, so that all its properties have been set respectively selected. The software system has no variability anymore with respect to the binding time.

This is implemented using `EvaluatedVariantSet`.

Variation Binding A variant is the result of a variation binding process that resolves the variability of the system by assigning particular values/selections to all the system's properties.

This is implemented by `VariationPoint`.

Variation Binding Time The variation binding time determines the step in the methodology at which the variability given by a set of variable properties is resolved.

This is implemented by `vh.LatestBindingtime` at the related properties.

Variation Definition Time The variation definition time determines the step in the methodology at which the variation points are defined.

Variation Point A variation point indicates that a property is subject to variation. Furthermore, it is associated with a condition and a binding time which define the system context for the selection / setting of a concrete variant.

This is implemented by `VariationPoint`.

E Change history of AUTOSAR traceable items

E.1 Traceable item history of this document according to AUTOSAR Release R4.2.1

E.1.1 Added Specification Items in R4.2.1

Number	Heading
[TPS_DEXT_01000]	AUTOSAR diagnostics supports two kinds of data identifiers
[TPS_DEXT_01001]	Definition of a fixed-sized array
[TPS_DEXT_01002]	Definition of a variable-sized array
[TPS_DEXT_01003]	<code>DiagnosticContributionSet</code> is the central part of the <code>DiagnosticExtract</code>
[TPS_DEXT_01004]	<code>DiagnosticContributionSet</code> defines the scope of the <code>DiagnosticExtract</code>
[TPS_DEXT_01005]	<code>DiagnosticContributionSet</code> can exist independently
[TPS_DEXT_01006]	The role of <code>DiagnosticServiceTables</code> in the context of a <code>DiagnosticContributionSet</code>
[TPS_DEXT_01007]	Common properties of a <code>DiagnosticExtract</code>
[TPS_DEXT_01008]	<code>DiagnosticContributionSet</code> defines the scope for the application of the common diagnostic properties
[TPS_DEXT_01009]	Limited support for the configuration of custom diagnostic services
[TPS_DEXT_01010]	Configuration of custom diagnostic services
[TPS_DEXT_01011]	Semantics of <code>DiagnosticSession.id</code>
[TPS_DEXT_01012]	Rationale for the modeling of the multiplicity of <code>DiagnosticAccessPermission.securityLevel</code>
[TPS_DEXT_01013]	Specification of sub-functions by means of attribute <code>DiagnosticServiceInstance.category</code>
[TPS_DEXT_01014]	Possible values of the <code>category</code> attribute for diagnostic services
[TPS_DEXT_01015]	Meaning of attributes of <code>DiagnosticIOControl</code>
[TPS_DEXT_01016]	The capability <code>returnControlToEcu</code>
[TPS_DEXT_01017]	Meaning of <code>DiagnosticIOControl.dataIdentifier</code>
[TPS_DEXT_01018]	<code>InputOutputControl</code> does not define any sub-functions
[TPS_DEXT_01019]	Correspondence of <code>category</code> values to numerical values mentioned in the ISO 14229-1
[TPS_DEXT_01020]	Manufacturer-specific values for sub-functions of service <code>EcuReset</code>
[TPS_DEXT_01021]	Semantics of <code>DiagnosticEcuReset.customSubFunctionNumber</code>
[TPS_DEXT_01022]	<code>ClearDiagnosticInformation</code> does not define any sub-functions
[TPS_DEXT_01023]	<code>WriteMemoryByAddress</code> does not define any sub-functions
[TPS_DEXT_01024]	<code>ReadMemoryByAddress</code> does not define any sub-functions
[TPS_DEXT_01025]	<code>TransferExit</code> does not define any sub-functions
[TPS_DEXT_01026]	<code>DataTransfer</code> does not define any sub-functions





Number	Heading
[TPS_DEXT_01027]	RequestDownload does not define any sub-functions
[TPS_DEXT_01028]	RequestUpload does not define any sub-functions
[TPS_DEXT_01029]	Correspondence of <code>category</code> values to numerical values mentioned in the ISO 14229-1
[TPS_DEXT_01030]	Manufacturer-specific values for sub-functions of service <code>CommunicationControl</code>
[TPS_DEXT_01031]	Semantics of <code>DiagnosticComControl.customSubFunctionNumber</code>
[TPS_DEXT_01032]	Impact of the <code>DiagnosticComControlClass</code> on the state management for <code>CommunicationClusters</code>
[TPS_DEXT_01033]	Semantics of triggers in the context of a <code>DiagnosticResponseOnEvent</code>
[TPS_DEXT_01034]	Sub-functions of the service <code>ReadDTCInformation</code>
[TPS_DEXT_01035]	Existence of <code>DiagnosticRoutine.stop</code> and <code>DiagnosticRoutine.requestResult</code>
[TPS_DEXT_01036]	Work-flow within the execution of the diagnostic service <code>SecurityAccess</code>
[TPS_DEXT_01037]	Semantics of <code>DiagnosticSecurityAccess.requestSeedId</code>
[TPS_DEXT_01038]	Motivation for making the reference <code>DiagnosticSecurityAccess.securityLevel</code> <<atpSplittable>>
[TPS_DEXT_01039]	Identification of the sub-function of <code>DiagnosticSessionControl</code>
[TPS_DEXT_01040]	Use case where the <code>DiagnosticExtract</code> refers to software-components
[TPS_DEXT_01041]	Semantics of attribute <code>DiagnosticServiceDataMapping.diagnosticDataElement</code>
[TPS_DEXT_01042]	Dem uses <code>DiagnosticServiceDataMapping</code>
[TPS_DEXT_01043]	Purpose of <code>DiagnosticServiceSwMapping</code>
[TPS_DEXT_01044]	<code>BswServiceDependency</code> needs to act as the target of a reference
[TPS_DEXT_01045]	Supported diagnostic services
[TPS_DEXT_01046]	ECU configuration is not suitable to be exchanged between partners in an ECU development project
[TPS_DEXT_01047]	Differences in the development processes for diagnostics at automotive OEMs and ECU suppliers
[TPS_DEXT_01048]	Actual algorithm for the diagnostic event debouncing
[TPS_DEXT_01049]	Consistency of <code>DiagnosticServiceSwMapping</code> with respect to routine IDs
[TPS_DEXT_01050]	Consistency of <code>DiagnosticServiceSwMapping</code> with respect to data IDs
[TPS_DEXT_01051]	Consistency of <code>DiagnosticServiceSwMapping</code> with respect to data IDs
[TPS_DEXT_01052]	Existence of attribute <code>DiagnosticServiceInstance.accessPermission</code>
[TPS_DEXT_01053]	Existence of <code>DiagnosticSecurityAccess.securityLevel</code>
[TPS_DEXT_01054]	Existence of <code>DiagnosticDataByIdentifier.dataIdentifier</code>
[TPS_DEXT_01055]	Standardized values of <code>DiagnosticContributionSet.category</code>
[TPS_DEXT_01056]	Applicable values for <code>DiagnosticEcuReset.category</code>
[TPS_DEXT_01057]	Allowed values of <code>DiagnosticComControl.category</code>
[TPS_DEXT_01058]	Standardized values for <code>DiagnosticDynamicallyDefineDataIdentifier.category</code>





Number	Heading
[TPS_DEXT_01059]	Applicable values for DiagnosticPeriodicRate.category
[TPS_DEXT_01060]	Applicable values for DiagnosticReadDTCInformation.category
[TPS_DEXT_01061]	Supported scenarios for the definition of <i>access permission</i>
[TPS_DEXT_01062]	Existence of DiagnosticServiceClass.accessPermissionValidity in an incomplete model
[TPS_DEXT_01063]	Existence of DiagnosticServiceClass.accessPermissionValidity in a complete model
[TPS_DEXT_01064]	Textually formulated content attached to DiagnosticTroubleCode
[TPS_DEXT_01065]	Different approaches to provide semi-formal textual content attached to a DiagnosticTroubleCode
[TPS_DEXT_01066]	Standardized values of DiagnosticTroubleCode.introduction.trace
[TPS_DEXT_01067]	Textually formulated content attached to DiagnosticEvent
[TPS_DEXT_01068]	Textual description with respect to the DiagnosticEvent
[TPS_DEXT_01069]	Standardized values of DiagnosticEvent.introduction.structuredReq
[TPS_DEXT_01070]	Description of textually semi-formal formulated pre- and post-conditions for the validity of DiagnosticAccessPermission
[TPS_DEXT_01071]	Standardized values of DiagnosticAccessPermission.introduction.structuredReq
[TPS_DEXT_01072]	Purpose of attribute DiagnosticDataIdentifier.representsVin
[TPS_DEXT_01073]	Diagnostic properties that are specific to an individual EcuInstance
[TPS_DEXT_01074]	Difference between the attributes DiagnosticComControl.specificChannel and DiagnosticComControl.subNodeChannel
[TPS_DEXT_01075]	standardized values for the attribute DiagnosticControlDTCSetting.category
[TPS_DEXT_01076]	Identification of sub-functions of diagnostic service ControlDTCSetting
[TPS_DEXT_01077]	Modeling of DiagnosticRoutine
[TPS_DEXT_01078]	Not possible to use the attribute category for the identification of the sub-function of diagnostic service RoutineControl
[TPS_DEXT_01079]	Modeling of the arguments to a DiagnosticRoutine
[TPS_DEXT_01080]	Diagnostic Routine needs to be started
[TPS_DEXT_01081]	Modeling of DiagnosticSessionControl
[TPS_DEXT_01082]	Existence of DiagnosticSessionControl.diagnosticSession
[TPS_DEXT_01083]	Semantics of a DiagnosticEvent
[TPS_DEXT_01084]	DiagnosticEvent can be connected to one or multiple indicators
[TPS_DEXT_01085]	Semantics of DiagnosticConditionGroups
[TPS_DEXT_01086]	Reference to DiagnosticOperationCycle
[TPS_DEXT_01087]	Semantics of DiagnosticOperationCycle
[TPS_DEXT_01088]	Semantics of DiagnosticRoutine.id
[TPS_DEXT_01089]	Definition of an <i>identifier</i> of a DiagnosticIOControl





Number	Heading
[TPS_DEXT_01090]	Diagnostic service <code>RequestFileTransfer</code> does not define any sub-functions
[TPS_DEXT_03000]	ISO 14229-1 reserves values of <code>DiagnosticTroubleCodeGroup.group-Number</code>
[TPS_DEXT_03001]	Different types of conditions
[TPS_DEXT_03002]	Two kind of mappings
[TPS_DEXT_03003]	Semantics of <code>DiagnosticEventToTroubleCodeUdsMapping</code>
[TPS_DEXT_03004]	<code>DiagnosticEvent</code> and <code>DiagnosticDebounceAlgorithmProps</code>
[TPS_DEXT_03005]	Existence of <code>DiagnosticEventToDebounceAlgorithmMapping</code>
[TPS_DEXT_03006]	Values of the individual <code>DiagnosticStorageConditions</code>
[TPS_DEXT_03007]	Semantics of <code>DiagnosticEventPortMapping</code>
[TPS_DEXT_03008]	Semantics of <code>DiagnosticExtendedDataRecord</code>
[TPS_DEXT_03009]	Semantics of <code>DiagnosticFreezeFrame</code>
[TPS_DEXT_03010]	Combination of <code>DiagnosticConditions</code> to <code>DiagnosticCondition-Groups</code>
[TPS_DEXT_03011]	Clearing request for a <code>DiagnosticEvent</code>
[TPS_DEXT_03012]	Three kinds of DTCs
[TPS_DEXT_03013]	Common properties of a DTC
[TPS_DEXT_03014]	Semantics of <code>DiagnosticTroubleCodeGroup</code>
[TPS_DEXT_03015]	<code>EnableConditions</code> have to be put into a <code>DiagnosticEnableCondition-Group</code>
[TPS_DEXT_03016]	<code>StorageConditions</code> have to be put into a <code>DiagnosticStorageCondition-Group</code>
[TPS_DEXT_03017]	Semantics of <code>DiagnosticOperationCyclePortMapping</code>
[TPS_DEXT_03018]	Semantics of <code>DiagnosticEnableConditionPortMapping</code>
[TPS_DEXT_03019]	Semantics of <code>DiagnosticStorageConditionPortMapping</code>
[TPS_DEXT_03020]	Semantics of <code>DiagnosticDemProvidedDataMapping</code>
[TPS_DEXT_03021]	Aging
[TPS_DEXT_03022]	Different kinds of <code>DiagnosticIndicators</code>

Table E.1: Added Specification Items in 4.2.1

E.1.2 Added Constraints in R4.2.1

Number	Heading
[constr_1324]	Existence of attribute <code>DiagnosticDataIdentifier.representsVin</code>
[constr_1325]	Allowed attributes of <code>SwDataDefProps</code> for <code>DiagnosticDataElement.sw-DataDefProps</code>
[constr_1326]	Existence of a variable-sized array





Number	Heading
[constr_1327]	Multiplicity of DiagnosticContributionSet.ecuInstance
[constr_1328]	Consistency of DiagnosticContributionSet.ecuInstance and DiagnosticServiceTable.ecuInstance
[constr_1329]	Existence of concrete sub-classes of DiagnosticServiceClass in the context created by a DiagnosticContributionSet
[constr_1330]	Custom service identifier shall not overlap with standardized service identifiers
[constr_1331]	Existence of DiagnosticEcuReset.customSubFunctionNumber
[constr_1332]	Value range for DiagnosticEcuReset.customSubFunctionNumber
[constr_1333]	Existence of DiagnosticMemoryIdentifier.memoryLowAddress and DiagnosticMemoryIdentifier.memoryHighAddress
[constr_1334]	Existence of DiagnosticComControl.customSubFunctionNumber
[constr_1335]	Possible values for DiagnosticComControl.customSubFunctionNumber
[constr_1336]	Applicable value range for DiagnosticComControlSpecificChannel.subnetNumber
[constr_1337]	Allowed value range for attribute DiagnosticComControlSubNodeChannel.subNodeNumber
[constr_1338]	Maximum number of aggregated DiagnosticReadDataByPeriodicIDClass.periodicRate
[constr_1339]	Existence of DiagnosticRoutine.start
[constr_1340]	Consistency of DiagnosticServiceSwMapping with respect to synchronously called DiagnosticRoutines
[constr_1341]	Consistency of DiagnosticServiceSwMapping with respect to asynchronously called DiagnosticRoutines
[constr_1342]	Possible values for DiagnosticSecurityAccess.requestSeedId
[constr_1343]	Simultaneous existence of the attributes DiagnosticServiceDataMapping.diagnosticDataElement and DiagnosticDataByIdentifier.dataIdentifier
[constr_1344]	Condition for the identification of data types of attributes DiagnosticServiceDataMapping.mappedDataElement and DiagnosticServiceDataMapping.diagnosticDataElement
[constr_1345]	DiagnosticDataElement shall not (finally) be aggregated by a DiagnosticRoutine
[constr_1346]	Allowed values of DiagnosticServiceSwMapping.serviceInstance
[constr_1347]	Existence of attributes of DiagnosticServiceSwMapping
[constr_1349]	Value of udsDtcValue shall be unique
[constr_1350]	Value of DiagnosticTroubleCodeGroup.groupNumber shall be unique
[constr_1351]	Value of DiagnosticTroubleCodeGroup.groupNumber
[constr_1352]	Existence of maxNumberFreezeFrameRecords vs. freezeFrame
[constr_1353]	Applicability of [constr_1352]
[constr_1354]	Existence of attribute DiagnosticTroubleCodeProps.freezeFrameContent
[constr_1355]	Value of recordNumber
[constr_1356]	Value of recordNumber shall be unique
[constr_1357]	Value of recordNumber





Number	Heading
[constr_1358]	Value of <code>recordNumber</code> shall be unique
[constr_1359]	Existence of attribute <code>DiagnosticDebounceAlgorithmProps.debounceCounterStorage</code>
[constr_1360]	Usage of <code>DiagEventDebounceMonitorInternal</code> is not supported in the context of <code>DiagnosticDebounceAlgorithmProps</code>
[constr_1361]	Number of <code>DiagnosticEventToEnableConditionGroupMapping</code> elements per <code>DiagnosticEvent</code>
[constr_1362]	Number of <code>DiagnosticEventToStorageConditionGroupMapping</code> elements per <code>DiagnosticEvent</code>
[constr_1365]	Multiplicity of <code>DiagnosticResponseOnEvent.event</code>
[constr_1366]	Event ID in the context of diagnostic service <code>ResponseOnEvent</code> shall be unique
[constr_1376]	Multiplicity of reference <code>DiagnosticTroubleCodeProps.memoryDestination</code>
[constr_1377]	Existence of reference <code>DiagnosticTroubleCodeProps.memoryDestination</code>
[constr_1378]	Value of <code>DiagnosticMemoryDestinationUserDefined.memoryId</code>
[constr_1379]	Existence of <code>DiagnosticMemoryDestinationPrimary</code>
[constr_1380]	Existence of <code>DiagnosticMemoryDestinationMirror</code>

Table E.2: Added Constraints in R4.2.1

E.2 Traceable item history of this document according to AUTOSAR Release R4.2.2

E.2.1 Added Traceables in R4.2.2

none

E.2.2 Changed Traceables in R4.2.2

none

E.2.3 Deleted Traceables in R4.2.2

none

E.2.4 Added Constraints in R4.2.2

Number	Heading
[constr_1394]	Value of <code>DiagnosticDataElement.maxNumberOfElements</code> depending on its existence

Table E.3: Added Constraints in R4.2.2

E.2.5 Changed Constraints in R4.2.2

none

E.2.6 Deleted Constraints in R4.2.2

none

E.3 Traceable item history of this document according to AUTOSAR Release R4.3.0

E.3.1 Added Traceables in R4.3.0

Number	Heading
[TPS_DEXT_01091]	Relation between a <code>DiagnosticServiceTable</code> and one or more <code>DiagnosticConnections</code>
[TPS_DEXT_01092]	Semantics of <code>DiagnosticParameterIdentifier</code>
[TPS_DEXT_01093]	Definition of legislative freeze frame for WWHH-OBd
[TPS_DEXT_01094]	Semantics of meta-class <code>DiagnosticTroubleCodeUdsToTroubleCodeObdMapping</code>
[TPS_DEXT_01095]	Definition of “alias” diagnostic event for the creation of a Fim configuration in the diagnostic extract
[TPS_DEXT_01096]	Semantics of <code>DiagnosticFunctionInhibitSource</code>
[TPS_DEXT_01097]	Standardized value of <code>StructuredReq.category</code> for the modeling of <code>DiagnosticFunctionInhibitSource</code>
[TPS_DEXT_01098]	Semantics of attribute <code>DiagnosticFunctionInhibitSource.event</code>
[TPS_DEXT_01099]	Semantics of attribute <code>DiagnosticFunctionInhibitSource.eventGroup</code>
[TPS_DEXT_01100]	Consequence of the existence of <code>DiagnosticFimAliasEventMapping</code>
[TPS_DEXT_01101]	Consequence of the existence of <code>DiagnosticFimAliasEventGroupMapping</code>





Number	Heading
[TPS_DEXT_01102]	Semantics of DiagnosticFimFunctionMapping
[TPS_DEXT_01103]	Semantics of meta-class DiagnosticJ1939SpnMapping
[TPS_DEXT_01104]	Difference between DiagnosticJ1939FreezeFrame and DiagnosticJ1939ExpandedFreezeFrame
[TPS_DEXT_01105]	Relation of DiagnosticJ1939Spn to DiagnosticJ1939FreezeFrame and DiagnosticJ1939ExpandedFreezeFrame
[TPS_DEXT_01106]	Relation of Controller Application to SPN
[TPS_DEXT_01107]	Definition of service-only DTC
[TPS_DEXT_01108]	Purpose of the DiagnosticJ1939SwMapping
[TPS_DEXT_01110]	Standardized values of DiagnosticJumprGroup.category
[TPS_DEXT_01111]	Legislative freeze frame for the OBD-II case
[TPS_DEXT_01112]	Definition of a diagnostic trouble code for the implementation of WWH-OBD
[TPS_DEXT_01113]	Evaluation of a DiagnosticEnvConditionFormula
[TPS_DEXT_01114]	DiagnosticEnvConditionFormula that has no parts
[TPS_DEXT_01115]	DiagnosticEnvConditionFormula that has one part
[TPS_DEXT_01116]	DiagnosticEnvConditionFormula that has more than one part
[TPS_DEXT_01117]	Semantics of DiagnosticEnvConditionFormula.nrcValue
[TPS_DEXT_01118]	Semantics of DiagnosticEnvDataCondition
[TPS_DEXT_01119]	Semantics of DiagnosticEnvModeCondition
[TPS_DEXT_01120]	Comparison of the value of a ModeDeclarationGroupPrototype with a ModeDeclaration
[TPS_DEXT_01121]	Semantics of DiagnosticFunctionIdentifier
[TPS_DEXT_01122]	Indication whether a EcuInstance supports OBD
[TPS_DEXT_01124]	Semantics of meta-class DiagnosticProtocol
[TPS_DEXT_01125]	Support for diagnostic service RequestCurrentPowertrainDiagnosticData
[TPS_DEXT_01126]	Support of OBD service RequestPowertrainFreezeFrameData
[TPS_DEXT_01127]	Semantics of meta-class DiagnosticRequestEmissionRelatedDTC
[TPS_DEXT_01128]	Semantics of meta-class DiagnosticClearResetEmissionRelatedInfo
[TPS_DEXT_01129]	Support for OBD diagnostic service RequestOnBoardMonitoringTestResults
[TPS_DEXT_01130]	Support of OBD diagnostic service RequestControlOfOnBoardDevice
[TPS_DEXT_01131]	Support for OBD diagnostic service RequestVehicleInformation
[TPS_DEXT_01132]	Support for OBD diagnostic service RequestEmissionRelatedDiagnosticTroubleCodesPermanentStatus
[TPS_DEXT_01133]	Support for WWH-OBD within the diagnostic extract
[TPS_DEXT_01134]	Definition of a DiagnosticDataElement used in the context of a DID obtained by sender-receiver communication
[TPS_DEXT_01135]	Definition of a DiagnosticDataElement used in the context of a DID obtained by client/server communication
[TPS_DEXT_01136]	Definition of a DiagnosticDataElement used in the context of a diagnostic routine





Number	Heading
[TPS_DEXT_01137]	Applicability of DiagnosticDataIdentifier.didSize
[TPS_DEXT_01138]	Applicability of DiagnosticDataIdentifier.supportInfoByte
[TPS_DEXT_01139]	Semantics of the references from DiagnosticAccessPermission

Table E.4: Added Traceables in 4.3.0

E.3.2 Changed Traceables in R4.3.0

Number	Heading
[TPS_DEXT_01006]	The role of DiagnosticServiceTables
[TPS_DEXT_01052]	Existence of attribute DiagnosticServiceInstance.accessPermission
[TPS_DEXT_01060]	Applicable values for DiagnosticReadDTCInformation.category
[TPS_DEXT_01074]	Difference between the attributes DiagnosticComControlClass.specificChannel and DiagnosticComControlClass.subNodeChannel
[TPS_DEXT_03003]	Semantics of DiagnosticEventToTroubleCodeUdsMapping

Table E.5: Changed Traceables in R4.3.0

E.3.3 Deleted Traceables in R4.3.0

Number	Heading
[TPS_DEXT_01058]	Standardized values for DiagnosticDynamicallyDefineDataIdentifier.category
[TPS_DEXT_01059]	Applicable values for DiagnosticPeriodicRate.category

Table E.6: Deleted Traceables in R4.3.0

E.3.4 Added Constraints in R4.3.0

Number	Heading
[constr_1405]	Value of DiagnosticProtocol.serviceTable vs. DiagnosticServiceTable.protocolKind
[constr_1406]	DiagnosticServiceTable.diagnosticConnection vs. DiagnosticProtocol.diagnosticConnection
[constr_1411]	Existence of DiagnosticMemoryIdentifier.memoryHighAddressLabel vs. DiagnosticMemoryIdentifier.memoryHighAddress





Number	Heading
[constr_1412]	Existence of DiagnosticMemoryIdentifier.memoryLowAddressLabel vs. DiagnosticMemoryIdentifier.memoryLowAddress
[constr_1419]	Value of DiagnosticSecurityLevel.accessDataRecordSize
[constr_1421]	Consistency of DiagnosticDynamicallyDefineDataIdentifierClass.sub-function
[constr_1435]	Debouncing in the presence of a DiagnosticEventPortMapping
[constr_1447]	Restrictions for the value of DiagnosticParameterIdentifier.id
[constr_1448]	Interval of DiagnosticParameterIdentifier.id
[constr_1449]	PID shall only carry a fixed-length collection of data
[constr_1450]	Service mapping for OBD mode 0x01 for DiagnosticParameterIdentifier
[constr_1451]	Service mapping for OBD mode 0x09 for DiagnosticInfoType
[constr_1452]	Service mapping for OBD mode 0x08 for DiagnosticInfoType
[constr_1453]	References from DiagnosticFunctionInhibitSource
[constr_1454]	DiagnosticFimFunctionMapping shall only reference a SwcServiceDependency that aggregates FunctionInhibitionNeeds
[constr_1455]	Relation of DiagnosticJ1939Node to J1939NmNode
[constr_1456]	Valid interval for attribute DiagnosticTroubleCodeJ1939.fmi
[constr_1457]	Service-only DTCs shall refer to a common memory section
[constr_1458]	Reference to DiagnosticMemoryDestination
[constr_1459]	Existence of attributes of DiagnosticTroubleCodeProps
[constr_1460]	Restrictions for the value of DiagnosticInfoType.id
[constr_1461]	Restrictions for the value of DiagnosticTestRoutineIdentifier.id
[constr_1462]	Restrictions for the value of DiagnosticTestResult.testIdentifier.id
[constr_1464]	Allowed value range of DiagnosticEnvConditionFormula.nrcValue
[constr_1465]	Allowed values of compareType in the context of a DiagnosticEnvDataCondition
[constr_1466]	Allowed values of compareType in the context of a DiagnosticEnvModeCondition
[constr_1467]	References in DiagnosticEnvModeCondition
[constr_1470]	Value of DiagnosticParameter.bitOffset
[constr_1471]	Existence of DiagnosticDataIdentifier.didSize
[constr_1472]	Existence of DiagnosticDataIdentifier.supportInfoByte

Table E.7: Added Constraints in R4.3.0

E.3.5 Changed Constraints in R4.3.0

Number	Heading
[constr_1325]	Allowed attributes of <code>SwDataDefProps</code> for <code>DiagnosticDataElement.swDataDefProps</code>
[constr_1327]	Multiplicity of <code>DiagnosticEcuInstanceProps.ecuInstance</code>
[constr_1328]	Consistency of <code>DiagnosticEcuInstanceProps.ecuInstance</code> and <code>DiagnosticServiceTable.ecuInstance</code>

Table E.8: Changed Constraints in R4.3.0

E.3.6 Deleted Constraints in R4.3.0

none

E.4 Traceable item history of this document according to AUTOSAR Release R4.3.1

E.4.1 Added Specification Items in 4.3.1

Number	Heading
[TPS_DEXT_01140]	Values contained in <code>DiagnosticExtract</code> shall be taken for the derivation of basic software modules

Table E.9: Added Specification Items in 4.3.1

E.4.2 Changed Specification Items in 4.3.1

Number	Heading
[TPS_DEXT_01087]	Semantics of <code>DiagnosticOperationCycle</code>

Table E.10: Changed Specification Items in 4.3.1

E.4.3 Deleted Specification Items in 4.3.1

Number	Heading
[TPS_DEXT_01073]	Diagnostic properties that are specific to an individual <code>EcuInstance</code>

Table E.11: Deleted Specification Items in 4.3.1

E.4.4 Added Constraints in 4.3.1

Number	Heading
[constr_1509]	<code>extendedDataRecord.recordNumber</code> shall be unique within primary fault memory
[constr_1510]	<code>extendedDataRecord.recordNumber</code> shall be unique within mirror fault memory
[constr_1511]	<code>extendedDataRecord.recordNumber</code> shall be unique within user-defined fault memory
[constr_1512]	<code>freezeFrame.recordNumber</code> shall be unique within primary fault memory
[constr_1513]	<code>freezeFrame.recordNumber</code> shall be unique within mirror fault memory
[constr_1514]	<code>freezeFrame.recordNumber</code> shall be unique within user-defined fault memory
[constr_1515]	Reference from <code>DiagnosticRoutineControl</code> to <code>DiagnosticAccessPermission</code> has no meaning

Table E.12: Added Constraints in 4.3.1

E.4.5 Changed Constraints in 4.3.1

Number	Heading
[constr_1325]	Allowed attributes of <code>SwDataDefProps</code> for <code>DiagnosticDataElement.swDataDefProps</code>
[constr_1450]	Service mapping for ODB mode 0x01 for <code>DiagnosticParameterIdentifier</code>
[constr_1451]	Service mapping for OBD mode 0x09 for <code>DiagnosticInfoType</code>

Table E.13: Changed Constraints in 4.3.1

E.4.6 Deleted Constraints in 4.3.1

Number	Heading
[constr_1356]	Value of <code>recordNumber</code> shall be unique
[constr_1358]	Value of <code>recordNumber</code> shall be unique

Table E.14: Deleted Constraints in 4.3.1

E.5 Traceable item history of this document according to AUTOSAR Release R4.4.0

E.5.1 Added Specification Items in 4.4.0

Number	Heading
[TPS_DEXT_01141]	Definition of a collection of test results
[TPS_DEXT_01142]	Standardized values for <code>DiagnosticDemProvidedDataMapping.dataProvider</code>
[TPS_DEXT_01143]	Definition of a custom trigger for an extended data record
[TPS_DEXT_01144]	Definition of a custom trigger for a freeze frame
[TPS_DEXT_01145]	Semantics of meta-class <code>DiagnosticEventToTrouble-CodeJ1939Mapping</code>
[TPS_DEXT_01146]	Support for service <code>ReadScalingDataByIdentifier</code> (0x24)

Table E.15: Added Specification Items in 4.4.0

E.5.2 Changed Specification Items in 4.4.0

Number	Heading
[TPS_DEXT_01004]	<code>DiagnosticContributionSet</code> defines the scope of the <code>DiagnosticExtract</code>
[TPS_DEXT_01041]	Semantics of attribute <code>DiagnosticServiceDataMapping.diagnosticDataElement</code>
[TPS_DEXT_01055]	Standardized values of <code>DiagnosticContributionSet.category</code>
[TPS_DEXT_01079]	Modeling of the arguments to a <code>DiagnosticRoutine</code>
[TPS_DEXT_03011]	Clearing request for a <code>DiagnosticEvent</code>
[TPS_DEXT_03020]	Semantics of <code>DiagnosticDemProvidedDataMapping</code>

Table E.16: Changed Specification Items in 4.4.0

E.5.3 Deleted Specification Items in 4.4.0

Number	Heading
[TPS_DEXT_01137]	Applicability of <code>DiagnosticDataIdentifier.didSize</code>

Table E.17: Deleted Specification Items in 4.4.0

E.5.4 Added Constraints in 4.4.0

Number	Heading
[constr_1552]	DiagnosticDataIdentifier referenced by DiagnosticDataIdentifier-Set
[constr_1584]	DiagnosticDataElement shall not be used more than once in I/O Control instance
[constr_1590]	DiagnosticEvent referenced in the role masterEvent or slaveEvent
[constr_1591]	DiagnosticEvent referenced as slaveEvent shall not be reported by diagnostic monitor
[constr_1612]	Reference from DiagnosticRoutineControl to DiagnosticAccessPermission has no meaning
[constr_1616]	Existence of attribute DiagnosticExtendedDataRecord.customTrigger
[constr_1617]	Existence of attribute DiagnosticFreezeFrame.customTrigger
[constr_1623]	Restriction on DiagnosticReadScalingDataByIdentifier.dataIdentifier
[constr_1624]	Existence of DiagnosticDataElement.scalingInfoSize
[constr_1633]	Existence of DiagnosticResponseOnEvent.event vs. DiagnosticResponseOnEvent.responseOnEventAction

Table E.18: Added Constraints in 4.4.0

E.5.5 Changed Constraints in 4.4.0

Number	Heading
[constr_1325]	Allowed attributes of SwDataDefProps for DiagnosticDataElement.swDataDefProps
[constr_1328]	Consistency of DiagnosticEcuInstanceProps.ecuInstance and DiagnosticServiceTable.ecuInstance

Table E.19: Changed Constraints in 4.4.0

E.5.6 Deleted Constraints in 4.4.0

Number	Heading
[constr_1471]	Existence of DiagnosticDataIdentifier.didSize
[constr_1515]	Reference from DiagnosticRoutineControl to DiagnosticAccessPermission has no meaning

Table E.20: Deleted Constraints in 4.4.0

E.6 Traceable item history of this document according to AUTOSAR Release R19-11

E.6.1 Added Specification Items in 19-11

Number	Heading
[TPS_DEXT_01147]	Support for custom service instance
[TPS_DEXT_01148]	Standardized values of DiagnosticIumprGroup.category
[TPS_DEXT_01149]	Standardized values of DiagnosticIumprDenominatorGroup.category
[TPS_DEXT_01150]	Semantics of meta-class DiagnosticControlEnableMaskBit

Table E.21: Added Specification Items in 19-11

E.6.2 Changed Specification Items in 19-11

Number	Heading
[TPS_DEXT_01060]	Applicable values for DiagnosticReadDTCInformation.category
[TPS_DEXT_01134]	Definition of a DiagnosticDataElement used in the context of a DID obtained by sender-receiver communication
[TPS_DEXT_01135]	Definition of a DiagnosticDataElement used in the context of a DID obtained by client/server communication
[TPS_DEXT_01136]	Definition of a DiagnosticDataElement used in the context of a diagnostic routine

Table E.22: Changed Specification Items in 19-11

E.6.3 Deleted Specification Items in 19-11

Number	Heading
[TPS_DEXT_01009]	Limited support for the configuration of custom diagnostic services
[TPS_DEXT_01010]	Configuration of custom diagnostic services
[TPS_DEXT_01110]	Standardized values of DiagnosticIumprGroup.category

Table E.23: Deleted Specification Items in 19-11

E.6.4 Added Constraints in 19-11

Number	Heading
[constr_1711]	Restriction of applicability of attribute <code>typeOfFreezeFrameRecordNumeration</code>
[constr_1721]	<code>DiagnosticControlEnableMaskBit.bitNumber</code> shall be unique
[constr_1722]	Relation between reference <code>DiagnosticIOControl.dataIdentifier</code> and attribute <code>DiagnosticIOControl.controlEnableMaskBit</code>
[constr_1725]	Applicability of attribute <code>DiagnosticMemoryDestination.dtcStatusAvailabilityMask</code>

Table E.24: Added Constraints in 19-11

E.6.5 Changed Constraints in 19-11

Number	Heading
[constr_1344]	Condition for the identification of data types of attributes <code>DiagnosticService-DataMapping.mappedDataElement</code>
[constr_1349]	Value of <code>udsDtcValue</code> shall be unique
[constr_1354]	Existence of attribute <code>DiagnosticTroubleCodeProps.snapshotRecordContent</code>
[constr_1459]	Existence of attributes of <code>DiagnosticTroubleCodeProps</code>

Table E.25: Changed Constraints in 19-11

E.6.6 Deleted Constraints in 19-11

none

E.7 Traceable item history of this document according to AUTOSAR Release R20-11

E.7.1 Added Specification Items in R20-11

Number	Heading
[TPS_DEXT_01151]	Semantics of attribute <code>DiagnosticEvent.associatedEventIdentification</code>
[TPS_DEXT_01152]	Semantics of meta-class <code>DiagnosticSecurityEventReporting-ModeMapping</code>





Number	Heading
[TPS_DEXT_01153]	Semantics of meta-class DiagnosticEventToSecurityEventMapping

Table E.26: Added Specification Items in R20-11

E.7.2 Changed Specification Items in R20-11

Number	Heading
[TPS_DEXT_01041]	Semantics of attribute DiagnosticServiceDataMapping.diagnosticDataElement
[TPS_DEXT_01142]	Standardized values for DiagnosticDemProvidedDataMapping.dataProvider

Table E.27: Changed Specification Items in R20-11

E.7.3 Deleted Specification Items in R20-11

Number	Heading
[TPS_DEXT_01052]	Existence of attribute DiagnosticServiceInstance.accessPermission
[TPS_DEXT_01061]	Supported scenarios for the definition of <i>access permission</i>
[TPS_DEXT_01062]	Existence of DiagnosticServiceClass.accessPermissionValidity in an incomplete model
[TPS_DEXT_01063]	Existence of DiagnosticServiceClass.accessPermissionValidity in a complete model
[TPS_DEXT_01076]	Identification of sub-functions of diagnostic service ControlDTCSetting

Table E.28: Deleted Specification Items in R20-11

E.7.4 Added Constraints in R20-11

Number	Heading
[constr_1745]	Indirect reference to DiagnosticCommonElement
[constr_1749]	Existence of DiagnosticInfoType.dataElement
[constr_1750]	Existence of attribute DiagnosticParameterIdentifier.pidSize
[constr_1752]	Existence of references owned by DiagnosticEnableConditionPortMapping
[constr_1753]	Existence of references owned by DiagnosticStorageConditionPortMapping





Number	Heading
[constr_1756]	Existence of attributes <code>DiagnosticExtendedDataRecord.trigger</code> and <code>update</code>
[constr_1757]	Existence of attribute <code>DiagnosticTroubleCodeUds.udsDtcValue</code>
[constr_1758]	Existence of attribute <code>DiagnosticTroubleCodeObd.obdDTCValue</code>
[constr_1759]	Existence of references owned by <code>DiagnosticOperationCyclePortMapping</code>
[constr_1760]	Existence of <code>DiagnosticExtendedDataRecord.recordElement</code>
[constr_1761]	Existence of attribute <code>DiagnosticConnectedIndicator.healingCycle</code>
[constr_1762]	Existence of references owned by <code>DiagnosticEventPortMapping</code>
[constr_1763]	Existence of attribute <code>DiagnosticPeriodicRate.periodicRateCategory</code>
[constr_1766]	Existence of <code>DiagEventDebounceCounterBased.counterJumpDownValue</code>
[constr_1767]	Existence of <code>DiagEventDebounceCounterBased.counterJumpUpValue</code>
[constr_1768]	Existence of attribute <code>DiagnosticEvent.associatedEventIdentification</code>
[constr_1772]	Unique <code>DiagnosticSession</code> and <code>DiagnosticSecurityLevel</code> for diagnostic routines that have the same identifier
[constr_1780]	Existence of attribute <code>DiagnosticTroubleCodeJ1939.fmi</code>
[constr_1781]	Existence of attribute <code>DiagnosticTroubleCodeJ1939.spn</code>
[constr_1782]	Usage of internal data elements only for extended data records
[constr_1790]	Existence of attribute <code>DiagnosticParameter.bitOffset</code>
[constr_1791]	Existence of attribute <code>DiagnosticParameter.dataElement</code>
[constr_1792]	Existence of <code>DiagnosticDataIdentifier.dataElement</code>
[constr_1793]	Existence of attribute <code>DiagnosticAbstractDataIdentifier.id</code>
[constr_1794]	Existence of attribute <code>DiagnosticProtocol.priority</code>
[constr_1795]	Existence of attribute <code>DiagnosticProtocol.protocolKind</code>
[constr_1796]	Existence of attribute <code>DiagnosticServiceTable.serviceInstance</code>
[constr_1797]	Existence of attribute <code>DiagnosticServiceTable.protocolKind</code>
[constr_1798]	Existence of <code>DiagnosticServiceInstance.serviceClass</code>
[constr_1799]	Existence of <code>DiagnosticEnvironmentalCondition.formula</code>
[constr_1800]	Existence of <code>DiagnosticEnvConditionFormula.op</code>
[constr_1801]	Existence of <code>DiagnosticEnvCompareCondition.compareType</code>
[constr_1802]	Existence of <code>DiagnosticEnvDataCondition.compareValue</code>
[constr_1803]	Existence of <code>DiagnosticEnvDataCondition.dataElement</code>
[constr_1804]	Existence of <code>DiagnosticEnvModeCondition.modeElement</code>
[constr_1805]	Existence of <code>DiagnosticEnvSwcModeElement.mode</code>
[constr_1806]	Existence of <code>DiagnosticEnvBswModeElement.mode</code>
[constr_1807]	Existence of reference <code>DiagnosticDataByIdentifier.dataIdentifier</code>
[constr_1808]	Existence of reference <code>DiagnosticDynamicallyDefineDataIdentifier.dataIdentifier</code>
[constr_1810]	Existence of aggregation <code>DiagnosticReadDataByPeriodicIDClass.periodicRate</code>
[constr_1811]	Existence of attribute <code>DiagnosticReadDataByPeriodicIDClass.maxPeriodicDidToRead</code>





Number	Heading
[constr_1812]	Existence of attribute DiagnosticReadDataByPeriodicIDClass.scheduler- MaxNumber
[constr_1813]	Existence of reference DiagnosticEventWindow.eventWindowTime
[constr_1814]	Existence of reference DiagnosticEventWindow.storageStateEvaluation
[constr_1815]	Existence of attribute DiagnosticRoutine.id
[constr_1816]	Existence of attribute DiagnosticSecurityAccess.requestSeedId
[constr_1817]	Existence of attribute DiagnosticSecurityAccess.securityLevel
[constr_1818]	Existence of reference DiagnosticSessionControl.diagnosticSession
[constr_1819]	Existence of attribute DiagnosticParameterIdentifier.id
[constr_1820]	Existence of reference DiagnosticRequestCurrentPowertrainData.pid
[constr_1821]	Existence of reference DiagnosticRequestPowertrainFreezeFrameData. freezeFrame
[constr_1822]	Existence of reference DiagnosticRequestControlOfOnBoardDevice. testId
[constr_1823]	Existence of attribute DiagnosticTestRoutineIdentifier.id
[constr_1824]	Existence of attribute DiagnosticTestRoutineIdentifier.requestData- Size
[constr_1825]	Existence of attribute DiagnosticTestRoutineIdentifier.responseData- Size
[constr_1826]	Existence of reference DiagnosticRequestVehicleInfo.infoType
[constr_1827]	Existence of attribute DiagnosticInfoType.id
[constr_1828]	Existence of referenced from DiagnosticServiceDataMapping
[constr_1829]	Existence of reference DiagnosticConnectedIndicator.indicator
[constr_1830]	Existence of DiagnosticTroubleCodeGroup.groupNumber
[constr_1831]	Existence of DiagnosticTroubleCodeProps.priority
[constr_1832]	Existence of DiagnosticExtendedDataRecord.recordNumber
[constr_1833]	Existence of DiagnosticFreezeFrame.trigger
[constr_1834]	Existence of DiagnosticCondition.initValue
[constr_1835]	Existence of DiagEventDebounceCounterBased.counterDecrementStep- Size
[constr_1836]	Existence of DiagEventDebounceCounterBased.counterIncrementStep- Size
[constr_1837]	Existence of DiagEventDebounceCounterBased.counterFailedThreshold
[constr_1838]	Existence of DiagEventDebounceCounterBased.counterPassedThreshold
[constr_1839]	Existence of attribute DiagEventDebounceTimeBased.timeFailedThreshold
[constr_1840]	Existence of attribute DiagEventDebounceTimeBased.timePassedThreshold
[constr_1841]	Existence of DiagnosticEnableConditionGroup.enableCondition
[constr_1842]	Existence of DiagnosticStorageConditionGroup.storageCondition
[constr_1843]	Existence of reference DiagnosticEventPortMapping.diagnosticEvent
[constr_1844]	Existence of reference DiagnosticOperationCyclePortMapping.opera- tionCycle





Number	Heading
[constr_1845]	Existence of reference DiagnosticEnableConditionPortMapping.enableCondition
[constr_1846]	Existence of reference DiagnosticStorageConditionPortMapping.diagnosticStorageCondition
[constr_1847]	Existence of reference DiagnosticDemProvidedDataMapping.dataElement
[constr_1848]	Existence of attribute DiagnosticAging.agingCycle
[constr_1849]	Existence of attribute DiagnosticAging.threshold
[constr_1850]	Existence of aggregation DiagnosticTestResult.testIdentifier
[constr_1851]	Existence of reference DiagnosticTestResult.monitoredIdentifier
[constr_1852]	Existence of attribute DiagnosticEcuInstanceProps.obdSupport
[constr_1853]	Existence of attribute DiagnosticIumprGroup.iumprGroupIdentifier
[constr_1854]	Existence of attribute DiagnosticIumprGroupIdentifier.groupId
[constr_1855]	Existence of attribute DiagnosticFunctionIdentifierInhibit.inhibitionMask
[constr_1856]	Existence of attribute DiagnosticJ1939Spn.spn
[constr_1857]	Existence of the reference DiagnosticEventToTroubleCodeJ1939Mapping.diagnosticEvent
[constr_1858]	Existence of the attribute DiagnosticEventToTroubleCodeJ1939Mapping.troubleCodeJ1939
[constr_1859]	Usage of DiagnosticRecordTriggerEnum.testFailedThisOperationCycle
[constr_10024]	Existence of reference in the role DiagnosticSecurityEventReportingModeMapping.dataElement
[constr_10025]	Existence of reference in the role DiagnosticSecurityEventReportingModeMapping.securityEvent
[constr_10026]	Existence of reference in the role DiagnosticEventToSecurityEventMapping.diagnosticEvent
[constr_10027]	Existence of reference in the role DiagnosticEventToSecurityEventMapping.securityEventProps

Table E.29: Added Constraints in R20-11

E.7.5 Changed Constraints in R20-11

none

E.7.6 Deleted Constraints in R20-11

Number	Heading
[constr_1360]	Usage of DiagEventDebounceMonitorInternal is not supported in the context of DiagnosticDebounceAlgorithmProps

Table E.30: Deleted Constraints in R20-11

E.8 Traceable item history of this document according to AUTOSAR Release R21-11

E.8.1 Added Specification Items in R21-11

Number	Heading
[TPS_DEXT_01154]	Semantics of meta-class DiagnosticAuthRole
[TPS_DEXT_01155]	Semantics of DiagnosticMemoryDestinationUserDefined.authenticationRole
[TPS_DEXT_01156]	Further definition of the semantics of DiagnosticIumpr
[TPS_DEXT_01157]	Semantics of DiagnosticIumprToFunctionIdentifierMapping
[TPS_DEXT_01158]	Sub-Functions for diagnostic service Authentication
[TPS_DEXT_01159]	Supported authentication methods for diagnostic service Authentication
[TPS_DEXT_01160]	Semantics of the reference DiagnosticMapping.providerSoftwareCluster
[TPS_DEXT_01161]	Mapping between a DiagnosticEvent and a CpSoftwareClusterResource
[TPS_DEXT_01162]	Mapping between a DiagnosticDataElement and a CpSoftwareClusterResource
[TPS_DEXT_01163]	Mapping between a DiagnosticRoutineSubfunction and a CpSoftwareClusterResource
[TPS_DEXT_01164]	Mapping between a DiagnosticFunctionIdentifier and a CpSoftwareClusterResource

Table E.31: Added Specification Items in R21-11

E.8.2 Changed Specification Items in R21-11

Number	Heading
[TPS_DEXT_01045]	Supported diagnostic services
[TPS_DEXT_01060]	Applicable values for DiagnosticReadDTCInformation.category
[TPS_DEXT_01070]	Description of textually semi-formal formulated pre- and run-conditions for the validity of DiagnosticAccessPermission
[TPS_DEXT_01091]	Relation between a DiagnosticServiceTable and one or more DiagnosticConnections
[TPS_DEXT_01093]	Definition of legislative freeze frame for WWHH-OBDD
[TPS_DEXT_01111]	Legislative freeze frame for the OBD-II case
[TPS_DEXT_01112]	Definition of a diagnostic trouble code for the implementation of WWH-OBDD
[TPS_DEXT_01142]	Standardized values for DiagnosticDemProvidedDataMapping.dataProvider



△

Number	Heading
[TPS_DEXT_03012]	Three kinds of DTCs

Table E.32: Changed Specification Items in R21-11

E.8.3 Deleted Specification Items in R21-11

Number	Heading
[TPS_DEXT_01033]	Semantics of triggers in the context of a DiagnosticResponseOnEvent
[TPS_DEXT_01049]	Consistency of DiagnosticServiceSwMapping with respect to routine IDs
[TPS_DEXT_01050]	Consistency of DiagnosticServiceSwMapping with respect to data IDs
[TPS_DEXT_01051]	Consistency of DiagnosticServiceSwMapping with respect to data IDs
[TPS_DEXT_01054]	Existence of DiagnosticDataByIdentifier.dataIdentifier

Table E.33: Deleted Specification Items in R21-11

E.8.4 Added Constraints in R21-11

Number	Heading
[constr_10038]	Restriction for the usage of DiagnosticAccessPermission.authenticationRole
[constr_10042]	Existence of attribute DiagnosticCommonProps.defaultEndianness
[constr_10043]	Existence of attribute DiagnosticCommonProps.resetConfirmedBitOnOverflow
[constr_10044]	Existence of attribute DiagnosticCommonProps.occurrenceCounterProcessing
[constr_10045]	Existence of attribute DiagnosticSecurityAccessClass.securityDelayTimeOnBoot
[constr_10084]	Existence of DiagnosticIumprToFunctionIdentifierMapping.iumpr
[constr_10085]	Existence of DiagnosticIumprToFunctionIdentifierMapping.functionIdentifier
[constr_10088]	Relation between event and DTC without event combination
[constr_10089]	Existence of attribute DiagnosticCommonProps.eventCombinationReportingBehavior
[constr_10091]	Mandatory subfunction of diagnostic service Authentication

Table E.34: Added Constraints in R21-11

E.8.5 Changed Constraints in R21-11

Number	Heading
[constr_1349]	Value of udsDtcValue shall be unique
[constr_1457]	Service-only DTCs shall refer to a common memory section
[constr_1458]	Reference to DiagnosticMemoryDestination
[constr_1459]	Existence of attributes of DiagnosticTroubleCodeProps
[constr_1509]	extendedDataRecord.recordNumber shall be unique within primary fault memory
[constr_1511]	extendedDataRecord.recordNumber shall be unique within user-defined fault memory
[constr_1512]	freezeFrame.recordNumber shall be unique within primary fault memory
[constr_1514]	freezeFrame.recordNumber shall be unique within user-defined fault memory

Table E.35: Changed Constraints in R21-11

E.8.6 Deleted Constraints in R21-11

Number	Heading
[constr_1365]	Multiplicity of DiagnosticResponseOnEvent.event
[constr_1366]	Event ID in the context of diagnostic service ResponseOnEvent shall be unique
[constr_1376]	Multiplicity of reference DiagnosticTroubleCodeProps.memoryDestination
[constr_1377]	Existence of reference DiagnosticTroubleCodeProps.memoryDestination
[constr_1380]	Existence of DiagnosticMemoryDestinationMirror
[constr_1510]	extendedDataRecord.recordNumber shall be unique within mirror fault memory
[constr_1513]	freezeFrame.recordNumber shall be unique within mirror fault memory
[constr_1633]	Existence of DiagnosticResponseOnEvent.event vs. DiagnosticResponseOnEvent.responseOnEventAction
[constr_1711]	Restriction of applicability of attribute typeOfFreezeFrameRecordNumeration
[constr_1725]	Applicability of attribute DiagnosticMemoryDestination.dtcStatusAvailabilityMask
[constr_1813]	Existence of reference DiagnosticEventWindow.eventWindowTime
[constr_1814]	Existence of reference DiagnosticEventWindow.storageStateEvaluation

Table E.36: Deleted Constraints in R21-11

E.9 Traceable item history of this document according to AUTOSAR Release R22-11

E.9.1 Added Specification Items in R22-11

Number	Heading
[TPS_DEXT_01165]	Semantics of DiagnosticEnvDataElementCondition
[TPS_DEXT_01166]	Usage of DiagnosticEnvDataElementCondition in top-down and bottom-up scenarios
[TPS_DEXT_01167]	Relevance of CompuMethod and DataConstr for the definition of DiagnosticEnvDataElementCondition
[TPS_DEXT_01168]	Allowed values of compareType in the context of a DiagnosticEnvDataCondition
[TPS_DEXT_01169]	Role of meta-class DiagnosticParameter
[TPS_DEXT_01170]	Semantics of meta-class DiagnosticAbstractParameter
[TPS_DEXT_01171]	Size of a DiagnosticAbstractParameter
[TPS_DEXT_01172]	Semantics of attribute DiagnosticAbstractParameter.parameterSize
[TPS_DEXT_01173]	Start position of a DiagnosticAbstractParameter
[TPS_DEXT_01174]	Content of a DiagnosticParameter
[TPS_DEXT_01175]	Nested definition of a DiagnosticParameter
[TPS_DEXT_01176]	DiagnosticParameter as a reference target
[TPS_DEXT_01177]	Utility of DiagnosticServiceMappingDiagTarget
[TPS_DEXT_01178]	Semantics of DiagnosticServiceDataMapping.parameterElementAccess
[TPS_DEXT_01179]	Existence of reference to DiagnosticParameterIdent in the role diagnosticParameter
[TPS_DEXT_01180]	Existence of reference to DiagnosticParameterElement in the role diagnosticParameter
[TPS_DEXT_01181]	Existence of references to subclasses of DiagnosticServiceMappingDiagTarget
[TPS_DEXT_01182]	Use case for the existence of reference DiagnosticServiceSwMapping.accessedDataPrototype

Table E.37: Added Specification Items in R22-11

E.9.2 Changed Specification Items in R22-11

Number	Heading
[TPS_DEXT_01139]	Semantics of the references from DiagnosticAccessPermission
[TPS_DEXT_01149]	Standardized values of DiagnosticIumprDenominatorGroup.category
[TPS_DEXT_03012]	Three kinds of DTCs

Table E.38: Changed Specification Items in R22-11

E.9.3 Deleted Specification Items in R22-11

Number	Heading
[TPS_DEXT_01155]	Semantics of DiagnosticMemoryDestinationUserDefined.authenticationRole

Table E.39: Deleted Specification Items in R22-11

E.9.4 Added Constraints in R22-11

Number	Heading
[constr_10100]	Existence of DiagnosticRoutineControl.routine
[constr_10115]	Existence of attributes of DiagnosticEnvDataElementCondition if the reference in the role dataPrototype exists
[constr_10116]	Existence of attributes of DiagnosticEnvDataElementCondition if the reference in the role dataPrototype does not exist
[constr_10117]	Existence of attributes of DiagnosticEnvDataElementCondition.swDataDefProps
[constr_10122]	Existence of attribute DiagnosticComControlSubNodeChannel.subNodeChannel
[constr_10364]	Usage of DiagnosticRecordTriggerEnum.testPassed
[constr_10368]	Restriction regarding the reference DiagnosticDataIdentifierSet.dataIdentifier
[constr_10369]	Existence of attributes of DiagnosticParameterElement depending on the value of attribute category
[constr_10370]	Restriction regarding the role DiagnosticParameterIdentifier.dataElement
[constr_10371]	Restriction regarding the aggregation of DiagnosticParameter in the role DiagnosticExtendedDataRecord.recordElement

Table E.40: Added Constraints in R22-11

E.9.5 Changed Constraints in R22-11

Number	Heading
[constr_1470]	Value of DiagnosticAbstractParameter.bitOffset
[constr_1624]	Existence of DiagnosticDataElement.scalingInfoSize
[constr_1782]	Usage of internal data elements only for extended data records
[constr_1790]	Existence of attribute DiagnosticAbstractParameter.bitOffset
[constr_1791]	Existence of attribute dataElement vs. parameterSize of meta-class DiagnosticParameter
[constr_1819]	Existence of attribute DiagnosticParameterIdentifier.id
[constr_1820]	Existence of reference DiagnosticRequestCurrentPowertrainData.pid
[constr_1821]	Existence of reference DiagnosticRequestPowertrainFreezeFrameData.freezeFrame
[constr_1822]	Existence of reference DiagnosticRequestControlOfOnBoardDevice.testId
[constr_1823]	Existence of attribute DiagnosticTestRoutineIdentifier.id
[constr_1824]	Existence of attribute DiagnosticTestRoutineIdentifier.requestDataSize
[constr_1825]	Existence of attribute DiagnosticTestRoutineIdentifier.responseDataSize
[constr_1826]	Existence of reference DiagnosticRequestVehicleInfo.infoType
[constr_1827]	Existence of attribute DiagnosticInfoType.id
[constr_1828]	Existence of referenced from DiagnosticServiceDataMapping

Table E.41: Changed Constraints in R22-11

E.9.6 Deleted Constraints in R22-11

Number	Heading
[constr_1344]	Condition for the identification of data types of attributes DiagnosticServiceDataMapping.mappedDataElement
[constr_1465]	Allowed values of compareType in the context of a DiagnosticEnvDataCondition

Table E.42: Deleted Constraints in R22-11

E.10 Traceable item history of this document according to AUTOSAR Release R23-11

E.10.1 Added Specification Items in R23-11

Number	Heading
[TPS_DEXT_01183]	Existence of attributes of DiagnosticTroubleCodeProps
[TPS_DEXT_01184]	Use cases for reading data from the application
[TPS_DEXT_01185]	Use cases for writing data to the application
[TPS_DEXT_01186]	Impact of the DiagnosticComControlClass on the state management for VLANs
[TPS_DEXT_01187]	References from DiagnosticSecureCodingMapping to DiagnosticRoutine
[TPS_DEXT_01188]	Attribute DiagnosticAccessPermission.authenticationEnabled does not exist
[TPS_DEXT_01189]	Attribute DiagnosticAccessPermission.authenticationEnabled exists
[TPS_DEXT_01190]	Attribute DiagnosticAccessPermission.authenticationEnabled exists, but DiagnosticAuthRoleProxy.authenticationRole does not exist
[TPS_DEXT_01191]	Attribute DiagnosticAccessPermission.authenticationEnabled and DiagnosticAuthRoleProxy.authenticationRole exist
[TPS_DEXT_01192]	Semantics of attribute DiagnosticAuthTransmitCertificateEvaluation.evaluationId
[TPS_DEXT_01193]	Semantics of attribute DiagnosticAuthTransmitCertificateEvaluation.function
[TPS_DEXT_01194]	Standardized value of attribute DiagnosticAuthTransmitCertificateEvaluation.function
[TPS_DEXT_01195]	Semantics of the DiagnosticAuthTransmitCertificateMapping

Table E.43: Added Specification Items in R23-11

E.10.2 Changed Specification Items in R23-11

Number	Heading
[TPS_DEXT_01011]	Semantics of DiagnosticSession.id
[TPS_DEXT_01045]	Supported diagnostic services in the scope of this document
[TPS_DEXT_01139]	Semantics of the references from DiagnosticAccessPermission
[TPS_DEXT_01142]	Standardized values for attribute DiagnosticDemProvidedDataMapping.dataProvider





Number	Heading
[TPS_DEXT_01149]	Standardized values of DiagnosticTumprDenominatorGroup.category

Table E.44: Changed Specification Items in R23-11

E.10.3 Deleted Specification Items in R23-11

none

E.10.4 Added Constraints in R23-11

Number	Heading
[constr_10412]	Existence of attribute DiagnosticTestIdentifier.id
[constr_10413]	Existence of attribute DiagnosticTestIdentifier.uasId
[constr_10414]	Existence of attribute DiagnosticMeasurementIdentifier.obdMid
[constr_10418]	Existence of attribute DiagnosticDebounceAlgorithmProps.debounceAlgorithm
[constr_10419]	Existence of the attribute DiagnosticCommonProps.resetPendingBitOnOverflow
[constr_10421]	Existence of attribute DiagnosticMemoryDestination.dtcStatusAvailabilityMask
[constr_10422]	Existence of attribute DiagnosticMemoryDestination.eventDisplacementStrategy
[constr_10423]	Existence of attribute DiagnosticMemoryDestination.maxNumberOfEventEntries
[constr_10440]	Restriction for the minimum value of attribute DiagnosticSessionControlClass.s3ServerTimeout

Table E.45: Added Constraints in R23-11

E.10.5 Changed Constraints in R23-11

Number	Heading
[constr_1329]	Existence of concrete sub-classes of DiagnosticServiceClass in the context created by a DiagnosticContributionSet
[constr_1333]	Existence of attributes of meta-class DiagnosticMemoryIdentifier
[constr_1552]	Meta-class DiagnosticDataIdentifier referenced by DiagnosticDataIdentifierSet





Number	Heading
[constr_10038]	Restriction for the usage of DiagnosticAccessPermission.authenticationEnabled
[constr_10371]	DiagnosticDataElement s owned by a DiagnosticExtendedDataRecord

Table E.46: Changed Constraints in R23-11

E.10.6 Deleted Constraints in R23-11

Number	Heading
[constr_1459]	Existence of attributes of DiagnosticTroubleCodeProps

Table E.47: Deleted Constraints in R23-11

E.10.7 Added Advisories in R23-11

none

E.10.8 Changed Advisories in R23-11

none

E.10.9 Deleted Advisories in R23-11

none

E.11 Traceable item history of this document according to AUTOSAR Release R24-11

E.11.1 Added Specification Items in R24-11

none

E.11.2 Changed Specification Items in R24-11

Number	Heading
[TPS_DEXT_01045]	Supported diagnostic services in the scope of this document
[TPS_DEXT_01142]	Standardized values for attribute <code>DiagnosticDemProvidedDataMapping.dataProvider</code>
[TPS_DEXT_01151]	Semantics of attribute <code>DiagnosticEvent.associatedEventIdentification</code>
[TPS_DEXT_03012]	Three kinds of DTCs

Table E.48: Changed Specification Items in R24-11

E.11.3 Deleted Specification Items in R24-11

Number	Heading
[TPS_DEXT_01183]	Existence of attributes of <code>DiagnosticTroubleCodeProps</code>

Table E.49: Deleted Specification Items in R24-11

E.11.4 Added Constraints in R24-11

Number	Heading
[constr_10522]	OBD trouble code shall only be placed in primary fault memory
[constr_10523]	Existence of role <code>DiagnosticTroubleCodeUdsToTroubleCodeObdMapping.troubleCodeUds</code>
[constr_10524]	Existence of role <code>DiagnosticTroubleCodeUdsToTroubleCodeObdMapping.troubleCodeObd</code>
[constr_10545]	Existence of <code>DiagnosticParameterIdentifier.dataElement</code> .
[constr_10573]	Existence of attribute <code>DiagnosticServiceTable.diagnosticServiceInstance</code>
[constr_10577]	Existence of <code>DiagnosticResponseOnEventClass.storeEventEnabled</code>

Table E.50: Added Constraints in R24-11

E.11.5 Changed Constraints in R24-11

Number	Heading
[constr_10088]	Relation between event and DTC without event combination
[constr_1349]	Value of udsDtcValue shall be unique
[constr_1768]	Existence of attribute DiagnosticEvent.associatedEventIdentification

Table E.51: Changed Constraints in R24-11

E.11.6 Deleted Constraints in R24-11

Number	Heading
[constr_1796]	Existence of attribute DiagnosticServiceTable.serviceInstance

Table E.52: Deleted Constraints in R24-11

E.11.7 Added Advisories in R24-11

none

E.11.8 Changed Advisories in R24-11

none

E.11.9 Deleted Advisories in R24-11

none

F Modeling of InstanceRef

F.1 Introduction

The existence of so-called `InstanceRefs` is a direct consequence to the usage of the `type-prototype` pattern for modeling within AUTOSAR. When referencing a `prototype` it is also necessary to include a reference to the `prototypes` typed by their corresponding `types` that in turn aggregate further `prototypes` to set up the context.

In other words, `InstanceRefs` are representing **structured references** that, on the one hand, consist of references to context `prototypes` (indicated by a subsetting or redefinition of `atpContextElement`) and finally a reference to the applicable target `prototype` (indicated by a redefinition of `atpTarget`).

Note that it is not uncommon to have more than a single context in the modeling of particular `InstanceRefs`.

For the reader of specifications, the modeling of `InstanceRefs` manifests as a UML dependency stereotyped `<<instanceRef>>` drawn from one meta-class to another.

This is a simplified indication that the source of the dependency implements an `InstanceRef` to the meta-class at the target of the dependency. Again, in most cases this is everything a reader needs to understand in order to figure out the modeling.

The formal modeling of `InstanceRefs` is done by creating subclasses of the abstract meta-class `AtpInstanceRef`.

Wherever a more detailed understanding of the modeling is advised in the context of the specific chapter of this document, the modeling of a specific subclasses of `AtpInstanceRef` is explained directly in the context of the corresponding chapter.

In all other cases, a deeper understanding of the modeling of particular subclasses of `AtpInstanceRefs` can be obtained from reading this chapter.

Class tables included in this chapter are not fully filled out in the sense that most of the notes inside the class tables are missing.

The **primary** purpose of these class tables is to **provide information about the intended order** in which `InstanceRefs` are **serialized in M1 AUTOSAR models**.

In particular, the information about the order in serialized M1 models can be obtained from the value of the tag `xml.sequenceOffset` of each attribute of an `InstanceRef` meta-class.

For more information about the general concept of modeling `AtpInstanceRef` (e.g. the conceptual background of redefining or subsetting an association from a subclass of `AtpInstanceRef` to other meta-classes) please refer to the [15, TPS Generic Structure Template].

F.2 Modeling

Class	DataPrototypeInSystemInstanceRef			
Package	M2::AUTOSARTemplates::DiagnosticExtract::InstanceRefs			
Note				
Base	ARObject, AtpInstanceRef			
Aggregated by	DiagnosticEnvDataElementCondition.dataPrototype , DiagnosticServiceDataMapping.mappedDataElement			
Attribute	Type	Mult.	Kind	Note
base	System	0..1	ref	This represents the base of the InstanceRef Stereotypes: atpDerived Tags: xml.sequenceOffset=10
contextComponent (ordered)	SwComponentPrototype	*	ref	Tags: xml.sequenceOffset=30
contextDataPrototype (ordered)	ApplicationCompositeElementDataPrototype	*	ref	Tags: xml.sequenceOffset=50
contextPort	PortPrototype	0..1	ref	This represents the PortPrototype that is contained in the InstanceRef. Tags: xml.sequenceOffset=40
contextRootComposition	RootSwCompositionPrototype	0..1	ref	Tags: xml.sequenceOffset=20
rootDataPrototype	AutosarDataPrototype	0..1	ref	Tags: xml.sequenceOffset=45
targetDataPrototype	DataPrototype	0..1	ref	This represents the target of the InstanceRef Tags: xml.sequenceOffset=60

Table F.1: DataPrototypeInSystemInstanceRef

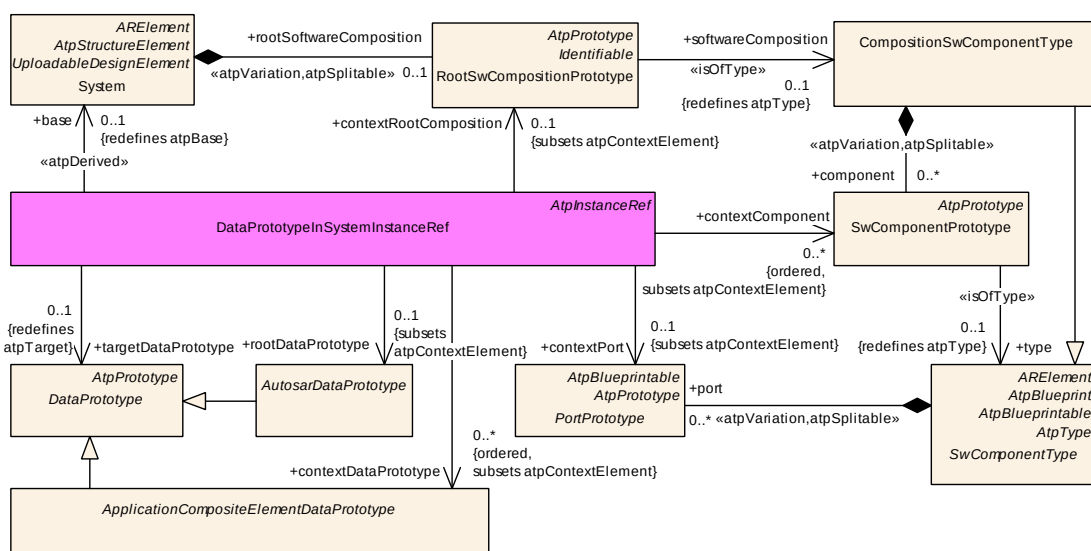


Figure F.1: Modeling of `DataPrototypeInSystemInstanceRef`

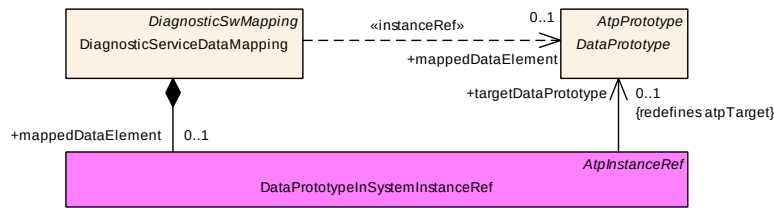


Figure F.2: Modeling of **DiagnosticServiceDataMapping**

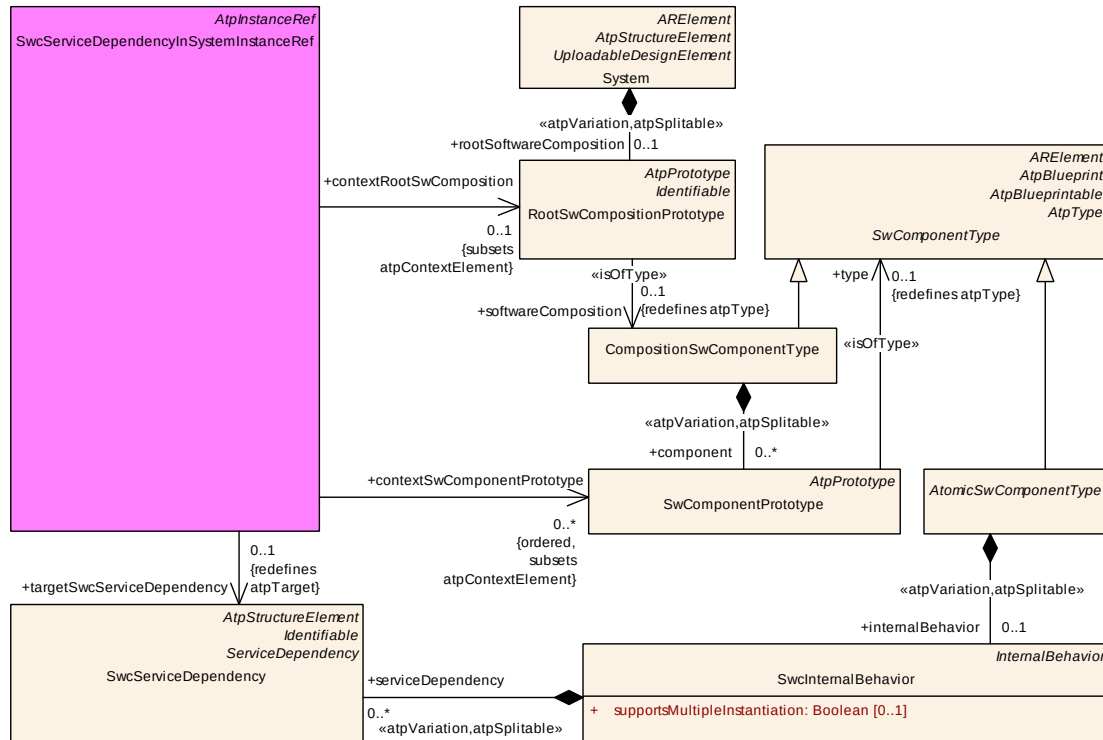


Figure F.3: Modeling of **SwcServiceDependencyInSystemInstanceRef**

Class	SwcServiceDependencyInSystemInstanceRef			
Package	M2::AUTOSARTemplates::DiagnosticExtract::InstanceRefs			
Note				
Base	ARObject, AtpInstanceRef			
Aggregated by	DiagnosticEnableConditionPortMapping.swcServiceDependencyInSystem , DiagnosticEventPortMapping.swcServiceDependencyInSystem , DiagnosticFimFunctionMapping.mappedSwcServiceDependency , DiagnosticOperationCyclePortMapping.swcServiceDependencyInSystem , DiagnosticServiceSwMapping.mappedSwcServiceDependencyInSystem , DiagnosticStorageConditionPortMapping.swcServiceDependencyInSystem			
Attribute	Type	Mult.	Kind	Note
contextRootSwComposition	RootSwCompositionPrototype	0..1	ref	
contextSwComponentPrototype (ordered)	SwComponentPrototype	*	ref	





Class	SwcServiceDependencyInSystemInstanceRef			
targetSwc Service Dependency	SwcService Dependency	0..1	ref	

Table F.2: SwcServiceDependencyInSystemInstanceRef

Class	PModelInSystemInstanceRef			
Package	M2::AUTOSARTemplates::DiagnosticExtract::InstanceRefs			
Note				
Base	ARObject, AtpInstanceRef			
Aggregated by	DiagnosticEnvSwcModeElement.mode			
Attribute	Type	Mult.	Kind	Note
base	System	0..1	ref	Stereotypes: atpDerived Tags: xml.sequenceOffset=10
context Component (ordered)	SwComponent Prototype	*	ref	Tags: xml.sequenceOffset=30
context Composition	RootSwComposition Prototype	0..1	ref	Tags: xml.sequenceOffset=20
contextMode Declaration Group	ModeDeclarationGroup Prototype	0..1	ref	Tags: xml.sequenceOffset=50
contextPPort	AbstractProvidedPort Prototype	0..1	ref	Tags: xml.sequenceOffset=40
targetMode	ModeDeclaration	0..1	ref	Tags: xml.sequenceOffset=60

Table F.3: PModelInSystemInstanceRef

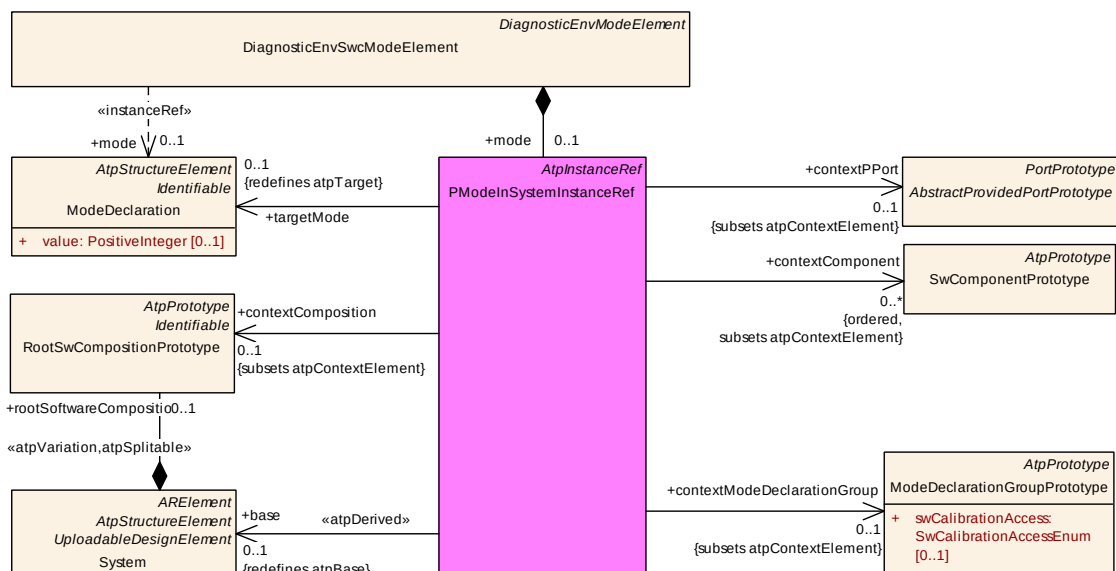


Figure F.4: Formal modeling of the comparison of a ModeDeclarationGroupPrototype with a ModeDeclaration

G Upstream Mapping

G.1 Introduction

This chapter describes the mapping of the [ECU Configuration](#) parameters (M1 model) onto the meta-classes and attributes of the AUTOSAR upstream templates (System Template, SW Component Template, Diagnostic Extract, and [ECU Resource Template](#)).

The relationships between upstream templates and [ECU Configuration](#) are described in order to answer typical questions like:

- How shall a supplier use the information in a System Description in order to fulfill the needs defined by the systems engineer?
- How is a tool vendor supposed to generate an [ECU Configuration Description](#) out of [ECU Extract](#) of System Description?

Please note that the upstream mapping tables contain the following columns:

Column Name	Column Meaning
BSW Module	Name of BSW module
BSW Context	Reference to parameter container
BSW Parameter	Name of the BSW parameter
BSW Type	Type of parameter
BSW Description	Description from the configuration document
Template Description	Class note or attribute note of the M2 model element
M2 Parameter	Name of the upstream template model element
Mapping Rule	Textual description on how to transform between M2 and BSW domains
Mapping Type	One of: local no mapping needed since parameter local to BSW partial some data can be automatically mapped but not all full all data can be automatically mapped
Mapping Status	Indication of life-cycle status of the mapping
ECUC Parameter ID	ID of the parameter in the respective SWS document (may be empty if the mapping is owned by an enumeration literal)

Table G.1: Upstream mapping table columns

G.2 Dcm

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsd
BSW Parameter	BSW Type
DcmDsdServiceTable	ECUC-PARAM-CONF-CONTAINER-DEF





BSW Description	
This container contains the configuration (DSD parameters) for a Service Identifier Table. Note: It is allowed to add OBD services to a DcmDsdServiceTable related to a UDS Protocol. But it is not allowed to add UDS services to a DcmDsdServiceTable related to an OBD Protocol.	
Template Description	
This meta-class represents a model of a diagnostic service table, i.e. the UDS services applicable for a given ECU.	
M2 Parameter	
DiagnosticExtract::DiagnosticContribution::DiagnosticServiceTable	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00732]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService	
BSW Parameter		BSW Type
DcmDsdServiceRoleRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DcmDspAuthenticationRow that defines a role in that the service is allowed to be executed.		
Template Description		
This attribute allows for the specification of the position of the enclosing role in a bitfield of roles.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAuthRole.bitPosition		
Mapping Rule		Mapping Type
Applicable if the current access permission maps to a service where only the service ID shall get a assigned role. The value of DcmDsdServiceRole is calculated based on the bits of all referenced DiagnosticAuthRole.bitPosition, where a value of 2 ^{bitPosition} is used for each DiagnosticAuthRole.bitPosition. The accumulated value represents a bitfield that has a bit set for each DiagnosticAuthRole.bitPosition.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01139]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService	
BSW Parameter		BSW Type
DcmDsdSidTabSecurityLevelRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a Security Level in which the service is allowed to be executed. Multiple references are allowed for a service. Please refer to ISO 14229-1, ISO 15031-5 and chapter "Verification of the Service Security Access levels." If there is no reference configured, no service security verification shall be performed.		
Template Description		
This represents the associated DiagnosticSecurityLevels		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00733]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService	
BSW Parameter		BSW Type
DcmDsdSidTabServiceId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Identifier of the service. The possible service identifiers are defined in ISO 14229-1 and ISO 15031-5.		
Template Description		
This meta-class provides the ability to define common properties that are shared among all instances of sub-classes of DiagnosticServiceInstance.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::CommonService::DiagnosticServiceClass		
Mapping Rule		Mapping Type
Service identifiers of the used DiagnosticServiceClass		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00735]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService	
BSW Parameter		BSW Type
DcmDsdSidTabSessionLevelRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a Session Level in which the service is allowed to be executed. Multiple references are allowed for a service. Please refer to ISO 14229-1, ISO 15031-5 and chapter "Verification of the Diagnostic Session". If there is no reference configured, no diagnostic session verification shall be performed.		
Template Description		
This represents the associated DiagnosticSessions		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission.diagnosticSession		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00734]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService	
BSW Parameter		BSW Type
DcmDsdSidTabSubfuncAvail		ECUC-BOOLEAN-PARAM-DEF
BSW Description		





Information about whether the service has subfunctions or not. This parameter is used for the handling of the "suppressPosRspMsgIndicationBit" as defined in ISO 14229-1, which can be used as a reference for the configuration. true - service has subfunctions, suppressPosRspMsgIndicationBit is available false - service has no subfunctions, suppressPosRspMsgIndicationBit is not available	
Template Description	
The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.	
M2 Parameter	
GenericStructure::GeneralTemplateClasses::Identifiable::Identifiable. category	
Mapping Rule	Mapping Type
Standardized sub-functions of diagnostic services are mainly identified by the category. There are further specific attributes in the meta-model that allow for handling custom subfunctions,	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00737]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService
BSW Parameter	BSW Type
DcmDsdSubServiceFnc	ECUC-FUNCTION-NAME-DEF
BSW Description	
Callback function of the ECU Supplier specific component for the particular service. The function's prototype is as described for <Module>_<DiagnosticService>_<SubService>. If this parameter is not configured, the subservice is handled Dcm-internally.	
Template Description	
This attribute shall be used to define a custom sub-function number if none of the standardized values of category shall be used.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl::DiagnosticComControl. customSubFunctionNumber	
Mapping Rule	Mapping Type
The existence of a custom subfunction number shall trigger the creation of a custom processor.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00942]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService
BSW Parameter	BSW Type
DcmDsdSubServiceRoleRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to DcmDspAuthenticationRow that defines a role in that the service with this subfunction is allowed to be executed.	
Template Description	
This attribute allows for the specification of the position of the enclosing role in a bitfield of roles.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticAuthRole. bitPosition	
Mapping Rule	Mapping Type





Applicable if the current access permission maps to a service where the subfunction of service ID and shall get a assigned role. The value of DcmDsdSubServiceRoleis is calculated based on the bits of all referenced DiagnosticAuthRole.bitPosition, where avalue of 2 ^{bitPosition} is used for each DiagnosticAuthRole.bitPosition. The accumulated value represents a bitfield that has a bit set for each DiagnosticAuthRole.bitPosition.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01140]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService	
BSW Parameter		BSW Type
DcmDsdSubServiceSecurityLevelRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a Security Level in which the subservice is allowed to be executed. Multiple references are allowed for a subservice. Please refer to ISO 14229-1, ISO 15031-5 and chapter "Verification of the Service Security Access levels." If there is no reference configured, no subservice security verification shall be performed.		
Template Description		
This represents the associated DiagnosticSecurityLevels		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission. securityLevel		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00812]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsd/DcmDsdServiceTable/DcmDsdService/DcmDsdSubService	
BSW Parameter		BSW Type
DcmDsdSubServiceSessionLevelRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a Session Level in which the subservice is allowed to be executed. Multiple references are allowed for a subservice. Please refer to ISO 14229-1, ISO 15031-5 and chapter "Verification of the Diagnostic Session". If there is no reference configured, no diagnostic session verification shall be performed.		
Template Description		
This represents the associated DiagnosticSessions		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission. diagnosticSession		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00804]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslDiagResp	
BSW Parameter		BSW Type
DcmDslDiagRespMaxNumRespPend		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of negative responses with response code 0x78 (requestCorrectlyReceivedResponsePending) allowed for a request. If Dcm reaches this limit, an automatic 0x10 (generalReject) final response will be transmitted and the service processing will be cancelled. Value 0x00 means that no NRC 0x78 response will be transmitted.		
Template Description		
Maximum number of negative responses with response code 0x78 (requestCorrectlyReceived-ResponsePending) allowed per request. DCM will send a negative response with response code 0x10 (generalReject), in case the limit value gets reached. Value 0xFF means that no limit number of NRC 0x78 response apply.		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps. maxNumberOfRequestCorrectlyReceivedResponsePending		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00693]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslDiagResp	
BSW Parameter		BSW Type
DcmDslDiagRespOnSecondDeclinedRequest		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Defines the reaction upon a second request (ClientB) that can not be processed (e.g. due to priority assessment). TRUE: when the second request (Client B) can not be processed, it shall be answered with NRC21 BusyRepeatRequest. FALSE: when the second request (Client B) can not be processed, it shall not be responded.		
Template Description		
Defines the reaction upon a second request (ClientB) that can not be processed (e.g. due to priority assessment). TRUE: when the second request (Client B) can not be processed, it shall be answered with NRC21 BusyRepeatRequest. FALSE: when the second request (Client B) can not be processed, it shall not be responded.		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps. responseOnSecondDeclinedRequest		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00914]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol	
BSW Parameter		BSW Type
DcmDslProtocolRow		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration of one particular diagnostic protocol used in Dcm.		
Template Description		





This meta-class represents the ability to define a diagnostic protocol.	
M2 Parameter	
DiagnosticExtract::DiagnosticContribution::DiagnosticProtocol	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00695]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection	
BSW Parameter		BSW Type
DcmDslProtocolComMChannelRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the ComMChannel on which the DcmDslProtocolRxPdu is received and the DcmDslProtocolTxPdu is transmitted.		
Template Description		
The CommunicationCluster is the main element to describe the topological connection of communicating ECUs. A cluster describes the ensemble of ECUs, which are linked by a communication medium of arbitrary topology (bus, star, ring, ...). The nodes within the cluster share the same communication protocol, which may be event-triggered, time-triggered or a combination of both. A CommunicationCluster aggregates one or more physical channels.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreTopology::CommunicationCluster		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00952]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection/DcmDslProtocolRx/DcmDslProtocolRxAddrType	
BSW Parameter		BSW Type
DCM_FUNCTIONAL_TYPE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
FUNCTIONAL = 1 to n communication		
Template Description		
Reference to functional request messages.		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DiagnosticConnection.functionalRequest		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection/DcmDslProtocolRx/DcmDslProtocolRxAddrType	
BSW Parameter		BSW Type
DCM_PHYSICAL_TYPE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
PHYSICAL = 1 to 1 communications using physical addressing		
Template Description		
Reference to a physical request message.		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DiagnosticConnection. physicalRequest		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection/DcmDslProtocolRx	
BSW Parameter		BSW Type
DcmDslProtocolRxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a Pdu in EcuC that is used for this reception channel.		
Template Description		
The IPdu (Interaction Layer Protocol Data Unit) element is used to sum up all Pdus that are routed by the PduR.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::IPdu		
Mapping Rule		Mapping Type
Reference to IPdu of xxxTpConnection for DiagnosticConnection. physicalRequest / DiagnosticConnection. functionalRequest		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00770]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection	
BSW Parameter		BSW Type
DcmDslProtocolTx		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration parameters of a transmission channel in a diagnostic connection. The PDU referenced by this transmission channel can produce meta data items of type TARGET_ADDRESS_16 and SOURCE_ADDRESS_16.		
Template Description		
In the vast majority of cases a response is required. However, there are also cases where providing the response is not possible and/or not allowed.		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DiagnosticConnection. response		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00711]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslMainConnection/DcmDslProtocolTx	
BSW Parameter		BSW Type
DcmDslProtocolTxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a Pdu in EcuC that is used for this transmission channel.		
Template Description		
The IPdu (Interaction Layer Protocol Data Unit) element is used to sum up all Pdus that are routed by the PduR.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::IPdu		
Mapping Rule		Mapping Type
Reference to IPdu of xxxTpConnection for DiagnosticConnection.response		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00772]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslConnection/DcmDslPeriodicTransmission/DcmDslPeriodicConnection	
BSW Parameter		BSW Type
DcmDslPeriodicTxPduRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a Pdu in EcuC that is used for this periodic transmission channel.		
Template Description		
The IPdu (Interaction Layer Protocol Data Unit) element is used to sum up all Pdus that are routed by the PduR.		
M2 Parameter		
SystemTemplate::Fibex::FibexCore::CoreCommunication::IPdu		
Mapping Rule		Mapping Type
Reference to IPdu of xxxTpConnection in case of DiagnosticConnection.periodicResponseTp or IPdu of PduTriggering in case of DiagnosticConnection.periodicResponseUudt		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00742]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow	
BSW Parameter		BSW Type
DcmDslProtocolPriority		ECUC-INTEGER-PARAM-DEF
BSW Description		





Protocol priority used during protocol preemption. A higher priority protocol may preempt a lower priority protocol. Lower numeric values represent higher protocol priority: 0 - Highest protocol priority 255 - Lowest protocol priority	
Template Description	
This represents the priority of the diagnostic protocol in comparison to other diagnostic protocols. Lower numeric values represent higher protocol priority: • 0 - Highest protocol priority • 255 - Lowest protocol priority	
M2 Parameter	
DiagnosticExtract::DiagnosticContribution::DiagnosticProtocol.priority	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00699]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslProtocolTransType	
BSW Parameter		BSW Type
TYPE1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Messages on the DcmTxPduId already used for normal diagnostic responses. The outgoing messages must be synchronized with 'normal outgoing messages', which have a higher priority.		
Template Description		
Reference to a ROE message.		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DiagnosticConnection.responseOnEvent		
Mapping Rule		Mapping Type
TYPE1 : periodicResponseTp / responseOnEvent using same reference as the normal response		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslProtocolTransType	
BSW Parameter		BSW Type
TYPE2		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Messages on a separate DcmTxPduId.		
Template Description		
Reference to a ROE message.		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DiagnosticConnection.responseOnEvent		
Mapping Rule		Mapping Type
TYPE2: periodicResponseTp / responseOnEvent using other reference as the normal response		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslProtocolType	
BSW Parameter		BSW Type
DCM_PERIODICTRANS_ON_CAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
AbstractCanPhysicalChannel: Abstract class that is used to collect the common TtCAN and CAN PhysicalChannel attributes.		
DiagnosticConnection.periodicResponseUdt: Reference to UUDT responses.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::AbstractCanPhysicalChannel, SystemTemplate::DiagnosticConnection::DiagnosticConnection.periodicResponseUdt		
Mapping Rule		Mapping Type
If DiagnosticConnection.periodicResponseUdt exists and PhysicalChannel given as AbstractCan PhysicalChannel.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslProtocolType	
BSW Parameter		BSW Type
DCM_PERIODICTRANS_ON_IP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
StaticSocketConnection: Definition of static SocketConnection between the Socket that is defined by the aggregating SocketAddress and the remote Address.		
DiagnosticConnection.periodicResponseUdt: Reference to UUDT responses.		
EthernetPhysicalChannel: The EthernetPhysicalChannel represents a VLAN or an untagged channel. An untagged channel is modeled as an Ethernet PhysicalChannel without an aggregated VLAN.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection, SystemTemplate::DiagnosticConnection::DiagnosticConnection.periodicResponseUdt, SystemTemplate::Fibex::Fibex4Ethernet::EthernetTopology::EthernetPhysicalChannel		
Mapping Rule		Mapping Type
If DiagnosticConnection.periodicResponseUdt exists and PhysicalChannel given as Ethernet PhysicalChannel.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslProtocolType	
BSW Parameter		BSW Type
DCM_ROE_ON_CAN		ECUC-ENUMERATION-LITERAL-DEF





BSW Description	
Template Description DiagnosticConnection.responseOnEvent: Reference to a ROE message. CanTpConnection: A connection identifies the sender and the receiver of this particular communication. The CanTp module routes a Pdu through this connection. atpVariation: Derived, because TpNode can vary.	
M2 Parameter	
SystemTemplate::DiagnosticConnection::DiagnosticConnection.responseOnEvent, SystemTemplate::TransportProtocols::CanTpConnection	
Mapping Rule	Mapping Type
In case DiagnosticConnection.responseOnEvent exists and TpConnectionIdent.ident belongs to a CanTpConnection.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslProtocolType	
BSW Parameter		BSW Type
DCM_ROE_ON_FLEXRAY		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description DiagnosticConnection.responseOnEvent: Reference to a ROE message. FlexrayTpConnection: A connection identifies the sender and the receiver of this particular communication. The FlexRayTp module routes a Pdu through this connection. In a System Description the references to the PduPools are mandatory. In an ECU Extract these references can be optional: On unicast connections these references are always mandatory. On multicast the txPduPool is mandatory on the sender side. The rxPduPool is mandatory on the receiver side. On Gateway ECUs both references are mandatory.		
M2 Parameter		
SystemTemplate::DiagnosticConnection::DiagnosticConnection.responseOnEvent, SystemTemplate::TransportProtocols::FlexrayTpConnection		
Mapping Rule		Mapping Type
In case DiagnosticConnection.responseOnEvent exists and TpConnectionIdent.ident belongs to FlexRayTpConnection		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslProtocolType	
BSW Parameter		BSW Type
DCM_ROE_ON_IP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		





DiagnosticConnection.responseOnEvent: Reference to a ROE message.	
StaticSocketConnection: Definition of static SocketConnection between the Socket that is defined by the aggregating SocketAddress and the remote Address.	
M2 Parameter	
SystemTemplate::DiagnosticConnection::DiagnosticConnection. responseOnEvent , SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection	
Mapping Rule	Mapping Type
In case DiagnosticConnection.responseOnEvent exists and TpConnectionIdent.ident belongs to SocketConnection	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslProtocolType
BSW Parameter	BSW Type
DCM_UDS_ON_CAN	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
UDS on CAN (ISO15765-3; ISO14229-1)	
Template Description	
DiagnosticConnection.physicalRequest: Reference to a physical request message.	
CanTpConnection: A connection identifies the sender and the receiver of this particular communication. The CanTp module routes a Pdu through this connection.	
atpVariation: Derived, because TpNode can vary.	
M2 Parameter	
SystemTemplate::DiagnosticConnection::DiagnosticConnection. physicalRequest , SystemTemplate::TransportProtocols::CanTpConnection	
Mapping Rule	Mapping Type
In case DiagnosticConnection.physicalRequest exists and TpConnectionIdent.ident belongs to CanTpConnection	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslProtocolType
BSW Parameter	BSW Type
DCM_UDS_ON_FLEXRAY	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
UDS on FlexRay (Manufacturer specific; ISO14229-1)	
Template Description	





DiagnosticConnection.physicalRequest: Reference to a physical request message.	
FlexrayTpConnection: A connection identifies the sender and the receiver of this particular communication. The FlexRayTp module routes a Pdu through this connection. In a System Description the references to the PduPools are mandatory. In an ECU Extract these references can be optional: On unicast connections these references are always mandatory. On multicast the txPduPool is mandatory on the sender side. The rxPduPool is mandatory on the receiver side. On Gateway ECUs both references are mandatory.	
M2 Parameter SystemTemplate::DiagnosticConnection::DiagnosticConnection.physicalRequest, SystemTemplate::TransportProtocols::FlexrayTpConnection	
Mapping Rule	Mapping Type
In case DiagnosticConnection.physicalRequest exists and TpConnectionIdent.ident belongs to FlexRayTpConnection	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsl/DcmDslProtocol/DcmDslProtocolRow/DcmDslProtocolType
BSW Parameter	BSW Type
DCM_UDS_ON_IP	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Template Description	
DiagnosticConnection.physicalRequest: Reference to a physical request message. StaticSocketConnection: Definition of static SocketConnection between the Socket that is defined by the aggregating SocketAddress and the remote Address.	
M2 Parameter SystemTemplate::DiagnosticConnection::DiagnosticConnection.physicalRequest, SystemTemplate::Fibex::Fibex4Ethernet::ServiceInstances::StaticSocketConnection	
Mapping Rule	Mapping Type
In case DiagnosticConnection.physicalRequest exists and TpConnectionIdent.ident belongs to a SocketConnection	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspAuthentication
BSW Parameter	BSW Type
DcmDspAuthenticationDeauthenticatedRoleRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to DcmDspAuthenticationRow that defines a role in that is used as deauthenticated role.	
Template Description	
This attribute allows for the specification of the position of the enclosing role in a bitfield of roles.	
M2 Parameter DiagnosticExtract::Dcm::DiagnosticAuthRole.bitPosition	
Mapping Rule	Mapping Type





The value of each DcmDspAuthenticationDeauthenticatedRole is calculated based on the bits of all referenced DiagnosticAuthRole.bitPosition with DiagnosticAuthRole.isDefault = true, where a value of 2 ^{bitPosition} is used for each DiagnosticAuthRole.bitPosition. The accumulated value represents a bitfield that has a bit set for each DiagnosticAuthRole.bitPosition.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01153]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspAuthentication	
BSW Parameter		BSW Type
DcmDspAuthenticationDefaultSessionTimeOut		ECUC-FLOAT-PARAM-DEF
BSW Description		
Defines the number of seconds after which the Dcm makes a transition to deauthenticated state, in case of no active communication.		
Template Description		
This attribute defines the time (in seconds) that the authentication state is maintained in default-session if there is no communication from the authenticated client.		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.authenticationTimeout		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01161]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspAuthentication/DcmDspAuthenticationTransmitCertificate	
BSW Parameter		BSW Type
DcmDspAuthenticationTransmitCertificateEvaluationId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Certificate evaluation id.		
Template Description		
This attributes represents the ID of the certificate evaluation.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::Authentication::DiagnosticAuthTransmitCertificateEvaluation.evaluationId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01242]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspAuthentication/DcmDspAuthenticationTransmitCertificate	
BSW Parameter		BSW Type
DcmDspAuthenticationTransmitCertificateFunction		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Provides a fixed semantics to this certificate that will lead to predefined actions in the Dcm.		





Template Description	
This meta-class represents the ability to configure a certificate evaluation in the context of a diagnostic authentication.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::Authentication::DiagnosticAuthTransmitCertificateEvaluation	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01244]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspAuthentication/DcmDspAuthenticationTransmitCertificate	
BSW Parameter		BSW Type
DcmDspAuthenticationTransmitCertificateRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to a KeyMCertificate used to handle the certificate.		
Template Description		
This reference identifies the description of the applicable crypto certificate.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::DiagnosticAuthTransmitCertificateMapping.cryptoServiceCertificate		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01243]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspComControl	
BSW Parameter		BSW Type
DcmDspComControlAllChannel		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Collection of ComM channels which shall be controlled if all networks are addressed.		
Template Description		
DiagnosticComControlClass.allChannels: This reference represents the semantics that all available channels shall be affected. It is still necessary to refer to individual CommunicationClusters because there could be private CommunicationClusters in the System Extract that are not subject to the service "communication control". By referring to the applicable CommunicationClusters it can be made sure that only the affected CommunicationClusters are accessed. DiagnosticComControlClass.allPhysicalChannels: This reference represents the semantics that all available channels shall be affected. It is still necessary to refer to individual EthernetPhysicalChannels because there could be private VLANs (and thus private EthernetPhysicalChannels) in the System Extract that are not subject to the service "communication control". By referring to the applicable EthernetPhysicalChannels it can be made sure that only the affected EthernetPhysicalChannels are accessed.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl::DiagnosticComControlClass.allChannels, DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl::DiagnosticComControlClass.allPhysicalChannels		
Mapping Rule		Mapping Type





For all bus systems, except Ethernet: Create one DcmDspComControlAllChannel for each DiagnosticComControl.allChannels. Add reference DcmDspAllComControlChannelRef and let it refer to the ComMChannel that represents the respective CommunicationCluster that is referenced in the role DiagnosticComControlClass.allChannels. For Ethernet Bus Systems: Create one DcmDspComControlAllChannel for each element of DiagnosticComControlClass.allPhysicalChannels. Add reference DcmDspAllComControlChannelRef and let it refer to the ComMChannel that represents the respective PhysicalChannel that is referenced in the role DiagnosticComControlClass.allPhysicalChannels.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00901]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspComControl
BSW Parameter	BSW Type
DcmDspComControlSpecificChannel	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Assigns subnet number to ComM channel which will be controlled.	
Template Description	
DiagnosticComControlClass.specificChannel: This represents the ability to add additional attributes to the case that only specific channels are supposed to be considered, DiagnosticComControlSpecificChannel.specificPhysicalChannel: This represents the affected specific EthernetPhysicalChannel.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl::DiagnosticComControlClass.specificChannel, DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl::DiagnosticComControlSpecificChannel.specificPhysicalChannel	
Mapping Rule	Mapping Type
For all bus systems, except Ethernet: Create one DcmDspComControlSpecificChannel for each DiagnosticComControlSpecificChannel.specificChannel. Add reference DcmDspSpecificComControlChannelRef and let it refer to the ComMChannel that represents the respective CommunicationCluster that is referenced in the role DiagnosticComControlClass.specificChannel. For Ethernet Bus Systems: Create one DcmDspComControlSpecificChannel for each DiagnosticComControlSpecificChannel.specificPhysicalChannel. Add reference DcmDspSpecificComControlChannelRef and let it refer to the ComMChannel that represents the respective PhysicalChannel that is referenced in the role DiagnosticComControlSpecificChannel.specificPhysicalChannel.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00903]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspComControl/DcmDspComControlSpecificChannel
BSW Parameter	BSW Type
DcmDspSubnetNumber	ECUC-INTEGER-PARAM-DEF
BSW Description	
Subnet Number which controls the specific ComMChannel.	





Template Description	
This represents the applicable subnet number (which is an arbitrary number ranging from 1..14)	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl::DiagnosticComControlSpecificChannel. subnetNumber	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00905]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspComControl	
BSW Parameter		BSW Type
DcmDspComControlSubNode		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container gives information about the node identification number and the ComM channel used to address a sub-network.		
Template Description		
DiagnosticComControlSubNodeChannel.subNodeChannel: This represents the affected CommunicationCluster in the role subNodeChannel		
DiagnosticComControlSubNodeChannel.subNodePhysicalChannel: This represents the affected sub-node EthernetPhysicalChannel.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl::DiagnosticComControlSubNodeChannel. subNodeChannel , DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl::DiagnosticComControlSubNodeChannel. subNodePhysicalChannel		
Mapping Rule		Mapping Type
For all bus systems, except Ethernet: Create one DcmDspComControlSubNodeChannel for each DiagnosticComControlSubNodeChannel.subNodeChannel. Add reference DcmDspComControlSubNodeComMChannelRef and let it refer to the ComMChannel that represents the respective CommunicationCluster that is referenced in the role DiagnosticComControlClass.subNodeChannel. For Ethernet Bus Systems: Create one DcmDspComControlSubNodeChannel for each DiagnosticComControlSubNodeChannel.subNodePhysicalChannel. Add reference DcmDspComControlSubNodeComMChannelRef and let it refer to the ComMChannel that represents the respective PhysicalChannel that is referenced in the role DiagnosticComControlSubNodeChannel.subNodePhysicalChannel.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01033]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspComControl/DcmDspComControlSubNode	
BSW Parameter		BSW Type
DcmDspComControlSubNodeId		ECUC-INTEGER-PARAM-DEF
BSW Description		
The node identification number DcmDspComControlSubNodeId is addressed by the CommunicationControl (0x28) request.		
Template Description		
This represents the applicable subNode number. The value corresponds to the request message parameter node IdentificationNumber of diagnostic service CommunicationControl (0x28).		





M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::CommunicationControl::DiagnosticComControlSubNodeChannel. subNodeNumber	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01031]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type
DcmDspCommonAuthorization		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) for the common Authorization being equal for several services / sub-services.		
Template Description		
This represents an instance of the "Routine Control" diagnostic service.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::RoutineControl::DiagnosticRoutineControl		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01025]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspControlDTCSetting	
BSW Parameter		BSW Type
DcmSupportDTCSettingControlOptionRecord		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This configuration switch defines if the DTCSettingControlOptionRecord is in general supported in the request message or not.		
Template Description		
This represents the decision whether the DTCSettingControlOptionRecord (see ISO 14229-1) is in general supported in the request message.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ControlDTCSetting::DiagnosticControlDTCSettingClass. controlOptionRecordPresent		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00965]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type





DcmDspDDIDcheckPerSourceDID	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
Defines the check for session, security and mode dependencies per source DIDs with a ReadDataByIdentifier (0x22). true: Dcm module shall check the session, security and mode dependencies per source DIDs with a ReadDataByIdentifier (0x22) with DID in the range 0xF200 to 0xF3FF false: Dcm module shall not check the session, security and mode dependencies per source DIDs with a ReadDataByIdentifier (0x22) with DID in the range 0xF200 to 0xF3FF	
Template Description	
If set to TRUE, the Dcm module shall check the session, security and mode dependencies per source DIDs with a ReadDataByIdentifier (0x22) with DID in the range 0xF200 to 0xF3FF. If set to FALSE, the Dcm module shall not check the session, security and mode dependencies per source DIDs with a ReadDataByIdentifier (0x22) with DID in the range 0xF200 to 0xF3FF.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::DynamicallyDefineDataIdentifier::DiagnosticDynamicallyDefineDataIdentifier Class. checkPerSourceId	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00966]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type
DcmDspData		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) of a Data belonging to a DID		
Template Description		
DiagnosticSecurityEventReportingModeMapping: This meta-class represents the ability to associate a location in a DID with a security event. The purpose of this mapping is that the location in the DID contains the setting of the reporting mode for the specific security event. This means that the reporting mode of the security event can be set via the diagnostic service WriteDataByIdentifier.		
DiagnosticSecurityEventReportingModeMapping.securityEvent: This reference identifies the mapped security event.		
DiagnosticSecurityEventReportingModeMapping.dataElement: This reference identifies the data element that carries the information about the reporting mode.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticSecurityEventReportingModeMapping, DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticSecurityEventReportingModeMapping.securityEvent, DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticSecurityEventReportingModeMapping.dataElement		
Mapping Rule		Mapping Type
If a DiagnosticSecurityEventReportingModeMapping exists then: - DcmDspDataType shall be set to UINT8_N - DcmDspDataByteSize shall be set to the number of bytes in the DiagnosticDataIdentifier - DcmDspDataUsePort shall be set to USE_DATA_SYNCH_FNC - DcmDspDataReadFnc shall be set to the name of the read API for reporting mode at the IdsM - DcmDspDataWriteFnc shall be set to the name of the write API for reporting mode at the IdsM		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00869]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataByteSize		ECUC-INTEGGER-PARAM-DEF
BSW Description		
Defines the array length in bytes or the maximum array length for variable datalengths.		
Template Description		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
S/R via array: $\text{DcmDspDataByteSize} = \text{maxNumberOfElements} * (\text{baseTypeSize} / 8)$ C/S of FNC callback: $\text{DcmDspDataByteSize} = \text{maxNumberOfElements}$ Note: 8 is the baseType Size of UINT8		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01106]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataConditionCheckReadFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name to demand application if the conditions (e.g. System state) to read the DID are correct. (ConditionCheck Read-function).		
Multiplicity shall be equal to parameter DcmDspDataReadFnc. This parameter is related to the interface Xxx_ConditionCheck Read.		
Template Description		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency		
Mapping Rule		Mapping Type
It could be possible to get the FNC name via BswServiceDependency		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00677]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the endianness of the data belonging to a DID in a diagnostic request or response message.		





Template Description	
This attribute specifies the byte order of the base type.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. byteOrder	
Mapping Rule	Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnosticDataIdentifier.dataElement	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00986]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataFreezeCurrentStateFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name to request to application to freeze the current state of an IOControl. (FreezeCurrentState-function). This parameter is related to the interface Xxx_FreezeCurrentState.		
Template Description		
DiagnosticIoControlNeeds.freezeCurrentStateSupported: This attribute determines, if the referenced port supports temporary freezing of I/O value. DiagnosticServiceSwMapping.mappedBswServiceDependency: This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagnosticIoControlNeeds. freezeCurrentStateSupported , Diagnostic Extract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency		
Mapping Rule		Mapping Type
It could be possible to get the FNC name via BswServiceDependency		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00674]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataReadDataLengthFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name to request from application the data length of a DID. (ReadDataLength-function). This parameter is related to the interface Xxx_ReadDataLength.		
Template Description		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency		
Mapping Rule		Mapping Type
It could be possible to get the FNC name via BswServiceDependency		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00671]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataReadFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name to request from application the data value of a DID. (ReadData-function). This parameter is related to the interface Xxx_ReadData.		
Template Description		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency		
Mapping Rule		Mapping Type
It could be possible to get the FNC name via BswServiceDependency		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00669]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataResetToDefaultFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name to request to application to reset an IOControl to default value. (ResetToDefault-function). This parameter is related to the interface Xxx_ResetToDefault.		
Template Description		
DiagnosticIoControlNeeds.resetToDefaultSupported: This represents a flag for the existence of the ResetToDefault operation in the service interface. DiagnosticServiceSwMapping.mappedBswServiceDependency: This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagnosticIoControlNeeds. resetToDefaultSupported , DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency		
Mapping Rule		Mapping Type
It could be possible to get the FNC name via BswServiceDependency		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00673]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataReturnControlToEcuFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name to request to application to return control to ECU of an IOControl. (ReturnControlToECU-function). This parameter is related to the interface Xxx_ReturnControlToECU.		
Template Description		





This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.	
M2 Parameter	
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency	
Mapping Rule	Mapping Type
It could be possible to get the FNC name via BswServiceDependency	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00672]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataShortTermAdjustmentFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name to request to application to adjust the IO signal. (ShortTermAdjustment-function). This parameter is related to the interface Xxx_ShortTermAdjustment.		
Template Description		
DiagnosticIoControlNeeds.shortTermAdjustmentSupported: This attribute determines, if the referenced port supports temporarily setting of I/O value to a specific value provided by the diagnostic tester.		
DiagnosticServiceSwMapping.mappedBswServiceDependency: This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagnosticIoControlNeeds. shortTermAdjustmentSupported , DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency		
Mapping Rule		Mapping Type
It could be possible to get the FNC name via BswServiceDependency		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00675]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Provide the implementation data type of data belonging to a DID.		
Template Description		




DiagnosticEnvDataElementCondition:

This meta-class represents the ability to formulate a diagnostic environment condition based on the value of a data element owned by the application software.

SwDataDefProps:

This class is a collection of properties relevant for data objects under various aspects. One could consider this class as a "pattern of inheritance by aggregation". The properties can be applied to all objects of all classes in which SwDataDefProps is aggregated.

Note that not all of the attributes or associated elements are useful all of the time. Hence, the process definition (e.g. expressed with an OCL or a Document Control Instance MSR-DCI) has the task of implementing limitations.

SwDataDefProps covers various aspects:

- Structure of the data element for calibration use cases: is it a single value, a curve, or a map, but also the recordLayouts which specify how such elements are mapped/converted to the DataTypes in the programming language (or in AUTOSAR). This is mainly expressed by properties like swRecordLayout and swCalprmAxisSet
- Implementation aspects, mainly expressed by swImplPolicy, swVariableAccessImplPolicy, swAddrMethod, swPointerTarget Props, baseType, implementationDataType and additionalNativeTypeQualifier
- Access policy for the MCD system, mainly expressed by swCalibrationAccess
- Semantics of the data element, mainly expressed by compuMethod and/or unit, dataConstr, invalidValue
- Code generation policy provided by swRecordLayout

SwBaseType:

This meta-class represents a base type used within ECU software.

M2 Parameter

DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvDataElementCondition, DataDictionary::DataDef Properties::SwDataDefProps, AsamHdo::BaseTypes::SwBaseType

Mapping Rule

Maps to DiagnosticEnvDataElementCondition.swDataDefProps.baseType:

BOOLEAN if baseTypeEncoding=BOOLEAN and baseTypeSize = 8 UINT8 if baseTypeEncoding=NONE and baseTypeSize = 8 SINT8 if baseTypeEncoding=2C and baseTypeSize = 8
 UINT16 if baseTypeEncoding=NONE and baseTypeSize = 16 SINT16 if baseTypeEncoding=2C and baseTypeSize = 16
 UINT32 if baseTypeEncoding=NONE and baseTypeSize = 32 SINT32 if baseTypeEncoding=2C and baseTypeSize = 32

Mapping Type

full

Mapping Status

valid

ECUC Parameter ID

[ECUC_Dcm_00985]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType
BSW Parameter	BSW Type
BOOLEAN	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is boolean.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength	





Mapping Rule	Mapping Type
baseTypeEncoding = BOOLEAN baseTypeSize = 1 maxNumberOfElements shall not exist array SizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType
BSW Parameter	BSW Type
FLOAT	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is float.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType
BSW Parameter	BSW Type
FLOAT_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is float array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	





AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
SINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is sint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements shall not exist arraySize Semantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
SINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is sint16 array.		
Template Description		



**BaseTypeDirectDefinition.baseTypeSize:**

Describes the length of the data type specified in the container in bits.

BaseTypeDirectDefinition.baseTypeEncoding:

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

DiagnosticValueNeeds.fixedLength:

This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency.

This attribute controls whether the data length of the data is fixed.

M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.[baseTypeSize](#), AsamHdo::BaseTypes::BaseTypeDirectDefinition.[baseTypeEncoding](#), DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.[arraySizeSemantics](#), DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.[maxNumberOfElements](#), CommonStructure::ServiceNeeds::DiagnosticValueNeeds.[fixedLength](#)

Mapping Rule

baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)

Derivation from DiagnosticValueNeeds.fixedLength=1 possible.

Mapping Type

full

Mapping Status

valid

ECUC Parameter ID

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
SINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency.		
This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements shall not exist arraySize Semantics shall not exist		full
Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType
BSW Parameter	BSW Type
SINT32_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is sint32 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001) Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType
BSW Parameter	BSW Type
SINT8	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is sint8.	
Template Description	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type





baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements shall not exist arraySize Semantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType
BSW Parameter	BSW Type
SINT8_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is sint8 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , CommonStructure::Service Needs::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001) Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType
BSW Parameter	BSW Type
UINT16	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is uint16.	
Template Description	





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType
BSW Parameter	BSW Type
UINT16_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is uint16 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , CommonStructure::Service Needs::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001) Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
UINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is uint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32 maxNumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
UINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is uint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type





baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001) Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
UINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is uint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType	
BSW Parameter		BSW Type
UINT8_DYN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is uint8 array with dynamic length.		
Template Description		



**BaseTypeDirectDefinition.baseTypeEncoding:**

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

DiagnosticDataElement.arraySizeSemantics:

This attribute controls the meaning of the value of the array size.

DiagnosticDataElement.maxNumberOfElements:

The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.

DiagnosticValueNeeds.fixedLength:

This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency.

This attribute controls whether the data length of the data is fixed.

M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.[baseTypeEncoding](#), AsamHdo::BaseTypes::BaseTypeDirectDefinition.[baseTypeSize](#), DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.[arraySizeSemantics](#), Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement.[maxNumberOfElements](#), CommonStructure::Service Needs::DiagnosticValueNeeds.[fixedLength](#)

Mapping Rule

baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max
NumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics
exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002) Derivation from
DiagnosticValueNeeds.fixedLength=0 possible.

Mapping Type

full

Mapping Status

valid

ECUC Parameter ID

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataType
BSW Parameter	BSW Type
UINT8_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is uint8 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , CommonStructure::Service Needs::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type





baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_ DEXT_01001) Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataUsePort		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines which interface shall be used to access the data.		
Template Description		
This attribute controls whether interaction requires the software-component to react synchronously on a request or whether it processes the request in background but still the DCM has to issue the call again to eventually obtain the result of the request.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagnosticValueNeeds.processingStyle		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00713]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort	
BSW Parameter		BSW Type
USE_DATA_ASYNCH_CLIENT_SERVER		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The DCM will access the Data using an R-Port requiring a asynchronous ClientServerInterface DataServices_{Data}. The R-Port is named DataServices_{Data} where {Data} is the name of the container DcmDspData.		
Template Description		
The software-component processes the request in background but still the Dcm has to issue the call again to eventually obtain the result of the request.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagnosticProcessingStyleEnum.processingStyleAsynchronous		
Mapping Rule		Mapping Type
DiagnosticServiceSwMapping is having a SwcServiceDependency and ServiceNeeds::DiagnosticProcessingStyleEnum is equal to processingStyleAsynchronous		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort	
BSW Parameter		BSW Type





USE_DATA_ASYNCH_CLIENT_SERVER_ERROR	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
The Dcm will access the Data using an R-Port requiring a asynchronous ClientServerInterface DataServices_{Data}. The parameter ErrorCode can be returned to allow the application to trigger a negative response during the operation. The R-Port is named DataServices_{Data} where {Data} is the name of the container DcmDspData.	
Template Description	
The software-component processes the request in background but still the Dcm has to issue the call again to eventually obtain the result of the request or handle error code.	
M2 Parameter	
CommonStructure::ServiceNeeds::DiagnosticProcessingStyleEnum.processingStyleAsynchronousWithError	
Mapping Rule	Mapping Type
DiagnosticServiceSwMapping is having a SwcServiceDependency and ServiceNeeds::DiagnosticProcessingStyleEnum is equal to processingStyleAsynchronousWithError	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort
BSW Parameter	BSW Type
USE_DATA_ASYNCH_FNC	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
The DCM will access the Data using the functions that are defined in parameters of type EcucFunctionNameDef (but without DcmDspDataReadDataLengthFnc) in the DcmDspData container. DCM_E_PENDING return is allowed. OpStatus is existing as IN parameter.	
Template Description	
The software-component processes the request in background but still the Dcm has to issue the call again to eventually obtain the result of the request.	
M2 Parameter	
CommonStructure::ServiceNeeds::DiagnosticProcessingStyleEnum.processingStyleAsynchronous	
Mapping Rule	Mapping Type
DiagnosticServiceSwMapping is having a BswServiceDependency and ServiceNeeds::DiagnosticProcessingStyleEnum is equal to processingStyleAsynchronous	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort
BSW Parameter	BSW Type
USE_DATA_SENDER_RECEIVER	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
The DCM will access the Data using an Port requiring a SenderReceiverInterface (with isService=false) DataServices_{Data}. The Port is namedDataServices_{Data} where {Data} is the name of the container DcmDspData.	
Template Description	
This represents the ability to define a mapping of a diagnostic service to a software-component. This kind of service mapping is applicable for the usage of SenderReceiverInterfaces or event/notifier semantics in Service Interfaces on the adaptive platform.	
M2 Parameter	





DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceDataMapping	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDataUsePort	
BSW Parameter		BSW Type
USE_DATA_SENDER_RECEIVER_AS_SERVICE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The DCM will access the Data using an service Port requiring a SenderReceiverInterface (with isService=true) Data Services_{Data} . The Port is namedDataServices_{Data} where {Data} is the name of the container DcmDspData.		
Template Description		
This represents the ability to define a mapping of a diagnostic service to a software-component. This kind of service mapping is applicable for the usage of SenderReceiverInterfaces or event/notifier semantics in Service Interfaces on the adaptive platform.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceDataMapping		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDataWriteFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name to request application to write the data value of a DID. (WriteData-function). This parameter is related to the interface Xxx_WriteData.		
Template Description		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDependency		
Mapping Rule		Mapping Type
It could be possible to get the FNC name via BswServiceDependency		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00670]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDiagnosisScaling/DcmDspAlternativeData Type	
BSW Parameter		BSW Type





DcmDspTextTableMapping	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.	
Template Description	
This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuMethod	
Mapping Rule	Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00999]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDiagnosisScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping
BSW Parameter	BSW Type
DcmDspDiagnosisRepresentationDataValue	ECUC-INTEGER-PARAM-DEF
BSW Description	
The data value in the diagnosis representation.	
Template Description	
This represents a textual constant in the computation method.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuConstTextContent.vt	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01001]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspDiagnosisScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping
BSW Parameter	BSW Type
DcmDspInternalDataValue	ECUC-INTEGER-PARAM-DEF
BSW Description	
The ECU internal data value.	
Template Description	





CompuScale.lowerLimit: This specifies the lower limit of the scale.	
CompuScale.upperLimit: This specifies the upper limit of a of the scale.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspDidDataSupportInfo		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container defines the supported information.		
Template Description		
DiagnosticParameter.supportInfo: This attribute represents the ability to define which bit of the support info byte is representing this part of the PID.		
DiagnosticDataIdentifier.supportInfoByte: This attribute represents the supported information associated with the DiagnosticDataIdentifier.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.supportInfo, DiagnosticExtract::CommonDiagnostics::DiagnosticDataIdentifier.supportInfoByte		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01104]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspExternalSRDataElementClass/DcmDataElementInstance	
BSW Parameter		BSW Type
DcmDataElementInstanceRef		ECUC-INSTANCE-REFERENCE-DEF
BSW Description		
Instance Reference to the primitive or array data which shall be read or written. Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in ParameterInterfaces (read only). This reference is applicable if the AutosarDataPrototype is typed with a ApplicationPrimitiveDataType of category VALUE or BOOLEAN or ApplicationArrayDataType or if the AutosarDataPrototype is typed with a ImplementationDataType of category VALUE, ARRAY or TYPE_REFERENCE that in turn boils down to VALUE or ARRAY		
Template Description		
DiagnosticServiceDataMapping.mappedDataElement: This represents the dataElement in the application software that is accessed for diagnostic purpose. This role is applicable on the classic platform.		
DiagnosticEnvDataElementCondition: This meta-class represents the ability to formulate a diagnostic environment condition based on the value of a data element owned by the application software.		





M2 Parameter	
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceDataMapping. mappedDataElement , DiagnosticExtract::Dcm::EnvironmentalCondition:: DiagnosticEnvDataElementCondition	
Mapping Rule	Mapping Type
DiagnosticServiceDataMapping maps to a primitive data.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00991]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspExternalSRDataElementClass/DcmSubElementInDataElementInstance	
BSW Parameter		BSW Type
DcmSubElementInDataElementInstanceRef		ECUC-INSTANCE-REFERENCE-DEF
BSW Description		
Instance Reference to the primitive sub-element (at any level) of composite data in a port which shall be read. Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in Parameter Interfaces (read only). This reference is applicable if the AutosarDataPrototype is typed with a ApplicationCompositeData Type.		
Template Description		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency		
Mapping Rule		Mapping Type
DiagnosticServiceDataMapping maps to a primitive element within a composite data, where the AutosarDataPrototype is typed with a ApplicationCompositeDataType.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00990]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData/DcmDspExternalSRDataElementClass/DcmSubElementInImplDataElementInstance	
BSW Parameter		BSW Type
DcmSubElementInImplDataElementInstanceRef		ECUC-INSTANCE-REFERENCE-DEF
BSW Description		
Instance Reference to the primitive sub-element (at any level) of composite data in a port which shall be read. Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in Parameter Interfaces (read only). This reference is applicable if the AutosarDataPrototype is typed with a ImplementationDataType of category STRUCTURE or ARRAY. Please note that in case of ARRAY the index attribute in the target reference has to be set to select a single array element.		
Template Description		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency		
Mapping Rule		Mapping Type





DiagnosticServiceDataMapping maps to a primitive element within a composite data, where the AutosarDataPrototype is typed with a ApplicationCompositeDataType ImplementationDataType of category STRUCTURE or ARRAY.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00992]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspData	
BSW Parameter		BSW Type
DcmDspOdxDataDescription		ECUC-ADD-INFO-PARAM-DEF
BSW Description		
Defines additional description for ODX documentation		
Template Description		
This specifies the long name of the object. Long name is targeted to human readers and acts like a headline.		
M2 Parameter		
GenericStructure::GeneralTemplateClasses::Identifiable::MultilanguageReferrable. longName		
Mapping Rule		Mapping Type
Textual description that characterizes the DID element with respect to the ODX long name can be provided by means of the attribute long-Name.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00988]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type
DcmDspDataDefaultEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the default endianness belonging to a DID, RID or PID if the corresponding data does not define an endianness.		
Template Description		
Defines the default endianness of the data belonging to a DID or RID which is applicable if the DiagnosticDataElement does not define the endianness via the swDataDefProps.baseType attribute.		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps. defaultEndianness		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00987]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type
DcmDspDid		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) of the DID.		





Template Description	
DiagnosticDataIdentifier: This meta-class represents the ability to model a diagnostic data identifier (DID) that is fully specified regarding the payload at configuration-time.	
DiagnosticDynamicDataIdentifier: This meta-class represents the ability to define a diagnostic data identifier (DID) at run-time.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticDataIdentifier, DiagnosticExtract::CommonDiagnostics::DiagnosticDynamicDataIdentifier	
Mapping Rule	Mapping Type
If the DiagnosticDataIdentifier is referenced by DiagnosticDataByIdentifier, DiagnosticIOControl, or DiagnosticReadDataByPeriodicID, DiagnosticDataChangeTrigger	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00601]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid	
BSW Parameter		BSW Type
DcmDspDidIdentifier		ECUC-INTEGER-PARAM-DEF
BSW Description		
2 byte Identifier of the DID		
Within each DcmConfigSet all DcmDspDidIdentifier values shall be unique.		
Template Description		
This is the numerical identifier used to identify the DiagnosticAbstractDataIdentifier in the scope of diagnostic workflow		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractDataIdentifier.id		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00602]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidSignal	
BSW Parameter		BSW Type
DcmDspDataByteSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the array length in bytes or the maximum array length for variable datalengths.		
Template Description		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		





Mapping Rule	Mapping Type
S/R via array: $\text{DcmDspDataByteSize} = \text{maxNumberOfElements} * (\text{baseTypeSize} / 8)$ C/S of FNC callback: $\text{DcmDspDataByteSize} = \text{maxNumberOfElements}$ Note: 8 is the baseType Size of UINT8	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01106]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidSignal
BSW Parameter	BSW Type
DcmDspDidByteOffset	ECUC-INTEGER-PARAM-DEF
BSW Description	
Defines the absolute byte offset of the data defined by DcmDspDidDataRef reference to DcmDspData container in the DID.	
Template Description	
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.bitOffset	
Mapping Rule	Mapping Type
bitOffset / 8	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01105]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidSignal
BSW Parameter	BSW Type
DcmDspDidSignalCompositeRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to the contained signal.	
Template Description	
DiagnosticParameterIdent.subElement: This collection represents the subElements on the top level. DiagnosticParameterElement.subElement: This collection represents the sub-elements on the next lower level.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdent.subElement, DiagnosticExtract::CommonDiagnostics::DiagnosticParameterElement.subElement	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01232]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid	
BSW Parameter		BSW Type
DcmDspDidSignalCompositePool		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Defines a collection of all contained signals for this root signal.		
Template Description		
This meta-class represents an element of a DiagnosticParameter if the DiagnosticParameter represents a structure.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01231]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidSignalCompositePool/DcmDspDidSignal	
BSW Parameter		BSW Type
DcmDspDataByteSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the array length in bytes or the maximum array length for variable datalengths.		
Template Description		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		
Mapping Rule		Mapping Type
S/R via array: DcmDspDataByteSize= maxNumberOfElements * (baseTypeSize / 8) C/S of FNC callback: DcmDspDataByteSize= maxNumberOfElements Note: 8 is the baseType Size of UINT8		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01106]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidSignalCompositePool/DcmDspDidSignal	
BSW Parameter		BSW Type
DcmDspDidByteOffset		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the absolute byte offset of the data defined by DcmDspDidDataRef reference to DcmDspData container in the DID.		
Template Description		
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.		





M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.bitOffset	
Mapping Rule	Mapping Type
bitOffset / 8	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01105]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid/DcmDspDidSignalCompositePool/DcmDspDidSignal	
BSW Parameter		BSW Type
DcmDspDidSignalCompositeRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the contained signal.		
Template Description		
DiagnosticParameterIdent.subElement: This collection represents the subElements on the top level.		
DiagnosticParameterElement.subElement: This collection represents the sub-elements on the next lower level.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdent.subElement, DiagnosticExtract::CommonDiagnostics::DiagnosticParameterElement.subElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01232]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid	
BSW Parameter		BSW Type
DcmDspDidSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Length of a DID in byte(s).		
Template Description		
This attribute indicates the size in bytes of the DiagnosticDataIdentifier.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataIdentifier.didSize		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01099]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDid	
BSW Parameter		BSW Type





DcmDspDidSupportInfo	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
This container defines the support information to declare the usability of the data bytes within the DIDs	
Template Description	
This attribute represents the supported information associated with the DiagnosticDataIdentifier.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticDataIdentifier.supportInfoByte	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01102]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo
BSW Parameter	BSW Type
DcmDspDDDIDMaxElements	ECUC-INTEGER-PARAM-DEF
BSW Description	
Maximum number of source elements of a DDDID.	
Template Description	
This represents the maximum number of source elements of the dynamically created DID.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::DynamicallyDefineDataIdentifier::DiagnosticDynamicallyDefineDataIdentifier.maxSourceElement	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00970]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidControl
BSW Parameter	BSW Type
DcmDspDidControlRoleRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to DcmDspAuthenticationRow that defines a role in that this IO can be controlled.	
Template Description	
This attribute allows for the specification of the position of the enclosing role in a bitfield of roles.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticAuthRole.bitPosition	
Mapping Rule	Mapping Type
Applicable if the current access permission is referenced by DiagnosticIOControl. The value of DcmDspDidControlRolebased is calculated based on the bits of all referenced DiagnosticAuthRole.bitPosition, where a value of 2 ^{bitPosition} is used for each DiagnosticAuthRole.bitPosition. The accumulated value represents a bitfield that has a bit set for each DiagnosticAuthRole.bitPosition.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01143]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidControl	
BSW Parameter		BSW Type
DcmDspDidControlSecurityLevelRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DcmDspSecurityRow Security levels allowed to control this DID. If there is no reference, no check of security level shall be done.		
Template Description		
This represents the associated DiagnosticSecurityLevels		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission. securityLevel		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00620]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidControl	
BSW Parameter		BSW Type
DcmDspDidControlSessionRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DcmDspSessionRow Sessions allowed to control this DID. If there is no reference, no check of session level shall be done.		
Template Description		
This represents the associated DiagnosticSessions		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission. diagnosticSession		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00621]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidControl	
BSW Parameter		BSW Type
DcmDspDidFreezeCurrentState		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This indicates the presence of "FreezeCurrentState".		
Template Description		
DiagnosticIOControl.freezeCurrentState: Setting this attribute to true represents the ability of the Dcm to execute a freezeCurrentState.		
DiagnosticIOControlNeeds.freezeCurrentStateSupported: This attribute determines, if the referenced port supports temporary freezing of I/O value.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::IOControl::DiagnosticIOControl. freezeCurrentState , Common Structure::ServiceNeeds::DiagnosticIOControlNeeds. freezeCurrentStateSupported		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00624]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidControl	
BSW Parameter		BSW Type
DcmDspDidResetToDefault		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This indicates the presence of "ResetToDefault".		
Template Description		
DiagnosticIOControl.resetToDefault: Setting this attribute to true represents the ability of the Dcm to execute a resetToDefault.		
DiagnosticIOControlNeeds.resetToDefaultSupported: This represents a flag for the existence of the ResetToDefault operation in the service interface.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::IOControl::DiagnosticIOControl. resetToDefault , CommonStructure::ServiceNeeds::DiagnosticIOControlNeeds. resetToDefaultSupported		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00623]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidControl	
BSW Parameter		BSW Type
DcmDspDidShortTermAdjustment		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This indicates the presence of "ShortTermAdjustment".		
Template Description		
DiagnosticIOControl.shortTermAdjustment: Setting this attribute to true represents the ability of the Dcm to execute a shortTermAdjustment.		
DiagnosticIOControlNeeds.shortTermAdjustmentSupported: This attribute determines, if the referenced port supports temporarily setting of I/O value to a specific value provided by the diagnostic tester.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::IOControl::DiagnosticIOControl. shortTermAdjustment , CommonStructure::ServiceNeeds::DiagnosticIOControlNeeds. shortTermAdjustmentSupported		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00625]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo	
BSW Parameter		BSW Type
DcmDspDidDynamicallyDefined		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Indicates if this DID can be dynamically defined true = DID can be dynamically defined false = DID can not be dynamically defined		
Template Description		
DiagnosticDataIdentifier: This meta-class represents the ability to model a diagnostic data identifier (DID) that is fully specified regarding the payload at configuration-time.		
DiagnosticDynamicDataIdentifier: This meta-class represents the ability to define a diagnostic data identifier (DID) at run-time.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics:: DiagnosticDataIdentifier , DiagnosticExtract::CommonDiagnostics:: DiagnosticDynamicDataIdentifier		
Mapping Rule		Mapping Type
true: in case the DiagnosticAbstractDataIdentifier for the DID value is aggregated by DiagnosticDynamicDataIdentifier false: in case the DiagnosticAbstractDataIdentifier for the DID value is aggregated by DiagnosticDataIdentifier		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00612]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidRead	
BSW Parameter		BSW Type
DcmDspDidReadRoleRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DcmDspAuthenticationRow that defines a role in that this DID can be read.		
Template Description		
This attribute allows for the specification of the position of the enclosing role in a bitfield of roles.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAuthRole.bitPosition		
Mapping Rule		Mapping Type
Applicable if the current access permission is referenced by DiagnosticReadDataByIdentifier. The value of DcmDspDidReadRole is calculated based calculated based on the bits of all referenced DiagnosticAuthRole.bitPosition, where a value of 2 ^{bitPosition} is used for each DiagnosticAuthRole.bitPosition. The accumulated value represents a bitfield that has a bit set for each DiagnosticAuthRole.bitPosition.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01141]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidRead	
BSW Parameter		BSW Type
DcmDspDidReadSecurityLevelRef		ECUC-REFERENCE-DEF
BSW Description		





Reference to DcmDspSecurityRow Referenced security levels are allowed to read this DID. If there is no reference, no check of security level shall be done.	
Template Description	
This represents the associated DiagnosticSecurityLevels	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticAccessPermission. securityLevel	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00614]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidRead	
BSW Parameter		BSW Type
DcmDspDidReadSessionRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DcmDspSessionRow Referenced sessions are allowed to read this DID. If there is no reference, no check of session level shall be done.		
Template Description		
This represents the associated DiagnosticSessions		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission. diagnosticSession		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00615]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidWrite	
BSW Parameter		BSW Type
DcmDspDidWriteRoleRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DcmDspAuthenticationRow that defines a role in that this DID can be written.		
Template Description		
This attribute allows for the specification of the position of the enclosing role in a bitfield of roles.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAuthRole. bitPosition		
Mapping Rule		Mapping Type
Applicable if the current access permission is referenced by DiagnosticWriteDataByIdentifier. The value of DcmDspDidWriteRolecalculated is calculated based on the bits of all referenced DiagnosticAuthRole.bitPosition, where a value of 2 ^{bitPosition} is used for each DiagnosticAuthRole.bitPosition. The accumulated value represents a bitfield that has a bit set for each DiagnosticAuthRole.bitPosition.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01142]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidWrite	
BSW Parameter		BSW Type
DcmDspDidWriteSecurityLevelRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DcmDspSecurityRow Referenced security levels are allowed to write this DID. If there is no reference, no check of security level shall be done.		
Template Description		
This represents the associated DiagnosticSecurityLevels		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission. securityLevel		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00617]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspDidInfo/DcmDspDidWrite	
BSW Parameter		BSW Type
DcmDspDidWriteSessionRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DcmDspSessionRow Referenced sessions are allowed to write this DID. If there is no reference, no check of session level shall be done.		
Template Description		
This represents the associated DiagnosticSessions		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission. diagnosticSession		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00618]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspEcuReset/DcmDspEcuResetRow	
BSW Parameter		BSW Type
DcmDspEcuResetId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the subfunction ID		
Template Description		
This represents the maximum number of source elements of the dynamically created DID.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::DynamicallyDefineDataIdentifier::DiagnosticDynamicallyDefineDataIdentifier. maxSourceElement		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01113]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspEcuReset/DcmDspEcuResetRow	
BSW Parameter		BSW Type
DcmResponseToEcuReset		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the answer to EcuReset service should come: Before or after the reset.		
Template Description		
This attribute defines whether the response to the EcuReset service shall be transmitted before or after the actual reset.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::EcuReset::DiagnosticEcuResetClass. respondToReset		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01039]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspEcuReset/DcmDspEcuResetRow/DcmResponseToEcuReset	
BSW Parameter		BSW Type
AFTER_RESET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Answer to EcuReset service should come after the reset.		
Template Description		
Answer to EcuReset service should come after the reset.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::EcuReset::DiagnosticResponseToEcuResetEnum. respondAfterReset		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspEcuReset/DcmDspEcuResetRow/DcmResponseToEcuReset	
BSW Parameter		BSW Type
BEFORE_RESET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Answer to EcuReset service should come before the reset.		
Template Description		
Answer to EcuReset service should come before the reset.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::EcuReset::DiagnosticResponseToEcuResetEnum. respondBeforeReset		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type
DcmDspMaxDidToRead		ECUC-INTEGER-PARAM-DEF
BSW Description		
Indicates the maximum allowed DIDs in a single "ReadDataByIdentifier" request.		
Template Description		
This attribute represents the maximum number of allowed DIDs in a single instance of DiagnosticReadDataByIdentifier.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::DataByIdentifier::DiagnosticReadDataByIdentifierClass. maxDidToRead		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00638]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type
DcmDspMaxPeriodicDidToRead		ECUC-INTEGER-PARAM-DEF
BSW Description		
Indicates the maximum allowed periodicDIDs which can be read in a single "ReadDataByPeriodicIdentifier" request.		
Template Description		
This represents the maximum number of data identifiers that can be included in one request.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticReadDataByPeriodicIDClass. maxPeriodicDidToRead		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00956]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo	
BSW Parameter		BSW Type
DcmDspMemoryIdValue		ECUC-INTEGER-PARAM-DEF
BSW Description		





Value of the memory device identifier used.	
Each DcmDspMemoryIdInfo should have a unique ID.	
The MemoryIdValue is retrieved from the request messages (RMBA,WMBA,RD,RU,DDDI) according to ISO-14229-1 with the most significant byte of the request parameter memoryAddress.	
Template Description	
This represents the identification of the memory segment.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdentifier.id	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00913]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspReadMemoryRangeByLabelInfo	
BSW Parameter		BSW Type
DcmDspReadMemoryRangeByLabelHigh		ECUC-STRING-PARAM-DEF
BSW Description		
High memory address as label (string) of a range allowed for reading.		
Template Description		
This represents a symbolic label for the upper bound for addresses of the memory segment.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdentifier.memoryHighAddressLabel		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01070]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspReadMemoryRangeByLabelInfo	
BSW Parameter		BSW Type
DcmDspReadMemoryRangeByLabelLow		ECUC-STRING-PARAM-DEF
BSW Description		
Low memory address as label (string) of a range allowed for reading.		
Template Description		
This represents a symbolic label for the lower bound for addresses of the memory segment.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdentifier.memoryLowAddressLabel		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01069]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspReadMemoryRangeByLabelInfo	
BSW Parameter		BSW Type
DcmDspReadMemoryRangeSecurityLevelRef		ECUC-REFERENCE-DEF
BSW Description		
Link to the Security Access Levels needed for read access on this memory address. If there is no reference, no check of security level shall be done.		
Template Description		
This represents the associated DiagnosticSecurityLevels		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission. securityLevel		
Mapping Rule		Mapping Type
DiagnosticMemoryIdentifier referenced in the role memoryRange is referenced by a DiagnosticReadMemoryByAddress The accessPermission holds the security level information.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01071]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspReadMemoryRangeByLabelInfo	
BSW Parameter		BSW Type
DcmDspReadMemoryRangeSessionLevelRef		ECUC-REFERENCE-DEF
BSW Description		
Link to the session level needed for access to this memory address range. If there is no reference, no check of session level shall be done.		
Template Description		
This represents the associated DiagnosticSessions		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission. diagnosticSession		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01088]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspReadMemoryRangeInfo	
BSW Parameter		BSW Type
DcmDspReadMemoryRangeHigh		ECUC-INTEGER-PARAM-DEF
BSW Description		
High memory address of a range allowed for reading		
Template Description		
This represents the upper bound for addresses of the memory segment.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdentifier. memoryHighAddress		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00787]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspReadMemoryRangeInfo	
BSW Parameter		BSW Type
DcmDspReadMemoryRangeLow		ECUC-INTEGER-PARAM-DEF
BSW Description		
Low memory address of a range allowed for reading		
Template Description		
This represents the lower bound for addresses of the memory segment.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdentifier.memoryLowAddress		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00786]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspReadMemoryRangeInfo	
BSW Parameter		BSW Type
DcmDspReadMemoryRangeSecurityLevelRef		ECUC-REFERENCE-DEF
BSW Description		
Link to the Security Access Levels needed for read access on this memory address. If there is no reference, no check of security level shall be done.		
Template Description		
This represents the associated DiagnosticSecurityLevels		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel		
Mapping Rule		Mapping Type
DiagnosticMemoryIdentifier referenced in the role memoryRange is referenced by a Diagnostic ReadMemoryByAddress The accessPermission holds the security level information.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00788]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspReadMemoryRangeInfo	
BSW Parameter		BSW Type
DcmDspReadMemoryRangeSessionLevelRef		ECUC-REFERENCE-DEF





BSW Description	
Link to the session level needed for access to this memory address range. If there is no reference, no check of session level shall be done.	
Template Description	
This represents the associated DiagnosticSessions	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticAccessPermission. diagnosticSession	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01086]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspWriteMemoryRangeByLabelInfo	
BSW Parameter		BSW Type
DcmDspWriteMemoryRangeByLabelHigh		ECUC-STRING-PARAM-DEF
BSW Description		
High memory address as label (string) of a range allowed for writing.		
Template Description		
This represents a symbolic label for the upper bound for addresses of the memory segment.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdentifier. memoryHighAddressLabel		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01075]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspWriteMemoryRangeByLabelInfo	
BSW Parameter		BSW Type
DcmDspWriteMemoryRangeByLabelLow		ECUC-STRING-PARAM-DEF
BSW Description		
Low memory address as label (string) of a range allowed for writing.		
Template Description		
This represents a symbolic label for the lower bound for addresses of the memory segment.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdentifier. memoryLowAddressLabel		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01074]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspWriteMemoryRangeByLabelInfo	
BSW Parameter		BSW Type
DcmDspWriteMemoryRangeSecurityLevelRef		ECUC-REFERENCE-DEF
BSW Description		
Link to the Security Access Levels needed for write access on this memory address. If there is no reference, no check of security level shall be done.		
Template Description		
This represents the associated DiagnosticSecurityLevels		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission. securityLevel		
Mapping Rule		Mapping Type
DiagnosticMemoryIdentifier referenced in the role memoryRange is referenced by a DiagnosticWriteMemoryByAddress The accessPermission holds the security level information.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01076]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspWriteMemoryRangeByLabelInfo	
BSW Parameter		BSW Type
DcmDspWriteMemoryRangeSessionLevelRef		ECUC-REFERENCE-DEF
BSW Description		
Link to the session level needed for access to this memory address range. If there is no reference, no check of session level shall be done.		
Template Description		
This represents the associated DiagnosticSessions		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission. diagnosticSession		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01089]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspWriteMemoryRangeInfo	
BSW Parameter		BSW Type
DcmDspWriteMemoryRangeHigh		ECUC-INTEGER-PARAM-DEF
BSW Description		
High memory address of a range allowed for writing.		
Template Description		
This represents the upper bound for addresses of the memory segment.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdentifier. memoryHighAddress		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00791]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspWriteMemoryRangeInfo	
BSW Parameter		BSW Type
DcmDspWriteMemoryRangeLow		ECUC-INTEGER-PARAM-DEF
BSW Description		
Low memory address of a range allowed for writing		
Template Description		
This represents the lower bound for addresses of the memory segment.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdentifier.memoryLowAddress		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00790]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspWriteMemoryRangeInfo	
BSW Parameter		BSW Type
DcmDspWriteMemoryRangeSecurityLevelRef		ECUC-REFERENCE-DEF
BSW Description		
Link to the Security Access Levels needed for write access on this memory address. If there is no reference, no check of security level shall be done.		
Template Description		
This represents the associated DiagnosticSecurityLevels		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAccessPermission.securityLevel		
Mapping Rule		Mapping Type
DiagnosticMemoryIdentifier referenced in the role memoryRange is referenced by a Diagnostic WriteMemoryByAddress The accessPermission holds the security level information.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00793]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemory/DcmDspMemoryIdInfo/DcmDspWriteMemoryRangeInfo	
BSW Parameter		BSW Type
DcmDspWriteMemoryRangeSessionLevelRef		ECUC-REFERENCE-DEF





BSW Description	
Link to the session level needed for access to this memory address range. If there is no reference, no check of session level shall be done.	
Template Description	
This represents the associated DiagnosticSessions	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticAccessPermission. diagnosticSession	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01087]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspMemoryTransfer/DcmDspMemoryTransferIdInfo	
BSW Parameter		BSW Type
DcmDspMemoryIdValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Value of the memory device identifier used. Each DcmDspMemoryIdInfo should have a unique ID. The MemoryIdValue is retrieved from the request messages (RMBA,WMBA,RD,RU,DDDI) according to ISO-14229-1 with the most significant byte of the request parameter memoryAddress.		
Template Description		
This represents the identification of the memory segment.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::MemoryByAddress::DiagnosticMemoryIdentifier. id		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01138]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPeriodicTransmission	
BSW Parameter		BSW Type
DcmDspMaxPeriodicDidScheduler		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the maximum number of periodicDataIdentifiers that can be scheduled concurrently.		
Template Description		
This represents the maximum number of periodic data identifiers that can be scheduled in parallel.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticReadDataByPeriodicIDClass. schedulerMaxNumber		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00962]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPeriodicTransmission	
BSW Parameter		BSW Type
DcmDspPeriodicTransmissionFastRate		ECUC-FLOAT-PARAM-DEF
BSW Description		
This parameter give the transmission rate of the requested periodicDataIdentifiers to be used if the parameter transmission Mode given in the ReadDataByPeriodicID request is equal to 0x03 ("sendAtFastRate"). This parameter value in seconds have to be configured as a multiple of DcmTaskTime. min: A negative value and zero is not allowed.		
Template Description		
DiagnosticPeriodicRate.period: This represents the period of the DiagnosticPeriodicRate in seconds. DiagnosticPeriodicRate.periodicRateCategory: This attribute represents the category of the periodic rate.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticPeriodicRate. period , Diagnostic Extract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticPeriodicRate. periodicRateCategory		
Mapping Rule		Mapping Type
The parameter shall exist if DiagnosticPeriodicRate.periodicRateCategory is set to Diagnostic PeriodicRateCategoryEnum.periodicRateFast.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00960]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPeriodicTransmission	
BSW Parameter		BSW Type
DcmDspPeriodicTransmissionMediumRate		ECUC-FLOAT-PARAM-DEF
BSW Description		
This parameter give the transmission rate of the requested periodicDataIdentifiers to be used if the parameter transmission Mode given in the ReadDataByPeriodicID request is equal to 0x02 ("sendAtMediumRate"). This parameter value in seconds have to be configured as a multiple of DcmTaskTime. min: A negative value and zero is not allowed.		
Template Description		
DiagnosticPeriodicRate.period: This represents the period of the DiagnosticPeriodicRate in seconds. DiagnosticPeriodicRate.periodicRateCategory: This attribute represents the category of the periodic rate.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticPeriodicRate. period , Diagnostic Extract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticPeriodicRate. periodicRateCategory		
Mapping Rule		Mapping Type
The parameter shall exist if DiagnosticPeriodicRate.periodicRateCategory is set to Diagnostic PeriodicRateCategoryEnum.periodicRateMedium.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00959]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPeriodicTransmission	
BSW Parameter		BSW Type
DcmDspPeriodicTransmissionSlowRate		ECUC-FLOAT-PARAM-DEF
BSW Description		
This parameter give the transmission rate of the requested periodicDataIdentifiers to be used if the parameter transmission Mode given in the ReadDataByPeriodicID request is equal to 0x01 ("sendAtSlowRate"). This parameter value in seconds have to be configured as a multiple of DcmTaskTime. min: A negative value and zero is not allowed.		
Template Description		
DiagnosticPeriodicRate.period: This represents the period of the DiagnosticPeriodicRate in seconds. DiagnosticPeriodicRate.periodicRateCategory: This attribute represents the category of the periodic rate.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticPeriodicRate. period , Diagnostic Extract::Dcm::DiagnosticService::ReadDataByPeriodicID::DiagnosticPeriodicRate. periodicRateCategory		
Mapping Rule		Mapping Type
The parameter shall exist if DiagnosticPeriodicRate.periodicRateCategory is set to Diagnostic PeriodicRateCategoryEnum.periodicRateSlow.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00958]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type
DcmDspPid		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container defines the availability of a PID to the DCM.		
Template Description		
This meta-class represents the ability to model a diagnostic parameter identifier (PID) for the purpose of executing on-board diagnostics (OBD).		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00626]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid	
BSW Parameter		BSW Type
DcmDspPidData		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container defines the parameter for a Signal in the PID.		
Template Description		





This represents the data carried by the DiagnosticParameterIdentifier.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier.dataElement	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00865]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData
BSW Parameter	BSW Type
DcmDspPidByteOffset	ECUC-INTEGER-PARAM-DEF
BSW Description	
This is the position in bytes of the PID structure and will not start at position 0 in case a support information is available (for packeted PIDs).	
Template Description	
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.bitOffset	
Mapping Rule	Mapping Type
bitOffset / 8	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01107]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData
BSW Parameter	BSW Type
DcmDspPidDataByteSize	ECUC-INTEGER-PARAM-DEF
BSW Description	
Defines the array length in bytes or the maximum array length for variable datalengths.	
Template Description	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements	
Mapping Rule	Mapping Type
S/R via array: DcmDspPidDataByteSize= maxNumberOfElements * (baseTypeSize / 8) C/S of FNC callback: DcmDspPidDataByteSize= maxNumberOfElements Note: 8 is the baseType Size of UINT8	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01108]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData	
BSW Parameter		BSW Type
DcmDspPidDataSupportInfo		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container defines the supported information.		
Template Description		
This attribute represents the ability to define which bit of the support info byte is representing this part of the PID.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.supportInfo		
Mapping Rule		Mapping Type
Applicable if the DiagnosticParameter is owned by a DiagnosticParameterIdentifier		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00874]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidDataSupportInfo	
BSW Parameter		BSW Type
DcmDspPidDataSupportInfoBit		ECUC-INTEGGER-PARAM-DEF
BSW Description		
Referenced Bit of the SupportInfo		
Template Description		
defines the bit in the SupportInfo byte, which represents the PID DataElement pidSize / position / size. Unit: byte.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterSupportInfo.supportInfoBit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00876]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidDataSupportInfo	
BSW Parameter		BSW Type
DcmDspPidDataSupportInfoRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DcmDspPidSupportInfo		
Template Description		
This represents the supported information associated with the DiagnosticParameterIdentifier.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier.supportInfoByte		
Mapping Rule		Mapping Type
Shall refer to the DiagnosticParameterIdentifier.supportInfoByte of the enclosing DiagnosticParameterIdentifier		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00875]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspDiagnosisScaling/DcmDspAlternativeDataType
BSW Parameter	BSW Type
DcmDspTextTableMapping	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.	
Template Description	
This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuMethod	
Mapping Rule	Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00999]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspDiagnosisScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping
BSW Parameter	BSW Type
DcmDspDiagnosisRepresentationDataValue	ECUC-INTEGER-PARAM-DEF
BSW Description	
The data value in the diagnosis representation.	
Template Description	
This represents a textual constant in the computation method.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuConstTextContent.vt	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01001]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspDiagnosisScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping
BSW Parameter	BSW Type
DcmDspInternalDataValue	ECUC-INTEGER-PARAM-DEF





BSW Description	
The ECU internal data value.	
Template Description	
CompuScale.lowerLimit: This specifies the lower limit of the scale. CompuScale.upperLimit: This specifies the upper limit of a of the scale.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataEndianness	
BSW Parameter		BSW Type
BIG_ENDIAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Most significant byte shall be stored at the lowest address.		
Template Description		
This attribute specifies the byte order of the base type.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. byteOrder		
Mapping Rule		Mapping Type
BaseTypeDirectDefinition.byteOrder == ByteOrderEnum.mostSignificantByteFirst		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataEndianness	
BSW Parameter		BSW Type
LITTLE_ENDIAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Most significant byte shall be stored at the highest address		
Template Description		
This attribute specifies the byte order of the base type.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. byteOrder		
Mapping Rule		Mapping Type
BaseTypeDirectDefinition.byteOrder ==ByteOrderEnum.mostSignificantByteLast		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataEndianness	
BSW Parameter		BSW Type
OPAQUE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Opaque data endianness		
Template Description		
This attribute specifies the byte order of the base type.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. byteOrder		
Mapping Rule		Mapping Type
BaseTypeDirectDefinition.byteOrder == ByteOrderEnum.opaque		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01	
BSW Parameter		BSW Type
DcmDspPidDataReadFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name for reading PID data value. This is only relevant if DcmDspPidDataUsePort==USE_DATA_SYNCH_FNC. This parameter is related to the interface Xxx_ReadData.		
Template Description		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency		
Mapping Rule		Mapping Type
The BswServiceDependency should have aRoleBasedBswModuleEntryAssignment that in turn has attribute role set to xxx_ReadData and points to a BswModuleEntry.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00629]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType	
BSW Parameter		BSW Type
BOOLEAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is boolean.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		





M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticParameter Identifier.dataElement baseTypeEncoding = BOOLEAN baseTypeSize = 1	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType	
BSW Parameter		BSW Type
SINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is sint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticParameter Identifier.dataElement baseTypeEncoding = 2C baseTypeSize = 16	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType	
BSW Parameter		BSW Type
SINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is sint16 array.		
Template Description		





BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType	
BSW Parameter		BSW Type
SINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticParameter Identifier.dataElement baseTypeEncoding = 2C baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType	
BSW Parameter		BSW Type
SINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is sint32 array.		





Template Description	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is sint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticParameter Identifier.dataElement baseTypeEncoding = 2C baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType	
BSW Parameter		BSW Type
SINT8_N		ECUC-ENUMERATION-LITERAL-DEF





BSW Description	
Type of the data is sint8 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType	
BSW Parameter		BSW Type
UINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is uint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticParameter Identifier.dataElement baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType	





BSW Parameter	BSW Type
UINT16_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is uint16 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPid DataType
BSW Parameter	BSW Type
UINT32	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is uint32.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticParameter Identifier.dataElement baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType	
BSW Parameter		BSW Type
UINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is uint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType	
BSW Parameter		BSW Type
UINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is uint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticParameter Identifier.dataElement baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataType	
BSW Parameter		BSW Type
UINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is uint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataUsePort	
BSW Parameter		BSW Type
USE_DATA_SENDER_RECEIVER		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This represents the ability to define a mapping of a diagnostic service to a software-component. This kind of service mapping is applicable for the usage of SenderReceiverInterfaces or event/notifier semantics in Service Interfaces on the adaptive platform.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceDataMapping		
Mapping Rule		Mapping Type
DiagnosticServiceDataMapping.diagnosticDataElement refers to a DiagnosticDataElement that in turn is aggregated in the PID definition where the PortPrototype referenced in the role mapped DataElement.contextPort refers to a DataInterface where attribute isService is set to false.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataUsePort	
BSW Parameter		BSW Type
USE_DATA_SENDER_RECEIVER_AS_SERVICE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This represents the ability to define a mapping of a diagnostic service to a software-component. This kind of service mapping is applicable for the usage of SenderReceiverInterfaces or event/notifier semantics in Service Interfaces on the adaptive platform.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceDataMapping		
Mapping Rule		Mapping Type
DiagnosticServiceDataMapping.diagnosticDataElement refers to a DiagnosticDataElement that in turn is aggregated in the PID definition where the PortPrototype referenced in the role mapped DataElement.contextPort refers to a DataInterface where attribute isService is set to true.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataUsePort	
BSW Parameter		BSW Type
USE_DATA_SYNCH_CLIENT_SERVER		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This represents the ability to define a mapping of a diagnostic service to a software-component or a basic-software module. If the former is used then this kind of service mapping is applicable for the usage of ClientServerInterfaces.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping		
Mapping Rule		Mapping Type
DiagnosticServiceSwMapping.diagnosticDataElement refers to a DiagnosticDataElement that in turn is aggregated in the PID definition. DiagnosticServiceSwMapping.mappedSwcService Dependency shall exist.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidDataUsePort	
BSW Parameter		BSW Type
USE_DATA_SYNCH_FNC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This represents the ability to define a mapping of a diagnostic service to a software-component or a basic-software module. If the former is used then this kind of service mapping is applicable for the usage of ClientServerInterfaces.		
M2 Parameter		





DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping	
Mapping Rule	Mapping Type
DiagnosticServiceSwMapping.diagnosticDataElement refers to a DiagnosticDataElement that in turn is aggregated in the PID definition and that also defines the role mappedBswService Dependency.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidService01ExternalSRDataElementClass/DcmDataElementInstance
BSW Parameter	BSW Type
DcmDataElementInstanceRef	ECUC-INSTANCE-REFERENCE-DEF
BSW Description	
Instance Reference to the primitive or array data which shall be read or written. Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in ParameterInterfaces (read only). This reference is applicable if the AutosarDataPrototype is typed with a ApplicationPrimitiveDataType of category VALUE or BOOLEAN or ApplicationArrayDataType or if the AutosarDataPrototype is typed with a ImplementationDataType of category VALUE, ARRAY or TYPE_REFERENCE that in turn boils down to VALUE or ARRAY	
Template Description	
DiagnosticServiceDataMapping.mappedDataElement: This represents the dataElement in the application software that is accessed for diagnostic purpose. This role is applicable on the classic platform. DiagnosticEnvDataElementCondition: This meta-class represents the ability to formulate a diagnostic environment condition based on the value of a data element owned by the application software.	
M2 Parameter	
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceDataMapping.mappedDataElement, DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvDataElementCondition	
Mapping Rule	Mapping Type
DiagnosticServiceDataMapping maps to a primitive data.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00991]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidService01ExternalSRDataElementClass/DcmSubElementInDataElementInstance
BSW Parameter	BSW Type
DcmSubElementInDataElementInstanceRef	ECUC-INSTANCE-REFERENCE-DEF
BSW Description	
Instance Reference to the primitive sub-element (at any level) of composite data in a port which shall be read. Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in ParameterInterfaces (read only). This reference is applicable if the AutosarDataPrototype is typed with a ApplicationCompositeDataType.	
Template Description	
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.	
M2 Parameter	
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDependency	
Mapping Rule	Mapping Type





DiagnosticServiceDataMapping maps to a primitive element within a composite data, where the AutosarDataPrototype is typed with a ApplicationCompositeDataType.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00990]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService01/DcmDspPidService01ExternalSRDataElementClass/DcmSubElementInImplDataElementInstance	
BSW Parameter		BSW Type
DcmSubElementInImplDataElementInstanceRef		ECUC-INSTANCE-REFERENCE-DEF
BSW Description		
Instance Reference to the primitive sub-element (at any level) of composite data in a port which shall be read. Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in Parameter Interfaces (read only). This reference is applicable if the AutosarDataPrototype is typed with a ImplementationDataType of category STRUCTURE or ARRAY. Please note that in case of ARRAY the index attribute in the target reference has to be set to select a single array element.		
Template Description		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDependency		
Mapping Rule		Mapping Type
DiagnosticServiceDataMapping maps to a primitive element within a composite data, where the AutosarDataPrototype is typed with a ApplicationCompositeDataType ImplementationDataType of category STRUCTURE or ARRAY.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00992]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidData/DcmDspPidService02	
BSW Parameter		BSW Type
DcmDspPidDataDemRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DemPidDataElement in DEM configuration. Allows to link the DCM PID and DEM PID configuration for Mode \$02.		
Template Description		
This represents the PID associated with this instance of the OBD mode 0x02 service.		
M2 Parameter		
DiagnosticExtract::Dcm::ObdService::Mode_0x02_RequestPowertrainFreezeFrameData::DiagnosticPowertrainFreezeFrame. pid		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00887]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid	
BSW Parameter		BSW Type
DcmDspPidIdentifier		ECUC-INTEGER-PARAM-DEF
BSW Description		
1 byte Identifier of the PID Within each DcmConfigSet all DcmDspPidIdentifier values shall be unique.		
Template Description		
This is the numerical identifier used to identify the DiagnosticParameterIdentifier in the scope of diagnostic workflow (see SAE J1979-DA).		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier. id		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00627]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidService	
BSW Parameter		BSW Type
DCM_SERVICE_01		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
A PID is used with service \$01 only.		
Template Description		
This represents the PID associated with this instance of the OBD mode 0x01 service.		
M2 Parameter		
DiagnosticExtract::Dcm::ObdService::Mode_0x01_RequestCurrentPowertrainDiagnosticData::DiagnosticRequestCurrentPowertrainData. pid		
Mapping Rule		Mapping Type
Applicable if the DiagnosticParameterIdentifier is only referenced by a DiagnosticRequestCurrentPowertrainData		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidService	
BSW Parameter		BSW Type
DCM_SERVICE_01_02		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
A PID is used with service \$01 and \$02. Allowed with a PID configuration containing data elements on byte basis.		
Template Description		
DiagnosticRequestCurrentPowertrainData.pid: This represents the PID associated with this instance of the OBD mode 0x01 service. DiagnosticPowertrainFreezeFrame.pid: This represents the PID associated with this instance of the OBD mode 0x02 service.		
M2 Parameter		





DiagnosticExtract::Dcm::ObdService::Mode_0x01_RequestCurrentPowertrainDiagnosticData::DiagnosticRequestCurrentPowertrainData. pid , DiagnosticExtract::Dcm::ObdService::Mode_0x02_RequestPowertrainFreezeFrameData::DiagnosticPowertrainFreezeFrame. pid	
Mapping Rule	Mapping Type
Applicable if the DiagnosticParameterIdentifier is referenced by both a DiagnosticRequestCurrentPowertrainData and a DiagnosticPowertrainFreezeFrame	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidService
BSW Parameter	BSW Type
DCM_SERVICE_02	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
A PID is used with service \$02 only. Allowed with a PID configuration containing data elements on byte basis.	
Template Description	
This represents the PID associated with this instance of the OBD mode 0x02 service.	
M2 Parameter	
DiagnosticExtract::Dcm::ObdService::Mode_0x02_RequestPowertrainFreezeFrameData::DiagnosticPowertrainFreezeFrame. pid	
Mapping Rule	Mapping Type
Applicable if the DiagnosticParameterIdentifier is only referenced by a DiagnosticPowertrainFreezeFrame	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid
BSW Parameter	BSW Type
DcmDspPidSize	ECUC-INTEGER-PARAM-DEF
BSW Description	
Length of a PID in byte(s).	
Template Description	
The size of the entire PID can be greater than the sum of the data elements because padding might be applied. Unit: byte.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier. pidSize	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00870]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid
BSW Parameter	BSW Type
DcmDspPidSupportInfo	ECUC-PARAM-CONF-CONTAINER-DEF





BSW Description	
This container defines the support information (typically byte A) to declare the usability of the data bytes within the so-called packeted PIDs (e.g. PID\$68).	
Template Description	
This represents the supported information associated with the DiagnosticParameterIdentifier.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier.supportInfoByte	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00871]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidSupportInfo	
BSW Parameter		BSW Type
DcmDspPidSupportInfoLen		ECUC-INTEGER-PARAM-DEF
BSW Description		
Length of the support information in bytes.		
Template Description		
This represents the size of the supportInfo within the PID. Unit: byte.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticSupportInfoByte.size		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00873]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspPid/DcmDspPidSupportInfo	
BSW Parameter		BSW Type
DcmDspPidSupportInfoPos		ECUC-INTEGER-PARAM-DEF
BSW Description		
Position of the support information in bytes.		
Template Description		
This represents the position of the supportInfo in the PID. Unit: byte.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticSupportInfoByte.position		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00872]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspReadDTCInformation	
BSW Parameter		BSW Type
DcmDspReadDTCInformationSupportedObdUdsDtcSeparation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If this parameter is set to true, the OBD UDS DTC separation is enabled. If this parameter is not configured or set to false, the OBD UDS DTC separation is disabled.		
Template Description		
3 Byte OBD DTC value based on the definition from SAE J2012. The existence of this attribute is only required if separated UDS and OBD DTC values are used for SAE J1979-2. If this attribute does not exist, then UDS DTC values are used with J1979-2.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeUds.obdDtcValue3Byte		
Mapping Rule		Mapping Type
DcmDspReadDTCInformationSupportedObdUdsDtcSeparation shall exist and set to true if, in the context of an enclosing DiagnosticContributionSet, at least one DiagnosticTroubleCodeObd exists where attribute obdDTCValue3Byte exists, independently of its value.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01214]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspReadDTCInformation/DcmDspReadDTCInformationUserDefinedFaultMemory	
BSW Parameter		BSW Type
DcmDspReadDTCInformationUserDefinedFaultMemoryRoleRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DcmDspAuthenticationRow that defines a role in that this user defined memory can be accessed.		
Template Description		
This attribute allows for the specification of the position of the enclosing role in a bitfield of roles.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAuthRole.bitPosition		
Mapping Rule		Mapping Type
Applicable for DiagnosticAuthRoles referenced by a DiagnosticMemoryDestination with DiagnosticMemoryDestination.memoryId having the same value as DcmDspReadDTCInformationUserDefinedFaultMemoryId. The value of DiagnosticAccessPermission is calculated based on the bits of all referenced DiagnosticAuthRole.bitPosition, where a value of 2 ^{bitPosition} is used for each DiagnosticAuthRole.bitPosition. The accumulated value represents a bitfield that has a bit set for each DiagnosticAuthRole.bitPosition.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01150]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type
DcmDspRequestControl		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		





This container contains the configuration (parameters) of the "Request control of on-board system, test or component" service (Service \$08). The DCM will request the control using an R-Port requiring a PortInterface RequestControlServices_{Tid}. The R-Port is named RequestControlServices_{Tid} where {Tid} is the name of the container DcmDspRequestControl.

Template Description

This meta-class represents the ability to model an instance of the OBD mode 0x08 service.

M2 Parameter

DiagnosticExtract::Dcm::ObdService::Mode_0x08_RequestControlOfOnBoardDevice::
[DiagnosticRequestControlOfOnBoardDevice](#)

Mapping Rule

1:1 mapping

Mapping Type

full

Mapping Status

valid

ECUC Parameter ID

[ECUC_Dcm_00637]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRequestControl
BSW Parameter	BSW Type
DcmDspRequestControlInBufferSize	ECUC-INTEGER-PARAM-DEF
BSW Description	
Number of bytes to be provided in the input buffer of the interface RequestControlServices_{Tid} for OBD Service \$08	
Template Description	
This represents the specified data size for the request message. Unit: byte.	
M2 Parameter	
DiagnosticExtract::Dcm::ObdService::Mode_0x08_RequestControlOfOnBoardDevice::DiagnosticTestRoutineIdentifier. requestDataSize	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00722]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRequestControl
BSW Parameter	BSW Type
DcmDspRequestControlOutBufferSize	ECUC-INTEGER-PARAM-DEF
BSW Description	
Number of bytes to be provided in the output buffer of the interface RequestControlServices_{Tid} for OBD Service \$08	
Template Description	
This represents the specified data size for the response message. Unit:byte.	
M2 Parameter	
DiagnosticExtract::Dcm::ObdService::Mode_0x08_RequestControlOfOnBoardDevice::DiagnosticTestRoutineIdentifier. responseDataSize	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00723]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRequestControl	
BSW Parameter		BSW Type
DcmDspRequestControlTestId		ECUC-INTEGER-PARAM-DEF
BSW Description		
Test Id for Service \$08		
Template Description		
This represents the numerical id of the DiagnosticTestIdentifier (see SAE J1979-DA).		
M2 Parameter		
DiagnosticExtract::Dcm::ObdService::Mode_0x08_RequestControlOfOnBoardDevice::DiagnosticTestRoutineIdentifier.id		
Mapping Rule		Mapping Type
The value shall be taken from DiagnosticRequestControlOfOnBoardDevice.testId.id if available.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00656]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type
DcmDspRequestFileTransfer		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration for RequestFileTransfer. This container only exists if RequestFileTransfer is configured.		
Template Description		
This diagnostic service instance implements the UDS service 0x38.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::RequestFileTransfer::DiagnosticRequestFileTransfer		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01034]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe	
BSW Parameter		BSW Type
DcmDspRoeMaxNumChangeOfDataIdentifierEvents		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of events that can be simultaneously configured with SubFunction onChangeOfDataIdentifier.		
Template Description		
The maximum number of events that can be simultaneously configured with sub function onChangeOfDataIdentifier.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticResponseOnEventClass. maxNumChangeOfDataIdentifierEvents		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01236]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe	
BSW Parameter		BSW Type
DcmDspRoeMaxNumComparisonOfValueEvents		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of events that can be simultaneously configured with SubFunction onComparisonOfValues.		
Template Description		
The maximum number of events that can be simultaneously configured with sub function onComparisonOfValues.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticResponseOnEventClass. maxNumComparisionOfValueEvents		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01237]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe	
BSW Parameter		BSW Type
DcmDspRoeMaxNumOfStoredDTCStatusChangedEvents		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of changed DTC events that can be stored within one DcmDspRoeSchedulerRate interval.		
Template Description		
The maximum number of DTCs that can be stored as DTCs with change status within one ResponseOnEventSchedulerRate interval.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticResponseOnEventClass. maxNumberOfStoredDTCStatusChangedEvents		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01239]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe	
BSW Parameter		BSW Type
DcmDspRoeMaxSupportedDIDLength		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum DID response size in bytes allowed for a DID that is used for onComparisonOfValues or onChangeOfDataIdentifier.		
Template Description		
The maximum number of measurable data bytes allowed for each DID that is used for comparison or data change.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticResponseOnEventClass. maxSupportedDIDLength		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01238]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe	
BSW Parameter		BSW Type
DcmDspRoeSchedulerRate		ECUC-FLOAT-PARAM-DEF
BSW Description		
Calling rate of the RoE scheduler. The parameter value is defined in seconds and shall be a multiple of DcmTaskTime.		
Template Description		
The call rate of the periodic scheduler to compare the values of the DataIdentifier (DID) or to detect DTC status changes.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticResponseOnEventClass. responseOnEventSchedulerRate		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01235]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoe	
BSW Parameter		BSW Type
DcmDspRoeStoreEventSupport		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Configures if ResponseOnEvent storageState is supported. If set to true, the use of the storageState bit is supported and if set to false the use of the storageState bit is not supported.		
Template Description		
Specifies if the storeEvent functionality of the ResponseOnEvent diagnostic service shall be supported or not. If set to true, the storeEvent functionality is available. If set to false the storeEvent functionality is not available.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::ResponseOnEvent::DiagnosticResponseOnEventClass. storeEventEnabled		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01234]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type
DcmDspRoutine		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) for Routines		
Template Description		
This meta-class represents the ability to define a diagnostic routine.		





M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticRoutine	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00640]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine	
BSW Parameter		BSW Type
DcmDspRequestRoutineResults		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provides the configuration of RequestResult subservice for RoutineControl service. Existence indicates that the Request RoutineResults in the RoutineControl is supported.		
Template Description		
DiagnosticRoutine.requestResult: This represents the ability to request the result of a running routine. DiagnosticRoutineNeeds.diagRoutineType: This denotes the type of diagnostic routine which is implemented by the referenced server port.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticRoutine.requestResult, CommonStructure::ServiceNeeds::DiagnosticRoutineNeeds.diagRoutineType		
Mapping Rule		Mapping Type
1:1 mapping for DiagnosticRoutine.requestResult OR DiagnosticRoutineNeeds.diagRoutineType == asynchronous		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01023]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults	
BSW Parameter		BSW Type
DcmDspRequestRoutineResultsFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name for request to application the results of a routine. (Routine_RequestResults-function) This parameter is related to the interface Xxx_RequestResults.		
Template Description		
Specialization of ServiceDependency in the context of an BswInternalBehavior. It allows to associate BswModuleEntries and data defined for a BSW module or cluster to a given ServiceNeeds element.		
M2 Parameter		
BswModuleTemplate::BswBehavior::BswServiceDependency		
Mapping Rule		Mapping Type
It could be possible to get the FNC name via BswServiceDependency		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00753]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults	
BSW Parameter		BSW Type
DcmDspRequestRoutineResultsIn		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provide description of input parameter of RequestResult subservice for RoutineControl service.		
Template Description		
This represents the request parameters.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticRequestRoutineResults.request		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01116]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn	
BSW Parameter		BSW Type
DcmDspRequestRoutineResultsInSignal		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provides description of a routine signal used in RoutineControl service.		
The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataIn_n elements in the XXX_RequestResult function call.		
Template Description		
This represents the related dataElement of the DiagnosticParameter		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter.dataElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01117]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.		





Template Description	
This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuMethod	
Mapping Rule	Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00999]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspDiagnosisRepresentationDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The data value in the diagnosis representation.		
Template Description		
This represents a textual constant in the computation method.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuConstTextContent.vt		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01001]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspInternalDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The ECU internal data value.		
Template Description		
CompuScale.lowerLimit: This specifies the lower limit of the scale. CompuScale.upperLimit: This specifies the upper limit of a of the scale.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal	
BSW Parameter		BSW Type
DcmDspRoutineParameterSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the size of a RoutineControl parameter in bytes		
Template Description		
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01119]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the endianness of the data belonging to a Routine In Signal for RequestResult subfunction.		
Template Description		
This attribute specifies the byte order of the base type.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. byteOrder		
Mapping Rule		Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnosticRequestRoutineResult.response		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01121]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalPos		ECUC-INTEGER-PARAM-DEF
BSW Description		





Provide the position of the signal in the RoutineControl request/response. The position is defined in bits.	
Template Description	
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter.bitOffset	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01118]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
BOOLEAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is boolean.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = BOOLEAN baseTypeSize = 1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float.		
Template Description		



**BaseTypeDirectDefinition.baseTypeEncoding:**

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

DiagnosticValueNeeds.fixedLength:

This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency.

This attribute controls whether the data length of the data is fixed.

M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.[baseTypeEncoding](#), AsamHdo::BaseTypes::BaseTypeDirectDefinition.[baseTypeSize](#), CommonStructure::ServiceNeeds::DiagnosticValueNeeds.[fixedLength](#)

Mapping Rule

baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max
NumberOfElements shall not exist arraySizeSemantics shall not exist

Derivation from DiagnosticValueNeeds.fixedLength=1 possible.

Mapping Type

full

Mapping Status

valid

ECUC Parameter ID

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
FLOAT_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is float array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
SINT16	ECUC-ENUMERATION-LITERAL-DEF





BSW Description	
Type of the signal is sint16.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = 2C baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = 2C baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE, UTF-32, UTF-32 baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
VARIABLE_LENGTH		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8[DcmDspRoutineParameterSize]. This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARIABLE_LENGTH.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool	
BSW Parameter		BSW Type
DcmDspRequestRoutineResultsInSignal		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provides description of a routine signal used in RoutineControl service. The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataIn_n elements in the XXX_RequestResult function call.		
Template Description		
This represents the related dataElement of the DiagnosticParameter		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. dataElement		
Mapping Rule		Mapping Type





1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01117]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.		
Template Description		
This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuMethod		
Mapping Rule		Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00999]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspDiagnosisRepresentationDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The data value in the diagnosis representation.		
Template Description		
This represents a textual constant in the computation method.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuConstTextContent.vt		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01001]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspInternalDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The ECU internal data value.		
Template Description		
CompuScale.lowerLimit: This specifies the lower limit of the scale. CompuScale.upperLimit: This specifies the upper limit of a of the scale.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal	
BSW Parameter		BSW Type
DcmDspRoutineParameterSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the size of a RoutineControl parameter in bytes		
Template Description		
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule		Mapping Type
Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01119]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		





Defines the endianness of the data belonging to a Routine In Signal for RequestResult subfunction.	
Template Description	
This attribute specifies the byte order of the base type.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. byteOrder	
Mapping Rule	Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnostictRequestRoutineResult.response	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01121]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalPos		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the position of the signal in the RoutineControl request/response. The position is defined in bits.		
Template Description		
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. bitOffset		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Dcm_01118]	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
BOOLEAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is boolean.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule	Mapping Type	





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = BOOLEAN baseTypeSize = 1	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float array.		
Template Description		





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType
BSW Parameter	
SINT16	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is sint16.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType
BSW Parameter	
SINT16_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is sint16 array.	





Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 32	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 8	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16.		
Template Description		





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType





BSW Parameter		BSW Type
UINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE, UTF-32, UTF-32 baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsIn/DcmDspRequestRoutineResultsInSignalCompositePool/DcmDspRequestRoutineResultsInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
VARIABLE_LENGTH	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is uint8[DcmDspRoutineParameterSize]. This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARIABLE_LENGTH.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults
BSW Parameter	BSW Type
DcmDspRequestRoutineResultsOut	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Provide description of output parameter of RequestResult subservice for RoutineControl service.	
Template Description	
This represents the response parameters.	





M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticRequestRoutineResults. response	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00831]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut	
BSW Parameter		BSW Type
DcmDspRequestRoutineResultsOutSignal		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provides description of a routine signal used in RoutineControl service. The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataOutN elements in the XXX_RequestResult function call.		
Template Description		
This represents the related dataElement of the DiagnosticParameter		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. dataElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00836]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.		
Template Description		
This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuMethod		
Mapping Rule		Mapping Type





This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00999]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspDiagnosisRepresentationDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The data value in the diagnosis representation.		
Template Description		
This represents a textual constant in the computation method.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuConstTextContent.vt		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01001]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspInternalDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The ECU internal data value.		
Template Description		
CompuScale.lowerLimit: This specifies the lower limit of the scale. CompuScale.upperLimit: This specifies the upper limit of a of the scale.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal	





BSW Parameter		BSW Type
DcmDspRoutineParameterSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the size of a RoutineControl parameter in bytes		
Template Description		
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule		Mapping Type
Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00838]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the endianness of the data belonging to a Routine Out Signal for RequestResult subfunction.		
Template Description		
This attribute specifies the byte order of the base type.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder		
Mapping Rule		Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnosticRequestRoutineResult.response		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01013]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalPos		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the position of the signal in the RoutineControl request/response. The position is defined in bits.		
Template Description		
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter.bitOffset		
Mapping Rule		Mapping Type





1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00837]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
BOOLEAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is boolean.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = BOOLEAN baseTypeSize = 1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type





baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, CommonStructure::ServiceNeeds::DiagnosticValueNeeds.fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize		
Mapping Rule		Mapping Type





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		





M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 32	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8.		
Template Description		





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 8	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16		ECUC-ENUMERATION-LITERAL-DEF





BSW Description	
Type of the signal is uint16.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE, UTF-32, UTF-32 baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
VARIABLE_LENGTH		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8[DcmDspRoutineParameterSize]. This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARIABLE_LENGTH.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool	
BSW Parameter		BSW Type
DcmDspRequestRoutineResultsOutSignal		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provides description of a routine signal used in RoutineControl service. The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataOutN elements in the XXX_RequestResult function call.		
Template Description		
This represents the related dataElement of the DiagnosticParameter		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. dataElement		
Mapping Rule		Mapping Type





1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00836]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.		
Template Description		
This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuMethod		
Mapping Rule		Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00999]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspDiagnosisRepresentationDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The data value in the diagnosis representation.		
Template Description		
This represents a textual constant in the computation method.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuConstTextContent.vt		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01001]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspInternalDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The ECU internal data value.		
Template Description		
CompuScale.lowerLimit: This specifies the lower limit of the scale. CompuScale.upperLimit: This specifies the upper limit of a of the scale.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineParameterSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the size of a RoutineControl parameter in bytes		
Template Description		
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule		Mapping Type
Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00838]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		





Defines the endianness of the data belonging to a Routine Out Signal for RequestResult subfunction.	
Template Description	
This attribute specifies the byte order of the base type.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. byteOrder	
Mapping Rule	Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnosticRequestRoutineResult.response	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01013]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalPos		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the position of the signal in the RoutineControl request/response. The position is defined in bits.		
Template Description		
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. bitOffset		
Mapping Rule	Mapping Type	
1:1 mapping	full	
Mapping Status	ECUC Parameter ID	
valid	[ECUC_Dcm_00837]	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
BOOLEAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is boolean.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule	Mapping Type	





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = BOOLEAN baseTypeSize = 1	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float array.		
Template Description		



**BaseTypeDirectDefinition.baseTypeEncoding:**

This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.

BaseTypeDirectDefinition.baseTypeSize:

Describes the length of the data type specified in the container in bits.

DiagnosticValueNeeds.fixedLength:

This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency.

This attribute controls whether the data length of the data is fixed.

M2 Parameter

AsamHdo::BaseTypes::BaseTypeDirectDefinition.[baseTypeEncoding](#), AsamHdo::BaseTypes::BaseTypeDirectDefinition.[baseTypeSize](#), CommonStructure::ServiceNeeds::DiagnosticValueNeeds.[fixedLength](#)

Mapping Rule

baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max
NumberOfElements shall not exist arraySizeSemantics shall not exist

Derivation from DiagnosticValueNeeds.fixedLength=1 possible.

Mapping Type

full

Mapping Status

valid

ECUC Parameter ID

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
SINT16	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is sint16.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = 2C baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
SINT16_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is sint16 array.	





Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 32	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 8	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16.		
Template Description		





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType





BSW Parameter		BSW Type
UINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE, UTF-32, UTF-32 baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequestRoutineResults.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults/DcmDspRequestRoutineResultsOut/DcmDspRequestRoutineResultsOutSignalCompositePool/DcmDspRequestRoutineResultsOutSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
VARIABLE_LENGTH	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is uint8[DcmDspRoutineParameterSize]. This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARIABLE_LENGTH.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticRequest RoutineResults.response baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspRequestRoutineResults
BSW Parameter	BSW Type
DcmDspRequestRoutineResultsRoleRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to DcmDspAuthenticationRow that defines a role in that this routine results can be read.	
Template Description	
This attribute allows for the specification of the position of the enclosing role in a bitfield of roles.	





M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticAuthRole.bitPosition	
Mapping Rule	Mapping Type
Applicable if the current access permission is referenced by DiagnosticRequestRoutineResults. The value of DcmDspRequestRoutineResultsRole is calculated based the bits of all referenced DiagnosticAuthRole.bitPosition, where a value of 2 ^{bitPosition} is used for each DiagnosticAuthRole.bitPosition. The accumulated value represents a bitfield that has a bit set for each DiagnosticAuthRole.bitPosition.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01146]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine
BSW Parameter	BSW Type
DcmDspRoutineIdentifier	ECUC-INTEGER-PARAM-DEF
BSW Description	
2 bytes Identifier of the RID Within each DcmConfigSet all DcmDspRoutineIdentifier values shall be unique.	
Template Description	
This is the numerical identifier used to identify the DiagnosticRoutine in the scope of diagnostic workflow	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticRoutine.id	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00641]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine
BSW Parameter	BSW Type
DcmDspRoutineUsePort	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
If this parameter is set to true, the DCM uses a port requiring a PortInterface RoutineServices_{RoutineName}. The R-Port is named RoutineServices_{RoutineName} where {RoutineName} is the name of the container DcmDspRoutine. In that case, the configuration must not provide function names in DcmDspStartRoutineFnc, DcmDspStopRoutineFnc or DcmDspRequestResultsRoutineFnc. If this is false, the DCM expects to find the names of the functions to be used in DcmDspStartRoutineFnc, DcmDspStopRoutineFnc or DcmDspRequestResultsRoutineFnc.	
Template Description	
This represents the ability to define a mapping of a diagnostic service to a software-component or a basic-software module. If the former is used then this kind of service mapping is applicable for the usage of ClientServerInterfaces.	
M2 Parameter	
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping	
Mapping Rule	Mapping Type
TRUE: DiagnosticServiceSwMapping is having a SwcServiceDependency FALSE: DiagnosticServiceSwMapping is having a BswServiceDependency	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00724]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine	
BSW Parameter		BSW Type
DcmDspStartRoutine		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provides the configuration of Start subservice for RoutineControl service.		
Template Description		
DiagnosticRoutine.start: This represents the ability to start a routine DiagnosticRoutineNeeds: Specifies the general needs on the configuration of the Diagnostic Communication Manager (Dcm) which are not related to a particular item (e.g. a PID). The main use case is the mapping of service ports to the Dcm which are not related to a particular item.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticRoutine.start, CommonStructure::ServiceNeeds::DiagnosticRoutineNeeds		
Mapping Rule		Mapping Type
A routine always comes with a start routine, independently of whether the execution is done synchronously or asynchronously.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01021]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine	
BSW Parameter		BSW Type
DcmDspStartRoutineFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name for request to application to start a routine. (Routine_Start-function) This parameter is related to the interface Xxx_Start.		
Template Description		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDependency		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00664]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine	
BSW Parameter		BSW Type
DcmDspStartRoutineIn		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provide description of input parameter of Start subservice for RoutineControl service		
Template Description		





This represents the request parameters.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticStartRoutine. request	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00834]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn	
BSW Parameter		BSW Type
DcmDspStartRoutineInSignal		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provide description of a routine signal used in RoutineControl service. The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataInN elements in the XXX_Start function call.		
Template Description		
This represents the related dataElement of the DiagnosticParameter		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. dataElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00845]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.		
Template Description		
This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuMethod		
Mapping Rule		Mapping Type





This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00999]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspDiagnosisRepresentationDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The data value in the diagnosis representation.		
Template Description		
This represents a textual constant in the computation method.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuConstTextContent.vt		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01001]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspInternalDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The ECU internal data value.		
Template Description		
CompuScale.lowerLimit: This specifies the lower limit of the scale. CompuScale.upperLimit: This specifies the upper limit of a of the scale.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal	





BSW Parameter		BSW Type
DcmDspRoutineParameterSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the size of a RoutineControl parameter in bytes		
Template Description		
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule		Mapping Type
"Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00847]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the endianness of the data belonging to a Routine In Signal for Start subfunction.		
Template Description		
This attribute specifies the byte order of the base type.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder		
Mapping Rule		Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnosticStartRoutine.request.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01016]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalPos		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the position of the signal in the RoutineControl request/response. The position is defined in bits.		
Template Description		
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter.bitOffset		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00846]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
BOOLEAN	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is boolean.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = BOOLEAN baseTypeSize = 1	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
FLOAT	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is float.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request baseTypeEncoding = 2C baseTypeSize = 16		full





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = 2C baseTypeSize = 32	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		





M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = 2C baseTypeSize = 8	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either doesnot exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16.		
Template Description		





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
UINT16_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is uint16 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
UINT32	ECUC-ENUMERATION-LITERAL-DEF





BSW Description	
Type of the signal is uint32.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
UINT32_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is uint32 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = NONE, UTF-32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySize Semantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request		full
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8		
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request		full
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
VARIABLE_LENGTH		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8[DcmDspRoutineParameterSize]. This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARIABLE_LENGTH.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool	
BSW Parameter		BSW Type
DcmDspStartRoutineInSignal		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provide description of a routine signal used in RoutineControl service. The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataInN elements in the XXX_Start function call.		
Template Description		
This represents the related dataElement of the DiagnosticParameter		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. dataElement		
Mapping Rule		Mapping Type





1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00845]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.		
Template Description		
This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuMethod		
Mapping Rule		Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00999]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspDiagnosisRepresentationDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The data value in the diagnosis representation.		
Template Description		
This represents a textual constant in the computation method.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuConstTextContent.vt		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01001]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspInternalDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The ECU internal data value.		
Template Description		
CompuScale.lowerLimit: This specifies the lower limit of the scale. CompuScale.upperLimit: This specifies the upper limit of a of the scale.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal	
BSW Parameter		BSW Type
DcmDspRoutineParameterSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the size of a RoutineControl parameter in bytes		
Template Description		
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule		Mapping Type
"Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00847]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the endianness of the data belonging to a Routine In Signal for Start subfunction.		
Template Description		
This attribute specifies the byte order of the base type.		





M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. byteOrder	
Mapping Rule	Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnosticStartRoutine.request.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01016]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal
BSW Parameter	BSW Type
DcmDspRoutineSignalPos	ECUC-INTEGER-PARAM-DEF
BSW Description	
Provide the position of the signal in the RoutineControl request/response. The position is defined in bits.	
Template Description	
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. bitOffset	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00846]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
BOOLEAN	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is boolean.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = BOOLEAN baseTypeSize = 1	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = 2C baseTypeSize = 16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = 2C baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = 2C baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either doesnot exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request baseTypeEncoding = NONE, UTF-32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.request baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineIn/DcmDspStartRoutineInSignalCompositePool/DcmDspStartRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
VARIABLE_LENGTH	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is uint8[DcmDspRoutineParameterSize]. This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARIABLE_LENGTH.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.request baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine
BSW Parameter	BSW Type
DcmDspStartRoutineOut	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Provide description of output parameter of Start subservice for RoutineControl service.	
Template Description	
This represents the response parameters.	





M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticStartRoutine. response	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00835]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut	
BSW Parameter		BSW Type
DcmDspStartRoutineOutSignal		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provide description of a routine signal used in RoutineControl service. The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataOutN elements in the XXX_Start function call.		
Template Description		
This represents the related dataElement of the DiagnosticParameter		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. dataElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00848]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.		
Template Description		
This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.		
M2 Parameter		
AsamHdo::ComputationMethod:: CompuMethod		
Mapping Rule		Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00999]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspDiagnosisRepresentationDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The data value in the diagnosis representation.		
Template Description		
This represents a textual constant in the computation method.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuConstTextContent.vt		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01001]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspInternalDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The ECU internal data value.		
Template Description		
CompuScale.lowerLimit: This specifies the lower limit of the scale. CompuScale.upperLimit: This specifies the upper limit of a of the scale.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineParameterSize		ECUC-INTEGER-PARAM-DEF





BSW Description	
Provide the size of a RoutineControl parameter in bytes	
Template Description	
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements	
Mapping Rule	Mapping Type
Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00850]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the endianness of the data belonging to a Routine Out Signal for Start subfunction.		
Template Description		
This attribute specifies the byte order of the base type.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder		
Mapping Rule		Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnosticStartRoutine.response		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01017]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalPos		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the position of the signal in the RoutineControl request/response. The position is defined in bits.		
Template Description		
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter.bitOffset		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00867]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
BOOLEAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is boolean.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response baseTypeEncoding = BOOLEAN baseTypeSize = 1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = 2C baseTypeSize = 16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = 2C baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = 2C baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
VARIABLE_LENGTH		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8[DcmDspRoutineParameterSize]. This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARIABLE_LENGTH.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		





AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool	
BSW Parameter		BSW Type
DcmDspStartRoutineOutSignal		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provide description of a routine signal used in RoutineControl service. The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataOutN elements in the XXX_Start function call.		
Template Description		
This represents the related dataElement of the DiagnosticParameter		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. dataElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00848]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.		
Template Description		





This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuMethod	
Mapping Rule	Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00999]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping
BSW Parameter	BSW Type
DcmDspDiagnosisRepresentationDataValue	ECUC-INTEGER-PARAM-DEF
BSW Description	
The data value in the diagnosis representation.	
Template Description	
This represents a textual constant in the computation method.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuConstTextContent.vt	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01001]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping
BSW Parameter	BSW Type
DcmDspInternalDataValue	ECUC-INTEGER-PARAM-DEF
BSW Description	
The ECU internal data value.	
Template Description	
CompuScale.lowerLimit: This specifies the lower limit of the scale.	
CompuScale.upperLimit: This specifies the upper limit of a of the scale.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineParameterSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the size of a RoutineControl parameter in bytes		
Template Description		
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule		Mapping Type
Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00850]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the endianness of the data belonging to a Routine Out Signal for Start subfunction.		
Template Description		
This attribute specifies the byte order of the base type.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder		
Mapping Rule		Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnosticStartRoutine.response		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01017]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalPos		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the position of the signal in the RoutineControl request/response. The position is defined in bits.		
Template Description		
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.		
M2 Parameter		





DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. bitOffset	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00867]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
BOOLEAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is boolean.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response baseTypeEncoding = BOOLEAN baseTypeSize = 1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		





AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/ DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutine SignalType	
BSW Parameter		BSW Type
FLOAT_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/ DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutine SignalType	
BSW Parameter		BSW Type
SINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16.		
Template Description		





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = 2C baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/ DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutine SignalType	
BSW Parameter		BSW Type
SINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/ DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutine SignalType





BSW Parameter		BSW Type
SINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = 2C baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response baseTypeEncoding = 2C baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16 array.		
Template Description		





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	





BSW Parameter	BSW Type
UINT32_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is uint32 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
UINT8	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is uint8.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStart Routine.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine/DcmDspStartRoutineOut/DcmDspStartRoutineOutSignalCompositePool/DcmDspStartRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
VARIABLE_LENGTH		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8[DcmDspRoutineParameterSize]. This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARIABLE_LENGTH.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		





M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStartRoutine.response baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStartRoutine	
BSW Parameter		BSW Type
DcmDspStartRoutineRoleRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DcmDspAuthenticationRow that defines a role in that this routine can be started.		
Template Description		
This attribute allows for the specification of the position of the enclosing role in a bitfield of roles.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAuthRole. bitPosition		
Mapping Rule		Mapping Type
Applicable if the current access permission is referenced by DiagnosticStartRoutine. The value of DcmDspStartRoutineRole is calculated based on the bits of all referenced DiagnosticAuthRole.bitPosition, where a value of 2 ^{bitPosition} is used for each DiagnosticAuthRole.bitPosition. The accumulated value represents a bitfield that has a bit set for each DiagnosticAuthRole.bitPosition.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01144]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine	
BSW Parameter		BSW Type
DcmDspStopRoutine		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provides the configuration of Stop subservice for RoutineControl service. Existence indicates that the StopRoutine in the RoutineControl is supported.		
Template Description		
DiagnosticRoutine.stop: This represents the ability to stop a running routine. DiagnosticRoutineNeeds.diagRoutineType: This denotes the type of diagnostic routine which is implemented by the referenced server port.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticRoutine. stop , CommonStructure::ServiceNeeds::DiagnosticRoutineNeeds. diagRoutineType		
Mapping Rule		Mapping Type





1:1 mapping for DiagnosticRoutine.stop OR DiagnosticRoutineNeeds.diagRoutineType == asynchronous	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01022]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine
BSW Parameter	BSW Type
DcmDspStopRoutineFnc	ECUC-FUNCTION-NAME-DEF
BSW Description	
Function name for request to application to stop a routine. (Routine_Stop-function) This parameter is related to the interface Xxx_Stop.	
Template Description	
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.	
M2 Parameter	
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00752]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine
BSW Parameter	BSW Type
DcmDspStopRoutineIn	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
Provide description of input parameter of Stop subservice for RoutineControl service.	
Template Description	
This represents the request parameters.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticStopRoutine. request	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00832]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn
BSW Parameter	BSW Type
DcmDspStopRoutineInSignal	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	





Provide description of a routine signal used in RoutineControl service. The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataInN elements in the XXX_Stop function call.	
Template Description	
This represents the related dataElement of the DiagnosticParameter	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter.dataElement	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00839]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists).		
In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.		
Template Description		
This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuMethod		
Mapping Rule		Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00999]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspDiagnosisRepresentationDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The data value in the diagnosis representation.		
Template Description		





This represents a textual constant in the computation method.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuConstTextContent.vt	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01001]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping
BSW Parameter	BSW Type
DcmDspInternalDataValue	ECUC-INTEGER-PARAM-DEF
BSW Description	
The ECU internal data value.	
Template Description	
CompuScale.lowerLimit: This specifies the lower limit of the scale. CompuScale.upperLimit: This specifies the upper limit of a of the scale.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01000]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal
BSW Parameter	BSW Type
DcmDspRoutineParameterSize	ECUC-INTEGER-PARAM-DEF
BSW Description	
Provide the size of a RoutineControl parameter in bytes	
Template Description	
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements	
Mapping Rule	Mapping Type
Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00841]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the endianness of the data belonging to a Routine In Signal for Stop subfunction.		
Template Description		
This attribute specifies the byte order of the base type.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder		
Mapping Rule		Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnosticStopRoutine.request		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01014]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalPos		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the position of the signal in the RoutineControl request/response. The position is defined in bits.		
Template Description		
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter.bitOffset		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00840]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
BOOLEAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is boolean.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		





M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request baseTypeEncoding = BOOLEAN baseTypeSize = 1	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
FLOAT	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is float.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
FLOAT_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is float array.	
Template Description	





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/Dcm DspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
SINT16	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is sint16.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.request baseTypeEncoding = 2C baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/Dcm DspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
SINT16_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is sint16 array.	
Template Description	





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either doesnot exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
SINT32	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is sint32.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request baseTypeEncoding = 2C baseTypeSize = 32	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
SINT32_N	ECUC-ENUMERATION-LITERAL-DEF





BSW Description	
Type of the signal is sint32 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.request baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either doesnot exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.request baseTypeEncoding = 2C baseTypeSize = 8	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
VARIABLE_LENGTH		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8[DcmDspRoutineParameterSize]. This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARIABLE_LENGTH.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool	
BSW Parameter		BSW Type
DcmDspStopRoutineInSignal		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provide description of a routine signal used in RoutineControl service. The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataInN elements in the XXX_Stop function call.		
Template Description		
This represents the related dataElement of the DiagnosticParameter		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter.dataElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00839]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.		
Template Description		
This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuMethod		
Mapping Rule		Mapping Type





This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00999]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspDiagnosisRepresentationDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The data value in the diagnosis representation.		
Template Description		
This represents a textual constant in the computation method.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuConstTextContent.vt		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01001]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspInternalDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The ECU internal data value.		
Template Description		
CompuScale.lowerLimit: This specifies the lower limit of the scale. CompuScale.upperLimit: This specifies the upper limit of a of the scale.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal	





BSW Parameter		BSW Type
DcmDspRoutineParameterSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the size of a RoutineControl parameter in bytes		
Template Description		
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule		Mapping Type
Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00841]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the endianness of the data belonging to a Routine In Signal for Stop subfunction.		
Template Description		
This attribute specifies the byte order of the base type.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder		
Mapping Rule		Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnosticStopRoutine.request		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01014]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalPos		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the position of the signal in the RoutineControl request/response. The position is defined in bits.		
Template Description		
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter.bitOffset		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00840]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
BOOLEAN	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is boolean.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.request baseTypeEncoding = BOOLEAN baseTypeSize = 1	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
FLOAT	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is float.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request baseTypeEncoding = 2C baseTypeSize = 16		full





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either doesnot exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.request baseTypeEncoding = 2C baseTypeSize = 32	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeEncoding, AsamHdo::BaseTypes::BaseTypeDirectDefinition.baseTypeSize, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.arraySizeSemantics, DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.request baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either doesnot exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		





M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.request baseTypeEncoding = 2C baseTypeSize = 8	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
SINT8_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is sint8 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.request baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
UINT16	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is uint16.	
Template Description	





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.request baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
UINT16_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is uint16 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.request baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
UINT32	ECUC-ENUMERATION-LITERAL-DEF





BSW Description	
Type of the signal is uint32.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8		ECUC-ENUMERATION-LITERAL-DEF





BSW Description	
Type of the signal is uint8.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.request baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
UINT8_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is uint8 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.request baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineIn/DcmDspStopRoutineInSignalCompositePool/DcmDspStopRoutineInSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
VARIABLE_LENGTH		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8[DcmDspRoutineParameterSize].		
This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARIABLE_LENGTH.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.request baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine	
BSW Parameter		BSW Type
DcmDspStopRoutineOut		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provide description of output parameter of Stop subservice for RoutineControl service.		
Template Description		
This represents the response parameters.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticStopRoutine. response		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00833]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut	
BSW Parameter		BSW Type
DcmDspStopRoutineOutSignal		ECUC-PARAM-CONF-CONTAINER-DEF





BSW Description	
Provide description of a routine signal used in RoutineControl service. The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataOutN elements in the XXX_Stop function call.	
Template Description	
This represents the related dataElement of the DiagnosticParameter	
M2 Parameter	
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter.dataElement	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00842]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.		
Template Description		
This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuMethod		
Mapping Rule		Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00999]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspDiagnosisRepresentationDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The data value in the diagnosis representation.		





Template Description	
This represents a textual constant in the computation method.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuConstTextContent.vt	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01001]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping	
BSW Parameter		BSW Type
DcmDspInternalDataValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
The ECU internal data value.		
Template Description		
CompuScale.lowerLimit: This specifies the lower limit of the scale. CompuScale.upperLimit: This specifies the upper limit of a of the scale.		
M2 Parameter		
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineParameterSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the size of a RoutineControl parameter in bytes		
Template Description		
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule		Mapping Type
"Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00844]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the endianness of the data belonging to a Routine Out Signal for Stop subfunction.		
Template Description		
This attribute specifies the byte order of the base type.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder		
Mapping Rule		Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnosticStopRoutine.response		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01015]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalPos		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the position of the signal in the RoutineControl request/response. The position is defined in bits.		
Template Description		
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter.bitOffset		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00843]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
BOOLEAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is boolean.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		





M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.response baseTypeEncoding = BOOLEAN baseTypeSize = 1	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
FLOAT	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is float.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
FLOAT_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is float array.	
Template Description	





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/ DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
SINT16	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is sint16.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = 2C baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/ DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
SINT16_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is sint16 array.	
Template Description	





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
SINT32	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is sint32.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = 2C baseTypeSize = 32	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
SINT32_N	ECUC-ENUMERATION-LITERAL-DEF





BSW Description	
Type of the signal is sint32 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = 2C baseTypeSize = 8	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.response baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either doesnot exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
VARIABLE_LENGTH		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8[DcmDspRoutineParameterSize]. This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARIABLE_LENGTH.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		





AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool	
BSW Parameter		BSW Type
DcmDspStopRoutineOutSignal		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Provide description of a routine signal used in RoutineControl service. The ordering defined via the index attribute of the subcontainers in this list represents the order of the dataOutN elements in the XXX_Stop function call.		
Template Description		
This represents the related dataElement of the DiagnosticParameter		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. dataElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00842]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType	
BSW Parameter		BSW Type
DcmDspTextTableMapping		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The purpose of the DcmDspTextTableMapping is to associate a texttable value defined in the context of the Dcm to a texttable value defined in the context of a CompuMethod referenced by a DataType that shall be taken to create a dataElement in a SenderReceiverInterface. By this means it is possible to create a primitive version of a TexttableMapping (which can only be applied if a dataElement already exists). In other words, the DcmDspTextTableMapping provides a similar mechanism to the TexttableMapping in a situation where the TexttableMapping cannot be applied since the SenderReceiverInterface for the PortPrototype on the Dcm ServiceComponent does not yet exist.		
Template Description		





This meta-class represents the ability to express the relationship between a physical value and the mathematical representation. Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuMethod	
Mapping Rule	Mapping Type
This mapping applies if the CompuMethod.category is set to values TEXTTABLE or SCALE_LINEAR_AND_TEXTTABLE.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00999]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping
BSW Parameter	BSW Type
DcmDspDiagnosisRepresentationDataValue	ECUC-INTEGER-PARAM-DEF
BSW Description	
The data value in the diagnosis representation.	
Template Description	
This represents a textual constant in the computation method.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuConstTextContent.vt	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01001]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspArgumentScaling/DcmDspAlternativeDataType/DcmDspTextTableMapping
BSW Parameter	BSW Type
DcmDspInternalDataValue	ECUC-INTEGER-PARAM-DEF
BSW Description	
The ECU internal data value.	
Template Description	
CompuScale.lowerLimit: This specifies the lower limit of the scale.	
CompuScale.upperLimit: This specifies the upper limit of a of the scale.	
M2 Parameter	
AsamHdo::ComputationMethod::CompuScale.lowerLimit, AsamHdo::ComputationMethod::CompuScale.upperLimit	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01000]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineParameterSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the size of a RoutineControl parameter in bytes		
Template Description		
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule		Mapping Type
"Only in case of variable length required (according to constr_6008). Calculation: DcmDspRoutineSignalLength = maxNumberOfElements * 8		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00844]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalEndianness		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the endianness of the data belonging to a Routine Out Signal for Stop subfunction.		
Template Description		
This attribute specifies the byte order of the base type.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition.byteOrder		
Mapping Rule		Mapping Type
baseType.baseTypeDefinition.byteOrder referenced by swDataDefProps of the Diagnostic Parameter with the role DiagnosticStopRoutine.response		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01015]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal	
BSW Parameter		BSW Type
DcmDspRoutineSignalPos		ECUC-INTEGER-PARAM-DEF
BSW Description		
Provide the position of the signal in the RoutineControl request/response. The position is defined in bits.		
Template Description		
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.		
M2 Parameter		





DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractParameter. bitOffset	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00843]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
BOOLEAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is boolean.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.response baseTypeEncoding = BOOLEAN baseTypeSize = 1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
FLOAT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		





AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/ DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutine SignalType
BSW Parameter	BSW Type
FLOAT_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is float array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/ DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutine SignalType
BSW Parameter	BSW Type
SINT16	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is sint16.	
Template Description	





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = 2C baseTypeSize = 16	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint16 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule	Mapping Type	
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = 2C baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full	
Mapping Status	ECUC Parameter ID	
valid		

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType





BSW Parameter		BSW Type
SINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = 2C baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT32_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint32 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = 2C baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.response baseTypeEncoding = 2C baseTypeSize = 8		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
SINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is sint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics		
Mapping Rule		Mapping Type





referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = 2C baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either doesnot exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT16_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint16 array.		
Template Description		





BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.	
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.	
DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = NONE, UTF-16 baseTypeSize = 16 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT32		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint32.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence.		
BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	





BSW Parameter	BSW Type
UINT32_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is uint32 array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , Diagnostic Extract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = NONE, UTF-32 baseTypeSize = 32 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType
BSW Parameter	BSW Type
UINT8	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the signal is uint8.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStop Routine.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
UINT8_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8 array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements		
Mapping Rule		Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.response baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01001) arraySizeSemantics either does not exist or exists and is set to ArraySizeSemanticsEnum.fixedSize (cf. TPS_DEXT_01001)		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine/DcmDspStopRoutineOut/DcmDspStopRoutineOutSignalCompositePool/DcmDspStopRoutineOutSignal/DcmDspRoutineSignalType	
BSW Parameter		BSW Type
VARIABLE_LENGTH		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the signal is uint8[DcmDspRoutineParameterSize]. This is only valid for the last signal and when DcmDspRoutineSignalType is set to VARIABLE_LENGTH.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticDataElement.maxNumberOfElements: The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take. DiagnosticDataElement.arraySizeSemantics: This attribute controls the meaning of the value of the array size.		





M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. maxNumberOfElements , DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement. arraySizeSemantics	
Mapping Rule	Mapping Type
referenced by swDataDefProps of the DiagnosticParameter with the role DiagnosticStopRoutine.response baseTypeEncoding = NONE baseTypeSize = 8 arraySizeSemantics = variableSize maxNumberOfElements exists and value is greater than 0 (cf. TPS_DEXT_01002) arraySizeSemantics exists and is set to ArraySizeSemanticsEnum.variableSize (cf. TPS_DEXT_01002)	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspRoutine/DcmDspStopRoutine	
BSW Parameter		BSW Type
DcmDspStopRoutineRoleRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to DcmDspAuthenticationRow that defines a role in that this routine can be stopped.		
Template Description		
This attribute allows for the specification of the position of the enclosing role in a bitfield of roles.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticAuthRole. bitPosition		
Mapping Rule		Mapping Type
Applicable if the current access permission is referenced by DiagnosticStopRoutine. The value of DcmDspStopRoutineRole is calculated based on the bits of all referenced DiagnosticAuthRole.bitPosition, where a value of 2 ^{bitPosition} is used for each DiagnosticAuthRole.bitPosition. The accumulated value represents a bitfield that has a bit set for each DiagnosticAuthRole.bitPosition.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01145]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter		BSW Type
DcmDspSecurityADRSIZE		ECUC-INTEGER-PARAM-DEF
BSW Description		
Size in bytes of the AccessDataRecord used in GetSeed		
Template Description		
This represents the size of the AccessDataRecord used in GetSeed. Unit:byte.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticSecurityLevel. accessDataRecordSize		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00725]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter		BSW Type
DcmDspSecurityAttemptCounterEnabled		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This configuration parameter controls the existence of the APIs to set / get the attempt counter values towards application (Xxx_SetSecurityAttemptCounter() / Xxx_GetSecurityAttemptCounter()). In case of enabled, the security attempt counter values are passed to application, whenever there is a change in the value. This allows storing the values in nonvolatile RAM and restoring them at ECU startup.		
Template Description		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01050]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter		BSW Type
DcmDspSecurityCompareKeyFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name to request the result of a key comparison. Parameter is only relevant if DcmDspSecurityUsePort=="USE_ ASYNCH_FNC". This parameter is related to the interface Xxx_CompareKey.		
Template Description		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00969]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter		BSW Type
DcmDspSecurityDelayTime		ECUC-FLOAT-PARAM-DEF
BSW Description		
Delay time after failed security access in seconds. This is started after DcmDspSecurityNumAttDelay number of failed security accesses. min: A negative value is not allowed.		
Template Description		





This represents the delay time after a failed security access. Unit: second.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticSecurityLevel. securityDelayTime	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00757]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow
BSW Parameter	BSW Type
DcmDspSecurityDelayTimeOnBoot	ECUC-FLOAT-PARAM-DEF
BSW Description	
Value of the delay timer in case of 'power on' in seconds. This delay indicates the time at ECU boot power-on time during which the Dcm does not accept a security access. min: A negative value is not allowed.	
Template Description	
Start delay timer on power on in seconds. This delay indicates the time after ECU boot power-on where no security access request is accepted.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::SecurityAccess::DiagnosticSecurityAccess. securityDelayTimeOnBoot	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00726]

BSW Module	BSW Context
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow
BSW Parameter	BSW Type
DcmDspSecurityGetAttemptCounterFnc	ECUC-FUNCTION-NAME-DEF
BSW Description	
Function name to request the value of an attempt counter. This parameter is related to the interface Xxx_ GetSecurityAttempt Counter.	
Template Description	
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.	
M2 Parameter	
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01048]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter		BSW Type
DcmDspSecurityGetSeedFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Callout function name used to request a seed. This parameter is related to the interface Xxx_GetSeed.		
Template Description		
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00968]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter		BSW Type
DcmDspSecurityKeySize		ECUC-INTEGER-PARAM-DEF
BSW Description		
size of the security key (in Bytes).		
Template Description		
This represents the size of the security key. Unit: byte.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticSecurityLevel. keySize		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00760]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter		BSW Type
DcmDspSecurityLevel		ECUC-INTEGER-PARAM-DEF
BSW Description		
Value of Security level. The locked state cannot be configured explicitly. 1,2,3...63: configuration dependent - Conversion formula to calculate SecurityLevel out of tester requested SecurityAccessType parameter: $\text{SecurityLevel} = (\text{SecurityAccessType} (\text{requestSeed}) + 1) / 2$ Type: Dcm_SecLevelType		
Template Description		
This would be 0x01, 0x03, 0x05, ... The sendKey id can be computed by adding 1 to the requestSeedId		
M2 Parameter		





DiagnosticExtract::Dcm::DiagnosticService::SecurityAccess::DiagnosticSecurityAccess. requestSeedId	
Mapping Rule	Mapping Type
DcmDspSecurityLevel=(requestSeedId+1)/2	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00754]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter		BSW Type
DcmDspSecurityNumAttDelay		ECUC-INTEGER-PARAM-DEF
BSW Description		
Number of failed security accesses after which the delay time is activated		
Template Description		
This represents the number of failed security accesses after which the delay time is activated.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticSecurityLevel. numFailedSecurityAccess		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00762]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter		BSW Type
DcmDspSecuritySeedSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
size of the security seed (in Bytes).		
Template Description		
This represents the size of the security seed. Unit: byte.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticSecurityLevel. seedSize		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00755]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow	
BSW Parameter		BSW Type
DcmDspSecuritySetAttemptCounterFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name to set the value of an attempt counter. This parameter is related to the interface Xxx_ SetSecurityAttempt Counter.		





Template Description	
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.	
M2 Parameter	
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01049]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow/DcmDspSecurityUsePort	
BSW Parameter		BSW Type
USE_ASYNC_CLIENT_SERVER		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The DCM will access the data using an R-Port requiring a asynchronous ClientServerInterface SecurityAccess_{Security Level}.		
The R-Port is described in DcmDspSecurityRow description.		
Template Description		
This represents the ability to point into the component hierarchy (under possible consideration of the rootSoftware Composition)		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedSwcServiceDependencyInSystem		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSecurity/DcmDspSecurityRow/DcmDspSecurityUsePort	
BSW Parameter		BSW Type
USE_ASYNC_FNC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The DCM will access the data using the functions that are defined in the parameters DcmDspSecurityGetSeedFnc and DcmDspSecurityCompareKeyFnc as well as the functions defined in DcmDspSecurityGetAttemptCounterFnc and DcmDspSecuritySetAttemptCounterFnc, if enabled by the parameter DcmDspSecurityAttemptCounterEnabled.		
DCM_E_PENDING return is allowed and OpStatus is existing as IN parameter.		
Template Description		
This represents the ability to point into the component hierarchy (under possible consideration of the rootSoftware Composition)		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedSwcServiceDependencyInSystem		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/DcmDspSessionForBoot	
BSW Parameter		BSW Type
DCM_NO_BOOT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
This diagnostic session doesn't allow to jump to Bootloader.		
Template Description		
This diagnostic session doesn't allow to jump to Bootloader.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticJumpToBootLoaderEnum.noBoot		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/DcmDspSessionForBoot	
BSW Parameter		BSW Type
DCM_OEM_BOOT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
This diagnostic session allows to jump to OEM Bootloader and bootloader sends final response.		
Template Description		
This diagnostic session allows to jump to OEM Bootloader. In this case the bootloader send the final response.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticJumpToBootLoaderEnum.oemBoot		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/DcmDspSessionForBoot	
BSW Parameter		BSW Type
DCM_OEM_BOOT_RESPAPP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
This diagnostic session allows to jump to OEM Bootloader and application sends final response.		
Template Description		
This diagnostic session allows to jump to OEM Bootloader and application sends final response.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticJumpToBootLoaderEnum.oemBootRespApp		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/DcmDspSessionForBoot	
BSW Parameter		BSW Type
DCM_SYS_BOOT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
This diagnostic session allows to jump to System Supplier Bootloader and bootloader sends final response.		
Template Description		
This diagnostic session allows to jump to System Supplier Bootloader. In this case the bootloader send the final response.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticJumpToBootLoaderEnum. systemSupplierBoot		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow/DcmDspSessionForBoot	
BSW Parameter		BSW Type
DCM_SYS_BOOT_RESPAPP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
This diagnostic session allows to jump to System Supplier Bootloader and application sends final response.		
Template Description		
This diagnostic session allows to jump to System Supplier Bootloader and application sends final response.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticJumpToBootLoaderEnum. systemSupplierBootRespApp		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow	
BSW Parameter		BSW Type
DcmDspSessionLevel		ECUC-INTEGER-PARAM-DEF
BSW Description		
subFunction value of the DiagnosticSession. 0, 127 and all values above 127 are reserved by ISO		
Template Description		
This is the numerical identifier used to identify the DiagnosticSession in the scope of diagnostic workflow		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticSession. id		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00765]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow	
BSW Parameter		BSW Type
DcmDspSessionP2ServerMax		ECUC-FLOAT-PARAM-DEF
BSW Description		
This is the session value for P2ServerMax in seconds (per Session). The AUTOSAR configuration standard is to use SI units, so this parameter is defined as a float value in seconds. DCM configuration tools must convert this float value to the appropriate value format for the use in the software implementation of DCM. This value is reported to the tester within the response to the 'Session Control' service.		
Template Description		
This is the session value for P2ServerMax in seconds (per Session Control).		
The AUTOSAR configuration standard is to use SI units, so this parameter is defined as a float value in seconds.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticSession.p2ServerMax		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00766]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspSession/DcmDspSessionRow	
BSW Parameter		BSW Type
DcmDspSessionP2StarServerMax		ECUC-FLOAT-PARAM-DEF
BSW Description		
This is the session value for P2*ServerMax in seconds (per Session). The AUTOSAR configuration standard is to use SI units, so this parameter is defined as a float value in seconds. DCM configuration tools must convert this float value to the appropriate value format for the use in the software implementation of DCM. This value is reported to the tester within the response to the 'Session Control' service.		
Template Description		
This is the session value for P2*ServerMax in seconds (per Session Control).		
The AUTOSAR configuration standard is to use SI units, so this parameter is defined as a float value in seconds.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticSession.p2StarServerMax		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00768]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp	
BSW Parameter		BSW Type
DcmDspVehInfo		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) for one single VehicleInfoType of service \$09		
Template Description		
This meta-class represents the ability to model an instance of the OBD mode 0x09 service.		





M2 Parameter	
DiagnosticExtract::Dcm::ObdService::Mode_0x09_RequestVehicleInformation::DiagnosticRequestVehicleInfo	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00630]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspVehInfo	
BSW Parameter		BSW Type
DcmDspVehInfoData		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Data Item of an InfoType; ShortName is post-fix of the port interface name.		
Template Description		
This meta-class represents the ability to describe a concrete piece of data to be taken into account for diagnostic purposes.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement		
Mapping Rule		Mapping Type
The value shall be taken from DiagnosticRequestVehicleInfo.infoType.dataElement.dataElement.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00888]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspVehInfo/DcmDspVehInfoData	
BSW Parameter		BSW Type
DcmDspVehInfoDataOrder		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the order of the data item in the InfoType; values: 0..255; first data item having the order number 0; the next 1 and so on. The configuration of order needs to be unique per InfoType.		
Template Description		
This represents the bitOffset of the DiagnosticParameter. The value of the bitOffset shall always be interpreted as relative to the start of the enclosing DiagnosticDataIdentifier, DiagnosticParameterIdentifier, or DiagnosticRoutineSubfunction.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameter.bitOffset		
Mapping Rule		Mapping Type
Value shall be taken from DiagnosticRequestVehicleInfo.infoType.dataElement.bitOffset.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00891]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspVehInfo/DcmDspVehInfoData	
BSW Parameter		BSW Type
DcmDspVehInfoDataReadFnc		ECUC-FUNCTION-NAME-DEF





BSW Description	
Callout function name for reading InfoType data item. Only required in case parameter 'DcmDspVehInfoDataUsePort' is set to 'false'	
Template Description	
This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference.	
M2 Parameter	
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping.mappedBswServiceDependency	
Mapping Rule	Mapping Type
The BswServiceDependency should have aRoleBasedBswModuleEntryAssignment that in turn has attribute role set to Xxx_GetInfotypeValueData and points to a BswModuleEntry.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00889]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspVehInfo/DcmDspVehInfoData	
BSW Parameter		BSW Type
DcmDspVehInfoDataSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Size in bytes of the InfoType data item.		
Template Description		
The existence of this attribute turns the data instance into an array of data. The attribute determines the size of the array in terms of how many elements the array can take.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement.maxNumberOfElements		
Mapping Rule		Mapping Type
Value shall be taken from DiagnosticRequestVehicleInfo.infoType.dataElement.dataElement.maxNumberOfElements.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00890]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspVehInfo/DcmDspVehInfoData	
BSW Parameter		BSW Type
DcmDspVehInfoDataUsePort		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
When this parameter is set to true the DCM will access the Data using an R-Port requiring a PortInterface Infotype Services_{VehInfoData}. The R-Port is named InfotypeServices_{VehInfoData} where {VEHINFODATA} is the name of the container DcmDspVehInfoData. In that case, the DcmDspVehInfoDataReadFnc is ignored and the RTE APIs are used. When this parameter is set to false, the DCM calls the function defined in DcmDspVehInfoDataReadFnc.		
Template Description		
DiagnosticServiceSwMapping.mappedBswServiceDependency: This is supposed to represent a reference to a BswServiceDependency. the latter is not derived from Referrable and therefore this detour needs to be implemented to still let BswServiceDependency become the target of a reference. DiagnosticServiceSwMapping.mappedSwcServiceDependencyInSystem: This represents the ability to point into the component hierarchy (under possible consideration of the rootSoftware Composition)		





M2 Parameter	
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedBswServiceDependency , DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceSwMapping. mappedSwcServiceDependencyInSystem	
Mapping Rule	Mapping Type
Shall be set to TRUE if the reference DiagnosticServiceSwMapping.mappedSwcService Dependency exists. Shall be set to FALSE if the reference DiagnosticServiceSwMapping.mapped BswServiceDependency exists.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00727]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmDsp/DcmDspVehInfo	
BSW Parameter		BSW Type
DcmDspVehInfoInfoType		ECUC-INTEGER-PARAM-DEF
BSW Description		
value of InfoType. Within each DcmConfigSet all DcmDspVehInfoInfoType values shall be unique.		
Template Description		
This attribute represents the value of InfoType (see SAE J1979-DA).		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticInfoType. id		
Mapping Rule		Mapping Type
If DiagnosticRequestVehicleInfo, us DiagnosticRequestVehicleInfo.infoType.id.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00631]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions	
BSW Parameter		BSW Type
DcmModeCondition		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration of a mode condition or an environmental conditions which can be used as argument in DcmModeRules. One DcmModeCondition shall contain either one DcmSwcModeRef or one DcmBswModeRef or one DcmSwcSRData ElementRef. Please note that the Dcm acts as well as mode manager. Therefore the references DcmSwcModeRef or one DcmBswMode Ref. might point to provided ModeDeclarationGroupPrototypes of the Dcm itself as well as to provided ModeDeclaration GroupPrototypes of other Bsw Modules or software components. In case of a configured DcmSwcModeRef or DcmBswModeRef only the DcmConditionType DCM_EQUALS or DCM_EQUALS_NOT are applicable. In case of DcmSwcSRDataElementRef all literals of DcmConditionType are possible.		
Template Description		
DiagnosticCompareConditions are atomic conditions. They are based on the idea of a comparison at runtime of some variable data with something constant. The type of the comparison (==, !=, <, <=, ...) is specified in DiagnosticCompare Condition.compareType.		
M2 Parameter		





DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition	
Mapping Rule	Mapping Type
Depending on the reference a DcmModeCondition is mapped to a DiagnosticEnvModeCondition if only one reference is present and reference is a DcmSwcModeRef or a DcmBswModeRef. If two references are present, a DcmSwcSRDataElementRef and a DcmSwcSRDataElementValueRef, then DcmModeCondition is mapped to a DiagnosticEnvDataCondition.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00928]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition	
BSW Parameter		BSW Type
DcmBswModeRef		ECUC-INSTANCE-REFERENCE-DEF
BSW Description		
This parameter references a mode of a ModeDeclarationGroupPrototype provided by a Basic Software Module used for the condition. Please note that such ModeDeclarationGroupPrototype are owned by a Basic Software Module Description in the role providedModeGroup.		
Template Description		
This reference represents both the ModeDeclarationGroupPrototype and the ModeDeclaration relevant for the mode comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvModeCondition.modeElement		
Mapping Rule		Mapping Type
For DcmModeRef a new DiagnosticEnvBswModeElement is used, pointing to the ModeDeclaration via ModeInModuleDescriptionInstanceRef. This new DiagnosticEnvModeElement shall be aggregated by the same DiagnosticEnvironmentalCondition as the DiagnosticEnvModeCondition, in which the target of the reference DiagnosticEnvModeCondition.modeElement points to the this DiagnosticEnvModeElement.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00931]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmConditionType	
BSW Parameter		BSW Type
DCM_EQUALS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
DiagnosticCompareTypeEnum.isEqual: equal DiagnosticEnvCompareCondition.compareType: This attributes represents the concrete type of the comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticCompareTypeEnum.isEqual, DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition.compareType		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmConditionType	
BSW Parameter		BSW Type
DCM_EQUALS_NOT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
DiagnosticCompareTypeEnum.isNotEqual: not equal DiagnosticEnvCompareCondition.compareType: This attributes represents the concrete type of the comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticCompareTypeEnum. isNotEqual , Diagnostic Extract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition. compareType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmConditionType	
BSW Parameter		BSW Type
DCM_GREATER_OR_EQUAL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
DiagnosticCompareTypeEnum.isGreaterOrEqual: greater than or equal DiagnosticEnvCompareCondition.compareType: This attributes represents the concrete type of the comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticCompareTypeEnum. isGreaterOrEqual , Diagnostic Extract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition. compareType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmConditionType	
BSW Parameter		BSW Type
DCM_GREATER_THAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		





Template Description	
DiagnosticCompareTypeEnum.isGreaterThan: greater than DiagnosticEnvCompareCondition.compareType: This attributes represents the concrete type of the comparison.	
M2 Parameter	
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticCompareTypeEnum.isGreaterThan, Diagnostic Extract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition.compareType	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmConditionType	
BSW Parameter		BSW Type
DCM_LESS_OR_EQUAL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
DiagnosticCompareTypeEnum.isLessOrEqual: less than or equal DiagnosticEnvCompareCondition.compareType: This attributes represents the concrete type of the comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticCompareTypeEnum.isLessOrEqual, Diagnostic Extract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition.compareType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmConditionType	
BSW Parameter		BSW Type
DCM_LESS_THAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
DiagnosticCompareTypeEnum.isLessThan: less than DiagnosticEnvCompareCondition.compareType: This attributes represents the concrete type of the comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticCompareTypeEnum.isLessThan, Diagnostic Extract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition.compareType		
Mapping Rule		Mapping Type





1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmSwcDataElementValue/ DcmSwcDataElementArray/DcmSwcDataElementArrayElement	
BSW Parameter		BSW Type
DcmSwcDataElementArrayElementIndex		ECUC-INTEGER-PARAM-DEF
BSW Description		
Index to an element of the compare value array.		
Template Description		
This attribute represents a fixed compare value taken to evaluate the compare condition.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvDataCondition. compareValue		
Mapping Rule		Mapping Type
DiagnosticDataElement referenced by the DiagnosticEnvDataCondition is an array.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01127]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmSwcDataElementValue/ DcmSwcDataElementArray/DcmSwcDataElementArrayElement	
BSW Parameter		BSW Type
DcmSwcDataElementArrayElementValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Value of an array element compare value.		
Template Description		
This attribute represents a fixed compare value taken to evaluate the compare condition.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvDataCondition. compareValue		
Mapping Rule		Mapping Type
DiagnosticDataElement referenced by the DiagnosticEnvDataCondition is an array.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01128]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition/DcmSwcDataElementValue/ DcmSwcDataElementPrimitive	
BSW Parameter		BSW Type
DcmSwcDataElementPrimitiveValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Primitive compare value.		
Template Description		





This attribute represents a fixed compare value taken to evaluate the compare condition.	
M2 Parameter	
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvDataCondition. compareValue	
Mapping Rule	Mapping Type
DiagnosticDataElement referenced by the DiagnosticEnvDataCondition is primitive.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01126]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition	
BSW Parameter		BSW Type
DcmSwcModeRef		ECUC-INSTANCE-REFERENCE-DEF
BSW Description		
This parameter references a mode in a particular mode request port of a software component that is used for the condition.		
Template Description		
This reference represents both the ModeDeclarationGroupPrototype and the ModeDeclaration relevant for the mode comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvModeCondition. modeElement		
Mapping Rule		Mapping Type
For DcmModeRef a new DiagnosticEnvSwcModeElement is used, pointing to the ModeDeclaration via PModelInSystemInstanceRef. This new DiagnosticEnvModeElement shall be aggregated by the same DiagnosticEnvironmentalCondition as the DiagnosticEnvModeCondition, in which the target of the reference DiagnosticEnvModeCondition.modeElement points to the this DiagnosticEnvModeElement.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00930]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeCondition	
BSW Parameter		BSW Type
DcmSwcSRDataElementRef		ECUC-CHOICE-REFERENCE-DEF
BSW Description		
Reference to environmental conditions. It is possible to reference a S/R Receiver-Port to read physical values and compare (equal, greater, less,...) them with a configured value that is defined by DcmSwcDataElementValue.		
Template Description		
This reference represents the related diagnostic data element.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvDataCondition. dataElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01037]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions	
BSW Parameter		BSW Type
DcmModeRule		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration of a mode rule which represents a logical expression with DcmModeConditions or other DcmModeRules as arguments. All arguments are processed with the operator defined by DcmLogicalOperator, for instance: Argument_A AND Argument_B AND Argument_C		
Template Description		
A DiagnosticEnvConditionFormula embodies the computation instruction that is to be evaluated at runtime to determine if the DiagnosticEnvironmentalCondition is currently present (i.e. the formula is evaluated to true) or not (otherwise). The formula itself consists of parts which are combined by the logical operations specified by DiagnosticEnvConditionFormula.op. If a diagnostic functionality cannot be executed because an environmental condition fails then the diagnostic stack shall send a negative response code (NRC) back to the client. The value of the NRC is directly related to the specific formula and is therefore formalized in the attribute DiagnosticEnvConditionFormula.nrcValue.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvConditionFormula		
Mapping Rule		Mapping Type
A DcmModeRule is mapped to a DiagnosticEnvConditionFormula, if this DcmModeRule is a subrule, i.e. it is referenced by a DcmArgumentRef. In addition, a new DiagnosticEnvironmentalCondition shall be created with DiagnosticEnvironmentalCondition.formula containing a DiagnosticEnvConditionFormula. In both cases, if no DcmLogicalOperator is present in this DcmModeRule, then DiagnosticEnvConditionFormula shall be set to DiagnosticLogicalOperatorEnum.logicalAnd.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00925]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeRule	
BSW Parameter		BSW Type
DcmArgumentRef		ECUC-CHOICE-REFERENCE-DEF
BSW Description		
This is a choice reference either to a mode condition or a an other mode rule serving as sub-expression.		
Template Description		
A DiagnosticEnvConditionFormulaPart can either be a atomic condition, e.g. a DiagnosticEnvCompareCondition, or a DiagnosticEnvConditionFormula, again, which allows arbitrary nesting.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvConditionFormulaPart		
Mapping Rule		Mapping Type
Depending on the destination, one DcmArgumentRef is mapped to a DiagnosticEnvConditionFormula if "destination" is a DcmModeRule, and to a DiagnosticEnvCompareCondition, if "destination" is a DcmModeCondition. The order of the aggregation of the DiagnosticEnvConditionFormulaParts shall correspond to the ordering of the index of the DcmArgumentRefs.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00927]

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeRule/DcmLogicalOperator	
BSW Parameter		BSW Type
DCM_AND		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description DiagnosticEnvConditionFormula.op: This attribute represents the concrete operator (supported operators: and, or) of the condition formula. DiagnosticLogicalOperatorEnum.logicalAnd: Logical AND		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvConditionFormula.op, Diagnostic Extract::Dcm::EnvironmentalCondition::DiagnosticLogicalOperatorEnum.logicalAnd		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeRule/DcmLogicalOperator	
BSW Parameter		BSW Type
DCM_OR		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description DiagnosticEnvConditionFormula.op: This attribute represents the concrete operator (supported operators: and, or) of the condition formula. DiagnosticLogicalOperatorEnum.logicalOr: Logical OR		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvConditionFormula.op, Diagnostic Extract::Dcm::EnvironmentalCondition::DiagnosticLogicalOperatorEnum.logicalOr		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dcm	Dcm/DcmConfigSet/DcmProcessingConditions/DcmModeRule	
BSW Parameter		BSW Type
DcmModeRuleNrcValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Optional parameter which defines the NRC to be sent in case the mode rule condition is not valid.		
Template Description		
This attribute represents the concrete NRC value that shall be returned if the condition fails.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvConditionFormula.nrcValue		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_00949]

BSW Module	BSW Context	
Dcm	Dcm/DcmGeneral	
BSW Parameter		BSW Type
DcmDDDIDStorage		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This configuration switch defines, whether DDDID definition is stored non-volatile or not. true: DDDID are stored non-volatile false: DDDID are only maintained volatile		
Template Description		
This configuration switch defines whether DDDID definition is handled as non-volatile information or not.		
M2 Parameter		
DiagnosticExtract::Dcm::DiagnosticService::DynamicallyDefineDataIdentifier::DiagnosticDynamicallyDefineDataIdentifier Class. configurationHandling		
Mapping Rule		Mapping Type
volatile -> false, nonVolatile -> true		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00971]

BSW Module	BSW Context	
Dcm	Dcm/DcmGeneral	
BSW Parameter		BSW Type
DcmRespondAllRequest		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If set to FALSE the Dcm will not respond to diagnostic request that contains a service ID which is in the range from 0x40 to 0x7F or in the range from 0xC0 to 0xFF (Response IDs).		
Template Description		
If set to FALSE the DCM will not respond to diagnostic request that contains a service ID which is in the range from 0x40 to 0x7F or in the range from 0xC0 to 0xFF (Response IDs).		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps. responseOnAllRequestSids		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00600]

BSW Module	BSW Context	
Dcm	Dcm/DcmGeneral	
BSW Parameter		BSW Type
DcmS3ServerTimeoutOverwrite		ECUC-FLOAT-PARAM-DEF
BSW Description		





Time for the server to keep a diagnostic session other than the defaultSession active while not receiving any diagnostic request message. This parameter overwrites the 5s recommend value of the S3server timeout in ISO 14229-2. The parameter value is defined in seconds.	
Template Description	
Time for the server to keep a diagnostic session other than the default session active while not receiving any diagnostic request message.	
M2 Parameter	
DiagnosticExtract::Dcm::DiagnosticService::SessionControl::DiagnosticSessionControlClass.s3ServerTimeout	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dcm_01240]

BSW Module	BSW Context	
Dcm	Dcm/DcmGeneral	
BSW Parameter		BSW Type
DcmSecureCoding		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Contains references to diagnostic elements that are used for the secure coding process.		
Template Description		
This meta-class acts a mapping element to select diagnostic service instances that are used in the secure coding procedure. Besides, there are already defined diagnostic capabilities they furthermore have a additional semantics that is used during the secure coding process. In particular, this class references write data by identifier instances that mandatory require a secure coding and this class references a diagnostic routine control that is used to provide the signature and to persist the data in non-volatile memory.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::DiagnosticSecureCodingMapping		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01245]

BSW Module	BSW Context	
Dcm	Dcm/DcmGeneral/DcmSecureCoding	
BSW Parameter		BSW Type
DcmSecureCodingDataIdentifier		ECUC-REFERENCE-DEF
BSW Description		
Refers to a writeable data identifier that requires the secure coding process to write the data.		
Template Description		
Refer to write data by identifier instances that have the semantics to be a secure coding DID.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::DiagnosticSecureCodingMapping.dataIdentifier		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_01246]

BSW Module	BSW Context	
Dcm	Dcm/DcmGeneral	
BSW Parameter		BSW Type
DcmVinRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the Did containing the VIN Information. This parameter is needed for function Dcm_GetVin		
Template Description		
This meta-class represents the ability to model a diagnostic data identifier (DID) that is fully specified regarding the payload at configuration-time.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataIdentifier		
Mapping Rule		Mapping Type
This reference shall only apply to a DiagnosticDataIdentifier where the attribute representsVin is set to true.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dcm_00984]

G.3 Dem

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC	
BSW Parameter		BSW Type
DemDTCFunctionalUnit		ECUC-INTEGER-PARAM-DEF
BSW Description		
DTCFuncionalUnit is a 1-byte value which identifies the corresponding basic vehicle / system function which reports the DTC. This parameter is necessary for the report of severity information. If this parameter is configured for no DTC, the Dem provides no DTC functional unit information.		
Template Description		
This attribute specifies a 1-byte value which identifies the corresponding basic vehicle / system function which reports the DTC. This parameter is necessary for the report of severity information.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeUds.functionalUnit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00643]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC	
BSW Parameter		BSW Type
DemDTCSeverity		ECUC-ENUMERATION-PARAM-DEF
BSW Description		





DTC severity according to ISO 14229-1. This parameter depends on the automotive manufacturer. If it is not configured, the value is counted as 'no severity'. If this parameter is configured for no DTC, the Dem provides no DTC severity information.	
Template Description	
DTC severity according to ISO 14229-1.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeUds.severity	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00645]

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemDTC/DemDTCSeverity
BSW Parameter	BSW Type
DEM_SEVERITY_CHECK_AT_NEXT_HALT	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Check at next halt	
Template Description	
Check at next halt.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticUdsSeverityEnum.checkAtNextHalt	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemDTC/DemDTCSeverity
BSW Parameter	BSW Type
DEM_SEVERITY_CHECK_IMMEDIATELY	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Check immediately	
Template Description	
Check immediately.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticUdsSeverityEnum.immediately	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC/DemDTCSeverity	
BSW Parameter		BSW Type
DEM_SEVERITY_MAINTENANCE_ONLY		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Maintenance required		
Template Description		
Maintenance required.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticUdsSeverityEnum.maintenanceOnly		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC/DemDTCSeverity	
BSW Parameter		BSW Type
DEM_SEVERITY_NO_SEVERITY		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
No severity information available		
Template Description		
No severity information available.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticUdsSeverityEnum.noSeverity		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC	
BSW Parameter		BSW Type
DemDtcOBDRellevance		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Defines is this DTC is relevant for OBD. OBD relevant DTCs are reported in the OBD related APIs and it is possible to configure the calculation of further OBD related data such as readiness groups, IUMPR, etc. If set to false, the DTC is not OBD relevant If set to true, the DTC is OBD relevant.		
Template Description		
The attribute controls whether the enclosing DTC is relevant for OBD.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeObdProps.obdRelevance		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00994]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC	
BSW Parameter		BSW Type
DemDtcValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
3 Byte value of the UDS Diagnostic Trouble Code (DTC). The value is unique within a fault memory. The ranges: 0x000000-0x0000FF and 0xFFFFF are reserved by ISO 14229-1.		
Template Description		
Unique Diagnostic Trouble Code value for UDS.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeUds.udsDtcValue		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00887]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC	
BSW Parameter		BSW Type
DemNvStorageStrategy		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines when the event related data of the DTC is stored in the NVRAM.		
Template Description		
Change description for Class immediateNvDataStorage in table "Table A.111: DiagnosticTroubleCodeProps": Switch to enable immediate storage triggering of an according event memory entry persistently to NVRAM. true: immediate non-volatile storage triggering on first occurrence and shutdown. false: immediate non-volatile storage triggering on shutdown.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeProps.immediateNvDataStorage		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00127]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC/DemNvStorageStrategy	
BSW Parameter		BSW Type
DURING_SHUTDOWN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Store during shutdown		
Template Description		





Change description for Class immediateNvDataStorage in table "Table A.111: DiagnosticTroubleCodeProps": Switch to enable immediate storage triggering of an according event memory entry persistently to NVRAM. true: immediate non-volatile storage triggering on first occurrence and shutdown. false: immediate non-volatile storage triggering on shutdown.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeProps.immediateNvDataStorage	
Mapping Rule	Mapping Type
immediateNvDataStorage == false	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemDTC/DemNvStorageStrategy
BSW Parameter	BSW Type
IMMEDIATE_AT_FIRST_OCCURRENCE	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Store at first occurrence of DemEventMemoryEntryStorageTrigger trigger and during shutdown	
Template Description	
Change description for Class immediateNvDataStorage in table "Table A.111: DiagnosticTroubleCodeProps": Switch to enable immediate storage triggering of an according event memory entry persistently to NVRAM. true: immediate non-volatile storage triggering on first occurrence and shutdown. false: immediate non-volatile storage triggering on shutdown.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeProps.immediateNvDataStorage	
Mapping Rule	Mapping Type
immediateNvDataStorage == true	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemDTC
BSW Parameter	BSW Type
DemWWHOBDDTCClass	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
DTC Class according to ISO 14229-1 [2013 version]. This parameter depends on the automotive manufacturer. If it is not configured, the value is marked as 'unclassified'. If this parameter is configured for no DTC, the Dem provides no DTC WWHOBd class information.	
Template Description	
This attribute is used to identify (if applicable) the corresponding severity class of an WWH-OBd DTC.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeUds.wwhObdDtcClass	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00912]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC/DemWWHOBDTCClass	
BSW Parameter		BSW Type
DEM_DTC_WWHOBDD_CLASS_A		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Class A		
Template Description		
This attribute represents the severity class A.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticWwhObdDtcClassEnum. demDtcWwhObdClassA		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC/DemWWHOBDTCClass	
BSW Parameter		BSW Type
DEM_DTC_WWHOBDD_CLASS_B1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Class B1		
Template Description		
This attribute represents the severity class B1.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticWwhObdDtcClassEnum. demDtcWwhObdClassB1		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC/DemWWHOBDTCClass	
BSW Parameter		BSW Type
DEM_DTC_WWHOBDD_CLASS_B2		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Class B2		
Template Description		
This attribute represents the severity class B2.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticWwhObdDtcClassEnum. demDtcWwhObdClassB2		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC/DemWWHOBDTCClass	
BSW Parameter		BSW Type
DEM_DTC_WWHOBDD_CLASS_C		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Class C		
Template Description		
This attribute represents the severity class C.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticWwhObdDtcClassEnum. demDtcWwhObdClassC		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTC/DemWWHOBDTCClass	
BSW Parameter		BSW Type
DEM_DTC_WWHOBDD_CLASS_NOCLASS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
No Class information		
Template Description		
This attribute represents the option to intentionally not describe a dedicated severity class of an WWH-OBD DTC.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticWwhObdDtcClassEnum. demDtcWwhObdClassNoInformation		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTCAttributes	
BSW Parameter		BSW Type
DemAgingCycleCounterThreshold		ECUC-INTEGER-PARAM-DEF
BSW Description		
Number of aging cycles needed to unlearn/delete the event.		
Template Description		
Number of aging cycles needed to unlearn/delete the event.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticAging::DiagnosticAging. threshold		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00623]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTCAttributes	
BSW Parameter		BSW Type
DemAgingCycleRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the cycle which is triggering the aging of the event.		
Template Description		
This represents the applicable aging cycle.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticAging::DiagnosticAging.agingCycle		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00624]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTCAttributes	
BSW Parameter		BSW Type
DemDTCPriority		ECUC-INTEGER-PARAM-DEF
BSW Description		
Priority of the event/dtc, in view of full event memory. A lower value means higher priority.		
Template Description		
Priority of the event, in view of full event buffer. A lower value means higher priority.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeProps.priority		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00662]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTCAttributes	
BSW Parameter		BSW Type
DemDTCSignificance		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Significance of the event, which indicates additional information concerning fault classification and resolution. It can be mapped as Dem-internal data element. It shall be configured, if it is a part of event related data.		
Template Description		
Significance of the event, which indicates additional information concerning fault classification and resolution.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeProps.significance		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00779]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTCAttributes/DemDTCSignificance	
BSW Parameter		BSW Type
DEM_EVENT_SIGNIFICANCE_OCCURRENCE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
issue, which indicates additional information concerning insufficient system behavior		
Template Description		
Issue, which indicates additional information concerning insufficient system behavior.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticSignificanceEnum.occurrence		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTCAttributes	
BSW Parameter		BSW Type
DemMaxNumberFreezeFrameRecords		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter defines the number of according freeze frame records, which can maximal be stored for this event. Therefore all these freeze frame records have the same freeze frame class.		
This parameter is only required for calculated record numeration (refer to DemTypeOfFreezeFrameRecordNumeration).		
Template Description		
This attribute defines the number of according freeze frame records, which can maximal be stored for this event. Therefore all these freeze frame records have the same freeze frame class.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeProps.maxNumberFreezeFrameRecords		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00605]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDTCAttributes	
BSW Parameter		BSW Type
DemMemoryDestinationRef		ECUC-CHOICE-REFERENCE-DEF
BSW Description		
The memory destination assigns DTCs to one memory destination.		
Template Description		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeProps.memoryDestination		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00890]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass	
BSW Parameter		BSW Type
DemCounterBasedFdcThresholdStorageValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Threshold to allocate an event memory entry and to capture the Freeze Frame.		
Template Description		
Threshold to allocate an event memory entry and to capture the Freeze Frame.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterBasedFdcThresholdStorageValue		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00914]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass	
BSW Parameter		BSW Type
DemDebounceBehavior		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines how the event debounce algorithm will behave, if a related enable condition is not fulfilled or Control DTCSetting of the related event is disabled.		
Template Description		
This attribute defines how the event debounce algorithm will behave, if a related enable condition is not fulfilled or Control DTCSetting of the related event is disabled.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm::DiagnosticDebounceAlgorithmProps.debounceBehavior		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00786]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass/DemDebounceBehavior	
BSW Parameter		BSW Type
DEM_DEBOUNCE_FREEZE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The event debounce counter will be frozen with the current value and will not change while a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. After all related enable conditions are fulfilled and Control DTCSetting of the related event is enabled again, the event qualification will continue with the next report of the event (i.e. Set EventStatus).		
Template Description		
The event debounce counter will be frozen with the current value and will not change while a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. After all related enable conditions are fulfilled and Control DTCSetting of the related event is enabled again, the event qualification will continue with the next report of the event (i.e. Set EventStatus).		
M2 Parameter		





DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm::DiagnosticDebounceBehaviorEnum. freeze	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass/DemDebounceBehavior	
BSW Parameter		BSW Type
DEM_DEBOUNCE_RESET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The event debounce counter will be reset to initial value if a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. The qualification of the event will be restarted with the next valid event report.		
Template Description		
The event debounce counter will be reset to initial value if a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. The qualification of the event will be restarted with the next valid event report.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm::DiagnosticDebounceBehaviorEnum. reset		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass	
BSW Parameter		BSW Type
DemDebounceCounterDecrementStepSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the step size for decrementation of the internal debounce counter (PREPASSED).		
Template Description		
This value shall be taken to decrement the internal debounce counter.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased. counterDecrementStepSize		
Mapping Rule		Mapping Type
Shall be taken from DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounceAlgorithm.counterDecrementStepSize. Applicable if DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounceAlgorithm is modeled by means of a DiagEventDebounceCounterBased.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00635]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass	
BSW Parameter		BSW Type





DemDebounceCounterFailedThreshold	ECUC-INTEGER-PARAM-DEF
BSW Description	
Defines the value of the internal debounce counter, which indicates the failed status.	
Template Description	
This value defines the event-specific limit that indicates the "failed" counter status.	
M2 Parameter	
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterFailedThreshold	
Mapping Rule	Mapping Type
Shall be taken from DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithm Props.debounceAlgorithm.counterFailedThreshold. Applicable if DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounce Algorithm is modeled by means of a DiagEventDebounceCounterBased.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00618]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass	
BSW Parameter		BSW Type
DemDebounceCounterIncrementStepSize		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the step size for incrementation of the internal debounce counter (PREFAILED).		
Template Description		
This value shall be taken to increment the internal debounce counter.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterIncrementStepSize		
Mapping Rule		Mapping Type
Shall be taken from DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithm Props.debounceAlgorithm.counterIncrementStepSize. Applicable if DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounce Algorithm is modeled by means of a DiagEventDebounceCounterBased.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00637]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass	
BSW Parameter		BSW Type
DemDebounceCounterJumpDown		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switch for the activation of Jump-Down. true: Jump-Down activated false: Jump-Down deactivated		
Template Description		
This value activates or deactivates the counter jump-down behavior.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterJumpDown		
Mapping Rule		Mapping Type





Shall be taken from DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounceAlgorithm.counterJumpDown. Applicable if DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounceAlgorithm is modeled by means of a DiagEventDebounceCounterBased.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00685]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass	
BSW Parameter		BSW Type
DemDebounceCounterJumpDownValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Jump-Down value of the internal debounce counter which is taken as initialization value for the counter when the respective step-down occurs.		
Template Description		
This value represents the initial value of the internal debounce counter if the counting direction changes from incrementing to decrementing.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterJumpDownValue		
Mapping Rule		Mapping Type
Shall be taken from DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounceAlgorithm.counterJumpDownValue. Applicable if DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounceAlgorithm is modeled by means of a DiagEventDebounceCounterBased.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00638]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass	
BSW Parameter		BSW Type
DemDebounceCounterJumpUp		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switch for the activation of Jump-Up. true: Jump-Up activated false: Jump-Up deactivated		
Template Description		
This value activates or deactivates the counter jump-up behavior.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterJumpUp		
Mapping Rule		Mapping Type
Shall be taken from DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounceAlgorithm.counterJumpUp. Applicable if DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounceAlgorithm is modeled by means of a DiagEventDebounceCounterBased.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00686]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass	
BSW Parameter		BSW Type
DemDebounceCounterJumpUpValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Jump-Up value of the internal debounce counter which is taken as initialization value for the counter when the respective step-up occurs.		
Template Description		
This value represents the initial value of the internal debounce counter if the counting direction changes from decrementing to incrementing.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterJumpUpValue		
Mapping Rule		Mapping Type
Shall be taken from DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounceAlgorithm.counterJumpValue. Applicable if DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounceAlgorithm is modeled by means of a DiagEventDebounceCounterBased.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00639]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass	
BSW Parameter		BSW Type
DemDebounceCounterPassedThreshold		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the value of the internal debounce counter, which indicates the passed status.		
Template Description		
This value defines the event-specific limit that indicates the "passed" counter status.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased.counterPassedThreshold		
Mapping Rule		Mapping Type
Shall be taken from DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounceAlgorithm.counterPassedThreshold. Applicable if DiagnosticExtract::DiagnosticCommonProps.debounceAlgorithmProps.debounceAlgorithm is modeled by means of a DiagEventDebounceCounterBased.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00636]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceCounterBasedClass	
BSW Parameter		BSW Type
DemDebounceCounterStorage		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Switch to store the debounce counter value non-volatile or not.		
true: debounce counter value shall be stored non-volatile false: debounce counter value is volatile		
Template Description		





Switch to store the debounce counter value non-volatile or not. true: debounce counter value shall be stored non-volatile false: debounce counter value is volatile Please note that this attribute is not relevant for the adaptive platform.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm::DiagnosticDebounceAlgorithmProps. debounceCounterStorage	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00791]

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemDebounceTimeBasedClass
BSW Parameter	BSW Type
DemDebounceBehavior	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
This parameter defines how the event debounce algorithm will behave, if a related enable condition is not fulfilled or Control DTCSetting of the related event is disabled.	
Template Description	
This attribute defines how the event debounce algorithm will behave, if a related enable condition is not fulfilled or Control DTCSetting of the related event is disabled.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm::DiagnosticDebounceAlgorithmProps. debounceBehavior	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00789]

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemDebounceTimeBasedClass/DemDebounceBehavior
BSW Parameter	BSW Type
DEM_DEBOUNCE_FREEZE	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
The event debounce timer will be frozen with the current value and will not change while a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. After all related enable conditions are fulfilled and Control DTCSetting of the related event is enabled again, the event qualification will continue with the next report of the event (i.e. Set EventStatus).	
Template Description	
The event debounce counter will be frozen with the current value and will not change while a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. After all related enable conditions are fulfilled and Control DTCSetting of the related event is enabled again, the event qualification will continue with the next report of the event (i.e. Set EventStatus).	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm::DiagnosticDebounceBehaviorEnum. freeze	
Mapping Rule	Mapping Type
1:1 mapping	full





Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceTimeBasedClass/DemDebounceBehavior	
BSW Parameter		BSW Type
DEM_DEBOUNCE_RESET		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The event debounce timer will be reset to initial value if a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. The qualification of the event will be restarted with the next valid event report.		
Template Description		
The event debounce counter will be reset to initial value if a related enable condition is not fulfilled or ControlDTCSetting of the related event is disabled. The qualification of the event will be restarted with the next valid event report.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticDebouncingAlgorithm::DiagnosticDebounceBehaviorEnum. reset		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceTimeBasedClass	
BSW Parameter		BSW Type
DemDebounceTimeFailedThreshold		ECUC-FLOAT-PARAM-DEF
BSW Description		
Defines the time out duration for "Event Failed" qualification. The AUTOSAR configuration standard is to use SI units, so this parameter is defined as float value in seconds. Dem configuration tools must convert this float value to the appropriate value format for the use in the software implementation of Dem.		
Template Description		
This value represents the event-specific delay indicating the "failed" status.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagEventDebounceTimeBased. timeFailedThreshold		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00716]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceTimeBasedClass	
BSW Parameter		BSW Type
DemDebounceTimePassedThreshold		ECUC-FLOAT-PARAM-DEF
BSW Description		





Defines the time out duration for "Event Passed" qualification. The AUTOSAR configuration standard is to use SI units, so this parameter is defined as float value in seconds. Dem configuration tools must convert this float value to the appropriate value format for the use in the software implementation of Dem.	
Template Description	
This value represents the event-specific delay indicating the "passed" status.	
M2 Parameter	
CommonStructure::ServiceNeeds::DiagEventDebounceTimeBased.timePassedThreshold	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00717]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDebounceTimeBasedClass	
BSW Parameter		BSW Type
DemTimeBasedFdcThresholdStorageValue		ECUC-FLOAT-PARAM-DEF
BSW Description		
Threshold to allocate an event memory entry and to capture the Freeze Frame.		
Template Description		
Threshold to allocate an event memory entry and to capture the Freeze Frame.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagEventDebounceTimeBased.timeBasedFdcThresholdStorageValue		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00915]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDtrs/DemDtr	
BSW Parameter		BSW Type
DemDtrEventRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the DemEventParameter this DTR is related to. If the related event is not configured, the Dem cannot ensure consistency between the DTR and the event.		
Template Description		
DiagnosticTestResult: This meta-class represents the ability to define diagnostic test results.		
DiagnosticEvent: This element is used to configure DiagnosticEvents.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTestResult::DiagnosticTestResult, DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00808]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDtrs/DemDtr	
BSW Parameter		BSW Type
DemDtrMid		ECUC-INTEGER-PARAM-DEF
BSW Description		
The OBDMID of the DTR.		
The values 0x00, 0x20, 0x40, 0x60, 0x80, 0xA0, 0xC0, 0xE0 are reserved.		
Template Description		
This represents the numerical measurement Id		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTestResult::DiagnosticMeasurementIdentifier.obdMid		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00809]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDtrs/DemDtr	
BSW Parameter		BSW Type
DemDtrTid		ECUC-INTEGER-PARAM-DEF
BSW Description		
The OBDTID of the DTR.		
Template Description		
This represents the numerical id associated with the diagnostic test identifier.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTestResult::DiagnosticTestIdentifier.id		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00810]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDtrs/DemDtr	
BSW Parameter		BSW Type
DemDtrUasId		ECUC-INTEGER-PARAM-DEF
BSW Description		
The UaSid the DTR data shall be scaled to, and reported together with the rescaled DTR data.		
Template Description		
This represents the unit and scaling Id of the diagnostic test result.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTestResult::DiagnosticTestIdentifier.uasId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00811]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDtrs/DemDtr	
BSW Parameter		BSW Type
DemDtrUpdateKind		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Update conditions applied by the Dem to reports of DTR values. Only supported if a related Event is configured		
Template Description		
This attribute controls the update behavior of the enclosing DiagnosticTestResult.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTestResult::DiagnosticTestResult.updateKind		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00812]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDtrs/DemDtr/DemDtrUpdateKind	
BSW Parameter		BSW Type
DEM_DTR_UPDATE_ALWAYS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Any DTR result reported by the monitor is used by the Dem.		
Template Description		
Any DTR result reported by the monitor is used by the Dem.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTestResult::DiagnosticTestResultUpdateEnum.always		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemDtrs/DemDtr/DemDtrUpdateKind	
BSW Parameter		BSW Type
DEM_DTR_UPDATE_STEADY		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The Dem accepts reported DTRs only when the configured debouncing mechanism is stable at the FAIL or PASS limit.		
Template Description		
The Dem accepts reported DTRs only when the configured debouncing mechanism is stable at the FAIL or PASS limit.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTestResult::DiagnosticTestResultUpdateEnum.steady		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter	
BSW Parameter		BSW Type
DemCallbackClearEventAllowed		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The presence of this container indicates that the Dem has access to a "ClearEventAllowed" callback. In case there is a DemCallbackClearEventAllowedFnc, this parameter defines the name of the function that the Dem will call. In case there is no DemCallbackClearEventAllowedFnc, the Dem will have an R-Port requiring the interface CallbackClearEventAllowed whose name is generated by using the unique callback-prefix followed by the event name.		
Template Description		
In case the clearing of a Diagnostic Event has to be allowed or prohibited through the SWC interface CallbackClearEventAllowed, the SWC has to indicate this by defining appropriate ServiceNeeds (i.e. DiagnosticEventNeeds).		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEventClearAllowedEnum.requiresCallbackExecution		
Mapping Rule		Mapping Type
Shall be taken from DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent::DiagnosticEventClearAllowedEnum.requiresCallbackExecution. If literal requiresCallbackExecution is set, the BSW container DemCallbackClearEventAllowed will be present. Dem will call the function named by configuration parameter DemCallbackClearEventAllowedFnc. If no such function name is provided, Dem will require an R-Port with the interface name using the unique callback-prefix followed by the event name.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00607]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemCallbackClearEventAllowed	
BSW Parameter		BSW Type
DemCallbackClearEventAllowedFnc		ECUC-FUNCTION-NAME-DEF
BSW Description		
Function name of prototype "ClearEventAllowed".		
Template Description		
This attribute defines whether the Dem has access to a "ClearEventAllowed" callback.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent.eventClearAllowed		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00609]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemCallbackClearEventAllowed	
BSW Parameter		BSW Type
DemClearEventAllowedBehavior		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the resulting UDS status byte for the related event, which must not be cleared according to the ClearEventAllowed callback.		
Template Description		





This attribute defines the resulting UDS status byte for the related event, which shall not be cleared according to the ClearEventAllowed callback	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent.clearEventAllowedBehavior	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00788]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemCallbackClearEventAllowed/DemClearEventAllowedBehavior	
BSW Parameter		BSW Type
DEM_NO_STATUS_BYTE_CHANGE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The UDS status byte keeps unchanged.		
Template Description		
The event status byte keeps unchanged.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticClearEventAllowedBehaviorEnum.noStatusByteChange		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemCallbackClearEventAllowed/DemClearEventAllowedBehavior	
BSW Parameter		BSW Type
DEM_ONLY_THIS_CYCLE_AND_READINESS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The <...>ThisOperationCycle and readiness bits of the UDS status byte are reset.		
Template Description		
The OperationCycle and readiness bits of the event status byte are reset.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticClearEventAllowedBehaviorEnum.onlyThisCycleAndReadiness		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter	
BSW Parameter		BSW Type





DemDebounceAlgorithmClass	ECUC-CHOICE-CONTAINER-DEF
BSW Description	
Debounce algorithm class: counter based, time based, or monitor internal.	
Template Description	
This class represents the ability to specify the pre-debounce algorithm which is selected and/or required by the particular monitor. This class inherits from Identifiable in order to allow further documentation of the expected or implemented debouncing and to use the category for the identification of the expected / implemented debouncing.	
M2 Parameter	
CommonStructure::ServiceNeeds::DiagEventDebounceAlgorithm	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00604]

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemEventParameter/DemDebounceAlgorithmClass
BSW Parameter	BSW Type
DemDebounceCounterBased	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
This container contains the configuration (parameters) for counter based debouncing.	
Template Description	
This meta-class represents the ability to indicate that the counter-based debounce algorithm shall be used by the DEM for this diagnostic monitor. This is related to set the ECUC choice container DemDebounceAlgorithmClass to DemDebounceCounterBased.	
M2 Parameter	
CommonStructure::ServiceNeeds::DiagEventDebounceCounterBased	
Mapping Rule	Mapping Type
There are two ways to derive the existence of DemDebounceCounterBased: 1. DiagEventNeeds,diagEventDebounceAlgoritm exists and is modeled as a DiagEventDebounce CounterBased. 2. DiagnosticContributionSet.commonProperties.debounceAlgorithmProps.debounceAlgorithm exists and is modeled as a DiagEventDebounceCounterBased If both alternatives exist at the same time then the definition ot DiagnosticContributionSet.common Properties.debounceAlgorithmProps.debounceAlgorithm shall be handled with priority.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00711]

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemEventParameter/DemDebounceAlgorithmClass
BSW Parameter	BSW Type
DemDebounceMonitorInternal	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
This container contains the configuration (parameters) for monitor internal debouncing.	
Template Description	





This meta-class represents the ability to indicate that no Dem pre-debounce algorithm shall be used for this diagnostic monitor. The SWC might implement an internal debouncing algorithm and report qualified (debounced) results to the Dem/DM.	
M2 Parameter	
CommonStructure::ServiceNeeds::DiagnosticEventDebounceMonitorInternal	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00712]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemDebounceAlgorithmClass	
BSW Parameter		BSW Type
DemDebounceTimeBased		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) for time based debouncing.		
Template Description		
This meta-class represents the ability to indicate that the time-based pre-debounce algorithm shall be used by the Dem for this diagnostic monitor.		
This is related to set the EcuC choice container DemDebounceAlgorithmClass to DemDebounceTimeBase.		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagnosticEventDebounceTimeBased		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00713]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter	
BSW Parameter		BSW Type
DemEnableConditionGroupRef		ECUC-REFERENCE-DEF
BSW Description		
References an enable condition group.		
Template Description		
Defines which EnableConditionGroup is applicable for a DiagnosticEvent.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::DiagnosticEventToEnableConditionGroupMapping		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00746]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter	
BSW Parameter		BSW Type
DemEventAssociatedIdentification		ECUC-INTEGER-PARAM-DEF
BSW Description		
Event associated identifier that allows to identify an event. This value can be reported as internal data element in snapshot records or extended data records.		
Template Description		
This attribute represents the identification number that is associated with the enclosing DiagnosticEvent and allows to identify it when placed into a snapshot record or extended data record storage.		
This value can be reported as internal data element in snapshot records or extended data records.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent.associatedEventIdentification		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00969]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter	
BSW Parameter		BSW Type
DemEventConfirmationThreshold		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the operation cycle threshold of the DTC confirmation status according "Confirmation Threshold" of ISO 14229-1.		
Template Description		
This attribute defines the number of operation cycles with a failed result before a confirmed DTC is set to 1. The semantic of this attribute is a by "1" increased value compared to the confirmation threshold of the "trip counter" mentioned in ISO 14229-1 in figure D.4. A value of "1" defines the immediate confirmation of the DTC along with the first reported failed. This is also sometimes called "zero trip DTC". A value of "2" defines a DTC confirmation in the operation cycle after the first occurred failed. A value of "2" is typically used in the US for OBD DTC confirmation.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent.confirmationThreshold		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00924]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter	
BSW Parameter		BSW Type
DemEventKind		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter is used to distinguish between SW-C and BSW events.		
Template Description		
This attribute is used to distinguish between SWC and BSW events.		
M2 Parameter		





DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent. eventKind	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00660]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemEventKind	
BSW Parameter		BSW Type
DEM_EVENT_KIND_BSW		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The event is assigned to a BSW module		
Template Description		
The event is assigned to a BSW module.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEventKindEnum. bsw		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemEventKind	
BSW Parameter		BSW Type
DEM_EVENT_KIND_SWC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The event is assigned to a SW-C		
Template Description		
The event is assigned to a SWC.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEventKindEnum. swc		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter	
BSW Parameter		BSW Type
DemEventRecoverableInSameOperationCycle		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If parameter is configured to FALSE, reporting of PASSED will be ignored if the event is already "testfailed this operation cycle".		





Template Description	
If the attribute is set to true then reporting PASSED will reset the indication of a failed test in the current operation cycle. If the attribute is set to false then reporting PASSED will be ignored and not lead to a reset of the indication of a failed test.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent.recoverableInSameOperationCycle	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00916]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter	
BSW Parameter		BSW Type
DemFFPrestorageInNvm		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If the event uses a pre-stored freeze-frame this attribute indicates if the event requires the pre-stored data to be stored in non-volatile memory. TRUE = store the pre-stored data in non-volatile memory, FALSE = pre-stored data is not stored in non-volatile memory.		
Template Description		
DiagnosticEventNeeds.prestoredFreezeFrameStoredInNvm: If the Event uses a prestored freeze-frame (using the operations PrestoreFreezeFrame and ClearPrestoredFreezeFrame of the service interface DiagnosticMonitor) this attribute indicates if the Event requires the data to be stored in non-volatile memory. TRUE = Dem shall store the prestored data in non-volatile memory, FALSE = Data can be lost at shutdown (not stored in Nvm). DiagnosticEvent.prestoredFreezeFrameStoredInNvm: If the Event uses a prestored freeze-frame (using the operations PrestoreFreezeFrame and ClearPrestoredFreezeFrame of the service interface DiagnosticMonitor) this attribute indicates if the Event requires the data to be stored in non-volatile memory. TRUE = Dem shall store the prestored data in non-volatile memory, FALSE = Data can be lost at shutdown (not stored in Nvm)		
M2 Parameter		
CommonStructure::ServiceNeeds::DiagnosticEventNeeds.prestoredFreezeFrameStoredInNvm, Diagnostic Extract::Dem::DiagnosticEvent::DiagnosticEvent.prestoredFreezeFrameStoredInNvm		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00948]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter	
BSW Parameter		BSW Type
DemFFPrestorageSupported		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If this parameter is set to true, then the Prestorage of FreezeFrames is supported by the assigned event. This parameter is useful to calculate the buffer size.		
Template Description		





This attribute describes whether the Prestorage of FreezeFrames is supported by the assigned event or not. true: Prestorage of FreezeFrames is supported false: Prestorage of FreezeFrames is not supported	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent.prestorageFreezeFrame	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00671]

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute
BSW Parameter	BSW Type
DemIndicatorBehaviour	ECUC-ENUMERATION-PARAM-DEF
BSW Description	
Behaviour of the linked indicator	
Template Description	
Behavior of the linked indicator.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticConnectedIndicator.behavior	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00682]

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute/DemIndicatorBehaviour
BSW Parameter	BSW Type
DEM_INDICATOR_BLINKING	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
The indicator blinks when the event has status FAILED Not relevant with J1939.	
Template Description	
The indicator blinks when the event has status FAILED.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticConnectedIndicatorBehaviorEnum.blinkMode	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute/DemIndicatorBehaviour
BSW Parameter	BSW Type





DEM_INDICATOR_BLINK_CONT	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
The indicator is active and blinks when the event has status FAILED Not relevant with J1939.	
Template Description	
The indicator is active and blinks when the event has status FAILED.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticConnectedIndicatorBehaviorEnum.blinkOrContinuousOnMode	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute/DemIndicatorBehaviour	
BSW Parameter		BSW Type
DEM_INDICATOR_CONTINUOUS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
The indicator is active when the even has status FAILED		
Template Description		
The indicator is active when the event has status FAILED.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticConnectedIndicatorBehaviorEnum.continuousOnMode		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute/DemIndicatorBehaviour	
BSW Parameter		BSW Type
DEM_INDICATOR_FAST_FLASH		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Flash Indicator Lamp should be set to 'Fast Flash'		
Template Description		
Flash Indicator Lamp should be set to "Fast Flash".		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticConnectedIndicatorBehaviorEnum.fastFlashingMode		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute/DemIndicatorBehaviour	
BSW Parameter		BSW Type
DEM_INDICATOR_SLOW_FLASH		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Flash Indicator Lamp should be set to 'Slow Flash'		
Template Description		
Flash Indicator Lamp should be set to "Slow Flash".		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticConnectedIndicatorBehaviorEnum.slowFlashingMode		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute	
BSW Parameter		BSW Type
DemIndicatorFailureCycleCounterThreshold		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the number of failure cycles for the WarningIndicatorOnCriteria.		
Template Description		
This attribute defines the number of failure cycles for the WarningIndicatorOnCriteria. Please note that this attribute is not relevant for the Adaptive Platform.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticConnectedIndicator.indicatorFailureCycleCounterThreshold		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00750]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter/DemIndicatorAttribute	
BSW Parameter		BSW Type
DemIndicatorHealingCycleCounterThreshold		ECUC-INTEGER-PARAM-DEF
BSW Description		
Defines the number of healing cycles for the WarningIndicatorOffCriteria.		
Template Description		
This attribute defines the number of healing cycles for the WarningIndicatorOffCriteria		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticConnectedIndicator.healingCycleCounterThreshold		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00748]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemEventParameter	
BSW Parameter		BSW Type
DemStorageConditionGroupRef		ECUC-REFERENCE-DEF
BSW Description		
References a storage condition group.		
Template Description		
Defines which StorageConditionGroup is applicable for a DiagnosticEvent.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::DiagnosticEventToStorageConditionGroupMapping		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00769]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet	
BSW Parameter		BSW Type
DemMultiEventTriggering		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
Configures an event that will trigger other events whenever the event is reported.		
Template Description		
This meta-class provides the ability to map a master diagnostic event with a slave diagnostic event such that reporting of the master event with a given value also reports the slave event with the same value		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::DiagnosticMasterToSlaveEventMapping		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00944]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemMultiEventTriggering	
BSW Parameter		BSW Type
DemMultiEventTriggeringMasterEventRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the event that will trigger other events upon reception of this event.		
Template Description		
This represents the master diagnostic event.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::DiagnosticMasterToSlaveEventMapping.masterEvent		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00945]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemMultiEventTriggering	
BSW Parameter		BSW Type
DemMultiEventTriggeringSlaveEventRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the event that is triggered upon triggering the master event.		
Template Description		
This represents the slave diagnostic event.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::DiagnosticMasterToSlaveEventMapping.slaveEvent		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00946]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemObdDTC	
BSW Parameter		BSW Type
DemConsiderPtoStatus		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This parameter is TRUE, when the event is affected by the Dem PTO handling.		
Template Description		
This attribute describes the affection of the event by the Dem PTO handling. true: the event is affected by the Dem PTO handling. false: the event is not affected by the Dem PTO handling.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeObd.considerPtoStatus		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00602]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemObdDTC	
BSW Parameter		BSW Type
DemDtcValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Unique Diagnostic Trouble Code value for OBD		
Template Description		
Unique Diagnostic Trouble Code value for OBD.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeObd.obdDTCValue		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00885]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemObdDTC	
BSW Parameter		BSW Type
DemDtcValue3Byte		ECUC-INTEGER-PARAM-DEF
BSW Description		
3 Byte OBD DTC value that is used for the UDS Diagnostic Trouble Code (DTC) if UDS and OBD DTC handling is separated. The value is defining a DTC based on SAE J2012.		
Template Description		
3 Byte OBD DTC value based on the definition from SAE J2012. The existence of this attribute is only required if separated UDS and OBD DTC values are used for SAE J1979-2. If this attribute does not exist, then UDS DTC values are used with J1979-2.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeUds.obdDtcValue3Byte		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00988]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemObdDTC	
BSW Parameter		BSW Type
DemEventOBDReadinessGroup		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter specifies the Event OBD Readiness group as defined by SAE J1979-DA for PID \$01 and PID \$41 computation. This parameter is only applicable for emission-related ECUs.		
Template Description		
DiagnosticTroubleCodeObd.eventReadinessGroup: This aggregation allows for the variant definition of the attribute eventObdReadinessGroup. EventObdReadinessGroup.eventObdReadinessGroup: This attribute specifies the Event OBD Readiness group for PID \$01 and PID \$41 computation. This attribute is only applicable for emission-related ECUs.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeObd.eventReadinessGroup, Diagnostic Extract::Dem::DiagnosticTroubleCode::EventObdReadinessGroup.eventObdReadinessGroup		
Mapping Rule		Mapping Type
Configuration is only possible if DemOBDSupport is set to DEM_OBD_MASTER_ECU (see up_ Dem_00131)		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00755]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemObdDTC	
BSW Parameter		BSW Type





DemJ1939DTCValue	ECUC-INTEGER-PARAM-DEF
BSW Description	
Unique Diagnostic Trouble Code value for J1939 (consisting of SPN and FMI).	
Template Description	
DiagnosticTroubleCodeJ1939.spn: This represents the related SPN. DiagnosticTroubleCodeJ1939.fmi: This attribute represents the behavior of the Failure Mode Indicator.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeJ1939. spn , DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeJ1939. fmi	
Mapping Rule	Mapping Type
The value is created out of a combination of the two attribute fmi and spn. The details are explained in the J1939-73 document	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00892]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemPidClass	
BSW Parameter		BSW Type
DemPidDataElement		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the different data elements contained in the specific PID.		
Template Description		
This represents the data carried by the DiagnosticParameterIdentifier.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier. dataElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00896]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemPidClass/DemPidDataElement	
BSW Parameter		BSW Type
DemPidDataElementClassRef		ECUC-REFERENCE-DEF
BSW Description		
This reference contains the link to a data element class.		
Template Description		
This meta-class represents the ability to describe a concrete piece of data to be taken into account for diagnostic purposes.		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticDataElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00733]

BSW Module	BSW Context	
Dem	Dem/DemConfigSet/DemPidClass	
BSW Parameter		BSW Type
DemPidIdentifier		ECUC-INTEGER-PARAM-DEF
BSW Description		
identifier of the PID		
Template Description		
This is the numerical identifier used to identify the DiagnosticParameterIdentifier in the scope of diagnostic workflow (see SAE J1979-DA).		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticParameterIdentifier.id		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00705]

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemAgingRequiresTestedCycle		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Defines if the aging cycle counter is processed every aging cycles or if only tested aging cycle are considered. true: only tested aging cycle are considered for aging cycle counter false: aging cycle counter is processed every aging cycle		
Template Description		
Defines whether the aging cycle counter is processed every aging cycles or else only tested aging cycle are considered. If the attribute is set to TRUE: only tested aging cycle are considered for aging cycle counter. If the attribute is set to FALSE: aging cycle counter is processed every aging cycle. On the classic platform, the value of this attribute has to be identical for each DiagnosticMemoryDestination.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination.agingRequiresTestedCycle		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00877]

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemClearDTCLimitation		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the supported Dem_<...>ClearDTC API scope.		
Template Description		





Defines the scope of the DEM_ClearDTC Api. On the classic platform, the value of this attribute has to be identical for each DiagnosticMemoryDestination.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination.clearDtcLimitation	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00790]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemClearDTCLimitation	
BSW Parameter		BSW Type
DEM_ALL_SUPPORTED_DTCS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Dem_<...>ClearDTC accepts all supported DTC values, as well as all DTC values which are configured in DemGroupDTCS and DEM_DTC_GROUP_ALL_DTCS.		
Template Description		
DEM_ClearDtc API accepts all supported DTC values.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticClearDtcLimitationEnum.allSupportedDtcs		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemClearDTCLimitation	
BSW Parameter		BSW Type
DEM_ONLY_CLEAR_ALL_DTCS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Dem_<...>ClearDTC accepts ClearAllDTCS only.		
Template Description		
DEM_ClearDtc API accepts ClearAllDTCS only.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticClearDtcLimitationEnum.clearAllDtcs		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemDataElementClass/DemExternalCSDataElementClass/DemDataElementDataType	
BSW Parameter		BSW Type





Float	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is float.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dem	Dem/DemGeneral/DemDataElementClass/DemExternalCSDDataElementClass/DemDataElement DataType
BSW Parameter	BSW Type
Float_N	ECUC-ENUMERATION-LITERAL-DEF
BSW Description	
Type of the data is float array.	
Template Description	
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.	
M2 Parameter	
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength	
Mapping Rule	Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemDataElementClass/DemExternalSRDataElementClass/DemDataElementDataType	
BSW Parameter		BSW Type
FLOAT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemDataElementClass/DemExternalSRDataElementClass/DemDataElementDataType	
BSW Parameter		BSW Type
FLOAT_N		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Type of the data is float array.		
Template Description		
BaseTypeDirectDefinition.baseTypeEncoding: This specifies, how an object of the current BaseType is encoded, e.g. in an ECU within a message sequence. BaseTypeDirectDefinition.baseTypeSize: Describes the length of the data type specified in the container in bits. DiagnosticValueNeeds.fixedLength: This attribute is applicable only if the DiagnosticValueNeeds is aggregated within a BswModuleDependency. This attribute controls whether the data length of the data is fixed.		
M2 Parameter		
AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeEncoding , AsamHdo::BaseTypes::BaseTypeDirectDefinition. baseTypeSize , CommonStructure::ServiceNeeds::DiagnosticValueNeeds. fixedLength		
Mapping Rule		Mapping Type
baseTypeEncoding = NONE, WINDOWS-1252, UTF-8, BCD-P, BCD-UP baseTypeSize = 8 max NumberOfElements shall not exist arraySizeSemantics shall not exist Derivation from DiagnosticValueNeeds.fixedLength=1 possible.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemDataElementClass/DemInternalDataElementClass	
BSW Parameter		BSW Type
DemInternalDataElement		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the Dem-internal data value, which is mapped to the data element.		
Template Description		
This represents the DiagnosticDataElement for which the access is further qualified by the DiagnosticDemProvidedData Mapping.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticDemProvidedDataMapping. dataElement		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00616]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemDataElementClass/DemInternalDataElementClass/DemInternalDataElement	
BSW Parameter		BSW Type
DEM_EVENT_ASSOCIATED_IDENTIFICATION		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Represents the static value associated to an event by DemEventAssociatedIdentification.		
Template Description		
This attribute represents the identification number that is associated with the enclosing DiagnosticEvent and allows to identify it when placed into a snapshot record or extended data record storage.		
This value can be reported as internal data element in snapshot records or extended data records.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticEvent. associatedEventIdentification		
Mapping Rule		Mapping Type
If attribute DiagnosticEvent.associatedEventIdentification exists then the corresponding Dem InternalDataElement shall be set to DEM_EVENT_ASSOCIATED_IDENTIFICATION.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemDidClass		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) for a data Id class. It is assembled out of one or several data elements.		
Template Description		
This is the numerical identifier used to identify the DiagnosticAbstractDataIdentifier in the scope of diagnostic workflow		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractDataIdentifier. id		
Mapping Rule		Mapping Type





If the subclass of DiagnosticAbstractDataIdentifier is referenced as DiagnosticTroubleCode Props.freezeFrameContent.dataIdentifier	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00706]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemDidClass	
BSW Parameter		BSW Type
DemDidIdentifier		ECUC-INTEGER-PARAM-DEF
BSW Description		
Identifier of the Data ID.		
Template Description		
This is the numerical identifier used to identify the DiagnosticAbstractDataIdentifier in the scope of diagnostic workflow		
M2 Parameter		
DiagnosticExtract::CommonDiagnostics::DiagnosticAbstractDataIdentifier.id		
Mapping Rule		Mapping Type
If the DiagnosticDataIdentifier is referenced as DiagnosticTroubleCodeProps.freezeFrameContent.dataIdentifier		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00650]

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemEnableCondition		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) for enable conditions.		
Template Description		
Specification of an enable condition.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticCondition::DiagnosticEnableCondition		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00653]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEnableCondition	
BSW Parameter		BSW Type
DemEnableConditionStatus		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Defines the initial status for enable or disable of acceptance of event reports of a diagnostic event. The value is the initialization after power up (before this condition is reported the first time). true: acceptance of a diagnostic event enabled false: acceptance of a diagnostic event disabled		
Template Description		





Defines the initial status for enable or disable of acceptance/storage of event reports of a diagnostic event. The value is the initialization after power up (before this condition is reported the first time). true: acceptance/storage of a diagnostic event enabled false: acceptance/storage of a diagnostic event disabled	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticCondition::DiagnosticCondition. initValue	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00656]

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemEnableConditionGroup		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) for enable condition groups.		
Template Description		
Enable condition group which includes one or several enable conditions.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticConditionGroup::DiagnosticEnableConditionGroup		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00745]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEnableConditionGroup	
BSW Parameter		BSW Type
DemEnableConditionRef		ECUC-REFERENCE-DEF
BSW Description		
References an enable condition.		
Template Description		
Reference to enableConditions that are part of the EnableConditionGroup.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticConditionGroup::DiagnosticEnableConditionGroup. enableCondition		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00655]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet	
BSW Parameter		BSW Type
DemIndicator		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) for Indicators.		
Template Description		
Definition of an indicator.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticIndicator::DiagnosticIndicator		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00680]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet	
BSW Parameter		BSW Type
DemMILIndicatorRef		ECUC-REFERENCE-DEF
BSW Description		
This parameter defines the indicator representing the MIL.		
This parameter is mandatory for ECUs supporting OBD (refer to DemOBDSupport).		
Template Description		
Defines the type of the indicator.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticIndicator::DiagnosticIndicator.type		
Mapping Rule		Mapping Type
DiagnosticIndicator.type == DiagnosticIndicatorTypeEnum.malfunction		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00723]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet	
BSW Parameter		BSW Type
DemPrimaryMemory		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the primary event memory specific parameters of the Dem module.		
Template Description		
This represents a primary memory for a diagnostic event.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestinationPrimary		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00901]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory	
BSW Parameter		BSW Type
DemDtcStatusAvailabilityMask		ECUC-INTEGER-PARAM-DEF
BSW Description		
Mask for the supported DTC status bits by the Dem. This mask is used in the positive response of UDS service 0x19.		
Template Description		
Mask for the supported DTC status bits by the Dem.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination.dtcStatusAvailabilityMask		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00978]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory	
BSW Parameter		BSW Type
DemEventDisplacementStrategy		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This configuration switch defines, whether support for event displacement is enabled or not, and which displacement strategy is followed.		
Template Description		
This attribute defines, whether support for event displacement is enabled or not, and which displacement strategy is followed.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination.eventDisplacementStrategy		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00980]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory/DemEventDisplacementStrategy	
BSW Parameter		BSW Type
DEM_DISPLACEMENT_FULL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Event memory entry displacement is enabled, by consideration of priority active/passive status, and occurrence.		
Template Description		
Event memory entry displacement is enabled, by consideration of priority active/passive status, and occurrence.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticEventDisplacementStrategyEnum.full		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory/DemEventDisplacementStrategy	
BSW Parameter		BSW Type
DEM_DISPLACEMENT_NONE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Event memory entry displacement is disabled.		
Template Description		
Event memory entry displacement is disabled.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticEventDisplacementStrategyEnum. none		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory/DemEventDisplacementStrategy	
BSW Parameter		BSW Type
DEM_DISPLACEMENT_PRIO_OCC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Event memory entry displacement is enabled, by consideration of priority and occurrence (but without active/passive status).		
Template Description		
Event memory entry displacement is enabled, by consideration of priority and occurrence (but without active/passive status).		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticEventDisplacementStrategyEnum. prioOcc		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory	
BSW Parameter		BSW Type
DemEventMemoryEntryStorageTrigger		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Configures the primary trigger to allocate an event memory entry.		
Template Description		
Describes the trigger to allocate an event memory entry.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination. memoryEntryStorageTrigger		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00982]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory/DemEventMemoryEntryStorageTrigger	
BSW Parameter		BSW Type
DEM_TRIGGER_ON_CONFIRMED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Event Memory entries are triggered if the UDS status bit 3 (confirmedDTC) changes from 0 to 1.		
Template Description		
Status information of UDS DTC status bit 3		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryEntryStorageTriggerEnum.confirmed		
Mapping Rule		Mapping Type
DemPrimaryMemory.DemEventMemoryEntryStorageTrigger.DEM_TRIGGER_ON_CONFIRMED maps to DiagnosticMemoryDestinationPrimary.memoryEntryStorageTrigger if the attribute is set to DiagnosticMemoryEntryStorageTriggerEnum.confirmed		full
DemUserDefinedMemory.DemEventMemoryEntryStorageTrigger.DEM_TRIGGER_ON_CONFIRMED maps to DiagnosticMemoryDestinationUserDefined.memoryEntryStorageTrigger if the attribute is set to DiagnosticMemoryEntryStorageTriggerEnum.confirmed		
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory/DemEventMemoryEntryStorageTrigger	
BSW Parameter		BSW Type
DEM_TRIGGER_ON_FDC_THRESHOLD		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Event Memory entries are triggered when the FDC threshold is reached.		
Template Description		
Threshold to allocate an event memory entry and to capture the Freeze Frame.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryEntryStorageTriggerEnum.fdcThreshold		
Mapping Rule		Mapping Type
1:1 mapping rules: DemPrimaryMemory.DemEventMemoryEntryStorageTrigger.DEM_TRIGGER_ON_FDC_THRESHOLD maps to DiagnosticMemoryDestinationPrimary.memoryEntryStorageTrigger if the attribute is set to DiagnosticMemoryEntryStorageTriggerEnum.fdcThreshold DemUserDefinedMemory.DemEventMemoryEntryStorageTrigger.DEM_TRIGGER_ON_FDC_THRESHOLD maps to DiagnosticMemoryDestinationUserDefined.memoryEntryStorageTrigger if the attribute is set to DiagnosticMemoryEntryStorageTriggerEnum.fdcThreshold		full
Mapping Status		
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory/DemEventMemoryEntryStorageTrigger	
BSW Parameter		BSW Type
DEM_TRIGGER_ON_TEST_FAILED		ECUC-ENUMERATION-LITERAL-DEF





BSW Description	
Event Memory entries are triggered if the UDS status bit 0 (testFailed) changes from 0 to 1.	
Template Description	
Status information of UDS DTC status bit 0.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryEntryStorageTriggerEnum.testFailed	
Mapping Rule	Mapping Type
DemPrimaryMemory.DemEventMemoryEntryStorageTrigger.DEM_TRIGGER_ON_TEST_FAILED maps to DiagnosticMemoryDestinationPrimary.memoryEntryStorageTrigger if the attribute is set to DiagnosticMemoryEntryStorageTriggerEnum.testFailed DemUserDefinedMemory.DemEventMemoryEntryStorageTrigger.DEM_TRIGGER_ON_TEST_FAILED maps to DiagnosticMemoryDestinationUserDefined.memoryEntryStorageTrigger if the attribute is set to DiagnosticMemoryEntryStorageTriggerEnum.testFailed	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory	
BSW Parameter		BSW Type
DemMaxNumberEventEntryPrimary		ECUC-INTEGGER-PARAM-DEF
BSW Description		
Maximum number of events which can be stored in the primary memory		
Template Description		
This attribute fixes the maximum number of event entries in the fault memory.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination.maxNumberOfEventEntries		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00690]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory	
BSW Parameter		BSW Type
DemOccurrenceCounterProcessing		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This configuration switch defines the consideration of the fault confirmation process for the occurrence counter. For OBD and mixed systems (OBD/non OBD, refer to DemOBDSupport) configuration switch shall always set to DEM_PROCESS_OCCCTR_TF.		
Template Description		
This attribute defines the consideration of the fault confirmation process for the occurrence counter.		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.occurrenceCounterProcessing		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00984]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory/DemOccurrenceCounterProcessing	
BSW Parameter		BSW Type
DEM_PROCESS_OCCCTR_CDTC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
the occurrence counter is triggered by the TestFailed bit if the fault confirmation was successful (ConfirmedDTC bit is set)		
Template Description		
The occurrence counter is incremented when TestFailed bit transitions from 0 to 1 if the fault confirmation was successful (ConfirmedDTC bit is already set).		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticOccurrenceCounterProcessingEnum.confirmedDtcBit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory/DemOccurrenceCounterProcessing	
BSW Parameter		BSW Type
DEM_PROCESS_OCCCTR_TF		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
the occurrence counter is only triggered by the TestFailed bit (and the fault confirmation is not considered) This parameter is mandatory in case of J1939.		
Template Description		
The occurrence counter is incremented when TestFailed bit transitions from 0 to 1 (and the fault confirmation is not considered).		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticOccurrenceCounterProcessingEnum.testFailedBit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory	
BSW Parameter		BSW Type
DemTypeOfFreezeFrameRecordNumeration		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the type of assigning freeze frame record numbers for event-specific freeze frame records.		
Template Description		
This attribute defines the type of assigning freeze frame record numbers for event-specific freeze frame records.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination.typeOfFreezeFrameRecordNumeration		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00986]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory/DemTypeOfFreezeFrameRecord Numeration	
BSW Parameter		BSW Type
DEM_FF_RECNUM_CALCULATED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
freeze frame records will be numbered consecutive starting by 1 in their chronological order		
Template Description		
Freeze frame records will be numbered consecutive starting by 1 in their chronological order.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticTypeOfFreezeFrameRecordNumerationEnum. calculated		
Mapping Rule		Mapping Type
If DiagnosticMemoryDestination.typeOfFreezeFrameRecordNumeration is set to DiagnosticTypeOfFreezeFrameRecordNumerationEnum.calculated		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemPrimaryMemory/DemTypeOfFreezeFrameRecord Numeration	
BSW Parameter		BSW Type
DEM_FF_RECNUM_CONFIGURED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
freeze frame records will be numbered based on the given configuration in their chronological order		
Template Description		
Freeze frame records will be numbered based on the given configuration in their chronological order.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticTypeOfFreezeFrameRecordNumerationEnum. configured		
Mapping Rule		Mapping Type
If DiagnosticMemoryDestination.typeOfFreezeFrameRecordNumeration is set to DiagnosticTypeOfFreezeFrameRecordNumerationEnum.configured.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet	
BSW Parameter		BSW Type
DemTypeOfDTCSupported		ECUC-ENUMERATION-PARAM-DEF





BSW Description	
This parameter defines the format returned by Dem_GetTranslationType and does not relate to/influence the supported Dem functionality.	
Template Description	
This attribute defines the format returned by Dem_DcmGetTranslationType and does not relate to/influence the supported Dem functionality.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestinationPrimary.typeOfDtcSupported	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00720]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemTypeOfDTCSupported	
BSW Parameter		BSW Type
DEM_DTC_TRANSLATION_ISO1992_4		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
ISO1992-4 DTC format		
Template Description		
ISO1992-4 DTC format		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTypeOfDtcSupportedEnum.iso1992_4		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemTypeOfDTCSupported	
BSW Parameter		BSW Type
DEM_DTC_TRANSLATION_ISO14229_1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
ISO14229-1 DTC format (3 byte format)		
Template Description		
ISO14229-1 DTC format (3 byte format)		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTypeOfDtcSupportedEnum.iso14229_1		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemTypeOfDTCSupported	
BSW Parameter		BSW Type
DEM_DTC_TRANSLATION_ISO15031_6		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
ISO15031-6 DTC format = SAE_J2012-DA_DTCFormat_00 (2 byte format)		
Template Description		
ISO15031-6 DTC format (2 byte format)		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTypeOfDtcSupportedEnum. iso15031_6		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemTypeOfDTCSupported	
BSW Parameter		BSW Type
DEM_DTC_TRANSLATION_SAEJ1939_73		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
SAEJ1939-73 DTC format		
Template Description		
SAEJ1939-73 DTC format		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTypeOfDtcSupportedEnum. saeJ1939_73		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemTypeOfDTCSupported	
BSW Parameter		BSW Type
DEM_DTC_TRANSLATION_SAE_J2012_DA_DTCFORMAT_04		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
SAE_J2012-DA_DTCFormat_00 (3 byte format)		
Template Description		
SAE_J2012-DA_DTCFormat_00 (3 byte format)		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTypeOfDtcSupportedEnum. saeJ2012_da		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet	
BSW Parameter		BSW Type
DemUserDefinedMemory		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the user defined event memory specific parameters of the Dem module.		
Template Description		
This represents a user-defined memory for a diagnostic event.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestinationUserDefined		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00910]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory	
BSW Parameter		BSW Type
DemDtcStatusAvailabilityMask		ECUC-INTEGGER-PARAM-DEF
BSW Description		
Mask for the supported DTC status bits by the Dem. This mask is used in the positive response of UDS service 0x19.		
Template Description		
Mask for the supported DTC status bits by the Dem.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination.dtcStatusAvailabilityMask		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00978]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory	
BSW Parameter		BSW Type
DemEventDisplacementStrategy		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This configuration switch defines, whether support for event displacement is enabled or not, and which displacement strategy is followed.		
Template Description		
This attribute defines, whether support for event displacement is enabled or not, and which displacement strategy is followed.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination.eventDisplacementStrategy		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00980]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory/DemEventDisplacementStrategy	
BSW Parameter		BSW Type
DEM_DISPLACEMENT_FULL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Event memory entry displacement is enabled, by consideration of priority active/passive status, and occurrence.		
Template Description		
Event memory entry displacement is enabled, by consideration of priority active/passive status, and occurrence.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticEventDisplacementStrategyEnum.full		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory/DemEventDisplacementStrategy	
BSW Parameter		BSW Type
DEM_DISPLACEMENT_NONE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Event memory entry displacement is disabled.		
Template Description		
Event memory entry displacement is disabled.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticEventDisplacementStrategyEnum.none		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory/DemEventDisplacementStrategy	
BSW Parameter		BSW Type
DEM_DISPLACEMENT_PRIO_OCC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Event memory entry displacement is enabled, by consideration of priority and occurrence (but without active/passive status).		
Template Description		
Event memory entry displacement is enabled, by consideration of priority and occurrence (but without active/passive status).		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticEventDisplacementStrategyEnum.prioOcc		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory	
BSW Parameter		BSW Type
DemEventMemoryEntryStorageTrigger		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Configures the primary trigger to allocate an event memory entry.		
Template Description		
Describes the trigger to allocate an event memory entry.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination.memoryEntryStorageTrigger		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00982]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory/DemEventMemoryEntryStorageTrigger	
BSW Parameter		BSW Type
DEM_TRIGGER_ON_CONFIRMED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Event Memory entries are triggered if the UDS status bit 3 (confirmedDTC) changes from 0 to 1.		
Template Description		
Status information of UDS DTC status bit 3		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryEntryStorageTriggerEnum.confirmed		
Mapping Rule		Mapping Type
DemPrimaryMemory.DemEventMemoryEntryStorageTrigger.DEM_TRIGGER_ON_CONFIRMED maps to DiagnosticMemoryDestinationPrimary.memoryEntryStorageTrigger if the attribute is set to DiagnosticMemoryEntryStorageTriggerEnum.confirmed DemUserDefinedMemory.DemEventMemoryEntryStorageTrigger.DEM_TRIGGER_ON_CONFIRMED maps to DiagnosticMemoryDestinationUserDefined.memoryEntryStorageTrigger if the attribute is set to DiagnosticMemoryEntryStorageTriggerEnum.confirmed		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory/DemEventMemoryEntryStorageTrigger	
BSW Parameter		BSW Type
DEM_TRIGGER_ON_FDC_THRESHOLD		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Event Memory entries are triggered when the FDC threshold is reached.		
Template Description		
Threshold to allocate an event memory entry and to capture the Freeze Frame.		
M2 Parameter		





DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryEntryStorageTriggerEnum.fdcThreshold	
Mapping Rule	Mapping Type
1:1 mapping rules: DemPrimaryMemory.DemEventMemoryEntryStorageTrigger.DEM_TRIGGER_ON_FDC_THRESHOLD maps to DiagnosticMemoryDestinationPrimary.memoryEntryStorageTrigger if the attribute is set to DiagnosticMemoryEntryStorageTriggerEnum.fdcThreshold DemUserDefinedMemory.DemEventMemoryEntryStorageTrigger.DEM_TRIGGER_ON_FDC_THRESHOLD maps to DiagnosticMemoryDestinationUserDefined.memoryEntryStorageTrigger if the attribute is set to DiagnosticMemoryEntryStorageTriggerEnum.fdcThreshold	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory/DemEventMemoryEntryStorageTrigger	
BSW Parameter		BSW Type
DEM_TRIGGER_ON_TEST_FAILED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Event Memory entries are triggered if the UDS status bit 0 (testFailed) changes from 0 to 1.		
Template Description		
Status information of UDS DTC status bit 0.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryEntryStorageTriggerEnum.testFailed		
Mapping Rule		Mapping Type
DemPrimaryMemory.DemEventMemoryEntryStorageTrigger.DEM_TRIGGER_ON_TEST_FAILED maps to DiagnosticMemoryDestinationPrimary.memoryEntryStorageTrigger if the attribute is set to DiagnosticMemoryEntryStorageTriggerEnum.testFailed DemUserDefinedMemory.DemEventMemoryEntryStorageTrigger.DEM_TRIGGER_ON_TEST_FAILED maps to DiagnosticMemoryDestinationUserDefined.memoryEntryStorageTrigger if the attribute is set to DiagnosticMemoryEntryStorageTriggerEnum.testFailed		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory	
BSW Parameter		BSW Type
DemMaxNumberEventEntryUserDefined		ECUC-INTEGER-PARAM-DEF
BSW Description		
Maximum number of events which can be stored in the user defined memory.		
Template Description		
This attribute fixes the maximum number of event entries in the fault memory.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination.maxNumberOfEventEntries		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00691]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory	
BSW Parameter		BSW Type
DemOccurrenceCounterProcessing		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This configuration switch defines the consideration of the fault confirmation process for the occurrence counter. For OBD and mixed systems (OBD/non OBD, refer to DemOBDSupport) configuration switch shall always set to DEM_PROCESS_OCCCTR_TF.		
Template Description		
This attribute defines the consideration of the fault confirmation process for the occurrence counter.		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps. occurrenceCounterProcessing		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00984]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory/DemOccurrenceCounterProcessing	
BSW Parameter		BSW Type
DEM_PROCESS_OCCCTR_CDTC		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
the occurrence counter is triggered by the TestFailed bit if the fault confirmation was successful (ConfirmedDTC bit is set)		
Template Description		
The occurrence counter is incremented when TestFailed bit transitions from 0 to 1 if the fault confirmation was successful (ConfirmedDTC bit is already set).		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticOccurrenceCounterProcessingEnum. confirmedDtcBit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory/DemOccurrenceCounterProcessing	
BSW Parameter		BSW Type
DEM_PROCESS_OCCCTR_TF		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
the occurrence counter is only triggered by the TestFailed bit (and the fault confirmation is not considered) This parameter is mandatory in case of J1939.		
Template Description		
The occurrence counter is incremented when TestFailed bit transitions from 0 to 1 (and the fault confirmation is not considered).		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticOccurrenceCounterProcessingEnum. testFailedBit		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory	
BSW Parameter		BSW Type
DemTypeOfFreezeFrameRecordNumeration		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the type of assigning freeze frame record numbers for event-specific freeze frame records.		
Template Description		
This attribute defines the type of assigning freeze frame record numbers for event-specific freeze frame records.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination. typeOfFreezeFrameRecordNumeration		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00986]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory/DemTypeOfFreezeFrameRecordNumeration	
BSW Parameter		BSW Type
DEM_FF_RECNUM_CALCULATED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
freeze frame records will be numbered consecutive starting by 1 in their chronological order		
Template Description		
Freeze frame records will be numbered consecutive starting by 1 in their chronological order.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticTypeOfFreezeFrameRecordNumerationEnum. calculated		
Mapping Rule		Mapping Type
If DiagnosticMemoryDestination.typeOfFreezeFrameRecordNumeration is set to DiagnosticTypeOfFreezeFrameRecordNumerationEnum.calculated		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory/DemTypeOfFreezeFrameRecordNumeration	
BSW Parameter		BSW Type
DEM_FF_RECNUM_CONFIGURED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		





freeze frame records will be numbered based on the given configuration in their chronological order	
Template Description	
Freeze frame records will be numbered based on the given configuration in their chronological order.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticTypeOfFreezeFrameRecordNumerationEnum. configured	
Mapping Rule	Mapping Type
If DiagnosticMemoryDestination.typeOfFreezeFrameRecordNumeration is set to DiagnosticTypeOfFreezeFrameRecordNumerationEnum.configured.	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context
Dem	Dem/DemGeneral/DemEventMemorySet/DemUserDefinedMemory
BSW Parameter	BSW Type
DemUserDefinedMemoryIdentifier	ECUC-INTEGER-PARAM-DEF
BSW Description	
Identifier used by external tester to identify the User defined event memory.	
Template Description	
This represents the identifier of the user-defined memory.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestinationUserDefined. memoryId	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00903]

BSW Module	BSW Context
Dem	Dem/DemGeneral/DemExtendedDataRecordClass
BSW Parameter	BSW Type
DemExtendedDataRecordNumber	ECUC-INTEGER-PARAM-DEF
BSW Description	
This configuration parameter specifies a number for an extended data record. The value is unique within a fault memory. One or more extended data records can be assigned to one diagnostic event/DTC. For primary fault memory, the value 0x00 and the range from 0xF0 to 0xFF are either reserved or predefined. For user defined fault memories, only the value 0x00 is reserved and 0xFF is predefined.	
Template Description	
This attribute specifies an unique identifier for an extended data record.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticExtendedDataRecord::DiagnosticExtendedDataRecord. recordNumber	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00666]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemExtendedDataRecordClass	
BSW Parameter		BSW Type
DemExtendedDataRecordTrigger		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the trigger to store the ExtendedDataRecord.		
Template Description		
This attribute specifies the primary trigger to allocate an event memory entry.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticExtendedDataRecord::DiagnosticExtendedDataRecord.trigger		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00804]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemExtendedDataRecordClass/DemExtendedDataRecordTrigger	
BSW Parameter		BSW Type
DEM_TRIGGER_ON_CONFIRMED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
ExtendedDataRecord will be stored when the UDS status confirmed bit changes from 0 to 1.		
Template Description		
capture on "Confirmed"		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticFreezeFrame::DiagnosticRecordTriggerEnum.confirmed		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemExtendedDataRecordClass/DemExtendedDataRecordTrigger	
BSW Parameter		BSW Type
DEM_TRIGGER_ON_FDC_THRESHOLD		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
ExtendedDataRecord will be stored when the FDC reaches its threshold.		
Template Description		
capture on "FDC Threshold"		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticFreezeFrame::DiagnosticRecordTriggerEnum.fdcThreshold		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemExtendedDataRecordClass/DemExtendedDataRecordTrigger	
BSW Parameter		BSW Type
DEM_TRIGGER_ON_PASSED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
ExtendedDataRecord will be stored when the event is reported as passed (testFailed bit transition 1 --> 0).		
Template Description		
Capture on testFailed bit transition 1 --> 0.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticFreezeFrame::DiagnosticRecordTriggerEnum.testPassed		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemExtendedDataRecordClass/DemExtendedDataRecordTrigger	
BSW Parameter		BSW Type
DEM_TRIGGER_ON_PENDING		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
ExtendedDataRecord will be stored when the UDS status pending bit changes from 0 to 1.		
Template Description		
capture on "Pending"		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticFreezeFrame::DiagnosticRecordTriggerEnum.pending		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemExtendedDataRecordClass/DemExtendedDataRecordTrigger	
BSW Parameter		BSW Type
DEM_TRIGGER_ON_TEST_FAILED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
ExtendedDataRecord will be stored when the UDS status test failed bit changes from 0 to 1.		
Template Description		
capture on "Test Failed"		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticFreezeFrame::DiagnosticRecordTriggerEnum.testFailed		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemExtendedDataRecordClass	
BSW Parameter		BSW Type
DemExtendedDataRecordUpdate		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This extended data record is captured if the configured trigger condition in "DemExtendedDataRecordTrigger" is fulfilled.		
Template Description		
This attribute defines when an extended data record is captured. true: This extended data record is captured every time. false: This extended data record is only captured for new event memory entries.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticExtendedDataRecord::DiagnosticExtendedDataRecord.update		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00621]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemFreezeFrameRecordClass	
BSW Parameter		BSW Type
DemFreezeFrameRecordNumber		ECUC-INTEGER-PARAM-DEF
BSW Description		
This parameter defines the snapshot record number for a freeze frame. This record number is unique per freeze frame record number class. The number needs to be unique within a fault memory.		
Template Description		
This attribute defines a record number for a freeze frame record.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticFreezeFrame::DiagnosticFreezeFrame.recordNumber		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00777]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemFreezeFrameRecordClass	
BSW Parameter		BSW Type
DemFreezeFrameRecordTrigger		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Defines the trigger to store the FreezeFrameRecord.		
Template Description		
This attribute defines the primary trigger to allocate an event memory entry.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticFreezeFrame::DiagnosticFreezeFrame.trigger		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00803]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemFreezeFrameRecordClass/DemFreezeFrameRecordTrigger	
BSW Parameter		BSW Type
DEM_TRIGGER_ON_TEST_FAILED_THIS_OPERATION_CYCLE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Event Memory entries are triggered if the UDS status bit 1 (testFailedThisOperationCycle) changes from 0 to 1.		
Template Description		
Test Failed This Operation Cycle.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticFreezeFrame::DiagnosticRecordTriggerEnum.testFailedThisOperationCycle		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemFreezeFrameRecordClass	
BSW Parameter		BSW Type
DemFreezeFrameRecordUpdate		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines the case, when the freeze frame record is stored/updated.		
Template Description		
This attribute defines the approach when the freeze frame record is stored/updated. true: FreezeFrame record is captured every time. false: FreezeFrame record is only captured for new event memory entries.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticFreezeFrame::DiagnosticFreezeFrame.update		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00802]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemGeneralOBD	
BSW Parameter		BSW Type
DemSupportedObdUdsDtcSeparation		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
If this parameter is set to true, the OBD UDS DTC separation is enabled. If this parameter is set to false, the OBD UDS DTC separation is disabled.		
Template Description		





3 Byte OBD DTC value based on the definition from SAE J2012. The existence of this attribute is only required if separated UDS and OBD DTC values are used for SAE J1979-2. If this attribute does not exist, then UDS DTC values are used with J1979-2.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeUds.obdDtcValue3Byte	
Mapping Rule	Mapping Type
DemSupportedObdUdsDtcSeparation shall exist and set to true if, in the context of an enclosing DiagnosticContributionSet, at least one DiagnosticTroubleCodeObd exists where attribute obdDTCValue3Byte exists, independently of its value.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00989]

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemOBDSupport		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This configuration switch defines OBD support and kind of OBD ECU.		
Template Description		
This attribute is used to specify the role (if applicable) in which the DiagnosticEcuInstance supports OBD.		
M2 Parameter		
DiagnosticExtract::DiagnosticContribution::DiagnosticEcuInstanceProps.obdSupport		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00698]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemOBDSupport	
BSW Parameter		BSW Type
DEM_OBD_DEP_SEC_ECU		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Kind of OBD ECU: OBD Dependend / Secondary ECU		
Template Description		
This represents the role "secondary ECU".		
M2 Parameter		
DiagnosticExtract::DiagnosticContribution::DiagnosticObdSupportEnum.secondaryEcu		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemOBDSupport	
BSW Parameter		BSW Type
DEM_OBD_MASTER_ECU		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Kind of OBD ECU: Master ECU		
Template Description		
This represent the role "master ECU".		
M2 Parameter		
DiagnosticExtract::DiagnosticContribution::DiagnosticObdSupportEnum. masterEcu		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemOBDSupport	
BSW Parameter		BSW Type
DEM_OBD_NO_OBD_SUPPORT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
OBD is not supported within this ECU		
Template Description		
This represents the ability to explicitly specify that no participation in OBD is foreseen.		
M2 Parameter		
DiagnosticExtract::DiagnosticContribution::DiagnosticObdSupportEnum. noObdSupport		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemOBDSupport	
BSW Parameter		BSW Type
DEM_OBD_PRIMARY_ECU		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Kind of OBD ECU: Pimary ECU		
Template Description		
This represents the role "primary ECU".		
M2 Parameter		
DiagnosticExtract::DiagnosticContribution::DiagnosticObdSupportEnum. primaryEcu		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemOperationCycle		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container holds all parameters that are relevant to configure an operation cycle.		
Template Description		
Definition of an operation cycle that is the base of the event qualifying and for Dem scheduling.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticOperationCycle::DiagnosticOperationCycle		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00701]

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemRatio		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the OBD-specific in-use-monitor performance ratio configuration. It is related to a specific event, a FID, and an IUMPR group.		
Template Description		
ObdRatioServiceNeeds: Specifies the abstract needs of a component or module on the configuration of OBD Services in relation to a particular "ratio monitoring" which is supported by this component or module.		
DiagnosticIumprGroup: This meta-class represents the ability to model a IUMPR groups.		
M2 Parameter		
CommonStructure::ServiceNeeds::ObdRatioServiceNeeds, DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroup		
Mapping Rule		Mapping Type
In case the owner of the ObdRatioServiceNeeds is a BSW module then the DemRatio.shortName = {capitalizedMip}_{ServiceDependency.symbolicNameProps.symbol}. For the DiagnosticIumprGroup the mapping rule is 1:1		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00734]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio	
BSW Parameter		BSW Type
DemDiagnosticEventRef		ECUC-REFERENCE-DEF
BSW Description		
This reference contains the link to a diagnostic event.		
Template Description		





DiagnosticIumprGroup.iumpr: This reference collects DiagnosticIumpr to a DiagnosticIumprGroup.	
DiagnosticIumpr.event: This reference represents the DiagnosticEvent that corresponds to the IUMPR computation.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroup.iumpr, DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumpr.event	
Mapping Rule	Mapping Type
foreach DiagnosticIumprGroup, follow the iumpr reference and then pick the target of the event reference	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00735]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio	
BSW Parameter		BSW Type
DemFunctionIdRef		ECUC-REFERENCE-DEF
BSW Description		
This reference contains the link to a function identifier within the FiM which is used as a primary FID.		
Template Description		
This meta-class represents the ability to associate a DiagnosticFunctionIdentifier with a DiagnosticIumpr.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::DiagnosticIumprToFunctionIdentifierMapping		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00736]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio	
BSW Parameter		BSW Type
DemIUMPRDenGroup		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter specifies the assigned denominator type		
Template Description		
This meta-class represents the ability to model a IUMPR denominator groups.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00838]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRDenGroup	
BSW Parameter		BSW Type
DEM_IUMPR_DEN_500MILL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Condition based on definition of 500miles conditions as defined for OBD2.		
Template Description		
DiagnosticIumprDenominatorGroup.iumpr: This reference collects DiagnosticIumpr to a DiagnosticIumprDenominatorGroup.		
Identifiable.category: The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup.iumpr, GenericStructure::GeneralTemplate Classes::Identifiable::Identifiable.category		
Mapping Rule		Mapping Type
DiagnosticIumprDenominatorGroup.category == IUMPR_DENOMINATOR_500_MILES		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRDenGroup	
BSW Parameter		BSW Type
DEM_IUMPR_DEN_COLDSTART		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Condition based on definition of "cold start" as defined for EU5+		
Template Description		
DiagnosticIumprDenominatorGroup.iumpr: This reference collects DiagnosticIumpr to a DiagnosticIumprDenominatorGroup.		
Identifiable.category: The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup.iumpr, GenericStructure::GeneralTemplate Classes::Identifiable::Identifiable.category		
Mapping Rule		Mapping Type
DiagnosticIumprDenominatorGroup == IUMPR_DENOMINATOR_COLDSTART		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRDenGroup	
BSW Parameter		BSW Type
DEM_IUMPR_DEN_CSERS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Cold start emission reduction strategy" denominator		
Template Description		





This meta-class represents the ability to model a IUMPR denominator groups.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup	
Mapping Rule	Mapping Type
DiagnosticIumprDenominatorGroup.category == IUMPR_DENOMINATOR_CSERS	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRDenGroup	
BSW Parameter		BSW Type
DEM_IUMPR_DEN_CSERS_API		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Cold start emission reduction strategy" denominator considering additional conditions reported via Dem_ReplIUMPRDen Release.		
Template Description		
This meta-class represents the ability to model a IUMPR denominator groups.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup		
Mapping Rule		Mapping Type
DiagnosticIumprDenominatorGroup.category == IUMPR_DENOMINATOR_CSERS_API		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRDenGroup	
BSW Parameter		BSW Type
DEM_IUMPR_DEN_EVAP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Condition based on definition of "EVAP" conditions as defined for OBD2.		
Template Description		
DiagnosticIumprDenominatorGroup.iumpr: This reference collects DiagnosticIumpr to a DiagnosticIumprDenominatorGroup.		
Identifiable.category: The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup.iumpr, GenericStructure::GeneralTemplate Classes::Identifiable::Identifiable.category		
Mapping Rule		Mapping Type
DiagnosticIumprDenominatorGroup.category == IUMPR_DENOMINATOR_EVAP		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRDenGroup	
BSW Parameter		BSW Type
DEM_IUMPR_DEN_EVAPPURGEFLOW		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Condition based on definition of "EVAP purge flow" conditions		
Template Description		
This meta-class represents the ability to model a IUMPR denominator groups.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup		
Mapping Rule		Mapping Type
DiagnosticIumprDenominatorGroup.category == IUMPR_DENOMINATOR_ EVAPPURGEFLOW		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRDenGroup	
BSW Parameter		BSW Type
DEM_IUMPR_DEN_NONE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
No further condition. Denominator increments based on GENERAL_INDIVIDUAL_DENOMINATOR only.		
Template Description		
DiagnosticIumprDenominatorGroup.iumpr: This reference collects DiagnosticIumpr to a DiagnosticIumprDenominatorGroup.		
Identifiable.category: The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup.iumpr, GenericStructure::GeneralTemplate Classes::Identifiable::Identifiable.category		
Mapping Rule		Mapping Type
DiagnosticIumprDenominatorGroup.category == IUMPR_DENOMINATOR_NONE		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRDenGroup	
BSW Parameter		BSW Type
DEM_IUMPR_DEN_PHYS_API		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
GENERAL_INDIVIDUAL_DENOMINATOR condition considering additional physical condition (component activity) computed within the SW-C and reported via Dem_ReplUMPRDenRelease		
Template Description		





DiagnosticIumprDenominatorGroup.iumpr: This reference collects DiagnosticIumpr to a DiagnosticIumprDenominatorGroup.	
Identifiable.category: The category is a keyword that specializes the semantics of the Identifiable. It affects the expected existence of attributes and the applicability of constraints.	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprDenominatorGroup.iumpr, GenericStructure::GeneralTemplateClasses::Identifiable::Identifiable.category	
Mapping Rule	Mapping Type
DiagnosticIumprDenominatorGroup.category == IUMPR_DENOMINATOR_PHYSICAL_API	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio	
BSW Parameter		BSW Type
DemIUMPRGroup		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter specifies the assigned IUMPR group of the ratio Id.		
Template Description		
DiagnosticIumprGroup.iumprGroupIdentifier: This aggregation allows for the variant modeling of the groupIdentifier.		
DiagnosticIumprGroupIdentifier.groupId: This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroup.iumprGroupIdentifier, DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00737]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_AFRI1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Air Fuel Ratio Imbalance Monitor Bank 1		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdentifier is set to DEM_IUMPR_AFRI1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_AFRI2		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Air Fuel Ratio Imbalance Monitor Bank 2		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_AFRI2		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_BOOSTPRS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_BOOSTPRS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_CAT1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_CAT1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_CAT2		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_CAT2		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_EGR		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
if groupIdIdentifier is set to DEM_IUMPR_EGR		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_EGSENSOR		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_EGSENSOR.		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_EVAP		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_EVAP		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_FLSYS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_FLSYS		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_NMHCCAT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_NMHCCAT		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_NOXADSORB		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_NOXADSORB		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_NOXCAT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_NOXCAT		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_OXS1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier ist set to DEM_IUMPR_OXS1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_OXS2		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_OXS2		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_PF1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Particulate Filter Monitor Bank 1		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_PF1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_PF2		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Particulate Filter Monitor Bank 2		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_PF2		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_PMFILTER		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_PMFILTER		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_PRIVATE		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_PRIVATE		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_SAIR		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_SAIR		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_SECOXS1		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_SECOXS1		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemIUMPRGroup	
BSW Parameter		BSW Type
DEM_IUMPR_SECOXS2		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
This attribute shall be taken to define an identifier for the IUMPR group. Please note that the value of this identifier is driven by regulations outside the scope of AUTOSAR and can therefore not be limited to the set of characters suitable for a shortName.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumprGroupIdentifier.groupId		
Mapping Rule		Mapping Type
If groupIdIdentifier is set to DEM_IUMPR_SECOXS2		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio	
BSW Parameter		BSW Type
DemRatioKind		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This parameter defines whether the ratio will be calculated API or observer based.		
Template Description		
This attribute controls the behavior of how the ratio is calculated.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticIumpr.ratioKind		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00741]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemRatioKind	
BSW Parameter		BSW Type
DEM_RATIO_API		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
API based ratio Id		
Template Description		
The calculation is based on the usage of an API.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticLumpKindEnum. apiBased		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemRatio/DemRatioKind	
BSW Parameter		BSW Type
DEM_RATIO_OBSERVER		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Observer based ratio Id		
Template Description		
The calculation is based on the usage of an observer.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticEvent::DiagnosticLumpKindEnum. observerBased		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemResetConfirmedBitOnOverflow		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This configuration switch defines, whether the confirmed bit is reset or not while an event memory entry will be displaced.		
Template Description		
This attribute defines, whether the confirmed bit is reset or not while an event memory entry will be displaced.		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps. resetConfirmedBitOnOverflow		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00799]

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemResetPendingBitOnOverflow		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
This configuration switch defines, whether the pending bit is reset or not while an event memory entry will be displaced.		
Template Description		
This attribute defines, whether the pending bit is reset or not while an event memory entry will be displaced. In order to be compliant to ISO 14229-1 [1], this parameter needs to be set to "false".		
M2 Parameter		
DiagnosticExtract::DiagnosticCommonProps::DiagnosticCommonProps.resetPendingBitOnOverflow		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00991]

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemStatusBitHandlingTestFailedSinceLastClear		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
This configuration switch defines, whether the aging and displacement mechanism shall be applied to the "TestFailedSinceLastClear" status bits.		
Template Description		
This attribute defines, whether the aging and displacement mechanism shall be applied to the "TestFailedSinceLastClear" status bits.		
On the classic platform, the value of this attribute has to be identical for each DiagnosticMemoryDestination.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination.statusBitHandlingTestFailedSinceLastClear		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00784]

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemStatusBitStorageTestFailed		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
Activate/Deactivate the permanent storage of the "TestFailed" status bits.		
true: storage activated false: storage deactivated		
Template Description		





This parameter is used to activate/deactivate the permanent storage of the "TestFailed" status bits. true: storage activated false: storage deactivated	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticMemoryDestination::DiagnosticMemoryDestination. statusBitStorageTestFailed	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00714]

BSW Module	BSW Context	
Dem	Dem/DemGeneral	
BSW Parameter		BSW Type
DemStorageCondition		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration (parameters) for storage conditions.		
Template Description		
Specification of a storage condition.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticCondition::DiagnosticStorageCondition		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00728]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemStorageCondition	
BSW Parameter		BSW Type
DemStorageConditionReplacementEventRef		ECUC-REFERENCE-DEF
BSW Description		
Specifies the reference to an event which is stored to event memory and supports failure analysis.		
Template Description		
Reference to a DiagnosticEvent to which a StorageConditionGroup is assigned.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::DiagnosticEventToStorageConditionGroupMapping. diagnosticEvent		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_Dem_00893]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemStorageCondition	
BSW Parameter		BSW Type





DemStorageConditionStatus	ECUC-BOOLEAN-PARAM-DEF
BSW Description	
Defines the initial status for enable or disable of storage of a diagnostic event. The value is the initialization after power up (before this condition is reported the first time). true: storage of a diagnostic event enabled false: storage of a diagnostic event disabled	
Template Description	
Defines the initial status for enable or disable of acceptance/storage of event reports of a diagnostic event. The value is the initialization after power up (before this condition is reported the first time). true: acceptance/storage of a diagnostic event enabled false: acceptance/storage of a diagnostic event disabled	
M2 Parameter	
DiagnosticExtract::Dem::DiagnosticCondition::DiagnosticCondition. initValue	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00731]

BSW Module		BSW Context	
Dem		Dem/DemGeneral	
BSW Parameter		BSW Type	
DemStorageConditionGroup		ECUC-PARAM-CONF-CONTAINER-DEF	
BSW Description			
This container contains the configuration (parameters) for storage condition groups.			
Template Description			
Storage condition group which includes one or several storage conditions.			
M2 Parameter			
DiagnosticExtract::Dem::DiagnosticConditionGroup::DiagnosticStorageConditionGroup			
Mapping Rule			Mapping Type
1:1 mapping			full
Mapping Status			ECUC Parameter ID
valid			[ECUC_Dem_00773]

BSW Module	BSW Context	
Dem	Dem/DemGeneral/DemStorageConditionGroup	
BSW Parameter		BSW Type
DemStorageConditionRef		ECUC-REFERENCE-DEF
BSW Description		
References an enable condition.		
Template Description		
Reference to storageConditions that are part of the StorageConditionGroup.		
M2 Parameter		
DiagnosticExtract::Dem::DiagnosticConditionGroup::DiagnosticStorageConditionGroup. storageCondition		
Mapping Rule		Mapping Type
1:1 mapping		full





Mapping Status	ECUC Parameter ID
valid	[ECUC_Dem_00768]

G.4 FiM

BSW Module	BSW Context	
FiM	FiM/FiMConfigSet	
BSW Parameter		BSW Type
FiMFID		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container includes symbolic names of all FIDs.		
Template Description		
FunctionInhibitionNeeds: Specifies the abstract needs on the configuration of the Function Inhibition Manager for one Function Identifier (FID). This class currently contains no attributes. Its name can be regarded as a symbol identifying the FID from the viewpoint of the component or module which owns this class.		
DiagnosticFunctionIdentifier: This meta-class represents a diagnostic function identifier (a.k.a. FID).		
M2 Parameter		
CommonStructure::ServiceNeeds::FunctionInhibitionNeeds, DiagnosticExtract::Fim::DiagnosticFunctionIdentifier		
Mapping Rule		Mapping Type
In case the owner of the FunctionInhibitionNeeds is a BSW module then the FiMFID.shortName={capitalizedMip}_{ServiceDependency.symbolicNameProps.symbol}.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FiM_00039]

BSW Module	BSW Context	
FiM	FiM/FiMConfigSet	
BSW Parameter		BSW Type
FiMinhibitionConfiguration		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container includes all configuration parameters concerning the relationship between event and FID.		
Template Description		
This meta-class represents the ability to define the inhibition of a specific function identifier within the Fim configuration.		
M2 Parameter		
DiagnosticExtract::Fim::DiagnosticFunctionIdentifierInhibit		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FiM_00038]

BSW Module	BSW Context	
FiM	FiM/FiMConfigSet/FiMinhibitionConfiguration	
BSW Parameter		BSW Type
FiMinhEventRef		ECUC-REFERENCE-DEF
BSW Description		
Selection of an single DEM Event.		
Template Description		
This represents the alias event applicable for the referencing inhibition source.		
M2 Parameter		
DiagnosticExtract::FiM::DiagnosticFunctionInhibitSource. <i>event</i>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FiM_00100]

BSW Module	BSW Context	
FiM	FiM/FiMConfigSet/FiMinhibitionConfiguration	
BSW Parameter		BSW Type
FiMinhInhibitionMask		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
The configuration parameter is used to specify the inhibition mask for an event - FID relation.		
Template Description		
This represents the value of the inhibition mask behavior.		
M2 Parameter		
DiagnosticExtract::FiM::DiagnosticFunctionIdentifierInhibit. <i>inhibitionMask</i>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FiM_00096]

BSW Module	BSW Context	
FiM	FiM/FiMConfigSet/FiMinhibitionConfiguration/FiMinhInhibitionMask	
BSW Parameter		BSW Type
FIM_LAST_FAILED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Last Failed - The monitor Status DEM_MONITOR_STATUS_TF is set to 1.		
Template Description		
This represents the inhibition mask behavior "last failed".		
M2 Parameter		
DiagnosticExtract::FiM::DiagnosticInhibitionMaskEnum. <i>lastFailed</i>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
FiM	FiM/FiMConfigSet/FiMinhibitionConfiguration/FiMinhInhibitionMask	
BSW Parameter		BSW Type
FIM_NOT_TESTED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Not Tested this cycle - DEM_MONITOR_STATUS_TNCTOC flag is set.		
Template Description		
This represents the inhibition mask behavior "not tested".		
M2 Parameter		
DiagnosticExtract::FiM::DiagnosticInhibitionMaskEnum. <i>notTested</i>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
FiM	FiM/FiMConfigSet/FiMinhibitionConfiguration/FiMinhInhibitionMask	
BSW Parameter		BSW Type
FIM_TESTED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Tested - DEM_MONITOR_STATUS_TNCTOC flag is not set.		
Template Description		
This represents the inhibition mask behavior "tested".		
M2 Parameter		
DiagnosticExtract::FiM::DiagnosticInhibitionMaskEnum. <i>tested</i>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
FiM	FiM/FiMConfigSet/FiMinhibitionConfiguration/FiMinhInhibitionMask	
BSW Parameter		BSW Type
FIM_TESTED_AND_FAILED		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Tested and Failed - DEM_MONITOR_STATUS_TF flag is set and DEM_MONITOR_STATUS_TNCTOC flag is not set.		
Template Description		
This represents the inhibition mask behavior "tested and failed".		
M2 Parameter		
DiagnosticExtract::FiM::DiagnosticInhibitionMaskEnum. <i>testedAndFailed</i>		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
FiM	FiM/FiMConfigSet	
BSW Parameter		BSW Type
FiMSummaryEvent		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
The summarized EventId definition record consists of a summarized event ID and specific Dem Events. This record means that a particular FID that has to be disabled in case of summarized event (defined above) is to be disabled in any of the specific events. A possible solution could be assigning events as summarized events along with a list of specific events. During the configuration process the summarized event substitutes the referenced single events. However, it is not outlined how this requirement is solved - whether by configuration process or by implementation within the FiM. The FiM configuration tool could also build up a suitable data structure for summarized events and deal with it in the FiM implementation.		
Template Description		
This meta-class represents the ability to model a Fim event group, also known as a summary event in Fim terminology. This represents a group of single diagnostic events.		
M2 Parameter		
DiagnosticExtract::Fim::DiagnosticFimEventGroup		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_FiM_00603]

G.5 IdsM

BSW Module	BSW Context	
IdsM	IdsM/IdsMConfiguration/IdsMEvent	
BSW Parameter		BSW Type
IdsMSinkDem		ECUC-BOOLEAN-PARAM-DEF
BSW Description		
The QSEv will be sent to the Dem Module into a Security Event Memory (Sem) to persist it on the local ECU.		
Template Description		
This meta-class represents the ability to map a security event that is defined in the context of the Security Extract to a diagnostic event defined on the context of the DiagnosticExtract.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::DiagnosticEventToSecurityEventMapping		
Mapping Rule		Mapping Type
If the (M2) DiagnosticEventToSecurityEventMapping of the DEXT defines a mapping between the (M2) SecurityEventDefinition corresponding to the enclosing IdsMEvent and a (M2) Diagnostic Event, then IdsMSinkDem = TRUE. Otherwise, IdsMSinkDem = FALSE.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_IdsM_00035]

G.6 J1939Dcm

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmChannel	
BSW Parameter		BSW Type
J1939DcmBusType		ECUC-ENUMERATION-PARAM-DEF
BSW Description		
Identifies the communication port		
Template Description		
This represents the network ID for the J1939 cluster.		
M2 Parameter		
SystemTemplate::Fibex::Fibex4Can::CanTopology::J1939Cluster.networkId		
Mapping Rule		Mapping Type
value 1 maps to J1939DCM_J1939_NETWORK_1 value 2 maps to J1939DCM_J1939_NETWORK_2 value 3 maps to J1939DCM_J1939_NETWORK_3 value 4 maps to J1939DCM_J1939_NETWORK_4		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Dcm_-00039]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmDspExternalSRDataElementClass/J1939DcmDataElementInstance	
BSW Parameter		BSW Type
J1939DcmDataElementInstanceRef		ECUC-INSTANCE-REFERENCE-DEF
BSW Description		
Instance Reference to the primitive data which shall be read or written. Supported are VariableDataPrototypes in Sender ReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in ParameterInterfaces (read only). This reference is applicable if the AutosarDataPrototype is typed with a ApplicationPrimitiveDataType of category VALUE or BOOLEAN or if the AutosarDataPrototype is typed with a ImplementationDataType of category VALUE or TYPE_REFERENCE that in turn boils down to VALUE		
Template Description		
This represents the dataElement in the application software that is accessed for diagnostic purpose. This role is applicable on the classic platform.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceDataMapping.mappedDataElement		
Mapping Rule		Mapping Type
DiagnosticServiceDataMapping maps to a primitive data.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Dcm_-00067]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmDspExternalSRDataElementClass/J1939DcmSubElementInDataElementInstance	
BSW Parameter		BSW Type
J1939DcmSubElementInDataElementInstanceRef		ECUC-INSTANCE-REFERENCE-DEF
BSW Description		





Instance Reference to the primitive sub-element (at any level) of composite data in a port which shall be read. Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in Parameter Interfaces (read only). This reference is applicable if the AutosarDataPrototype is typed with a ApplicationCompositeData Type.	
Template Description	
This represents the dataElement in the application software that is accessed for diagnostic purpose. This role is applicable on the classic platform.	
M2 Parameter	
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceDataMapping. mappedDataElement	
Mapping Rule	Mapping Type
DiagnosticServiceDataMapping maps to a primitive element within a composite data, where the AutosarDataPrototype is typed with a ApplicationCompositeDataType.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Dcm_ - 00066]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmDspExternalSRDataElementClass/J1939DcmSubElementInImplDataElementInstance	
BSW Parameter		BSW Type
J1939DcmSubElementInImplDataElementInstanceRef		ECUC-INSTANCE-REFERENCE-DEF
BSW Description		
Instance Reference to the primitive sub-element (at any level) of composite data in a port which shall be read. Supported are VariableDataPrototypes in SenderReceiverInterfaces and NvDataInterfaces and ParameterDataPrototypes in Parameter Interfaces (read only). This reference is applicable if the AutosarDataPrototype is typed with a ImplementationDataType of category STRUCTURE or ARRAY. Please note that in case of ARRAY the index attribute in the target reference has to be set to select a single array element.		
Template Description		
This represents the dataElement in the application software that is accessed for diagnostic purpose. This role is applicable on the classic platform.		
M2 Parameter		
DiagnosticExtract::DiagnosticMapping::ServiceMapping::DiagnosticServiceDataMapping. mappedDataElement		
Mapping Rule		Mapping Type
DiagnosticServiceDataMapping maps to a primitive element within a composite data, where the AutosarDataPrototype is typed with a ApplicationCompositeDataType ImplementationDataType of category STRUCTURE or ARRAY.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Dcm_ - 00068]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmNode	
BSW Parameter		BSW Type
J1939DcmServiceOnlyDTCsMemoryDestinationRef		ECUC-REFERENCE-DEF
BSW Description		
Reference to the user defined memory used for the Service Only DTCs handled by DM53, DM54, and DM55.		
Template Description		
M2 Parameter		





DiagnosticExtract::Dem::DiagnosticTroubleCode::DiagnosticTroubleCodeProps.memoryDestination	
Mapping Rule	Mapping Type
This upstream mapping shall only exist for a DiagnosticTroubleCodeJ1939 with attribute kind set to serviceOnly that references the DiagnosticTroubleCodeProps that owns the memoryDestination.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Dcm_ - 00051]

BSW Module	BSW Context
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions
BSW Parameter	BSW Type
J1939DcmModeCondition	ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description	
This container contains the configuration of a mode condition or an environmental conditions which can be used as argument in J1939DcmModeRules. One J1939DcmModeCondition shall contain either one J1939DcmSwcModeRef or one J1939DcmBswModeRef or one J1939DcmSwcSRDataElementRef. Please note that the J1939Dcm acts as well as mode manager. Therefore the references J1939DcmSwcModeRef or one J1939DcmBswModeRef might point to provided ModeDeclarationGroupPrototypes of the J1939Dcm itself as well as to provided ModeDeclarationGroupPrototypes of other Bsw Modules or software components. In case of a configured J1939DcmSwcModeRef or J1939DcmBswModeRef only the J1939DcmConditionType J1939DCM_EQUALS or J1939DCM_EQUALS_NOT are applicable. In case of J1939DcmSwcSRDataElementRef all literals of J1939DcmConditionType are possible.	
Template Description	
DiagnosticCompareConditions are atomic conditions. They are based on the idea of a comparison at runtime of some variable data with something constant. The type of the comparison (==, !=, <, <=, ...) is specified in DiagnosticCompareCondition.compareType.	
M2 Parameter	
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition	
Mapping Rule	Mapping Type
Depending on the reference a DcmModeCondition is mapped to a DiagnosticEnvModeCondition if only one reference is present and reference is a DcmSwcModeRef or a DcmBswModeRef. If two references are present, a DcmSwcSRDataElementRef and a DcmSwcSRDataElementValueRef, then DcmModeCondition is mapped to a DiagnosticEnvDataCondition.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Dcm_ - 00071]

BSW Module	BSW Context
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeCondition
BSW Parameter	BSW Type
J1939DcmBswModeRef	ECUC-INSTANCE-REFERENCE-DEF
BSW Description	
This parameter references a mode of a ModeDeclarationGroupPrototype provided by a Basic Software Module used for the condition. Please note that such ModeDeclarationGroupPrototype are owned by a Basic Software Module Description in the role providedModeGroup.	
Template Description	





This reference represents both the ModeDeclarationGroupPrototype and the ModeDeclaration relevant for the mode comparison.	
M2 Parameter	
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvModeCondition. modeElement	
Mapping Rule	Mapping Type
For DcmModeRef a new DiagnosticEnvBswModeElement is used, pointing to the ModeDeclaration via ModelInModuleDescriptionInstanceRef. This new DiagnosticEnvModeElement shall be aggregated by the same DiagnosticEnvironmentalCondition as the DiagnosticEnvModeCondition, in which the target of the reference DiagnosticEnvModeCondition.modeElement points to the this DiagnosticEnvModeElement.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Dcm_ - 00059]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeCondition/J1939DcmConditionType	
BSW Parameter		BSW Type
J1939DCM_EQUALS		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
DiagnosticCompareTypeEnum.isEqual: equal		
DiagnosticEnvCompareCondition.compareType: This attributes represents the concrete type of the comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticCompareTypeEnum. isEqual , DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition. compareType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeCondition/J1939DcmConditionType	
BSW Parameter		BSW Type
J1939DCM_EQUALS_NOT		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
DiagnosticCompareTypeEnum.isNotEqual: not equal		
DiagnosticEnvCompareCondition.compareType: This attributes represents the concrete type of the comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticCompareTypeEnum. isNotEqual , DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition. compareType		





Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeCondition/J1939DcmConditionType	
BSW Parameter		BSW Type
J1939DCM_GREATER_OR_EQUAL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
DiagnosticCompareTypeEnum.isGreaterOrEqual: greater than or equal		
DiagnosticEnvCompareCondition.compareType: This attributes represents the concrete type of the comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticCompareTypeEnum. isGreaterOrEqual , Diagnostic Extract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition. compareType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeCondition/J1939DcmConditionType	
BSW Parameter		BSW Type
J1939DCM_GREATER_THAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
DiagnosticCompareTypeEnum.isGreaterThan: greater than		
DiagnosticEnvCompareCondition.compareType: This attributes represents the concrete type of the comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticCompareTypeEnum. isGreaterThan , Diagnostic Extract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition. compareType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeCondition/J1939DcmConditionType	
BSW Parameter		BSW Type
J1939DCM_LESS_OR_EQUAL		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
DiagnosticCompareTypeEnum.isLessOrEqual: less than or equal DiagnosticEnvCompareCondition.compareType: This attributes represents the concrete type of the comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticCompareTypeEnum. isLessOrEqual , DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition. compareType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeCondition/J1939DcmConditionType	
BSW Parameter		BSW Type
J1939DCM_LESS_THAN		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
DiagnosticCompareTypeEnum.isLessThan: less than DiagnosticEnvCompareCondition.compareType: This attributes represents the concrete type of the comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticCompareTypeEnum. isLessThan , DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvCompareCondition. compareType		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeCondition	
BSW Parameter		BSW Type
J1939DcmSwcModeRef		ECUC-INSTANCE-REFERENCE-DEF
BSW Description		
This parameter references a mode in a particular mode request port of a software component that is used for the condition.		
Template Description		





This reference represents both the ModeDeclarationGroupPrototype and the ModeDeclaration relevant for the mode comparison.	
M2 Parameter	
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvModeCondition. modeElement	
Mapping Rule	Mapping Type
For DcmModeRef a new DiagnosticEnvSwcModeElement is used, pointing to the ModeDeclaration via PModelInSystemInstanceRef. This new DiagnosticEnvModeElement shall be aggregated by the same DiagnosticEnvironmentalCondition as the DiagnosticEnvModeCondition, in which the target of the reference DiagnosticEnvModeCondition.modeElement points to the this DiagnosticEnvModeElement.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Dcm_-00058]

BSW Module	BSW Context
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeCondition
BSW Parameter	BSW Type
J1939DcmSwcSRDataElementRef	ECUC-REFERENCE-DEF
BSW Description	
Reference to environmental conditions. It is possible to reference a S/R Receiver-Port to read physical values and compare (equal, greater, less,...) them with a configured value that is defined by J1939DcmSwcSRDataElementValue.	
Template Description	
This reference represents the related diagnostic data element.	
M2 Parameter	
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvDataCondition. dataElement	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Dcm_-00060]

BSW Module	BSW Context
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeCondition/J1939DcmSwcSRDataElementValue/J1939DcmSwcSRDataElementArray/J1939DcmSwcSRDataElementArrayElement
BSW Parameter	BSW Type
J1939DcmSwcSRDataElementArrayElementIndex	ECUC-INTEGER-PARAM-DEF
BSW Description	
Index to an array SR data element.	
Template Description	
This attribute represents a fixed compare value taken to evaluate the compare condition.	
M2 Parameter	
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvDataCondition. compareValue	
Mapping Rule	Mapping Type
DiagnosticDataElement referenced by the DiagnosticEnvDataCondition is an array.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Dcm_-00078]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeCondition/J1939DcmSwcSRDataElementValue/J1939DcmSwcSRDataElementArray/J1939DcmSwcSRDataElementArrayElement	
BSW Parameter		BSW Type
J1939DcmSwcSRDataElementArrayElementValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Value of an array SR data element compare value.		
Template Description		
This attribute represents a fixed compare value taken to evaluate the compare condition.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvDataCondition. compareValue		
Mapping Rule		Mapping Type
DiagnosticDataElement referenced by the DiagnosticEnvDataCondition is an array.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Dcm_-00079]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeCondition/J1939DcmSwcSRDataElementValue/J1939DcmSwcSRDataElementPrimitive	
BSW Parameter		BSW Type
J1939DcmSwcSRDataElementPrimitiveValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Reference to a primitive SR data element compare value.		
Template Description		
This attribute represents a fixed compare value taken to evaluate the compare condition.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvDataCondition. compareValue		
Mapping Rule		Mapping Type
DiagnosticDataElement referenced by the DiagnosticEnvDataCondition is primitive.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Dcm_-00077]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions	
BSW Parameter		BSW Type
J1939DcmModeRule		ECUC-PARAM-CONF-CONTAINER-DEF
BSW Description		
This container contains the configuration of a mode rule which represents a logical expression with J1939DcmModeConditions or other J1939DcmModeRules as arguments. All arguments are processed with the operator defined by DcmLogicalOperator, for instance: Argument_A AND Argument_B AND Argument_C		
Template Description		





A DiagnosticEnvConditionFormula embodies the computation instruction that is to be evaluated at runtime to determine if the DiagnosticEnvironmentalCondition is currently present (i.e. the formula is evaluated to true) or not (otherwise). The formula itself consists of parts which are combined by the logical operations specified by DiagnosticEnvConditionFormula.op.

If a diagnostic functionality cannot be executed because an environmental condition fails then the diagnostic stack shall send a negative response code (NRC) back to the client. The value of the NRC is directly related to the specific formula and is therefore formalized in the attribute DiagnosticEnvConditionFormula.nrcValue.

M2 Parameter	
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvConditionFormula	
Mapping Rule	Mapping Type
A DcmModeRule is mapped to a DiagnosticEnvConditionFormula, if this DcmModeRule is a subrule, i.e. it is referenced by a DcmArgumentRef. In addition, a new DiagnosticEnvironmentalCondition shall be created with DiagnosticEnvironmentalCondition.formula containing a DiagnosticEnvConditionFormula. In both cases, if no DcmLogicalOperator is present in this DcmModeRule, then DiagnosticEnvConditionFormula shall be set to DiagnosticLogicalOperatorEnum.logicalAnd.	full
Mapping Status	ECUC Parameter ID
valid	[ECUC_J1939Dcm_-00053]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeRule	
BSW Parameter		BSW Type
J1939DcmArgumentRef		ECUC-CHOICE-REFERENCE-DEF
BSW Description		
This is a choice reference either to a mode condition or a an other mode rule serving as sub-expression.		
Template Description		
A DiagnosticEnvConditionFormulaPart can either be a atomic condition, e.g. a DiagnosticEnvCompareCondition, or a DiagnosticEnvConditionFormula, again, which allows arbitrary nesting.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvConditionFormulaPart		
Mapping Rule		Mapping Type
Depending on the destination, one DcmArgumentRef is mapped to a DiagnosticEnvConditionFormula if "destination" is a DcmModeRule, and to a DiagnosticEnvCompareCondition, if "destination" is a DcmModeCondition. The order of the aggregation of the DiagnosticEnvConditionFormulaParts shall correspond to the ordering of the index of the DcmArgumentRefs.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Dcm_-00055]

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeRule/J1939DcmLogicalOperator	
BSW Parameter		BSW Type
J1939DCM_AND		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		





DiagnosticEnvConditionFormula.op: This attribute represents the concrete operator (supported operators: and, or) of the condition formula.	
DiagnosticLogicalOperatorEnum.logicalAnd: Logical AND	
M2 Parameter	
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvConditionFormula.op, DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticLogicalOperatorEnum.logicalAnd	
Mapping Rule	Mapping Type
1:1 mapping	full
Mapping Status	ECUC Parameter ID
valid	

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeRule/J1939DcmLogicalOperator	
BSW Parameter		BSW Type
J1939DCM_OR		ECUC-ENUMERATION-LITERAL-DEF
BSW Description		
Template Description		
DiagnosticEnvConditionFormula.op: This attribute represents the concrete operator (supported operators: and, or) of the condition formula.		
DiagnosticLogicalOperatorEnum.logicalOr: Logical OR		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvConditionFormula.op, DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticLogicalOperatorEnum.logicalOr		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		

BSW Module	BSW Context	
J1939Dcm	J1939Dcm/J1939DcmConfigSet/J1939DcmProcessingConditions/J1939DcmModeRule	
BSW Parameter		BSW Type
J1939DcmModeRuleNrcValue		ECUC-INTEGER-PARAM-DEF
BSW Description		
Optional parameter which defines the NRC to be sent in case the mode rule condition is not valid.		
Template Description		
This attribute represents the concrete NRC value that shall be returned if the condition fails.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvConditionFormula.nrcValue		
Mapping Rule		Mapping Type
1:1 mapping		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_J1939Dcm_-00056]

G.7 KeyM

BSW Module	BSW Context	
KeyM	KeyM/KeyMCertificateElementVerification/KeyMCertificateElementCondition/KeyMCertificateElementConditionValue/KeyMCertificateElementConditionSenderReceiver	
BSW Parameter		BSW Type
KeyMCertificateElementConditionSenderReceiver		ECUC-INSTANCE-REFERENCE-DEF
BSW Description		
This parameter references a mode in a particular mode request port of a software component that is used for the condition.		
Template Description		
This reference represents both the ModeDeclarationGroupPrototype and the ModeDeclaration relevant for the mode comparison.		
M2 Parameter		
DiagnosticExtract::Dcm::EnvironmentalCondition::DiagnosticEnvModeCondition. modeElement		
Mapping Rule		Mapping Type
For DcmModeRef a new DiagnosticEnvSwcModeElement is used, pointing to the ModeDeclaration via PModeInSystemInstanceRef. This new DiagnosticEnvModeElement shall be aggregated by the same DiagnosticEnvironmentalConfiton as the DiagnosticEnvModeCondition, in which the target of the reference DiagnosticEnvModeCondition.modeElement points to the this DiagnosticEnvModeElement.		full
Mapping Status		ECUC Parameter ID
valid		[ECUC_KeyM_00052]

H Splitable Elements in the Scope of this Document

This chapter contains a table of all model elements stereotyped «atpSplitable» in the scope of this document.

Each entry in the table consists of the identification of the specific model element itself and the applicable value of the tagged value `atp.Splitkey`.

For more information about the concept of splitable model elements and how these shall be treated please refer to the [15, TPS Generic Structure Template].

<i>Name of splitable element</i>	<i>Splitkey</i>
DiagnosticAbstractParameter.dataElement	dataElement.shortName, dataElement.variationPoint.shortLabel
DiagnosticAccessPermission.authenticationEnabled	authenticationEnabled
DiagnosticAccessPermission.diagnosticSession	diagnosticSession
DiagnosticAccessPermission.environmentalCondition	environmentalCondition
DiagnosticAccessPermission.securityLevel	securityLevel
DiagnosticAging.agingCycle	agingCycle.diagnosticOperationCycle, agingCycle.variationPoint.shortLabel
DiagnosticCommonProps.debounceAlgorithmProps	<Not applicable due to atpVariation (PropertySet Pattern)>
DiagnosticContributionSet.commonProperties	commonProperties
DiagnosticContributionSet.element	element.diagnosticCommonElement, element.variationPoint.shortLabel
DiagnosticContributionSet.serviceTable	serviceTable.diagnosticServiceTable, serviceTable.variationPoint.shortLabel
DiagnosticDataElement.swDataDefProps	swDataDefProps
DiagnosticDataIdentifier.dataElement	dataElement.bitOffset, dataElement.ident.shortName, dataElement.variationPoint.shortLabel
DiagnosticEcuInstanceProps.ecuInstance	ecuInstance
DiagnosticEnableConditionGroup.enableCondition	enableCondition.diagnosticEnableCondition, enableCondition.variationPoint.shortLabel
DiagnosticEnvDataElementCondition.swDataDefProps	swDataDefProps
DiagnosticEvent.connectedIndicator	connectedIndicator.shortName, connectedIndicator.variationPoint.shortLabel
DiagnosticEventPortMapping.process	process
DiagnosticExtendedDataRecord.recordElement	recordElement.bitOffset, recordElement.ident.shortName
DiagnosticInfoType.dataElement	dataElement.bitOffset, dataElement.ident.shortName
DiagnosticIumprDenominatorGroup.iumpr	iumpr
DiagnosticIumprGroup.iumpr	iumpr
DiagnosticIumprGroup.iumprGroupIdentifier	iumprGroupIdentifier.groupId, iumprGroupIdentifier.variationPoint.shortLabel
DiagnosticMemoryDestinationUserDefined.authenticationEnabled	authenticationEnabled
DiagnosticMemoryIdentifier.accessPermission	accessPermission
DiagnosticParameterIdentifier.dataElement	dataElement.bitOffset, dataElement.ident.shortName, dataElement.variationPoint.shortLabel
DiagnosticProtocol.diagnosticConnection	diagnosticConnection.diagnosticConnection, diagnosticConnection.variationPoint.shortLabel
DiagnosticProtocol.serviceTable	serviceTable.diagnosticServiceTable, serviceTable.variationPoint.shortLabel





Name of splitable element	Splitkey
DiagnosticSecurityAccess.securityLevel	securityLevel
DiagnosticServiceInstance.accessPermission	accessPermission
DiagnosticServiceTable.diagnosticConnection	diagnosticConnection.diagnosticConnection, diagnosticConnection.variationPoint.shortLabel
DiagnosticServiceTable.diagnosticServiceInstance	diagnosticServiceInstance.diagnosticService Instance, diagnosticServiceInstance.variation Point.shortLabel
DiagnosticServiceTable.ecuInstance	ecuInstance
DiagnosticStorageConditionGroup.storageCondition	storageCondition.diagnosticStorageCondition, storageCondition.variationPoint.shortLabel
DiagnosticTestResult.diagnosticEvent	diagnosticEvent.diagnosticEvent, diagnostic Event.variationPoint.shortLabel
DiagnosticTroubleCodeGroup.dtc	dtc.diagnosticTroubleCode, dtc.variationPoint.short Label
DiagnosticTroubleCodeObd.eventReadinessGroup	eventReadinessGroup.eventObdReadinessGroup, eventReadinessGroup.variationPoint.shortLabel
DiagnosticTroubleCodeProps.aging	aging
DiagnosticTroubleCodeProps.diagnosticMemory	diagnosticMemory
DiagnosticTroubleCodeProps.extendedDataRecord	extendedDataRecord.diagnosticExtendedData Record, extendedDataRecord.variationPoint.short Label
DiagnosticTroubleCodeProps.freezeFrame	freezeFrame.diagnosticFreezeFrame, freeze Frame.variationPoint.shortLabel
DiagnosticTroubleCodeProps.legislatedFreezeFrameContentUds Obd	legislatedFreezeFrameContentUdsObd.diagnostic DataIdentifierSet, legislatedFreezeFrameContent UdsObd.variationPoint.shortLabel
DiagnosticTroubleCodeProps.obdProps	obdProps, obdProps.variationPoint.shortLabel
DiagnosticTroubleCodeProps.snapshotRecordContent	snapshotRecordContent.diagnosticDataIdentifier Set, snapshotRecordContent.variationPoint.short Label
DiagnosticTroubleCodeUds.eventReadinessGroup	eventReadinessGroup.eventObdReadinessGroup, eventReadinessGroup.variationPoint.shortLabel
DiagnosticTroubleCodeUds.troubleCodeProps	troubleCodeProps.diagnosticTroubleCodeProps, troubleCodeProps.variationPoint.shortLabel

Table H.1: Usage of splitable elements

I Variation Points in the Scope of this Document

This chapter contains a table of all model elements stereotyped `<<atpVariation>>` in the scope of this document.

Each entry in the table consists of the identification of the model element itself and the applicable value of the tagged value `vh.latestBindingTime`.

For more information about the concept of variation points and how model elements that contain variation points shall be treated please refer to the [15, TPS Generic Structure Template].

<i>Variation Point</i>	<i>Latest Binding Time</i>
DiagnosticAbstractDataIdentifier.id	preCompileTime
DiagnosticAbstractParameter.dataElement	postBuild
DiagnosticAging.agingCycle	preCompileTime
DiagnosticAging.threshold	preCompileTime
DiagnosticCommonProps	codeGenerationTime
DiagnosticCommonProps.debounceAlgorithmProps	postBuild
DiagnosticConnectedIndicator.healingCycleCounterThreshold	preCompileTime
DiagnosticContributionSet.element	postBuild
DiagnosticContributionSet.serviceTable	postBuild
DiagnosticDataIdentifier.dataElement	postBuild
DiagnosticDebounceAlgorithmProps.debounceBehavior	preCompileTime
DiagnosticEnableConditionGroup.enableCondition	postBuild
DiagnosticEvent.confirmationThreshold	preCompileTime
DiagnosticEvent.connectedIndicator	postBuild
DiagnosticFreezeFrame.recordNumber	preCompileTime
DiagnosticIndicator.type	preCompileTime
DiagnosticIumprGroup.iumprGroupIdentifier	postBuild
DiagnosticMeasurementIdentifier.obdMid	preCompileTime
DiagnosticParameterIdentifier.dataElement	postBuild
DiagnosticProtocol.diagnosticConnection	postBuild
DiagnosticProtocol.priority	preCompileTime
DiagnosticProtocol.sendRespPendOnTransToBoot	preCompileTime
DiagnosticProtocol.serviceTable	postBuild
DiagnosticRoutine.id	preCompileTime
DiagnosticServiceTable.diagnosticConnection	postBuild
DiagnosticServiceTable.diagnosticServiceInstance	postBuild
DiagnosticStorageConditionGroup.storageCondition	postBuild
DiagnosticTestIdentifier.id	preCompileTime
DiagnosticTestIdentifier.uasId	preCompileTime
DiagnosticTestResult.diagnosticEvent	preCompileTime
DiagnosticTestResult.updateKind	preCompileTime
DiagnosticTroubleCodeGroup.dtc	postBuild
DiagnosticTroubleCodeGroup.groupNumber	preCompileTime
DiagnosticTroubleCodeObd.considerPtoStatus	preCompileTime





Variation Point	Latest Binding Time
DiagnosticTroubleCodeObd.eventReadinessGroup	postBuild
DiagnosticTroubleCodeObd.obdDTCValue	preCompileTime
DiagnosticTroubleCodeProps.extendedDataRecord	preCompileTime
DiagnosticTroubleCodeProps.freezeFrame	preCompileTime
DiagnosticTroubleCodeProps.legislatedFreezeFrameContentUdsObd	preCompileTime
DiagnosticTroubleCodeProps.obdProps	postBuild
DiagnosticTroubleCodeProps.priority	preCompileTime
DiagnosticTroubleCodeProps.snapshotRecordContent	preCompileTime
DiagnosticTroubleCodeUds.considerPtoStatus	preCompileTime
DiagnosticTroubleCodeUds.eventReadinessGroup	postBuild
DiagnosticTroubleCodeUds.functionalUnit	preCompileTime
DiagnosticTroubleCodeUds.obdDtcValue3Byte	preCompileTime
DiagnosticTroubleCodeUds.severity	preCompileTime
DiagnosticTroubleCodeUds.troubleCodeProps	postBuild
DiagnosticTroubleCodeUds.udsDtcValue	preCompileTime
DiagnosticTroubleCodeUds.wwhObdDtcClass	preCompileTime

Table I.1: Usage of variation points