

Document Title	Specification of Timing Extensions	
Document Owner	AUTOSAR	
Document Responsibility	AUTOSAR	
Document Identification No	411	
Document Classification	Standard	

Document Status	Final
Part of AUTOSAR Release	4.2.2

Document Change History			
Release	Changed by	d by Description	
4.2.2	AUTOSAR Release Management	 Minor corrections and editorial changes Added appendices C and D 	
4.2.1	AUTOSAR Release Management	 Added the capability in Execution Order Constraint to reference RTE and BSW Events Added description about how to specify time sets Minor corrections / clarifications / editorial changes; For details please refer to the BWCStatement Revised the entire contents of chapter "Application Notes" Applied editorial changes to section "Repetitive Execution Order Constraint" 	
4.1.3	AUTOSAR Release Management		
4.1.2	AUTOSAR Release Management	 Clarified the semantics of jitter and removed ambuiguities in the description of the Periodic Event Triggering Constraint. Added AUTOSAR constraints in order to ensure specification of cpnsistent Execution Order Constraints. Added capability to specify logical successor relationships between runnable entities and groups of runnable entities. Changed the prefix of timing functions from ÄRTETO TIMEXïn order to be consistend with the AUTOSAR standard definitions. Clarified the use of event types in the various timing views defined in the specification. 	



4.1.1	AUTOSAR Release Management	 Applied editorial changes in order to improve readability and comprehensibility of the contents of the document Added VFB event type TDEventTrigger and extended TDEventSwcInternalBehaviorTypeEnum to indicate variable access of runnable entities Extended the capability of SynchronizationTimingConstraint to reference timing description events Revised and extended the capabilities of ExecutionOrderConstraint to specify hierarchical and repetitive execution order constraints Added the capability to specify blueprints of VfbTimings Added capabilities to reference timing description events in existing timing models and to support reuse of timing models, as well as AUTOSAR methodology 	
AUTOSAR 4.0.3 Release Management		 Added new timing constraint types AgeConstraint and ExecutionTimeConstraint Added occurrence expression language for TimingDescriptionEventS Improved TDEventModeDeclaration, BurstPatternEventTriggering and SwcTiming 	
4.0.2	AUTOSAR Release Management	 Dropped InstanceRefs and replaced with ComponentInCompositionInstanceRef Restricted the semantics of ExecutionOrderConstraint and 	
AUTOSAR		Initial Release	







Disclaimer

This specification and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Advice for users

AUTOSAR specifications may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the specifications for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such specifications, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.



Table of Contents

1	Introduction	8
2	1.5 Scope	8 9 11 11 12 12
3	Timing Views	18
	3.2 VfbTiming 3.3 SwcTiming 3.4 SystemTiming 3.5 BswModuleTiming	18 19 21 22 24 25
4	Timing Extensions Fundamentals	27
	4.2 Timing Extensions and Blueprints	27 28 29 30 30
5	Timing Description Events	36
	5.2 Timing Events Related to SwcInternalBehavior 5.3 Timing Events Related to Bus Communication 5.4 Timing Events Related to the BSW 5.5 Complex Timing Event 5.6 Occurrence Expression Language for Timing Events 5.6.1 Specifying an Occurrence Expression 5.6.2 Occurrence Expression Language Syntax	37 45 48 53 57 58 66 67
6	Timing Description Event Chains	69
7	Timing Constraints	72
	7.1.1 PeriodicEventTriggering	72 73 76 78 80



		7.1.4	BurstPatternEventTriggering
		7.1.5	ArbitraryEventTriggering
	7.2	Latenc	yTimingConstraint
	7.3		nstraint
	7.4		onizationTimingConstraint
		7.4.1	SynchronizationTimingConstraint on Event Chains 97
		7.4.2	SynchronizationTimingConstraint on Events
	7.5		TimingConstraint
	7.6		ionOrderConstraint
		7.6.1	Ordinary Execution Order Constraint
		7.6.2	Hierarchical Execution Order Constraint
	- -	7.6.3	Repetitive Execution Order Constraint
	7.7	Execui	ionTimeConstraint
8	Appl	lication N	otes 117
	8.1	Compo	onent integration
		8.1.1	VFB view
		8.1.2	ECU view
	8.2		e control
		8.2.1	Overview
		8.2.2	Timing Requirements
		8.2.3	Formal description of timing constraints in VFB View 128
			2.3.1 Requirement 1
			2.3.2 Requirement 2
			1.3.3 Requirement 3
		8.2.4	Formal description of timing constraints in ECU View 139
			2.4.1 Requirement 4
		8.2.5	Formal description of timing constraints in SW-C View 143
	0.0		2.5.1 Requirement 5
	8.3		9 9 9
		8.3.1 8.3.2	External Event of a Sensor accessed via S/R
		8.3.3	External Event of a Sensor accessed via C/S
		8.3.4	External Event of a Sensor accessed via C/S
		8.3.5	Considering hardware I/O latency of EventChains at VFB-level 146
			3.5.1 Input latency
			5.5.2 Output latency
		8.3.6	Constraining Input or Output Latency
Α	Histo		nstraints and Specification Items 147
	A.1	_	aint History of this Document related to AUTOSAR R4.0.1 147
		A.1.1	Changed Constraints in R4.0.1
		A.1.2	Added Constraints in R4.0.1
		A.1.3	Deleted Constraints in R4.0.1
	A.2		aint History of this Document related to AUTOSAR R4.0.2 148
		A.2.1	Changed Constraints in R4.0.2
		A.2.2	Added Constraints in R4.0.2





A.2.3 Deleted Constraints in R4.0.2
A.3.1 Changed Constraints in R4.0.3
A.3.2 Added Constraints in R4.0.3
A.3.3 Deleted Constraints in R 4.0.3
A.4 Constraint History of this Document related to AUTOSAR R4.1.1 149
A.4.1 Changed Constraints in R4.1.1
A.4.2 Added Constraints in R4.1.1
A.4.3 Deleted Constraints in R4.1.1
A.5 Constraint History of this Document related to AUTOSAR R4.1.2 150
A.5.1 Changed Constraints in R4.1.2
A.5.2 Added Constraints in R4.1.2
A.5.3 Deleted Constraints in R4.1.2
A.6 Constraint History of this Document related to AUTOSAR R4.1.3 151
A.6.1 Changed Constraints in R4.1.3
A.6.2 Added Constraints in R4.1.3
A.6.3 Deleted Constraints in R4.1.3
A.7 Constraint History of this Document related to AUTOSAR R4.2.1 151
A.7.1 Changed Constraints in R4.2.1
A.7.2 Added Constraints in R4.2.1
A.7.3 Deleted Constraints in R4.2.1
A.8 Constraint History of this Document related to AUTOSAR R4.2.2 152
A.8.1 Changed Constraints in R4.2.2
A.8.2 Added Constraints in R4.2.2
A.8.3 Deleted Constraints in R4.2.2
A.9 Added Specification Items in R4.0.3
A.10 Added Specification Items in R4.1.1
A.11 Added Specification Items in R4.1.2
A.12 Added Specification Items in R4.1.3
A.13 Added Specification Items in R4.2.1
A.14 Changed Specification Items in R4.2.1
A.15 Added Specification Items in R4.2.2
A.16 Changed Specification Items in R4.2.2
Mentioned Class Tables 155
Splitable Elements in the Scope of this Document 194
Variation Points in the Scope of this Document 195

В

С

D



Bibliography

- [1] Methodology
 AUTOSAR TR Methodology
- [2] Requirements on Timing Extensions AUTOSAR RS TimingExtensions
- [3] Virtual Functional Bus AUTOSAR EXP VFB
- [4] Standardization Template
 AUTOSAR TPS StandardizationTemplate
- [5] Generic Structure Template
 AUTOSAR_TPS_GenericStructureTemplate
- [6] Basic Software Module Description Template AUTOSAR TPS BSWModuleDescriptionTemplate

1 Introduction

1.1 Overview

This AUTOSAR document contains the specification of the AUTOSAR Timing Extensions. Actually, it has been created as a supplement to the formal definition of the Timing Extensions by means of the AUTOSAR meta-model. In other words, this document in addition to the formal definition provides introductory description and rationale for the part of the AUTOSAR meta-model relevant for the creation of timing models.

1.2 Abbreviations

Abbreviation	Meaning	
BSW	Basic Software	
CAN	Controller Area Network	
CC	Communication Controller	
COM	Communication module	
ECU	Electrical Control Unit	
ID	Identifier	
IPDU	Interaction Layer Protocol Data Unit	
I/O	Input/Output	
ISIGNAL	Interaction Layer Signal	
LPDU	Data Link Layer Protocol Data Unit	
PDU	Protocol Data Unit	
RTE	Runtime Environment	
SW-C Software Component		



TD	Timing Description	
UML	Unified Modeling Language	
VFB	Virtual Functional Bus	

1.3 Glossary of terms

Term	Definition	
Jitter	For a periodically occurring timing event, the jitter is defined as the maximum variation of its period with respect to a predefined standard period.	
Latency	The latency of a timing event chain describes the time duration between the occurrence of the stimulus and the occurrence of the corresponding response.	
Maximum interarrival time	Describes the maximum time interval between two consecutive event occurrences. In the more general case, this attribute is an array of the maximum latency between two, three, four, event occurrences.	
Minimum interarrival time	Describes the minimum time interval between two consecutive event occurrences. In the more general case, this attribute is an array of the minimum latency between two, three, four, event occurrences.	
Period	Describes the expected time interval between two consecutive event occurrences, neglecting variation (jitter).	
Response	End point of an event chain.	
Synchronization	Synchronization focuses on the occurrence of different timing events. Synchronization of timing events means that they must occur simultaneously within a certain tolerance interval.	
Stimulus	Start point of an event chain.	
Timing analysis	Timing analysis is a method of determining the timing behavior of the system. This includes consideration of timing relevant system behavior like task preemptions, interrupt handling, resource blocking, etc.	
Timing constraint	A timing constraint may have two different interpretation alternatives. On the one hand, it may define a restriction for the timing behavior of the system (e.g. minimum (maximum) latency bound for a certain event sequence). In this case, a timing constraint is a requirement which the system must fulfill. On the other hand, a timing constraint may define a guarantee for the timing behavior of the system. In this case, the system developer guarantees that the system has a certain behavior with respect to timing (e.g. a timing event is guaranteed to occur periodically with a certain maximum variation).	
Timing description	The timing description of a system, subsystem, software component or BSW consists of events and event chains. The former one describes events that can be observed and the latter one describe their causal relationship.	
Timing event	A timing event is the abstract representation of a specific system behavior – that can be observed at runtime – in the AUTOSAR specification. Timing events are used to define the scope for timing constraints. Depending on the specific scope, the view on the system, and the level of abstraction different types of events are defined.	



Timing event chain	A timing event chain describes the causal order for a set of functionally dependent timing events. Each event chain has a well defined stimulus and response, which describe its start and end point. Furthermore, it can be hierarchically decomposed into an arbitrary number of sub-chains, so called "event chain segments".	
Timing event occurrence	A timing event is said to "occur", when a specific system behavior – represented by the timing event – can be observed. For example the timing event "RunnableEntityStarted" occurs, when the associated RunnableEntity has entered the state "started" after its activation.	
Timing guarantee	see glossary entry for "Timing constraint".	
Timing information	Superordinate concept for timing properties and timing constraints.	
Timing path	A timing path defines a sequence of communication or computation activities of the system, whose timing behavior shall be examined. Timing paths can be expressed by event chains.	
Timing property	A timing property defines the state or value of a timing relevant aspect within the system (e.g. the execution time bounds for a RunnableEntity or the priority of a task). Thus, a property does not represent a constraint for the system, but a somehow gathered (e.g. measured, estimated or determined) or defined attribute of the system.	
Timing requirement	A timing requirement defines a restriction on timing that must be fulfilled to ensure proper operation of the system. Timing requirements can be expressed by using timing constraints.	
Timing validation	Timing validation compares the result of timing analysis (see glossary entry for timing analysis) with the expected behavior defined by timing constraints (see glossary entry for timing constraints).	



1.4 Template implications

All AUTOSAR templates use a common meta-model which is defined by using the Unified Modeling Language (UML). For the integration of timing information into the AUTOSAR meta-model we have to decide between two viable alternatives: on the one hand the extension of existing templates, and on the other hand the definition of a separate timing template.

Several discussions lead to the decision to explicitly NOT defining a separate timing template. The most valuable advantage of such an approach is addressed by the idea behind the current template composition. They are highly adapted to the AUTOSAR methodology (see [1] for more details about the AUTOSAR methodology) and the several templates handle specific process steps in the methodology. Since it is not our scope to provide a proposal for a timing augmented development process, it is as well not in our scope to define an isolated, new process step (e.g. a timing process step). For this reason, our project result has an impact to some of the existing templates. Therefore, the augmentation of the existing templates instead of the creation of a new timing template reduces dependencies in the meta-model among templates.

1.5 Scope

The primary purpose of the timing extensions is to support constructing embedded real-time systems that satisfy given timing requirements and to perform timing analysis/validations of those systems once they have build up.

The AUTOSAR Timing Extensions provide a timing model as specification basis for a contract based development process, in which the development is carried out by different organizations in different locations and time frames. The constraints entered in the early phase of the project (when corresponding solutions are not developed yet) shall be seen as extra-functional requirements agreed between the development partners. In such way the timing specification supports a top-down design methodology. However, due to the fact that a pure top-down design is not feasible in most of the cases (e.g. because of legacy code), the timing specification allows the bottom-up design methodology as well.

The resulting overall specification (AUTOSAR Model *and* Timing Extensions) shall enable the analysis of a system's timing behavior and the validation of the analysis results against timing constraints. Thus, timing properties required for the analysis must be contained in the timing augmented system model (such as the priority of a task, the activation behavior of an interrupt, the sender timing of a PDU and frame etc.). Such timing properties can be found all across AUTOSAR. For example the System Template provides means to configure and specify the timing behavior of the communication stack. Furthermore the execution time of executable entities can be specified. In addition, the overall specification must provide means to describe timing constraints. A timing constraint defines a restriction for the timing behavior of the system (e.g. bounding the maximum latency from sensor sampling to actuator access). Timing constraints



are added to the system model using the AUTOSAR Timing Extensions. Constraints, together with the result of timing analysis, are considered during the validation of a system's timing behavior, when a nominal/actual value comparison is performed.

Note: The timing specification shall enable the analysis and validation of an AUTOSAR system's timing behavior. However, the specification of analysis and validation **results** (e.g. the maximum resource load of an ECU, etc.) is not addressed in this document.

1.6 Document conventions

Technical terms (Meta Class Names) are typeset in monospaced font, e.g. FrameTriggering.

1.7 Requirements Traceability

The following table references the requirements specified in AUTOSAR RS Timing Extensions [2] and denotes how each of them are satisfied by the meta-model.

Requirement	Description	Satisfied by
[RS_TIMEX_00001]	Timing properties	[TPS_TIMEX_00001]
		[TPS_TIMEX_00002]
		[TPS_TIMEX_00003]
		[TPS_TIMEX_00004]
		[TPS_TIMEX_00005]
		[TPS_TIMEX_00006]
		[TPS_TIMEX_00007]
		[TPS_TIMEX_00008]
		[TPS_TIMEX_00010]
		[TPS_TIMEX_00011]
		[TPS_TIMEX_00012]
		[TPS_TIMEX_00013]
		[TPS_TIMEX_00014]
		[TPS_TIMEX_00015]
		[TPS_TIMEX_00016]
		[TPS_TIMEX_00017]
		[TPS_TIMEX_00018]
		[TPS_TIMEX_00019]
		[TPS_TIMEX_00020]
		[TPS_TIMEX_00021]
		[TPS_TIMEX_00022]
		[TPS_TIMEX_00023]
		[TPS_TIMEX_00024]
		[TPS_TIMEX_00025]



1	I	TIDE TIMEY COOCE
		[TPS_TIMEX_00026]
		[TPS_TIMEX_00027]
		[TPS_TIMEX_00028]
		[TPS_TIMEX_00029]
		[TPS_TIMEX_00030]
		[TPS_TIMEX_00031]
		[TPS_TIMEX_00032]
		[TPS_TIMEX_00033]
		[TPS_TIMEX_00034]
		[TPS_TIMEX_00035]
		[TPS_TIMEX_00036]
		[TPS_TIMEX_00038]
		[TPS_TIMEX_00039]
		[TPS_TIMEX_00041]
		[TPS_TIMEX_00042]
		[TPS_TIMEX_00043]
		[TPS_TIMEX_00044]
		[TPS TIMEX 00045]
		[TPS_TIMEX_00046]
		[TPS_TIMEX_00047]
		[TPS TIMEX 00048]
[RS_TIMEX_00002]	Timing constraints	[TPS_TIMEX_00003]
[110_111112X_00002]	Tilling constraints	[TPS_TIMEX_00004]
		[TPS_TIMEX_00006]
		[TPS_TIMEX_00007]
		[TPS_TIMEX_00010]
		[TPS_TIMEX_00011]
		[TPS_TIMEX_00012]
		[TPS_TIMEX_00013]
		[TPS_TIMEX_00014]
		[TPS_TIMEX_00015]
		[TPS_TIMEX_00038]
		[TPS_TIMEX_00041]
		[TPS_TIMEX_00046]
		[TPS_TIMEX_00047]
		[TPS_TIMEX_00048]
[RS_TIMEX_00003]	Optionality of timing	[TPS_TIMEX_00009]
	constraints	TTDO TIMEN ASSOCI
[RS_TIMEX_00004]	Event chains	[TPS_TIMEX_00002]
[RS_TIMEX_00005]	Structure of event chains	[TPS_TIMEX_00002]
[RS_TIMEX_00006]	Triggering behavior of event	[TPS_TIMEX_00003]
	chains	[TPS_TIMEX_00010]
		[TPS_TIMEX_00011]
		[TPS_TIMEX_00012]
		[TPS_TIMEX_00013]
		[TPS_TIMEX_00014]
[RS_TIMEX_00007]	Synchronization of event	[TPS_TIMEX_00006]
	chains	
	<u> </u>	



[RS TIMEX 00008]	Multiple asynchronous time	[TPS TIMEX 00003]
[H3_TIMEX_00008]	, ,	
	bases	[TPS_TIMEX_00006]
		[TPS_TIMEX_00010]
		[TPS_TIMEX_00011]
		[TPS_TIMEX_00012]
		[TPS_TIMEX_00013]
		[TPS_TIMEX_00014]
		[TPS_TIMEX_00015]
[RS_TIMEX_00009]	Loop-back signal flow in	[TPS_TIMEX_00002]
	sender-receiver	[TPS_TIMEX_00005]
	communication	
[RS TIMEX 00010]	Validity of timing properties	[TPS TIMEX 00037]
·	and constraints	· ·
[RS_TIMEX_00012]	Sensor/actuator delay	[TPS_TIMEX_00004]
[RS TIMEX 00013]	Specification of timing	[TPS TIMEX 00008]
. – – .	resources for	,
	software-component	
	description	
[RS TIMEX 00014]	Sequence of execution of	[TPS TIMEX 00007]
[110_11112120011]	runnable entities	[TPS TIMEX 00038]
	Tarmadia amada	[TPS TIMEX 00041]
		[TPS TIMEX 00046]
		[TPS TIMEX 00047]
		[TPS TIMEX 00048]
[RS TIMEX 00015]	Timing-requirements of	[TPS TIMEX 00004]
[110_111112X_00013]	SW-Components	[TPS TIMEX 00010]
[RS TIMEX 00016]	Some elements of the Timing	[TPS TIMEX 00040]
[H3_1IMLX_00010]	Extensions shall be	[11 3_111012X_00040]
	blueprintable	
[RS TIMEX 00017]	Synchronization constraint on	[TPS TIMEX 00006]
[L9_11MEV_00017]	events	[1F3_11VIEA_00000]
IDC TIMEY 000401		[TPS TIMEX 00039]
[RS_TIMEX_00018]	Predefined events for port	[1F9_1 V EV_00098]
IDO TIMEY 000401	interfaces at VFB level	ITDC TIMEY 000001
[RS_TIMEX_00019]	AUTOSAR Methodology	[TPS_TIMEX_00020]
	support	[TPS_TIMEX_00042]
		[TPS_TIMEX_00043]
		[TPS_TIMEX_00044]
		[TPS_TIMEX_00045]
[RS_TIMEX_00020]	Support for events indicating	[TPS_TIMEX_00020]
	variable accesses	[TPS_TIMEX_00044]

Table 1.1: RequirementsTracing

2 Timing Extensions Overview

The AUTOSAR Timing Extensions provide some basic means to describe and specify timing information: Timing descriptions, expressed by *events* and *event chains*, and *timing constraints* that are imposed on these events and event chains. Both means, timing descriptions and timing constraints, are organized in *timing views* for specific purposes. By and large, the purpose of the Timing Extensions are two folded: The first purpose is to provide timing requirements that guide the construction of systems



which eventually shall satisfy those timing requirements. And the second purpose is to provide sufficient timing information to analyze and validate the temporal behavior of a system.

Events. Events refer to locations in systems at which the *occurrences* of events are observed. The AUTOSAR Specification of Timing Extensions defines a set of predefined event types for such *observable locations*. Those event types are used in different *timing views* and each of these timing views correspond to one of the AUTOSAR views: *VFB Timing* and Virtual Function Bus VFB View; *SW-C Timing* and Software Component View; *System Timing* and System View; *BSW Module Timing* and Basic Software Module View; as well as *ECU Timing* and ECU View.

In particular, one uses these events to specify the reading and writing of data from and to specific ports of software components, calling of services and receiving their responses (VFB, SW-C, System and ECU Timing); sending and receiving data via networks and through communication stacks (System and ECU Timing); activating, starting and terminating executable entities (SW-C Timing and Basic SW Module Timing); and last but not least calling basic software services and receiving their responses (ECU Timing and Basic SW Module Timing).

Event Chains. Event chains specify a causal relationship between events and their temporal occurrences. The notion of event chain enables one to specify the relationship between two events, for example when an event A occurs then the event B occurs, or in other words, the event B occurs if and only if the event A occurred before. In the context of an event chain the event A plays the role of the *stimulus* and the event B plays the role of the *response*. Event chains can be composed of existing event chains and decomposed into further event chains — in both cases the event chains play the role of *event chain segments*.

Timing Constraints imposed on Events. The notion of Event is used to describe that in a system specific events occur and also at which locations in this system the occurrences are observed. In addition, an Event Triggering Constraint imposes a constraint on the occurrences of an event, which means that the event triggering constraint specifies the way an event occurs in the temporal space. The AUTOSAR Specification of Timing Extensions provides means to specify periodic and sporadic event occurrences, as well as event occurrences that follow a specific pattern (burst, concrete, and arbitrary pattern).

Timing Constraints imposed on Event Chains. Like event triggering constraints impose timing constraints on events and their occurrences; the latency and synchronization timing constraints impose constraints on event chains. In the former case, a constraint is used to specify a reaction and age, for example if a stimulus event occurs then the corresponding response event shall occur not later than a given amount of time. And in the latter case, the constraint is used to specify that stimuli or response events must occur within a given time interval (tolerance) to be said to occur simultaneous and synchronous respectively.

Additional Timing Constraints. In addition to the timing constraints that are imposed on events and event chains, the AUTOSAR Timing Extensions provide timing con-



straints which are imposed on *Executable Entities*, namely the *Execution Order Constraint* and *Execution Time Constraint*.

The concepts sketches so far are represented by the metamodel shown in Figure 2.1. And every part is described in the subsequent chapters and sections.

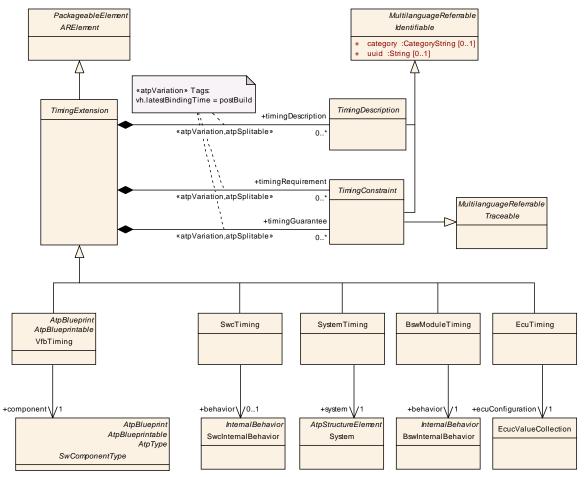


Figure 2.1: Overview of the Timing Extensions including Timing Descriptions, Timing Constraints, and Timing Views.

Class	TimingExtension (TimingExtension (abstract)				
Package	M2::AUTOSARTem	M2::AUTOSARTemplates::CommonStructure::Timing				
Note	The abstract parent	t class	of the di	fferent template specific timing extensions.		
	Depending on the specific timing extension (VfbTiming, SwcTiming, SystemTiming, BswModuleTiming, EcuTiming) the timing descriptions and timing constraints, that can be used to specify the timing behavior, are restricted.					
Base	ARElement, ARObject, Collectable Element, Identifiable, Multilanguage					
	Referrable, Packageable Element, Referrable					
Attribute	Datatype	Mul.	Kind	Note		



Attribute	Datatype	Mul.	Kind	Note
timingDesc ription	TimingDescripti on	*	aggr	The timing descriptions that belong to a specific timing specification. In order to support different timing description variants within a timing specification, the
				aggregation is marked with the stereotype "atpVariation". Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel
				vh.latestBindingTime=postBuild
timingGuar antee	TimingConstrain t	*	aggr	The timing constraints that belong to a specific timing specification in the role of a timing guarantee.
				In order to support different timing constraint variants within a timing specification, the aggregation is marked with the stereotype "atpVariation".
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=postBuild
timingReq uirement	TimingConstrain t	*	aggr	The timing constraints that belong to a specific timing specification in the role of a timing requirement.
				In order to support different timing constraint variants within a timing specification, the aggregation is marked with the stereotype "atpVariation".
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=postBuild

Table 2.1: TimingExtension

Class	TimingDescription (abstract)				
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::Timing::TimingDescription	
Note	The abstract parent class of the model elements that are used to define the scope of a timing constraint. Tags: xml.sequenceOffset=10				
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable				
Attribute	Datatype Mul. Kind Note				
_	_	_	_	_	

Table 2.2: TimingDescription



Class	TimingConstraint (abstract)						
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::Timing::TimingConstraint			
Note	The abstract parent class of different timing constraints supported by the Timing extension.						
	A concrete timing constraint is used to bound the timing behavior of the model elements in its scope.						
	Tags: xml.sequenceOffset=20						
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable,Traceable						
Attribute	Datatype	Datatype Mul. Kind Note					
_	_						

Table 2.3: TimingConstraint

3 Timing Views

The AUTOSAR Timing Extensions define five distinct timing views. Each of these views is associated with one of the AUTOSAR views, namely Virtual Function Bus-, Software Component-, System-, Basic Software Module- and ECU view. Figure 2.1 provides an overview of the AUTOSAR Timing Extensions and its basic elements including the timing views.

This chapter outlines the timing views that are used in the different phases of the AUTOSAR methodology in order to create appropriate timing models.

3.1 Timing in Different Phases of the AUTOSAR Methodology

The AUTOSAR methodology (see [1] for a general introduction) provides several well-defined process steps, and furthermore artifacts that are provided or needed by these steps. Figure 3.1 provides a simplified view of the AUTOSAR methodology, focusing on the process phases which are of interest for the use of the timing extensions. These represented steps and artifacts are grouped by boundaries in five views:

VfbTiming This view deals with timing information related to the interaction of SwComponentTypes at VFB level.

SwcTiming This view deals with timing information related to the SwcInternalBehavior of AtomicSwComponentTypes.

SystemTiming This view deals with timing information related to a System, utilizing information about topology, software deployment, and signal mapping.

BswModuleTiming This view deals with timing information related to the BswInternalBehavior of a single BswModuleDescription.



EcuTiming This view deals with timing information related to the EcucValueCollection, particularly with the EcucModuleConfigurationValues.

For each of these views a special focus of timing specification can be applied, depending on the availability of necessary information, the role a certain artifact is playing and the development phase, which is associated with the view.

The following sections give a detailed overview of every timing view and their relevance for timing specification. For each view it is explained what kind of timing description and timing constraints can be applied and to which AUTOSAR specification documents these can be attached to.

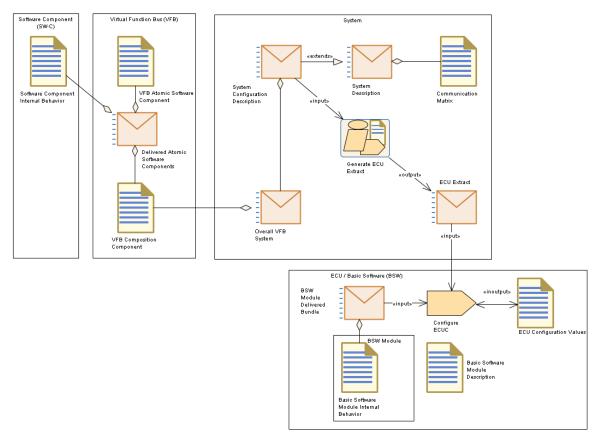


Figure 3.1: Overview of the AUTOSAR methodology and timing specification

3.2 VfbTiming

AUTOSAR defines the *Virtual Functional Bus* [3] as a composition of SwComponent-Prototypes at a logical level, regardless of their physical distribution. On this logical level a special view can be applied for timing specification. This section describes what kind of timing specification can be applied at VFB level for a system or sub-system. Typically, end-to-end timing constraints, including (physical) sensors and actuators, shall be captured in this view, allowing an early formalization of those constraints.



Neglecting the physical distribution means that the VfbTiming view does not deal with the question, in which system context the prototype of a CompositionSwComponentType shall be implemented. An additional restriction of the VfbTiming view raises due to the black box treatment of software components. The SwcInternal-Behavior of AtomicSwComponentTypes is not considered. For these mentioned restrictions (irrelevance of the physical distribution, black box view), TimingDescriptions at VFB level should only refer to SwComponentTypes, PortPrototypes and their connections, but not the InternalBehavior.

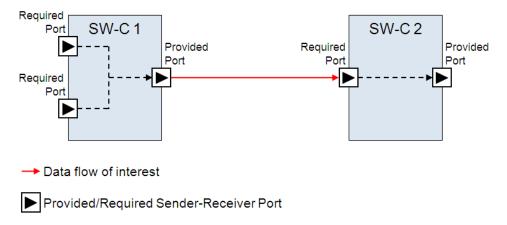


Figure 3.2: Example: Data flow in the scope of the VfbTiming view

The VfbTiming view is applicable for different system granularities. The smallest granularity is the investigation of a single SwComponentType without any contextual embedding. Here, a timing description can only refer to relations between a component's RPortPrototypes and the same component's PPortPrototypes.

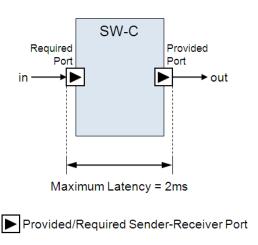


Figure 3.3: Example: Latency requirement

As an example, consider the timing constraint illustrated in Figure 3.3: "From the point in time, where the value *in* is received by the Software Component named *SW-C*, until the point in time, where the newly calculated value *out* is sent, there shall be a



maximum latency of 2 ms". This would be attached to the timing description that refers to an AtomicSwComponentType *SW-C* (see Figure 3.1).

In case of a CompositionSwComponentType that itself contains other SwComponent Prototypes, the timing interrelation between different components, e.g. from one component's PPortPrototype to another component's RPortPrototype, could be of interest.

[TPS_TIMEX_00032] Purpose of VfbTiming $\[$ The element VfbTiming aggregates all timing information, timing descriptions and timing constraints, that is related to the VFB View. $\[$ $\[$ $\[$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$

Class	VfbTiming				
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::Timing	
Note	A model element	used to	define ti	ming descriptions and constraints at VFB level.	
	TimingDescriptions aggregated by VfbTiming are restricted to event chains referring to events which are derived from the class TDEventVfb. Tags: atp.recommendedPackage=TimingExtensions				
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, Collectable Element, Identifiable, Multilanguage Referrable, Package able Element, Referrable, Timing				
	Extension	Extension			
Attribute	Datatype	Datatype Mul. Kind Note			
component	SwComponentT ype	1	ref	This defines the scope of a VfbTiming. All corresponding timing descriptions and constraints must be defined within this scope.	

Table 3.1: VfbTiming

3.3 SwcTiming

In contrast to the VfbTiming view, a specification engineer might especially be interested in the SwcInternalBehavior of AtomicSwComponentTypes that are represented as black boxes at VFB level. The SwcInternalBehavior specifies a component's behavioral decomposition into runnable entities, which are executed at runtime. Thus, in SwcTiming view, a timing description is attached to the SwcInternalBehavior of a SwComponentType (see Figure 3.1). It can refer to the activation, start, and termination (see section 5.2) of the execution of a RunnableEntity.



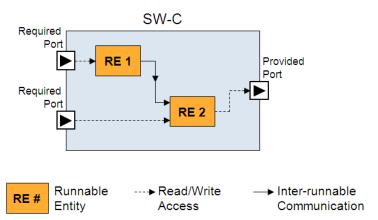


Figure 3.4: Example: Data flow in the scope of the SW-C Timing view

[TPS_TIMEX_00033] Purpose of SwcTiming $\[$ The element SwcTiming aggregates all timing information, timing descriptions and timing constraints, that is related to the Software Component View. $\]$ $\[$ $\[$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$ $\]$ $\[$ $\[$ $\]$ $\[$

Class	SwcTiming					
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::Timing		
Note	The SwcTiming is	used to	describ	e the timing of an atomic software component.		
	TimingDescriptions aggregated by SwcTiming are restricted to event chains referring to events which are derived from the classes TDEventVfb and TDEventSwcInternalBehavior. Tags: atp.recommendedPackage=TimingExtensions					
Base		ARElement, ARObject, Collectable Element, Identifiable, Multilanguage Referrable, Packageable Element, Referrable, Timing Extension				
Attribute	Datatype	Datatype Mul. Kind Note				
behavior	SwcInternalBeh avior O1 ref This defines the scope of a SwcTiming. All corresponding timing descriptions and constraints must be defined within this scope.					
				Note! The reason for the cardinality of 01 is to ensure backward compatibility.		


Table 3.2: SwcTiming

3.4 SystemTiming

At system level a special prototype of a CompositionSwComponentType—the RootSwCompositionPrototype—is instantiated. This prototype, the chosen hardware topology and other artifacts are used as input to the task dealing with the deployment of software components onto ECUs in order to configure the system. The main configuration result is the mapping of software components to ECUs and in further steps the resulting communication matrix is created. This information is aggregated in the System description (see Figure 3.1).



The SystemTiming view is used to provide timing informations at system level. As an extension, it can be attached to a System. As the System description aggregates all the information about SwComponentTypes and their corresponding SwcInternalBehavior, it is possible to use the same concepts that are available in the views VfbTiming and SwcTiming also in this timing view. The difference is the specific system context that defines the validity of timing informations at system level. Without knowledge of the mapping of software components to a target hardware respectively ECU, only a generic platform independent description can be provided.

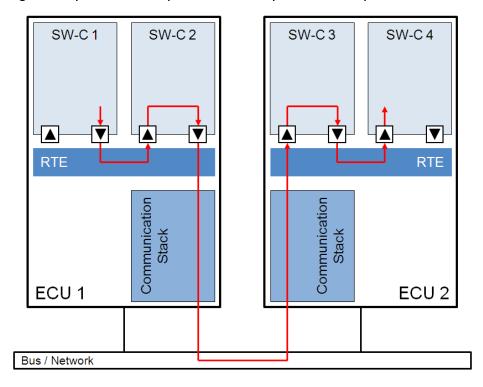

→ Data flow of interest

Figure 3.5: Example: Data flow in the scope of System Timing view

In addition, a timing description in system view refers to the concrete communication of software components that only was represented as abstract connectors in VfbTiming view. Due to the software mapping, now communication is either local communication over the RTE (both software components on same ECU) or remote communication over the RTE, through the communication stack of the BSW and a communication bus. A system-specific timing description thus can refer to signals (RTE), I-PDUs (COM) and frames (communication driver and bus).

[TPS_TIMEX_00034] Purpose of SystemTiming The element SystemTiming aggregates all timing information, timing descriptions and timing constraints, that is related to the System View. \(\int(RS_TIMEX_00001)\)



Class	SystemTiming			
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::Timing
Note	A model element used to refine timing descriptions and constraints (from a VfbTiming) at System level, utilizing information about topology, software deployment, and signal mapping described in the System Template.			
	TimingDescriptions aggregated by SystemTiming are restricted to events which are derived from the class TDEventVfb, TDEventSwcInternalBehavior and TDEventCom. Tags: atp.recommendedPackage=TimingExtensions			
Base	ARElement, ARObject, Collectable Element, Identifiable, Multilanguage Referrable, Packageable Element, Referrable, Timing Extension			
Attribute	Datatype Mul. Kind Note			
system	System	1	ref	This defines the scope of a SystemTiming. All corresponding timing descriptions and constraints must be defined within this scope.

Table 3.3: SystemTiming

3.5 BswModuleTiming

According to Figure 3.1, a BswModuleDescription is generated for each BSW module as part of the ECU configuration phase. For every module its internals, the BswInternalBehavior, must be defined, i.e. structuring any BswModuleEntity. Similar to the timing view on the SwcInternalBehavior of an AtomicSwComponentType as described in section 3.3, the BSW module timing view focuses on the activation, start and end of the execution of any BswModuleEntity. The timing description for each module can be attached to the BswModuleDescription.

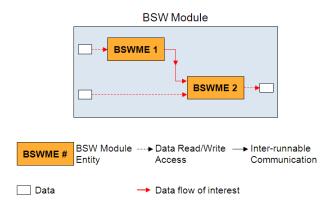


Figure 3.6: Example: Data flowin scope of BSW Module Timing view

[TPS_TIMEX_00035] Purpose of BswModuleTiming [The element BswModule-Timing aggregates all timing information, timing descriptions and timing constraints, that is related to the Basic Software Module View. | (RS_TIMEX_00001)



Class	BswModuleTimir	ng			
Package	M2::AUTOSARTer	M2::AUTOSARTemplates::CommonStructure::Timing			
Note	A model element used to define timing descriptions and constraints for the BswInternalBehavior of one BSW Module. Thereby, for each BswInternalBehavior a separate timing can be specified.				
	A constraint defined at this level holds true for all Implementations of that BswInternalBehavior.				
	TimingDescriptions aggregated by BswModuleTiming are restricted to event chains referring to events which are derived from the class TDEventBswInternalBehavior. Tags: atp.recommendedPackage=TimingExtensions				
Base	ARElement, ARObject, Collectable Element, Identifiable, Multilanguage Referrable, Package able Element, Referrable, Timing Extension				
Attribute	Datatype	Mul.	Kind	Note	
behavior	BswInternalBeh avior	1	ref	This defines the scope of a BswModuleTiming. All corresponding timing descriptions and constraints must be defined within this scope.	

Table 3.4: BswModuleTiming

3.6 EcuTiming

A result of the ECU configuration phase is the complete EcucValueCollection representing the ECU's configuration description (see Figure 3.1). During ECU configuration, this artifact is filled amongst others with ...

- ... the ECU Extract of System Configuration, where the needed part of the overall system description for the respective ECU is extracted.
- ... references to information about all BSW modules present on the ECU. Such BSW modules are described by BswModuleDescriptions, providing for instance information about the interfaces that the modules offer or require.

... check this list and validate against current state of AUTOSAR methodology.



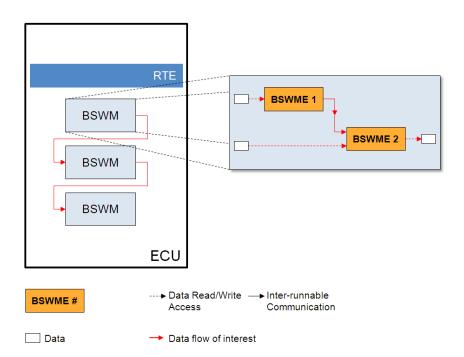


Figure 3.7: An example of data flow, whose timing behavior is in scope of ECU view

In this view, timing can reference all the ECU-relevant information: The deployed software component instances, the ECU related interactions including bus communication, Basic Software, etc. In other words, the EcuTiming has the same expressivity as the System Timing view but only focusing on one specific ECU in the system's topology. In addition, the entire BSW can be considered during timing modeling, because the complete composition and internal structure of the BSW modules are known. The internals of BSW modules and the inter-relations between BS modules are of interest in this timing view. The information is attached to the EcucValueCollection.

[TPS_TIMEX_00036] Purpose of EcuTiming $\[$ The element EcuTiming aggregates all timing information, timing descriptions and timing constraints, that is related to the ECU View. $\]$ $\[$ (RS_TIMEX_00001)

Class	EcuTiming				
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::Timing	
Note	A model element used to define timing descriptions and constraints within the scope of one ECU configuration.				
	TimingDescriptions aggregated by EcuTiming are allowed to use all events derived from the class TimingDescriptionEvent. Tags: atp.recommendedPackage=TimingExtensions				
Base	ARElement, ARObject, Collectable Element, Identifiable, Multilanguage Referrable, Packageable Element, Referrable, Timing Extension				
Attribute	Datatype Mul. Kind Note				
ecuConfig uration	EcucValueColle ction	1	ref	This defines the scope of an EcuTiming. All corresponding timing descriptions and constraints must be defined within this scope.	

Table 3.5: EcuTiming



4 Timing Extensions Fundamentals

This section explains the fundamentals that the timing extensions, described in the following sections, are based upon.

4.1 Formal Specification of Timing Behavior

Compared to the specification of a system's functional behavior, the specification of its timing behavior requires additional information to be captured. Not only the eventual occurrence of events but also their exact timing or the concurrency of various events become important. Therefore, in the specification of timing extensions for AUTOSAR, the *event* is the basic entity. This event is used to refer to an observable behavior within a system (e.g. the activation of a RunnableEntity, the transmission of a frame etc.) at a certain point in time.

Having to deal with different abstraction levels and views (see chapter 3), and in order to avoid semantic confusion with existing concepts, a new abstract type <code>TimingDescriptionEvent</code> (see section 5) is introduced as a formal basis for the timing extensions. Depending on the model entity and the associated observable behavior, specific timing events are defined and linked to the different views.

For the analysis of a system's timing behavior usually not only single events but also the correlation of different events is of fundamental importance. To relate timing events to each other, a further concept called <code>TimingDescriptionEventChain</code> (see section 6) is introduced. Hereby, it is important to note that for the events referred to within an event chain a functional dependency is implicitly assumed. This means that an event of a chain somehow causes subsequent chain events. An example for an end-to-end event chain with bus communication is depicted in Figure 3.5 in chapter 3. This event chain describes the path from software component instance "SWC1" to software component instance "SWC3".

Based on events and event chains, it is possible to express various specific timing constraints derived from the abstract type <code>TimingConstraint</code>. These timing constraints specify the expected timing behavior. As timing constraints shall be valid independently from implementation details, they are also expressed on a abstract level by referencing the above introduced formal basis of <code>TimingDescriptionEvents</code> and <code>TimingDescriptionEvents</code> and <code>TimingDescriptionEvents</code> and <code>TimingDescriptionEventChains</code>.

Thus, by means of events, event chains and timing constraints defined on top of these, a separate central timing specification can be provided, decoupling the expected timing behavior from the actually implemented behavior. This approach supports timing contracts for AUTOSAR systems in a top-down as well as bottom-up approach.

[TPS_TIMEX_00009] Optional use of timing extensions [The elements TimingExtension, TimingDescription, and TimingConstraint of the timing extensions are derived from the element ARElement. This enables one to deliver tim-



ing extensions in a separate document. In addition, there are no external references from any template that point to timing extensions elements. | (RS TIMEX 00003)

4.2 Timing Extensions and Blueprints

[TPS_TIMEX_00040] Blueprinting VfbTiming [VfbTiming can be blueprinted. | (RS_TIMEX_00016)

The primary purpose of blueprinting VfbTiming is to annotate Application Interfaces and attach timing constraints, like age- and periodic event triggering constraints, to events of type TDEventVfb which reference port prototype blueprints. The concept of Blueprints and its details are described in [4].

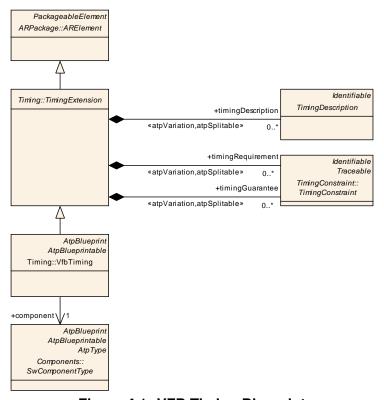


Figure 4.1: VFB Timing Blueprint



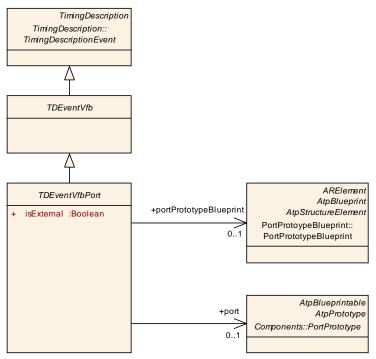


Figure 4.2: TDEventVfb Blueprint

[constr_4508] TDEventVfb shall reference PortPrototypeBlueprint only in Blueprints [An event type TDEventVfb only shall reference PortPrototype-Blueprint in blueprints. | ()

[constr_4509] Only VfbTiming shall be a Blueprint \lceil Only the VfbTiming is blueprintable. \rfloor ()

4.3 Traceability of Constraints

[TPS_TIMEX_00037] TimingConstraint is a Traceable | The element Timing-Constraint and all of its specializations, commonly called timing constraints, are traceable. | (RS_TIMEX_00010)

The support for traceability [4] enables one to specify for example a relationship between an RTE event activating a runnable entity and a given timing constraint. A system integrator has chosen the RTE event <code>TimingEvent</code> with a period of 20ms, because of a given timing requirement respectively constraint <code>PeriodicEventTriggering</code> requiring the periodic activation of a runnable entity every 20ms. In this case, a trace from the RTE event's document section to the corresponding timing constraint can be set. In addition this capability ensures validity between constraints and properties.



4.4 Specifying Time Sets

Sometimes one likes to specify that there are several alternatives with regard to timing requirements. For example, quite often it is reasonable to specify that a runnable entity shall be periodically activated either at 1ms, 2ms, 5ms, 8ms, or 10ms. In other words, it is perfectly fine to decide that the runnable entity is activated every 8ms. Indeed, it is allowed to activate the runnable entity either at 1ms, 2ms, 5ms, 8ms, or 10ms. Hence, there should be a means to specify such time sets which contain all allowed timings, like in case of activating a runnable entity at {1, 2, 5, 8, 10} ms.

For the purpose of specifying time sets the timing extensions utilize the "Variant Handling" capabilities specified and described in [5]. In the following sub-section an example is given describing how to specify time sets with the mentioned capabilities.

4.4.1 Example

As shown in Figure 4.3 a software component called "PlainVanillaSwc" consists of one runnable entity named "RunnableEntityOne". This runnable entity calculates the value of the variable "DataElementTwo" based on the value of the variable "DataElementOne". The latter variable is received via the required port called "rPortOne" and the former one is written to the provided port named "pPortOne". In the example three alternatives for activating the runnable entity are specified and shown in the table on the right hand side in Figure 4.3.

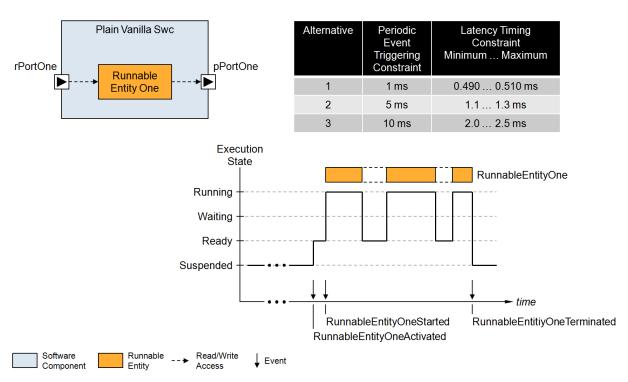


Figure 4.3: Example of a set of timings specified for a Runnable Entity.



In listing 4.1 the part of the AUTOSAR XML is given representing the software component description. It describes the software component including ports, interfaces, data elements, and its internal behavior respectively the runnable entity and the data accesses carried out by the runnable entity; as shown in Figure 4.3.

Listing 4.1: Software component description of the software component "PlainVanillaSwc"

```
<AR-PACKAGE>
 <SHORT-NAME>TimeSetExample
  <ELEMENTS>
    <APPLICATION-SW-COMPONENT-TYPE>
      <SHORT-NAME>PlainVanillaSwc</SHORT-NAME>
      <SHORT-NAME-PATTERN />
      <PORTS>
       <R-PORT-PROTOTYPE>
         <SHORT-NAME>rPortOne
         <REQUIRED-INTERFACE-TREF DEST="SENDER-RECEIVER-INTERFACE">/
             TimeSetExample/srInterfaceOne</REQUIRED-INTERFACE-TREF>
       </R-PORT-PROTOTYPE>
       <P-PORT-PROTOTYPE>
         <SHORT-NAME>pPortOne
         <PROVIDED-INTERFACE-TREF DEST="SENDER-RECEIVER-INTERFACE">/
             TimeSetExample/srInterfaceTwo</PROVIDED-INTERFACE-TREF>
       </P-PORT-PROTOTYPE>
      </PORTS>
      <INTERNAL-BEHAVIORS>
       <SWC-INTERNAL-BEHAVIOR>
         <SHORT-NAME>InternalBehaviorPlainVanillaSwc/SHORT-NAME>
          <RUNNABLES>
            <RUNNABLE-ENTITY>
             <SHORT-NAME>RunnableEntityOne
             <DATA-READ-ACCESSS>
                <VARIABLE-ACCESS>
                 <SHORT-NAME>draDataElementOne/SHORT-NAME>
               </VARIABLE-ACCESS>
             </DATA-READ-ACCESSS>
              <DATA-WRITE-ACCESSS>
                <VARIABLE-ACCESS>
                 <SHORT-NAME>dwaDataElementTwo</SHORT-NAME>
               </VARIABLE-ACCESS>
             </DATA-WRITE-ACCESSS>
           </RUNNABLE-ENTITY>
         </RUNNABLES>
       </SWC-INTERNAL-BEHAVIOR>
      </INTERNAL-BEHAVIORS>
    </APPLICATION-SW-COMPONENT-TYPE>
    <SENDER-RECEIVER-INTERFACE>
      <SHORT-NAME>srInterfaceOne</SHORT-NAME>
      <DATA-ELEMENTS>
        <VARIABLE-DATA-PROTOTYPE>
          <SHORT-NAME>dataElementOne</SHORT-NAME>
        </VARIABLE-DATA-PROTOTYPE>
      </DATA-ELEMENTS>
    </SENDER-RECEIVER-INTERFACE>
    <SENDER-RECEIVER-INTERFACE>
```



The second part of the AUTOSAR XML, shown in listing 4.2, represents the software component timing called "swctPlainVanillaSwc". It specifies the timing descriptions and timing requirements. The timing descriptions describe the events that are related to the runnable entity of the software component "PlainVanillaSwc", in particular the activation event "RunnableEntityOneActivated", start event "RunnableEntityOneStarted" and termination event "RunnableEntityOneTerminated" of the runnable entity "RunnableEntityOne". In addition, a timing description event chain "CalculateValueOfDataElementTwo" is specified that describes the causal relationship between the events "RunnableEntityOneActivated" and "RunnableEntityOneTerminated".

The timing requirements specify three variants of the periodic event triggering constraint named "PeriodicActivationRunnableEntityOne" describing the *periodic* activation of the runnable entity "RunnableEntityOne". The following alternatives are specified: 1ms, 5ms and 10ms. In addition, three alternatives for latency timing constraints, named "ResponseTimeForCalculatingDataElementTwo", are specified that are imposed on the response time of the runnable entity. Technically, the scope of this timing constraint is the event chain "CalculateValueOfDataElementTwo" mentioned before.

Listing 4.2: Software component timing of the software component "PlainVanillaSwc"

```
<AR-PACKAGE>
 <SHORT-NAME>TimingExtensions
 <ELEMENTS>
   <SWC-TIMING>
     <SHORT-NAME>swctPlainVanillaSwc</short-NAME>
     <TIMING-DESCRIPTIONS>
       <TD-EVENT-SWC-INTERNAL-BEHAVIOR>
         <SHORT-NAME>RunnableEntityOneActivated
         <RUNNABLE-REF DEST="RUNNABLE-ENTITY">/TimeSetExample/
            PlainVanillaSwc/InternalBehaviorPlainVanillaSwc/
            RunnableEntityOne</RUNNABLE-REF>
         <TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>RUNNABLE-ENTITY-
            ACTIVATED</TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>
       </TD-EVENT-SWC-INTERNAL-BEHAVIOR>
       <TD-EVENT-SWC-INTERNAL-BEHAVIOR>
         <SHORT-NAME>RunnableEntityOneTerminated
         <RUNNABLE-REF DEST="RUNNABLE-ENTITY">/TimeSetExample/
            PlainVanillaSwc/InternalBehaviorPlainVanillaSwc/
            RunnableEntityOne</RUNNABLE-REF>
         <TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>RUNNABLE-ENTITY-
            TERMINATED</TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>
       </TD-EVENT-SWC-INTERNAL-BEHAVIOR>
```



```
<TIMING-DESCRIPTION-EVENT-CHAIN>
    <SHORT-NAME>CalculateValueOfDataElementTwo/SHORT-NAME>
    <STIMULUS-REF DEST="TD-EVENT-SWC-INTERNAL-BEHAVIOR">/
       TimingExtensions/swctPlainVanillaSwc/
       RunnableEntityOneActivated</STIMULUS-REF>
    <RESPONSE-REF DEST="TD-EVENT-SWC-INTERNAL-BEHAVIOR">/
       TimingExtensions/swctPlainVanillaSwc/
       RunnableEntityOneTerminated</RESPONSE-REF>
    <SEGMENT-REFS>
      <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/
         TimingExtensions/swctPlainVanillaSwc/
         CalculateValueOfDataElementTwo</SEGMENT-REF>
    </SEGMENT-REFS>
  </TIMING-DESCRIPTION-EVENT-CHAIN>
</TIMING-DESCRIPTIONS>
<TIMING-REOUIREMENTS>
 <PERIODIC-EVENT-TRIGGERING>
    <SHORT-NAME>PeriodicActivationRunnableEntityOne/SHORT-NAME>
    <VARIATION-POINT>
      <SHORT-LABEL>VpPetTiming1/SHORT-LABEL>
      <SW-SYSCOND BINDING-TIME="SYSTEM-DESIGN-TIME"> (<SYSC-REF</pre>
         DEST="SW-SYSTEMCONST">/SystemConstants/
         ScTimingRunnableEntityOne</SYSC-REF>==1) </SW-SYSCOND>
    </VARIATION-POINT>
    <EVENT-REF DEST="TD-EVENT-SWC-INTERNAL-BEHAVIOR">/
       TimingExtensions/swctPlainVanillaSwc/
       RunnableEntityOneActivated</EVENT-REF>
    <PERIOD>
      <CSE-CODE>3</CSE-CODE>
      <CSE-CODE-FACTOR>1</CSE-CODE-FACTOR>
    </PERIOD>
 </PERIODIC-EVENT-TRIGGERING>
 <PERIODIC-EVENT-TRIGGERING>
    <SHORT-NAME>PeriodicActivationRunnableEntityOne/SHORT-NAME>
    <VARIATION-POINT>
      <SHORT-LABEL>VpPetTiming2</SHORT-LABEL>
      <SW-SYSCOND BINDING-TIME="SYSTEM-DESIGN-TIME">(<SYSC-REF</pre>
         DEST="SW-SYSTEMCONST">/SystemConstants/
         ScTimingRunnableEntityOne</SYSC-REF>==2) </SW-SYSCOND>
    </VARIATION-POINT>
    <EVENT-REF DEST="TD-EVENT-SWC-INTERNAL-BEHAVIOR">/
       TimingExtensions/swctPlainVanillaSwc/
       RunnableEntityOneActivated</EVENT-REF>
    <PERIOD>
      <CSE-CODE>3</CSE-CODE>
      <CSE-CODE-FACTOR>5</CSE-CODE-FACTOR>
    </PERIOD>
 </PERIODIC-EVENT-TRIGGERING>
 <PERIODIC-EVENT-TRIGGERING>
    <SHORT-NAME>PeriodicActivationRunnableEntityOne/SHORT-NAME>
    <VARIATION-POINT>
      <SHORT-LABEL>VpPetTiming3/SHORT-LABEL>
      <SW-SYSCOND BINDING-TIME="SYSTEM-DESIGN-TIME">(<SYSC-REF</pre>
         DEST="SW-SYSTEMCONST">/SystemConstants/
         ScTimingRunnableEntityOne</SYSC-REF>==3)</SW-SYSCOND>
    </VARIATION-POINT>
```



```
<EVENT-REF DEST="TD-EVENT-SWC-INTERNAL-BEHAVIOR">/
     TimingExtensions/swctPlainVanillaSwc/
     RunnableEntityOneActivated</EVENT-REF>
  <PERIOD>
    <CSE-CODE>3</CSE-CODE>
    <CSE-CODE-FACTOR>10</CSE-CODE-FACTOR>
  </PERIOD>
</PERIODIC-EVENT-TRIGGERING>
<LATENCY-TIMING-CONSTRAINT>
  <SHORT-NAME>ResponseTimeForCalculatingDataElementTwo</SHORT-</pre>
     NAME>
  <VARIATION-POINT>
    <SHORT-LABEL>VpLtcTiming1</SHORT-LABEL>
    <SW-SYSCOND BINDING-TIME="SYSTEM-DESIGN-TIME">(<SYSC-REF</pre>
       DEST="SW-SYSTEMCONST">/SystemConstants/
       ScTimingRunnableEntityOne</SYSC-REF>==1) </SW-SYSCOND>
  </VARIATION-POINT>
  <LATENCY-CONSTRAINT-TYPE>REACTION</LATENCY-CONSTRAINT-TYPE>
  <SCOPE-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/
     TimingExtensions/swctPlainVanillaSwc/
     CalculateValueOfDataElementTwo</SCOPE-REF>
  <MINIMUM>
    <CSE-CODE>2</CSE-CODE>
    <CSE-CODE-FACTOR>490</CSE-CODE-FACTOR>
  </MINIMUM>
  <MAXIMUM>
    <CSE-CODE>2</CSE-CODE>
    <CSE-CODE-FACTOR>510</CSE-CODE-FACTOR>
  </MAXIMUM>
</LATENCY-TIMING-CONSTRAINT>
<LATENCY-TIMING-CONSTRAINT>
  <SHORT-NAME>ResponseTimeForCalculatingDataElementTwo</SHORT-</pre>
     NAME>
  <VARIATION-POINT>
    <SHORT-LABEL>VpLtcTiming2</SHORT-LABEL>
    <SW-SYSCOND BINDING-TIME="SYSTEM-DESIGN-TIME">(<SYSC-REF</pre>
       DEST="SW-SYSTEMCONST">/SystemConstants/
       ScTimingRunnableEntityOne</SYSC-REF>==2)</SW-SYSCOND>
  </VARIATION-POINT>
  <LATENCY-CONSTRAINT-TYPE>REACTION</LATENCY-CONSTRAINT-TYPE>
  <SCOPE-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/
     TimingExtensions/swctPlainVanillaSwc/
     CalculateValueOfDataElementTwo</SCOPE-REF>
  <MINIMUM>
    <CSE-CODE>2</CSE-CODE>
    <CSE-CODE-FACTOR>1100</CSE-CODE-FACTOR>
  </MINIMUM>
  <MAXIMUM>
    <CSE-CODE>2</CSE-CODE>
    <CSE-CODE-FACTOR>1300</CSE-CODE-FACTOR>
  </MAXIMUM>
</LATENCY-TIMING-CONSTRAINT>
<LATENCY-TIMING-CONSTRAINT>
  <SHORT-NAME>ResponseTimeForCalculatingDataElementTwo</SHORT-</pre>
     NAME>
  <VARIATION-POINT>
```



```
<SHORT-LABEL>VpLtcTiming3</SHORT-LABEL>
            <SW-SYSCOND BINDING-TIME="SYSTEM-DESIGN-TIME">(<SYSC-REF</pre>
               DEST="SW-SYSTEMCONST">/SystemConstants/
               ScTimingRunnableEntityOne</SYSC-REF>==3) </SW-SYSCOND>
          </VARTATTON-POINT>
          <LATENCY-CONSTRAINT-TYPE>REACTION</LATENCY-CONSTRAINT-TYPE>
          <SCOPE-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/
             TimingExtensions/swctPlainVanillaSwc/
             CalculateValueOfDataElementTwo</SCOPE-REF>
          <MINIMUM>
            <CSE-CODE>2</CSE-CODE>
            <CSE-CODE-FACTOR>2000
          </MINIMUM>
          <MAXIMUM>
            <CSE-CODE>2</CSE-CODE>
            <CSE-CODE-FACTOR>2500</CSE-CODE-FACTOR>
          </MAXIMUM>
        </LATENCY-TIMING-CONSTRAINT>
      </TIMING-REQUIREMENTS>
      <BEHAVIOR-REF DEST="SWC-INTERNAL-BEHAVIOR">/TimeSetExample/
         PlainVanillaSwc/InternalBehaviorPlainVanillaSwc</BEHAVIOR-REF>
    </SWC-TIMING>
  </ELEMENTS>
</AR-PACKAGE>
```

The third and last part of the AUTOSAR XML, shown in listing 4.3, specifies the system constant called "ScTimingRunnableEntityOne" that eventually is used to select the specific variant of the required timing—the activation frequency and response time of the runnable entity. The selected variant is specified by the system constant's value in the SwSystemconstantValueSet. In the given example the first variant "Timing1" is selected.

Listing 4.3: Description of the timing variations of the given example

```
<AR-PACKAGE>
 <SHORT-NAME>SystemConstants
  <ELEMENTS>
   <SW-SYSTEMCONST>
     <SHORT-NAME>ScTimingRunnableEntityOne
   </SW-SYSTEMCONST>
  </ELEMENTS>
</AR-PACKAGE>
<AR-PACKAGE>
 <SHORT-NAME>Variants
  <ELEMENTS>
   <SW-SYSTEMCONSTANT-VALUE-SET>
     <SHORT-NAME>TIMEX_EXP_Time_Set_VariantValues
     <SW-SYSTEMCONSTANT-VALUES>
       <SW-SYSTEMCONST-VALUE>
  <!-- The values of the system constant ScTimingRunnableEntityOne may
     range from 1 to 3. -->
         <SW-SYSTEMCONST-REF DEST="SW-SYSTEMCONST">/SystemConstants/
            ScTimingRunnableEntityOne</SW-SYSTEMCONST-REF>
         <VALUE>1</VALUE>
       </SW-SYSTEMCONST-VALUE>
```



```
</SW-SYSTEMCONSTANT-VALUES>
    </SW-SYSTEMCONSTANT-VALUE-SET>
    <POST-BUILD-VARIANT-CRITERION-VALUE-SET>
      <SHORT-NAME>TIMEX_EXP_Time_Set_VariantPostBuildValues/SHORT-NAME
    </post-build-variant-criterion-value-set>
    <PREDEFINED-VARIANT>
      <SHORT-NAME>TIMEX_EXP_Time_Set_Variant
      <POST-BUILD-VARIANT-CRITERION-VALUE-SET-REFS>
        <POST-BUILD-VARIANT-CRITERION-VALUE-SET-REF DEST="POST-BUILD-</pre>
           VARIANT-CRITERION-VALUE-SET">/Variants/
           TIMEX_EXP_Time_Set_VariantPostBuildValues</POST-BUILD-
           VARIANT-CRITERION-VALUE-SET-REF>
      </post-build-variant-criterion-value-set-refs>
      <SW-SYSTEMCONSTANT-VALUE-SET-REFS>
        <SW-SYSTEMCONSTANT-VALUE-SET-REF DEST="SW-SYSTEMCONSTANT-VALUE-</pre>
           SET">/Variants/TIMEX_EXP_Time_Set_VariantValues</SW-
           SYSTEMCONSTANT-VALUE-SET-REF>
      </sw-systemconstant-value-set-refs>
    </PREDEFINED-VARIANT>
  </ELEMENTS>
</AR-PACKAGE>
```

5 Timing Description Events

[TPS_TIMEX_00001] Purpose of TimingDescriptionEvent [The element TimingDescriptionEvent and its specializations are used to describe the occurrences of an event which are observed at a specific location in a system during runtime respectively the operation of the system.](RS_TIMEX_00001)

For example, this can be the start of a RunnableEntity or storing a frame in the hardware buffer of a communication controller.

An overview of the different event types is given in Figure 5.1. These are described in more detail in the following.



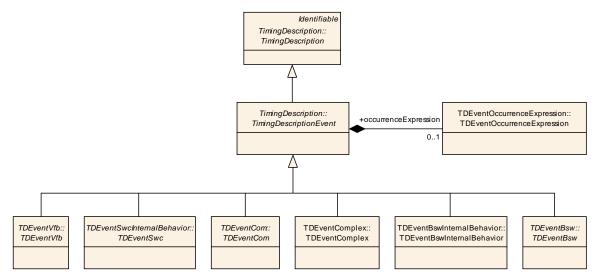


Figure 5.1: Overview of the different types of timing events

Class	TimingDescriptionEvent (abstract)				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription			
Note	be observed at ru define the scope f the system, and the	ntime – or timino ne level onfusion	in the Alg constrated constrated constrated constraint	esentation of a specific system behavior – that can UTOSAR specification. Timing events are used to aints. Depending on the specific scope, the view on action different types of events are defined. Assisting event descriptions in the AUTOSAR types use the prefix TD.	
Base	ARObject, Identifiable, Multilanguage Referrable, Referrable, Timing Description				
Attribute	Datatype	Mul.	Kind	Note	
occurrence Expression	TDEventOccurr enceExpression	01	aggr	The occurrence expression for this event.	

Table 5.1: TimingDescriptionEvent

Also note that information regarding the occurrence of a TimingDescriptionEvent is described separately in section 7.1.

5.1 Timing Events Related to the VFB

[TPS_TIMEX_00016] Purpose of TDEventVfb [The element TDEventVfb and its specializations are used to describe the occurrences of an event which are observed at a specific location in the VFB view. |(RS_TIMEX_00001)

Events related to the VFB can be used during the specification of:

- VfbTiming 3.2
- SwcTiming 3.3
- SystemTiming 3.4



• EcuTiming 3.6

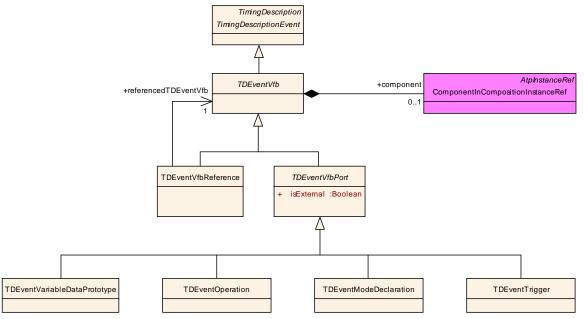


Figure 5.2: VFB events

Class	TDEventVfb (abs	TDEventVfb (abstract)			
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventVfb				
Note	This is the abstract (VFB) level.	This is the abstract parent class to describe timing events at Virtual Function Bus (VFB) level.			
Base	ARObject, Identifiable, Multilanguage Referrable, Referrable, Timing Description, Timing Description Event				
Attribute	Datatype	Mul.	Kind	Note	
component	SwComponentP rototype	01	iref	The context for the scope of this timing event.	

Table 5.2: TDEventVfb

[TPS_TIMEX_00042] Purpose of TDEventVfbPort $\[$ The element TDEventVf-bPort and its specializations are used to describe the occurrences of an event which are observed at a specific location in the VFB view. $\]$ (RS_TIMEX_00001, RS_TIMEX_00019)

Class	TDEventVfbPort (abstract)				
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventVfb				
Note	1	This is the abstract parent class to describe specific timing event types at Virtual Function Bus (VFB) level.			
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable,TDEventVfb,Timing Description,TimingDescriptionEvent				
Attribute	Datatype	Mul.	Kind	Note	



Attribute	Datatype	Mul.	Kind	Note
isExternal	Boolean	1	attr	This attribute is used to refer to external events that are related to hardware I/O, like physical sensors and actuators, at Virtual Function Bus (VFB) level.
port	PortPrototype	01	ref	The port scope of the timing event.
portPrototy peBlueprin t	PortPrototypeBl ueprint	01	ref	The PortPrototypeBlueprint is the scope of the timing event.

Table 5.3: TDEventVfbPort

In order to support the description of timing events for hardware I/O already at VFB-level (e.g. in order to refer to the point in time where data is generated by a physical sensor) without having the need to specify the concrete sensor hardware, it is necessary to specify the attribute <code>isExternal</code>.

If for a timing event of type TDEventVfbPort the attribute is set to "TRUE", then the timing event refers to the point in time where the data is generated/processed by the corresponding hardware I/O.

If the attribute is set to "FALSE", then the timing event refers to the point in time where the data enters or leaves the respective port of the component at VFB-level.

[TPS_TIMEX_00043] Purpose of TDEventVfbReference [The element TDE-ventVfbReference is used to reference timing description events already specified in other timing views. In other words, it enables one to re-use existing timing models.](RS_TIMEX_00001, RS_TIMEX_00019)

Class	TDEventVfbReference			
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventVfb			
Note			_	escription events related to the Virtual Function Bus other timing views.
Base	ARObject, Identifiable, Multilanguage Referrable, Referrable, TDEventVfb, Timing Description, TimingDescriptionEvent			
Attribute	Datatype Mul. Kind Note			
referenced TDEventVf b	TDEventVfb	1	ref	The referenced timing description event.

Table 5.4: TDEventVfbReference

[TPS_TIMEX_00017] TDEventVariableDataPrototype specifies events observable at sender/receiver ports [The element TDEventVariableDataPrototype is used to specify events, namely the receipt and sending of veriable data prototypes, observable at required and provided sender/receiver ports. [(RS_TIMEX_00001)]



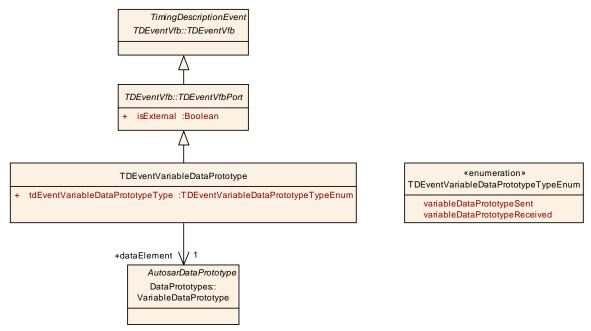


Figure 5.3: Variable Data Prototpye

Class	TDEventVariableDataPrototype					
Package		M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventVfb::VariableDataPrototype				
Note	This is used to de VFB level.	scribe ti	ming ev	ents related to sender-receiver communication at		
Base		ARObject,Identifiable,MultilanguageReferrable,Referrable,TDEventVfb,TDEventVfb Port,TimingDescription,TimingDescriptionEvent				
Attribute	Datatype	Mul.	Kind	Note		
dataEleme nt	VariableDataPr ototype	1	ref	The referenced VariableDataPrototype		
tdEventVar iableDataP rototypeTy pe	TDEventVariabl eDataPrototype TypeEnum	1	attr	The specific type of this timing event.		

Table 5.5: TDEventVariableDataPrototype

Enumeration	TDEventVariableDataPrototypeTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventVfb::VariableDataPrototype
Note	This is used to describe the specific event type of a TDEventVariableDataPrototype
Literal	Description
variableData Prototype Received	A point in time where the referenced variable data prototype has been successfully transmitted and is available in the related communication buffer (of the RTE) for the receiving SWC.
variableData Prototype Sent	A point in time where the referenced variable data prototype has been successfully sent out by the sending SWC, so that it is available in the related communication buffer (of the RTE) for transmission.

Table 5.6: TDEventVariableDataPrototypeTypeEnum



[TPS_TIMEX_00018] TDEventOperation specifies events obeservable at client/server ports. [The element TDEventOperation is used to specify events, namely the invokation of operations and their completion, observable at required and provided client/server ports.](RS_TIMEX_00001)

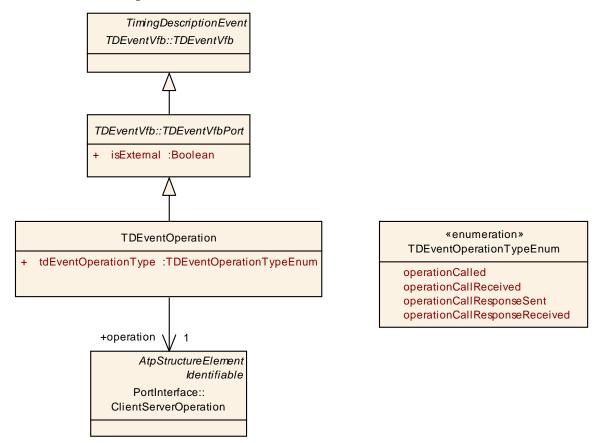


Figure 5.4: Operation

Class	TDEventOperation					
Package		M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventVfb::Operation				
Note	This is used to de level.	This is used to describe timing events related to client-server communication at VFB level.				
Base		ARObject, Identifiable, Multilanguage Referrable, Referrable, TDEventVfb, TDEventVfb Port, TimingDescription, TimingDescriptionEvent				
Attribute	Datatype	Datatype Mul. Kind Note				
operation	ClientServerOp eration	1	ref	The referenced operation.		
tdEventOp erationTyp e	TDEventOperati onTypeEnum	1	attr	The specific type of this timing event.		

Table 5.7: TDEventOperation

Enumeration	TDEventOperationTypeEnum
-------------	--------------------------



Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventVfb::Operation
Note	This is used to describe the specific event type of a TDEventOperation.
Literal	Description
operationCall Received	A point in time where the call of the referenced operation is received by the server SWC.
operationCall Response Received	A point in time where the client SWC has received the response of the referenced operation call.
operationCall Response Sent	A point in time where the server SWC has terminated with the execution of the referenced operation, and has sent out a response.
operation Called	A point in time where the referenced operation is called by the client SWC.

Table 5.8: TDEventOperationTypeEnum

[TPS_TIMEX_00019] TDEventModeDeclaration specifies events obeservable at mode ports. [The element TDEventModeDeclaration is used to specify events, namely initiation and propagation of mode changes, observable at required and provided mode ports. | (RS_TIMEX_00001)

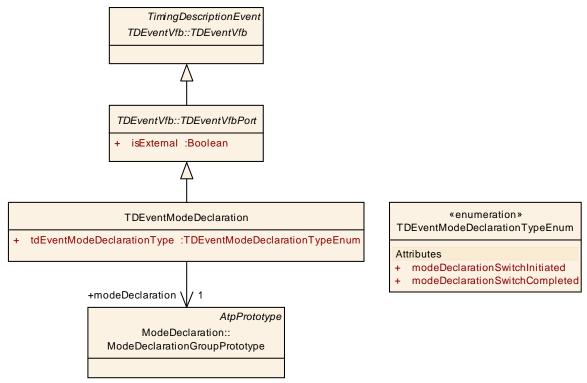


Figure 5.5: Mode Declaration



Class	TDEventModeDe	TDEventModeDeclaration					
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventVfb::ModeDeclaration						
Note	This is used to de level.	This is used to describe timing events related to mode switch communication at VFB level.					
Base	ARObject,Identifia Port,TimingDescri			geReferrable,Referrable,TDEventVfb,TDEventVfb scriptionEvent			
Attribute	Datatype	Mul.	Kind	Note			
entryMode Declaratio n	ModeDeclaratio n	01	ref	Optional parameter which refines the scope of the TDEventModeDeclaration. If the parameter is set, the event occurs only if the mode declaration group prototype instance shall enter into the referenced ModeDeclaration.			
exitModeD eclaration	ModeDeclaratio n	01	ref	Optional parameter which refines the scope of the TDEventModeDeclaration. If the parameter is set, the event occurs only if the mode declaration group prototype instance shall exit from the referenced ModeDeclaration.			
modeDecl aration	ModeDeclaratio nGroupPrototyp e	1	ref	The referenced mode declaration group prototype.			
tdEventMo deDeclarat ionType	TDEventModeD eclarationTypeE num	1	attr	The specific type of this timing event.			

Table 5.9: TDEventModeDeclaration

Enumeration	TDEventModeDeclarationTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventVfb::ModeDeclaration
Note	This is used to describe the specific event type of a TDEventModeDeclaration
Literal	Description
modeDecla- rationSwitch Completed	A point in time where the switch to the associated ModeDeclarationGroupPrototype has been completed.
modeDecla- rationSwitch Initiated	A point in time where the switch to the associated ModeDeclarationGroupPrototype has been initiated.

Table 5.10: TDEventModeDeclarationTypeEnum

[TPS_TIMEX_00039] TDEventTrigger specifies events observable at trigger ports [The element TDEventTrigger is used to specify events, namely the activation and release of triggers, observable at required and provided trigger ports. $(RS_TIMEX_00001, RS_TIMEX_00018)$



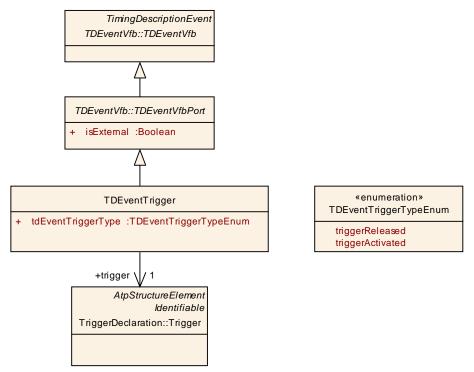


Figure 5.6: Trigger

Class	TDEventTrigger						
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventVfb::Trigger						
Note	This is used to de	This is used to describe timing events related to triggers at VFB level.					
Base	ARObject, Identifiable, Multilanguage Referrable, Referrable, TDEventVfb, TDEventVfb Port, TimingDescription, TimingDescription Event						
Attribute	Datatype	Mul.	Kind	Note			
tdEventTri ggerType	TDEventTrigger TypeEnum	1	attr	The specific type of this timing event.			
trigger	Trigger	1	ref	The trigger which is provided (released) or required (activate) in the given context.			

Table 5.11: TDEventTrigger

Enumeration	TDEventTriggerTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventVfb::Trigger
Note	This is used to describe the specific event type of a TDEventTrigger.
Literal	Description
triggerActi- vated	A point in time where the referenced trigger has been successfully released and is activating runnable entities of the receiving SW-C.
triggerRe- leased	A point in time where the referenced trigger has been successfully released by the emitting SW-C.

Table 5.12: TDEventTriggerTypeEnum



5.2 Timing Events Related to SwcInternalBehavior

[TPS_TIMEX_00044] Purpose of TDEventSwc [The element TDEventSwc is used to specify events, namely the activation, start, termination of runnable entities, as well as variable accesses, which are observable in the Software Component view. \(\left(RS_TIMEX_00001, RS_TIMEX_00019, RS_TIMEX_00020 \right) \)

Class	TDEventSwc (ab	TDEventSwc (abstract)					
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventSwcInternalBehavior						
Note	This is the abstract parent class to describe timing events at Software Component (SW-C) level.						
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable,TimingDescription,TimingDescriptionEvent						
Attribute	Datatype	Mul.	Kind	Note			
component	SwComponentP rototype	01	iref	The context for the scope of this timing event.			

Table 5.13: TDEventSwc

[TPS_TIMEX_00020] TDEventSwcInternalBehavior specifies observable events of runnable entities [The element TDEventSwcInternalBehavior is used to specify events, namely the activation, start, termination of runnable entities, as well as variable accesses, which are observable in the Software Component view. | (RS TIMEX 00001, RS TIMEX 00019, RS TIMEX 00020)

Events related to SwcInternalBehavior can be used during the specification of:

- SwcTiming 3.3
- SystemTiming 3.4
- EcuTiming 3.6



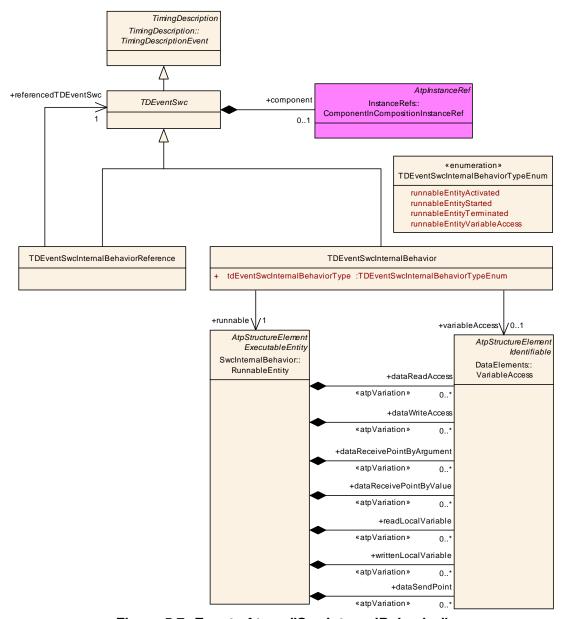


Figure 5.7: Event of type "SwcInternalBehavior"

Class	TDEventSwcInternalBehavior					
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventSwcInternalBehavior					
Note	This is used to describe timing events related to the SwcInternalBehavior of an AtomicSwComponentType.					
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable,TDEventSwc,Timing Description,TimingDescriptionEvent					
Attribute	Datatype	Mul.	Kind	Note		
runnable	RunnableEntity	1	ref	The scope of this timing event.		
tdEventSw cInternalB ehaviorTyp e	TDEventSwcInt ernalBehaviorTy peEnum	1	attr	The specific type of this timing event.		



Attribute	Datatype	Mul.	Kind	Note
variableAc	VariableAccess	01	ref	The scope of this timing event.
cess				

Table 5.14: TDEventSwcInternalBehavior

Enumeration	TDEventSwcInternalBehaviorTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventSwcInternalBehavior
Note	This is used to describe the specific event type of a TDEventSwcInternalBehavior.
Literal	Description
runnableEn- tityActivated	A point in time where the associated RunnableEntity has been activated, which means that it has entered the state "to be started".
runnable EntityStarted	A point in time where the associated RunnableEntity has entered the state "started" after its activation.
runnable EntityTermi- nated	A point in time where the associated RunnableEntity has terminated and entered the state "suspended".
runnable EntityVariable Access	A point in time where the associated variable is accessed.

Table 5.15: TDEventSwcInternalBehaviorTypeEnum

[constr_4510] Specifying references to RunnableEntity and VariableAccess | A RunnableEntity and VariableAccess shall be referenced at the same time if and only if the value of tdEventSwcInternalBehaviorType is "runnableEntity-VariableAccess". These two references are not mutual exclusive.]()

[constr_4511] Validity of referencing RunnableEntity [A RunnableEntity shall be referenced if and only if the value of tdEventSwcInternalBehaviorType is "runnableEntityActivated", "runnableEntityStarted", "runnableEntityTerminated", or "runnableEntityVariableAccess". | ()

[constr_4512] Validity of referencing VariableAccess \lceil A VariableAccess shall be referenced if and only if the value of tdEventSwcInternalBehaviorType is "runnableEntityVariableAccess". | ()

[TPS_TIMEX_00045] Purpose of TDEventSwcInternalBehaviorReference [
The element TDEventSwcInternalBehaviorReference is used to reference timing description events already specified in other timing views. In other words, it enables one to re-use existing timing models. | (RS TIMEX 00001, RS TIMEX 00019)



Class	TDEventSwcInternalBehaviorReference						
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventSwcInternalBehavior						
Note	This is used to reference timing description events related to the Software Component (SW-C) view which are specified in other timing views.						
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable,TDEventSwc,Timing Description,TimingDescriptionEvent						
Attribute	Datatype	Mul.	Kind	Note			
referenced TDEventS wc	TDEventSwc	1	ref	The referenced timing description event.			

Table 5.16: TDEventSwcInternalBehaviorReference

5.3 Timing Events Related to Bus Communication

[TPS_TIMEX_00021] Purpose of TDEventCom [The element TDEventCom and its specializations are used to describe the occurrences of an event which are observed at a specific location in the System view, in particular any event related to communications. | (RS TIMEX 00001)

Events related to communication can be used during the specification of:

- SystemTiming 3.3
- EcuTiming 3.6



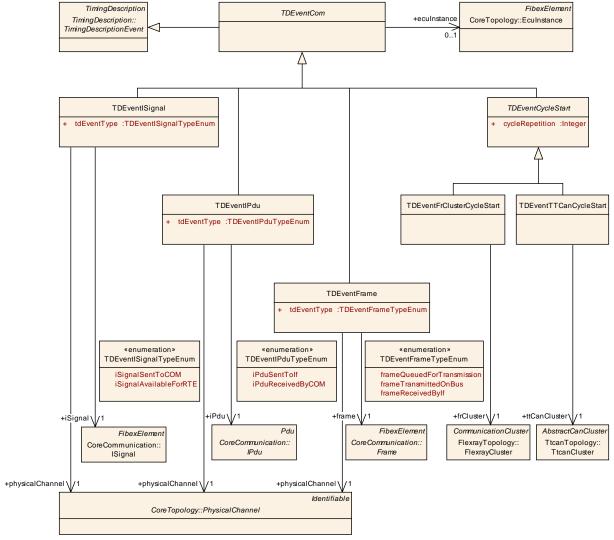


Figure 5.8: Events regarding communication

Class	TDEventCom (abstract)					
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventCom					
Note	This is the abstract parent class to describe timing events related to communication including the physical layer.					
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable,TimingDescription,TimingDescriptionEvent					
Attribute	Datatype	Mul.	Kind	Note		
eculnstanc e	Eculnstance	01	ref	The ECU context for a particular timing event. The link is optional, because the Eculnstance can not be defined for events of type TDEventCycleStart.		

Table 5.17: TDEventCom

[TPS_TIMEX_00022] TDEventISignal specifies events related to the exchange of I-Signals [The element TDEventISignal is used to specify events, namely



the exchange of I-Signals, observable between the RTE and the AUTOSAR Com. | (RS_TIMEX_00001)

Class	TDEventlSignal					
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventCom					
Note	This is used to describe timing events related to the exchange of I-Signals between COM and RTE.					
Base	ARObject, Identifiable, Multilanguage Referrable, Referrable, TDEventCom, Timing Description, TimingDescriptionEvent					
Attribute	Datatype	Mul.	Kind	Note		
iSignal	ISignal	1	ref	The scope of this timing event.		
physicalCh annel	PhysicalChanne I	1	ref	The PhysicalChannel on which the ISignal is transmitted.		
tdEventTy pe	TDEventlSignal TypeEnum	1	attr	The specific type of this timing event.		

Table 5.18: TDEventlSignal

Enumeration	TDEventlSignalTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventCom
Note	This is used to describe the specific event type of a TDEventlSignal.
Literal	Description
iSignalAvail- ableForRT E	A point in time, where the COM module makes the contained signal / signal group available for the RTE and the corresponding Rx Indication callout is generated (if configured).
iSignalSentTo COM	A point in time, where a transmission request call is issued by the RTE on a named COM signal / signal group and the new value is stored to the carrier COM I-PDU buffer.

Table 5.19: TDEventlSignalTypeEnum

[TPS_TIMEX_00023] TDEventIPdu specifies events related to the exchange of I-PDUs [The element TDEventIPdu is used to specify events, namely the exchange of I-PDUs, observable between the bus specific BSW modules (CANbus, FlexRay, LIN) and the AUTOSAR Com. $](RS_TIMEX_00001)$

Class	TDEventIPdu					
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventCom					
Note	This is used to describe timing events related to the exchange of I-PDUs between the bus specific (FlexRay / CAN / LIN) Interface BSW module and COM.					
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable,TDEventCom,Timing Description,TimingDescriptionEvent					
Attribute	Datatype	Mul.	Kind	Note		
iPdu	IPdu	1	ref	The scope of this timing event.		
physicalCh annel	PhysicalChanne I	1	ref	The PhysicalChannel on which the IPdu is transmitted.		



Attribute	Datatype	Mul.	Kind	Note
tdEventTy	TDEventlPduTy	1	attr	The specific type of this timing event.
pe	peEnum			

Table 5.20: TDEventIPdu

Enumeration	TDEventlPduTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventCom
Note	This is used to describe the specific event type of a TDEventIPdu.
Literal	Description
iPduReceived ByCOM	A point in time where the received frame is processed by the corresponding (FlexRay / CAN / LIN) Interface BSW module, routed through the PDUR and the contained PDUs are pushed to the COM module.
iPduSentTolf	A point in time where the carrier COM I-PDU is routed through the PDUR and is pushed to the bus specific (FlexRay / CAN / LIN) Interface BSW module.

Table 5.21: TDEventlPduTypeEnum

[TPS_TIMEX_00024] TDEventFrame specifies events related to the exchange of network frames [The element **TDEventFrame** is used to specify events, namely the exchange of Frames, observable between the communication controller and the bus specific BSW modules (CANbus, FlexRay, LIN) and observable at the physical layer. (RS_TIMEX_00001)

Class	TDEventFrame				
Package		M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventCom			
Note			_	ents related to the exchange of frames between the bus specific (FlexRay / CAN / LIN) Interface BSW	
Base		ARObject,Identifiable,MultilanguageReferrable,Referrable,TDEventCom,Timing Description,TimingDescriptionEvent			
Attribute	Datatype	Mul.	Kind	Note	
frame	Frame	1	ref	The scope of this timing event.	
physicalCh annel	PhysicalChanne I	1	ref	The PhysicalChannel on which the Frame is transmitted.	
tdEventTy pe	TDEventFrame TypeEnum	1	attr	The specific type of this timing event.	

Table 5.22: TDEventFrame

Enumeration	TDEventFrameTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing
	DescriptionEvents::TDEventCom
Note	This is used to describe the specific event type of a TDEventFrame.
Literal	Description



frameQueued ForTransmis- sion	A point in time where the frame containing the named signal / I-PDU is queued for transmission within the related Communication Driver.
frameRe- ceivedBy If	A point in time where the frame is pushed from the subscriber's communication controller to the corresponding (FlexRay / CAN / LIN) Interface BSW module.
frameTrans- mittedOn Bus	A point in time where the transmission of the frame completes successfully, and the subscriber's communication controller receives the frame from the bus.

Table 5.23: TDEventFrameTypeEnum

Class	TDEventCycleSta	art (abs	tract)	
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventCom			
Note	where a communi	cation c	ycle star	describe timing events related to a point in time rts. a filtered view to the cycle start can be defined.
Base	ARObject, Identifiable, Multilanguage Referrable, Referrable, TDEventCom, Timing Description, TimingDescriptionEvent			
Attribute	Datatype	Mul.	Kind	Note
cycleRepet ition	Integer	1	attr	The start of every <cyclerepetition> cycle is targeted by this event.</cyclerepetition>

Table 5.24: TDEventCycleStart

[TPS_TIMEX_00025] TDEventFrClusterCycleStart specifies the event related to the start of a FlexRay communication cycle [The element TDEventFrClusterCycleStart is used to specify events, namely the start of a communication cycle, observable at the physical layer of the FlexRay bus.](RS_TIMEX_00001)

Class	TDEventFrCluste	erCycle	Start	
Package	M2::AUTOSARTe DescriptionEvents			onStructure::Timing::TimingDescription::Timing
Note	This is used to de communication cy			event related to a point in time where a FlexRay cluster.
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable,TDEventCom,TDEventCycleStart,TimingDescription,TimingDescriptionEvent			
Attribute	Datatype	Mul.	Kind	Note
frCluster	FlexrayCluster	1	ref	The scope of this timing event.

Table 5.25: TDEventFrClusterCycleStart

[TPS_TIMEX_00026] TDEventTTCanCycleStart specifies the event related to the start of a TTCAN communication cycle [The element TDEventTTCanCycleStart is used to specify events, namely the start of a communication cycle, observable at the physical layer of the TTCAN bus. $](RS_TIMEX_00001)$



Class	TDEventTTCanC	ycleSta	rt	
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventCom			
Note	This is used to de communication cy			g event related to a point in time where a TCAN cluster.
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable,TDEventCom,TDEventCycleStart,TimingDescription,TimingDescriptionEvent			
Attribute	Datatype	Mul.	Kind	Note
ttCanClust er	TtcanCluster	1	ref	The scope of this timing event.

Table 5.26: TDEventTTCanCycleStart

5.4 Timing Events Related to the BSW

[TPS_TIMEX_00028] TDEventBswInternalBehavior specifies observable events of BSW module entities [The element TDEventBswInternalBehavior is used to specify events, namely the activation, start and termination of BSW module entities, which are observable in the Basic Software Module view. |(RS_TIMEX_00001)

Events related to the BSW can be used during the specification of:

- BswModuleTiming 3.5
- EcuTiming 3.6

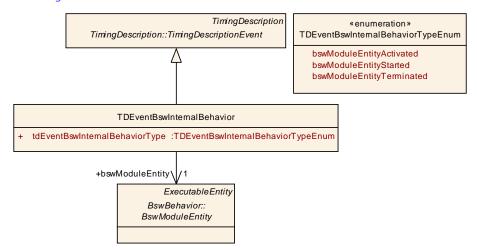


Figure 5.9: Events related to the internal structure of a BSW module



Class	TDEventBswInte	rnalBel	navior		
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventBswInternalBehavior				
Note	This is used to de module.	scribe ti	ming eve	ents related to the BswInternalBehavior of a BSW	
Base	ARObject,Identifiand DescriptionEvent	ARObject,Identifiable,MultilanguageReferrable,Referrable,TimingDescription,TimingDescriptionEvent			
Attribute	Datatype	Mul.	Kind	Note	
bswModul eEntity	BswModuleEntit y	1	ref	The scope of this timing event.	
tdEventBs wInternalB ehaviorTyp e	TDEventBswInt ernalBehaviorTy peEnum	1	attr	The specific type of this timing event.	

Table 5.27: TDEventBswInternalBehavior

Please note: For every TDEventBswInternalBehavior its scope is defined by the bswModuleEntity reference. It points to the BSW module entity for which the event can be observed. This scope definition assumes that every BSW module exists only once on each ECU. Otherwise the scope would not be precise enough because every module instance would bring the same BSW module entities.

Enumeration	TDEventBswInternalBehaviorTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventBswInternalBehavior
Note	This is used to describe the specific event type of a TDEventBswInternalBehavior.
Literal	Description
bswMod- uleEntity Activated	A point in time where the associated BswModuleEntity has been activated, which means that it has entered the state "to be started".
bswModule EntityStarted	A point in time where the associated BswModuleEntity has entered the state "started" after its activation.
bswMod- uleEntity Terminated	A point in time where the associated BswModuleEntity has terminated and entered the state "suspended"

Table 5.28: TDEventBswInternalBehaviorTypeEnum

[TPS_TIMEX_00029] Purpose of TDEventBsw [The element TDEventBsw is used to specify events which are observable in the Basic Software Module view, which means that the occurrences of such events are observable between the Basic Software Modules. $\[\] (RS_TIMEX_00001) \]$



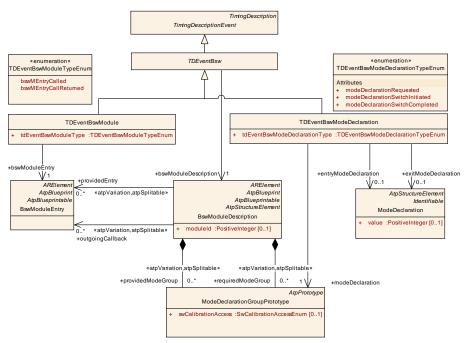


Figure 5.10: Events dealing with inter BSW module relations and mode communications on BSW level

[TPS_TIMEX_00030] TDEventBswModule specifies observable events when basic software entries are called [The element TDEventBswModule is used to specify events, namely the calling of and return from called basic software module entries, observable when such entries are called within the Basic Software. | (RS_TIMEX_00001)

Class	TDEventBswMod	dule			
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventBsw				
Note	This is used to de modules.	scribe ti	ming eve	ents related to the interaction between BSW	
Base		ARObject, Identifiable, Multilanguage Referrable, Referrable, TDEventBsw, Timing Description, TimingDescriptionEvent			
Attribute	Datatype	Mul.	Kind	Note	
bswModul	BswModuleEntr	1	ref	The scope of this timing event.	
eEntry	у				
tdEventBs	TDEventBswMo	1	attr	The specific type of this timing event.	
wModuleT	duleTypeEnum				
уре					

Table 5.29: TDEventBswModule

Enumeration	TDEventBswModuleTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventBsw
Note	This is used to describe the specific event type of a TDEventBswModule.
Literal	Description



bswMEntry CallReturned	A point in time where the call of the associated BswModuleEntry has returned.
bswMEntry Called	A point in time where the associated BswModuleEntry has been called.

Table 5.30: TDEventBswModuleTypeEnum

[TPS_TIMEX_00031] TDEventBswModeDeclaration specifies observable events in case of BSW mode communication [The element TDEventBswModeDeclaration is used to specify events that are observable when mode changes are initiated and propagated in the Basic Software.] (RS_TIMEX_00001)

Class	TDEventBswModeDeclaration				
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventBsw				
Note	This is used to de level.	This is used to describe timing events related to the mode communication on BSW level.			
Base	ARObject, Identifiant Description, Timing			geReferrable,Referrable,TDEventBsw,Timing ent	
Attribute	Datatype	Mul.	Kind	Note	
entryMode Declaratio n	ModeDeclaratio n	01	ref	Optional parameter which refines the scope of the TDEventBswModeDeclaration. If the parameter is set, the event occurs only if the mode declaration group prototype instance shall enter into the referenced ModeDeclaration.	
exitModeD eclaration	ModeDeclaratio n	01	ref	Optional parameter which refines the scope of the TDEventBswModeDeclaration. If the parameter is set, the event occurs only if the mode declaration group prototype instance shall exit from the referenced ModeDeclaration.	
modeDecl aration	ModeDeclaratio nGroupPrototyp e	1	ref	The scope of this timing event.	
tdEventBs wModeDec larationTyp e	TDEventBswMo deDeclarationTy peEnum	1	attr	The specific type of this timing event.	

Table 5.31: TDEventBswModeDeclaration

Enumeration	TDEventBswModeDeclarationTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::TimingDescription::TimingDescription::TimingDescription:
Note	This is used to describe the specific event type of a TDEventBswModeDeclaration.
Literal	Description
modeDec- laration Requested	A point in time where the associated ModeDeclarationGroupPrototype has been requested.



modeDecla- rationSwitch Completed	A point in time where the switch to the associated ModeDeclarationGroupPrototype has been completed.
modeDecla- rationSwitch Initiated	A point in time where the switch to the associated ModeDeclarationGroupPrototype has been initiated by the BswM.

Table 5.32: TDEventBswModeDeclarationTypeEnum

5.5 Complex Timing Event

[TPS_TIMEX_00027] Purpose of TDEventComplex $\[\]$ The element TDEventComplex is used to specify relationships between occurrences of events. $\[\]$ $\[\$

Complex timing events can be used during the specification of:

- VfbTiming 3.2
- SwcTiming 3.3
- SystemTiming 3.4
- BswModuleTiming 3.5
- EcuTiming 3.6

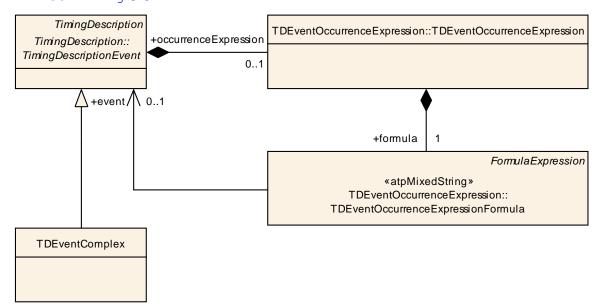


Figure 5.11: Complex timing event



Class	TDEventComplex			
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventComplex			
Note	This is used to de	This is used to describe complex timing events.		
	The context of a complex timing event either is described informally, e.g. using the documentation block, or is described formally by the associated TDEventOccurrenceExpression.			
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable,TimingDescription,TimingDescriptionEvent			
Attribute	Datatype	Mul.	Kind	Note
_	_	_	_	-

Table 5.33: TDEventComplex

A complex timing event is a special observable event. In comparison to the "atomic" events described above (e.g. TDEventVariableDataPrototype), a complex event does not contain information about the context it references (e.g. like the VariableDataPrototype is a mandatory context information for events of type TDEvent-VariableDataPrototype). Instead, a complex event uses the occurrence expression (see next section 5.6) to specify the context by relating occurrences of usual (also called *atomic*) TimingDescriptionEvents.

5.6 Occurrence Expression Language for Timing Events

The TimingDescriptionEvents mentioned above allow to specify observable events with a well-defined context. However, sometimes the context information of the events is:

- too imprecise, e.g. only in case additional conditions (like a value filter) are valid, the observable event occurs.
- too specific, e.g. the stimulus of an event chain occurs not only when one of the atomic events mentioned above occurs, but also if other conditions are fulfilled.
- or both of these cases.

Thus, the occurrence expression provides means to cope with the limitations of atomic events mentioned above. It is an optional feature provided by the Timing Extensions which can be used in case the atomic events do not offer appropriate means to describe the desired timing behavior.

The occurrence expression provides the ability to refine the context specification of a timing event for the following two cases:

1. **Content Filter**: Filter occurrences of an atomic event based on the *value* of transmitted data or operation arguments.



 Complex Event Constructor: Combine several atomic or complex events to a new complex event. Additionally the content filter can also be applied for complex events.

While the former case of filtering can be used for every TimingDescriptionEvent, the latter constructor can only be used for events of type TDEventComplex (see [constr_4500]).

5.6.1 Specifying an Occurrence Expression

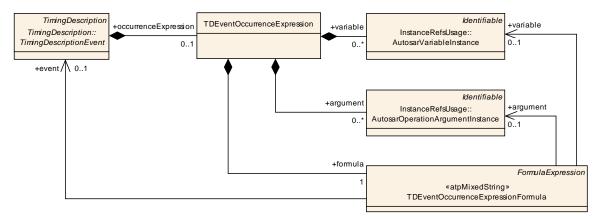


Figure 5.12: The occurrence expression

As shown in Figure 5.12, each <code>TimingDescriptionEvent</code> aggegregates a <code>TDEventOccurrenceExpression</code> as optional parameter. A <code>TDEventOccurrenceExpression</code> is a container for all information required to formulate the expression. The expression itself is defined via <code>TDEventOccurrenceExpressionFormula</code> which is derived from <code>FormulaExpression</code> (see Generic Structure Template [5]). The <code>TDEventOccurrenceExpressionFormula</code> uses the capabilities of the <code>FormulaExpression</code> and adds the following functions to the expression language:

- The function *TIMEX_value*, which requires as operand either a reference to an AutosarVariableInstance, a reference to an AutosarOperationArgumentInstance or a reference to an ISignal whose value shall be evaluated. The return type of this function depends on the operand (e.g. 0 or 1 if the referenced AutosarVariableInstance, AutosarOperationArgumentInstance or ISignal is of type boolean)
- The function *TIMEX_occurs*, which requires as operand a reference to the TimingDescriptionEvent whose occurrence shall be evaluated. The return type of this function is boolean. It returns true if the referenced timing event occurs at the point in time the expression is evaluated.
- The function *TIMEX_hasOccurred*, which requires as operand a reference to the TimingDescriptionEvent whose occurrence shall be evaluated. The return type of this function is boolean. It returns true if the referenced timing event has



been occurred AT LEAST ONCE before (or at the same time) the expression is evaluated.

- The function <code>TIMEX_timeSinceLastOccurrence</code>, which requires as operand a reference to the <code>TimingDescriptionEvent</code> whose occurrence shall be evaluated. The return type of this function is float. It returns the time difference between a) the last occurrence of the referenced event and b) the point in time the expression is evaluated. The unit of time is seconds.
- The function *TIMEX_angleSinceLastOccurrence*, which requires as operand a reference to the <u>TimingDescriptionEvent</u> whose occurrence shall be evaluated. The return type of this function is float. It returns the angle difference of the crank shaft between a) the last occurrence of the referenced event and b) the point in time the expression is evaluated. The unit of angle is degree.

The function *TIMEX_value* is used for specifying the "Content Filter" as specified above, all the other functions are required for the "Complex Event Constructor".

All operands required by the functions are references to model elements. Thus, <code>TDEventOccurrenceExpressionFormula</code> requires references to the respective elements of type <code>TimingDescriptionEvent</code>, <code>AutosarVariableInstance</code>, <code>AutosarOperationArgumentInstance</code> and <code>ISignal</code>. Due the atpMixedString nature of the <code>TDEventOccurrenceExpressionFormula</code> several references can be used within the occurrence expression.

[constr_4500] Restricted usage of functions The functions TIMEX_occurs, TIMEX_hasOccurred, TIMEX_timeSinceLastOccurrence and TIMEX_angleSinceLastOccurrence can only be used for occurrence expressions, which are applied to events of type TDEventComplex.]()

The application of functions that require an event as operand only makes sense for occurrence expressions that are applied to events of type <code>TDEventComplex</code>. A complex event describes its occurrence behavior by relating the occurrences of atomic events. This is possible via the functions <code>TIMEX_occurs</code>, <code>TIMEX_hasOccurred</code>, <code>TIMEX_timeSinceLastOccurrence</code> and <code>TIMEX_angleSinceLastOccurrence</code>.

[constr_4501] Application rule for the occurrence expression \lceil If the occurrence expression is applied for an event of type <code>TDEventComplex</code>, the expression must ensure the following criteria: a complex event can only occur at the occurrence time of one of the referenced <code>TimingDescriptionEvents</code> (via the "event" reference). This can e.g. be reached if the expression is defined as sum of products and each product uses the function <code>TIMEX_occurs</code> exactly once. Occurrence expressions, which do not satisfy this criteria, are invalid. \rfloor ()

[constr_4502] Use references only as function operands [The newly added references to model elements (e.g. the *event* reference targeting to <code>TimingDescriptionEvent</code>) do have specific semantics. The usage of this references within the expression is ONLY allowed as operands of the functions mentioned above. |()



In the following, an example is given that combines the functions mentioned above. The occurrence expression for a complex event *EC* shall be described. Figure 5.13 shows the software architecture required for this example.

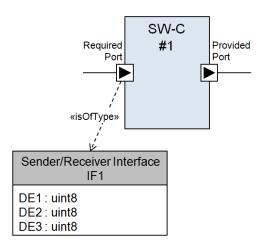


Figure 5.13: The software architecture used by the Occurrence Expression Example

The complex event *EC* occurs when the following conditions are fulfilled:

Condition1 Either atomic event *E1* or *E2* must occur. In this example, *E1* (or *E2* respectively) is an atomic event which occurs, when the VariableDataPrototype *DE1* (or *DE2* respectively) is received on PortPrototype *P1* of software component *SWC1*.

Condition2 VariableDataPrototype *DE3* must be greater than 3.

Condition3 The VariableDataPrototypes *DE1* and *DE2* must be received at the same point in time (with a tolerance interval of 0.5 milliseconds). This is the case, when the atomic events *E1* and *E2* occur at the same point in time (with a tolerance interval 0.5 milliseconds).

This complex event *EC* would be described via the occurrence expression as follows:

```
//Condition 1
(TIMEX_occurs(event(/example/expression/E1))
    || TIMEX_occurs(event(/example/expression/E2)))
//Condition 2
&& TIMEX_value(variable(/example/expression/EC/D3))>3
//Condition 3
&& abs(TIMEX_timeSinceLastOccurrence(event(/example/expression/E1)) -
    TIMEX_timeSinceLastOccurrence(event(/example/expression/E2))) <= 0.0005</pre>
```

Due to *Condition1*, the complex event EC can only occur when one of the atomic events *E1* or *E2* occurs. Thus, the expression satisfies the semantics constraint defined in [constr_4501].

The corresponding AUTOSAR XML file extract for the complex event *EC* has the following appearance:



Listing 5.1: AUTOSAR XML representation of the occurrence expression for the complex event EC

```
<AR-PACKAGE>
 <SHORT-NAME>example
 <ELEMENTS>
    <VFB-TIMING UUID="49213604-5497-36bc-9955-816308da10c8">
      <SHORT-NAME>expression
      <TIMING-DESCRIPTIONS>
        <TD-EVENT-VARIABLE-DATA-PROTOTYPE>
          <SHORT-NAME>E1</SHORT-NAME>
        </TD-EVENT-VARIABLE-DATA-PROTOTYPE>
        <TD-EVENT-VARIABLE-DATA-PROTOTYPE>
          <SHORT-NAME>E2</SHORT-NAME>
        </TD-EVENT-VARIABLE-DATA-PROTOTYPE>
        <TD-EVENT-COMPLEX UUID="fbc698cc-ebbd-3b22-a938-1caee6da50a4">
          <SHORT-NAME>EC</SHORT-NAME>
          <OCCURRENCE-EXPRESSION>
            <VARIABLES>
              <AUTOSAR-VARIABLE-INSTANCE>
                <SHORT-NAME>D3</SHORT-NAME>
                <VARIABLE-INSTANCE-IREF>...</VARIABLE-INSTANCE-IREF>
              </AUTOSAR-VARIABLE-INSTANCE>
            </VARIABLES>
            <FORMULA>
              ((TIMEX_occurs(<EVENT-REF DEST="TD-EVENT-VARIABLE-DATA-
                 PROTOTYPE">/example/expression/E1/
PROTOTYPE">/example/expression/E1
              | TIMEX occurs (<EVENT-REF DEST="TD-EVENT-VARIABLE-DATA-
                 PROTOTYPE">/example/expression/E2/

PROTOTYPE ">/example/expression/E2

// EVENT-REF > ) )
              && TIMEX_value(<VARIABLE-REF DEST="AUTOSAR-VARIABLE-INSTANCE"
                  >/example/expression/EC/D3</VARIABLE-REF>) > 3
              && abs(TIMEX timeSinceLastOccurrence(<EVENT-REF DEST="TD-
                 EVENT-VARIABLE-DATA-PROTOTYPE">/example/expression/E1</
                 EVENT-REF>)
              - TIMEX_timeSinceLastOccurrence(<EVENT-REF DEST="TD-EVENT-
                 VARIABLE-DATA-PROTOTYPE">/example/expression/E2) <=
                  0.0005
            </FORMULA>
          </OCCURRENCE-EXPRESSION>
        </TD-EVENT-COMPLEX>
      </TIMING-DESCRIPTIONS>
      <COMPONENT-REF DEST="COMPOSITION-SW-COMPONENT-TYPE">/example/
         expression/SWC1</COMPONENT-REF>
    </VFB-TIMING>
 </ELEMENTS>
</AR-PACKAGE>
```



Class	TDEventOccurre	TDEventOccurrenceExpression			
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventOccurrenceExpression				
Note	This is used to specify a filter on the occurrences of TimingDescriptionEvents by means of a TDEventOccurrenceExpressionFormula. Filter criteria can be variable and argument values, i.e. the timing event only occurs for specific values, as well as the temporal characteristics of the occurrences of arbitrary timing events.				
Base	ARObject				
Attribute	Datatype	Datatype Mul. Kind Note			
argument	AutosarOperatio nArgumentInsta nce	*	aggr	An occurrence expression can reference an arbitrary number of OperationArgumentPrototypes in its expression. This association aggegrates instanceRefs to OperationArgumentPrototypes which can be referenced in the expression.	
formula	TDEventOccurr enceExpression Formula	1	aggr	This is the expression formula which is used to describe the occurrence expression.	
variable	AutosarVariable Instance	*	aggr	An occurrence expression can reference an arbitrary number of VariableDataPrototpyes in its expression. This association aggegrates instanceRefs to VariableDataPrototypes which can be referenced in the expression.	

Table 5.34: TDEventOccurrenceExpression

Class	≪atpMixedString≫ TDEventOccurrenceExpressionFormula			
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventOccurrenceExpression			
Note	This is an extension	on of the	Formul	aExpression for the AUTOSAR Timing Extensions.
	A TDEventOccurrenceExpressionFormula provides the means to express the temporal characteristics of timing event occurrences in correlation with specific variable and argument values. The formal definition of the extended functions (ExtUnaryFunctions) is described in detail in the AUTOSAR Timing Extensions.			
Base	ARObject, Formula	Expres	sion	
Attribute	Datatype	Mul.	Kind	Note
argument	AutosarOperatio nArgumentInsta nce	01	ref	This is one particular argument value used in the expression formula.
event	TimingDescripti 01 ref This is one particular timing description event used in the expression formula.			
variable	AutosarVariable Instance	01	ref	This is one particular variable value used in the expression formula.

Table 5.35: TDEventOccurrenceExpressionFormula



Class	AutosarVariableInstance			
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventOccurrenceExpression::InstanceRefsUsage			
Note	This class represents a reference to a variable instance within AUTOSAR. This way it is possible to reference a variable instance in the occurrence expression formula. The variable instance can target to one of the following variables:			
	a variable provided via a PortPrototype as whole			
	an element inside of a composite variable provided via a PortPrototype			
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable			
Attribute	Datatype Mul. Kind Note			
variableIns tance	DataPrototype 1 iref This is the reference to the instanceRef definition.			

Table 5.36: AutosarVariableInstance

Class	AutosarOperationArgumentInstance			
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventOccurrenceExpression::InstanceRefsUsage			
Note	This class represents a reference to an argument instance. This way it is possible to reference an argument instance in the occurrence expression formula. The argument instance can target to one of the following arguments:			
	 a whole argument used in an operation of a PortPrototype with ClientServerInterface 			
	an element inside of a composite argument used in an operation of a PortPrototype with ClientServerInterface			
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable			
Attribute	Datatype Mul. Kind Note			
operationA rgumentIns tance	DataPrototype	1	iref	This is the reference to the instanceRef definition.

Table 5.37: AutosarOperationArgumentInstance



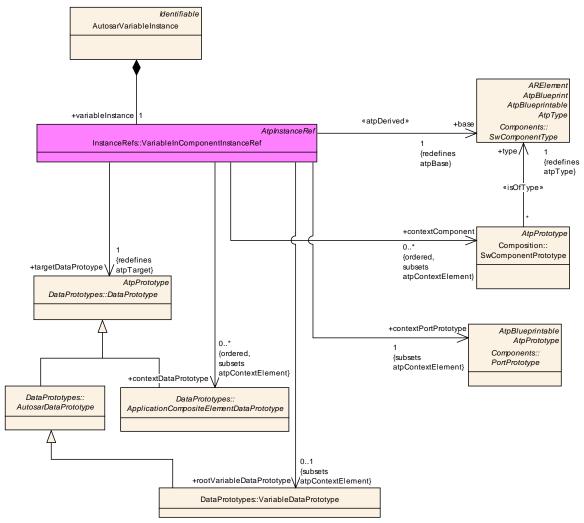


Figure 5.14: The required context information to reference to a variable instance within AUTOSAR.



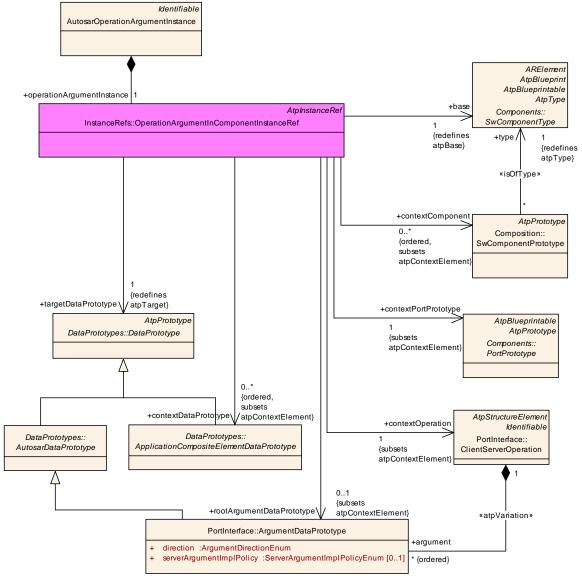


Figure 5.15: The required context information to reference to an operation argument instance within AUTOSAR.

5.6.2 Occurrence Expression Language Syntax

The occurrence expression language is based on the syntax of the formula language defined in the Generic Structure Template [5]. As mentioned above, it extends the language by a) additional functions and b) additional references to model elements. In the following, the implications of the extensions to the syntax is shown based on the grammar definition.

Note: the grammar defined for the formula language is not part of the listing below. It contains only the modifications of the formula language and the newly introduced functions and references.



Listing 5.2: AUTOSAR Occurrence Expression Language

5.6.3 Interpreting an Occurrence Expression

Based on the specification mechanism described above it is possible to use the occurrence expression formula to precise the timing specification. This way the developer is able to concertize the timing behavior he wants to constraint in case the atomic events described in the previous sections do not reflect the interested behavior appropriately.

This section describes how such an occurrence expression can be interpreted. The interpreter has the task to determine the occurrences of the <code>TimingDescription-Event</code>, for which the occurrence expression has been defined. This is done in two ways, depending on whether the occurrence expression is used as content filter or as complex event constructor. In the following, both cases are described in a more detailed way.

5.6.3.0.1 Interpreting a Content Filter

In this case, the occurrence expression is defined for an atomic event. From the newly added functions of the expression language, only <code>TIMEX_value(< reference to argument, variable or isignal>)</code> is allowed to be used for the content filter. On each occurrence of the atomic event, the interpreter checks whether the content filter defined via the expression is fulfilled. This is done by evaluating the function <code>TIMEX_value</code> based on its operand type:

AutosarVariableInstance the value of the referenced variable is evaluated at the point in time, when the atomic event occurs.

AutosarOperationArgumentInstance the value of the referenced argument is evaluated at the point in time, when the atomic event occurs.

ISignal the value of the referenced isignal is evaluated at the point in time, when the atomic event occurs.

[constr_4503] Restricted usage of AutosarOperationArgumentInstance for Content Filter [If a content filter is defined for an atomic event, references to AutosarOperationArgumentInstances are only allowed if the atomic event is of type TDEventOperation. Only if such an atomic event occurs, the value of the operation arguments can be evaluated. Thus, also the scope of the atomic event must be the same as the AutosarOperationArgumentInstance, meaning that they must point to the same ClientServerOperation. Finally, references to an AutosarOperation.



erationArgumentInstance with argument direction "out" are only allowed, if the atomic event (of type TDEventOperation) refers either to the point in time, when the operation call response has been sent (TD-EVENT-OPERATION-TYPE=OPERATION-CALL-RESPONSE-SENT) or to the point in time when the operation call response has been received (TD-EVENT-OPERATION-TYPE=OPERATION-CALL-RESPONSE-RECEIVED). | ()

5.6.3.0.2 Interpreting a Complex Event Constructor

In this case, the occurrence expression is defined for a complex event. All features of the occurrence expression language can be used for this expression type. At a specific point in time t, the interpreter evaluates the expression to determine if the complex event has occurred.

Considering the occurrence expression defined for the example above, the interpreter "implements" a function EC(t) which returns true, if the complex event EC occurs at time t:

Since the expression satisfies [constr_4501], it must only be evaluated at occurrence times of *E1* or *E2*, because only then the complex event EC can occur and the expression can return TRUE (or 1).

Based on the several functions provided by the occurrence expression language, the interpreter requires the following information from the system:

- the value of a referenced AutosarOperationArgumentInstance at time t
- the value of a referenced AutosarVariableInstance at time t
- the value of a referenced Isignal at time t
- the occurrences of a referenced TimingDescriptionEvent over time

There are different ways to gather the required information:

- Model Analysis and Simulation: In a deterministic system environment, occurrences of TimingDescriptionEvents can be determined offline (e.g. the point in time a frame will be transmitted in the static segment of a FlexRay network).
- Target Trace: The required information can be gathered from a running system e.g. by collecting information about the points in time, when the TimingDescriptionEvent has been occurred. Considering an event of type TDE-



ventSwcInternalBehavior, an ECU trace could contain a marker for each time the associated RunnableEntity has been activated, started or terminated.

If the interpreter has the required information as input, the different functions provided by the occurrence expression language can be interpreted as follows:

- TIMEX_value(t, <reference to an AutosarVariableInstance>): returns the variable value at time *t*
- TIMEX_value(t, <reference to an AutosarOperationArgumentInstance>): returns the operation argument value at time t
- TIMEX value(t, <reference to an ISignal>): returns the isignal value at time t
- TIMEX_occurs(t, <reference to a TimingDescriptionEvent): returns TRUE (or 1) if the referenced event has occurred at time t, else it returns FALSE (or 0)
- TIMEX_hasOccurred(t, <reference to a TimingDescriptionEvent): returns TRUE (or 1) if the referenced event has occurred AT LEAST ONCE before (or at) time t.
- TIMEX_timeSinceLastOccurrence(t, <reference to a TimingDescription—Event): returns the time difference between a) t and b) the last occurrence time of the referenced event before (or at) t. The unit of time is seconds.
- TIMEX_angleSinceLastOccurrence(t, <reference to a TimingDescription—Event): returns the angle difference between a) t and b) the last occurrence time of the referenced event before (or at) t. The unit of angle is degree.

6 Timing Description Event Chains

[TPS_TIMEX_00002] Purpose of TimingDescriptionEventChain | The element TimingDescriptionEventChain is used to specify a causal relationship between timing description events and their occurrences during the runtime of a system. | (RS_TIMEX_00001, RS_TIMEX_00004, RS_TIMEX_00005, RS_TIMEX_00009)

Thus, by means of an event chain, the correlation between a stimulation of a system and its corresponding response can be explicitly described, and used as a formalized definition of the scope for timing constraints. This is important, as timing constraints usually only refer to a specific part of the overall system's timing and need clear validity semantics.



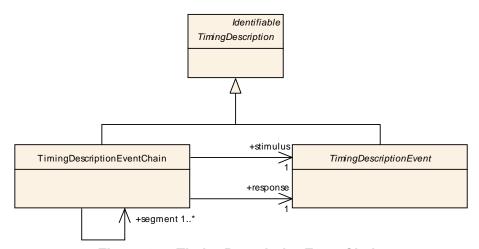


Figure 6.1: TimingDescriptionEventChain

Class	TimingDescriptionEventChain			
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::Timing::TimingDescription
Note	An event chain describes the causal order for a set of functionally dependent timing events. Each event chain has a well defined stimulus and response, which describe its start and end point. Furthermore, it can be hierarchically decomposed into an arbitrary number of sub-chains, so called <i>event chain segments</i> .			
Base	ARObject,Identifia	ARObject,Identifiable,MultilanguageReferrable,Referrable,TimingDescription		
Attribute	Datatype	Mul. Kind Note		
response	TimingDescripti onEvent	1	ref	The response event representing the point in time where the event chain is terminated. Tags: xml.sequenceOffset=20
segment	TimingDescripti onEventChain	1*	ref	A composed event chain consists of an arbitrary number of sub-chains. Tags: xml.sequenceOffset=30
stimulus	TimingDescripti onEvent	1	ref	The stimulus event representing the point in time where the event chain is activated. Tags: xml.sequenceOffset=10

Table 6.1: TimingDescriptionEventChain

An event chain can be hierarchically decomposed into an arbitrary number of subchains, so called "event chain segments". It can also contain branch and junction points, so that multiple paths from a stimulus to a response can be described. However, all these paths must correspond to the same stimulus and the same response! Furthermore, loops are not allowed. If paths originating from different stimuli or paths leading to different responses need to be described, separate event chains must be defined.

Obviously, it only makes sense to specify an event chain between two events which have a relation in some sense. In the example shown in Figure 6.2, a (indirect) relation



between the timing events "SensorDataSampled" and "ActuatorAccess" exists. In this case, an event chain between these two events is feasible.

In the case the event chain does not contain any event chain segments (sub-chains), it shall point to itsself via the segment relation. This implies that the event chain is atomic and cannot be further decomposed.

[constr_4515] Specifying stimulus and response in TimingDescription-EventChain [The references between TimingDescriptionEventChain and TimingDescriptionEvent playing the role stimulus and response shall not reference the same TimingDescriptionEvent. |()

[constr_4516] Specifying event chain segments [If a TimingDescription—EventChain consists of further event chain segments then at least one sequence of event chain segments shall exists from the event chain's stimulus to the response.]()

[constr_4517] Referencing no further event chain segments [If a TimingDescriptionEventChain is not subdivided in further event chain segments, then the reference playing the role of segment shall reference this TimingDescription-EventChain. In other words, an event chain without any event chain segment shall reference itself.]()

[constr_4518] Specifying stimulus event and response event of first and last event chain segment [The stimulus event of the first event chain segment and the response event of the last event chain segment shall reference the stimulus and response of the parent event chain the event chain segments directly belong to. |()

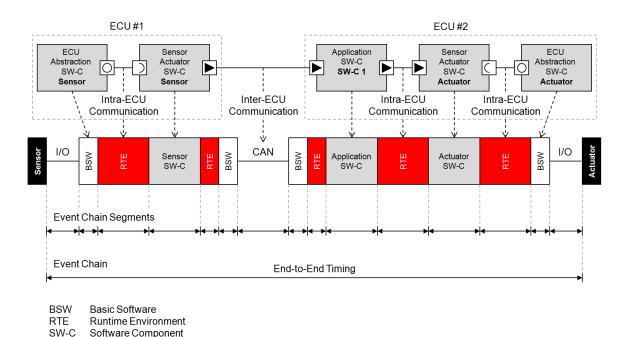


Figure 6.2: Example of an end-to-end event chain between sensor sampling and actuator access



7 Timing Constraints

Timing constraints can be applied either on Timing Description Events, on Timing Description Event Chains, or on an ordered list of Executable Entities. Applied to Timing Description Events a Timing Constraint classifies a single event or a group of events with a temporal restriction, for example a period, a latency or a time interval considered as synchronous. Also the direction has to be considered, which means in the semantics of the constraint it matters whether an event source (forward semantics) or an event sink (backward semantics) is considered. Applied to Timing Description Event Chains a condition or property for this event chain is set. As the event chain has a semantic of a directed acyclic graph, the direction is obvious, but it matters whether a single event chain or a group of event chains are constraint. Applied to an ordered list of Executable Entities, a Timing Constraint is a property, which means either the execution order or an execution time.

Mentioned in context of a requirement specification, Timing Constraints can be used as functional requirements and therefore can be tested. For usage in context of a performance specification, Timing Constraints can be used as system properties or timing guarantees. The following table gives an overview over scope and usage of the different types of Timing Constraints described in the following chapters:

Constraint	Imposed on	Use Case
Event Triggering	TimingDescriptionEvent	Specification of an activation Model
Latency Timing	TimingDescriptionEventChain	End-to-End path latency (in reaction or max age semantics)
Age	TimingDescriptionEvent	Restriction
Synchronization Tim-	TimingDescriptionEventChain	Restrictions for forks and
ing		joins of event chains
Synchronization Tim-	TimingDescriptionEvent	Restriction
ing		
Offset Timing	TimingDescriptionEvent	Restriction
Execution Order	ExecutableEntity	Restriction
Execution Time	ExecutableEntity	Restriction

Table 7.1: Constraints

7.1 EventTriggeringConstraint

[TPS_TIMEX_00003] EventTriggeringConstraint specifies occurrence behavior respectively model [The element EventTriggeringConstraint is used to specify the particular occurrences of a given timing description event. | (RS TIMEX 00001, RS TIMEX 00002, RS TIMEX 00006, RS TIMEX 00008)



AUTOSAR offers five basic types of event triggering as depicted in Figure 7.1.

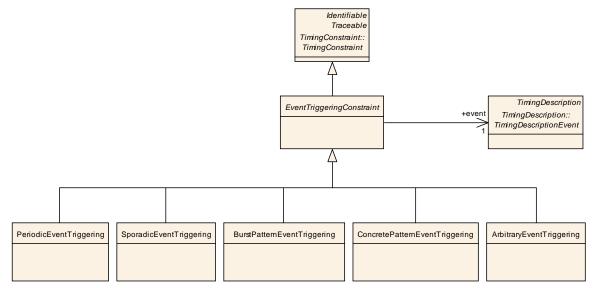


Figure 7.1: The different types of event triggerings

Class	EventTriggeringConstraint (abstract)				
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Event TriggeringConstraint				
Note	Describes the occurrence behavior of the referenced timing event. The occurrence behavior can only be determined when a mapping from the timing events to the implementation can be obtained. However, such an occurrence behavior can also be described by the modeler as an assumption or as a requirement about the occurrence of the event.				
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable,TimingConstraint,Traceable				
Attribute	Datatype Mul. Kind Note				
event	TimingDescripti onEvent	1	ref	The referenced timing event	

Table 7.2: EventTriggeringConstraint

7.1.1 PeriodicEventTriggering

[TPS_TIMEX_00010] PeriodicEventTriggering specifies periodic occurrences of events [The element PeriodicEventTriggering is used to specify the characteristics of a timing description event which occurs periodic.](RS_TIMEX_00001, RS_TIMEX_00002, RS_TIMEX_00006, RS_TIMEX_00008, RS_TIMEX_00015)



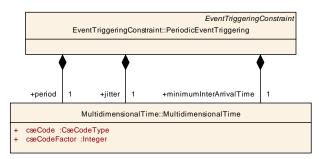


Figure 7.2: PeriodicEventTriggering

Class	PeriodicEventTri	ggering	l				
Package		M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Event TriggeringConstraint					
Note		The PeriodicEventTriggering describes the behavior of an event with a strict periodic occurrence pattern, given by the period attribute.					
	Additionally, it is possible to soften the strictness of the periodic occurrence behavior by specifying a jitter, so that there can be a deviation from the period up to the size of the jitter.						
Base		ARObject, Event Triggering Constraint, Identifiable, Multilanguage Referrable, Referrable, Timing Constraint, Traceable					
Attribute	Datatype	Mul.	Kind	Note			
jitter	Multidimensiona ITime	1	aggr	The maximum jitter of the periodic event occurrence.			
				Tags: xml.sequenceOffset=20			
minimumIn terArrivalTi me	Multidimensiona ITime	1	aggr	The minimum time distance between two consecutive occurrences of the associated event.			
				Tags: xml.sequenceOffset=10			
period	Multidimensiona ITime	1	aggr	The period of the event occurrence.			
				Tags: xml.sequenceOffset=30			

Table 7.3: PeriodicEventTriggering

The Periodic Event Triggering is characterized by the following parameters:

- Period
- Jitter
- Minimum Inter-Arrival Time

The listed parameters are required ones and are described in the following.

Period This parameter period specifies the periodic distance between subsequent occurrences of the event.

Jitter This parameter <u>jitter</u> specifies the maximum deviation from the period.



Minimum Inter-Arrival Time This parameter minimumInterArrivalTime specifies the minimum distance between subsequent occurrences of the event. Note, that if the value of the parameter minimumInterArrivalTime is less than the value of the parameter period minus the value of the parameter jitter, then the parameter minimumInterArrivalTime has no effect on the properties of the periodic event triggering constraints.

[constr_4543] Maximum value of the parameter minimumInterArrivalTime | The value of the parameter minimumInterArrivalTime shall be less than or equal the value of the parameter period. | ()

Let t_n be the point-in-time of the n-th occurrence of the event. A Periodic Event Triggering Constraint is satisfied if, and only if at least one reference point-in-time $t_{reference}$ exists such that for every occurrence of the event at t_n the following holds true: $t_{reference} + (n-1)period \leq t_n \leq t_{reference} + (n-1)period + jitter$ and for all of those event occurrences the minimum distance shall be less than or equal to minimumInterArrivalTime.

$$\exists t_{reference} \mid \forall n : t_{reference} + (n-1)period \leq t_n \leq t_{reference} + (n-1)period + jitter$$

 $AND \quad \forall n : t_{n+1} - t_n \leq minimumInterArrivalTime$

Figure 7.3 illustrates the parameters of the PeriodicEventTriggering. The upper part of this figure shows the case that the value of jitter is less than the value of the parameter period; whereas the lower part of this figure shows the case that the value of jitter is greater than or equal the value of the parameter period.

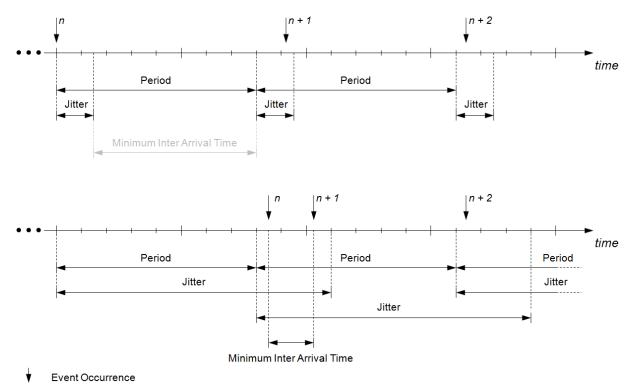


Figure 7.3: Parameters characterizing the Periodic Event Triggering



7.1.1.1 Examples

A Periodic Event Triggering Constraint is specified with the following parameters: period is six milliseconds (6ms) and jitter is two milliseconds (2ms). In other words, one imposes a timing constraint on an event to occur every six milliseconds and specifies that a deviation of two milliseconds is tolerable. In addition, it is assumed that the minimumInterArrivalTime is one millisecond (1ms) and therefore has no impact on the timing of the event's occurrences. This timing constraint is shown in Figure 7.4. The repeating gray-colored rectangles in this figure indicate the time intervals during which the event may occur; in other words it marks the subsequent time intervals the event is expected to occur.

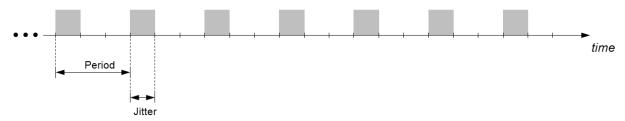


Figure 7.4: Example of a Periodic Event Triggering Constraint

The following figures show various event occurrences recorded during the observation of a system subject to analysis. The time interval for the observation is given by $t_{end-observation} - t_{start-observation}$. In the given example the system is observed for a period of 33.6 milliseconds.

The subsequent event occurrences shown in Figure 7.5 satisfy the given periodic event triggering constraint, because all occurrences of the event observed during the observation time interval happen in their corresponding time interval given by period and jitter.

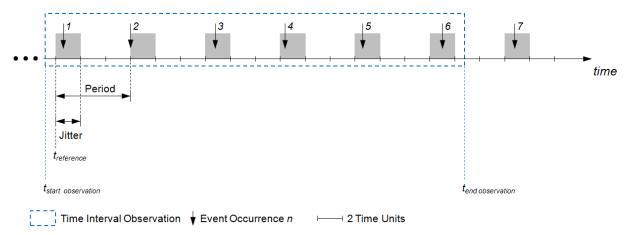


Figure 7.5: Event occurrences satisfying the given Period Event Triggering Constraint shown in 7.4



The subsequent event occurrences shown in Figure 7.6 satisfy the given periodic event triggering constraint, because all occurrences of the event observed during the observation time interval happen in their corresponding time interval given by period and jitter. In contrast to the example shown in Figure 7.5 the reference point-in-time is another one.

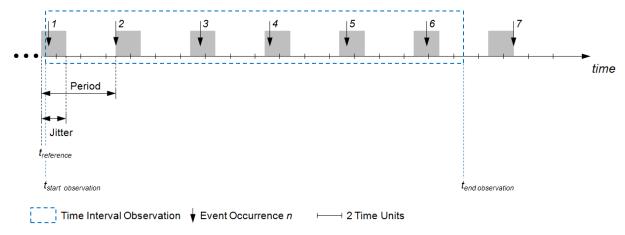


Figure 7.6: Event occurrences satisfying the given Period Event Triggering Constraint shown in 7.4, but with another reference point-in-time $t_{reference}$.

The subsequent event occurrences shown in Figure 7.7 violate the given periodic event triggering constraint, because the fifth occurrence of the event does not happen in its corresponding time interval given by period and jitter. In other words, there does not exist a reference point-in-time that ensures that all occurrences of the event observed during the observation time interval happen in their corresponding time interval given by period and jitter. And this results in a violation of the parameters period and jitter.

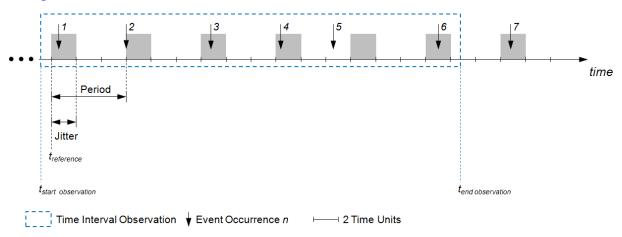


Figure 7.7: Event occurrences violating the given Period Event Triggering Constraint shown in 7.4

The subsequent event occurrences shown in Figure 7.8 violate the given periodic event triggering constraint, because the fourth occurrence of the event does not happen in its corresponding time interval given by period and jitter. In other words, the fourth



occurrence of the event happens in the time interval the fifth occurrence of the event happens and therefore violates the specified jitter.

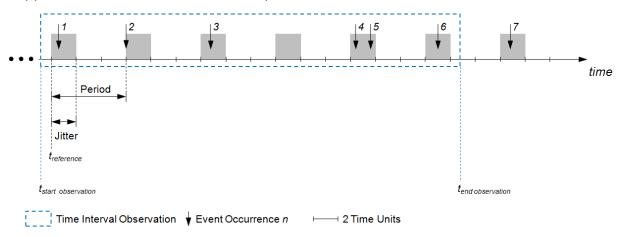


Figure 7.8: Event occurrences satisfying the given Period Event Triggering Constraint shown in 7.4.

7.1.2 SporadicEventTriggering

[TPS_TIMEX_00011] SporadicEventTriggering specifies sporadic occurrences of events [The element SporadicEventTriggering is used to specify the characteristics of a timing description event which occurs sporadic.](RS_TIMEX_00001, RS_TIMEX_00002, RS_TIMEX_00006, RS_TIMEX_00008)

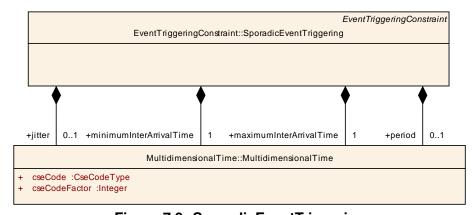


Figure 7.9: SporadicEventTriggering

Class	SporadicEventTri	SporadicEventTriggering				
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Event TriggeringConstraint					
Note	The SporadicEventTriggering describes the behavior of an event which occurs occasionally or singly.					
Base	ARObject, Event Triggering Constraint, Identifiable, Multilanguage Referrable, Referrable, Timing Constraint, Traceable					
Attribute	Datatype	Mul.	Kind	Note		



Attribute	Datatype	Mul.	Kind	Note
jitter	Multidimensiona ITime	01	aggr	The maximum jitter of the sporadic event occurrence.
				Jitter=max nthPeriod - standardPeriod
				Tags: xml.sequenceOffset=30
maximuml nterArrival Time	Multidimensiona ITime	1	aggr	The maximum time distance between two consecutive occurrences of the associated event.
				Tags: xml.sequenceOffset=20
minimumIn terArrivalTi me	Multidimensiona ITime	1	aggr	The minimum time distance between two consecutive occurrences of the associated event.
				Tags: xml.sequenceOffset=10
period	Multidimensiona ITime	01	aggr	The period of the event occurrence.
				Tags: xml.sequenceOffset=40

Table 7.4: SporadicEventTriggering

This is a generalization of the periodic event triggering described in subsection 7.1.1. The difference is that the event can, but not necessarily must occur. For this reason, there is one additional parameter required for the specification of the SporadicEventTriggering, namely the maximumInterArrivalTime, which specifies the largest possible time distance between two event occurrences.

The Sporadic Event Triggering is characterized by the following parameters:

- Minimum Inter-Arrival Time
- Maximum Inter-Arrival Time
- Period
- Jitter

The first two parameters are required ones and the last two parameters are optional. These parameters are described in the following and Figure 7.10 illustrates the parameters of the SporadicEventTriggering.

Minimum Inter-Arrival Time This parameter minimumInterArrivalTime specifies the minimum distance between subsequent occurrences of the event.

Maximum Inter-Arrival Time This parameter maximumInterArrivalTime specifies the maximum distance between subsequent occurrences of the event.

Period This optional parameter period specifies the periodic distance between subsequent occurrences of the event.

Jitter This optional parameter jitter specifies the maximum deviation from the period.



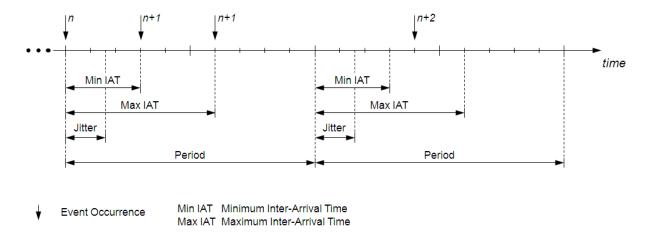


Figure 7.10: Parameters characterizing the Sporadic Event Triggering

7.1.3 ConcretePatternEventTriggering

[TPS_TIMEX_00012] ConcretePatternEventTriggering specifies concrete pattern of occurrences of events [The element ConcretePatternEventTriggering is used to specify the characteristics of a timing description event which occurs as a concrete pattern. \(\frac{RS_TIMEX_00001}{RS_TIMEX_00008}\), \(\frac{RS_TIMEX_00008}{RS_TIMEX_00008}\)

This describes events which occur following a known pattern.

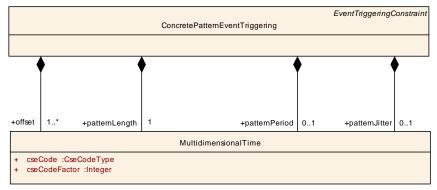


Figure 7.11: ConcretePatternEventTriggering

Class	ConcretePattern	ConcretePatternEventTriggering				
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Event TriggeringConstraint					
Note	The ConcretePatternEventTriggering describes the behavior of an event, which occurs following a precisely known pattern.					
Base	ARObject, Event Triggering Constraint, Identifiable, Multilanguage Referrable, Referrable, Timing Constraint, Traceable					
Attribute	Datatype	Mul.	Kind	Note		



Attribute	Datatype	Mul.	Kind	Note
offset	Multidimensiona ITime	1*	aggr	The offset for each occurrence of the event in the specified time interval.
				Tags: xml.name=TIME-VALUE; xml.role Element=true; xml.sequenceOffset=10; xml.type Element=false
patternJitte r	Multidimensiona ITime	01	aggr	The optional parameter "Pattern Jitter" specifies the deviation of the time interval's starting point from the beginning of the given period. This parameter is only applicable in conjunction with the parameter "Pattern Period".
patternLen gth	Multidimensiona ITime	1	aggr	The length of the observed time interval. Tags: xml.sequenceOffset=20
patternPeri od	Multidimensiona ITime	01	aggr	The optional parameter "Pattern Period" specifies the time distance between the beginnings of subsequent repetitions of the given concrete pattern.

Table 7.5: ConcretePatternEventTriggering

The Concrete Pattern Event Triggering is characterized by the following parameters:

- Pattern Length
- Offset
- Pattern Period
- Pattern Jitter

The first two parameters are required ones, whereas the two last parameters are optional. The parameters are described in the following and are illustrated in Figure 7.12 and Figure 7.13.

Pattern Length This parameter patternLength specifies the time interval the pattern occurs in.

Offset This parameter offset specifies a list of point-in-times in the time interval given by the parameter patternLength at which the event occurs.

Pattern Period This optional parameter patternPeriod specifies the time distance between the beginnings of subsequent repetitions of the given burst pattern.


Pattern Jitter This optional parameter patternJitter specifies the maximum deviation of the time interval's starting point from the beginning of the given period. This parameter is only applicable in conjunction with the parameter patternPeriod.

The constraints listed below apply to the ConcretePatternEventTriggering and shall be considered when using this event triggering constraint.



[constr_4519] Specifying patternLength \lceil The patternLength shall be specified such that the following holds: $0 \le max(\texttt{offset}) \le \texttt{patternLength}$. \rceil ()

[constr_4544] Specifying patternLength, patternJitter and patternPeriod \lceil The pattern length, pattern jitter and pattern period shall be specified such that the following holds: patternLength + patternJitter < patternPeriod. | ()

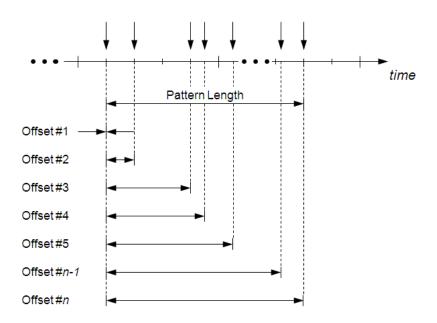

▼ Event Occurrence

Figure 7.12: Parameters characterizing the Concrete Pattern Event Triggering



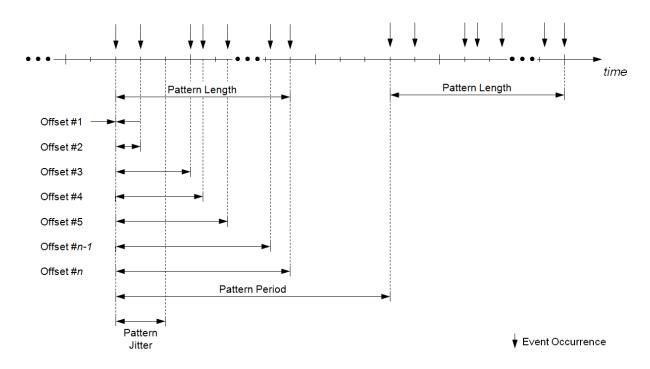


Figure 7.13: Parameters characterizing the Concrete Pattern Event Triggering when periodically being repeated

7.1.4 BurstPatternEventTriggering

[TPS_TIMEX_00013] BurstPatternEventTriggering specifies burst of occurrences of events [The element BurstPatternEventTriggering is used to specify the characteristics of a timing description event which occurs as a burst. [(RS_TIMEX_00001, RS_TIMEX_00002, RS_TIMEX_00006, RS_TIMEX_00008)]

The purpose of the <code>BurstPatternEventTriggering</code> is to describe a burst of occurrences of one and the same event. The Burst Pattern Event Triggering is characterized by the following parameters:

- Pattern Length
- Minimum Inter Arrival Time
- Maximum Number of Occurrences
- Minimum Number of Occurrences
- Pattern Period
- Pattern Jitter

The first three parameters are required ones, whereas the last three parameters are optional.



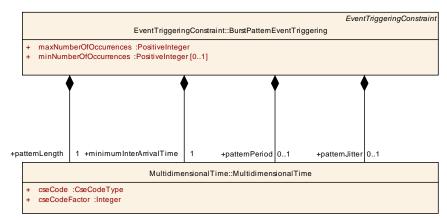


Figure 7.14: BurstPatternEventTriggering

Class	BurstPatternEve	BurstPatternEventTriggering						
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Event TriggeringConstraint							
Note		iven tim		scribes the maximum number of occurrences of the al. This is typically used to model a worst case				
Base	ARObject, Event Tr Referrable, Referra			int,Identifiable,Multilanguage straint,Traceable				
Attribute	Datatype	Mul.	Kind	Note				
maxNumb erOfOccurr ences	PositiveInteger	1	attr	The maximum number of event occurrences within the given time interval.				
minNumbe rOfOccurre nces	PositiveInteger	01	attr	The minimum number of event occurrences within the given time interval. Tags: xml.sequenceOffset=10				
minimumIn terArrivalTi me	Multidimensiona ITime	1	aggr	The parameter "Minimum Inter-Arrival Time" specifies the minimum distance between subsequent occurrences of the event within the given time interval.				
patternJitte r	Multidimensiona ITime	01	aggr	The optional parameter "Pattern Jitter" specifies the deviation of the time interval's starting point from the beginning of the given period. This parameter is only applicable in conjunction with the parameter "Pattern Period".				
patternLen gth	Multidimensiona ITime	1	aggr	The parameter "Pattern Length" specifies the duration of the time interval within which the event repeatedly occurs. The event occurs at arbitrary points in time within the given time interval.				
patternPeri od	Multidimensiona ITime	01	aggr	The optional parameter "Pattern Period" specifies the time distance between the beginnings of subsequent repetitions of the given burst pattern.				

Table 7.6: BurstPatternEventTriggering

The parameters are described in the following and are illustrated in Figure 7.15 and Figure 7.16.



- **Pattern Length** This parameter patternLength specifies the duration of the time interval within which the event repeatedly occurs. The event occurs at arbitrary points in time within the given time interval.
- **Minimum Inter-Arrival Time** This parameter minimumInterArrivalTime specifies the minimum distance between subsequent occurrences of the event within the given time interval.
- Maximum Number of Occurrences This parameter maxNumberOfOccurrences
 specifies the maximum number of times the event can occur within the time interval. In other words, the event may never occur or any number of times between one (1) and the specified maximum number of occurrences. If the parameter minNumberOfOccurrences is specified then the event occurs at least the number of times specified by minNumberOfOccurrences and at maximum by maxNumberOfOccurrences.
- Minimum Number of Occurrences This optional parameter minNumberOfOccurrences specifies the minimum number of times the event occurs within the given time interval. In other words, this parameter specifies the least number of times the event occurs in the given time interval. The value zero (0) for this parameter is permitted.
- **Pattern Period** This optional parameter patternPeriod specifies the time distance between the beginnings of subsequent repetitions of the given burst pattern.
- **Pattern Jitter** This optional parameter patternJitter specifies the maximum deviation of the time interval's starting point from the beginning of the given period. This parameter is only applicable in conjunction with the parameter patternPeriod.


The constraints listed below apply to the <code>BurstPatternEventTriggering</code> and shall be considered when using this event triggering constraint.


[constr_4505] Specifying minimum and maximum number of occurrences \lceil The minimum and maximum number of occurrences shall be specified such that the following holds: $0 \le minNumberOfOccurrences \le maxNumberOfOccurrences$. \rceil ()

[constr_4506] Specifying minimum inter-arrival time and pattern length \lceil The minimum inter-arrival time and pattern length shall be specified such that the following holds: $0 < minimumInterArrivalTime \le patternLength$. \rfloor ()


[constr_4507] Specifying pattern length, pattern jitter and patter period [The pattern length, pattern jitter and pattern period shall be specified such that the following holds: patternLength + patternJitter < patternPeriod. |()





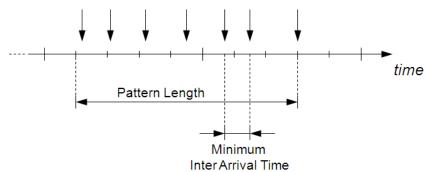


Minimum Number of Occurrences = 5 (optional)

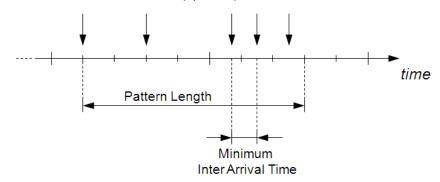

▼ Event Occurrence

Figure 7.15: Parameters characterizing the Burst Pattern Event Triggering

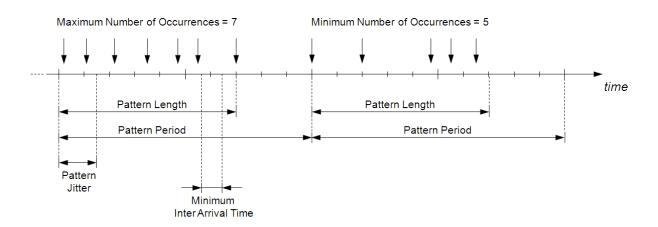

▼ Event Occurrence

Figure 7.16: Parameters characterizing the Burst Pattern Event Triggering when periodically being repeated



7.1.5 ArbitraryEventTriggering

[TPS_TIMEX_00014] ArbitraryEventTriggering specifies arbitrary occurrences of an event [The element ArbitraryEventTriggering is used to specify the characteristics of a timing description event which occurs arbitrary. | (RS_TIMEX_00001, RS_TIMEX_00002, RS_TIMEX_00006, RS_TIMEX_00008)

This describes the occasional occurrence of a timing event.

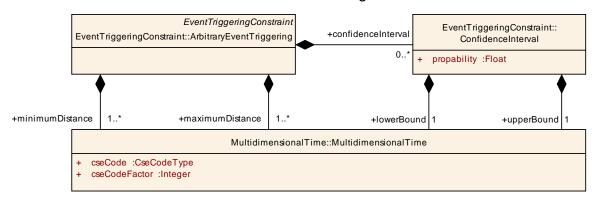


Figure 7.17: ArbitraryEventTriggering

Class	ArbitraryEventTr	iggerin	g				
Package		M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Event TriggeringConstraint					
Note	The ArbitraryEventTriggering describes that an event occurs occasionally, singly, irregularly or randomly. The primary purpose of this event triggering is to abstract event occurrences captured						
	by data acquisition runtime.	n tools (backgro	und debugger, trace analyzer, etc.) during system			
Base	ARObject, Event Triggering Constraint, Identifiable, Multilanguage Referrable, Referrable, Timing Constraint, Traceable						
Attribute	Datatype	Mul.	Kind	Note			
confidence Interval	ConfidenceInter val	*	aggr	List of confidence intervals. Tags: xml.sequenceOffset=30			
maximum Distance	Multidimensiona ITime	1*	aggr	The nth array element describes the maximum distance that can be observed for a sample of n+1 event occurrences. This is an array with an identical number of elements as for the minimumDistance. Tags: xml.name=TIME-VALUE; xml.role Element=true; xml.sequenceOffset=20; xml.type Element=false			



Attribute	Datatype	Mul.	Kind	Note
minimumDi stance	Multidimensiona ITime	1*	aggr	The nth array element describes the minimum distance that can be observed for a sample of n+1 event occurrences.
				This is an array with an identical number of elements as for the maximumDistance.
				Tags: xml.name=TIME-VALUE; xml.role Element=true; xml.sequenceOffset=10; xml.type Element=false

Table 7.7: ArbitraryEventTriggering

Class	ConfidenceInterval				
Package	M2::AUTOSARTe TriggeringConstra		::Comm	onStructure::Timing::TimingConstraint::Event	
Note	Additionally to the list of measured distances of event occurrences, a confidence interval can be specified for the expected distance of two consecutive event occurrences with a given probability.				
Base	ARObject				
Attribute	Datatype	Mul.	Kind	Note	
lowerBoun d	Multidimensiona ITime	1	aggr	The lower bound of the expected distance of two consecutive event occurrences.	
propability	Float	1	attr	The probability for the measured lower and upper bound of the confidence interval.	
upperBoun d	Multidimensiona ITime	1	aggr	The upper bound of the expected distance of two consecutive event occurrences.	

Table 7.8: ConfidenceInterval

In contrast to the ConcretePatternEventTriggering, this event triggering is not as strict to the occurrence of an event, but generally describes event occurrences.

The Arbitrary Event Triggering is characterized by the following parameters:


- Minimum Distance
- Maximum Distance

These parameters are required ones and are described in the following. Figure 7.18 illustrates the parameters of the ArbitraryEventTriggering.

Minimum Distance The parameter minimumDistance specifies the minimum distance between n subsequent event occurrences, and n=2,3,4,...

Maximum Distance The parameter maximumDistance specifies the maximum distance between n subsequent event occurrences, and n=2,3,4,...



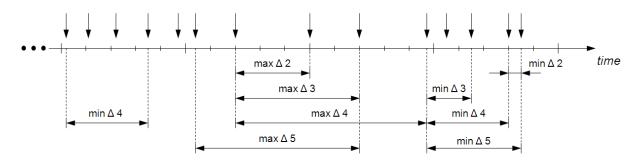

min Δn Least minimum inter-arrival time between n subsequent occurrences of the event E and n = $\{2, 3, 4, ...\}$

max Δn Major maximum inter-arrival time between n subsequent occurrences of the event E and n = $\{2, 3, 4, ...\}$

▼ Event Occurrence

Figure 7.18: Parasmeters characterizing the Arbitrary Event Triggering

7.2 LatencyTimingConstraint

[TPS_TIMEX_00004] LatencyTimingConstraint specifies latency constraints

[The element LatencyTimingConstraint is used to specify the amount of time that elapses between the occurrence of any two timing description events.

[(RS_TIMEX_00001, RS_TIMEX_00002, RS_TIMEX_00012, RS_TIMEX_00015)]

For example, this can be the time it takes for a packet of data on a bus network to get from one designated point to another, or the time it takes for a task to be executed on a processor.

In the timing specification a LatencyTimingConstraint is associated with one TimingDescriptionEventChain, and specifies the minimum and/or maximum time duration between the occurrence of the stimulus and the occurrence of the corresponding response of that chain. However, in multi-rate networks, data can get lost or get duplicated because of potential different producer and consumer periods. Data loss occurs, if the consumer's period is greater than the producer's period (undersampling). Accordingly, data duplication occurs, if the consumer's period is smaller than the producer's period (oversampling). This is depicted in figure 7.19.

¹A synonym for delay



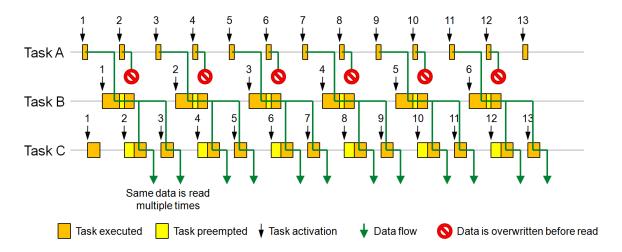


Figure 7.19: Loss and duplication of data due to under- and oversampling.

Considering under- and oversampling, two end-to-end latency semantics are of interest for automotive systems and can thus be expressed with the AUTOSAR timing extensions. These are the *age* of a certain response and the *reaction* to a certain stimulus.

The *data age timing constraint* is mainly important in control engineering, but may appear in all domains. Here the focus is from the response perspective rather than from the stimulus perspective. In other words, the assumption is that last is best, i.e., it is accepted/tolerated that a value is overwritten along the path from stimulus to response. When for example an actuator value is periodically updated, it is of importance that the corresponding input values are not too old. In this case the constrained time of importance is the delay from the latest stimulus to a given response.

The *reaction time constraint* is utilized when the first reaction to a stimulus is of importance. This is usually the case in body electronics, but may also be the case in other domains. One example is the time it takes from a button is pressed to the light is switched on. Another example, from the chassis domain, is the time from the brake pedal is pressed until the brakes are activated. In both cases the constrained time of importance is the delay from a given stimulus to the first corresponding response.



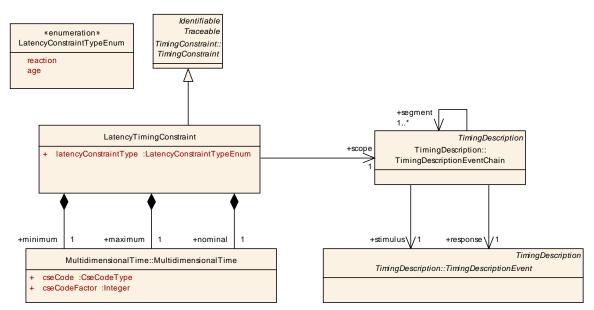


Figure 7.20: Latency constraint

Class	LatencyTimingConstraint					
Package	M2::AUTOSARTe TimingConstraint	mplates	::Comm	onStructure::Timing::TimingConstraint::Latency		
Note	This constraint type restricts the time duration between the occurrence of the stimulus and the occurrence of the corresponding response of that chain. Two latency constraint types are of interest for automotive systems. These are the					
	age of a certain re	esponse	and the	e reaction to a certain stimulus.		
		,	-	event chain is required.		
Base	ARObject,Identifia	ıble,Mul	tilangua	geReferrable,Referrable,TimingConstraint,Traceable		
Attribute	Datatype	Mul.	Kind	Note		
latencyCon straintType	LatencyConstrai ntTypeEnum	1	attr	The specific type of this latency constraint		
maximum	Multidimensiona ITime	1	aggr	The maximum latency between the occurrence of the stimulus and the occureence of the corresponding response of the associatied event chain.		
minimum	Multidimensiona ITime	1	aggr	Tags: xml.sequenceOffset=20 The minimum latency between the occurrence of the stimulus and the occureence of the corresponding response of the associatied event chain.		
				Tags: xml.sequenceOffset=10		
nominal	Multidimensiona ITime	1	aggr	The nominal latency between the occurrence of the stimulus and the occureence of the corresponding response of the associatied event chain.		
				Tags: xml.sequenceOffset=30		



Attribute	Datatype	Mul.	Kind	Note
scope	TimingDescripti onEventChain	1	ref	The event chain that defines the scope of the constraint.

Table 7.9: LatencyTimingConstraint

Enumeration	LatencyConstraintTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Latency TimingConstraint
Note	This is used to describe the type of the latency timing constraint.
Literal	Description
age	In this case, the latency constraint is seen from the perspective of the response event of the associated event chain. Given a certain response event, the age interval of the latest stimulus is constrained.
reaction	In this case, the latency constraint is seen from the perspective of the stimulus event of the associated event chain. Given a certain stimulus event, the reaction interval of the first response is constrained.

Table 7.10: LatencyConstraintTypeEnum

The attributes minimum, maximum, and nominal of a LatencyTimingConstraint can be used to define a lower and upper bound, as well as a nominal value for the latency of the event chain in the scope.

The application of latency constraints leads to some interesting observations:

- In systems without over- and undersampling, *age* and *reaction* are the same. But timing constraints are implementation-independent. Thus, at specification time when the implementation is not necessarily known, the correct latency constraint semantics has to be specified.
- The minimum reaction and the minimum age latency of an event chain are always equal.

7.3 AgeConstraint

Sometimes it is necessary to specify the age of data, when it arrives at a component on its required port with <code>SenderReceiverInterface</code>. If the sender of the data is known, a <code>TimingDescriptionEventChain</code> can be defined from the sender to the receiver port and a <code>LatencyTimingConstraint</code> with <code>age</code> semantic represents the specification of the data age. However, the actual sender of the data may be unknown. In this case the definition of a <code>TimingDescriptionEventChain</code> is not possible.

[TPS_TIMEX_00005] AgeConstraint to specify age constraints \[\text{The element AgeConstraint} \] is used to specify a minimum and maximum age that is tolerated when a variable data prototypes is received. \[\] (RS_TIMEX_00001, RS_TIMEX_00009)



Instead of an event chain, the scope of an age constraint is a TDEventVariableDataPrototype. Every time the scoped event occurs, the VariableDataPrototype shall have the specified data age.

At a later stage during the development, when the refined software architecture exposes the relation between the actual sender of the data and the receiver, an event chain between the sending and receiving point in time shall be defined and associated with a LatencyTimingConstraint (see 7.2) in order to refine the previous defined age constraint.

Typically, the age constraint restricts the time interval between the physical creation of the original sensor data by the corresponding sensor hardware and the availability of the data in the communication buffer (of the RTE) of the receiving SWC.

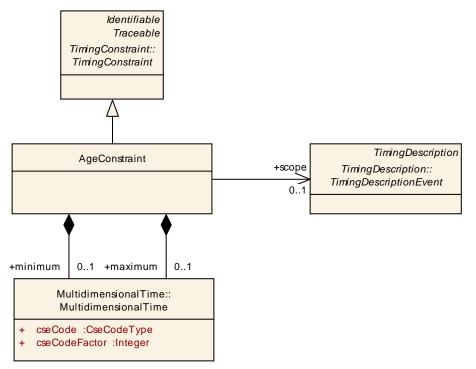


Figure 7.21: Age constraint

An AgeConstraint can define a minimum and maximum age for the VariableDataPrototype referenced by the TDEventVariableDataPrototype scope.

[constr_4504] Restricted usage of AgeConstraint \lceil An AgeConstraint shall only be defined for events of type TimingDescriptionEvent associated with the receipt and reading of data. \mid ()



Class	AgeConstraint	AgeConstraint			
Package	M2::AUTOSARTe Constraint	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Age Constraint			
Note	The AgeConstraint is used to impose a constraint on an Timing Description Event referenced by the scope. A minimum and a maximum age can be specified.				
Base	ARObject, Identifia	ARObject, Identifiable, Multilanguage Referrable, Referrable, Timing Constraint, Traceable			
Attribute	Datatype	Mul.	Kind	Note	
maximum	Multidimensiona ITime	01	aggr	The maximum age.	
minimum	Multidimensiona ITime	01	aggr	The minimum age.	
scope	TimingDescripti onEvent	01	ref	The scope of an AgeConstraint is any TimingDescriptionEvent that indicates any receipt of data.	

Table 7.11: AgeConstraint

7.4 SynchronizationTimingConstraint

The objective of synchronization in a distributed environment is to establish and maintain a consistent time base for the interaction between different subsystems, in order to obtain correct runtime order and avoid unexpected race conditions. While mechanisms to establish synchronization need to be provided at the implementation level, the necessity for synchronization needs to be expressed at design level. For this purpose, synchronization constraints are used.

[TPS_TIMEX_00006] SynchronizationTimingConstraint specifies synchronicity constraints [The element SynchronizationTimingConstraint is used to specify a synchronization constraint among the occurrences of two or more timing description events.](RS_TIMEX_00001, RS_TIMEX_00002, RS_TIMEX_00007, RS_TIMEX_00008, RS_TIMEX_00017)

A SynchronizationTimingConstraint is imposed either on events (7.4.2) or on event chains (7.4.1).



Class	SynchronizationTimingConstraint								
Package	M2::AUTOSARTe SynchronizationTi			onStructure::Timing::TimingConstraint::					
Note	This constraint is used to restrict the timing behavior of different, but correlated every or event chains, with regard to synchronization.								
		Thereby, in case of imposing a synchronization timing constraint on events or event chains the following two scenarios are supported:							
	1) [synchronizationConstraintType=responseSynchronization] Events: An arbitrary number of correlated events which play the role of responses shall occur synchronously with respect to a predefined tolerance. Event Chains: An arbitrary number of correlated event chains with a common stimulus, but different response where the responses shall occur synchronously with respect to a predefined tolerance.								
	2) [synchronizationConstraintType=stimulusSynchronization] Events: An arbitrary number of correlated events which play the role of stimuli shall occur synchronously with respect to a predefined tolerance. Event Chains: An arbitrary number of correlated event chains with a common response, but different stimuli, where the stimuli shall occur synchronously with respect to a predefined tolerance.								
	In case of imposir scenarios are sup		chroniza	ation timing constraint on events the following two					
	(eventOccurrent in the given time time in the given time in t		singleC	ccurrence] Any of the events shall occur only once					
		iven tim	e interva	eOccurrences] Any of the events may occur more al. In other words multiple occurrences of an event permitted.					
Base	ARObject,Identifia	ble,Mul		geReferrable,Referrable,TimingConstraint,Traceable					
Attribute	Datatype	Mul.	Kind	Note					
eventOccu rrenceKind	EventOccurrenc eKindEnum	01	attr	The specific occurrence kind of an event occurring within the given time interval.					
scope	TimingDescripti onEventChain	*	ref	The event chain that is in the scope of the constraint.					
scopeEven t	TimingDescripti onEvent	*	ref	The event that is in the scope of the constraint.					
synchroniz ationConst raintType	Synchronization TypeEnum	1	attr	The specific type of this synchronization constraint.					
tolerance	Multidimensiona ITime	1	aggr	The maximum time interval, within which the synchronized events must occur.					

Table 7.12: SynchronizationTimingConstraint

Enumeration	EventOccurrenceKindEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint
Note	This is used to describe the type of the occurrence of an event within a given time interval.
Literal	Description



multiple Occurrences	Specifies that an event may occur more than once in a given time interval.
singleOccur- rence	Specifies that an event shall occur only once in a given time interval.

Table 7.13: EventOccurrenceKindEnum

Enumeration	SynchronizationTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint:: SynchronizationTimingConstraint
Note	This is used to describe the type of the synchronization timing constraint.
Literal	Description
response Synchroniza- tion	In case that the Synchronization Timing Constraint is specified for event chains, the response events of the associated event chains must occur synchronously with respect to the specified tolerance. All associated event chains must have the same stimulus event.
	In case that the Synchronization Timing Constraint is specified for events, the associated events must occur synchronously with respect to the specified tolerance. All associated events represent the response events of a common stimulus event, even such a stimulus event is not known yet or not available in the scope of the model.
stimulusSyn- chronization	In case that the Synchronization Timing Constraint is specified for event chains, the stimulus events of the associated event chains must occur synchronously with respect to the specified tolerance. All associated event chains must have the same response event.
	In case that the Synchronization Timing Constraint is specified for events, the associated events must occur synchronously with respect to the specified tolerance. All associated events represent the stimulus events of a common response event, even such a response event is not known yet or not available in the scope of the model.

Table 7.14: SynchronizationTypeEnum

[constr_4522] SynchronizationTimingConstraint shall either reference events or event chains [The SynchronizationTimingConstraint shall either reference timing description events or timing description event chains, but not both at the same time. |()



7.4.1 SynchronizationTimingConstraint on Event Chains

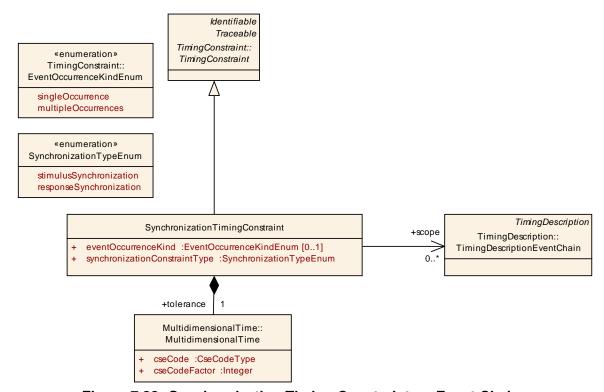


Figure 7.22: Synchronization Timing Constraint on Event Chains

The purpose of the SynchronizationTimingConstraint is to impose a synchronization constraint among either the stimulus or response event occurrences of two or more event chains. In the former case (stimulus synchronization) the referenced event chains shall have the same response event (join), or in the latter case (response synchronization) they shall have the same stimulus event (fork).

The SynchronizationTimingConstraint is characterized by the following parameters:

- Tolerance
- Event Occurrence Kind
- Synchronization Constraint Type

The parameters are described in the following and are illustrated in Figure 7.23 and Figure 7.24.

Tolerance The parameter tolerance specifies the time interval within which the referenced events shall occur synchronously. The events may occur in any order within this time interval. The time interval starts at the point-in-time when one of the referenced events occurs.


Event Occurrence Kind The optional parameter eventOccurrenceKind specifies whether the referenced events shall occur only once (single occurrence) or may occur multiple times (multiple occurrences) in the given time interval.



Synchronization Constraint Type The parameter synchronizationConstraintType specifies whether the SynchronizationTimingConstraint is imposed on the stimulus or response events of the referenced event chains.

[constr_4514] SynchronizationTimingConstraint shall reference at least two event chains [In the case, that the SynchronizationTimingConstraint is imposed on event chains then at least two (2) timing description event chains shall be referenced. |()

[constr_4521] Specifying attribute synchronizationConstraintType [The attribute synchronizationConstraintType shall be specified if the SynchronizationTimingConstraint is imposed on event chains.]()

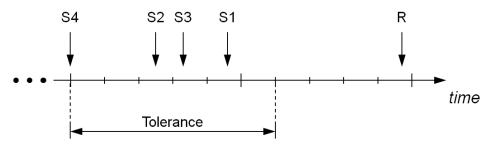


S# Stimulus Event

R Response Event

▼ Event Occurrence

Figure 7.23: Parameters characterizing the Synchronization Timing Constraint imposed on the stimulus events of event chains.

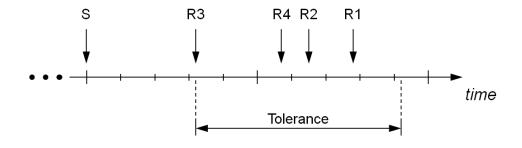

S Stimulus Event

R# Response Event

▼ Event Occurrence

Figure 7.24: Parameters characterizing the Synchronization Timing Constraint imposed on the response events of event chains.

An example for synchronizing on *stimuli* of event chains would be an adaptive cruise control that expects data from different sensors, which shall be sampled (quasi) simultaneously with respect to a predefined tolerance.



An example for synchronizing on *responses* of event chains would be the blinking of different indicator lights, which shall occur (quasi) simultaneously with respect to a predefined tolerance.

7.4.2 SynchronizationTimingConstraint on Events

As mentioned above, the purpose of the SynchronizationTimingConstraint is to impose a synchronization constraint among either the stimulus or response event occurrences of two or more event chains. However, in some cases the complete event chains are not entirely known, or not available in the scope of the model, at the point in time the timing constraint shall be specified. For this purpose, the AUTOSAR Timing Extensions allow the specification of synchronization constraints on events. In this case, the events referenced by the constraint are related implicitly, because they have a common stimulus (in case of constraint type responseSynchronization or a common response (in case of constraint type stimulusSynchronization not known yet, or not available in the scope of the model.

At a later stage during the development, when the refined software architecture exposes the complete event chains (e.g. because the common stimulus gets known), the respective event chains shall be specified and associated with a SynchronizationTimingConstraint on event chains (see 7.4.1) in order to refine the previously defined SynchronizationTimingConstraint on events.

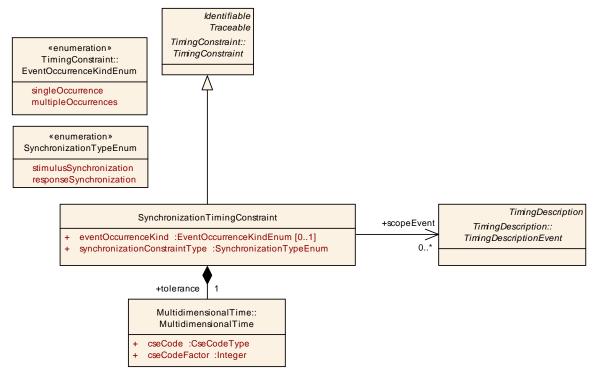


Figure 7.25: Synchronization Timing Constraint on Events



The purpose of the SynchronizationTimingConstraint is to impose a synchronization constraint among the occurrences of two or more events. The SynchronizationTimingConstraint is characterized by the following parameters:

- Tolerance
- Event Occurrence Kind
- Synchronization Constraint Type

The parameters are described in the following and are illustrated in Figure 7.26.


Tolerance The parameter tolerance specifies the time interval within which the referenced events shall occur synchronously. The events may occur in any order within this time interval. The time interval starts at the point-in-time when one of the referenced events occurs.

Event Occurrence Kind The parameter eventOccurrenceKind specifies whether the referenced events shall occur only once (single occurrence) or may occur multiple times (multiple occurrences) in the given time interval.

Synchronization Constraint Type The parameter synchronizationConstraintType specifies whether the associated events of the SynchronizationTimingConstraint have a common stimulus or response.

[constr_4513] SynchronizationTimingConstraint shall reference at least two events [In the case, that the SynchronizationTimingConstraint is imposed on events then at least two (2) timing description events shall be referenced. |()

[constr_4520] Specifying attribute synchronizationConstraintType [The attribute synchronizationConstraintType shall be specified if the SynchronizationTimingConstraint is imposed on events.]()

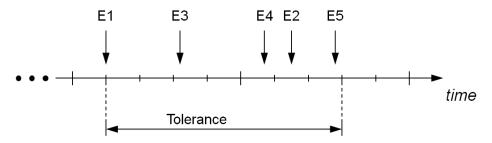

E# Event #

▼ Event Occurrence

Figure 7.26: Parameter characterizing the Synchronization Constraint



7.5 OffsetTimingConstraint

[TPS_TIMEX_00015] OffsetTimingConstraint specifies offset between occurrences of events [The element OffsetTimingConstraint is used to specify an offset between the occurrences of two timing description events.](RS_TIMEX_00001, RS_TIMEX_00008)

An OffsetTimingConstraint bounds the time offset between the occurrence of two timing events, without requiring a direct functional dependency between the source and the target.

This constraint type is frequently used in combination with the timing event TDE-ventCycleStart as source. In this case, the target event (e.g. the start of a RunnableEntity) is in most of the cases functional independent from the the source event.

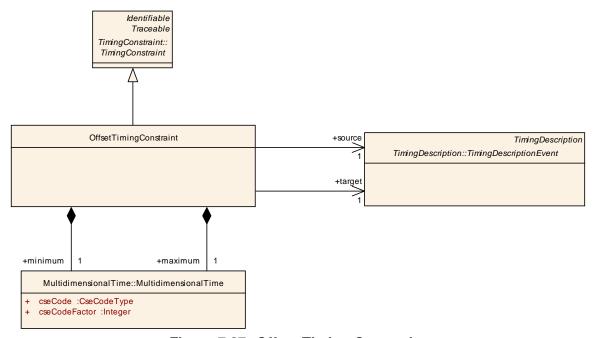


Figure 7.27: Offset Timing Constraint



Class	OffsetTimingCor	straint			
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Offset Constraint				
Note		Bounds the time offset between the occurrence of two timing events, without requiring a direct functional dependency between the source and the target.			
	with the maximum every source ever	If the target event occurs, it is expected to occur earliest with the minimum, and latest with the maximum offset relatively after the occurrence of the source event. Note: not every source event occurrence must be followed by a target event occurrence. In contrast to LatencyTimingConstraint, there must not necessarily be a causal dependency between the source and target event.			
Base	ARObject,Identifia	ıble,Mul	tilangua	geReferrable,Referrable,TimingConstraint,Traceable	
Attribute	Datatype	Mul.	Kind	Note	
maximum	Multidimensiona ITime	1	aggr	The maximum offset the target event occurs relatively after the occurrence of the source event.	
				Tags: xml.sequenceOffset=20	
minimum	Multidimensiona ITime	1	aggr	The mimum offset the target event occurs relatively after the occurrence of the source event.	
			_	Tags: xml.sequenceOffset=10	
source	TimingDescripti onEvent	1	ref	The timing event that the target event is to be synchronized with.	
target	TimingDescripti onEvent	1	ref	The timing event which is expected to occur timely after the source event.	

Table 7.15: OffsetTimingConstraint

7.6 ExecutionOrderConstraint

[TPS_TIMEX_00007] ExecutionOrderConstraint specifies sequence of executing executable entities [The element ExecutionOrderConstraint is used to specify the order of execution of a number of ExecutableEntitys. $\[|(RS_TIMEX_00001, RS_TIMEX_00002, RS_TIMEX_00014) \]$

An ExecutionOrderConstraint can be used in any of the timing views specified by the AUTOSAR Timing Extensions, as long as the ExecutableEntitys and/or the AbstractEvents to be referenced are available in other AUTOSAR models, namely the Software Component Description and the Basic Software Module Description.



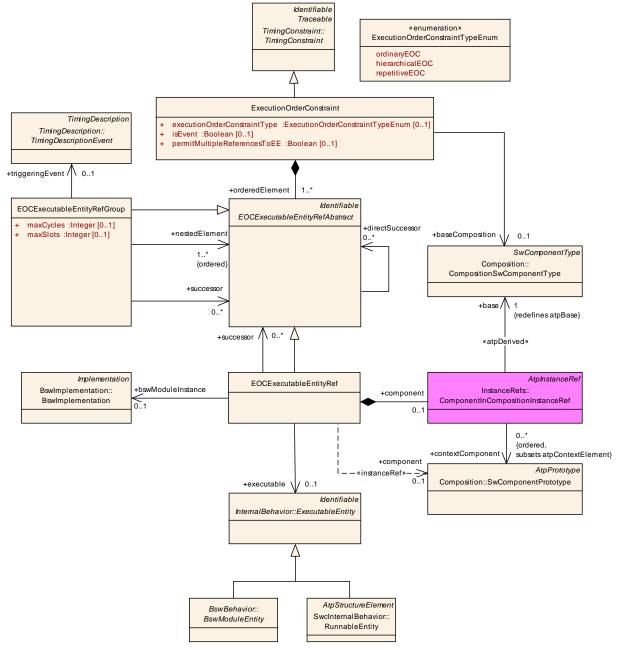


Figure 7.28: Specification of execution order constraints using Executable Entities.



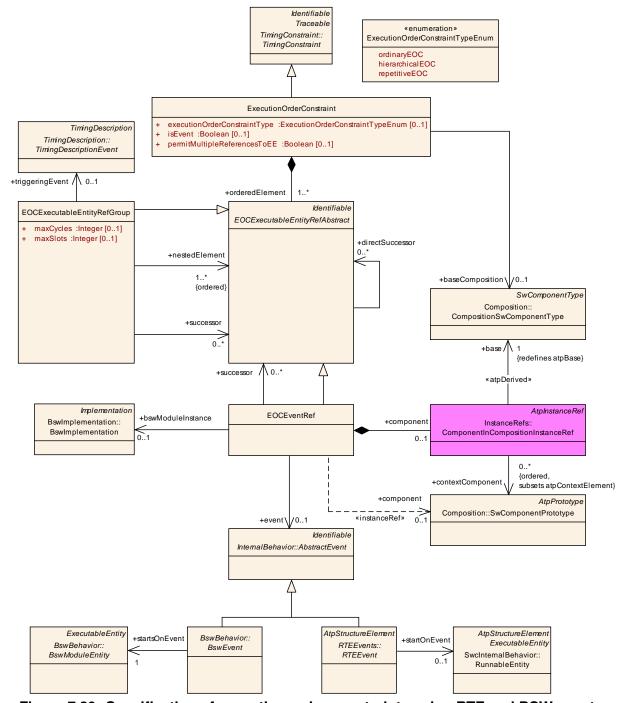


Figure 7.29: Specification of execution order constraints using RTE and BSW events.



Class	ExecutionOrder	Constra	int				
Package	M2::AUTOSARTe OrderConstraint	mplates	:::Comm	onStructure::Timing::TimingConstraint::Execution			
Note				the order of execution for a set of ExecutableEntities. In be used in any timing view.			
	The various scopes for ExecutionOrderConstraint are described below. Generally, each ExecutionOrderConstraint has a scope of software components and can reference all executable entities available in the corresponding internal behavior (RunnableEntity and BswModuleEntity) either directly or by the events activating respectively starting them (RteEvent and BswEvent).						
	of the composition	n hierard	chy refer	Constraint can be specified for RunnableEntities part renced by the VfbTiming. The egated by the VfbTiming.			
	part of the Interna	alBehavi	or refere	rConstraint can be specified for RunnableEntities enced by the SwcTiming. The egated by the SwcTiming.			
	part of the compo	sition hi	erarchy	derConstraint can be specified for RunnableEntities of the system referenced by the SystemTiming. The egated by the SystemTiming.			
	On BSW Module level, an ExectionOrderConstraint can be specified for BswModuleEntities part of an BswInternalBehavior referenced by the BswModuleTiming. The ExecutionOrderConstraint is aggregated by the BswModuleTiming.						
	and Events availa Module Configura	On ECU level an ExecutionOrderConstraint can be specified for all ExecutableEntities and Events available via the EcucValueCollection, covering ECU Extract and BSW Module Configuration, referenced by the EcuTiming. The ExecutionOrderConstraint is aggregated by the EcuTiming.					
Base	ARObject, Identifia	able,Mul	tilangua	geReferrable,Referrable,TimingConstraint,Traceable			
Attribute	Datatype	Mul.	Kind	Note			
baseComp osition	CompositionSw ComponentTyp e	01	ref	Specifies the composition SW-C type playing the role of a SW-C containing further SW-Cs and represents the scope of the Execution Order Constraint.			
execution OrderCons traintType	ExecutionOrder ConstraintType Enum	01	attr	Specifies the specific type of ExecutionOrderConstraint.			
isEvent	Boolean	01	attr	Indicates whether the ExecutionOrderConstraint is only referring to Executable Entities (FALSE) or only to RTE and/or BSW Events (TRUE).			
orderedEle ment	EOCExecutable EntityRefAbstra ct	1*	aggr	The list of references to ExecutableEntities which shall be ordered.			
permitMulti pleReferen cesToEE	Boolean	01	attr	Indicates that the ExecutionOrderConstraints permits that an Executable Entity is referenced multiple times (TRUE) or only once (FALSE) in the constraint.			

Table 7.16: ExecutionOrderConstraint



Enumeration	ExecutionOrderConstraintTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Execution
	OrderConstraint
Note	This is used to describe the specific type of the ExecutionOrderConstraint.
Literal	Description
hierarchicalE	Specifies that the Execution Order Constraint specifies a hierarchical execution
OC	order constraint.
ordinaryEOC	Specifies that the Execution Order Constraint specifies an ordinary execution order constraint.
repetitiveEO C	Specifies that the Execution Order Constraint specifies a repetitive execution order constraint.

Table 7.17: ExecutionOrderConstraintTypeEnum

Class	EOCExecutableEntityRefAbstract (abstract)				
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Execution OrderConstraint				
Note	This is the abstractions for Execution Order Constraint Executable Entity References (leaves) and Execution Order Constraint Executable Entity Reference Groups (composites).				
Base	ARObject,Identifia	ARObject,Identifiable,MultilanguageReferrable,Referrable			
Attribute	Datatype	Mul.	Kind	Note	
directSucc essor	EOCExecutable EntityRefAbstra ct	*	ref	The direct successor of an executable entity or a group of executable entities.	

Table 7.18: EOCExecutableEntityRefAbstract

Class	EOCExecutableE	ntityRe	fGroup		
Package	M2::AUTOSARTe OrderConstraint	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Execution OrderConstraint			
Note	Executable Entity	This is used to specify a group (composite) consisting of Execution Order Constraint Executable Entity References (leaves) and/or further Execution Order Constraint Executable Entity Reference Groups (composite).			
Base	ARObject, EOCEx Referrable, Referra		EntityR	efAbstract,Identifiable,Multilanguage	
Attribute	Datatype	Mul.	Kind	Note	
maxCycles	Integer	01	attr	In case of a Repetitive Execution Order Constraint this attribute specifies the number of cycles the Execution Order Constraint is considering.	
maxSlots	Integer	01	attr	In case of a Repetitive Execution Order Constraint this attribute specifies the number of slots every cycle of the Execution Order Constraint is consisting of.	
nested Element (ordered)	EOCExecutable EntityRefAbstra ct	1*	ref	This association is used to establish hierarchies of EOCEER Groups and References.	



Attribute	Datatype	Mul.	Kind	Note
successor	EOCExecutable EntityRefAbstra ct	*	ref	The logical successor of an executable entity or a group of executable entities.
triggeringE vent	TimingDescripti onEvent	01	ref	In case of a Repetitive Execution Order Constraint this association references the timing description event triggering every cycle.

Table 7.19: EOCExecutableEntityRefGroup

Class	EOCExecutableEntityRef					
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Execution OrderConstraint					
Note	This is used to define a reference to an ExecutableEntity If the ExecutionOrderConstraint is defined on VFB, System or ECU level, a reference					
	to the SwComponentPrototype, via the ComponentInCompositionInstanceRef, the referenced ExecutableEntity belongs to, must be provided as context information.					
Base	ARObject, EOCExecutable Entity Ref Abstract, Identifiable, Multilanguage Referrable, Referrable					
Attribute	Datatype	Mul.	Kind	Note		
bswModul eInstance	BswImplementa tion	01	ref	Specifies the BSW module instance the BSW module entity belongs to.		
component	SwComponentP rototype	01	iref	This association references the specific instance of the SW-C prototype.		
executable	ExecutableEntit y	01	ref	The ExecutableEntity whose execution order is restricted by the contraint.		
successor	EOCExecutable EntityRefAbstra ct	*	ref	The logical successor of an executable entity or a group of executable entities.		

Table 7.20: EOCExecutableEntityRef

Class	EOCEventRef					
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Execution OrderConstraint					
Note	This is used to define a reference to an RTE or BSW Event.					
Base	ARObject, EOCExecutable Entity Ref Abstract, Identifiable, Multilanguage Referrable, Referrable					
Attribute	Datatype	Mul.	Kind	Note		
bswModul eInstance	BswImplementa tion	01	ref	Specifies the BSW module instance the BSW event is related to.		
component	SwComponentP rototype	01	iref	This association references the specific instance of the SW-C prototype.		
event	AbstractEvent	01	ref	The AbstractEvent (event) whose execution order is restricted by the contraint.		
successor	EOCExecutable EntityRefAbstra ct	*	ref	The logical successor of an executable entity or a group of executable entities.		

Table 7.21: EOCEventRef



[TPS_TIMEX_00038] Purpose of EOCExecutableEntityRefAbstract | The element EOCExecutableEntityRefAbstract is an abstract class that represents both primitives EOCExecutableEntityRef/EOCEventRef and their composites EOCExecutableEntityRefGroup. Essentially, it is used to compose EOCExecutableEntityRefGroups, EOCExecutableEntityRefs and EOCEventRefs into tree structures to represent part-whole hierarchies. | (RS_TIMEX_00001, RS_TIMEX_00002, RS_TIMEX_00014)

[TPS_TIMEX_00047] Purpose of ExecutionOrderConstraintTypeEnum [The element ExecutionOrderConstraintTypeEnum is used to specify the type of the execution order constraint and indicates whether it is an ordinary (7.6.1), hierarchical (7.6.2), or repetitive (7.6.3) one. \(\] (RS_TIMEX_00001, RS_TIMEX_00002, RS_TIMEX_00014)

[TPS_TIMEX_00041] Purpose of EOCExecutableEntityRefGroup [The element EOCExecutableEntityRefGroup is used to define composites of EOCExecutableEntityRefGroups, EOCExecutableEntityRefs and EOCEventRefs.] (RS_TIMEX_00001, RS_TIMEX_00002, RS_TIMEX_00014)

[TPS_TIMEX_00046] Purpose of EOCExecutableEntityRef [The element EOCExecutableEntityRef is used to reference executable entities (ExecutableEntity) which shall be executed in a specific order. | (RS_TIMEX_00001, RS_TIMEX_000014)

[TPS_TIMEX_00048] Purpose of ECCEventRef [The element ECCEventRef is used to reference RTEEvents and BswEvents in order to specify an execution order of executable entities. | (RS TIMEX 00001, RS TIMEX 00002, RS TIMEX 00014)

The elements described above can be used for creating different patterns of Execution Order Constraints for various purposes. These patterns are described in the following subsections. The constraints listed below applied to all of these patterns.

[constr_4525] Precedence of successor relationships successor and direct-Successor [The successor relationships successor and directSuccessor take always precedence over the ordered multiplicity of the association nestedElement.]()

[constr_4532] Successor relationship is not self-referencing [The target and source of the successor relationships successor and directSuccessor shall not be the same. In other words an EOCExecutableEntityRef and EOCExecutableEntityRef and EOCExecutableEntityRefGroup shall not reference itself as its logical or direct successor.]()

[constr_4533] Maximum number of successor relationships [The maximum number of successor relationships, namely successor or directSuccessor, between two EOCExecutableEntityRefs, between two EOCEventRefs, between two EOCExecutableEntityRefGroups, between an EOCExecutableEntityRef and an EOCExecutableEntityRefGroup, or between an EOCEventRef and an EOCExecutableEntityRefGroup is one (1). |()



[constr_4534] Maximum number of directSuccessor relationships [The number of directSuccessor relationships of an EOCExecutableEntityRef, an EOCEventRef, or an EOCExecutableEntityRefGroup shall not exceed the number of independent execution units available in a system. | ()

[constr_4535] An ExecutionOrderConstraint needs to be consistent regarding effective modes [In case of an ExecutionOrderConstraint using events there exists a mode in which all referenced events are enabled; in other words the events are not disabled. In case of an ExecutionOrderConstraint using ExecutableEntitys there exists a mode in which all referenced ExecutableEntitys are enabled and ExecutableEntitys without any event are considered to be always enabled. If ExecutableEntitys are started by a single event then this particular event is considered and for ExecutableEntitys with multiple events the superset of the related modes is considered. | ()

[constr_4536] Compatible recurrence of any ExecutableEntity [In an ExecutionOrderConstraint the ExecutableEntitys, referenced by all EOCExecutableEntityRefs respectively all EOCEventRefs, shall be compatible with regard to their recurrence.]()

[constr_4537] References among elements in an ExecutionOrderConstraint An EOCExecutableEntityRef respectively EOCEventRef or an EOCExecutableEntityRefGroup shall reference only EOCExecutableEntityRefS, respectively all EOCEventRefS, or EOCExecutableEntityRefGroups which are part of the same ExecutionOrderConstraint. |()

[constr_4545] Referring either ExecutableEntitys or AbstractEvents [An ExecutionOrderConstraint shall contain either only EOCExecutableEntityRef or only EOCEventRef, but not both. In the former case ExecutableEntitys are referenced and in the latter case AbstractEvents are referenced. |()

[constr_4546] Setting the attribute isEvent | The value of the attribute isEvent shall be set to "TRUE" if and only if the execution order constraint refers to events only (refer to [constr_4545]). The value of the attribute isEvent shall be set to "FALSE" if and only if the execution order constraint refers to executable entities only (refer to [constr_4545]). | ()

[constr_4547] Setting the attribute permitMultipleReferencesToEE [The value of the attribute permitMultipleReferencesToEE shall be specified if and only if the value of the attribute isEvent (refer to [constr_4546]) is set to "FALSE". In other words specifying whether an executale entity is permitted to be referenced more than once in an execution order constraint is only allowed in case of an execution order constraint referring to executable entities only. | ()

7.6.1 Ordinary Execution Order Constraint

The *Ordinary* Execution Order Constraint is used to specify an order of execution of executable entities. As sketched in Figure 7.30 the execution order constraint contains



a number of execution entity references which reference the executable entities the execution order is imposed on. The associations <code>successor</code> and <code>directSuccessor</code> are used to specify the type of successor relationship and enforce the order of execution.

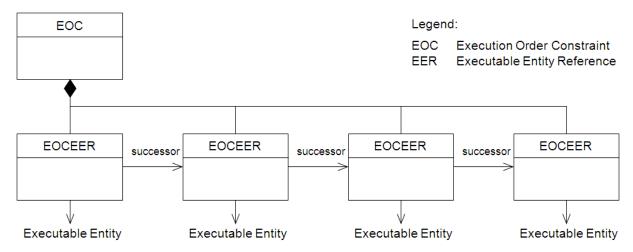


Figure 7.30: Example of an Ordinary Execution Order Constraint

In Figure 7.31 the execution order constraint contains a number of event references which reference the specific events—RTE events or BSW events—the execution order is imposed on.

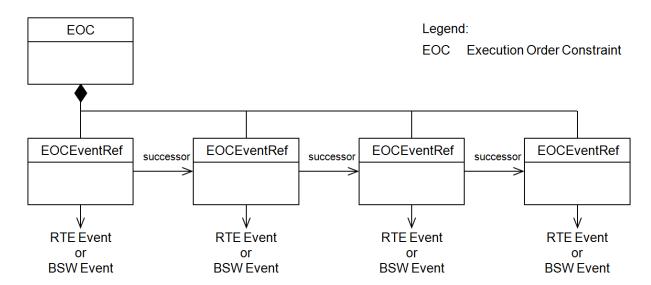


Figure 7.31: Example of an Ordinary Execution Order Constraint referencing events— RTE Events or BSW Events

[constr_4541] EOCExecutableEntityRef shall reference ExecutableEntity in Ordinary Execution Order Constraint | In an Ordinary Execution Order Constraint all EOCExecutableEntityRefs shall reference an ExecutableEntity. | ()



[constr_4548] EOCEventRef shall reference AbstractEvent in Ordinary Execution Order Constraint | In an Ordinary Execution Order Constraint all EOCEventRefs shall reference an AbstractEvent. | ()

7.6.2 Hierarchical Execution Order Constraint

The *Hierarchical* Execution Order Constraint is used to specify an order of execution of executable entities using the capability of creating groups of executable entities. In other words, it enables to specify tree-like structures of executable entity references respectively event references and executable entity reference groups. As sketched in Figure 7.32 the execution order constraint contains a number of execution entity references and one executable entity reference group, which in turn references a number of executable entity references referencing executable entities. The associations <code>suc-cessor</code> and <code>directSuccessor</code> between these references and the group are used to specify the type of successor relationship and enforce the order of execution.

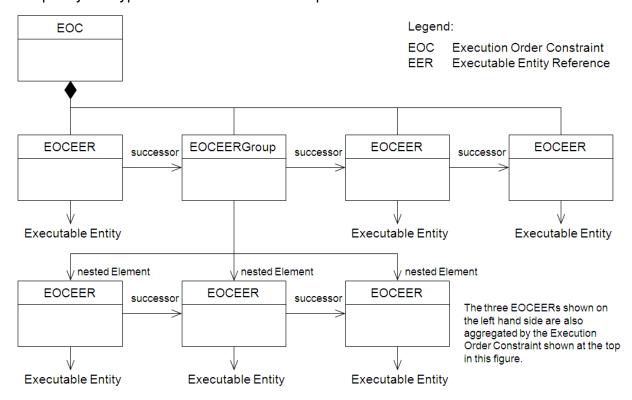


Figure 7.32: Example of a Hierarchical Execution Order Constraint

The following constraints shall be considered when creating Hierarchical Execution Order Constraints:

[constr_4523] Specifying attributes maxCycles and maxSlots [The optional attributes maxCycles and maxSlots shall never be specified in any element EOCExecutableEntityRefGroup that is part of a hierarchical execution order constraint. $| () \rangle$



[constr_4524] Referencing TimingDescriptionEvent [Any element EOCExecutableEntityRefGroup that is part of a hierarchical execution order constraint shall not reference any timing description event TimingDescriptionEvent. | ()

[constr_4538] Hierarchical Execution Order Constraint: EOCExecutableEntityRef, EOCExecutableEntityRefGroup shall be target or source of a successor relationship [In a given Hierarchical Execution Order Constraint, each EOCExecutableEntityRef, EOCEventRef, and EOCExecutableEntityRefGroup which is not part of an EOCExecutableEntityRefGroup shall be target or source of at least one successor relationship.]()

[constr_4542] EOCExecutableEntityRef shall reference ExecutableEntity in Hierarchical Execution Order Constraint [In an Hierarchical Execution Order Constraint all EOCExecutableEntityRefs shall reference an ExecutableEntity. | ()

[constr_4549] EOCEventRef shall reference AbstractEvent in Hierarchical Execution Order Constraint | In an Hierarchical Execution Order Constraint all EOCEventRefs shall reference an AbstractEvent. |()

[constr_4550] A Hierarchical Execution Order Constraint shall have an unambiguous root EOCExecutableEntityRefGroup [A Hierarchical Execution Order Constraint may contain multiple orderedElements, which may be any combination of any number of EOCExecutableEntityRefs respectively EOCEventRefs and EOCExecutableEntityRefGroups. Among these needs to be exactly one EOCExecutableEntityRefGroup being neither target nor source of any successor or directSuccessor relationship. This EOCExecutableEntityRefGroup is the root of the Hierarchical Execution Order Constraint.]()

7.6.3 Repetitive Execution Order Constraint

The Repetitive Execution Order Constraint is used to specify varying execution order constraints depending on subsequent occurrences of a specific event. This enables one to specify that specific execution order constraints are imposed on a given number of executable entities whenever the particular timing description event occurs. For example, if the event A occurs the first time then the executable entities one (1), two (2) and three (3) shall be executed in this given order; if the event occurs the second time then the executable entities one (1), four (4) and five (5) shall be executed in this given order. And if the event A occurs a third time then the executable entities one (1), two (2) and three (3) shall be executed in this order again. And if the event A occurs a fourth time then the executable entities one (1), four (4) and five (5) shall be executed in this given order; and so forth. The occurrences of the specified event are called cycles and the order of the executable entities within a cycle is arranged by slots.

As sketched in Figure 7.33 the Repetitive Execution Order Constraints follows a specific pattern.



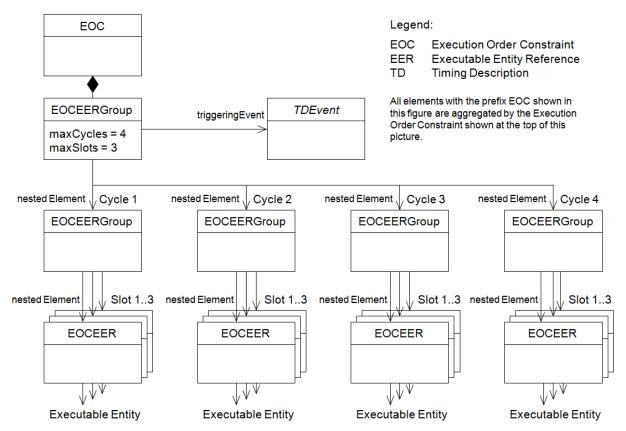


Figure 7.33: Example of a Repetitive Execution Order Constraint

The Repetitive Execution Order Constraint follows the pattern of the Hierarchical Execution Order Constraint, but some restrictions apply to the use and structure of groups of executable entity references. The execution order constraint consist of one group of executable entity references, called the *root* group, which references only other groups of executable entity references. And these groups in turn reference executable entity references respectively event references which eventually reference the specific executable entities respectively events. The *root* group specifies the maximum number of cycles maxCycles and the maximum number of slots maxSlots. The maximum number of cycles specifies the number of subsequent event occurrences after which the execution order constraint repeats, hence the name Repetitive Execution Order Constraint. And the maximum number of slots specifies the number of executable entities that are executed in a given order within a cycle.

Please note that the term maxCycles, respectively *cycle*, is a synonym for the term maxRepetitions, respectively *repetition*.

The table below presents the repetitive execution order constraint sketched in Figure 7.33 in a tabular way.

		Slots	
	1	2	3
Cycle 1	RE1	RE2	RE3
Cycle 2	RE1	RE4	RE5



Cycle 3	RE7	RE8	RE9
Cycle 4	RE1	RE8	RE6

Table 7.22: Example Repetitive Execution Order Constraint

The following constraints shall be considered when creating Repetitive Execution Order Constraints:

[constr_4526] Specifying maxCycles and maxSlots in a Repetitive Execution Order Constraint [The optional attributes maxCycles and maxSlots shall be specified only by the *root* group of executable entity references EOCExecutableEntityRef-Group.]()

[constr_4527] Referencing TimingDescriptionEvent in a Repetitive Execution Order Constraint | The TimingDescriptionEvent shall be specified only by the root group of executable entity references EOCExecutableEntityRefGroup. |()

[constr_4528] The *root* EOCExecutableEntityRefGroup shall reference only EOCExecutableEntityRefGroups [The *root* EOCExecutableEntityRefGroup shall reference only groups of executable entity references respectively event references grouped by the element EOCExecutableEntityRefGroups. | ()

[constr_4529] Number of nested elements referenced by the *root* EOCExecutableEntityRefGroup | The number of nested elements referenced by the *root* EOCExecutableEntityRefGroup shall be exactly the number given by the attribute maxCycles. |()

[constr_4530] An EOCExecutableEntityRefGroup representing a cycle shall reference only EOCExecutableEntityRefs respectively EOCEventRefs [The EOCExecutableEntityRefGroup representing a cycle shall reference only executable entity references EOCExecutableEntityRefs respectively event references EOCEventRefs.]()

[constr_4531] Number of nested elements referenced by EOCExecutableEntityRefGroup representing a cycle | The number of nested elements referenced by a EOCExecutableEntityRefGroup representing a cycle shall be exactly the number given by the attribute maxSlots.]()

[constr_4539] The successor relationships successor and directSuccessor shall not be used [The successor relationships successor and directSuccessor shall not be used in a Repetitive Execution Order Constraint.]()

[constr_4540] maxCycles and maxSlots shall not be zero \lceil If the optional attributes maxCycles and maxSlots are used, then the values of the optional attributes maxCycles and maxSlots shall be greater than zero (0). \mid ()



7.7 ExecutionTimeConstraint

The AUTOSAR model provides a method to describe the execution time of an ExecutableEntity. Therefore the package ResourceConsumption contains the class ExecutionTime. The concept is described in the Basic Software Module Template document [6]. This execution time description represents a timing property of the system.

[TPS_TIMEX_00008] ExecutionTimeConstraint to specify execution time constraints [The element ExecutionTimeConstraint is used to specify minimum and maximum execution time constraints of executable entities.](RS_TIMEX_00001, RS_TIMEX_00013)

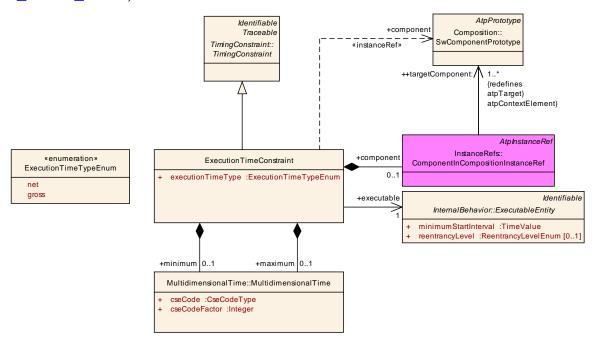


Figure 7.34: Execution time constraint

An ExecutionTimeConstraint references the ExecutableEntity, whose execution time shall be constrained. The ComponentInCompositionInstanceRef referenced by *component* defines the component instance, which contains the RunnableEntity (in case of a BSW ExecutableEntity, the *component* reference is omitted).



Class	ExecutionTimeConstraint				
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Execution TimeConstraint				
Note	An ExecutionTimeConstraint is used to specify the execution time of the referenced ExecutableEntity in the referenced component. A minimum and maximum execution time can be defined.				
	Two types of execution time semantics can be used. The desired semantics can be set by the attribute executionTimeType: The "net" execution time is the time used to execute the ExecutableEntity without interruption and without external calls. The "gross" execution time is the time used to execute the ExecutableEntity without interruption including external calls to other entities.				
	The time to execute the ExecutableEntity including interruptions by other entities and including external calls is commonly called "response time". The TimingExtensions provide the concept of event chains and latency constraints for that purpose. An event chain from the start of the entity to the termination of the entity with according latency constraint represents a response time constraint for that executable entity.				
Base	ARObject, Identifiable, Multilanguage Referrable, Referrable, Timing Constraint, Traceable				
Attribute	Datatype	Mul.	Kind	Note	
component	SwComponentP rototype	01	iref	The component that containts the referenced ExecutableEntity for the ExecutionTimeConstraint. If the entity is in a basic software module no component must be provided.	
executable	ExecutableEntit y	1	ref	The referenced ExecutableEntity for the ExecutionTimeConstraint.	
executionT imeType	ExecutionTimeT ypeEnum	1	attr		
maximum	Multidimensiona ITime	01	aggr	The maximum execution time.	
minimum	Multidimensiona ITime	01	aggr	The minimum execution time.	

Table 7.23: ExecutionTimeConstraint

Enumeration	ExecutionTimeTypeEnum
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingConstraint::Execution TimeConstraint
Note	
Literal	Description
gross	Indicates that the given execution time is the time used to execute the ExecutableEntity without any interruption and and including external calls.
net	Indicates that the given execution time is the time used to execute the ExecutableEntity without any interruption and without any external calls.

Table 7.24: ExecutionTimeTypeEnum



8 Application Notes

This chapter outlines two application examples describing a potential approach to use the Specification of Timing Extensions in a practical way. Furthermore, chapter 8.3 describes the use of external VFB events in more detail.

8.1 Component integration

One of the main concerns for the usage of the AUTOSAR development methodology and AUTOSAR exchange formats is the need of OEMs and suppliers to exchange specification data in a machine-readable, reliable and straightforward way in order for example to integrate components in systems. The primary purpose of the "Specification of Timing Extensions" is to facilitate requesting a specific timing behavior of such components. And this topic is described in this section in more detailed based on the basis of an integration scenario.

Integrating a software component instance delivered by an external party requires the provision of timing information related to this component. As this information can be attached to specific SwComponentType, with regards to its communication partners, the according view VfbTiming (see 3.2) is used. Additionally, specific timing constraints for implementing this software component are given, too.

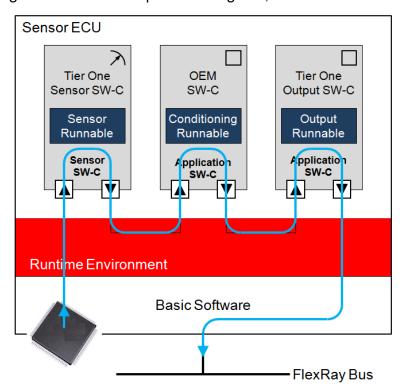


Figure 8.1: A Sensor ECU connected with a FlexRay Network and three software components



Figure 8.1 outlines the scenario in a demonstrative way. The shown ECU holds three software components: the first one, called "Sensor SW-C", reads data from a hardware sensor; the second one, called "Conditioning SW-C", performs signal data conditioning like filtering and averaging. And last but not least, the third one, called "Output SW-C", converts internal data representations (like 32bit Float) to ready-to-send data representations (like UInt16). As certain requirements for sensor data conditioning as an input for several other functions within the vehicle exist, the software component "Conditioning SW-C" may be delivered by the OEM, directly. A partial description of these components, ports, and interfaces is shown in listing 8.1.

Listing 8.1: Software Component Descriptions and Interface Definitions

```
<AR-PACKAGE>
  <SHORT-NAME>Interfaces
 <FT.EMENTS>
   <SENDER-RECEIVER-INTERFACE>
      <SHORT-NAME>InternalSensorData/SHORT-NAME>
      <DATA-ELEMENTS>
       <VARIABLE-DATA-PROTOTYPE>
         <SHORT-NAME>internValueX</SHORT-NAME>
         <TYPE-TREF DEST="APPLICATION-PRIMITIVE-DATA-TYPE">/Datatypes/
             Float < / TYPE - TREF >
       </VARIABLE-DATA-PROTOTYPE>
       <VARIABLE-DATA-PROTOTYPE>
         <SHORT-NAME>internValueY</SHORT-NAME>
         <TYPE-TREF DEST="APPLICATION-PRIMITIVE-DATA-TYPE">/Datatypes/
             Float</TYPE-TREF>
       </VARIABLE-DATA-PROTOTYPE>
        <VARIABLE-DATA-PROTOTYPE>
         <SHORT-NAME>internValueZ</SHORT-NAME>
         <TYPE-TREF DEST="APPLICATION-PRIMITIVE-DATA-TYPE">/Datatypes/
            Float</TYPE-TREF>
       </VARIABLE-DATA-PROTOTYPE>
      </DATA-ELEMENTS>
    </SENDER-RECEIVER-INTERFACE>
    <SENDER-RECEIVER-INTERFACE>
      <SHORT-NAME>OutputSensorData
      <CATEGORY />
      <DATA-ELEMENTS>
       <VARIABLE-DATA-PROTOTYPE>
         <SHORT-NAME>outValueX</SHORT-NAME>
         <TYPE-TREF DEST="APPLICATION-PRIMITIVE-DATA-TYPE">/Datatypes/
             UInt16</TYPE-TREF>
       </VARIABLE-DATA-PROTOTYPE>
        <VARIABLE-DATA-PROTOTYPE>
         <SHORT-NAME>outValueY
         <TYPE-TREF DEST="APPLICATION-PRIMITIVE-DATA-TYPE">/Datatypes/
             UInt16</TYPE-TREF>
       </VARIABLE-DATA-PROTOTYPE>
       <VARIABLE-DATA-PROTOTYPE>
         <SHORT-NAME>outValueZ</SHORT-NAME>
         <TYPE-TREF DEST="APPLICATION-PRIMITIVE-DATA-TYPE">/Datatypes/
             UInt16</TYPE-TREF>
       </VARIABLE-DATA-PROTOTYPE>
      </DATA-ELEMENTS>
```



```
</SENDER-RECEIVER-INTERFACE>
  </ELEMENTS>
</AR-PACKAGE>
<AR-PACKAGE>
 <SHORT-NAME>SensorPackage</SHORT-NAME>
    <SENSOR-ACTUATOR-SW-COMPONENT-TYPE>
     <SHORT-NAME>SensorComponent</SHORT-NAME>
     <PORTS>
       <P-PORT-PROTOTYPE>
         <SHORT-NAME>InternalSensorData
         <PROVIDED-INTERFACE-TREF DEST="SENDER-RECEIVER-INTERFACE">/
             Interfaces/InternalSensorData/PROVIDED-INTERFACE-TREF>
       </P-PORT-PROTOTYPE>
      </PORTS>
      <INTERNAL-BEHAVIORS>
       <SWC-INTERNAL-BEHAVIOR>
         <SHORT-NAME>SensorBehavior</SHORT-NAME>
         <RUNNABLES>
           <RUNNABLE-ENTITY>
             <SHORT-NAME>SensorRunnable/SHORT-NAME>
            </RUNNABLE-ENTITY>
         </RUNNABLES>
       </SWC-INTERNAL-BEHAVIOR>
      </INTERNAL-BEHAVIORS>
    </SENSOR-ACTUATOR-SW-COMPONENT-TYPE>
    <APPLICATION-SW-COMPONENT-TYPE>
      <SHORT-NAME>ConditioningComponent</SHORT-NAME>
      <PORTS>
       <R-PORT-PROTOTYPE>
         <SHORT-NAME>UnprocessedSensorData
         <REQUIRED-INTERFACE-TREF DEST="SENDER-RECEIVER-INTERFACE">/
             Interfaces/InternalSensorData</REQUIRED-INTERFACE-TREF>
       </R-PORT-PROTOTYPE>
       <P-PORT-PROTOTYPE>
         <SHORT-NAME>ProcessedSensorData/SHORT-NAME>
          <PROVIDED-INTERFACE-TREF DEST="SENDER-RECEIVER-INTERFACE">/
             Interfaces/InternalSensorData</PROVIDED-INTERFACE-TREF>
       </P-PORT-PROTOTYPE>
      </PORTS>
      <INTERNAL-BEHAVIORS>
       <SWC-INTERNAL-BEHAVIOR>
         <SHORT-NAME>ConditioningBehavior</SHORT-NAME>
         <RUNNABLES>
           <RUNNABLE-ENTITY>
             <SHORT-NAME>ConditioningRunnable
           </RUNNABLE-ENTITY>
         </RUNNABLES>
       </SWC-INTERNAL-BEHAVIOR>
      </INTERNAL-BEHAVIORS>
    </APPLICATION-SW-COMPONENT-TYPE>
    <APPLICATION-SW-COMPONENT-TYPE>
      <SHORT-NAME>OutputComponent</SHORT-NAME>
      <PORTS>
       <R-PORT-PROTOTYPE>
         <SHORT-NAME>UnprocessedSensorData
```



```
<REQUIRED-INTERFACE-TREF DEST="SENDER-RECEIVER-INTERFACE">/
             Interfaces/InternalSensorData</REQUIRED-INTERFACE-TREF>
       </R-PORT-PROTOTYPE>
       <P-PORT-PROTOTYPE>
         <SHORT-NAME>ProcessedSensorData/SHORT-NAME>
         <PROVIDED-INTERFACE-TREF DEST="SENDER-RECEIVER-INTERFACE">/
             Interfaces/OutputSensorData/PROVIDED-INTERFACE-TREF>
       </P-PORT-PROTOTYPE>
     </PORTS>
      <INTERNAL-BEHAVIORS>
       <SWC-INTERNAL-BEHAVIOR>
         <SHORT-NAME>OutputBehavior</short-NAME>
         <RUNNABLES>
           <RUNNABLE-ENTITY>
              <SHORT-NAME>OutputRunnable
           </RUNNABLE-ENTITY>
         </RUNNABLES>
       </SWC-INTERNAL-BEHAVIOR>
      </INTERNAL-BEHAVIORS>
    </APPLICATION-SW-COMPONENT-TYPE>
    <COMPOSITION-SW-COMPONENT-TYPE>
      <SHORT-NAME>TopLevelComposition</SHORT-NAME>
      <COMPONENTS>
       <SW-COMPONENT-PROTOTYPE>
         <SHORT-NAME>sensorComponent</SHORT-NAME>
         <TYPE-TREF DEST="SENSOR-ACTUATOR-SW-COMPONENT-TYPE">/
             SensorPackage/SensorComponent</TYPE-TREF>
       </SW-COMPONENT-PROTOTYPE>
       <SW-COMPONENT-PROTOTYPE>
         <SHORT-NAME>conditioningComponent</SHORT-NAME>
         <TYPE-TREF DEST="APPLICATION-SW-COMPONENT-TYPE">/
             SensorPackage/ConditioningComponent</TYPE-TREF>
       </SW-COMPONENT-PROTOTYPE>
       <SW-COMPONENT-PROTOTYPE>
         <SHORT-NAME>outputComponent
         <TYPE-TREF DEST="APPLICATION-SW-COMPONENT-TYPE">/
             SensorPackage/OutputComponent</TYPE-TREF>
       </SW-COMPONENT-PROTOTYPE>
      </COMPONENTS>
   </COMPOSITION-SW-COMPONENT-TYPE>
  </ELEMENTS>
</AR-PACKAGE>
```

In addition to this, receiving the sensor data by other ECUs, which are not shown in the figure, requires this data to fulfill certain timing requirements regarding their maximum age, for example. Mapped to the figure this means that the blue data path drawn shall has a specific temporal length. This requirement is the other hand side of the actual scenario.

The software component "Conditioning SW-C" is delivered by the OEM for the sake of implementing special filtering or averaging algorithms applied on the measured sensor data. Thus, the mapping of software component to this ECU is fixed, already. To fulfill certain non-functional requirements, the implementing RunnableEntity of software component "Conditioning" needs to be executed straight away after RunnableEntity



of component "Sensor SW-C" and right before RunnableEntity of component "Output SW-C". In addition, the Tier-1 needs information about the execution times of the runnable entity he has to expect when integrating the software component "Conditioning SW-C". Specifying this can be done by describing the measured (or simulated, estimated, etc.) execution times of the RunnableEntity. The following subsections give a brief idea how this can be accomplished by utilizing the capabilities of the AUTOSAR Specification of Timing Extensions.

8.1.1 VFB view

At first, timing descriptions and constraints on VFB level are defined. The component "Conditioning SW-C" receives data via its required port "UnprocessedSensorData" at a specific point in time. This point is denoted by the event "ConditioningReceived", whereas the event "ConditioningSent" denotes the point in time data is sent via the provided port "ProcessedSensorData". To prescribe a "maximum age" for the reading input the LatencyTimingConstraint is used. For this, the external event "SensorDataProduced" is defined. Based on this, an event chain between this external event "SensorDataProduced" and the "ConditioningReceived" event is specified — the event "SensorDataProduced" plays the role of the stimulus event and the event "ConditioningReceived" is playing the role of the response event with regard to the specified event chain. The latency timing constraint is pointing to this event chain. The representation of the events, event chain and the corresponding timing constraint is shown in listing 8.2.

Listing 8.2: LatencyConstraint and related events on VfbTiming view

```
<VFB-TIMING>
 <SHORT-NAME>SensorVfbTiming</SHORT-NAME>
  <TIMING-DESCRIPTIONS>
    <TD-EVENT-VARIABLE-DATA-PROTOTYPE>
     <SHORT-NAME>ConditioningReceived</SHORT-NAME>
     <IS-EXTERNAL>false</IS-EXTERNAL>
     <PORT-REF DEST="R-PORT-PROTOTYPE">/SensorPackage/
         ConditioningComponent/UnprocessedSensorData</PORT-REF>
     <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
         InternalSensorData/internValueX</DATA-ELEMENT-REF>
     <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
         PROTOTYPE-RECEIVED</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
   </TD-EVENT-VARIABLE-DATA-PROTOTYPE>
   <TD-EVENT-VARIABLE-DATA-PROTOTYPE>
     <SHORT-NAME>ConditioningSent</SHORT-NAME>
     <IS-EXTERNAL>false
     <PORT-REF DEST="P-PORT-PROTOTYPE">/SensorPackage/
         ConditioningComponent/ProcessedSensorData/PORT-REF>
     <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
         InternalSensorData/internValueX</DATA-ELEMENT-REF>
     <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
         PROTOTYPE-SENT</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
   </TD-EVENT-VARIABLE-DATA-PROTOTYPE>
   <TD-EVENT-VARIABLE-DATA-PROTOTYPE>
     <SHORT-NAME>SensorDataProduced</SHORT-NAME>
```



```
<IS-EXTERNAL>true</IS-EXTERNAL>
   <PORT-REF DEST="R-PORT-PROTOTYPE">/SensorPackage/
       ConditioningComponent/UnprocessedSensorData</PORT-REF>
   <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
       InternalSensorData/internValueX</DATA-ELEMENT-REF>
   <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
       PROTOTYPE-RECEIVED</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
 </TD-EVENT-VARIABLE-DATA-PROTOTYPE>
 <TIMING-DESCRIPTION-EVENT-CHAIN>
   <SHORT-NAME>InputVfbChain</SHORT-NAME>
   <CATEGORY />
   <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/
       TimingPackage/SensorVfbTiming/SensorDataProduced</STIMULUS
   <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/
       TimingPackage/SensorVfbTiming/ConditioningReceived/
       RESPONSE-REF>
   <SEGMENT-REFS>
      <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/
         TimingPackage/SensorVfbTiming/InputVfbChain</SEGMENT-REF</pre>
   </SEGMENT-REFS>
  </TIMING-DESCRIPTION-EVENT-CHAIN>
</TIMING-DESCRIPTIONS>
<TIMING-REQUIREMENTS>
 <LATENCY-TIMING-CONSTRAINT>
   <SHORT-NAME>InputVfbLatency</SHORT-NAME>
   <LATENCY-CONSTRAINT-TYPE>AGE</LATENCY-CONSTRAINT-TYPE>
   <SCOPE-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/
       TimingPackage/SensorVfbTiming/InputVfbChain</SCOPE-REF>
   <MINIMUM>
     <CSE-CODE>1</CSE-CODE>
      <CSE-CODE-FACTOR>40</CSE-CODE-FACTOR>
   </MINIMUM>
   <MAXIMUM>
      <CSE-CODE>1</CSE-CODE>
      <CSE-CODE-FACTOR>50</CSE-CODE-FACTOR>
    </MAXIMUM>
 </LATENCY-TIMING-CONSTRAINT>
 <EXECUTION-ORDER-CONSTRAINT>
   <SHORT-NAME>EOC1</SHORT-NAME>
   <ORDERED-ELEMENTS>
      <EOC-EXECUTABLE-ENTITY-REF>
        <SHORT-NAME>SensorRunnableRef</SHORT-NAME>
        <COMPONENT-IREF>
          <TARGET-COMPONENT-REF DEST="SW-COMPONENT-PROTOTYPE">/
             SensorPackage/TopLevelComposition/sensorComponent/
             TARGET-COMPONENT-REF>
        </COMPONENT-IREF>
        <EXECUTABLE-REF DEST="RUNNABLE-ENTITY">/SensorPackage/
           SensorComponent/SensorBehavior/SensorRunnable</
           EXECUTABLE-REF>
        <SUCCESSOR-REFS>
          <SUCCESSOR-REF DEST="EOC-EXECUTABLE-ENTITY-REF">/
             TimingPackage/SensorVfbTiming/EOC1/
             ConditioningRunnableRef</SUCCESSOR-REF>
```



```
</SUCCESSOR-REFS>
        </EOC-EXECUTABLE-ENTITY-REF>
        <EOC-EXECUTABLE-ENTITY-REF>
          <SHORT-NAME>ConditioningRunnableRef</SHORT-NAME>
          <COMPONENT-TREE>
            <TARGET-COMPONENT-REF DEST="SW-COMPONENT-PROTOTYPE">/
               SensorPackage/TopLevelComposition/
               conditioningComponent</TARGET-COMPONENT-REF>
          </COMPONENT-IREF>
          <EXECUTABLE-REF DEST="RUNNABLE-ENTITY">/SensorPackage/
             ConditioningComponent/ConditioningBehavior/
             ConditioningRunnable</EXECUTABLE-REF>
          <SUCCESSOR-REFS>
            <SUCCESSOR-REF DEST="EOC-EXECUTABLE-ENTITY-REF">/
               TimingPackage/SensorVfbTiming/EOC1/OutputRunnableRef
               </SUCCESSOR-REF>
          </SUCCESSOR-REFS>
        </EOC-EXECUTABLE-ENTITY-REF>
        <EOC-EXECUTABLE-ENTITY-REF>
          <SHORT-NAME>OutputRunnableRef</SHORT-NAME>
          <COMPONENT-IREF>
            <TARGET-COMPONENT-REF DEST="SW-COMPONENT-PROTOTYPE">/
               SensorPackage/TopLevelComposition/outputComponent/
               TARGET-COMPONENT-REF>
          </COMPONENT-IREF>
          <EXECUTABLE-REF DEST="RUNNABLE-ENTITY">/SensorPackage/
             OutputComponent/OutputBehavior/OutputRunnable</
             EXECUTABLE-REF>
        </EOC-EXECUTABLE-ENTITY-REF>
      </ORDERED-ELEMENTS>
   </EXECUTION-ORDER-CONSTRAINT>
 </TIMING-REQUIREMENTS>
  <COMPONENT-REF DEST="COMPOSITION-SW-COMPONENT-TYPE">/
     SensorPackage/TopLevelComposition</COMPONENT-REF>
</VFB-TIMING>
```

8.1.2 **ECU** view

After generating the ECU extract, implementation related details of the ECU are available and execution order constraints for the mapped software components — more precise, their runnable entities — exist. For the sake of easiness, each software component implements one RunnableEntity. Constraining their execution order using the ExecutionOrderConstraint is shown in listing 8.3.

Listing 8.3: Execution Order Constraint for Three Runnable Entities

```
<EXECUTION-ORDER-CONSTRAINT>
  <SHORT-NAME>EOC1</SHORT-NAME>
  <ORDERED-ELEMENTS>
    <EOC-EXECUTABLE-ENTITY-REF>
        <SHORT-NAME>SensorRunnableRef</SHORT-NAME>
        <COMPONENT-IREF>
```



```
<TARGET-COMPONENT-REF DEST="SW-COMPONENT-PROTOTYPE">/
           SensorPackage/TopLevelComposition/sensorComponent/
           TARGET-COMPONENT-REF>
      </COMPONENT-IREF>
      <EXECUTABLE-REF DEST="RUNNABLE-ENTITY">/SensorPackage/
         SensorComponent/SensorBehavior/SensorRunnable</
         EXECUTABLE-REF>
      <SUCCESSOR-REFS>
        <SUCCESSOR-REF DEST="EOC-EXECUTABLE-ENTITY-REF">/
           TimingPackage/SensorVfbTiming/EOC1/
           ConditioningRunnableRef</SUCCESSOR-REF>
      </SUCCESSOR-REFS>
    </EOC-EXECUTABLE-ENTITY-REF>
    <EOC-EXECUTABLE-ENTITY-REF>
      <SHORT-NAME>ConditioningRunnableRef
      <COMPONENT-IREF>
        <TARGET-COMPONENT-REF DEST="SW-COMPONENT-PROTOTYPE">/
           SensorPackage/TopLevelComposition/
           conditioningComponent</TARGET-COMPONENT-REF>
      </COMPONENT-IREF>
      <EXECUTABLE-REF DEST="RUNNABLE-ENTITY">/SensorPackage/
         ConditioningComponent/ConditioningBehavior/
         ConditioningRunnable</EXECUTABLE-REF>
      <SUCCESSOR-REFS>
        <SUCCESSOR-REF DEST="EOC-EXECUTABLE-ENTITY-REF">/
           TimingPackage/SensorVfbTiming/EOC1/OutputRunnableRef
           </SUCCESSOR-REF>
      </SUCCESSOR-REFS>
    </EOC-EXECUTABLE-ENTITY-REF>
    <EOC-EXECUTABLE-ENTITY-REF>
      <SHORT-NAME>OutputRunnableRef/SHORT-NAME>
     <COMPONENT-IREF>
        <TARGET-COMPONENT-REF DEST="SW-COMPONENT-PROTOTYPE">/
           SensorPackage/TopLevelComposition/outputComponent/
           TARGET-COMPONENT-REF>
      </COMPONENT-IREF>
      <EXECUTABLE-REF DEST="RUNNABLE-ENTITY">/SensorPackage/
         OutputComponent/OutputBehavior/OutputRunnable</
         EXECUTABLE-REF>
    </EOC-EXECUTABLE-ENTITY-REF>
  </ORDERED-ELEMENTS>
</EXECUTION-ORDER-CONSTRAINT>
```

Another typical constraint describes the maximum time to be elapsed for sending data on the bus. Therefore, an event "DataTransmitted" representing the point in time the data is sent on the bus is specified using the event type TDEventFrame (listing 8.4). Additionally a TimingDescriptionEventChain is specified having "ConditioningSent" as stimulus event and "DataTransmitted" as response event (see listing 8.5).

Listing 8.4: Event describing the point in time where data is sent on the bus

```
<TD-EVENT-FRAME>
<SHORT-NAME>DataTransmitted</SHORT-NAME>
```



Listing 8.5: Event chain describing the sending path of data

The constraint prescribing the maximum latency between the point in time the stimulus event occurs and the point in time the response event occurs is shown in listing 8.6.

Listing 8.6: Latency constraint prescribing the maximum latency of sending path within the ECU

8.2 Engine control

This example illustrates an example for the definition of timing constraints in an engine management system. Although the system is simplified to be included within this chapter it is based on a real world example in its basic concepts.



8.2.1 Overview

The example system is an air mass controlled gasoline internal combustion engine control system. Roughly, the functionality of software components can be categorized as described in the following:

- **Sensors** Three SensorActuatorSwComponentTypes called "MassAirFlowSensor", "AcceleratorPedalSensor", and "ThrottleSensor" are responsible for reading in the most important control factors.
- **Application Based Calculation** Most ApplicationSwComponentTypes calculate the new control factors for the engine. In summary these components are "AcceleratorPedalVoter", "ThrottleController", "ThrottleChange", "BaseFuelMass", "TransientFuelMass", "Ignition", and "TotalFuelMass".
- Actuators The control of the actuators is encapsulated by the SensorActuator-SwComponentTypes "ThrottleActuator", "InjectionActuator", and "IgnitionAcutator".
- Engine Mode and Control The engine can be operated in different operation modes. The AtomicSwComponentType "OperatingMode" includes a state machine which decides what setting for the application based calculation is used depending on the current mode, for example normal drive, idle speed, etc. Similar values are delivered by the "IdleSpeedControl" which determines important inputs for application calculation during idle speed.
- **Miscellaneous** The AtomicSwComponentType "InjBatVoltCorrectionSensor" provides the input from the battery voltage sensor. The AtomicSwComponent-Type"CylNumObserver" is checking whether a change in the cylinder number is sensed and afterwards schedules the application based calculation. In this example application it is assumed that the cylinder number is provided externally within a rate of 2,5ms.

Since giving a complete overview of the system would result in an highly connected graph, Figure 8.2 shows a simplified sketch of the System because a detailed presentation of such a system would go far beyond the scope of this section. The blue colored lines show important signal paths that are considered to be important for timing analysis and are typically subject to be constrained by timing requirements.



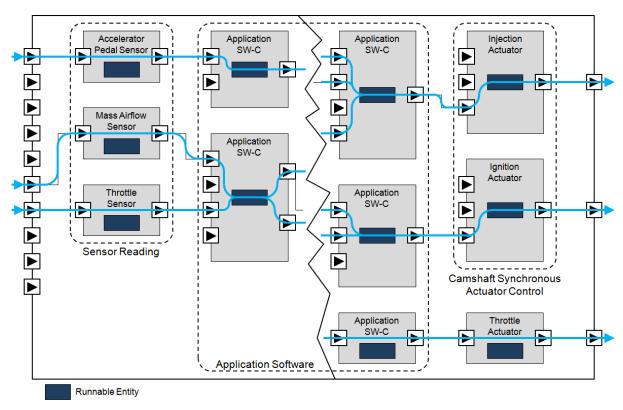


Figure 8.2: Rough sketch of an internal combustion engine control system including important signal flow paths.

8.2.2 Timing Requirements

Assumed the following timing requirements are stated and imposed on the sketched engine control application:

- 1. When the position of the accelerator pedal changes then the throttle shall be actuated within 30ms.
- 2. The maximum age of the throttle position value tolerated by the application software shall not exceed 10ms.
- 3. The calculation of ignition timing shall be completed latest 50ms after the a change of the position of the accelerator pedal has been detected.
- 4. The calculation of the ignition timing shall be completed 3ms after the BswInterruptEntity of the Basic Software Module called "Camshaft" has been activated.
- For each cylinder the calculation of the corresponding injection mass shall be activated every 20ms (50Hz) and shall be completed not later than 20ms after its activation.



The listed requirements above need to be transformed into timing requirements captured by the capabilities of the AUTOSAR Specification of Timing Extensions. The following subsections present how the timing models look alike for every of those requirements.

8.2.3 Formal description of timing constraints in VFB View

It should be understood that the requirements from section 8.2.2 can be mapped to timing constraints that reference different parts of the system. Since a comprehensive and detailed overview of the whole system would go beyond the scope of this section only the important parts of the system and its timing are given to convey the idea behind using the AUTOSAR Specification of Timing Extensions for each presented timing requirement.

The requirements 1 to 3 are expressed in the VFB view respectively VFB Timing (Vf-bTiming).

8.2.3.1 Requirement 1

Figure 8.3 shows the simplified signal flow and involved components. It has been identified that the critical path of execution has an effect on four software components. The sensor software component "AccelleratorPedal" is responsible for reading in the signal and passes it to the application software component "AccelleratorPedalVoter". Afterwards the processed signal is further processed in the application software component "ThrottleController" until it is finally sent to the actuator via the actuator software component "ThrottleActuator". For specification of the timing constraint a timing description event chain must be defined along with the appropriate timing description events. These timing descriptions and timing constraints are presented in listing 8.7 and cover the whole path from the sensor to the actuator.



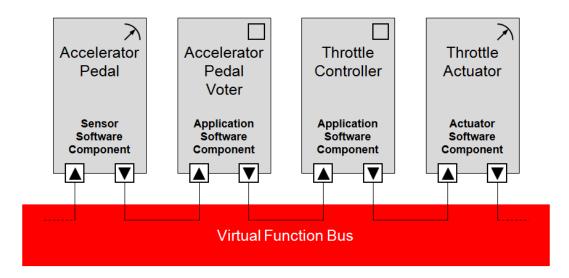


Figure 8.3: Involved components for signal flow from "AcelleratorPedal" to "ThrottleActuator" for timing requirement 1.

Since a timing constraint is imposed on the "sensor to actuator" communication the chosen constraint is a LatencyTimingConstraint and its type is "Reaction". Also note that the overall timing event chain references all event chain segments the event chain consists of.

Listing 8.7: Event Definitions and Constraints for Requirement 1

```
<VFB-TIMING>
  <SHORT-NAME>EngineControlVfbTiming1</SHORT-NAME>
  <TIMING-DESCRIPTIONS>
    <TD-EVENT-VARIABLE-DATA-PROTOTYPE>
     <SHORT-NAME>RAcceleratorPedalPositionSensorReceived</SHORT-</pre>
         NAME>
     <IS-EXTERNAL>false</IS-EXTERNAL>
     <PORT-REF DEST="R-PORT-PROTOTYPE">/Components/
         AcceleratorPedal/RAcceleratorPedalPositionSensor</PORT-REF
     <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
         IAcceleratorPedalPositionSensor/
         AcceleratorPedalPositionSensor</DATA-ELEMENT-REF>
     <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
         PROTOTYPE-RECEIVED</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
   </TD-EVENT-VARIABLE-DATA-PROTOTYPE>
   <TD-EVENT-VARIABLE-DATA-PROTOTYPE>
     <SHORT-NAME>PAcceleratorPedalPositionSent/SHORT-NAME>
     <IS-EXTERNAL>false
     <PORT-REF DEST="P-PORT-PROTOTYPE">/Components/
         AcceleratorPedal/PAcceleratorPedalPosition</PORT-REF>
     <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
         IAcceleratorPedalPosition/AcceleratorPedalPosition</path>
         ELEMENT-REF>
     <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
         PROTOTYPE-SENT</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
   </TD-EVENT-VARIABLE-DATA-PROTOTYPE>
   <TD-EVENT-VARIABLE-DATA-PROTOTYPE>
```



```
<SHORT-NAME>RAcceleratorPedalPositionReceived</SHORT-NAME>
 <IS-EXTERNAL>false
 <PORT-REF DEST="R-PORT-PROTOTYPE">/Components/
     AcceleratorPedalVoter/RAcceleratorPedalPosition</PORT-REF>
 <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
     IAcceleratorPedalPosition/AcceleratorPedalPosition/DATA-
     ELEMENT-REF>
 <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
     PROTOTYPE-RECEIVED</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
</TD-EVENT-VARIABLE-DATA-PROTOTYPE>
<TD-EVENT-VARIABLE-DATA-PROTOTYPE>
 <SHORT-NAME>PVotedPedalPositionSent/SHORT-NAME>
 <IS-EXTERNAL>false</IS-EXTERNAL>
  <PORT-REF DEST="P-PORT-PROTOTYPE">/Components/
     AcceleratorPedalVoter/PVotedPedalPosition</PORT-REF>
 <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
     IVotedPedalPosition/VotedPedalPosition</DATA-ELEMENT-REF>
 <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
     PROTOTYPE-SENT</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
</TD-EVENT-VARIABLE-DATA-PROTOTYPE>
<TD-EVENT-VARIABLE-DATA-PROTOTYPE>
  <SHORT-NAME>RVotedPedalPositionReceived</SHORT-NAME>
 <IS-EXTERNAL>false</IS-EXTERNAL>
 <PORT-REF DEST="R-PORT-PROTOTYPE">/Components/
     ThrottleController/RVotedPedalPosition</PORT-REF>
 <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
     IVotedPedalPosition/VotedPedalPosition</DATA-ELEMENT-REF>
 <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
     PROTOTYPE-RECEIVED</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
</TD-EVENT-VARIABLE-DATA-PROTOTYPE>
<TD-EVENT-VARIABLE-DATA-PROTOTYPE>
 <SHORT-NAME>PUnlimitedThrottlePositionSent/SHORT-NAME>
 <IS-EXTERNAL>false
 <PORT-REF DEST="P-PORT-PROTOTYPE">/Components/
     ThrottleController/PUnlimitedThrottlePosition</PORT-REF>
 <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
     IUnlimitedThrottlePosition/UnlimitedThrottlePosition</DATA
     -FIEMENT-REF>
 <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
     PROTOTYPE-SENT</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
</TD-EVENT-VARIABLE-DATA-PROTOTYPE>
<TD-EVENT-VARIABLE-DATA-PROTOTYPE>
 <SHORT-NAME>RUnlimitedThrottlePositionReceived</SHORT-NAME>
 <IS-EXTERNAL>false
 <PORT-REF DEST="R-PORT-PROTOTYPE">/Components/
     ThrottleActuator/RUnlimitedThrottlePosition</PORT-REF>
 <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
     IUnlimitedThrottlePosition/UnlimitedThrottlePosition</DATA
     -ELEMENT-REF>
 <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
     PROTOTYPE-RECEIVED</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
</TD-EVENT-VARIABLE-DATA-PROTOTYPE>
<TD-EVENT-VARIABLE-DATA-PROTOTYPE>
 <SHORT-NAME>PUnlimitedThrottlePositionActuatorSent/SHORT-
     NAME>
 <IS-EXTERNAL>false
```



```
<PORT-REF DEST="P-PORT-PROTOTYPE">/Components/
     ThrottleActuator/PUnlimitedThrottlePositionActuator</PORT-
  <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
     IUnlimitedThrottlePosition/UnlimitedThrottlePosition</DATA
     -ELEMENT-REF>
  <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
     PROTOTYPE-SENT</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
</TD-EVENT-VARIABLE-DATA-PROTOTYPE>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain1Seg0</SHORT-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/
     RAcceleratorPedalPositionSensorReceived</STIMULUS-REF>
  <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/PAcceleratorPedalPositionSent</
     RESPONSE-REF>
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming1/TimingChain1Seg0</SEGMENT-REF>
  </SEGMENT-REFS>
</TIMING-DESCRIPTION-EVENT-CHAIN>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain1Seg1</SHORT-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/PAcceleratorPedalPositionSent</
     STIMULUS-REF>
  <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/RAcceleratorPedalPositionReceived
     </RESPONSE-REF>
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming1/TimingChain1Seg1/SEGMENT-REF>
  </SEGMENT-REFS>
</TIMING-DESCRIPTION-EVENT-CHAIN>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain1Seg1 1/SHORT-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/RAcceleratorPedalPositionReceived
     </STIMULUS-REF>
  <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/PVotedPedalPositionSent</RESPONSE
     -REF>
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming1/TimingChain1Seg1_1/SEGMENT-REF>
  </SEGMENT-REFS>
</TIMING-DESCRIPTION-EVENT-CHAIN>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain1Seg2</short-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/PVotedPedalPositionSent</STIMULUS
  <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/RVotedPedalPositionReceived</
     RESPONSE-REF>
```



```
<SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming1/TimingChain1Seg2</SEGMENT-REF>
  </SEGMENT-REFS>
</TIMING-DESCRIPTION-EVENT-CHAIN>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain1Seg2_1</SHORT-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/RVotedPedalPositionReceived</
     STIMULUS-REF>
  <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/PUnlimitedThrottlePositionSent</
     RESPONSE-REF>
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming1/TimingChain1Seg2_1</SEGMENT-REF>
  </SEGMENT-REFS>
</TIMING-DESCRIPTION-EVENT-CHAIN>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain1Seg3</short-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/PUnlimitedThrottlePositionSent</
     STIMULUS-REF>
  <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/
     RUnlimitedThrottlePositionReceived</RESPONSE-REF>
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming1/TimingChain1Seg3</SEGMENT-REF>
  </SEGMENT-REFS>
</TIMING-DESCRIPTION-EVENT-CHAIN>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain1Seg4</SHORT-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/
     RUnlimitedThrottlePositionReceived</STIMULUS-REF>
  <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/
     PUnlimitedThrottlePositionActuatorSent</RESPONSE-REF>
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming1/TimingChain1Seg4</SEGMENT-REF>
  </SEGMENT-REFS>
</TIMING-DESCRIPTION-EVENT-CHAIN>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain1AllSeg</SHORT-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/
     RAcceleratorPedalPositionSensorReceived</STIMULUS-REF>
  <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/
     PUnlimitedThrottlePositionActuatorSent</RESPONSE-REF>
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming1/TimingChain1Seg0</SEGMENT-REF>
```



```
<SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlVfbTiming1/TimingChain1Seg1/SEGMENT-REF>
        <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlVfbTiming1/TimingChain1Seg1_1/SEGMENT-REF>
        <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlVfbTiming1/TimingChain1Seg2</SEGMENT-REF>
        <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlVfbTiming1/TimingChain1Seg2_1</SEGMENT-REF>
        <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlVfbTiming1/TimingChain1Seg3</SEGMENT-REF>
        <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlVfbTiming1/TimingChain1Seg4</SEGMENT-REF>
      </SEGMENT-REFS>
   </TIMING-DESCRIPTION-EVENT-CHAIN>
  </TIMING-DESCRIPTIONS>
 <TIMING-REQUIREMENTS>
   <LATENCY-TIMING-CONSTRAINT>
      <SHORT-NAME>TimingChain1AllSegLatency</SHORT-NAME>
      <LATENCY-CONSTRAINT-TYPE>REACTION</LATENCY-CONSTRAINT-TYPE>
      <SCOPE-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
         EngineControlVfbTiming1/TimingChain1AllSeg</SCOPE-REF>
      <MINIMUM>
       <CSE-CODE>1</CSE-CODE>
        <CSE-CODE-FACTOR>28</CSE-CODE-FACTOR>
      </MINIMUM>
      <MAXIMUM>
        <CSE-CODE>1</CSE-CODE>
        <CSE-CODE-FACTOR>30</CSE-CODE-FACTOR>
      </MAXIMUM>
   </LATENCY-TIMING-CONSTRAINT>
  </TIMING-REQUIREMENTS>
 <COMPONENT-REF DEST="COMPOSITION-SW-COMPONENT-TYPE">/Components/
    EngineControl</COMPONENT-REF>
</VFB-TIMING>
```

8.2.3.2 Requirement 2

Requirement 2 specifies a typical timing constraint concerning the age of data provided by a sensor. For calculation in the AtomicSwComponentType called "BaseFuelMass" — which is here chosen as an example of the application software — a maximum age of input data concerning the throttle angle must be guaranteed. The sensor value is determined in the SensorActuatorSwComponentType called "ThrottleSensor" and is passed to the application software. Figure 8.4 shows all involved software components.



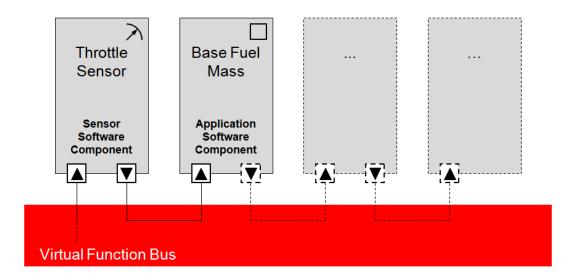


Figure 8.4: Involved components for signal flow from "ThrottleSensor" to application component "BaseFuelMass" for timing requirement 2.

Please note that even if the signal flow continuous to other parts of the system, it is possible to specify only this aspect of the desired timing behavior as shown in listing 8.8.

Listing 8.8: Event Definitions and Constraints for Requirement 2

```
<VFB-TIMING>
 <SHORT-NAME>EngineControlVfbTiming2</SHORT-NAME>
 <TIMING-DESCRIPTIONS>
   <TD-EVENT-VARIABLE-DATA-PROTOTYPE>
     <SHORT-NAME>RThrottlePositionSensorReceived</SHORT-NAME>
     <IS-EXTERNAL>false
     <PORT-REF DEST="R-PORT-PROTOTYPE">/Components/ThrottleSensor/
         RThrottlePositionSensor</PORT-REF>
     <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
         IThrottlePositionSensor/ThrottlePositionSensor</DATA-
        ELEMENT-REF>
     <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
         PROTOTYPE-RECEIVED</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
   </TD-EVENT-VARIABLE-DATA-PROTOTYPE>
   <TD-EVENT-VARIABLE-DATA-PROTOTYPE>
     <SHORT-NAME>PThrottlePositionSent/SHORT-NAME>
     <IS-EXTERNAL>false</IS-EXTERNAL>
     <PORT-REF DEST="P-PORT-PROTOTYPE">/Components/ThrottleSensor/
         PThrottlePosition</PORT-REF>
     <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
         IThrottlePosition/ThrottlePosition</DATA-ELEMENT-REF>
     <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
         PROTOTYPE-SENT</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
   </TD-EVENT-VARIABLE-DATA-PROTOTYPE>
   <TD-EVENT-VARIABLE-DATA-PROTOTYPE>
     <SHORT-NAME>RThrottlePositionReceived</SHORT-NAME>
     <IS-EXTERNAL>false
     <PORT-REF DEST="R-PORT-PROTOTYPE">/Components/BaseFuelMass/
         RThrottlePosition</PORT-REF>
```



```
<DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
       IThrottlePosition/ThrottlePosition</DATA-ELEMENT-REF>
    <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
       PROTOTYPE-RECEIVED</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
  </TD-EVENT-VARIABLE-DATA-PROTOTYPE>
  <TIMING-DESCRIPTION-EVENT-CHAIN>
    <SHORT-NAME>TimingChain2Seg0</SHORT-NAME>
    <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
       /EngineControlVfbTiming2/RThrottlePositionSensorReceived</
       STIMULUS-REF>
    <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
       /EngineControlVfbTiming2/PThrottlePositionSent</RESPONSE-
       REF>
    <SEGMENT-REFS>
      <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
         EngineControlVfbTiming2/TimingChain2Seg0</SEGMENT-REF>
    </SEGMENT-REFS>
  </TIMING-DESCRIPTION-EVENT-CHAIN>
  <TIMING-DESCRIPTION-EVENT-CHAIN>
    <SHORT-NAME>TimingChain2Seg1</SHORT-NAME>
    <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
       /EngineControlVfbTiming2/PThrottlePositionSent</STIMULUS-
    <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
       /EngineControlVfbTiming2/RThrottlePositionReceived</
       RESPONSE-REF>
    <SEGMENT-REFS>
      <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
         EngineControlVfbTiming2/TimingChain2Seg1/SEGMENT-REF>
    </SEGMENT-REFS>
  </TIMING-DESCRIPTION-EVENT-CHAIN>
  <TIMING-DESCRIPTION-EVENT-CHAIN>
    <SHORT-NAME>TimingChain2AllSeg</SHORT-NAME>
    <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
       /EngineControlVfbTiming2/RThrottlePositionSensorReceived</
       STIMULUS-REF>
    <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
       /EngineControlVfbTiming2/RThrottlePositionReceived</
       RESPONSE-REF>
    <SEGMENT-REFS>
      <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
         EngineControlVfbTiming2/TimingChain2Seg0</SEGMENT-REF>
      <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
         EngineControlVfbTiming2/TimingChain2Seg1</SEGMENT-REF>
    </SEGMENT-REFS>
  </TIMING-DESCRIPTION-EVENT-CHAIN>
</TIMING-DESCRIPTIONS>
<TIMING-REQUIREMENTS>
  <LATENCY-TIMING-CONSTRAINT>
    <SHORT-NAME>TimingChain2AllSegLatency</SHORT-NAME>
    <LATENCY-CONSTRAINT-TYPE>AGE</LATENCY-CONSTRAINT-TYPE>
    <SCOPE-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming2/TimingChain2Seg1</SCOPE-REF>
    <MAXIMUM>
      <CSE-CODE>3</CSE-CODE>
      <CSE-CODE-FACTOR>10</CSE-CODE-FACTOR>
```



</MAXIMUM>
 </LATENCY-TIMING-CONSTRAINT>
 </TIMING-REQUIREMENTS>
</VFB-TIMING>

8.2.3.3 Requirement 3

In requirement 3 a more complex timing description event chain is constrained. The first part of the event chain is already defined in the context of requirement 1. Thus, one can reference the set of defined events as well as the already specified timing description event chains. The second part of the event chain captures the feedback in the system that observes the sensor, in particular "ThrottleSensor". Please note that all events must have a functional dependency, so it is important to understand that the SensorActuatorSwComponentType "ThrottleSensor" must utilize up-to-date information of the SensorActuatorSwComponentType "ThrottleActuator". Figure 8.5 shows the entire signal path and listing 8.9 presents the entire timing information consisting of timing descriptions and timing constraints.

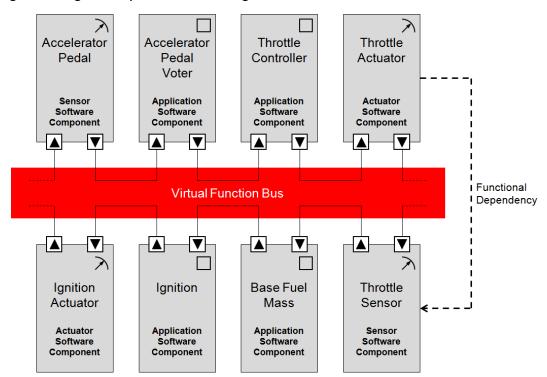


Figure 8.5: Involved components for signal flow from sensor software component "AccelleratorPedal" to actuator software component "IgnitionActuator" for timing requirement 3.

Listing 8.9: Event Definitions and Constraints for Requirement 3

```
<VFB-TIMING>
     <SHORT-NAME>EngineControlVfbTiming3</SHORT-NAME>
     <TIMING-DESCRIPTIONS>
          <TD-EVENT-VARIABLE-DATA-PROTOTYPE>
```



```
<SHORT-NAME>PMafRateOutSent/SHORT-NAME>
  <IS-EXTERNAL>false</IS-EXTERNAL>
  <PORT-REF DEST="P-PORT-PROTOTYPE">/Components/BaseFuelMass/
     PMafRateOut</PORT-REF>
  <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
     IMafRateOut/MafRateOut/DATA-ELEMENT-REF>
  <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
     PROTOTYPE-SENT</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
</TD-EVENT-VARIABLE-DATA-PROTOTYPE>
<TD-EVENT-VARIABLE-DATA-PROTOTYPE>
  <SHORT-NAME>RMafRateOutReceived/SHORT-NAME>
  <IS-EXTERNAL>false</IS-EXTERNAL>
  <PORT-REF DEST="R-PORT-PROTOTYPE">/Components/Ignition/
     RMafRateOut</PORT-REF>
  <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
     IMafRateOut / MafRateOut < / DATA-ELEMENT-REF>
  <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
     PROTOTYPE-RECEIVED</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
</TD-EVENT-VARIABLE-DATA-PROTOTYPE>
<TD-EVENT-VARIABLE-DATA-PROTOTYPE>
  <SHORT-NAME>PIgnitionTimingSent/SHORT-NAME>
  <IS-EXTERNAL>false</IS-EXTERNAL>
  <PORT-REF DEST="P-PORT-PROTOTYPE">/Components/Ignition/
     PIgnitionTiming</PORT-REF>
  <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
     IIgnitionTiming/IgnitionTiming</DATA-ELEMENT-REF>
  <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
     PROTOTYPE-SENT</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
</TD-EVENT-VARIABLE-DATA-PROTOTYPE>
<TD-EVENT-VARIABLE-DATA-PROTOTYPE>
  <SHORT-NAME>RIgnitionTimingReceived</SHORT-NAME>
  <IS-EXTERNAL>false</IS-EXTERNAL>
  <PORT-REF DEST="R-PORT-PROTOTYPE">/Components/
     IngnitionActuator/RIgnitionTiming</PORT-REF>
  <DATA-ELEMENT-REF DEST="VARIABLE-DATA-PROTOTYPE">/Interfaces/
     IIgnitionTiming/IgnitionTiming</DATA-ELEMENT-REF>
  <TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>VARIABLE-DATA-
     PROTOTYPE-RECEIVED</TD-EVENT-VARIABLE-DATA-PROTOTYPE-TYPE>
</TD-EVENT-VARIABLE-DATA-PROTOTYPE>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain3Seg0</SHORT-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/
     RUnlimitedThrottlePositionReceived</STIMULUS-REF>
  <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming3/PMafRateOutSent</RESPONSE-REF>
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming3/TimingChain3Seq0</SEGMENT-REF>
  </SEGMENT-REFS>
</TIMING-DESCRIPTION-EVENT-CHAIN>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain3Seg1</SHORT-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming3/PMafRateOutSent</STIMULUS-REF>
```



```
<RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming3/RMafRateOutReceived</RESPONSE-REF
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming3/TimingChain3Seg1_1</SEGMENT-REF>
  </SEGMENT-REFS>
</TIMING-DESCRIPTION-EVENT-CHAIN>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain3Seg1_1</SHORT-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming3/RMafRateOutReceived</STIMULUS-REF
  <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming3/PIgnitionTimingSent</RESPONSE-REF
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming3/TimingChain3Seq1_1/SEGMENT-REF>
  </SEGMENT-REFS>
</TIMING-DESCRIPTION-EVENT-CHAIN>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain3Seg2</SHORT-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming3/PIgnitionTimingSent</STIMULUS-REF
  <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming3/RIgnitionTimingReceived</RESPONSE
     -REF>
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming3/TimingChain3Seg2</SEGMENT-REF>
  </SEGMENT-REFS>
</TIMING-DESCRIPTION-EVENT-CHAIN>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain3AllSeg</SHORT-NAME>
  <STIMULUS-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming1/
     RAcceleratorPedalPositionSensorReceived</STIMULUS-REF>
  <RESPONSE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing
     /EngineControlVfbTiming3/RIgnitionTimingReceived</RESPONSE
     -REF>
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming1/TimingChain1AllSeg</SEGMENT-REF>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming2/TimingChain2Seg0</SEGMENT-REF>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming2/TimingChain2Seg1</SEGMENT-REF>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming3/TimingChain3Seg0</SEGMENT-REF>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming3/TimingChain3Seg1</SEGMENT-REF>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlVfbTiming3/TimingChain3Seg1_1</SEGMENT-REF>
```



```
<SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlVfbTiming3/TimingChain3Seg2</SEGMENT-REF>
      </SEGMENT-REFS>
   </TIMING-DESCRIPTION-EVENT-CHAIN>
  </TIMING-DESCRIPTIONS>
  <TIMING-GUARANTEES>
    <LATENCY-TIMING-CONSTRAINT>
      <SHORT-NAME>TimingChain3AllSegLatency</SHORT-NAME>
      <LATENCY-CONSTRAINT-TYPE>REACTION</LATENCY-CONSTRAINT-TYPE>
      <SCOPE-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
         EngineControlVfbTiming3/TimingChain3AllSeg</SCOPE-REF>
      <MAXIMUM>
       <CSE-CODE>3</CSE-CODE>
        <CSE-CODE-FACTOR>50</CSE-CODE-FACTOR>
      </MAXIMUM>
   </LATENCY-TIMING-CONSTRAINT>
  </TIMING-GUARANTEES>
  <TIMING-REQUIREMENTS>
   <OFFSET-TIMING-CONSTRAINT>
      <SHORT-NAME>Otc</SHORT-NAME>
      <SOURCE-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing/
         EngineControlVfbTiming1/
         PUnlimitedThrottlePositionActuatorSent</SOURCE-REF>
      <TARGET-REF DEST="TD-EVENT-VARIABLE-DATA-PROTOTYPE">/Timing/
         EngineControlVfbTiming2/RThrottlePositionReceived</TARGET-
         REF>
      <MAXTMIIM>
       <CSE-CODE>3</CSE-CODE>
        <CSE-CODE-FACTOR>5</CSE-CODE-FACTOR>
      </MAXIMUM>
   </OFFSET-TIMING-CONSTRAINT>
   <LATENCY-TIMING-CONSTRAINT>
     <SHORT-NAME>TimingChain3AllSegLatency</SHORT-NAME>
      <LATENCY-CONSTRAINT-TYPE>REACTION</LATENCY-CONSTRAINT-TYPE>
      <SCOPE-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
         EngineControlVfbTiming3/TimingChain3AllSeg</SCOPE-REF>
      <MAXIMUM>
        <CSE-CODE>3</CSE-CODE>
        <CSE-CODE-FACTOR>50</CSE-CODE-FACTOR>
      </MAXIMUM>
    </LATENCY-TIMING-CONSTRAINT>
  </TIMING-REQUIREMENTS>
</VFB-TIMING>
```

8.2.4 Formal description of timing constraints in ECU View

Since requirement 4 references to events that are related to basic software modules, namely the interrupt system, the events must be defined in the scope of the ECU View respectively ECU Timing (EcuTiming).



8.2.4.1 Requirement 4

The stimulus event of the timing description event chain for this requirements is the start of the <code>BswInterruptEntity</code> of the basic software module called "Camshaft". And as a result the runnable entity of the software component "IgnitionActuator" is activated. The response event of the timing description event chain is the termination of the <code>RunnableEntity</code> belonging to the software component "IgnitionActuator" as shown in Figure 8.6.

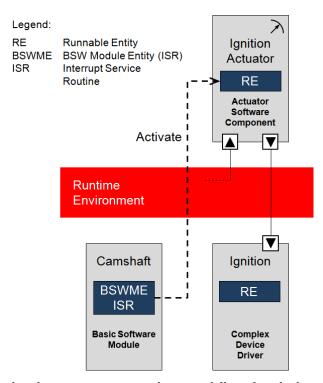


Figure 8.6: Involved components and control flow for timing requirement 4.

The timing description events and event chains for this case are presented in listing 8.10.

Listing 8.10: Event Definitions and Constraints for Requirement 4



```
<BSW-MODULE-ENTITY-REF DEST="BSW-INTERRUPT-ENTITY">/Modules/
     CamShaft/CamShaftBehavior/CamShaftISR</BSW-MODULE-ENTITY-
  <TD-EVENT-BSW-INTERNAL-BEHAVIOR-TYPE>BSW-MODULE-ENTITY-
     STARTED</TD-EVENT-BSW-INTERNAL-BEHAVIOR-TYPE>
</TD-EVENT-BSW-INTERNAL-BEHAVIOR>
<TD-EVENT-BSW-INTERNAL-BEHAVIOR>
  <SHORT-NAME>CamShaftIsrTerminated/SHORT-NAME>
  <BSW-MODULE-ENTITY-REF DEST="BSW-INTERRUPT-ENTITY">/Modules/
     CamShaft/CamShaftBehavior/CamShaftISR</BSW-MODULE-ENTITY-
     REF>
  <TD-EVENT-BSW-INTERNAL-BEHAVIOR-TYPE>BSW-MODULE-ENTITY-
     TERMINATED</TD-EVENT-BSW-INTERNAL-BEHAVIOR-TYPE>
</TD-EVENT-BSW-INTERNAL-BEHAVIOR>
<TD-EVENT-SWC-INTERNAL-BEHAVIOR>
  <SHORT-NAME>IgnitionActuatorCalculationActivated/SHORT-NAME>
  <RUNNABLE-REF DEST="RUNNABLE-ENTITY">/Components/
     IngnitionActuator/IgnitionActuatorBehavior/
     IngnitionActuatorCalculation</RUNNABLE-REF>
  <TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>RUNNABLE-ENTITY-
     ACTIVATED</TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>
</TD-EVENT-SWC-INTERNAL-BEHAVIOR>
<TD-EVENT-SWC-INTERNAL-BEHAVIOR>
  <SHORT-NAME>IgnitionActuatorCalculationStarted/SHORT-NAME>
  <RUNNABLE-REF DEST="RUNNABLE-ENTITY">/Components/
     IngnitionActuator/IgnitionActuatorBehavior/
     IngnitionActuatorCalculation</RUNNABLE-REF>
  <TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>RUNNABLE-ENTITY-STARTED<
     /TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>
</TD-EVENT-SWC-INTERNAL-BEHAVIOR>
<TD-EVENT-SWC-INTERNAL-BEHAVIOR>
  <SHORT-NAME>IgnitionActuatorCalculationTerminated/SHORT-NAME
  <RUNNABLE-REF DEST="RUNNABLE-ENTITY">/Components/
     IngnitionActuator/IgnitionActuatorBehavior/
     IngnitionActuatorCalculation</RUNNABLE-REF>
  <TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>RUNNABLE-ENTITY-
     TERMINATED</TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>
</TD-EVENT-SWC-INTERNAL-BEHAVIOR>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain4Seg1
  <STIMULUS-REF DEST="TD-EVENT-BSW-INTERNAL-BEHAVIOR">/Timing/
     EngineControlEcuTiming/CamShaftISRStarted/STIMULUS-REF>
  <RESPONSE-REF DEST="TD-EVENT-BSW-INTERNAL-BEHAVIOR">/Timing/
     EngineControlEcuTiming/CamShaftIsrTerminated/RESPONSE-REF
  <SEGMENT-REFS>
    <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
       EngineControlEcuTiming/TimingChain4Seg1</SEGMENT-REF>
  </SEGMENT-REFS>
</TIMING-DESCRIPTION-EVENT-CHAIN>
<TIMING-DESCRIPTION-EVENT-CHAIN>
  <SHORT-NAME>TimingChain4Seg2</SHORT-NAME>
  <STIMULUS-REF DEST="TD-EVENT-BSW-INTERNAL-BEHAVIOR">/Timing/
     EngineControlEcuTiming/CamShaftIsrTerminated/STIMULUS-REF
```



```
<RESPONSE-REF DEST="TD-EVENT-SWC-INTERNAL-BEHAVIOR">/Timing/
         EngineControlEcuTiming/IgnitionActuatorCalculationStarted
         /RESPONSE-REF>
      <SEGMENT-REFS>
        <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlEcuTiming/TimingChain4Seg2</SEGMENT-REF>
      </SEGMENT-REFS>
   </TIMING-DESCRIPTION-EVENT-CHAIN>
   <TIMING-DESCRIPTION-EVENT-CHAIN>
      <SHORT-NAME>TimingChain4Seg3</SHORT-NAME>
      <STIMULUS-REF DEST="TD-EVENT-SWC-INTERNAL-BEHAVIOR">/Timing/
         EngineControlEcuTiming/IgnitionActuatorCalculationStarted<</pre>
         /STIMULUS-REF>
      <RESPONSE-REF DEST="TD-EVENT-SWC-INTERNAL-BEHAVIOR">/Timing/
         EngineControlEcuTiming/
         IgnitionActuatorCalculationTerminated</RESPONSE-REF>
      <SEGMENT-REFS>
        <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlEcuTiming/TimingChain4Seg3</SEGMENT-REF>
      </SEGMENT-REFS>
   </TIMING-DESCRIPTION-EVENT-CHAIN>
    <TIMING-DESCRIPTION-EVENT-CHAIN>
      <SHORT-NAME>TimingChain4AllSeg</SHORT-NAME>
      <STIMULUS-REF DEST="TD-EVENT-BSW-INTERNAL-BEHAVIOR">/Timing/
         EngineControlEcuTiming/CamShaftISRStarted</STIMULUS-REF>
      <RESPONSE-REF DEST="TD-EVENT-SWC-INTERNAL-BEHAVIOR">/Timing/
         EngineControlEcuTiming/
         IgnitionActuatorCalculationTerminated</RESPONSE-REF>
      <SEGMENT-REFS>
        <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlEcuTiming/TimingChain4Seg1</SEGMENT-REF>
        <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlEcuTiming/TimingChain4Seg2</SEGMENT-REF>
        <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlEcuTiming/TimingChain4Seg3</SEGMENT-REF>
      </SEGMENT-REFS>
    </TIMING-DESCRIPTION-EVENT-CHAIN>
  </TIMING-DESCRIPTIONS>
 <TIMING-REQUIREMENTS>
   <LATENCY-TIMING-CONSTRAINT>
      <SHORT-NAME>TimingChain4AllSegLatency</SHORT-NAME>
      <LATENCY-CONSTRAINT-TYPE>REACTION</LATENCY-CONSTRAINT-TYPE>
      <SCOPE-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
         EngineControlEcuTiming/TimingChain4AllSeg</SCOPE-REF>
      <MAXIMUM>
        <CSE-CODE>3</CSE-CODE>
        <CSE-CODE-FACTOR>3</CSE-CODE-FACTOR>
      </MAXIMUM>
   </LATENCY-TIMING-CONSTRAINT>
  </TIMING-REOUIREMENTS>
</ECU-TIMING>
```



8.2.5 Formal description of timing constraints in SW-C View

Requirement 5 refers to execution behavior of a software component's RunnableEntity and therefore the scope is the Software Component (SW-C) View respectively Software Component (SW-C) Timing (SwcTiming).

8.2.5.1 Requirement 5

The SW-C timing references the internal behavior of RunnableEntity of SW-Cs. Here one reference the RunnableEntity of the software component "Ignition" which is a ComplexDeviceDriverSwComponentType. In essence, the stated timing requirement requires firstly that the delay between activation and termination of the RunnableEntity is less than or equal 20 ms and secondly that the RunnableEntity is triggered at a frequency of 50 Hz which means that the runnable entity is periodically activated every 20 ms.

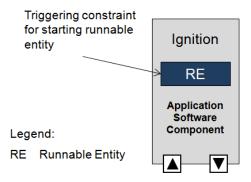


Figure 8.7: Involved component and control flow for timing requirement 5.

Listing 8.11: Event Definitions and Constraints for Requirement 5

```
<SWC-TIMING>
 <SHORT-NAME>EngineControlSwcTimingIgnition</SHORT-NAME>
  <CATEGORY />
  <TIMING-DESCRIPTIONS>
   <TD-EVENT-SWC-INTERNAL-BEHAVIOR>
     <SHORT-NAME>IgnitionTimingCalculationActivated</SHORT-NAME>
     <RUNNABLE-REF DEST="RUNNABLE-ENTITY">/Components/Ignition/
         IngnitionBehavior/IgnitionTimingCalculation</RUNNABLE-REF>
     <TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>RUNNABLE-ENTITY-
         ACTIVATED</TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>
   </TD-EVENT-SWC-INTERNAL-BEHAVIOR>
   <TD-EVENT-SWC-INTERNAL-BEHAVIOR>
     <SHORT-NAME>IgnitionTimingCalculationStarted/SHORT-NAME>
     <RUNNABLE-REF DEST="RUNNABLE-ENTITY">/Components/Ignition/
         IngnitionBehavior/IgnitionTimingCalculation</RUNNABLE-REF>
     <TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>RUNNABLE-ENTITY-STARTED<
         /TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>
   </TD-EVENT-SWC-INTERNAL-BEHAVIOR>
   <TD-EVENT-SWC-INTERNAL-BEHAVIOR>
     <SHORT-NAME>IgnitionTimingCalculationTerminated/SHORT-NAME>
```



```
<RUNNABLE-REF DEST="RUNNABLE-ENTITY">/Components/Ignition/
         IngnitionBehavior/IgnitionTimingCalculation/RUNNABLE-REF>
     <TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>RUNNABLE-ENTITY-
         TERMINATED</TD-EVENT-SWC-INTERNAL-BEHAVIOR-TYPE>
   </TD-EVENT-SWC-INTERNAL-BEHAVIOR>
   <TIMING-DESCRIPTION-EVENT-CHAIN>
     <SHORT-NAME>TimingChain5</SHORT-NAME>
     <STIMULUS-REF DEST="TD-EVENT-SWC-INTERNAL-BEHAVIOR">/Timing/
         EngineControlSwcTimingIgnition/
         IgnitionTimingCalculationActivated
     <RESPONSE-REF DEST="TD-EVENT-SWC-INTERNAL-BEHAVIOR">/Timing/
         EngineControlSwcTimingIgnition/
         IgnitionTimingCalculationTerminated</RESPONSE-REF>
     <SEGMENT-REFS>
        <SEGMENT-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
           EngineControlSwcTimingIgnition/TimingChain5</SEGMENT-REF</pre>
     </SEGMENT-REFS>
   </TIMING-DESCRIPTION-EVENT-CHAIN>
  </TIMING-DESCRIPTIONS>
  <TIMING-REQUIREMENTS>
    <PERIODIC-EVENT-TRIGGERING>
     <SHORT-NAME>CalculateIgnitionTimingTriggeringConstraint/
         SHORT-NAME>
     <JITTER>
       <CSE-CODE>3</CSE-CODE>
        <CSE-CODE-FACTOR>1</CSE-CODE-FACTOR>
     </JITTER>
     <PERIOD>
        <CSE-CODE>3</CSE-CODE>
        <CSE-CODE-FACTOR>20</CSE-CODE-FACTOR>
     </PERIOD>
   </PERIODIC-EVENT-TRIGGERING>
   <LATENCY-TIMING-CONSTRAINT>
     <SHORT-NAME>TimingChain5Latency</SHORT-NAME>
     <LATENCY-CONSTRAINT-TYPE>REACTION</LATENCY-CONSTRAINT-TYPE>
     <SCOPE-REF DEST="TIMING-DESCRIPTION-EVENT-CHAIN">/Timing/
         EngineControlSwcTimingIgnition/TimingChain5</SCOPE-REF>
     <MAXIMUM>
       <CSE-CODE>3</CSE-CODE>
        <CSE-CODE-FACTOR>20</CSE-CODE-FACTOR>
     </MAXIMUM>
   </LATENCY-TIMING-CONSTRAINT>
  </TIMING-REQUIREMENTS>
  <BEHAVIOR-REF DEST="SWC-INTERNAL-BEHAVIOR">/Components/Ignition/
     IngnitionBehavior/BEHAVIOR-REF>
</SWC-TIMING>
```

8.3 Describing and Constraining Sensor and Actuator Timing

Chapter 5.1 describes the specification of VFB timing description events and introduces the attribute is External of such events. If the attribute is set to TRUE,



then the event is considered to be *external*, which means that the event is supposed to occur on the physical sensor and/or actuator a <code>SensorActuatorSwComponentType</code>, a <code>ComplexDeviceDriverSwComponentType</code> and <code>EcuAbstractionSwComponentType</code> is dealing with. This chapter describes how this attribute is used to describe events for sensor and actuator timing, how the different events of such kind relate to each other in event chains, and how the timing can be constrained using <code>TimingConstraintS</code>.

One of the important purposes of the Timing Extensions is to specify end-to-end timing constraints already in early development phases. However, in the VFB view there does not exist such elements like physical sensors, physical actuators, or other hardware related elements to attach events to. Therefore, timing description events related to the VFB View can be used to declare "external" events. For sensor and actuator timing four cases can be distinguished: external events can be observed between a SensorActuatorSwComponentType and a ComplexDeviceDriverSwComponentType, as well as between a SensorActuatorSwComponentType and an EcuAbstraction—SwComponentType.

8.3.1 External Event of a Sensor accessed via S/R

In this case the <code>SensorActuatorSwComponentType</code> receives data from the <code>EcuAbstractionSwComponentType</code> Or <code>ComplexDeviceDriverSwComponentType</code> through a sender-receiver interface via its required port. Two events <code>TDEvent-VariableDataPrototype</code>, indicating the receipt of data, are specified and both referencing the same required port and pointing to the the same <code>VariableDataPrototype</code>. The attribute <code>isExternal</code> of one of those events is set to <code>TRUE</code> and the same attribute of the other event is set to <code>FALSE</code>.

The semantics of the external event is that it occurs at the hardware level. The semantics of the other event is that it indicates the receipt of the data via the corresponding required port of the SensorActuatorSwComponentType. And the notion is that the external event occurs before the event indicating the receipt of data.

8.3.2 External Event of an Actuator accessed via S/R

In this case the <code>SensorActuatorSwComponentType</code> sends data to the <code>EcuAbstractionSwComponentType</code> Or <code>ComplexDeviceDriverSwComponentType</code> through a S/R interface via its provided port. Two events <code>TDEventVariableDataPrototype</code>, indicating the sending of data, are specified and both referencing the same provided port and pointing to the the same <code>VariableDataPrototype</code>. The attribute <code>isExternal</code> of one of those events is set to TRUE and the same attribute of the other event is set to FALSE.

The semantics of the external event is that it occurs at the hardware level. The semantics of the other event is that it indicates the sending of the data via the corresponding



provided port of the SensorActuatorSwComponentType. And the notion is that the event indicating the sending of data occurs before the external event.

8.3.3 External Event of a Sensor accessed via C/S

In this case the <code>SensorActuatorSwComponentType</code> receives data from the <code>EcuAbstractionSwComponentType</code> or <code>ComplexDeviceDriverSwComponentType</code> through a C/S interface on its required port. Two events <code>TDEventOperation</code>, indicating the receipt of the results of such an operation call, are specified and both referencing the same required port and pointing to the the same <code>ClientServerOperation</code>. The attribute <code>isExternal</code> of one of those events is set to TRUE and the same attribute of the other event is set to FALSE.

The semantics of the external event is that it occurs at the hardware level. The semantics of the other event is that it indicates the receipt of the data via the corresponding required port of the SensorActuatorSwComponentType. And the notion is that the external event occurs before the event indicating the receipt of the result of the operation call.

8.3.4 External Event of an Actuator accessed via C/S

In this case the <code>SensorActuatorSwComponentType</code> sends data to the <code>EcuAbstractionSwComponentType</code> or <code>ComplexDeviceDriverSwComponentType</code> through a C/S interface on its required port.

Two events TDEventOperation, indicating the invocation of the such an operation call, are specified and both referencing the same required port and pointing to the the same ClientServerOperation. The attribute isExternal of one of those events is set to TRUE and the same attribute of the other event is set to FALSE.

The semantics of the external event is that it occurs at the hardware level. The semantics of the other event is that it indicates the receipt of the data via the corresponding required port of the SensorActuatorSwComponentType. And the notion is that the event indicating the invocation of the operation occurs before the external event.

8.3.5 Considering hardware I/O latency of EventChains at VFB-level

To express an end-to-end sensor or actuator timing description event chain that also comprises hardware related latencies, already at VFB level, it is necessary to set the attribute <code>isExternal</code> of the stimulus and/or response accordingly. The overall end-to-end timing description event chain thus also comprises the "Input Latency" and/or the "Output Latency".



8.3.5.1 Input latency

The input latency is defined as the time latency between the point in time where the data is generated by a hardware I/O (e.g. a physical sensor) and the point in time where it is available for the application component, e.g. a SensorActuatorSwComponentType. The input latency is the time between the two events described in 8.3.1 and 8.3.3, respectively, depending on the communication type.

8.3.5.2 Output latency

The output latency is defined as the time latency between the point in time where the data is sent by the application component, e.g. a SensorActuatorSwComponent-Type, and the point in time where it is consumed by a hardware I/O (e.g. a physical actuator). The output latency is the time between the two events described in 8.3.2 and 8.3.4, respectively, depending on the communication type.

8.3.6 Constraining Input or Output Latency

The input or output latency can, for example, be modeled as event chain playing the role of a segment of the overall end-to-end chain. The overall end-to-end chain and also the input and output event chain segments can have attached timing constraints. This way either the overall end-to-end timing behavior or only the input and output behavior including hardware delay can be constrained already at VFB-level.

A History of Constraints and Specification Items

A.1 Constraint History of this Document related to AUTOSAR R4.0.1

A.1.1 Changed Constraints in R4.0.1

No constraints were changed in this release.

A.1.2 Added Constraints in R4.0.1

No constraints were added in this release.



A.1.3 Deleted Constraints in R4.0.1

No constraints were deleted in this release.

A.2 Constraint History of this Document related to AUTOSAR R4.0.2

A.2.1 Changed Constraints in R4.0.2

No constraints were changed in this release.

A.2.2 Added Constraints in R4.0.2

No constraints were added in this release.

A.2.3 Deleted Constraints in R4.0.2

No constraints were deleted in this release.

A.3 Constraint History of this Document related to AUTOSAR R4.0.3

A.3.1 Changed Constraints in R4.0.3

No constraints were changed in this release.

A.3.2 Added Constraints in R4.0.3

The constraints listed in the table below were added in this release.

Number	Heading
[constr_4500]	Restricted usage of functions
[constr_4501]	Application rule for the occurrence expression
[constr_4502]	Use references only as function operands
[constr_4503]	Restricted usage of AutosarOperationArgumentInstance for Content Filter
[constr_4504]	Restricted usage of AgeConstraint
[constr_4505]	Specifying minimum and maximum number of occurrences
[constr_4506]	Specifying minimum inter-arrival time and pattern length
[constr_4507]	Specifying pattern length, pattern jitter and patter period

Table A.1: Added Constraints in R4.0.3



A.3.3 Deleted Constraints in R 4.0.3

No constraints were changed in this release.

A.4 Constraint History of this Document related to AUTOSAR R4.1.1

A.4.1 Changed Constraints in R4.1.1

The constraints listed in the table below were changed in this release.

Number	Heading
[constr_4504]	The AgeConstraint is no longer restricted to events of type TDEventVariable—
	DataPrototype only. All events indicating the receipt and reading of data can be
	referenced by the AgeConstraint.

Table A.2: Changed Constraints in R4.1.1

A.4.2 Added Constraints in R4.1.1

The constraints listed in the table below were added in this release.

Number	Heading
[constr_4508]	TDEventVfb shall reference PortPrototypeBlueprint only in Blueprints
[constr_4509]	Only VfbTiming shall be a Blueprint
[constr_4510]	Specifying references to RunnableEntity and VariableAccess
[constr_4511]	Validity of referencing RunnableEntity
[constr_4512]	Validity of referencing VariableAccess
[constr_4513]	SynchronizationTimingConstraint shall reference at least two events
[constr_4514]	SynchronizationTimingConstraint shall reference at least two event chains
[constr_4515]	Specifying stimulus and response in TimingDescriptionEventChain
[constr_4516]	Specifying event chain segments
[constr_4517]	Referencing no further event chain segments
[constr_4518]	Specifying stimulus event and response event of first and last event chain segment
[constr_4519]	Specifying patternLength
[constr_4520]	Specifying attribute synchronizationConstraintType
[constr_4521]	Specifying attribute synchronizationConstraintType
[constr_4522]	SynchronizationTimingConstraint shall either reference events or event
	chains
[constr_4523]	Specifying attributes maxCycles and maxSlots
[constr_4524]	Referencing TimingDescriptionEvent
[constr_4525]	Precedence of successor relationships successor and directSuccessor
[constr_4526]	Specifying maxCycles and maxSlots in a Repetitive Execution Order Constraint
[constr_4527]	Referencing TimingDescriptionEvent in a Repetitive Execution Order Constraint
[constr_4528]	The root EOCExecutableEntityRefGroup shall reference only EOCExe-
	cutableEntityRefGroup S
[constr_4529]	Number of nested elements referenced by the <i>root</i> EOCExecutableEntityRef-
	Group



[constr_4530]	An EOCExecutableEntityRefGroup representing a cycle shall reference only EO-
	CExecutableEntityRef S
[constr_4531]	Number of nested elements referenced by EOCExecutableEntityRefGroup rep-
	resenting a cycle

Table A.3: Added Constraints in R4.1.1

A.4.3 Deleted Constraints in R4.1.1

No constraints were deleted in this release.

A.5 Constraint History of this Document related to AUTOSAR R4.1.2

A.5.1 Changed Constraints in R4.1.2

No constraints were changed in this release.

A.5.2 Added Constraints in R4.1.2

The constraints listed in the table below were added in this release.

Number	Heading
[constr_4532]	Successor relationship is not self-referencing
[constr_4533]	Maximum number of successor relationships
[constr_4534]	Maximum number of directSuccessor relationships
[constr_4535]	Same Mode of any ExecutableEntity
[constr_4536]	Compatible recurrence of any ExecutableEntity
[constr_4537]	References among elements in an ExecutionOrderConstraint
[constr_4538]	Hierarchical Execution Order Constraint: EOCExecutableEntityRef and EOCEx-
	ecutableEntityRef shall be target or source of a successor relationship
[constr_4539]	The successor relationships successor and directSuccessor shall not be used
[constr_4540]	maxCycles and maxSlots shall not be zero
[constr_4541]	EOCExecutableEntityRef shall reference ExecutableEntity in Ordinary Exe-
	cution Order Constraint
[constr_4542]	EOCExecutableEntityRef shall reference ExecutableEntity in Hierarchical
	Execution Order Constraint
[constr_4543]	Maximum value of the parameter minimumInterArrivalTime

Table A.4: Added Constraints in R4.1.2

A.5.3 Deleted Constraints in R4.1.2

No constraints were deleted in this release.



A.6 Constraint History of this Document related to AUTOSAR R4.1.3

A.6.1 Changed Constraints in R4.1.3

No constraints were changed in this release.

A.6.2 Added Constraints in R4.1.3

No constraints were added in this release.

A.6.3 Deleted Constraints in R4.1.3

No constraints were deleted in this release.

A.7 Constraint History of this Document related to AUTOSAR R4.2.1

A.7.1 Changed Constraints in R4.2.1

The constraints listed in the table below were changed in this release.

Number	Heading
[constr_4528]	The root EOCExecutableEntityRefGroup shall reference only EOCExe-
	cutableEntityRefGroup S
[constr_4530]	An EOCExecutableEntityRefGroup representing a cycle shall reference only EO-
	CExecutableEntityRefs respectively EOCEventRefs
[constr_4533]	Maximum number of successor relationships
[constr_4534]	Maximum number of directSuccessor relationships
[constr_4535]	An ExecutionOrderConstraint needs to be consistent regarding effective modes
[constr_4536]	Compatible recurrence of any ExecutableEntity
[constr_4537]	References among elements in an ExecutionOrderConstraint

Table A.5: Changed Constraints in R4.2.1

A.7.2 Added Constraints in R4.2.1

The constraints listed in the table below were added in this release.

Number	Heading
[constr_4544]	Specifying patternLength, patternJitter and patternPeriod
[constr_4545]	Referring either ExecutableEntityS or AbstractEventS
[constr_4546]	Setting the attribute isEvent
[constr_4547]	Setting the attribute permitMultipleReferencesToEE



[constr_4548]	EOCEventRef shall reference AbstractEvent in Ordinary Execution Order Con-
	straint
[constr_4549]	EOCEventRef shall reference AbstractEvent in Hierarchical Execution Order Con-
	straint
[constr_4550]	A Hierarchical Execution Order Constraint shall have an unambiguous root EOCExe-
	cutableEntityRefGroup

Table A.6: Added Constraints in R4.2.1

A.7.3 Deleted Constraints in R4.2.1

No constraints were deleted in this release.

A.8 Constraint History of this Document related to AUTOSAR R4.2.2

A.8.1 Changed Constraints in R4.2.2

No constraints were changed in this release.

A.8.2 Added Constraints in R4.2.2

No constraints were added in this release.

A.8.3 Deleted Constraints in R4.2.2

No constraints were deleted in this release.

A.9 Added Specification Items in R4.0.3

Number	Heading
[TPS_TIMEX_00001]	Purpose of TimingDescriptionEvent
[TPS_TIMEX_00002]	· · · · · · · · · · · · · · · · · · ·
[TPS_TIMEX_00003]	EventTriggeringConstraint specifies occurrence behavior respectively
	model
[TPS_TIMEX_00004]	LatencyTimingConstraint specifies latency constraints
[TPS_TIMEX_00005]	AgeConstraint to specify age constraints
[TPS_TIMEX_00006]	
[TPS_TIMEX_00007]	ExecutionOrderConstraint specifies sequence of executing executable
	entities
[TPS TIMEX 00008]	ExecutionTimeConstraint to specify execution time constraints



[TPS_TIMEX_00009]	Optional use of timing extensions
[TPS_TIMEX_00010]	PeriodicEventTriggering specifies periodic occurrences of events
[TPS_TIMEX_00011]	SporadicEventTriggering specifies sporadic occurrences of events
[TPS_TIMEX_00012]	ConcretePatternEventTriggering specifies concrete pattern of occur-
	rences of events
[TPS_TIMEX_00013]	BurstPatternEventTriggering specifies burst of occurrences of events
[TPS_TIMEX_00014]	ArbitraryEventTriggering specifies arbitrary occurrences of an event
[TPS_TIMEX_00015]	OffsetTimingConstraint specifies offset between occurrences of events
[TPS_TIMEX_00016]	Purpose of TDEventVfb
[TPS_TIMEX_00017]	TDEventVariableDataPrototype specifies events observable at
	sender/receiver ports
[TPS_TIMEX_00018]	TDEventOperation specifies events obeservable at client/server ports.
[TPS_TIMEX_00019]	TDEventModeDeclaration specifies events obeservable at mode ports.
[TPS_TIMEX_00020]	TDEventSwcInternalBehavior specifies observable events of runnable en-
	tities
[TPS_TIMEX_00021]	Purpose of TDEventCom
[TPS_TIMEX_00022]	TDEventISignal specifies events related to the exchange of I-Signals
[TPS_TIMEX_00023]	TDEventIPdu specifies events related to the exchange of I-PDUs
[TPS_TIMEX_00024]	TDEventFrame specifies events related to the exchange of network frames
[TPS_TIMEX_00025]	TDEventFrClusterCycleStart specifies the event related to the start of a
ITDO TIMEY 000001	FlexRay communication cycle
[TPS_TIMEX_00026]	TDEventTTCanCycleStart specifies the event related to the start of a
ITDO TIMEY 000071	TTCAN communication cycle
[TPS_TIMEX_00027]	Purpose of TDEventComplex
[TPS_TIMEX_00028]	TDEventBswInternalBehavior specifies observable events of BSW mod-
[TPS TIMEX 00029]	ule entities
[TPS_TIMEX_00029]	Purpose of TDEventBsw TDEventBsward objection observable events when basic software entries.
[IF3_IIVIEA_UUU3U]	TDEventBswModule specifies observable events when basic software entries are called
[TPS TIMEX 00031]	TDEventBswModeDeclaration specifies observable events in case of BSW
[11.9_11WEV_00031]	mode communication
[TPS TIMEX 00032]	Purpose of VfbTiming
[TPS TIMEX 00033]	Purpose of SwcTiming
[TPS_TIMEX_00034]	Purpose of SystemTiming
[TPS TIMEX 00035]	Purpose of BswModuleTiming
[TPS TIMEX 00036]	Purpose of EcuTiming
[TPS_TIMEX_00030]	TimingConstraint is a Traceable
[11 0_11WILA_00037]	TIMINGOONSCIAINC IS a Traceaute

Table A.7: Added Specification Items in 4.0.3

A.10 Added Specification Items in R4.1.1

Number	Heading
[TPS_TIMEX_00038]	· · · · · · · · · · · · · · · · · · ·
[TPS_TIMEX_00039]	TDEventTrigger specifies events observable at trigger ports
[TPS_TIMEX_00040]	Blueprinting VfbTiming
[TPS_TIMEX_00041]	· · · · · · · · · · · · · · · · · · ·
[TPS_TIMEX_00042]	Purpose of TDEventVfbPort
[TPS_TIMEX_00043]	·
[TPS_TIMEX_00044]	Purpose of TDEventSwc
[TPS_TIMEX_00045]	Purpose of TDEventSwcInternalBehaviorReference
[TPS_TIMEX_00046]	Purpose of EOCExecutableEntityRef



Table A.8: Added Specification Items in 4.1.1

A.11 Added Specification Items in R4.1.2

No specification items were added in this release.

A.12 Added Specification Items in R4.1.3

No specification items were added in this release.

A.13 Added Specification Items in R4.2.1

Number	Heading
	Purpose of ExecutionOrderConstraintTypeEnum
[TPS_TIMEX_00048]	Purpose of EOCEventRef

Table A.9: Added Specification Items in 4.2.1

A.14 Changed Specification Items in R4.2.1

Number	Heading
[TPS_TIMEX_00007]	Added the possibility to reference RTEEvents and BswEvents in addi-
	tion to ExecutableEntitys. The optional attributes executionOrder-
	ConstraintType, isEvent and permitMultipleReferencesToEE have
	been specified to support consistency checking of an execution order con-
	straint.

Table A.10: Changed Specification Items in 4.2.1

A.15 Added Specification Items in R4.2.2

No specification items were added in this release.

A.16 Changed Specification Items in R4.2.2

No specification items were changed in this release.



B Mentioned Class Tables

For the sake of completeness, this chapter contains a set of class tables representing meta-classes mentioned in the context of this document but which are not contained directly in the scope of describing specific meta-model semantics.

Class	ARElement (abstract)			
Package	M2::AUTOSARTe	mplates	::Generi	cStructure::GeneralTemplateClasses::ARPackage
Note	An element that can be defined stand-alone, i.e. without being part of another element (except for packages of course).			
Base	ARObject,CollectableElement,Identifiable,MultilanguageReferrable,Packageable Element,Referrable			
Attribute	Datatype Mul. Kind Note			
_	_	_	_	_

Table B.1: ARElement

Class	AbstractEvent (a	AbstractEvent (abstract)				
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::InternalBehavior		
Note		•		stract ability to model an event that can be taken to basic software in AUTOSAR.		
Base	ARObject,Identifia	ıble,Mult	tilangua	geReferrable,Referrable		
Attribute	Datatype	Mul.	Kind	Note		
activationR easonRepr esentation	ExecutableEntit yActivationReas on	01	ref	If the activationReasonRepresentation is referenced from the enclosing AbstractEvent this shall be taken as an indication that the latter contributes to the activating vector of this ExecutableEntity that owns the referenced ExecutableEntityActivationReason.		

Table B.2: AbstractEvent

Class	ApplicationSwCo	ApplicationSwComponentType				
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Components		
Note	The ApplicationSv	vCompo	nentTyp	e is used to represent the application software.		
	Tags: atp.recomm	nendedF	ackage:	=SwComponentTypes		
Base				componentType,AtpBlueprint,AtpBlueprintable,Atp		
	Classifier, Atp Type, Collectable Element, Identifiable, Multilanguage					
	Referrable, Packageable Element, Referrable, SwComponent Type					
Attribute	Datatype	Datatype Mul. Kind Note				
_	_	_	_	-		

Table B.3: ApplicationSwComponentType



Class	AtomicSwComponentType (abstract)				
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Components	
Note	An atomic softwar decomposed and			atomic in the sense that it cannot be further ss multiple ECUs.	
Base	-	lement,	ldentifial	nt,AtpBlueprintable,AtpClassifier,Atp ble,MultilanguageReferrable,Packageable ntType	
Attribute	Datatype Mul. Kind Note			Note	
internalBe havior	SwcInternalBeh avior	01	aggr	The SwcInternalBehaviors owned by an AtomicSwComponentType can be located in a different physical file. Therefore the aggregation is "atpSplitable". Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=internalBehavior, variation Point.shortLabel vh.latestBindingTime=preCompileTime	
symbolPro ps	SymbolProps	01	aggr	This represents the SymbolProps for the AtomicSwComponentType. Stereotypes: atpSplitable Tags: atp.Splitkey=shortName	

Table B.4: AtomicSwComponentType

Class	BswEvent (abstr	BswEvent (abstract)				
Package	M2::AUTOSARTe	mplates	::BswMc	oduleTemplate::BswBehavior		
Note	Base class of various kinds of events which are used to trigger a BswModuleEntity of this BSW module or cluster. The event is local to the BSW module or cluster. The short name of the meta-class instance is intended as an input to configure the required API of the BSW Scheduler.					
Base	ARObject, Abstrac	tEvent,I	dentifiab	ole,MultilanguageReferrable,Referrable		
Attribute	Datatype	Datatype Mul. Kind Note				
contextLim itation	BswDistinguish edPartition	*	ref	The existence of this reference indicates that the usage of the event is limited to the context of the referred BswDistinguishedPartitions.		
disabledIn Mode	ModeDeclaratio n	*	iref	The modes, in which this event is disabled. Stereotypes: atpSplitable Tags: atpSplitkey=disabledInMode		
startsOnEv ent	BswModuleEntit y	1	ref	The entity which is started by the event.		

Table B.5: BswEvent



Class	BswInternalBeha	vior				
Package	M2::AUTOSARTe	mplates	::BswMc	oduleTemplate::BswBehavior		
Note	Specifies the behavior of a BSW module or a BSW cluster w.r.t. the code entities visible by the BSW Scheduler. It is possible to have several different BswInternalBehaviors referring to the same BswModuleDescription.					
Base	ARObject, AtpClas Behavior, Multilanç			e,AtpStructureElement,Identifiable,Internal e,Referrable		
Attribute	Datatype	Mul.	Kind	Note		
bswPerInst anceMemo ryPolicy	BswPerInstance MemoryPolicy	*	aggr	arTypedPerInstanceMemory specific policy Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime		
clientPolicy	BswClientPolicy	*	aggr	Stereotypes: atpSplitable; atpVariationTags: atp. Splitkey=clientPolicy, variationPoint.shortLabel vh.latestBindingTime=preCompileTime		
distinguish edPartition	BswDistinguish edPartition	*	aggr	Indicates an abstract partition context in which the enclosing BswModuleEntity can be executed. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variationPoint. ShortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=60		
entity	BswModuleEntit y	1*	aggr	A code entity for which the behavior is described Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=5		
event	BswEvent	*	aggr	An event required by this module behavior. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=10		
exclusiveA reaPolicy	BswExclusiveAr eaPolicy	*	aggr	Stereotypes: atpSplitable; atpVariationTags: atp. Splitkey=exclusiveAreaPolicy, variationPoint.short Label vh.latestBindingTime=preCompileTime		
includedDa taTypeSet	IncludedDataTy peSet	*	aggr	The includedDataTypeSet is used by a basic software module for its implementation. Stereotypes: atpSplitable Tags: atp.Splitkey=includedDataTypeSet		



Attribute	Datatype	Mul.	Kind	Note
internalTrig geringPoin t	BswInternalTrig geringPoint	*	aggr	An internal triggering point. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=2
internalTrig geringPoin tPolicy	BswInternalTrig geringPointPolic y	*	aggr	Stereotypes: atpSplitable; atpVariationTags: atp. Splitkey=internalTriggeringPointPolicy, variation Point.shortPoint vh.latestBindingTime=preCompileTime
modeRece iverPolicy	BswModeRecei verPolicy	*	aggr	Implementation policy for the reception of mode switches. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=modeReceiverPolicy, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=25
modeSend erPolicy	BswModeSende rPolicy	*	aggr	Implementation policy for providing a mode group. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=modeSenderPolicy, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=20
parameter Policy	BswParameterP olicy	*	aggr	Stereotypes: atpSplitable; atpVariation Tags: atp. Splitkey=parameterPolicy, variatioPoint.shortLabel vh.latestBindingTime=preCompileTime
perInstanc eParamete r	ParameterData Prototype	*	aggr	Describes a read only memory object containing characteristic value(s) needed by this BswInternalBehavior. The role name perInstanceParameter is chosen in analogy to the similar role in the context of SwcInternalBehavior. In contrast to constantMemory, this object is not allocated locally by the module's code, but by the BSW Scheduler and it is accessed from the BSW module via the BSW Scheduler API. The main use case is the support of software emulation of calibration data. The aggregation is subject to variability with the purpose to support implementation variants. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=atp.Splitkey shortName, variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=45



Attribute	Datatype	Mul.	Kind	Note
receptionP olicy	BswDataRecept ionPolicy	*	aggr	Data reception policy for inter-partition and/or inter-core communication.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=receptionPolicy, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=55
releasedTri ggerPolicy	BswReleasedTri ggerPolicy	*	aggr	Stereotypes: atpSplitable; atpVariationTags: atp. Splitkey=releasedTriggerPolicy, variation Point.shortLabel vh.latestBindingTime=preCompileTime
scheduler NamePrefi x	BswSchedulerN amePrefix	*	aggr	Optional definition of one or more prefixes to be used for the BswScheduler.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=schedulerNamePrefix, variationPoint.ShortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=50
sendPolicy	BswDataSendP olicy	*	aggr	Stereotypes: atpSplitable; atpVariationTags: atp. Splitkey=sendPolicy, variationPoint.shortLabel vh.latestBindingTime=preCompileTime
serviceDep endency	BswServiceDep endency	*	aggr	Defines the requirements on AUTOSAR Services for a particular item. The aggregation is subject to variability with the purpose to support the conditional existence of ServiceNeeds.
				The aggregation is splitable in order to support that ServiceNeeds might be provided in later development steps.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=serviceDependency, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=40
triggerDire ctImpleme ntation	BswTriggerDire ctImplementatio n	*	aggr	Specifies a trigger to be directly implemented via OS calls.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=triggerDirectImplementation, variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=15
variationPo intProxy	VariationPointPr oxy	*	aggr	Proxy of a variation points in the C/C++ implementation.
				Stereotypes: atpSplitable Tags: atp.Splitkey=shortName

Table B.6: BswInternalBehavior



Class	BswInterruptEnti	BswInterruptEntity				
Package	M2::AUTOSARTe	mplates	::BswMc	oduleTemplate::BswBehavior		
Note	BSW module entit	y, which	is desig	gned to be triggered by an interrupt.		
Base	ARObject, BswMoo		ty,Execu	utableEntity,Identifiable,Multilanguage		
Attribute	Datatype	Mul.	Kind	Note		
interruptCa tegory	BswInterruptCat egory	1	attr	Category of the interrupt		
interruptSo urce	String	1	attr	Allows a textual documentation of the intended interrupt source.		

Table B.7: BswInterruptEntity

Class	BswModuleDesc	ription					
Package	M2::AUTOSARTemplates::BswModuleTemplate::BswOverview						
Note	Root element for the description of a single BSW module or BSW cluster. In case it describes a BSW module, the short name of this element equals the name of the BSW module. Tags: atp.recommendedPackage=BswModuleDescriptions						
Base	ARElement, AROL	oject,Atp ,Collecta	Blueprir ableElen	nt,AtpBlueprintable,AtpClassifier,AtpFeature,Atpnent,Identifiable,Multilanguage			
Attribute	Datatype	Mul.	Kind	Note			
bswModul eDepende ncy	BswModuleDep endency	*	aggr	Describes the dependency to another BSW module.			
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime			
				xml.sequenceOffset=20			
bswModul eDocumen tation	SwComponentD ocumentation	01	aggr	This adds a documentation to the BSW module. Stereotypes: atpSplitable; atpVariation			
				Tags: atp.Splitkey=bswModuleDocumentation, variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.seguenceOffset=6			
internalBe havior	BswInternalBeh avior	*	aggr	The various BswInternalBehaviors associated with a BswModuleDescription can be distributed over several physical files. Therefore the aggregation is «atpSplitable».			
				Stereotypes: atpSplitable Tags: atp.Splitkey=shortName xml.sequenceOffset=65			



Attribute	Datatype	Mul.	Kind	Note
moduleId	PositiveInteger	01	attr	Refers to the BSW Module Identifier defined by the AUTOSAR standard. For non-standardized modules, a proprietary identifier can be optionally chosen.
				Tags: xml.sequenceOffset=5
outgoingC allback	BswModuleEntr y	*	ref	Specifies a callback, which will be called from this module if required by another module.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=outgoingCallback, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=15
providedCli entServerE ntry	BswModuleClie ntServerEntry	*	aggr	Specifies that this module provides a client server entry which can be called from another parition or core. This entry is declared locally to this context and will be connected to the requiredClientServerEntry of another or the same module via the configuration of the BSW Scheduler.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=45
providedD ata	VariableDataPr ototype	*	aggr	Specifies a data prototype provided by this module in order to be read from another partition or core. The providedData is declared locally to this context and will be connected to the requiredData of another or the same module via the configuration of the BSW Scheduler.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=55
providedE ntry	BswModuleEntr y	*	ref	Specifies an entry provided by this module which can be called by other modules. This includes "main" functions and interrupt routines, but not callbacks (because the signature of a callback is defined by the caller).
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=providedEntry, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=10



Attribute	Datatype	Mul.	Kind	Note
providedM odeGroup	ModeDeclaratio nGroupPrototyp e	*	aggr	A set of modes which is owned and provided by this module or cluster. It can be connected to the requiredModeGroups of other modules or clusters via the configuration of the BswScheduler. It can also be synchronized with modes provided via ports by an associated ServiceSwComponentType, EcuAbstractionSwComponentType or ComplexDeviceDriverSwComponentType. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=25
releasedTri gger	Trigger	*	aggr	A Trigger released by this module or cluster. It can be connected to the requiredTriggers of other modules or clusters via the configuration of the BswScheduler. It can also be synchronized with Triggers provided via ports by an associated ServiceSwComponentType, EcuAbstractionSwComponentType or ComplexDeviceDriverSwComponentType. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=35
requiredCli entServerE ntry	BswModuleClie ntServerEntry	*	aggr	Specifies that this module requires a client server entry which can be implemented on another parition or core. This entry is declared locally to this context and will be connected to the provided Client Server Entry of another or the same module via the configuration of the BSW Scheduler. Stereotypes: atp Splitable; atp Variation Tags: atp. Splitkey=short Name, variation Point. short Label vh.latest Binding Time=pre Compile Time xml.sequence Offset=50
requiredDa ta	VariableDataPr ototype	*	aggr	Specifies a data prototype required by this module in oder to be provided from another partition or core. The required Data is declared locally to this context and will be connected to the provided Data of another or the same module via the configuration of the BswScheduler. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=60



Attribute	Datatype	Mul.	Kind	Note
requiredM odeGroup	ModeDeclaratio nGroupPrototyp e	*	aggr	Specifies that this module or cluster depends on a certain mode group. The requiredModeGroup is local to this context and will be connected to the providedModeGroup of another module or cluster via the configuration of the BswScheduler. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime
requiredTri gger	Trigger	*	aggr	xml.sequenceOffset=30 Specifies that this module or cluster reacts upon an external trigger. This requiredTrigger is declared locally to this context and will be connected to the providedTrigger of another module or cluster via the configuration of the BswScheduler. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=40

Table B.8: BswModuleDescription

Class	BswModuleEntity	BswModuleEntity (abstract)				
Package	M2::AUTOSARTe	mplates	::BswMc	oduleTemplate::BswBehavior		
Note	Specifies the sma cluster within AUT		de fragm	ent which can be described for a BSW module or		
Base	ARObject, Executa	ableEntit	t <mark>y</mark> ,Identif	iable,MultilanguageReferrable,Referrable		
Attribute	Datatype	Mul.	Kind	Note		
accessed ModeGrou p	ModeDeclaratio nGroupPrototyp e	*	ref	A mode group which is accessed via API call by this entity. It must be a ModeDeclarationGroupPrototype required by this module or cluster. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime		
activationP oint	BswInternalTrig geringPoint	*	ref	Activation point used by the module entity to activate one or more internal triggers. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime		
callPoint	BswModuleCall Point	*	aggr	A call point used in the code of this entitiy. The variablity of this association is especially targeted at debug scenarios: It is possible to have one variant calling into the AUTOSAR debug module and another one which doesn't. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime		



Attribute	Datatype	Mul.	Kind	Note
calledEntry	BswModuleEntr y	*	ref	The entry of another (or the same) BSW module which is called by this entry (usually via C function call). This information allows to set up a model of call chains.
				The variablity of this association is especially targeted at debug scenarios: It is possible to have one variant calling into the AUTOSAR debug module and another one which doesn't.
				Note that this relation has been merked as obsolete, since the more powerful definition of a callPoint should be used.
				Stereotypes: atpVariation
				Tags: atp.Status=removed vh.latestBindingTime=preCompileTime
dataReceiv	BswVariableAcc	*	aggr	The data is received via the BSW Scheduler.
ePoint	ess		aggr	The data is received via the BSVV Scheduler.
				Stereotypes: atpVariation
				Tags: vh.latestBindingTime=preCompileTime
dataSendP	BswVariableAcc	*	aggr	The data is sent via the BSW Scheduler.
oint	ess			Stereotypes: atpVariation
				Tags: vh.latestBindingTime=preCompileTime
implement	BswModuleEntr	1	ref	The entry which is implemented by this module
edEntry	у			entity.
issuedTrig ger	Trigger	*	ref	A trigger issued by this entity via BSW Scheduler API call. It must be a BswTrigger released (i.e. owned) by this module or cluster.
				Stereotypes: atpVariation
				Tags: vh.latestBindingTime=preCompileTime
managedM odeGroup	ModeDeclaratio nGroupPrototyp e	*	ref	A mode group which is managed by this entity. It must be a ModeDeclarationGroupPrototype provided by this module or cluster.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
scheduler NamePrefi x	BswSchedulerN amePrefix	01	ref	A prefix to be used in generated names for the BswModuleScheduler in the context of this BswModuleEntity, for example entry point prototypes, macros for dealing with exclusive areas, header file names.
				Details are defined in the SWS RTE.
				The prefix supersedes default rules for the prefix of those names.

Table B.9: BswModuleEntity



Class	ClientServerOpe	ClientServerOperation			
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::PortInterface	
Note	An operation decla	ared witl	hin the s	cope of a client/server interface.	
Base	ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Identifiable, Multilanguage Referrable, Referrable				
Attribute	Datatype	Mul.	Kind	Note	
argument (ordered)	ArgumentDataP rototype	*	aggr	An argument of this ClientServerOperation	
				Stereotypes: atpVariation	
				Tags: vh.latestBindingTime=blueprintDerivation Time	
possibleErr or	ApplicationError	*	ref	Possible errors that may by raised by the referring operation.	

Table B.10: ClientServerOperation

Class	ComplexDeviceD	riverSv	vCompo	onentType
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Components
Note	The ComplexDeviceDriverSwComponentType is a special AtomicSwComponentType that has direct access to hardware on an ECU and which is therefore linked to a specific ECU or specific hardware. The ComplexDeviceDriverSwComponentType introduces the possibility to link from the software representation to its hardware description provided by the ECU Resource Template. Tags: atp.recommendedPackage=SwComponentTypes			
Base	ARElement, ARObject, AtomicSwComponent Type, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, Collectable Element, Identifiable, Multilanguage Referrable, Package able Element, Referrable, SwComponent Type			
Attribute	Datatype	Mul.	Kind	Note
hardwareE lement	HwDescriptionE ntity	*	ref	Reference from the ComplexDeviceDriverSwComponentType to the description of the used HwElements.

Table B.11: ComplexDeviceDriverSwComponentType

Class	ComponentInCompositionInstanceRef					
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Composition::InstanceRefs		
Note		The ComponentInCompositionInstanceRef points to a concrete SwComponentPrototype within a CompositionSwComponentType.				
Base	ARObject, AtpInstanceRef					
Attribute	Datatype	Mul.	Kind	Note		
base	CompositionSw ComponentTyp e	1	ref	Stereotypes: atpDerivedTags: xml.sequence Offset=10		
contextC omponent (ordered)	SwComponentP rototype	*	ref	Tags: xml.sequenceOffset=20		
targetCom ponent	SwComponentP rototype	1	ref	Tags: xml.sequenceOffset=30		

Table B.12: ComponentInCompositionInstanceRef



Class	CompositionSwComponentType						
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Composition			
Note	A CompositionSwComponentType aggregates SwComponentPrototypes (that in turn are typed by SwComponentTypes) as well as SwConnectors for primarily connecting SwComponentPrototypes among each others and towards the surface of the CompositionSwComponentType. By this means hierarchical structures of software-components can be created. Tags: atp.recommendedPackage=SwComponentTypes						
Base	ARElement, AROb Type, Collectable E	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, Atp Type, Collectable Element, Identifiable, Multilanguage Referrable, Package able Element, Referrable, SwComponent Type					
Attribute	Datatype	Mul.	Kind	Note			
component	SwComponentPrototype	*	aggr	The instantiated components that are part of this composition. The aggregation of SwComponentPrototype is subject to variability with the purpose to support the conditional existence of a SwComponentPrototype. Please be aware: if the conditional existence of SwComponentPrototypes is resolved post-build the deselected SwComponentPrototypes are still contained in the ECUs build but the instances are inactive in in that they are not scheduled by the RTE. The aggregation is marked as atpSplitable in order to allow the addition of service components to the ECU extract during the ECU integration. The use case for having 0 components owned by the CompositionSwComponentType could be to deliver an empty CompositionSwComponentType to e.g. a supplier for filling the internal structure. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=postBuild			



Attribute	Datatype	Mul.	Kind	Note
connector	SwConnector	*	aggr	SwConnectors have the principal ability to establish a connection among PortPrototypes. They can have many roles in the context of a CompositionSwComponentType. Details are refined by subclasses.
				The aggregation of SwConnectors is subject to variability with the purpose to support variant data flow.
				The aggregation is marked as atpSplitable in order to allow the extension of the ECU extract with AssemblySwConnectors between ApplicationSwComponentTypes and ServiceSwComponentTypes during the ECU integration.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=postBuild
constantVa lueMappin g	ConstantSpecifi cationMappingS et	*	ref	Reference to the ConstantSpecificationMapping to be applied for initValues of PPortComSpecs and RPortComSpec.
				Stereotypes: atpSplitable Tags: atp.Splitkey=constantValueMapping
dataTypeM apping	DataTypeMappi ngSet	*	ref	Reference to the DataTypeMapping to be applied for the used ApplicationDataTypes in PortInterfaces.
				Background: when developing subsystems it may happen that ApplicationDataTypes are used on the surface of CompositionSwComponentTypes. In this case it would be reasonable to be able to also provide the intended mapping to the ImplementationDataTypes. However, this mapping shall be informal and not technically binding for the implementers mainly because the RTE generator is not concerned about the CompositionSwComponentTypes.
				Rationale: if the mapping of ApplicationDataTypes on the delegated and inner PortPrototype matches then the mapping to ImplementationDataTypes is not impacting compatibility.
				Stereotypes: atpSplitable Tags: atp.Splitkey=dataTypeMapping



Attribute	Datatype	Mul.	Kind	Note
instantiatio nRTEEven tProps	InstantiationRT EEventProps	*	aggr	This allows to define instantiation specific properties for RTE Events, in particular for instance specific scheduling. Stereotypes: atpSplitable; atpVariation
				Tags: atp.Splitkey=shortLabel, variation Point.shortLabel vh.latestBindingTime=codeGenerationTime

Table B.13: CompositionSwComponentType

Class	EcuAbstractionS	EcuAbstractionSwComponentType			
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Components	
Note	The ECUAbstraction is a special AtomicSwComponentType that resides between a software-component that wants to access ECU periphery and the Microcontroller Abstraction. The EcuAbstractionSwComponentType introduces the possibility to link from the software representation to its hardware description provided by the ECU Resource Template. Tags: atp.recommendedPackage=SwComponentTypes				
Base	ARElement, ARObject, AtomicSwComponent Type, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, Collectable Element, Identifiable, Multilanguage Referrable, Packageable Element, Referrable, SwComponent Type				
Attribute	Datatype	Mul.	Kind	Note	
hardwareE lement	HwDescriptionE ntity	*	ref	Reference from the EcuAbstractionComponentType to the description of the used HwElements.	

Table B.14: EcuAbstractionSwComponentType



Class	EcucModuleConfigurationValues							
Package	M2::AUTOSARTe	mplates	::ECUC	DescriptionTemplate				
Note		Head of the configuration of one Module. A Module can be a BSW module as well as the RTE and ECU Infrastructure.						
		As part of the BSW module description, the EcucModuleConfigurationValues element has two different roles:						
	The recommende BSW module vend		uration (contains parameter values recommended by the				
	The preconfigured by the implementa			ontains values for those parameters which are fixed the changed.				
		guration	Values	tionValues are used when the base (as part of the base ECU configuration) is created to				
	Tags: atp.recomm	nendedF	ackage	=EcucModuleConfigurationValuess				
Base	ARElement, AROb Referrable, Packaç			Element,Identifiable,Multilanguage Referrable				
Attribute	Datatype	Mul.	Kind	Note				
container	EcucContainerV alue	1*	aggr	Aggregates all containers that belong to this module configuration.				
				atpVariation: [RS_ECUC_00078]				
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=definition, shortName, variationPoint.shortLabel vh.latestBindingTime=postBuild xml.sequenceOffset=10				
definition	EcucModuleDef	1	ref	Reference to the definition of this EcucModuleConfigurationValues element. Typically, this is a vendor specific module configuration.				
D . (E .)	De lale de los		- 11 -	Tags: xml.sequenceOffset=-10				
ecucDefEd ition	RevisionLabelSt ring	1	attr	This is the version info of the ModuleDef ECUC Parameter definition to which this values conform to / are based on.				
				For the Definition of ModuleDef ECUC Parameters the AdminData shall be used to express the semantic changes. The compatibility rules between the definition and value revision labels is up to the module's vendor.				
implement ationConfi gVariant	EcucConfigurati onVariantEnum	1	attr	Specifies the kind of deliverable this EcucModuleConfigurationValues element provides. If this element is not used in a particular role (e.g. preconfiguredConfiguration or recommendedConfiguration) then the value must be one of VariantPreCompile, VariantLinkTime, VariantPostBuild.				



Attribute	Datatype	Mul.	Kind	Note
moduleDe scription	BswImplementa tion	01	ref	Referencing the BSW module description, which this EcucModuleConfigurationValues element is configuring. This is optional because the EcucModuleConfigurationValues element is also used to configure the ECU infrastructure (memory map) or Application SW-Cs. However in case the EcucModuleConfigurationValues are used to configure the module, the reference is mandatory in order to fetch module specific "common" published information.

Table B.15: EcucModuleConfigurationValues

Class	EcucValueCollec	tion			
Package	M2::AUTOSARTe	mplates	::ECUCI	DescriptionTemplate	
Note	This represents th	e ancho	r point o	of the ECU configuration description.	
	Tags: atp.recomm	nendedF	ackage:	=EcucValueCollections	
Base	1	ARElement, ARObject, Collectable Element, Identifiable, Multilanguage Referrable, Packageable Element, Referrable			
Attribute	Datatype	Mul.	Kind	Note	
ecuExtract	System	1	ref	Represents the extract of the System Configuration that is relevant for the ECU configured with that ECU Configuration Description.	
ecucValue	EcucModuleCo nfigurationValue s	1*	ref	References to the configuration of individual software modules that are present on this ECU. atpVariation: [RS_ECUC_0079]	
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime	

Table B.16: EcucValueCollection

Class	ExecutableEntity (abstract)				
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::InternalBehavior	
Note	Abstraction of exe	cutable	code.		
Base	ARObject,Identifia	ble,Mult	tilangua	geReferrable,Referrable	
Attribute	Datatype	Mul.	Kind	Note	
activationR eason	ExecutableEntit yActivationReas on	*	aggr	If the ExecutableEntity provides at least one activationReason element the RTE resp. BSW Scheduler shall provide means to read the activation vector of this executable entity execution.	
				If no activationReason element is provided the feature of being able to determine the activating RTEEvent is disabled for this ExecutableEntity.	



Attribute	Datatype	Mul.	Kind	Note
canEnterE xclusiveAr ea	ExclusiveArea	*	ref	This means that the executable entity can enter/leave the referenced exclusive area through explicit API calls.
exclusiveA reaNesting Order	ExclusiveAreaN estingOrder	*	ref	This represents the set of ExclusiveAreaNestingOrders recognized by this ExecutableEntity.
minimumSt artInterval	TimeValue	1	attr	Specifies the time in seconds by which two consecutive starts of an ExecutableEntity are guaranteed to be separated.
reentrancy Level	ReentrancyLeve IEnum	01	attr	The reentrancy level of this ExecutableEntity. See the documentation of the enumeration type ReentrancyLevelEnum for details. Please note that nonReentrant interfaces can have also reentrant or multicoreReentrant implementations, and reentrant interfaces can also have multicoreReentrant implementations.
runsInside ExclusiveA rea	ExclusiveArea	*	ref	The executable entity runs completely inside the referenced exclusive area.
swAddrMet hod	SwAddrMethod	01	ref	Addressing method related to this code entity. Via an association to the same SwAddrMethod, it can be specified that several code entities (even of different modules or components) shall be located in the same memory without already specifying the memory section itself.

Table B.17: ExecutableEntity

Class	ExecutionTime (a	abstrac	t)				
Package	M2::AUTOSARTe Time	M2::AUTOSARTemplates::CommonStructure::ResourceConsumption::Execution Time					
Note				to describe the ExecutionTime of software. The wided through this class.			
Base	ARObject,Identifia	ıble,Mult	tilanguaç	geReferrable,Referrable			
Attribute	Datatype	Mul.	Kind	Note			
exclusiveA rea	ExclusiveArea	01	ref	Reference to the ExclusiveArea this execution time is provided for.			
executable Entity	ExecutableEntit y	01	ref	The executable entity for which this execution time is described.			
hardwareC onfiguratio n	HardwareConfig uration	1	aggr	Provides information on the HardwareConfiguration used to specify this ExecutionTime.			
hwElement	HwElement	01	ref	The hardware element (e.g. type of ECU) for which the execution time is specified.			
includedLi brary	DependencyOn Artifact	*	ref	If this dependency is specified, the execution time of the library code is included in the execution time data for the runnable.			
memorySe ctionLocati on	MemorySection Location	*	aggr	Provides information on the MemorySectionLocation which is involved in the ExecutionTime description.			



Attribute	Datatype	Mul.	Kind	Note
softwareC ontext	SoftwareContex t	1	aggr	Provides information on the detailed SoftwareContext used to provide the ExecutionTime description.

Table B.18: ExecutionTime

Class	≪atpMixedString≫ FormulaExpression (abstract)				
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::GenericStructure::FormulaLanguage			
Note	This class represents the syntax of the formula language. The class is modeled as an abstract class in order to be specialized into particular use cases. For each use case the referable objects might be specified in the specialization.				
Base	ARObject				
Attribute	Datatype	Mul.	Kind	Note	
_	_	_	_	_	

Table B.19: FormulaExpression

Class	FrameTriggering	(abstra	ct)			
Package	M2::AUTOSARTemplates::SystemTemplate::Fibex::FibexCore::CoreCommunication					
Note	The FrameTriggering describes the instance of a frame sent on a channel and defines the manner of triggering (timing information) and identification of a frame on the channel, on which it is sent. For the same frame, if FrameTriggerings exist on more than one channel of the same cluster the fan-out/in is handled by the Bus interface.					
Base	ARObject,Identifia	ıble,Mult	tilangua	geReferrable,Referrable		
Attribute	Datatype	Mul.	Kind	Note		
frame	Frame	1	ref	One frame can be triggered several times, e.g. on different channels. If a frame has no frame triggering, it won't be sent at all. A frame triggering has assigned exactly one frame, which it triggers.		
framePort	FramePort	*	ref	References to the FramePort on every ECU of the system which sends and/or receives the frame. References for both the sender and the receiver side shall be included when the system is completely defined.		
pduTrigger ing	PduTriggering	*	ref	This reference provides the relationship to the PduTriggerings that are implemented by the FrameTriggering. The reference is optional since no PduTriggering can be defined for NmPdus and XCP Pdus. Stereotypes: atpVariation Tags: vh.latestBindingTime=postBuild		

Table B.20: FrameTriggering



Class	ISignal										
Package		mplates	::Systen	nTemplate::Fibex::FibexCore::CoreCommunication							
Note	Signal of the Interaction Layer. The RTE supports a "signal fan-out" where the same System Signal is sent in different SignalIPdus to multiple receivers.										
	System Signal is t	To support the RTE "signal fan-out" each SignalIPdu contains ISignals. If the same System Signal is to be mapped into several SignalIPdus there is one ISignal needed for each ISignalToIPduMapping.									
				tween the Precompile configured RTE and the om Stack (see ECUC Parameter Mapping).							
	In case of the Sys contained in the S			o an ISignal must be created for each SystemSignal oup.							
	Tags: atp.recomm	nendedF	ackage	=ISignals							
Base	ARObject,Collecta Referrable,Packaç			exElement,Identifiable,Multilanguage Referrable							
Attribute	Datatype	Mul.	Kind	Note							
dataTransf ormation	DataTransforma tion	01	ref	Optional reference to a DataTransformation which represents the transformer chain that is used to transform the data that shall be placed inside this ISignal.							
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=dataTransformation, variation Point.shortLabel vh.latestBindingTime=codeGenerationTime							
dataTypeP olicy	DataTypePolicy Enum	1	attr	With the aggregation of SwDataDefProps an ISignal specifies how it is represented on the network. This representation follows a particular policy. Note that this causes some redundancy which is intended and can be used to support flexible development methodology as well as subsequent integrity checks.							
				If the policy "networkRepresentationFromComSpec" is chosen the network representation from the ComSpec that is aggregated by the PortPrototype shall be used. If the "override" policy is chosen the requirements specified in the PortInterface and in the ComSpec are not fulfilled by the networkRepresentationProps. In case the System Description doesn't use a complete Software Component Description (VFB View) the "legacy" policy can be chosen.							
iSignalPro ps	ISignalProps	01	aggr	Additional optional ISignal properties that may be stored in different files. Stereotypes: atpSplitable Tags: atp.Splitkey=iSignalProps							



Attribute	Datatype	Mul.	Kind	Note
initValue	ValueSpecificati	01	aggr	Optional definition of a ISignal's initValue in case the System Description doesn't use a complete Software Component Description (VFB View). This supports the inclusion of legacy system signals. This value can be used to configure the Signal's "InitValue". If a full DataMapping exist for the SystemSignal this information may be available from a configured SenderComSpec and ReceiverComSpec. In this case the initvalues in SenderComSpec and/or ReceiverComSpec override this optional value specification. Further restrictions apply from the RTE specification.
length	Integer	1	attr	Size of the signal in bits. The size needs to be derived from the mapped VariableDataPrototype according to the mapping of primitive DataTypes to BaseTypes as used in the RTE. Indicates maximum size for dynamic length signals. The ISignal length of zero bits is allowed.
networkRe presentatio nProps	SwDataDefProp s	01	aggr	Specification of the actual network representation. The usage of SwDataDefProps for this purpose is restricted to the attributes compuMethod and baseType. The optional baseType attributes "memAllignment" and "byteOrder" shall not be used. The attribute "dataTypePolicy" in the SystemTemplate element defines whether this network representation shall be ignored and the information shall be taken over from the network representation of the ComSpec. If "override" is chosen by the system integrator the network representation can violate against the
				requirements defined in the PortInterface and in the network representation of the ComSpec. In case that the System Description doesn't use a complete Software Component Description (VFB View) this element is used to configure "ComSignalDataInvalidValue" and the Data Semantics.
systemSig nal	SystemSignal	1	ref	Reference to the System Signal that is supposed to be transmitted in the ISignal.



Attribute	Datatype	Mul.	Kind	Note
transforma tionISignal Props	TransformationI SignalProps	*	aggr	A transformer chain consists of an ordered list of transformers. The ISignal specific configuration properties for each transformer are defined in the TransformationISignalProps class. The transformer configuration properties that are common for all ISignals are described in the TransformationTechnology class.

Table B.21: ISignal

Class	InternalBehavior (abstract)					
Package	M2::AUTOSARTe	mplates	::Comm	onStructure::InternalBehavior		
Note	Common base class (abstract) for the internal behavior of both software components and basic software modules/clusters.					
Base	ARObject, AtpClas Referrable, Referra		pFeature	e,AtpStructureElement,Identifiable,Multilanguage		
Attribute	Datatype	Mul.	Kind	Note		
constantM emory	ParameterData Prototype	*	aggr	Describes a read only memory object containing characteristic value(s) implemented by this InternalBehavior. The shortName of ParameterDataPrototype has to be equal to the "C' identifier of the described constant. The characteristic value(s) might be shared between SwComponentPrototypes of the same SwComponentType. The aggregation of constantMemory is subject to variability with the purpose to support variability in the software component or module implementations. Typically different algorithms in the implementation are requiring different number of memory objects. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime		
constantVa lueMappin g	ConstantSpecifi cationMappingS et	*	ref	Reference to the ConstanSpecificationMapping to be applied for the particular InternalBehavior Stereotypes: atpSplitable Tags: atp.Splitkey=constantValueMapping		
dataTypeM apping	DataTypeMappi ngSet	*	ref	Reference to the DataTypeMapping to be applied for the particular InternalBehavior Stereotypes: atpSplitable		
				Tags: atp.Splitkey=dataTypeMapping		



Attribute	Datatype	Mul.	Kind	Note
exclusiveA rea	ExclusiveArea	*	aggr	This specifies an ExclusiveArea for this InternalBehavior. The exclusiveArea is local to the component resp. module. The aggregation of ExclusiveAreas is subject to variability. Note: the number of ExclusiveAreas might vary due to the conditional existence of RunnableEntities or BswModuleEntities. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation
				Point.shortLabel vh.latestBindingTime=preCompileTime
exclusiveA reaNesting Order	ExclusiveAreaN estingOrder	*	aggr	This represents the set of ExclusiveAreaNestingOrder owned by the InternalBehavior.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime
staticMem ory	VariableDataPr ototype	*	aggr	Describes a read and writeable static memory object representing measurment variables implemented by this software component. Static is used in the meaning of non temporary and does not necessarily specify a linker encapsulation. This kind of memory is only supported if supportsMultipleInstantiation is FALSE. The shortName of the VariableDataPrototype has to be equal with the "C' identifier of the described variable. The aggregation of staticMemory is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime

Table B.22: InternalBehavior

Class	PPortPrototype					
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::SWComponentTemplate::Components				
Note	Component port p	Component port providing a certain port interface.				
Base	ARObject, AbstractProvidedPortPrototype, AtpBlueprintable, AtpFeature, AtpPrototype, Identifiable, MultilanguageReferrable, PortPrototype, Referrable					
Attribute	Datatype Mul. Kind Note					
providedInt erface	PortInterface	1	tref	The interface that this port provides.		
				Stereotypes: isOfType		



Attribute Datatype	Mul. F	Kind	Note
--------------------	--------	------	------

Table B.23: PPortPrototype

Class	PortPrototype (a	bstract))					
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components							
Note	Base class for the ports of an AUTOSAR software component. The aggregation of PortPrototypes is subject to variability with the purpose to support the conditional existence of ports.							
Base	ARObject, AtpBlue Referrable, Referra		e,AtpFe	ature,AtpPrototype,Identifiable,Multilanguage				
Attribute	Datatype	Mul.	Kind	Note				
clientServe rAnnotatio n	ClientServerAnn otation	*	aggr	Annotation of this PortPrototype with respect to client/server communication.				
delegated PortAnnota tion	DelegatedPortA nnotation	01	aggr	Annotations on this delegated port.				
ioHwAbstr actionServ erAnnotati on	loHwAbstraction ServerAnnotatio n	*	aggr	Annotations on this IO Hardware Abstraction port.				
modePortA nnotation	ModePortAnnot ation	*	aggr	Annotations on this mode port.				
nvDataPort Annotation	NvDataPortAnn otation	*	aggr	Annotations on this non voilatile data port.				
parameter PortAnnota tion	ParameterPortA nnotation	*	aggr	Annotations on this parameter port.				
senderRec eiverAnnot ation	SenderReceiver Annotation	*	aggr	Collection of annotations of this ports sender/receiver communication.				
triggerPort Annotation	TriggerPortAnn otation	*	aggr	Annotations on this trigger port.				

Table B.24: PortPrototype



Class	PortPrototypeBlu	ueprint					
Package	M2::AUTOSARTemplates::StandardizationTemplate::BlueprintDedicated::Port ProtoypeBlueprint						
Note	This meta-class represents the ability to express a blueprint of a PortPrototype by referring to a particular PortInterface. This blueprint can then be used as a guidance to create particular PortPrototypes which are defined according to this blueprint. By this it is possible to standardize application interfaces without the need to also standardize software-components with PortPrototypes typed by the standardized PortInterfaces. Tags: atp.recommendedPackage=PortPrototypeBlueprints						
Base	ARElement, ARObject, AtpBlueprint, AtpClassifier, AtpFeature, AtpStructure Element, Collectable Element, Identifiable, Multilanguage Referrable, Package able Element, Referrable						
Attribute	Datatype	Mul.	Kind	Note			
initValue	PortPrototypeBl ueprintInitValue	*	aggr	This specifies the init values for the dataElements in the particular PortPrototypeBlueprint.			
interface	PortInterface	1	ref	This is the interface for which the blueprint is defined. It may be a blueprint itself or a standardized PortInterface			
providedC omSpec	PPortComSpec	*	aggr	Provided communication attributes per interface element (data element or operation).			
requiredCo mSpec	RPortComSpec	*	aggr	Required communication attributes, one for each interface element.			

Table B.25: PortPrototypeBlueprint

Class	RPortPrototype				
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Components	
Note	Component port r	equiring	a certai	in port interface.	
Base	ARObject, AbstractRequiredPortPrototype, AtpBlueprintable, AtpFeature, Atp Prototype, Identifiable, MultilanguageReferrable, PortPrototype, Referrable				
Attribute	Datatype	Mul.	Kind	Note	
requiredInt erface	PortInterface	1	tref	The interface that this port requires, i.e. the port depends on another port providing the specified interface.	
				Stereotypes: isOfType	

Table B.26: RPortPrototype

Class	RTEEvent (abstra	RTEEvent (abstract)					
Package	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::RTE Events						
Note	Abstract base clas	Abstract base class for all RTE-related events					
Base	ARObject, Abstract Event, Atp Classifier, Atp Feature, Atp Structure Element, Identifiable, Multilanguage Referrable, Referrable						
Attribute	Datatype	Mul.	Kind	Note			



Attribute	Datatype	Mul.	Kind	Note
disabledM ode	ModeDeclaratio n	*	iref	Reference to the Modes that disable the Event.
				Stereotypes: atpSplitable
				Tags: atp.Splitkey=contextPort, contextMode
				DeclarationGroupPrototype, targetMode
				Declaration
startOnEve	RunnableEntity	01	ref	RunnableEntity starts when the corresponding
nt				RTEEvent occurs.

Table B.27: RTEEvent

Class	ResourceConsumption							
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::CommonStructure::ResourceConsumption						
Note	Description of consumed resources by one implementation of a software.							
Base	ARObject,Identifia	ıble,Mult	tilangua	geReferrable,Referrable				
Attribute	Datatype	Mul.	Kind	Note				
executionT ime	ExecutionTime	*	aggr	Collection of the execution time descriptions for this implementation. The aggregation of executionTime is subject to variability with the purpose to support the conditional existence of runnable entities.				
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime				
heapUsag e	HeapUsage	*	aggr	Collection of the heap memory allocated by this implementation. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime				
memorySe ction	MemorySection	*	aggr	An abstract memory section required by this Implementation. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime				
sectionNa mePrefix	SectionNamePr efix	*	aggr	A prefix to be used for the memory section symbol in the code. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime				



Attribute	Datatype	Mul.	Kind	Note
stackUsag e	StackUsage	*	aggr	Collection of the stack memory usage for each runnable entity of this implementation. The aggregation of StackUsage is subject to variability with the purpose to support the conditional existence of runnable entities.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime

Table B.28: ResourceConsumption

Class	RootSwComposi	tionPro	totype				
Package	M2::AUTOSARTe	mplates	::Systen	nTemplate			
Note	M2::AUTOSARTemplates::SystemTemplate The RootSwCompositionPrototype represents the top-level-composition of software components within a given System. According to the use case of the System, this may for example be the a more or less complete VFB description, the software of a System Extract or the software of a flat ECU Extract with only atomic SWCs. Therefore the RootSwComposition will only occasionally contain all atomic software components that are used in a complete VFB System. The OEM is primarily interested in the required functionality and the interfaces defining the integration of the Software Component into the System. The internal structure of such a component contains often substantial intellectual property of a supplier. Therefore a top-level software composition will often contain empty compositions which represent subsystems. The contained SwComponentPrototypes are fully specified by their SwComponentTypes (including PortPrototypes, PortInterfaces,						
	VariableDataProto interconnected us			nalBehavior etc.), and their ports are prevented by the prototypes.			
Base				e,Identifiable,MultilanguageReferrable,Referrable			
Attribute	Datatype	Mul.	Kind	Note			
calibration Parameter ValueSet	CalibrationPara meterValueSet	*	ref	Used CalibrationParameterValueSet for instance specific initialization of calibration parameters. Stereotypes: atpSplitable Tags: atp.Splitkey=calibrationParameterValueSet			
flatMap	FlatMap	01	ref	The FlatMap used in the scope of this RootSwCompositionPrototype. Stereotypes: atpSplitable Tags: atp.Splitkey=flatMap			
softwareC omposition	CompositionSw ComponentTyp e	1	tref	We assume that there is exactly one top-level composition that includes all Component instances of the system Stereotypes: isOfType			

Table B.29: RootSwCompositionPrototype



Class	RunnableEntity					
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::SwcInternalBehavior		
Note	A RunnableEntity represents the smallest code-fragment that is provided by an AtomicSwComponentType and are executed under control of the RTE. RunnableEntities are for instance set up to respond to data reception or operation invocation on a server.					
Base				e,AtpStructureElement,Executable eferrable,Referrable		
Attribute	Datatype	Mul.	Kind	Note		
argument (ordered)	RunnableEntity Argument	*	aggr	This represents the formal definition of a an argument to a RunnableEntity.		
asynchron ousServer CallResult Point	AsynchronousS erverCallResult Point	*	aggr	The server call result point admits a runnable to fetch the result of an asynchronous server call. The aggregation of AsynchronousServerCallResultPoint is subject to variability with the purpose to support the conditional existence of client server PortPrototypes and the variant existence of server call result points in the implementation. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime		
canBeInvo kedConcur rently	Boolean	1	attr	If the value of this attribute is set to "true" the enclosing RunnableEntity can be invoked concurrently (even for one instance of the corresponding AtomicSwComponentType). This implies that it is the responsibility of the implementation of the RunnableEntity to take care of this form of concurrency. Note that the default value of this attribute is set to "false".		
dataReadA ccess	VariableAccess	*	aggr	RunnableEntity has implicit read access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype. The aggregation of dataReadAccess is subject to variability with the purpose to support the conditional existence of sender receiver ports or the variant existence of dataReadAccess in the implementation. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime		



Attribute	Datatype	Mul.	Kind	Note
dataReceiv ePointByAr gument	VariableAccess	*	aggr	RunnableEntity has explicit read access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype. The result is passed back to the application by means of an argument in the function signature. The aggregation of dataReceivePointByArgument is subject to variability with the purpose to support the conditional existence of sender receiver PortPrototype or the variant existence of data receive points in the implementation. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
dataReceiv ePointByV alue	VariableAccess	*	aggr	RunnableEntity has explicit read access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype. The result is passed back to the application by means of the return value. The aggregation of dataReceivePointByValue is subject to variability with the purpose to support the conditional existence of sender receiver ports or the variant existence of data receive points in the implementation. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
dataSendP oint	VariableAccess	*	aggr	RunnableEntity has explicit write access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype. The aggregation of dataSendPoint is subject to variability with the purpose to support the conditional existence of sender receiver PortPrototype or the variant existence of data send points in the implementation. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
dataWriteA ccess	VariableAccess	*	aggr	RunnableEntity has implicit write access to dataElement of a sender-receiver PortPrototype or nv data of a nv data PortPrototype. The aggregation of dataWriteAccess is subject to variability with the purpose to support the conditional existence of sender receiver ports or the variant existence of dataWriteAccess in the implementation. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime



Attribute	Datatura	Mul.	Kind	Note
	Datatype	WUI.		
externalTri ggeringPoi nt	ExternalTriggeri ngPoint	Ŷ	aggr	The aggregation of ExternalTriggeringPoint is subject to variability with the purpose to support the conditional existence of trigger ports or the variant existence of external triggering points in the implementation. Stereotypes: atpVariation
				Tags: vh.latestBindingTime=preCompileTime
internalTrig geringPoin t	InternalTriggerin gPoint	*	aggr	The aggregation of InternalTriggeringPoint is subject to variability with the purpose to support the variant existence of internal triggering points in the implementation.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
modeAcce ssPoint	ModeAccessPoi nt	*	aggr	The runnable has a mode access point. The aggregation of ModeAccessPoint is subject to variability with the purpose to support the conditional existence of mode ports or the variant existence of mode access points in the implementation.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
modeSwitc hPoint	ModeSwitchPoi nt	*	aggr	The runnable has a mode switch point. The aggregation of ModeSwitchPoint is subject to variability with the purpose to support the conditional existence of mode ports or the variant existence of mode switch points in the implementation.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
parameter Access	ParameterAcce ss	*	aggr	The presence of a ParameterAccess implies that a RunnableEntity needs read only access to a ParameterDataPrototype which may either be local or within a PortPrototype.
				The aggregation of ParameterAccess is subject to variability with the purpose to support the conditional existence of parameter ports and component local parameters as well as the variant existence of ParameterAccess (points) in the implementation.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime



Attribute	Datatype	Mul.	Kind	Note
readLocal Variable	VariableAccess	*	aggr	The presence of a readLocalVariable implies that a RunnableEntity needs read access to a VariableDataPrototype in the role of implicitInterRunnableVariable or explicitInterRunnableVariable. The aggregation of readLocalVariable is subject to variability with the purpose to support the conditional existence of implicitInterRunnableVariable and explicitInterRunnableVariable or the variant existence of readLocalVariable (points) in the implementation. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
serverCall Point	ServerCallPoint	*	aggr	The RunnableEntity has a ServerCallPoint. The aggregation of ServerCallPoint is subject to variability with the purpose to support the conditional existence of client server PortPrototypes or the variant existence of server call points in the implementation. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime
symbol	Cldentifier	1	ref	The symbol describing this RunnableEntity's entry point. This is considered the API of the RunnableEntity and is required during the RTE contract phase.
waitPoint	WaitPoint	*	aggr	The WaitPoint associated with the RunnableEntity.
writtenLoc alVariable	VariableAccess	*	aggr	The presence of a writtenLocalVariable implies that a RunnableEntity needs write access to a VariableDataPrototype in the role of implicitInterRunnableVariable or explicitInterRunnableVariable. The aggregation of writtenLocalVariable is subject to variability with the purpose to support the conditional existence of implicitInterRunnableVariable and explicitInterRunnableVariable or the variant existence of writtenLocalVariable (points) in the implementation.
				Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime

Table B.30: RunnableEntity



Class	SenderReceiverl	nterface	9		
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::PortInterface	
Note	A sender/receiver interface declares a number of data elements to be sent and received.				
Dana	Tags: atp.recommendedPackage=PortInterfaces				
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, Atp Type, Collectable Element, DataInterface, Identifiable, Multilanguage Referrable, Packageable Element, PortInterface, Referrable				
Attribute	Datatype	Mul.	Kind	Note	
dataEleme nt	VariableDataPr ototype	1*	aggr	The data elements of this SenderReceiverInterface.	
invalidation Policy	InvalidationPolic y	*	aggr	InvalidationPolicy for a particular dataElement	

Table B.31: SenderReceiverInterface

Class	SensorActuatorS	SensorActuatorSwComponentType				
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Components		
Note	The SensorActuatorSwComponentType introduces the possibility to link from the software representation of a sensor/actuator to its hardware description provided by the ECU Resource Template. Tags: atp.recommendedPackage=SwComponentTypes					
Base	ARElement, ARObject, AtomicSwComponent Type, AtpBlueprint, AtpBlueprintable, Atp Classifier, AtpType, Collectable Element, Identifiable, Multilanguage Referrable, Package able Element, Referrable, SwComponent Type					
Attribute	Datatype	Mul.	Kind	Note		
sensorActu ator	HwDescriptionE ntity	1	ref	Reference from the Sensor Actuator Software Component Type to the description of the actual hardware.		

Table B.32: SensorActuatorSwComponentType

Class	SwComponentPr	SwComponentPrototype			
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Composition	
Note	Role of a software	Role of a software component within a composition.			
Base	ARObject, AtpFeat	ARObject, AtpFeature, AtpPrototype, Identifiable, MultilanguageReferrable, Referrable			
Attribute	Datatype	Mul.	Kind	Note	
type	SwComponentT	1	tref	Type of the instance.	
	ype	ype			
				Stereotypes: isOfType	

Table B.33: SwComponentPrototype



Class	SwComponentTy	pe (abs	stract)				
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components						
Note	Base class for AU	Base class for AUTOSAR software components.					
Base		lement,		nt,AtpBlueprintable,AtpClassifier,Atp ole,MultilanguageReferrable,Packageable			
Attribute	Datatype	Mul.	Kind	Note			
consistenc yNeeds	ConsistencyNee ds	*	aggr	This represents the colelction of ConsistencyNeeds owned by the enclosing SwComponentType. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime			
port	PortPrototype	*	aggr	The ports through which this component can communicate. The aggregation of PortPrototype is subject to variability with the purpose to support the conditional existence of PortPrototypes. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime			
portGroup	PortGroup	*	aggr	A port group being part of this component. Stereotypes: atpVariation Tags: vh.latestBindingTime=preCompileTime			
swCompon entDocum entation	SwComponentD ocumentation	01	aggr	This adds a documentation to the SwComponentType. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=swComponentDocumentation, variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=-10			
unitGroup	UnitGroup	*	ref	This allows for the specification of which UnitGroups are relevant in the context of referencing SwComponentType.			

Table B.34: SwComponentType

Class	SwSystemconstantValueSet				
Package	M2::AUTOSARTemplates::GenericStructure::VariantHandling				
Note	This meta-class represents the ability to specify a set of system constant values. Tags: atp.recommendedPackage=SwSystemconstantValueSets				
Base	ARElement, ARObject, Collectable Element, Identifiable, Multilanguage Referrable, Package able Element, Referrable				
Attribute	Datatype Mul. Kind Note				



Attribute	Datatype	Mul.	Kind	Note
swSystem constantVa lue	SwSystemconst Value	*	aggr	This is one particular value of a system constant.

Table B.35: SwSystemconstantValueSet

Class	SwcInternalBeha	vior					
Package	M2::AUTOSARTe	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior					
Note	aspects of the sof	The SwcInternalBehavior of an AtomicSwComponentType describes the relevant aspects of the software-component with respect to the RTE, i.e. the RunnableEntities and the RTEEvents they respond to.					
Base	ARObject, AtpClass Behavior, Multilance			e,AtpStructureElement,Identifiable,Internal e,Referrable			
Attribute	Datatype	Mul.	Kind	Note			
arTypedPe rInstanceM emory	VariableDataPr ototype	*	aggr	Defines an AUTOSAR typed memory-block that needs to be available for each instance of the SW-component. This is typically only useful if supportsMultipleInstantiation is set to "true" or if the component defines NVRAM access via permanent blocks. The aggregation of arTypedPerInstanceMemory is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime			
event	RTEEvent	*	aggr	This is a RTEEvent specified for the particular SwcInternalBehavior. The aggregation of RTEEvent is subject to variability with the purpose to support the conditional existence of RTE events. Note: the number of RTE events might vary due to the conditional existence of PortPrototypes using DataReceivedEvents or due to different scheduling needs of algorithms. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime			



Attribute	Datatype	Mul.	Kind	Note
explicitInte rRunnable Variable	VariableDataPr ototype	*	aggr	Implement state message semantics for establishing communication among runnables of the same component. The aggregation of explicitInterRunnableVariable is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime
handleTer minationAn dRestart	HandleTerminat ionAndRestartE num	1	attr	This attribute controls the behavior with respect to stopping and restarting. The corresponding AtomicSwComponentType may either not support stop and restart, or support only stop, or support both stop and restart.
implicitInte rRunnable Variable	VariableDataPr ototype	*	aggr	Implement state message semantics for establishing communication among runnables of the same component. The aggregation of implicitInterRunnableVariable is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime
includedDa taTypeSet	IncludedDataTy peSet	*	aggr	The includedDataTypeSet is used by a software component for its implementation. Stereotypes: atpSplitable Tags: atp.Splitkey=includedDataTypeSet
includedM odeDeclar ationGroup Set	IncludedModeD eclarationGroup Set	*	aggr	This aggregation represents the included ModeDeclarationGroups Stereotypes: atpSplitable Tags: atp.Splitkey=includedModeDeclaration GroupSet



Attribute	Datatype	Mul.	Kind	Note
instantiatio nDataDefP rops	InstantiationDat aDefProps	*	aggr	The purpose of this is that within the context of a given SwComponentType some data def properties of individual instantiations can be modified. The aggregation of InstantiationDataDefProps is subject to variability with the purpose to support the conditional existence of PortPrototypes and component local memories like "perInstanceParameter" or "arTypedPerInstanceMemory". Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=instantiationDataDefProps, variationPoint.shortLabel vh.latestBindingTime=preCompileTime
perInstanc eMemory	PerInstanceMe mory	*	aggr	Defines a per-instance memory object needed by this software component. The aggregation of PerInstanceMemory is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime
perInstanc eParamete r	ParameterData Prototype	*	aggr	Defines parameter(s) or characteristic value(s) that needs to be available for each instance of the software-component. This is typically only useful if supportsMultipleInstantiation is set to "true". The aggregation of perInstanceParameter is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime
portAPIOpt ion	PortAPIOption	*	aggr	Options for generating the signature of port-related calls from a runnable to the RTE and vice versa. The aggregation of PortPrototypes is subject to variability with the purpose to support the conditional existence of ports. Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=portAPIOption, variation Point.shortLabel vh.latestBindingTime=preCompileTime



Attribute	Datatype	Mul.	Kind	Note
runnable	RunnableEntity	1*	aggr	This is a RunnableEntity specified for the particular SwcInternalBehavior.
				The aggregation of RunnableEntity is subject to variability with the purpose to support the conditional existence of RunnableEntities. Note: the number of RunnableEntities might vary due to the conditional existence of PortPrototypes using DataReceivedEvents or due to different scheduling needs of algorithms.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel
serviceDep endency	SwcServiceDep endency	*	aggr	vh.latestBindingTime=preCompileTime Defines the requirements on AUTOSAR Services for a particular item.
				The aggregation of SwcServiceDependency is subject to variability with the purpose to support the conditional existence of ports as well as the conditional existence of ServiceNeeds.
				The SwcServiceDependency owned by an SwcInternalBehavior can be located in a different physical file in order to support that SwcServiceDependency might be provided in later development steps or even by different expert domain (e.g OBD expert for Obd related Service Needs) tools. Therefore the aggregation is "atpSplitable".
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel
sharedPar ameter	ParameterData Prototype	*	aggr	vh.latestBindingTime=preCompileTime Defines parameter(s) or characteristic value(s) shared between SwComponentPrototypes of the same SwComponentType The aggregation of sharedParameter is subject to variability with the purpose to support variability in the software components implementations. Typically different algorithms in the implementation are requiring different number of memory objects.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=preCompileTime
supportsM ultipleInsta ntiation	Boolean	1	attr	Indicate whether the corresponding software-component can be multiply instantiated on one ECU. In this case the attribute will result in an appropriate component API on programming language level (with or without instance handle).



Attribute	Datatype	Mul.	Kind	Note
variationPo intProxy	VariationPointPr oxy	*	aggr	Proxy of a variation points in the C/C++ implementation.
				Stereotypes: atpSplitable
				Tags: atp.Splitkey=shortName

Table B.36: SwcInternalBehavior

Class	System					
Package	M2::AUTOSARTe	mplates	::Systen	nTemplate		
Note	The top level element of the System Description. The System description defines five major elements: Topology, Software, Communication, Mapping and Mapping Constraints. The System element directly aggregates the elements describing the Software, Mapping and Mapping Constraints; it contains a reference to an ASAM FIBEX description specifying Communication and Topology. Tags: atp.recommendedPackage=Systems					
Base	ARElement, ARObject, AtpClassifier, AtpFeature, AtpStructureElement, Collectable Element, Identifiable, MultilanguageReferrable, PackageableElement, Referrable					
Attribute	Datatype	Mul.	Kind	Note		
clientIdDefi nitionSet	ClientIdDefinitio nSet	*	ref	Set of Client Identifiers that are used for inter-ECU client-server communication in the System.		
containerI PduHeade rByteOrder	ByteOrderEnum	01	attr	Defines the byteOrder of the header in ContainerIPdus.		
ecuExtract Version	RevisionLabelSt ring	01	attr	Version number of the Ecu Extract.		
fibexEleme nt	FibexElement	*	ref	Reference to ASAM FIBEX elements specifying Communication and Topology. All Fibex Elements used within a System		
				Description shall be referenced from the System Element.		
				atpVariation: In order to describe a product-line, all FibexElements can be optional. Stereotypes: atpVariation		
				Tags: vh.latestBindingTime=postBuild		



Attribute	Datatype	Mul.	Kind	Note
mapping	SystemMapping	*	aggr	Aggregation of all mapping aspects (mapping of SW components to ECUs, mapping of data elements to signals, and mapping constraints).
				In order to support OEM / Tier 1 interaction and shared development for one common System this aggregation is atpSplitable and atpVariation. The content of SystemMapping can be provided by several parties using different names for the SystemMapping.
				This element is not required when the System description is used for a network-only use-case.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=postBuild
pncVector Length	PositiveInteger	01	attr	Length of the partial networking request release information vector (in bytes).
pncVector Offset	PositiveInteger	01	attr	Absolute offset (with respect to the NM-PDU) of the partial networking request release information vector that is defined in bytes as an index starting with 0.
rootSoftwa reComposi tion	RootSwCompos itionPrototype	01	aggr	Aggregation of the root software composition, containing all software components in the System in a hierarchical structure. This element is not required when the System description is used for a network-only use-case.
				atpVariation: The RootSwCompositionPrototype can vary.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=systemDesignTime
systemDoc umentation	Chapter	*	aggr	Possibility to provide additional documentation while defining the System. The System documentation can be composed of several chapters.
				Stereotypes: atpSplitable; atpVariation Tags: atp.Splitkey=shortName, variation Point.shortLabel vh.latestBindingTime=systemDesignTime xml.sequenceOffset=-10
systemVer sion	RevisionLabelSt ring	1	attr	Version number of the System Description.

Table B.37: System



Class	TDEventBsw (abstract)					
Package	M2::AUTOSARTemplates::CommonStructure::Timing::TimingDescription::Timing DescriptionEvents::TDEventBsw					
Note	This is used to describe timing events related to BSW modules.					
Base	ARObject,Identifiable,MultilanguageReferrable,Referrable,TimingDescription,TimingDescriptionEvent					
Attribute	Datatype Mul. Kind Note					
bswModul eDescriptio	BswModuleDes cription	1	ref	The scope of this timing event.		

Table B.38: TDEventBsw

Class	TimingEvent			
Package	M2::AUTOSARTemplates::SWComponentTemplate::SwcInternalBehavior::RTE Events			
Note	TimingEvent references the RunnableEntity that need to be started in response to the TimingEvent			
Base	ARObject, Abstract Event, Atp Classifier, Atp Feature, Atp Structure Element, Identifiable, Multilanguage Referrable, RTEEvent, Referrable			
Attribute	Datatype Mul. Kind Note			
period	TimeValue	1	attr	Period of timing event in seconds. The value of this attribute shall be greater than zero.

Table B.39: TimingEvent

Class	Traceable (abstra	act)		
Package		•		cStructure::GeneralTemplateClasses:: RequirementsTracing
Note	model.			ility to be subject to tracing within an AUTOSAR
	Note that it is expected that its subclasses inherit either from MultilanguageReferrable or from Identifiable. Nevertheless it also inherits from MultilanguageReferrable in order to provide a common reference target for all Traceables.			
Base	ARObject, Multilan	guageF	Referrabl	e,Referrable
Attribute	Datatype	Mul.	Kind	Note
trace	Traceable	*	ref	This assocation represents the ability to trace to upstream requirements / constraints. This supports for example the bottom up tracing ProjectObjectives <- MainRequirements <- Features <- RequirementSpecs <- BSW/AI
				Tags: xml.sequenceOffset=20

Table B.40: Traceable



Class	VariableAccess				
Package	M2::AUTOSARTe Elements	mplates	::SWCo	mponentTemplate::SwcInternalBehavior::Data	
Note	The presence of a VariableAccess implies that a RunnableEntity needs access to a VariableDataPrototype. The kind of access is specified by the role in which the class is used.				
Base	ARObject,AtpClassifier,AtpFeature,AtpStructureElement,Identifiable,Multilanguage Referrable,Referrable				
Attribute	Datatype	Mul.	Kind	Note	
accessedV ariable	AutosarVariable Ref	1 aggr This denotes the accessed variable.			
scope	VariableAccess ScopeEnum	01	attr	This attribute allows for constraining the scope of the corresponding communication. For example, it possible to express whether the communication is intended to cross the boundary of an ECU or whether it is intended not to cross the boundary of a single partition.	

Table B.41: VariableAccess

Class	VariableDataPrototype			
Package	M2::AUTOSARTe	mplates	::SWCo	mponentTemplate::Datatype::DataPrototypes
Note	A VariableDataPrototype is used to contain values in an ECU application. This means that most likely a VariableDataPrototype allocates "static" memory on the ECU. In some cases optimization strategies might lead to a situation where the memory allocation can be avoided. In particular, the value of a VariableDataPrototype is likely to change as the ECU on which it is used executes.			
Base	ARObject,AtpFeature,AtpPrototype,AutosarDataPrototype,Data Prototype,Identifiable,MultilanguageReferrable,Referrable			
Attribute	Datatype Mul. Kind Note			
initValue	ValueSpecificati on	01	aggr	Specifies initial value(s) of the VariableDataPrototype

Table B.42: VariableDataPrototype

C Splitable Elements in the Scope of this Document

This chapter contains a table of all model elements stereotyped \ll atpSplitable \gg in the scope of this document.

Each entry in Table C.1 consists of the identification of the specific model element itself and the applicable value of the tagged value atp.Splitkey.

For more information about the concept of splitable model elements and how these shall be treated please refer to [5].



Name of splitable element	Splitkey
TimingExtension.timingDescription	shortName, variationPoint.shortLabel
TimingExtension.timingGuarantee	shortName, variationPoint.shortLabel
TimingExtension.timingRequirement	shortName, variationPoint.shortLabel

Table C.1: Usage of splitable elements

D Variation Points in the Scope of this Document

This chapter contains a table of all model elements stereotyped \ll atpVariation \gg in the scope of this document.

Each entry in Table D.1 consists of the identification of the model element itself and the applicable value of the tagged value vh.latestBindingTime.

For more information about the concept of variation points and how model elements that contain variation points shall be treated please refer to [5].

Variation Point	Latest Binding Time
TimingExtension.timingDescription	postBuild
TimingExtension.timingGuarantee	postBuild
TimingExtension.timingRequirement	postBuild

Table D.1: Usage of variation points