

<b>Document Title</b>	Supplementary material of general blueprints for AUTOSAR
<b>Document Owner</b>	AUTOSAR
<b>Document Responsibility</b>	AUTOSAR
<b>Document Identification No</b>	682

<b>Document Status</b>	published
<b>Part of AUTOSAR Standard</b>	Classic Platform
<b>Part of Standard Release</b>	R20-11

<b>Document Change History</b>			
<b>Date</b>	<b>Release</b>	<b>Changed by</b>	<b>Description</b>
2020-11-30	R20-11	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>No content changes</li> </ul>
2019-11-28	R19-11	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>Update Multi dimensional ValueBlock</li> <li>Changed Document Status from Final to published</li> </ul>
2018-10-31	4.4.0	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>Multi dimensional ValueBlock</li> <li>Include Physical Dimensions and Units</li> </ul>
2017-12-08	4.3.1	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>Extend description of FIX_AXIS</li> <li>Include Mentioned Class Tables</li> </ul>
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>Extended Blueprint artifacts</li> <li>Composition of Blueprint artifacts</li> <li>Include Test Case Blueprint artifacts</li> </ul>
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>Initial Release</li> </ul>



Supplementary material of general blueprints for  
AUTOSAR  
AUTOSAR CP R20-11

**Disclaimer**

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

## Table of Contents

1	Introduction	7
2	Overview General Blueprints	8
2.1	AUTOSAR_MOD_BSWServiceInterfaces_Blueprint . . . . .	8
2.2	AUTOSAR_MOD_BswModuleEntrys_Blueprint . . . . .	9
2.3	AUTOSAR_MOD_BswServiceInterfaceMappings_Blueprint . . . . .	9
2.4	AUTOSAR_MOD_BswServiceDataTypes_Blueprint . . . . .	9
2.5	AUTOSAR_MOD_CommonDataTypes_Blueprint . . . . .	9
2.6	AUTOSAR_MOD_BswDataTypes_Blueprint . . . . .	9
2.7	AUTOSAR_MOD_IFL_RecordLayouts_Blueprint . . . . .	9
2.8	AUTOSAR_MOD_IFX_RecordLayouts_Blueprint . . . . .	9
2.9	AUTOSAR_MOD_Cube_RecordLayouts_Blueprint . . . . .	10
2.10	AUTOSAR_MOD_ValBlk_SwRecordLayouts_Blueprint . . . . .	10
2.11	AUTOSAR_MOD_MemoryMapping_SwAddrMethods_Blueprint . . . . .	10
2.12	AUTOSAR_MOD_SWCServiceRelatedInterfaces_Blueprint . . . . .	10
2.13	AUTOSAR_MOD_PhysicalDimensions_Blueprint . . . . .	10
2.14	AUTOSAR_MOD_Units_Blueprint . . . . .	10
2.15	AUTOSAR_TR_PredefinedNames_Blueprint . . . . .	10
2.16	AUTOSAR_TP_FormulaLanguage_TestCases_Blueprint . . . . .	11
2.17	Composition of Blueprints . . . . .	11
3	Visualization of SwRecordLayouts	13
3.1	Record Layout: Distr . . . . .	13
3.2	Curves . . . . .	15
3.2.1	Record Layout: Cur . . . . .	15
3.2.2	Record Layout: IntCur . . . . .	17
3.2.3	Record Layout: FixIntCur . . . . .	19
3.3	Maps . . . . .	20
3.3.1	Definition of Indexing . . . . .	20
3.3.2	Transform Logical View in Memory Representation . . . . .	22
3.3.3	Record Layout: Map . . . . .	24
3.3.4	Record Layout: IntMap . . . . .	26
3.3.5	Record Layout: IntMap 3 x 4 . . . . .	31
3.3.6	Record Layout: FixIntMap . . . . .	33
3.4	Multidimensional Arrays . . . . .	36
3.4.1	Definition of Indexing . . . . .	36
3.4.2	Record Layout: Cuboid . . . . .	37
3.4.3	Record Layout: Cube_4 and Cube_5 . . . . .	41
3.5	Value and ValueBlock . . . . .	47
3.5.1	Record Layout: Value . . . . .	47
3.5.2	Record Layout: One dimensional ValueBlock . . . . .	48
3.5.3	Record Layout: Multi dimensional ValueBlock . . . . .	49
4	Additional SwRecordLayouts	51

5	Units and Physical Dimensions	52
A	Mentioned Class Tables	53

## References

- [1] Standardization Template  
AUTOSAR\_TPS\_StandardizationTemplate
- [2] Basic Software Module Description Template  
AUTOSAR\_TPS\_BSWModuleDescriptionTemplate
- [3] Specification of Floating Point Interpolation Routines  
AUTOSAR\_SWS\_IFLLibrary
- [4] Specification of Fixed Point Interpolation Routines  
AUTOSAR\_SWS\_IFXLibrary
- [5] Specification of Memory Mapping  
AUTOSAR\_SWS\_MemoryMapping
- [6] Specification of NVRAM Manager  
AUTOSAR\_SWS\_NVRAMManager
- [7] Software Component Template  
AUTOSAR\_TPS\_SoftwareComponentTemplate
- [8] XML Specification of Application Interfaces  
AUTOSAR\_MOD\_AISpecification
- [9] Predefined Names in AUTOSAR  
AUTOSAR\_TR\_PredefinedNames
- [10] SW-C and System Modeling Guide  
AUTOSAR\_TR\_SWCModelingGuide

# 1 Introduction

This technical report provides additional information to existing blueprints.

## 2 Overview General Blueprints

The General Blueprints are provided in auxiliary package AUTOSAR\_MOD\_GeneralBlueprints. Currently it contains

- AUTOSAR\_MOD\_BSWServiceInterfaces\_Blueprint
- AUTOSAR\_MOD\_BswModuleEntrys\_Blueprint
- AUTOSAR\_MOD\_BswServiceInterfaceMappings\_Blueprint
- AUTOSAR\_MOD\_BswServiceDataTypes\_Blueprint
- AUTOSAR\_MOD\_CommonDataTypes\_Blueprint
- AUTOSAR\_MOD\_BswDataTypes\_Blueprint
- AUTOSAR\_MOD\_IFL\_RecordLayouts\_Blueprint
- AUTOSAR\_MOD\_IFX\_RecordLayouts\_Blueprint
- AUTOSAR\_MOD\_Cube\_SwRecordLayouts\_Blueprint
- AUTOSAR\_MOD\_ValBlk\_SwRecordLayouts\_Blueprint
- AUTOSAR\_MOD\_MemoryMapping\_SwAddrMethods\_Blueprint
- AUTOSAR\_MOD\_SWCServiceRelatedInterfaces\_Blueprint
- AUTOSAR\_MOD\_PhysicalDimensions\_Blueprint
- AUTOSAR\_MOD\_Units\_Blueprint
- AUTOSAR\_TR\_PredefinedNames\_Blueprint
- AUTOSAR\_TP\_FormulaLanguage\_TestCases\_Blueprint.

### 2.1 AUTOSAR\_MOD\_BSWServiceInterfaces\_Blueprint

The AUTOSAR\_MOD\_BSWServiceInterfaces\_Blueprint provides for a variety of BSW modules blueprinted specification of their Standardized AUTOSAR Interfaces which consists of [ClientServerInterfaces](#), [ModeDeclarationGroups](#), [ModeSwitchInterfaces](#), [SenderReceiverInterfaces](#) and [ServiceSwComponentTypes](#). Inside these blueprints also the [BlueprintPolicy](#) is used. A detailed description of the [BlueprintPolicy](#) is given in [1]. The ARXML file is generated based on the BSW UML Model.



## 2.2 AUTOSAR\_MOD\_BswModuleEntrys\_Blueprint

The AUTOSAR\_MOD\_BswModuleEntrys\_Blueprint provides blueprints of the [BswModuleDescriptions](#) and [BswModuleEntrys](#) based on [2].

## 2.3 AUTOSAR\_MOD\_BswServiceInterfaceMappings\_Blueprint

The AUTOSAR\_MOD\_BswServiceInterfaceMappings\_Blueprint provides blueprints of the mapping per client-server-interface [ClientServerInterfaceToBswModuleEntryBlueprintMappings](#) based on [1].

## 2.4 AUTOSAR\_MOD\_BswServiceDataTypes\_Blueprint

The AUTOSAR\_MOD\_BswServiceDataTypes\_Blueprint provides blueprints of the [DataConstrs](#), [CompuMethods](#) and [ImplementationDataTypes](#) for Services based on [1].

## 2.5 AUTOSAR\_MOD\_CommonDataTypes\_Blueprint

The AUTOSAR\_MOD\_CommonDataTypes\_Blueprint provides blueprints of the [BaseTypes](#), [CompuMethods](#) and [ImplementationDataTypes](#) for Platform, Standard and General Definitions based on [1].

## 2.6 AUTOSAR\_MOD\_BswDataTypes\_Blueprint

The AUTOSAR\_MOD\_BswDataTypes\_Blueprint provides blueprints of the [DataConstrs](#), [CompuMethods](#) and [ImplementationDataTypes](#) for BSW based on [1].

## 2.7 AUTOSAR\_MOD\_IFL\_RecordLayouts\_Blueprint

The AUTOSAR\_MOD\_IFL\_RecordLayouts\_Blueprint provides blueprints of the [InterpolationRoutineMappingSets](#) and [SwRecordLayouts](#) based on [3].

## 2.8 AUTOSAR\_MOD\_IFX\_RecordLayouts\_Blueprint

The AUTOSAR\_MOD\_IFX\_RecordLayouts\_Blueprint provides blueprints of the [InterpolationRoutineMappingSets](#) and [SwRecordLayouts](#) based on [4].

## 2.9 AUTOSAR\_MOD\_Cube\_RecordLayouts\_Blueprint

The AUTOSAR\_MOD\_Cube\_RecordLayouts\_Blueprint provides blueprints of [SwRecordLayouts](#) for cuboids.

## 2.10 AUTOSAR\_MOD\_ValBlk\_SwRecordLayouts\_Blueprint

The AUTOSAR\_MOD\_ValBlk\_SwRecordLayouts\_Blueprint provides blueprints of [SwRecordLayouts](#) for Value and Valueblocks.

## 2.11 AUTOSAR\_MOD\_MemoryMapping\_SwAddrMethods\_Blueprint

The AUTOSAR\_MOD\_MemoryMapping\_SwAddrMethods\_Blueprint provides blueprints of the [SwAddrMethods](#) based on [5].

## 2.12 AUTOSAR\_MOD\_SWCServiceRelatedInterfaces\_Blueprint

The AUTOSAR\_MOD\_SWCServiceRelatedInterfaces\_Blueprint provides blueprints of the [ClientServerInterfaces](#) derived from the Standardized AUTOSAR Interfaces of the NVRAM Manager [6]. Those [ClientServerInterfaces](#) are used for [NvBlockSwComponentTypes](#) as described in [7].

## 2.13 AUTOSAR\_MOD\_PhysicalDimensions\_Blueprint

The AUTOSAR\_MOD\_PhysicalDimensions\_Blueprint provides a collection of blueprints of Standardized AUTOSAR Physical Dimensions definitions which are used for Unit definitions as, e.g. in AUTOSAR\_MOD\_Units\_Blueprint.

## 2.14 AUTOSAR\_MOD\_Units\_Blueprint

The AUTOSAR\_MOD\_Units\_Blueprint provides a collection of blueprints of Standardized AUTOSAR Units definitions which are used, e.g. for interface definitions as described in [8].

## 2.15 AUTOSAR\_TR\_PredefinedNames\_Blueprint

The AUTOSAR\_TR\_PredefinedNames\_Blueprint provides various predefined names used in AUTOSAR models and documents [9]. They are available as blueprints based

on AUTOSAR XML model. In this model, the predefined names are represented as [Keywords](#) according to [1].

## 2.16 AUTOSAR\_TP\_FormulaLanguage\_TestCases\_Blueprint


The AUTOSAR\_TP\_FormulaLanguage\_TestCases\_Blueprint provides various predefined test cases to validate the formula language expressions.

## 2.17 Composition of Blueprints

The blueprints are composed by different elements which can be applied use case specific. Table 2.1 provides an overview of the elements described by blueprints.

	BswModuleDescription	BswModuleEntry	ClientServerInterface	ClientServerInterfaceToBswModuleEntryBlueprintMapping	CompuMethod	DataConstr	ImplementationDataType	ModeDeclarationGroup	ModeSwitchInterface	SenderReceiverInterface	ServiceswComponentType
AUTOSAR_MOD_BswServiceInterfaces_Blueprint			x					x	x	x	x
AUTOSAR_MOD_BswModuleEntrys_Blueprint	x	x									
AUTOSAR_MOD_BswServiceInterfaceMappings_Blueprint				x							
AUTOSAR_MOD_SWCServiceRelatedInterfaces_Blueprint			x								
AUTOSAR_MOD_BswServiceDataTypes_Blueprint					x	x	x				
AUTOSAR_MOD_CommonDataTypes_Blueprint					x	x	x				
AUTOSAR_MOD_BswDataTypes_Blueprint					x	x	x				


**Table 2.1: Overview Blueprint Elements**

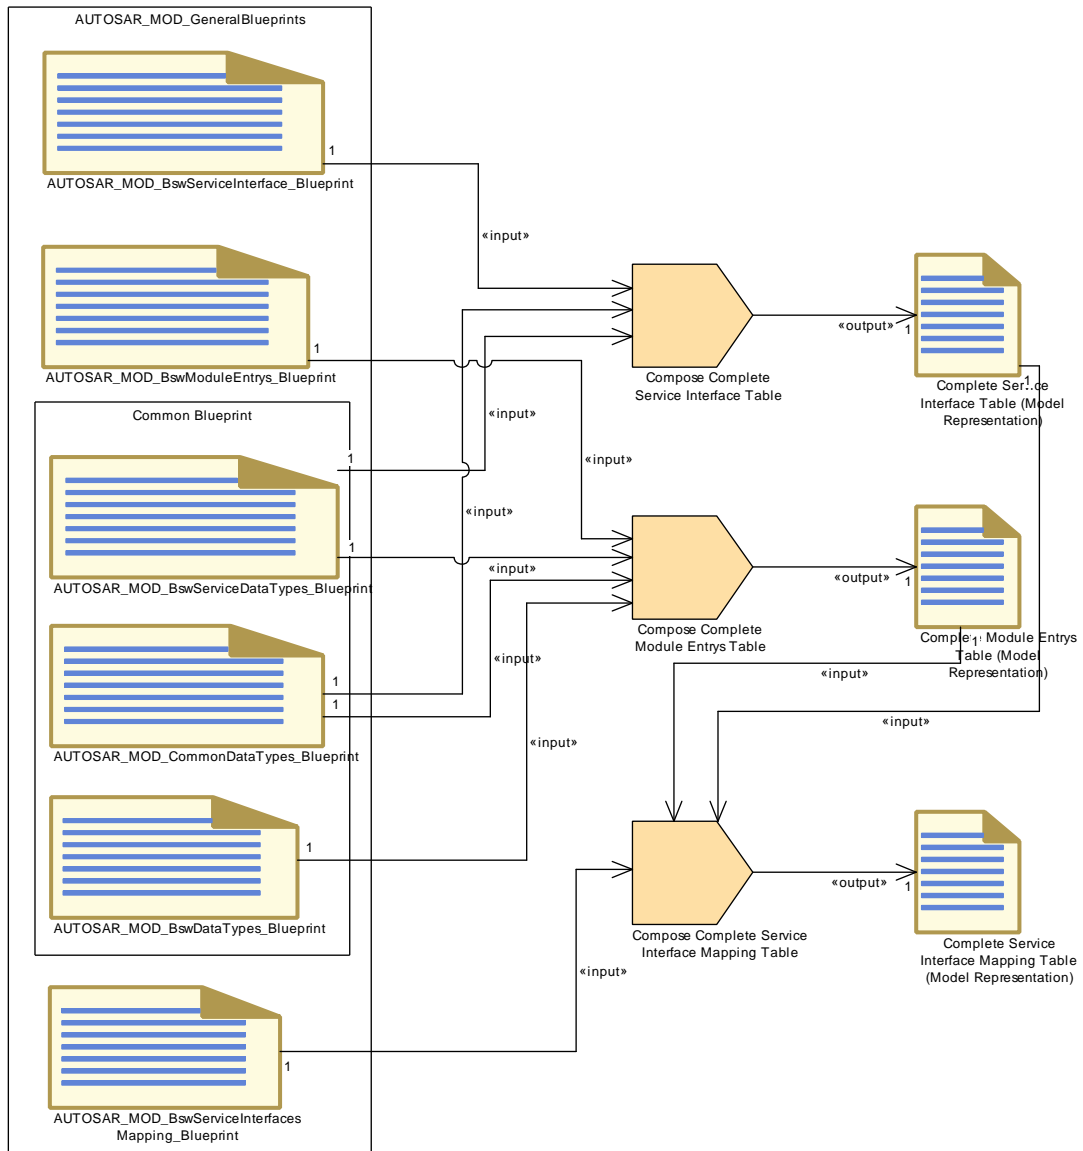

**Figure 2.1: Composition of different tables based on blueprints**

### 3 Visualization of SwRecordLayouts

The visualization of the [SwRecordLayout](#)s follows a unique representation. The used graphical elements are illustrated in figure 3.1.

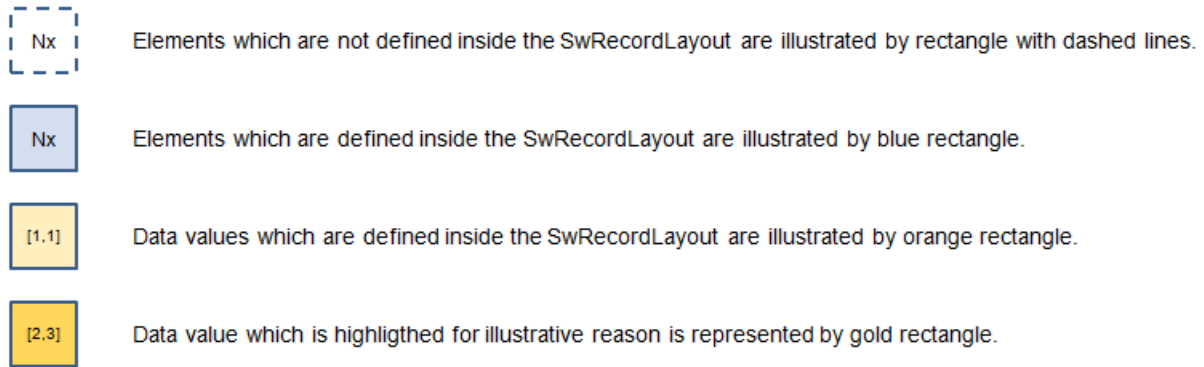

**Figure 3.1: Legend of used graphical elements**

The logical view represents the definitive elements as number of sampling points, axis elements and data values. The data values are arranged according to the applicable dimension. Curves are visualized one dimensional (e.g. one column, see figure 3.7). Maps are visualized in a two dimensional matrix, see figure 3.19).

The memory representation illustrates the storage of values in linear memory. In case the [SwRecordLayout](#) defines also the elements as number of sampling points and axis elements (blue rectangle) the memory representation starts with these. Subsequently the storage of data values follows (orange rectangle). In case the [SwRecordLayout](#) does not define the elements as number of sampling points and axis elements the memory representation starts with the storage of data values.

The ARXML representation lists the significant part of the ARXML file describing the [SwRecordLayout](#).

#### 3.1 Record Layout: Distr

This chapter describes the record layout for distributed data point search. This means that this [SwRecordLayout](#) describes only the number of sampling points and the axis values. It does not describe any values. In this case several curves can use the same axis (distributed data points), see figure 3.3.

Logical view:

The figure 3.2 illustrates the logical view of the [SwRecordLayout](#) Distr. Nx represents the standardized value of [SwRecordLayoutV.swRecordLayoutVProp](#) and is documented in [TPS\_SWCT\_01489]. In the scope of this example the value COUNT is used.



**Figure 3.2: Distr Logical View**

Memory representation:

Due to the fact that the number of sampling points and the axis values (content of this record layout definition) are not stored in memory without any curve definition no memory representation is defined.


ARXML representation:

Extract of the record layout Distr\_s16 from AUTOSAR\_MOD\_IFX\_RecordLayouts\_Blueprint.arxml.

**Listing 3.1: Record Layout: Distr\_s16 in ARXML representation**


```
<ELEMENTS>
<!-- SW-RECORD-LAYOUT: Distr_s16 -->
<SW-RECORD-LAYOUT>
  <SHORT-NAME NAME-PATTERN="{blueprintName}">Distr_s16</SHORT-NAME>
  <SW-RECORD-LAYOUT-GROUP>
    <SW-RECORD-LAYOUT-V>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">N</SHORT-LABEL>
      <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
        BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
      <SW-RECORD-LAYOUT-V-AXIS>1</SW-RECORD-LAYOUT-V-AXIS>
      <SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
    </SW-RECORD-LAYOUT-V>
    <SW-RECORD-LAYOUT-GROUP>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">X</SHORT-LABEL>
      <CATEGORY>INDEX_INCR</CATEGORY>
      <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
      <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
      <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
      <SW-RECORD-LAYOUT-V>
        <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
          BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
        <SW-RECORD-LAYOUT-V-AXIS>1</SW-RECORD-LAYOUT-V-AXIS>
        <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
      </SW-RECORD-LAYOUT-V>
    </SW-RECORD-LAYOUT-GROUP>
  </SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT>
```

Different curves can be assigned to one distribution.

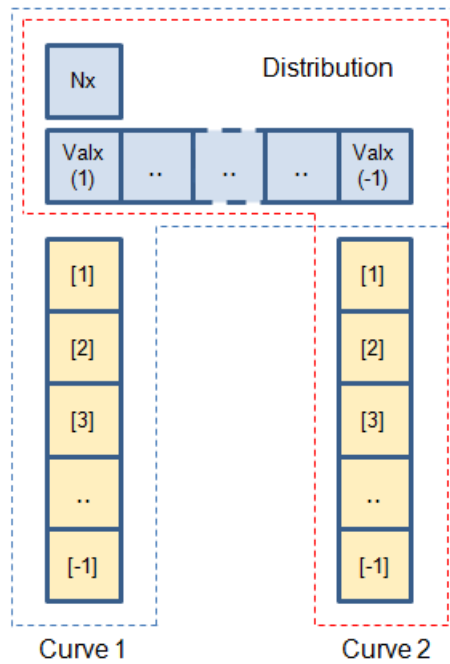

**Figure 3.3: Curves assigned to Distribution Logical View**

Both curves use the same distribution (AXIS 1), e.g. illustrated by the purple-dotted lines (x value 25) with different values (AXIS 0), curve values (y values 65 and 15).

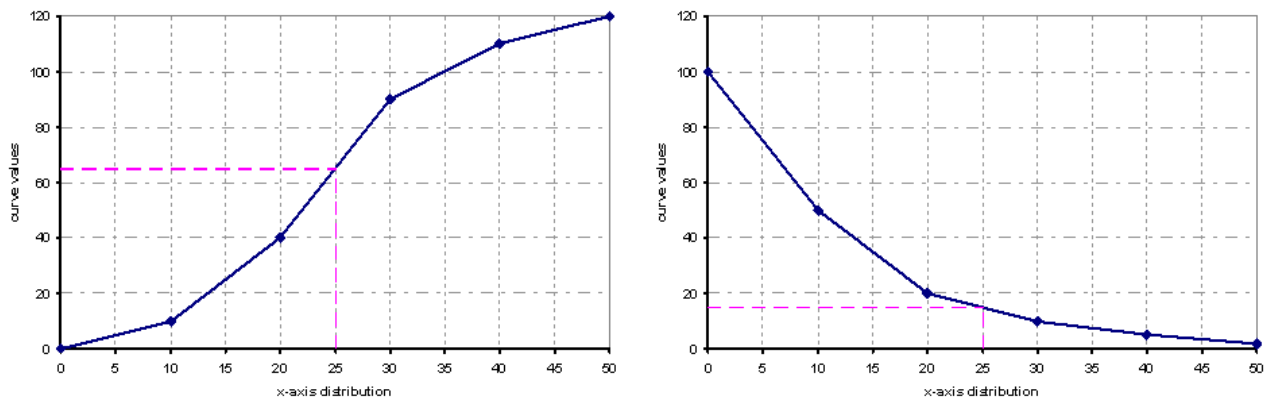

**Figure 3.4: Curves assigned to same Distribution**


## 3.2 Curves

### 3.2.1 Record Layout: Cur

This chapter describes the record layout for a curve.

Logical view:


The figure 3.5 illustrates the logical view of the `SwRecordLayout` Cur. The number of sampling points (Nx) and the elements of [AXIS 1] are not defined inside this `SwRecordLayout`. The `SwRecordLayoutGroup` with the `shortLabel` Val is shown in the lower part.

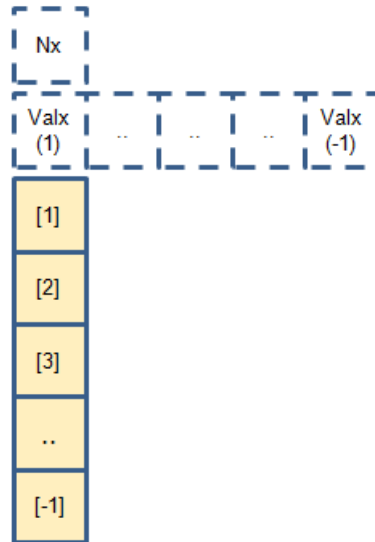

**Figure 3.5: Cur Logical View**

Memory representation:

The `SwRecordLayout` Cur illustrated in figure 3.5 is stored as follows:



**Figure 3.6: Cur Memory Representation**

This means that the data is stored in direction of columns ([1],[2],[3], ...).

ARXML representation:

Extract of the record layout Cur\_s16 from AUTOSAR\_MOD\_IFX\_RecordLayouts\_Blueprint.arxml.

**Listing 3.2: Record Layout: Cur\_s16 in ARXML representation**

```

</SW-RECORD-LAYOUT>
<!-- SW-RECORD-LAYOUT: Cur_s16 -->
<SW-RECORD-LAYOUT>
  <SHORT-NAME NAME-PATTERN="{blueprintName}">Cur_s16</SHORT-NAME>
  <SW-RECORD-LAYOUT-GROUP>
    <SHORT-LABEL NAME-PATTERN="{blueprintName}">Val</SHORT-LABEL>
    <CATEGORY>COLUMN_DIR</CATEGORY>
    <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
    <SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
    <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
    <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  </SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT>

```



```

<SW-RECORD-LAYOUT-V>
  <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
    BaseType_Blueprint/sint16</BASE-TYPE-REF>
  <SW-RECORD-LAYOUT-V-AXIS>0</SW-RECORD-LAYOUT-V-AXIS>
  <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
  <SW-RECORD-LAYOUT-V-INDEX>X</SW-RECORD-LAYOUT-V-INDEX>
</SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>
  
```

### 3.2.2 Record Layout: IntCur

This chapter describes the record layout for a curve with integrated data point search. This means that this `SwRecordLayout` represents a complete curve with number of sampling points, number of axis and values. It describes all elements of the curve.

Logical view:

The figure 3.7 illustrates the logical view of the `SwRecordLayout` IntCur. `Nx` represents the number of sampling points and is given by the standardized value of `SwRecordLayoutV.swRecordLayoutVProp`. In the scope of this example the value `COUNT` is used. The `SwRecordLayoutGroup` with the `shortLabel` Val is shown in the lower part. Its elements are indexed by `[AXIS 1]` from value (AXIS 1: = 1) to value (AXIS 1: = -1) there -1 gives the last value.


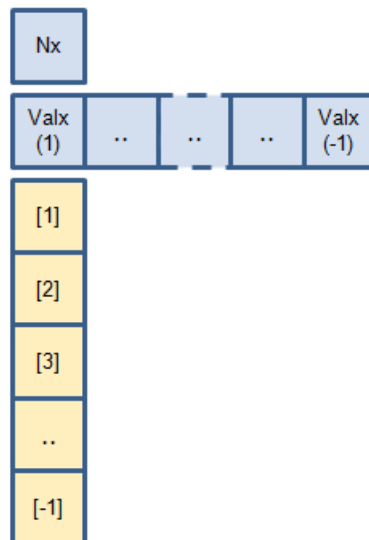


Figure 3.7: IntCur Logical View

Memory representation:

The `SwRecordLayout` IntCur illustrated in figure 3.7 is stored as follows:



**Figure 3.8: IntCur Memory Representation**

This means that the data is stored in direction of columns ([1],[2],[3], ...).

ARXML representation:

Extract of the record layout IntCur\_s16\_s8 from AUTOSAR\_MOD\_IFX\_RecordLayouts\_Blueprint.arxml.

**Listing 3.3: Record Layout: IntCur\_s16\_s8 in ARXML representation**

```

</SW-RECORD-LAYOUT>
<!-- SW-RECORD-LAYOUT: IntCur_s16_s8 -->
<SW-RECORD-LAYOUT>
  <SHORT-NAME NAME-PATTERN="{blueprintName}">IntCur_s16_s8</SHORT-NAME>
  <SW-RECORD-LAYOUT-GROUP>
    <SW-RECORD-LAYOUT-V>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">N</SHORT-LABEL>
      <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
        BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
      <SW-RECORD-LAYOUT-V-AXIS>1</SW-RECORD-LAYOUT-V-AXIS>
      <SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
    </SW-RECORD-LAYOUT-V>
    <SW-RECORD-LAYOUT-GROUP>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">X</SHORT-LABEL>
      <CATEGORY>INDEX_INCR</CATEGORY>
      <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
      <SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
      <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
      <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
      <SW-RECORD-LAYOUT-V>
        <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
          BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
        <SW-RECORD-LAYOUT-V-AXIS>1</SW-RECORD-LAYOUT-V-AXIS>
        <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
      </SW-RECORD-LAYOUT-V>
    </SW-RECORD-LAYOUT-GROUP>
    <SW-RECORD-LAYOUT-GROUP>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">Val</SHORT-LABEL>
      <CATEGORY>COLUMN_DIR</CATEGORY>
      <SW-RECORD-LAYOUT-GROUP-AXIS>0</SW-RECORD-LAYOUT-GROUP-AXIS>
      <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
      <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
      <SW-RECORD-LAYOUT-V>
        <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
          BaseTypes_Blueprint/sint8</BASE-TYPE-REF>
        <SW-RECORD-LAYOUT-V-AXIS>0</SW-RECORD-LAYOUT-V-AXIS>
        <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
        <SW-RECORD-LAYOUT-V-INDEX>X</SW-RECORD-LAYOUT-V-INDEX>
      </SW-RECORD-LAYOUT-V>
    </SW-RECORD-LAYOUT-GROUP>
  </SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT>


```

</SW-RECORD-LAYOUT-GROUP>

### 3.2.3 Record Layout: FixIntCur

This chapter describes the record layout for a curve with fixed axis points. Fixed axis exist in three categories: FIX\_AXIS\_PAR, FIX\_AXIS\_PAR\_DIST and FIX\_AXIS\_PAR\_LIST, see [TPS\_SWCT\_01748] in [7].

The number of sampling points (Nx), the Offset, the shift and the distance values are represented in the following chapters by these logical views:

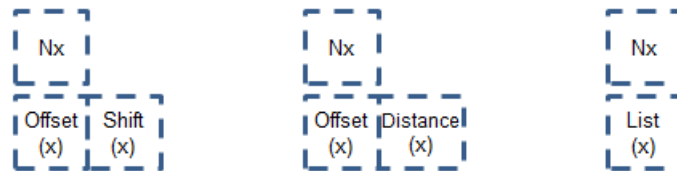


**Figure 3.9: FIX\_AXIS\_PAR (left), FIX\_AXIS\_PAR\_DIST (middle), FIX\_AXIS\_PAR\_LIST (right)**

These values are not defined inside `SwRecordLayouts` with fixed axis points.

Logical view:


The figure 3.10 illustrates the logical view of the `SwRecordLayout` FixIntCur. The `SwRecordLayoutGroup` with the `shortLabel` Val is shown in the lower part. Its elements are indexed by virtual [AXIS 1] which is fixed and of category FIX\_AXIS\_PAR and not defined inside this `SwRecordLayout`.

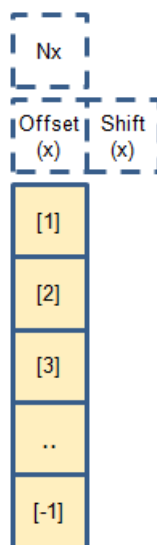

**Figure 3.10: FixIntCur Logical View**

Memory representation:

The `SwRecordLayout` `FixIntCur` illustrated in figure 3.10 is stored as follows:



**Figure 3.11: FixIntCur Memory Representation**

This means that the data is stored in direction of columns ([1],[2],[3], ...).

ARXML representation:

Extract of the record layout `FixIntCur_s16_s16` from `AUTOSAR_MOD_IFX_RecordLayouts_Blueprint.arxml`.


**Listing 3.4: Record Layout: FixIntCur\_s16\_s16 in ARXML representation**

```
</SW-RECORD-LAYOUT>
<!-- SW-RECORD-LAYOUT: FixIntCur_s16_s16 -->
<SW-RECORD-LAYOUT>
  <SHORT-NAME NAME-PATTERN="{blueprintName}">FixIntCur_s16_s16</SHORT-NAME>
  <SW-RECORD-LAYOUT-GROUP>
    <SHORT-LABEL NAME-PATTERN="{blueprintName}">Val</SHORT-LABEL>
    <CATEGORY>COLUMN_DIR</CATEGORY>
    <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
    <SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
    <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
    <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
    <SW-RECORD-LAYOUT-V>
      <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
        BaseTypeBlueprint/sint16</BASE-TYPE-REF>
      <SW-RECORD-LAYOUT-V-AXIS>0</SW-RECORD-LAYOUT-V-AXIS>
      <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
      <SW-RECORD-LAYOUT-V-INDEX>X</SW-RECORD-LAYOUT-V-INDEX>
    </SW-RECORD-LAYOUT-V>
  </SW-RECORD-LAYOUT-GROUP>
```

## 3.3 Maps


### 3.3.1 Definition of Indexing

To understand the visualization of `SwRecordLayouts` it is important to set-up a common understanding of the used indexing. There is the indexing used by matrix definition in linear algebra and by cartesian coordinate systems. In linear algebra a matrix  $A(m,n)$  is defined by the row index ( $m$ ) and the column index ( $n$ ).

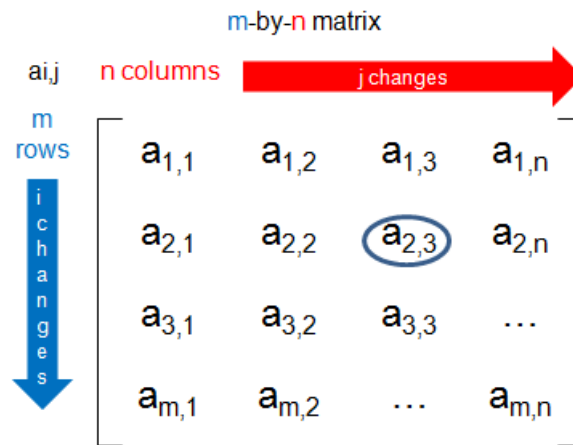

**Figure 3.12: Linear Algebra Matrix**

The cartesian coordinate system which is used by AUTOSAR and ASAM assigns AXIS 2 (AXIS\_PTS\_Y) to the row index (m) and AXIS 1 (AXIS\_PTS\_X) to the column index (n). This is the essential point in the transformation from indexing in matrix definition to the representation in cartesian coordinate system. The matrix element  $a(2,3)$  in figure 3.12 is represented in the cartesian coordinate system in figure 3.13 by (AXIS 1)  $x = 3$  and (AXIS 2)  $y = 2$ .

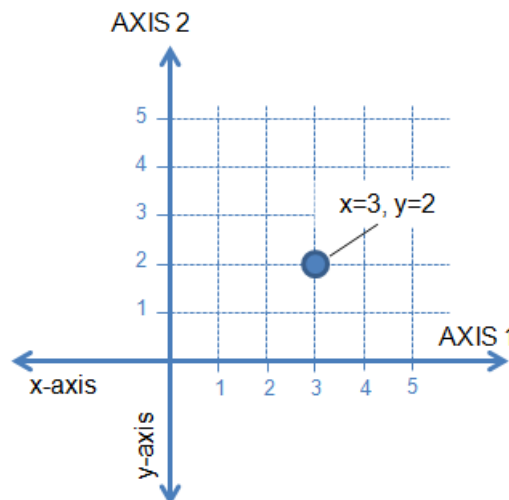


**Figure 3.13: Cartesian Coordinate System**

Based on this transformation definition the following visualization of [SwRecordLayouts](#) shall improve a better common understanding of the provided [SwRecordLayouts](#).

### 3.3.2 Transform Logical View in Memory Representation

The logical view is represented by m-by-n matrix (two dimensional matrix) as described in 3.3.1.

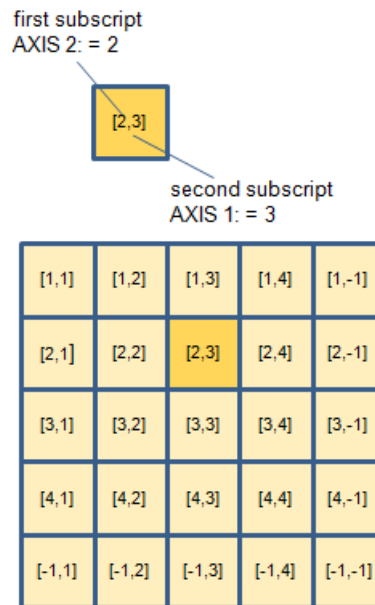


**Figure 3.14: Matrix Representation**

Each element of a matrix is denoted by an index with two subscripts [AXIS 2, AXIS 1]. For instance, [2,3] represents the element at the second row (AXIS 2) and third column (AXIS 1) of a matrix. The index of the matrix can be transformed to the memory representation in two different ways:

- storage of array values in column-major order in linear memory -> COLUMN\_DIR
- storage of array values in row-major order in linear memory -> ROW\_DIR

In column-major order<sup>1</sup>, a multidimensional array in linear memory is organized such that columns are stored one after the other. The first element of the first column [1,1] is selected and then inside this column all elements will iterate up to the last element [-1,1] (indicated by the red arrow in figure 3.15). The last element is defined in [SwRecord-Layout](#) by '-1'. Afterwards the first element of the second column [1,2] is selected and the iteration starts again as in the first column.

<sup>1</sup>The scientific programming language Fortran uses column-major ordering.

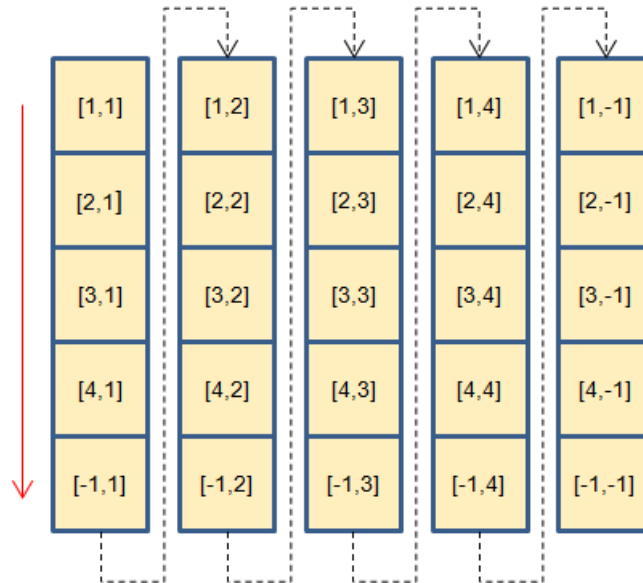


**Figure 3.15: Transformation Matrix in column-major order**

This listing illustrates two nested FOR-loops in case of column-major order whereas the outer loop iterates over AXIS 1 and the inner loop iterates over AXIS 2.

```
[
  (select row element; outer loop)
  iteration along row (AXIS 1 iterates, AXIS 2 is fixed !)
  start with first element (AXIS 1: = 1)
  [
    (select column element; inner loop)
    iteration along column (AXIS 2 iterates, AXIS 1 is fixed !)
    start with first element (AXIS 2: = 1)
    ...
    end with last element (AXIS 2: = -1)
  ]
  end with last element (AXIS 1: = -1)
]
```

In row-major order<sup>2</sup>, a multidimensional array in linear memory is organized such that rows are stored one after the other. The first element of the first row [1,1] is selected and then inside this row all elements will iterate up to the last element [1,-1] (indicated by the blue arrow in figure 3.16). Afterwards the first element of the second row [2,1] is selected and the iteration starts again as in the first row.

<sup>2</sup>The C programming language uses row-major ordering.

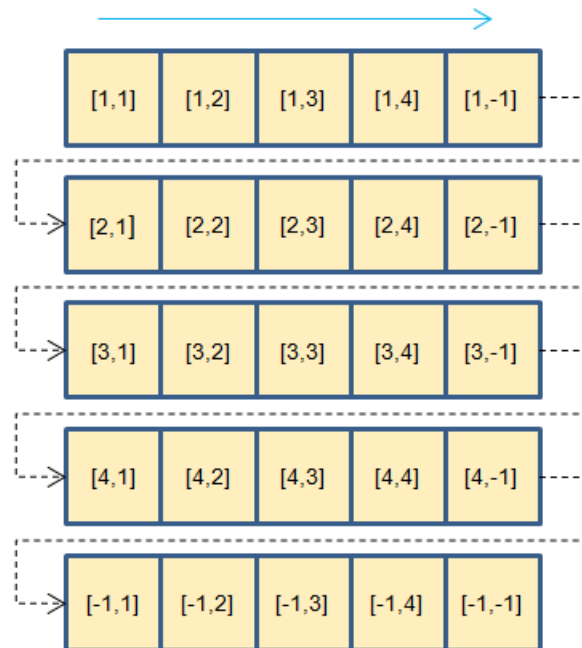

**Figure 3.16: Transformation Matrix in row-major order**

This listing illustrates two nested FOR-loops in case of row-major order whereas the outer loop iterates over AXIS 2 and the inner loop iterates over AXIS 1.

```
[
  (select column element; outer loop)
  iteration along column (AXIS 2 iterates, AXIS 1 is fixed !)
  start with first element (AXIS 2: = 1)
  [
    (select row element; inner loop)
    iteration along row (AXIS 1 iterates, AXIS 2 is fixed !)
    start with first element (AXIS 1: = 1)
    ...
    end with last element (AXIS 1: = -1)
  ]
  end with last element (AXIS 2: = -1)
]
```


### 3.3.3 Record Layout: Map

This chapter describes the record layout for a map.

Logical view:

The figure 3.17 illustrates the logical view of the `SwRecordLayout` Map. The number of sampling points ( $N_x$ ,  $N_y$ ) and the elements of [AXIS 2, AXIS 1] are not defined inside this `SwRecordLayout`. The `SwRecordLayoutGroup` with the `shortLabel` Val is shown in the lower part.



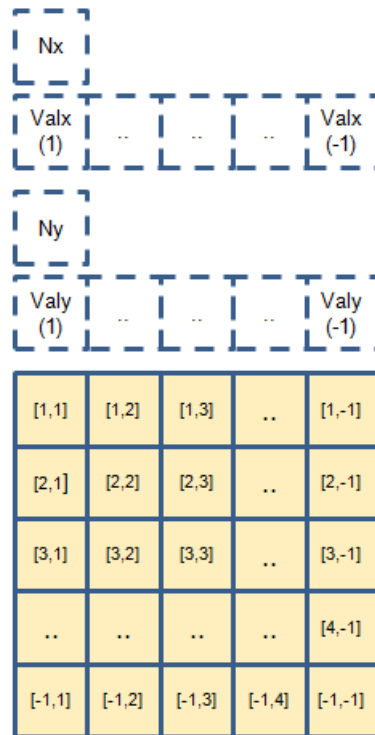


**Figure 3.17: Map Logical View**

The matrix element  $a(2,3)$  in figure 3.17 is represented by (AXIS 1)  $x = 3$  and (AXIS 2)  $y = 2$ .

Memory representation (COLUMN\_DIR):

The `SwRecordLayout` Map illustrated in figure 3.17 is stored in case of category COLUMN\_DIR as follows:

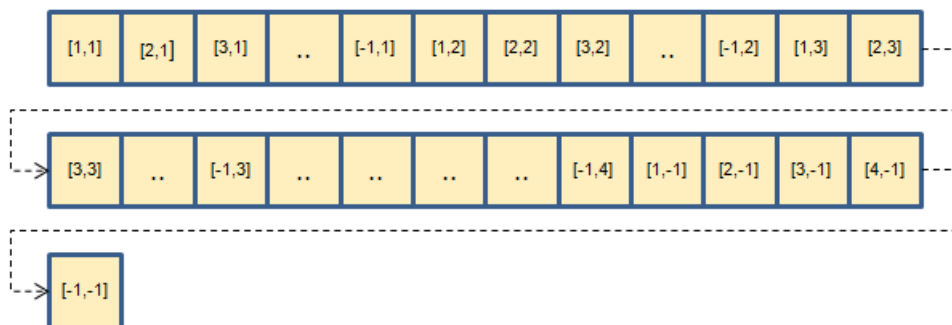

**Figure 3.18: Map Memory Representation**

This means that the data is stored first in direction of columns and then in direction of rows ( $[1,1],[2,1],[3,1], \dots$ ).

ARXML representation:

Extract of the record layout Map\_s16 from AUTOSAR\_MOD\_IFX\_RecordLayouts\_Blueprint.arxml.

### Listing 3.5: Record Layout: Map\_s16 in ARXML representation

```

</SW-RECORD-LAYOUT>
<!-- SW-RECORD-LAYOUT: Map_s16 -->
<SW-RECORD-LAYOUT>
  <SHORT-NAME NAME-PATTERN="{blueprintName}">Map_s16</SHORT-NAME>
  <SW-RECORD-LAYOUT-GROUP>
    <SW-RECORD-LAYOUT-GROUP>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">Val</SHORT-LABEL>
      <CATEGORY>COLUMN_DIR</CATEGORY>
      <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
      <SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
      <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
      <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
      <SW-RECORD-LAYOUT-GROUP>
        <SW-RECORD-LAYOUT-GROUP-AXIS>2</SW-RECORD-LAYOUT-GROUP-AXIS>
        <SW-RECORD-LAYOUT-GROUP-INDEX>Y</SW-RECORD-LAYOUT-GROUP-INDEX>
        <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
        <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
        <SW-RECORD-LAYOUT-V>
          <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
            BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
          <SW-RECORD-LAYOUT-V-AXIS>0</SW-RECORD-LAYOUT-V-AXIS>
          <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
          <SW-RECORD-LAYOUT-V-INDEX>X Y</SW-RECORD-LAYOUT-V-INDEX>
        </SW-RECORD-LAYOUT-V>
      </SW-RECORD-LAYOUT-GROUP>
    </SW-RECORD-LAYOUT-GROUP>
  </SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT>

```


### 3.3.4 Record Layout: IntMap

This chapter describes the record layout for a map with integrated data point search.

Logical view:

The figure 3.19 illustrates the logical view of the `SwRecordLayout` IntMap.  $N_x$  and  $N_y$  represent the number of sampling points given by the standardized values of `SwRecordLayoutV.swRecordLayoutVProp`. In the following example the dimensions of  $N_x$  and  $N_y$  are not fixed defined but given by a range indicated by index values. In the scope of this example the value `COUNT` is used. The `SwRecordLayoutGroup` with the `shortLabel` Val is shown in the lower part. Its elements are indexed by [AXIS 2, AXIS 1] from value (AXIS 2: = 1, AXIS

1: = 1) to value (AXIS 2: = -1, AXIS 1: = -1) there -1 gives the last value.

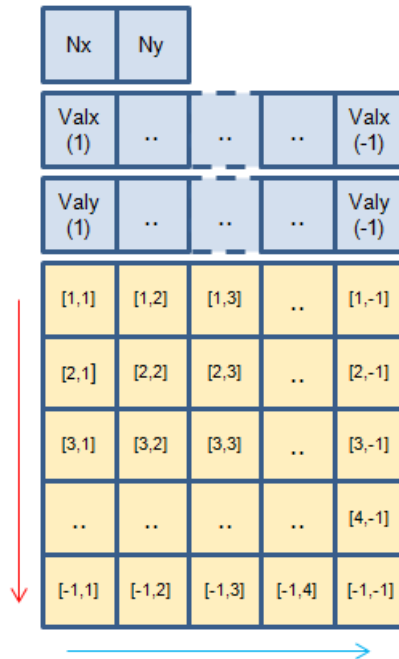


**Figure 3.19: IntMap Logical View**

The matrix element a(2,3) in figure 3.19 is represented by (AXIS 1) x = 3 and (AXIS 2) y = 2.

Memory representation (COLUMN\_DIR):

The `SwRecordLayout` IntMap illustrated in figure 3.19 is stored in case of category COLUMN\_DIR as follows:

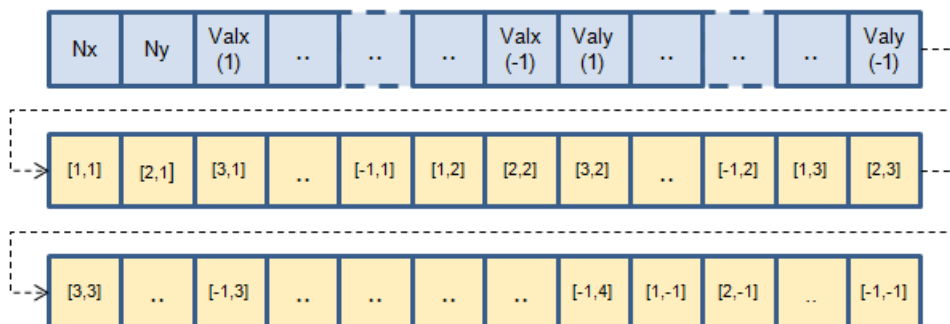

**Figure 3.20: IntMap Memory Representation (COLUMN\_DIR)**

This means that the data is stored first in direction of columns and then in direction of rows ([1,1],[2,1],[3,1], ...).

ARXML representation:

Extract of the record layout IntMap\_s16s16\_s16 from  
AUTOSAR\_MOD\_IFX\_RecordLayouts\_Blueprint.arxml.

### Listing 3.6: Record Layout: IntMap\_s16s16\_s16 in ARXML representation

```

</SW-RECORD-LAYOUT>
<!-- SW-RECORD-LAYOUT: IntMap_s16s16_s16 -->
<SW-RECORD-LAYOUT>
  <SHORT-NAME NAME-PATTERN="{blueprintName}">IntMap_s16s16_s16</SHORT-NAME>
  <SW-RECORD-LAYOUT-GROUP>
    <SW-RECORD-LAYOUT-V>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">Nx</SHORT-LABEL>
      <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
        BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
      <SW-RECORD-LAYOUT-V-AXIS>1</SW-RECORD-LAYOUT-V-AXIS>
      <SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
    </SW-RECORD-LAYOUT-V>
    <SW-RECORD-LAYOUT-V>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">Ny</SHORT-LABEL>
      <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
        BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
      <SW-RECORD-LAYOUT-V-AXIS>2</SW-RECORD-LAYOUT-V-AXIS>
      <SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
    </SW-RECORD-LAYOUT-V>
  <SW-RECORD-LAYOUT-GROUP>
    <SHORT-LABEL NAME-PATTERN="{blueprintName}">X</SHORT-LABEL>
    <CATEGORY>INDEX_INCR</CATEGORY>
    <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
    <SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
    <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
    <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
    <SW-RECORD-LAYOUT-V>
      <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
        BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
      <SW-RECORD-LAYOUT-V-AXIS>1</SW-RECORD-LAYOUT-V-AXIS>
      <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
    </SW-RECORD-LAYOUT-V>
  </SW-RECORD-LAYOUT-GROUP>
  <SW-RECORD-LAYOUT-GROUP>
    <SHORT-LABEL NAME-PATTERN="{blueprintName}">Y</SHORT-LABEL>
    <CATEGORY>INDEX_INCR</CATEGORY>
    <SW-RECORD-LAYOUT-GROUP-AXIS>2</SW-RECORD-LAYOUT-GROUP-AXIS>
    <SW-RECORD-LAYOUT-GROUP-INDEX>Y</SW-RECORD-LAYOUT-GROUP-INDEX>
    <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
    <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
    <SW-RECORD-LAYOUT-V>
      <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
        BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
      <SW-RECORD-LAYOUT-V-AXIS>2</SW-RECORD-LAYOUT-V-AXIS>
      <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
    </SW-RECORD-LAYOUT-V>
  </SW-RECORD-LAYOUT-GROUP>
  <SW-RECORD-LAYOUT-GROUP>
    <SHORT-LABEL NAME-PATTERN="{blueprintName}">Val</SHORT-LABEL>
    <CATEGORY>COLUMN_DIR</CATEGORY>
    <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>

```


```

<SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
<SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
<SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
<SW-RECORD-LAYOUT-GROUP>
  <SW-RECORD-LAYOUT-GROUP-AXIS>2</SW-RECORD-LAYOUT-GROUP-AXIS>
  <SW-RECORD-LAYOUT-GROUP-INDEX>Y</SW-RECORD-LAYOUT-GROUP-INDEX>
  <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
  <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-V>
    <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
      BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
    <SW-RECORD-LAYOUT-V-AXIS>0</SW-RECORD-LAYOUT-V-AXIS>
    <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
    <SW-RECORD-LAYOUT-V-INDEX>X Y</SW-RECORD-LAYOUT-V-INDEX>
  </SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT-GROUP>

```

Memory representation (ROW\_DIR):

The `SwRecordLayout` `IntMap` illustrated in figure 3.19 is stored in case of category `ROW_DIR` as follows:

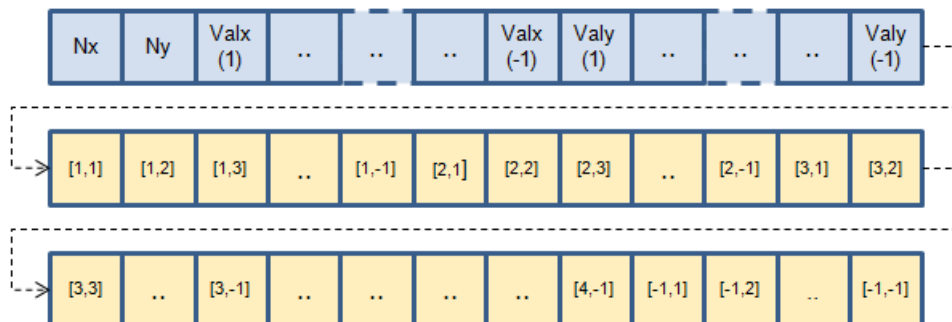

**Figure 3.21: IntMap Memory Representation (ROW\_DIR)**

This means that the data are stored first in direction of rows and then in direction of columns ([1,1],[1,2],[1,3], ...).

ARXML representation:

Extract of the record layout `IntMap_s8s16_s16` from `AUTOSAR_MOD_IFX_RecordLayouts_Blueprint.arxml`.

**Listing 3.7: Record Layout: IntMap\_s8s16\_s16 in ARXML representation**

```

</SW-RECORD-LAYOUT>
<!-- SW-RECORD-LAYOUT: IntMap_s8s16_s16 -->
<SW-RECORD-LAYOUT>
  <SHORT-NAME NAME-PATTERN="{blueprintName}">IntMap_s8s16_s16</SHORT-NAME>
  <SW-RECORD-LAYOUT-GROUP>
    <SW-RECORD-LAYOUT-V>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">Nx</SHORT-LABEL>

```

```

<BASE-TYPE-REF DEST="SW-BASE-TYPE"/>AUTOSAR/Platform/
  BaseTypes_Blueprint/sint8</BASE-TYPE-REF>
<SW-RECORD-LAYOUT-V-AXIS>1</SW-RECORD-LAYOUT-V-AXIS>
<SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
</SW-RECORD-LAYOUT-V>
<SW-RECORD-LAYOUT-V>
  <SHORT-LABEL NAME-PATTERN="{blueprintName}">Ny</SHORT-LABEL>
  <BASE-TYPE-REF DEST="SW-BASE-TYPE"/>AUTOSAR/Platform/
    BaseTypes_Blueprint/sint8</BASE-TYPE-REF>
  <SW-RECORD-LAYOUT-V-AXIS>2</SW-RECORD-LAYOUT-V-AXIS>
  <SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
</SW-RECORD-LAYOUT-V>
<SW-RECORD-LAYOUT-GROUP>
  <SHORT-LABEL NAME-PATTERN="{blueprintName}">X</SHORT-LABEL>
  <CATEGORY>INDEX_INCR</CATEGORY>
  <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
  <SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
  <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
  <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-V>
    <BASE-TYPE-REF DEST="SW-BASE-TYPE"/>AUTOSAR/Platform/
      BaseTypes_Blueprint/sint8</BASE-TYPE-REF>
    <SW-RECORD-LAYOUT-V-AXIS>1</SW-RECORD-LAYOUT-V-AXIS>
    <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
  </SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>
<SW-RECORD-LAYOUT-GROUP>
  <SHORT-LABEL NAME-PATTERN="{blueprintName}">Y</SHORT-LABEL>
  <CATEGORY>INDEX_INCR</CATEGORY>
  <SW-RECORD-LAYOUT-GROUP-AXIS>2</SW-RECORD-LAYOUT-GROUP-AXIS>
  <SW-RECORD-LAYOUT-GROUP-INDEX>Y</SW-RECORD-LAYOUT-GROUP-INDEX>
  <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
  <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-V>
    <BASE-TYPE-REF DEST="SW-BASE-TYPE"/>AUTOSAR/Platform/
      BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
    <SW-RECORD-LAYOUT-V-AXIS>2</SW-RECORD-LAYOUT-V-AXIS>
    <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
  </SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>
<SW-RECORD-LAYOUT-GROUP>
  <SHORT-LABEL NAME-PATTERN="{blueprintName}">Val</SHORT-LABEL>
  <CATEGORY>ROW_DIR</CATEGORY>
  <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
  <SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
  <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
  <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-GROUP>
    <SW-RECORD-LAYOUT-GROUP-AXIS>2</SW-RECORD-LAYOUT-GROUP-AXIS>
    <SW-RECORD-LAYOUT-GROUP-INDEX>Y</SW-RECORD-LAYOUT-GROUP-INDEX>
    <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
    <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-V>
    <BASE-TYPE-REF DEST="SW-BASE-TYPE"/>AUTOSAR/Platform/
      BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
    <SW-RECORD-LAYOUT-V-AXIS>0</SW-RECORD-LAYOUT-V-AXIS>
  </SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>

```

```

    <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
    <SW-RECORD-LAYOUT-V-INDEX>X Y</SW-RECORD-LAYOUT-V-INDEX>
  </SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT-GROUP>

```

### 3.3.5 Record Layout: IntMap 3 x 4


Non-symmetrical matrices are commonly used and therefore a detailed description of their handling is given here.

The logical view is represented by 3-by-4 matrix (two dimensional matrix). Each element of a matrix is denoted by an index with two subscripts [AXIS 2, AXIS 1]. For instance, [3,2] represents the element at the third row (AXIS 2) and second column (AXIS 1) of a matrix.

[1,1]	[1,2]	[1,3]	[1,4]
[2,1]	[2,2]	[2,3]	[2,4]
[3,1]	[3,2]	[3,3]	[3,4]


**Figure 3.22: 3 x 4 Matrix Representation**

In case of column-major order transformation the 3 x 4 matrix results in

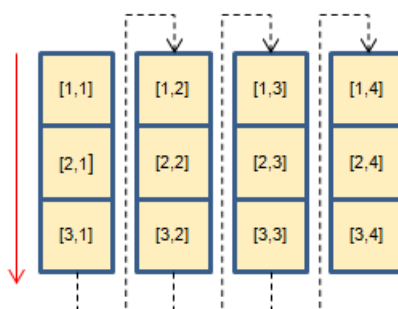

**Figure 3.23: Transform 3 x 4 Matrix in column-major order**


and in case of row-major order transformation the 3 x 4 matrix results in.

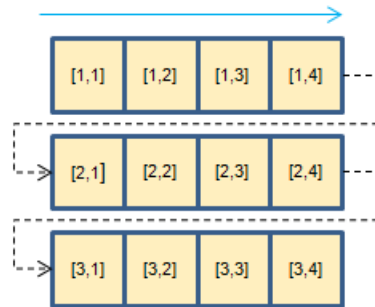

**Figure 3.24: Transform 3 x 4 Matrix in row-major order**

Logical view:

The figure 3.25 illustrates the logical view of the SwRecordLayout IntMap for the 3 x 4 matrix. Nx and Ny represent the number of sampling points given by the standardized values of SwRecordLayoutV.swRecordLayoutVProp. In the following example the dimensions are of Nx = 4 and Ny = 3. In the scope of this example the value COUNT is used. The SwRecordLayoutGroup with the shortLabel Val is shown in the lower part. Its elements are indexed by [AXIS 2, AXIS 1] from value (AXIS 2: = 1, AXIS 1: = 1) to value (AXIS 2: = 3, AXIS 1: = 4). AXIS 1 is assigned to Valx and shown above the values. AXIS 2 is assigned to Valy and shown on the left side of the values.

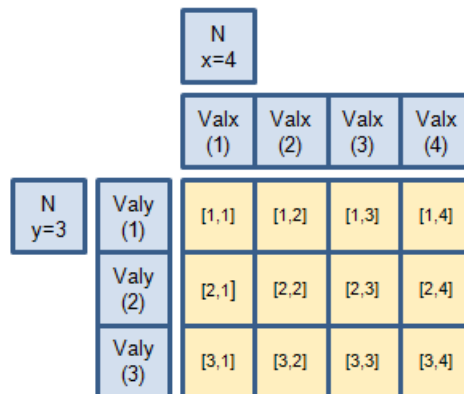


**Figure 3.25: IntMap Logical View 3 x 4 Matrix**

Memory representation:

The SwRecordLayout IntMap of 3 x 4 matrix illustrated in figure 3.26 is stored in case of category COLUMN\_DIR as follows:




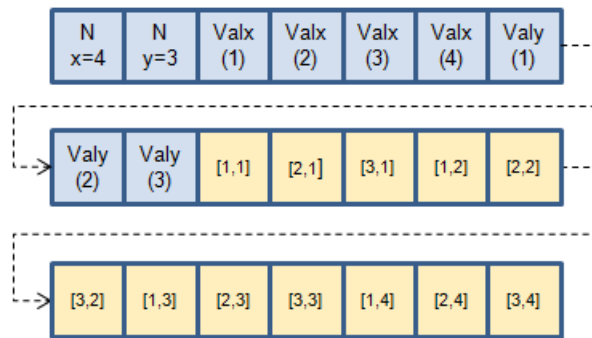

**Figure 3.26: IntMap Memory Representation (COLUMN\_DIR) 3 x 4 Matrix**

This means that the data is stored first in direction of columns and then in direction of rows. This means for Valx(1) ([1,1],[2,1],[3,1]), for Valx(2) ([1,2],[2,2],[3,2]), for Valx(3) ([1,3],[2,3],[3,3]) and for Valx(4) ([1,4],[2,4],[3,4]).

The SwRecordLayout IntMap of 3 x 4 matrix illustrated in figure 3.27 is stored in case of category ROW\_DIR as follows:

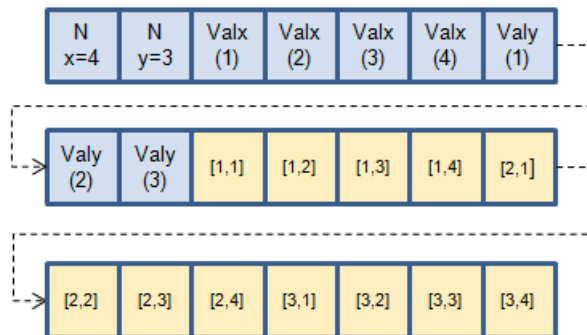


**Figure 3.27: IntMap Memory Representation (ROW\_DIR) 3 x 4 Matrix**

This means that the data is stored first in direction of rows and then in direction of columns. This means for Valy(1) ([1,1],[1,2],[1,3],[1,4]), for Valy(2) ([2,1],[2,2],[2,3],[2,4]), for Valy(3) ([3,1],[3,2],[3,3],[3,4]).

### 3.3.6 Record Layout: FixIntMap

This chapter describes the record layout for a map with fixed axis points. Fixed axis exist in three categories: FIX\_AXIS\_PAR, FIX\_AXIS\_PAR\_DIST and FIX\_AXIS\_PAR\_LIST, see [TPS\_SWCT\_01748] in [7].

The number of sampling points (Nx, Ny), the Offset, the shift and the distance values are represented in the following chapters by these logical views:

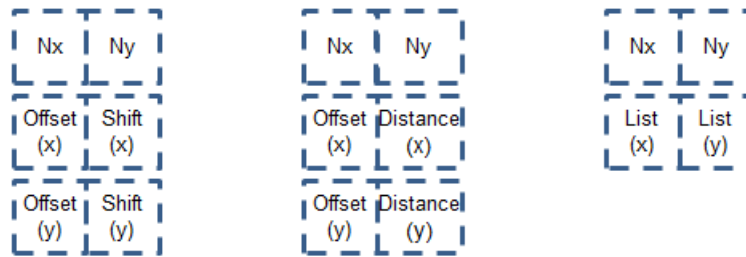


**Figure 3.28:** FIX\_AXIS\_PAR (left), FIX\_AXIS\_PAR\_DIST (middle), FIX\_AXIS\_PAR\_LIST (right)

These values are not defined inside `SwRecordLayouts` with fixed axis points.

Logical view:

The figure 3.29 illustrates the logical view of the `SwRecordLayout` `FixIntMap`. The `SwRecordLayoutGroup` with the `shortLabel` Val is shown in the lower part. Its elements are indexed by [AXIS 2, AXIS 1] from value (AXIS 2: = 1, AXIS 1: = 1) to value (AXIS 2: = -1, AXIS 1: = -1) there -1 gives the last value.

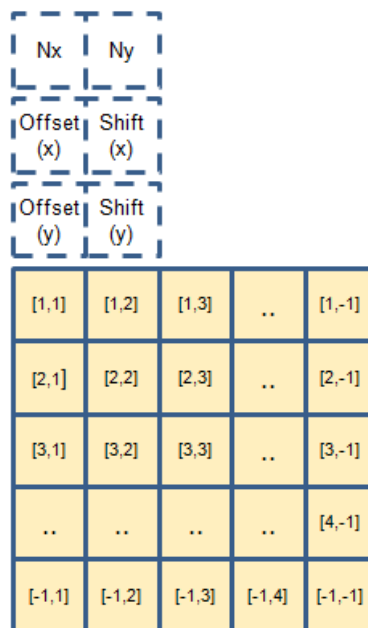


**Figure 3.29:** FixIntMap Logical View

The matrix element a(2,3) in figure 3.29 is represented by (AXIS 1) x = 3 and (AXIS 2) y = 2.

Memory representation (COLUMN\_DIR):

The `SwRecordLayout` `FixIntMap` illustrated in figure 3.29 is stored in case of category `COLUMN_DIR` as follows:

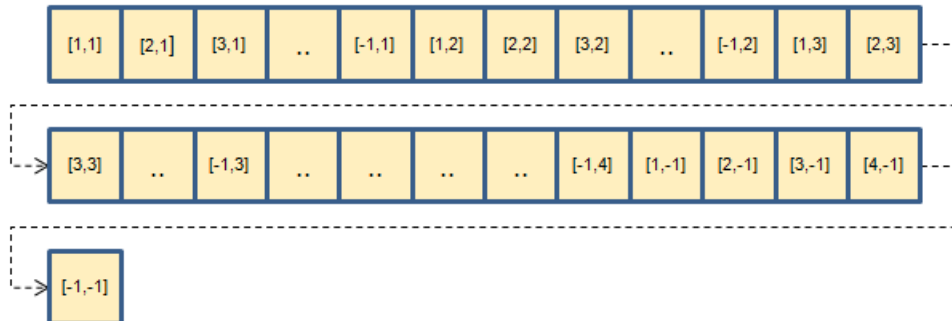

**Figure 3.30: FixIntMap Memory Representation**

This means that the data is stored in direction of columns and then in direction of rows ([1,1],[2,1],[3,1], ...).

ARXML representation:

Extract of the record layout `FixIntMap_s16_s16` from `AUTOSAR_MOD_IFX_RecordLayouts_Blueprint.arxml`.

**Listing 3.8: Record Layout: FixIntMap\_s16\_s16 in ARXML representation**

```

</SW-RECORD-LAYOUT>
<!-- SW-RECORD-LAYOUT: FixIntMap_s16_s16 -->
<SW-RECORD-LAYOUT>
  <SHORT-NAME NAME-PATTERN="{blueprintName}">FixIntMap_s16_s16</SHORT-NAME>
  <SW-RECORD-LAYOUT-GROUP>
    <SW-RECORD-LAYOUT-GROUP>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">Val</SHORT-LABEL>
      <CATEGORY>COLUMN_DIR</CATEGORY>
      <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
      <SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
      <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
      <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
      <SW-RECORD-LAYOUT-GROUP>
        <SW-RECORD-LAYOUT-GROUP-AXIS>2</SW-RECORD-LAYOUT-GROUP-AXIS>
        <SW-RECORD-LAYOUT-GROUP-INDEX>Y</SW-RECORD-LAYOUT-GROUP-INDEX>
        <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
        <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
        <SW-RECORD-LAYOUT-V>
          <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
            BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
          <SW-RECORD-LAYOUT-V-AXIS>0</SW-RECORD-LAYOUT-V-AXIS>
          <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
          <SW-RECORD-LAYOUT-V-INDEX>X Y</SW-RECORD-LAYOUT-V-INDEX>
        </SW-RECORD-LAYOUT-V>
      </SW-RECORD-LAYOUT-GROUP>
    </SW-RECORD-LAYOUT-GROUP>
  </SW-RECORD-LAYOUT-GROUP>

```

The following [SwRecordLayouts](#) are not part of AUTOSAR\_MOD\_IFX\_RecordLayouts\_Blueprint.arxml.


### 3.4 Multidimensional Arrays

This chapter describes record layouts for multidimensional arrays as cuboids, `cube_4` and `cube_5`.

#### 3.4.1 Definition of Indexing


To define record layouts for arrays with more than two dimensions the same approach is used as for maps described in [3.3.1](#).

In linear algebra, a 3-dimensional matrix is defined by  $A(l,m,n)$ . Even though the specifics of symbolic matrix notation varies widely, the subscripts are intentionally defined as follows (see figure [3.31](#)): slice or plane index ( $l$ ), the row index ( $m$ ) and the column index ( $n$ ). The row index ( $m$ ) and the column index ( $n$ ) span maps as known from figure [3.12](#). The slice or plane index ( $l$ ) builds an array of maps defined by the indexes ( $m,n$ ).

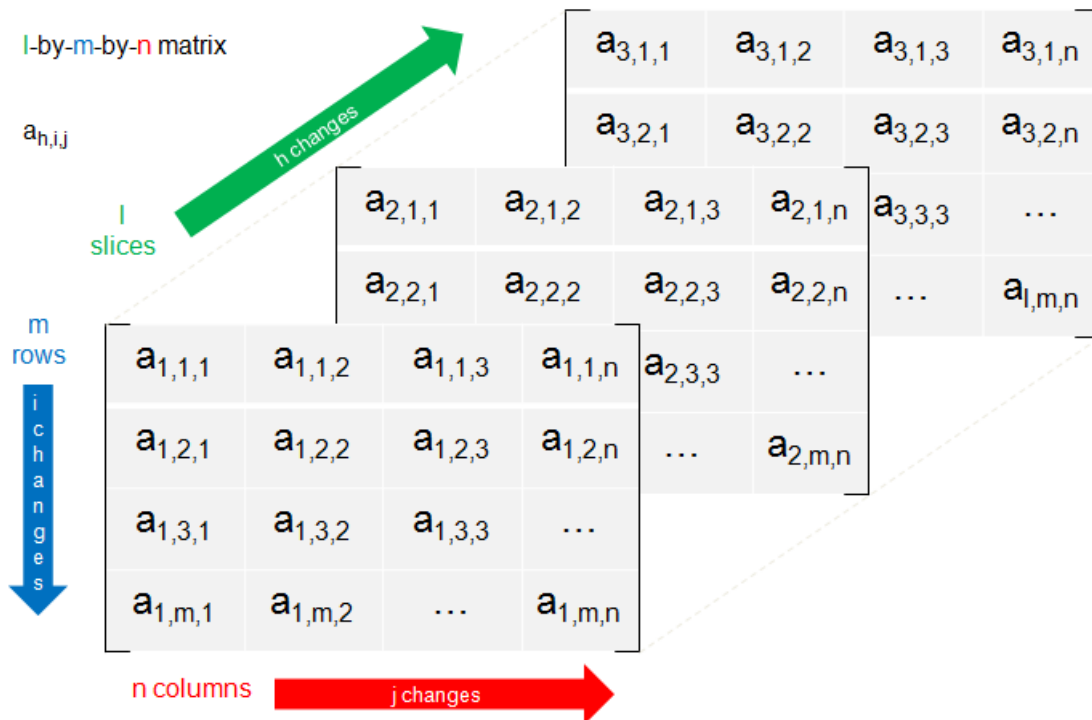

**Figure 3.31: Linear Algebra Matrix with more than two dimensions**

The transformation from indexing in matrix definition to the representation in Cartesian coordinate system is shown in figure [3.32](#).

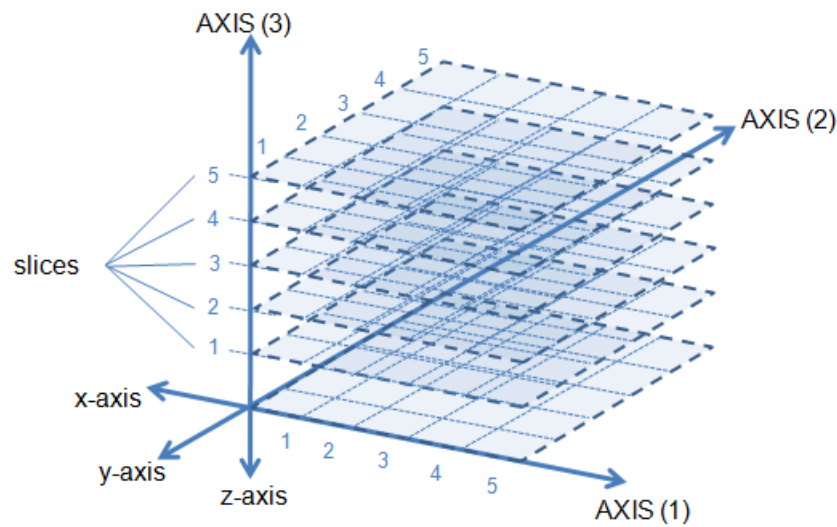

**Figure 3.32: Cartesian Coordinate System with an array of maps**

The (AXIS 1) and (AXIS 2) span a map. The (AXIS 3) builds an array of these maps called slices. Each of these slices will define a three-dimensional Euclidean space which determines every point by three "coordinates": (AXIS 1), (AXIS 2) and the value.


It is essential to understand that the (AXIS 3) is not providing the value of the data point. The (AXIS 3) gives the number of the three-dimensional Euclidean spaces in the cuboid.

### 3.4.2 Record Layout: Cuboid

This chapter describes the record layout for a cuboid.

Logical view:

The figure 3.33 illustrates the logical view of the `SwRecordLayout` Cuboid. The number of sampling points ( $N_x$ ,  $N_y$ ,  $N_z$ ) are defined by separate `SwRecordLayoutVs` inside the `SwRecordLayout`. In the following example the dimensions are of  $N_x = 5$ ,  $N_y = 4$  and  $N_z = 2$ . The elements of [AXIS 1, AXIS 2, AXIS 3] are defined by separate `SwRecordLayoutGroups` inside the enclosing `SwRecordLayoutGroup`. The `SwRecordLayoutGroup` with the `shortLabel` Val defines the values of the data points and is shown in the lower part.

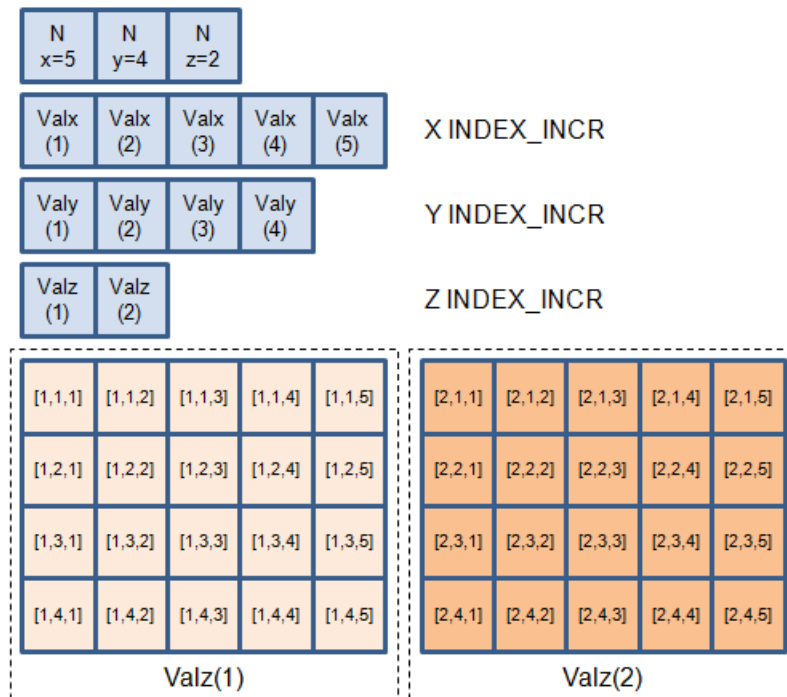


**Figure 3.33: Cuboid Logical View**

The first slice (AXIS 3: = 1) is illustrated by the dotted rectangular area named Valz(1), the second slice (AXIS 3: = 2) correspondently named by Valz(2).

Memory representation:

The `SwRecordLayout` Cuboid illustrated in figure 3.33 is stored in case of category `COLUMN_DIR` as follows:

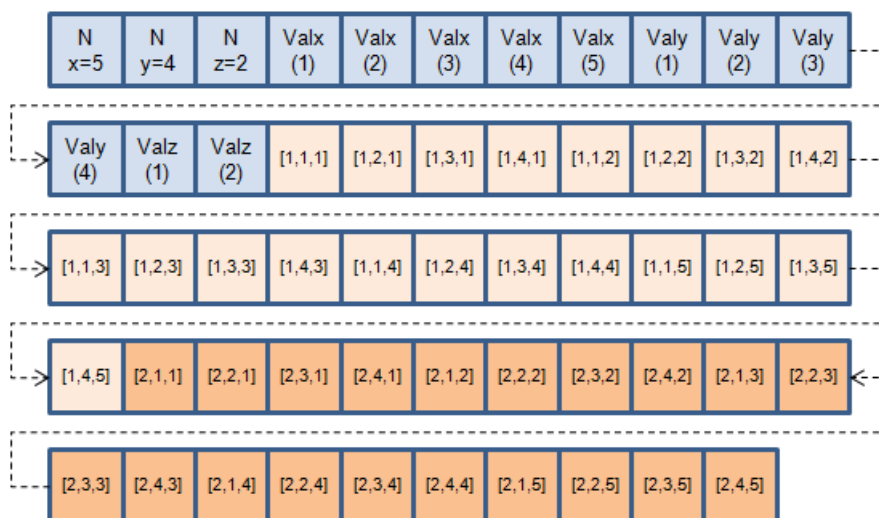

**Figure 3.34: Cuboid Memory Representation (COLUMN\_DIR)**

This means that the data is stored in direction of columns and then in direction of rows starting with the first slice ([1,1,1],[1,2,1],[1,3,1], ... ,[1,4,5]). The second slice starts with ([2,1,1],[2,2,1],[2,3,1], ... ,[2,4,5]) and follows the same pattern.

ARXML representation:

The ARXML representation of the record layout Cuboid\_s16s16s16\_s16 is given in two parts for illustrative reason. The first part defines the number of sampling points and the elements of axis.

### Listing 3.9: Record Layout of Cuboid - part one

```
<ELEMENTS>
  <!-- SW-RECORD-LAYOUT: Cuboid_s16s16s16_s16 COLUMN_DIR -->
  <SW-RECORD-LAYOUT>
    <SHORT-NAME NAME-PATTERN="{blueprintName}">Cuboid_s16s16s16_s16</
      SHORT-NAME>
    <SW-RECORD-LAYOUT-GROUP>
      <SW-RECORD-LAYOUT-V>
        <SHORT-LABEL NAME-PATTERN="{blueprintName}">Nx</SHORT-LABEL>
        <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
          BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
        <SW-RECORD-LAYOUT-V-AXIS>1</SW-RECORD-LAYOUT-V-AXIS>
        <SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
      </SW-RECORD-LAYOUT-V>
      <SW-RECORD-LAYOUT-V>
        <SHORT-LABEL NAME-PATTERN="{blueprintName}">Ny</SHORT-LABEL>
        <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
          BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
        <SW-RECORD-LAYOUT-V-AXIS>2</SW-RECORD-LAYOUT-V-AXIS>
        <SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
      </SW-RECORD-LAYOUT-V>
      <SW-RECORD-LAYOUT-V>
        <SHORT-LABEL NAME-PATTERN="{blueprintName}">Nz</SHORT-LABEL>
        <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
          BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
        <SW-RECORD-LAYOUT-V-AXIS>3</SW-RECORD-LAYOUT-V-AXIS>
        <SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
      </SW-RECORD-LAYOUT-V>
    <SW-RECORD-LAYOUT-GROUP>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">X</SHORT-LABEL>
      <CATEGORY>INDEX_INCR</CATEGORY>
      <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
      <SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
      <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
      <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
      <SW-RECORD-LAYOUT-V>
        <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
          BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
        <SW-RECORD-LAYOUT-V-AXIS>1</SW-RECORD-LAYOUT-V-AXIS>
        <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
      </SW-RECORD-LAYOUT-V>
    </SW-RECORD-LAYOUT-GROUP>
    <SW-RECORD-LAYOUT-GROUP>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">Y</SHORT-LABEL>
      <CATEGORY>INDEX_INCR</CATEGORY>
```

```

<SW-RECORD-LAYOUT-GROUP-AXIS>2</SW-RECORD-LAYOUT-GROUP-AXIS>
<SW-RECORD-LAYOUT-GROUP-INDEX>Y</SW-RECORD-LAYOUT-GROUP-INDEX>
<SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
<SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
<SW-RECORD-LAYOUT-V>
<BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
  BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
  <SW-RECORD-LAYOUT-V-AXIS>2</SW-RECORD-LAYOUT-V-AXIS>
  <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
</SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>
<SW-RECORD-LAYOUT-GROUP>
  <SHORT-LABEL NAME-PATTERN="{blueprintName}">Z</SHORT-LABEL>
  <CATEGORY>INDEX_INCR</CATEGORY>
  <SW-RECORD-LAYOUT-GROUP-AXIS>3</SW-RECORD-LAYOUT-GROUP-AXIS>
  <SW-RECORD-LAYOUT-GROUP-INDEX>Z</SW-RECORD-LAYOUT-GROUP-INDEX>
  <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
  <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-V>
  <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
    BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
    <SW-RECORD-LAYOUT-V-AXIS>3</SW-RECORD-LAYOUT-V-AXIS>
    <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
  </SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>

```

The second part defines the values of the data points. Inside the `SwRecordLayoutGroup` with the `shortLabel` Val the definition of memory representation (COLUMN\_DIR or ROW\_DIR) has to be unique. This means that memory representation of the map (AXIS 1 and AXIS 2) and those of the slice (AXIS 3) have to be equal. In case of listing 3.10 the memory representation COLUMN\_DIR is defined.

### Listing 3.10: Record Layout of Cuboid - part two

```

</SW-RECORD-LAYOUT-GROUP>
<SW-RECORD-LAYOUT-GROUP>
  <SHORT-LABEL NAME-PATTERN="{blueprintName}">Val</SHORT-LABEL>
  <CATEGORY>COLUMN_DIR</CATEGORY>
  <SW-RECORD-LAYOUT-GROUP-AXIS>3</SW-RECORD-LAYOUT-GROUP-AXIS>
  <SW-RECORD-LAYOUT-GROUP-INDEX>Z</SW-RECORD-LAYOUT-GROUP-INDEX>
  <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
  <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-GROUP>
    <CATEGORY>COLUMN_DIR</CATEGORY>
    <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
    <SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
    <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
    <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-GROUP>
    <SW-RECORD-LAYOUT-GROUP-AXIS>2</SW-RECORD-LAYOUT-GROUP-AXIS>
    <SW-RECORD-LAYOUT-GROUP-INDEX>Y</SW-RECORD-LAYOUT-GROUP-INDEX>
    <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
    <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-V>
  <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
    BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
  </SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>

```



```
<SW-RECORD-LAYOUT-V-AXIS>0</SW-RECORD-LAYOUT-V-AXIS>  
<SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>  
<SW-RECORD-LAYOUT-V-INDEX>Z X Y</SW-RECORD-LAYOUT-V-INDEX>  
</SW-RECORD-LAYOUT-V>  
</SW-RECORD-LAYOUT-GROUP>  
</SW-RECORD-LAYOUT-GROUP>
```


The combination of different base types e.g. a Cuboid\_u8s16u16\_u32 are technically possible but not further described in this document.

### 3.4.3 Record Layout: Cube\_4 and Cube\_5

This chapter describes the record layouts for Cube\_4 and Cube\_5. The Cube\_4 stores an array of Cuboids with incremented or decremented (AXIS 4). The Cube\_5 correspondingly stores an array of Cube\_4s with incremented or decremented (AXIS 5). In this version of the document only Cube\_4 is described.

Logical view:

The figure 3.35 illustrates the logical view of the `SwRecordLayout` Cube\_4. The number of sampling points (Nx, Ny, Nz1, Nz2) are defined by separate `SwRecordLayoutVs` inside the `SwRecordLayout`. In the following example the dimensions are of Nx = 5, Ny = 4, Nz1 = 2 and Nz2 = 3. The elements of [AXIS 1, AXIS 2, AXIS 3, AXIS 4] are defined by separate `SwRecordLayoutGroups` inside the `SwRecordLayout`. The `SwRecordLayoutGroup` with the `shortLabel` Val defines the values of the data points and is shown at the right side.

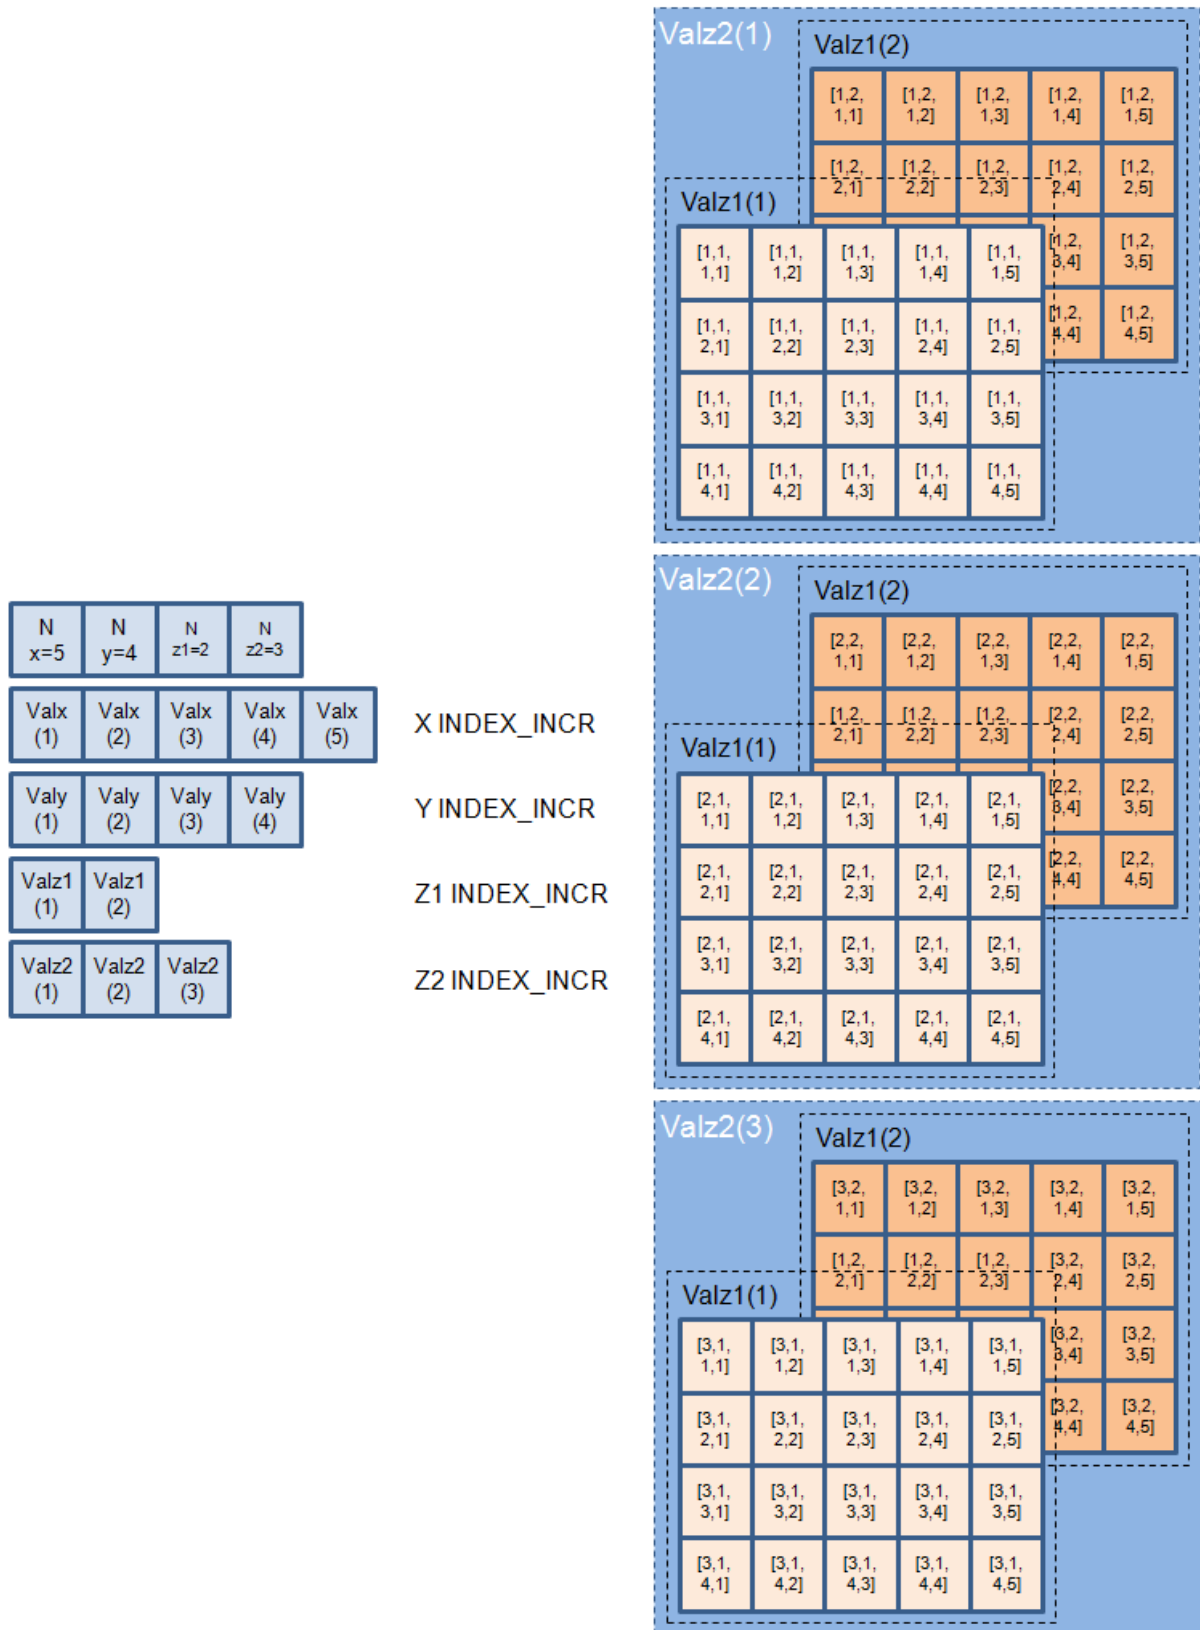


**Figure 3.35: Cube\_4 Logical View**

The first array of cuboids (AXIS 4: = 1) is illustrated by the blue rectangular area named Valz2(1) at the top in figure 3.35. It contains the cuboid with the slices Valz1(1) and Valz1(2). The second array of cuboids (AXIS 4: = 2) and the third one (AXIS 4: = 3) are illustrated in the middle and at the bottom in figure 3.35. Both contain cuboids with the slices Valz1(1) and Valz1(2). Each element of a matrix is denoted by an index with four subscripts [AXIS 4, AXIS 3, AXIS 2, AXIS 1].

Memory representation:

The `SwRecordLayout` Cube\_4 illustrated in figure 3.35 is stored in case of category COLUMN\_DIR as follows:

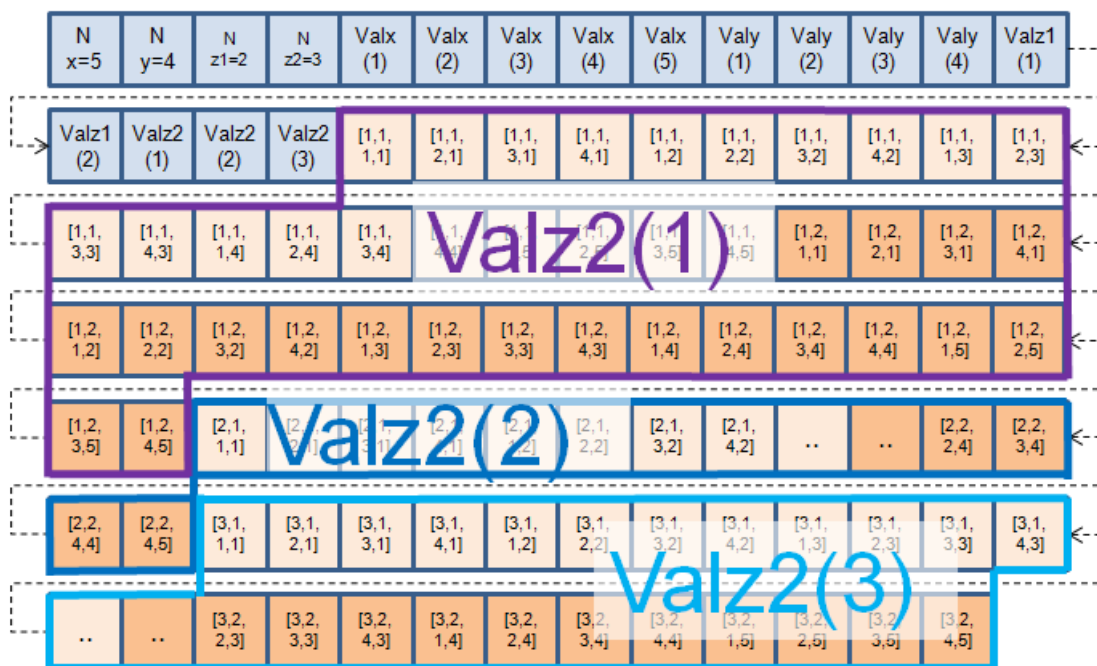

**Figure 3.36: Cube\_4 Memory Representation (COLUMN\_DIR)**

The data values are stored in the following order: starting with the iteration along cuboids Valz2(1), Valz2(2) and Valz2(3). Inside each of these iterations the iteration along slices Valz1(1) and Valz1(2) run. Inside each of these iterations the iteration along the maps is executed as known from 3.3.2. The data values of cuboids Valz2(2) and Valz2(3) are intentionally not completely illustrated in figure 3.36.

```
[
  (select cuboid; loop level 4)
  iteration along cuboids
  (AXIS 4 iterates, AXIS 3, AXIS 2 and AXIS 1 are fixed !)
  start with first cuboid (AXIS 4: = 1)
  [
    (select slice; loop level 3)
    iteration along slices
    (AXIS 3 iterates, AXIS 4, AXIS 2 and AXIS 1 are fixed !)
```

```

start with first slice (AXIS 3: = 1)
[
  (select row element; loop level 2)
  iteration along row
  (AXIS 1 iterates, AXIS 4, AXIS 3 and AXIS 2 are fixed !)
  start with first row (AXIS 1: = 1)
  [
    (select column element; loop level 1)
    iteration along column
    (AXIS 2 iterates, AXIS 4, AXIS 3 and AXIS 1 are fixed !)
    start with column element (AXIS 2: = 1)
    ...
    end with last column (AXIS 2: = 5)
  ]
  end with last row (AXIS 1: = 4)
]
end with last slice (AXIS 3: = 2)
]
end with last cuboid (AXIS 4: = 3)
]
  
```

ARXML representation:

The ARXML representation of the record layout Cube\_4\_s16s16s16s16\_s16 is given in three parts for illustrative reason. The first part defines the number of sampling points (Nx, Ny, Nz1, Nz2).

### Listing 3.11: Record Layout of Cube\_4 - part one

```

</SW-RECORD-LAYOUT>
<!-- SW-RECORD-LAYOUT: Cube_4_s16s16s16s16_s16 COLUMN_DIR -->
<SW-RECORD-LAYOUT>
  <SHORT-NAME NAME-PATTERN="{blueprintName}">Cube_4_s16s16s16s16_s16</
  SHORT-NAME>
  <SW-RECORD-LAYOUT-GROUP>
    <SW-RECORD-LAYOUT-V>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">Nx</SHORT-LABEL>
      <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
        BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
      <SW-RECORD-LAYOUT-V-AXIS>1</SW-RECORD-LAYOUT-V-AXIS>
      <SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
    </SW-RECORD-LAYOUT-V>
    <SW-RECORD-LAYOUT-V>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">Ny</SHORT-LABEL>
      <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
        BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
      <SW-RECORD-LAYOUT-V-AXIS>2</SW-RECORD-LAYOUT-V-AXIS>
      <SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
    </SW-RECORD-LAYOUT-V>
    <SW-RECORD-LAYOUT-V>
      <SHORT-LABEL NAME-PATTERN="{blueprintName}">Nz1</SHORT-LABEL>
      <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
        BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
      <SW-RECORD-LAYOUT-V-AXIS>3</SW-RECORD-LAYOUT-V-AXIS>
      <SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
    </SW-RECORD-LAYOUT-V>
  </SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT>
  
```

```
<SW-RECORD-LAYOUT-V>
  <SHORT-LABEL NAME-PATTERN="{blueprintName}">Nz2</SHORT-LABEL>
  <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
    BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
  <SW-RECORD-LAYOUT-V-AXIS>4</SW-RECORD-LAYOUT-V-AXIS>
  <SW-RECORD-LAYOUT-V-PROP>COUNT</SW-RECORD-LAYOUT-V-PROP>
```

The second part defines the elements of axis [AXIS 1, AXIS 2, AXIS 3, AXIS 4].

### Listing 3.12: Record Layout of Cube\_4 - part two

```
</SW-RECORD-LAYOUT-V>
<SW-RECORD-LAYOUT-GROUP>
  <SHORT-LABEL NAME-PATTERN="{blueprintName}">X</SHORT-LABEL>
  <CATEGORY>INDEX_INCR</CATEGORY>
  <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
  <SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
  <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
  <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-V>
  <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
    BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
  <SW-RECORD-LAYOUT-V-AXIS>1</SW-RECORD-LAYOUT-V-AXIS>
  <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
  </SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>
<SW-RECORD-LAYOUT-GROUP>
  <SHORT-LABEL NAME-PATTERN="{blueprintName}">Y</SHORT-LABEL>
  <CATEGORY>INDEX_INCR</CATEGORY>
  <SW-RECORD-LAYOUT-GROUP-AXIS>2</SW-RECORD-LAYOUT-GROUP-AXIS>
  <SW-RECORD-LAYOUT-GROUP-INDEX>Y</SW-RECORD-LAYOUT-GROUP-INDEX>
  <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
  <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-V>
  <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
    BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
  <SW-RECORD-LAYOUT-V-AXIS>2</SW-RECORD-LAYOUT-V-AXIS>
  <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
  </SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>
<SW-RECORD-LAYOUT-GROUP>
  <SHORT-LABEL NAME-PATTERN="{blueprintName}">Z1</SHORT-LABEL>
  <CATEGORY>INDEX_INCR</CATEGORY>
  <SW-RECORD-LAYOUT-GROUP-AXIS>3</SW-RECORD-LAYOUT-GROUP-AXIS>
  <SW-RECORD-LAYOUT-GROUP-INDEX>Z1</SW-RECORD-LAYOUT-GROUP-INDEX>
  <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
  <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-V>
  <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
    BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
  <SW-RECORD-LAYOUT-V-AXIS>3</SW-RECORD-LAYOUT-V-AXIS>
  <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
  </SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>
<SW-RECORD-LAYOUT-GROUP>
  <SHORT-LABEL NAME-PATTERN="{blueprintName}">Z2</SHORT-LABEL>
```

```

<CATEGORY>INDEX_INCR</CATEGORY>
<SW-RECORD-LAYOUT-GROUP-AXIS>4</SW-RECORD-LAYOUT-GROUP-AXIS>
<SW-RECORD-LAYOUT-GROUP-INDEX>Z2</SW-RECORD-LAYOUT-GROUP-INDEX>
<SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
<SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
<SW-RECORD-LAYOUT-V>
<BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
  BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
  <SW-RECORD-LAYOUT-V-AXIS>4</SW-RECORD-LAYOUT-V-AXIS>
  <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
</SW-RECORD-LAYOUT-V>
  
```

The third part defines the values of the data points. Inside the `SwRecordLayout-Group` with the `shortLabel` Val the nesting of the axis defines the memory representation. In case of listing 3.13 the memory representation `COLUMN_DIR` is defined. The (AXIS 2) iterates along the column.

### Listing 3.13: Record Layout of Cube\_4 - part three

```

</SW-RECORD-LAYOUT-GROUP>
<SW-RECORD-LAYOUT-GROUP>
  <SHORT-LABEL NAME-PATTERN="{blueprintName}">Val</SHORT-LABEL>
  <CATEGORY>COLUMN_DIR</CATEGORY>
  <SW-RECORD-LAYOUT-GROUP-AXIS>4</SW-RECORD-LAYOUT-GROUP-AXIS>
  <SW-RECORD-LAYOUT-GROUP-INDEX>Z2</SW-RECORD-LAYOUT-GROUP-INDEX>
  <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
  <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
  <SW-RECORD-LAYOUT-GROUP>
    <CATEGORY>COLUMN_DIR</CATEGORY>
    <SW-RECORD-LAYOUT-GROUP-AXIS>3</SW-RECORD-LAYOUT-GROUP-AXIS>
    <SW-RECORD-LAYOUT-GROUP-INDEX>Z1</SW-RECORD-LAYOUT-GROUP-INDEX>
    >
    <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
    <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
    <SW-RECORD-LAYOUT-GROUP>
      <CATEGORY>COLUMN_DIR</CATEGORY>
      <SW-RECORD-LAYOUT-GROUP-AXIS>1</SW-RECORD-LAYOUT-GROUP-AXIS>
      <SW-RECORD-LAYOUT-GROUP-INDEX>X</SW-RECORD-LAYOUT-GROUP-INDEX>
      <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
      <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
      <SW-RECORD-LAYOUT-GROUP>
        <SW-RECORD-LAYOUT-GROUP-AXIS>2</SW-RECORD-LAYOUT-GROUP-AXIS>
        <SW-RECORD-LAYOUT-GROUP-INDEX>Y</SW-RECORD-LAYOUT-GROUP-INDEX>
        <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
        <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
        <SW-RECORD-LAYOUT-V>
          <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
            BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
          <SW-RECORD-LAYOUT-V-AXIS>0</SW-RECORD-LAYOUT-V-AXIS>
          <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
          <SW-RECORD-LAYOUT-V-INDEX>Z2 Z1 X Y</SW-RECORD-LAYOUT-V-INDEX>
        </SW-RECORD-LAYOUT-V>
      </SW-RECORD-LAYOUT-GROUP>
    </SW-RECORD-LAYOUT-GROUP>
  </SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT-GROUP>
  
```

```

    </SW-RECORD-LAYOUT-V>
  </SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT-GROUP>

```

## 3.5 Value and ValueBlock

### 3.5.1 Record Layout: Value

Logical view:

The figure 3.37 illustrates the logical view of the `SwRecordLayout` Value. This `SwRecordLayout` contains only one value.



Figure 3.37: Value Logical View

Memory representation:

The `SwRecordLayout` Val illustrated in figure 3.37 is stored as follows:



Figure 3.38: Value Memory Representation

ARXML representation:

#### Listing 3.14: Record Layout of Value

```

<!-- SW-RECORD-LAYOUT: Val_s16 -->
<SW-RECORD-LAYOUT>
  <SHORT-NAME NAME-PATTERN="{blueprintName}">Val_s16</SHORT-NAME>
  <SW-RECORD-LAYOUT-GROUP>
    <SHORT-LABEL NAME-PATTERN="{blueprintName}">Val</SHORT-LABEL>
    <SW-RECORD-LAYOUT-V>
      <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
        BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
      <SW-RECORD-LAYOUT-V-AXIS>0</SW-RECORD-LAYOUT-V-AXIS>
      <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
    </SW-RECORD-LAYOUT-V>
  </SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT>

```

```
</SW-RECORD-LAYOUT-V>
</SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT>
```

### 3.5.2 Record Layout: One dimensional ValueBlock

Logical view:

The figure 3.39 illustrates the logical view of the `SwRecordLayout` ValueBlock. This `SwRecordLayout` is an array of values (similar to an axis but without the number of axis points).




Figure 3.39: ValueBlock Logical View

Memory representation:

The `SwRecordLayout` ValueBlock illustrated in figure 3.40 is stored as follows:




Figure 3.40: Value Memory Representation

ARXML representation:

#### Listing 3.15: Record Layout of ValueBlock

```
<!-- SW-RECORD-LAYOUT: ValBlk_s16 -->
<SW-RECORD-LAYOUT>
  <SHORT-NAME NAME-PATTERN="{blueprintName}">ValBlk_s16</SHORT-NAME>
  <SW-RECORD-LAYOUT-GROUP>
    <SHORT-LABEL NAME-PATTERN="{blueprintName}">Val</SHORT-LABEL>
    <CATEGORY>COLUMN_DIR</CATEGORY>
    <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
    <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
    <SW-RECORD-LAYOUT-V>
      <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
        BaseType_Blueprint/sint16</BASE-TYPE-REF>
      <SW-RECORD-LAYOUT-V-AXIS>0</SW-RECORD-LAYOUT-V-AXIS>
      <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
    </SW-RECORD-LAYOUT-V>
  </SW-RECORD-LAYOUT-GROUP>
</SW-RECORD-LAYOUT>
```



### 3.5.3 Record Layout: Multi dimensional ValueBlock

In general AUTOSAR and ASAM support multi dimensional ValueBlocks. The following example shows a two dimensional SwRecordLayout. Therefore the AUTOSAR\_MOD\_ValBlk\_SwRecordLayouts\_Blueprint.arxml contains only blueprints for up to two dimensions.

Logical view:

The figure 3.41 illustrates the logical view of the SwRecordLayout Multi dimensional ValueBlock. This SwRecordLayout is an array of values (similar to a map or cuboid but without axis points).  $N_i$  defines the dimension of the ValueBlock, in this example to  $i = 2$ .  $N_j$  defines the number of values in a dedicated dimension.

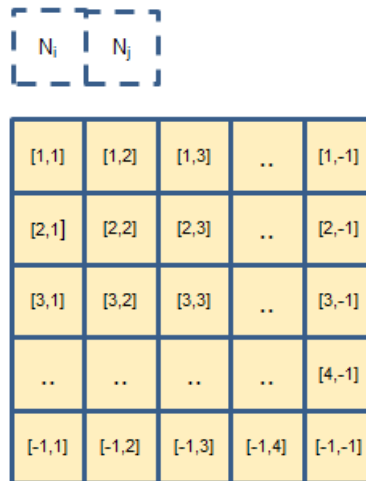


Figure 3.41: Multi dimensional ValueBlock Logical View

Memory representation:

The SwRecordLayout Multi dimensional ValueBlock illustrated in figure 3.41 is stored as follows:

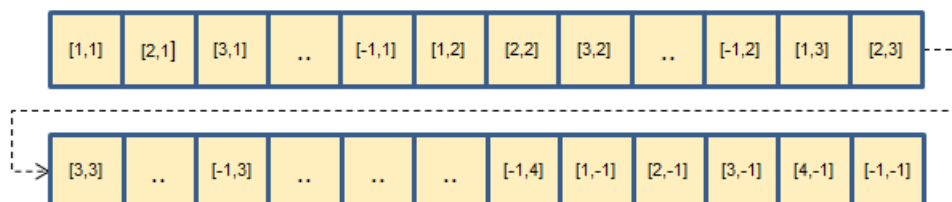


Figure 3.42: Multi dimensional ValueBlock Memory Representation

ARXML representation:

#### Listing 3.16: Record Layout of Multi dimensional ValueBlock

```
<!-- SW-RECORD-LAYOUT: ValBlk2Dim_s16 -->
<SW-RECORD-LAYOUT>
  <SHORT-NAME NAME-PATTERN="{blueprintName}">ValBlk2Dim_s16</SHORT-NAME>
```

```
<SW-RECORD-LAYOUT-GROUP>
  <SW-RECORD-LAYOUT-GROUP>
    <SHORT-LABEL NAME-PATTERN="{blueprintName}">Val</SHORT-LABEL>
    <CATEGORY>COLUMN_DIR</CATEGORY>
    <SW-RECORD-LAYOUT-GROUP-INDEX>i</SW-RECORD-LAYOUT-GROUP-INDEX>
    <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
    <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
    <SW-RECORD-LAYOUT-GROUP>
      <SW-RECORD-LAYOUT-GROUP-INDEX>j</SW-RECORD-LAYOUT-GROUP-INDEX>
      <SW-RECORD-LAYOUT-GROUP-FROM>1</SW-RECORD-LAYOUT-GROUP-FROM>
      <SW-RECORD-LAYOUT-GROUP-TO>-1</SW-RECORD-LAYOUT-GROUP-TO>
      <SW-RECORD-LAYOUT-V>
        <BASE-TYPE-REF DEST="SW-BASE-TYPE">/AUTOSAR/Platform/
          BaseTypes_Blueprint/sint16</BASE-TYPE-REF>
        <SW-RECORD-LAYOUT-V-AXIS>0</SW-RECORD-LAYOUT-V-AXIS>
        <SW-RECORD-LAYOUT-V-PROP>VALUE</SW-RECORD-LAYOUT-V-PROP>
        <SW-RECORD-LAYOUT-V-INDEX>i j</SW-RECORD-LAYOUT-V-INDEX>
      </SW-RECORD-LAYOUT-V>
    </SW-RECORD-LAYOUT-GROUP>
  </SW-RECORD-LAYOUT-GROUP>
```

Hint: Comparable with `FixIntMap`. Due to ASAM the dimension is not limited, the examples in ASAM will represent up to 3 dimension.

## 4 Additional SwRecordLayouts

In this chapter further [SwRecordLayout](#) will be described which are not covered by dedicated SWS documents.

Contents will be updated.

## 5 Units and Physical Dimensions

The Units and Physical Dimension are defined accordingly to the description in [10] and [7] by [TPS\_SWCT\_01285], [TPS\_SWCT\_01056], [TPS\_SWCT\_01057], [TPS\_SWCT\_01058], [TPS\_SWCT\_01736], [TPS\_SWCT\_01059], [TPS\_SWCT\_01737], [TPS\_SWCT\_01060], [TPS\_SWCT\_01060], [TPS\_SWCT\_01061], [TPS\_SWCT\_01068], [constr\_1026] and [constr\_1255].

## A Mentioned Class Tables

For the sake of completeness, this chapter contains a set of class tables representing meta-classes mentioned in the context of this document but which are not contained directly in the scope of describing specific meta-model semantics.

<b>Class</b>	<b>BaseType</b> (abstract)			
<b>Package</b>	M2::MSR::AsamHdo::BaseTypes			
<b>Note</b>	This abstract meta-class represents the ability to specify a platform dependant base type.			
<b>Base</b>	<i>ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
<b>Subclasses</b>	SwBaseType			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
baseType Definition	BaseTypeDefinition	1	aggr	This is the actual definition of the base type.  <b>Tags:</b> xml.roleElement=false xml.roleWrapperElement=false xml.sequenceOffset=20 xml.typeElement=false xml.typeWrapperElement=false

**Table A.1: BaseType**

<b>Class</b>	<b>BlueprintPolicy</b> (abstract)			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::StandardizationTemplate::AbstractBlueprintStructure			
<b>Note</b>	This meta-class represents the ability to indicate whether blueprintable elements will be modifiable or not modifiable.			
<b>Base</b>	<i>ARObject</i>			
<b>Subclasses</b>	<i>BlueprintPolicyModifiable, BlueprintPolicyNotModifiable</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
attributeName	String	1	attr	This identifies the related attribute of a BlueprintPolicy. For navigation over the model a subset of xpath expressions is used.

**Table A.2: BlueprintPolicy**

<b>Class</b>	<b>BswModuleDescription</b>			
<b>Package</b>	M2::AUTOSARTemplates::BswModuleTemplate::BswOverview			
<b>Note</b>	Root element for the description of a single BSW module or BSW cluster. In case it describes a BSW module, the short name of this element equals the name of the BSW module.  <b>Tags:</b> atp.recommendedPackage=BswModuleDescriptions			
<b>Base</b>	<i>ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpFeature, AtpStructureElement, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	BswModuleDescription			
bswModule Dependency	BswModuleDependency	*	aggr	Describes the dependency to another BSW module.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=bswModuleDependency.shortName, bsw ModuleDependency.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=20
bswModule Documentation	SwComponent Documentation	0..1	aggr	This adds a documentation to the BSW module.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=bswModuleDocumentation, bswModule Documentation.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=6
expectedEntry	<a href="#">BswModuleEntry</a>	*	ref	Indicates an entry which is required by this module. Replacement of outgoingCallback / requiredEntry.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=expectedEntry.bswModuleEntry, expected Entry.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
implemented Entry	<a href="#">BswModuleEntry</a>	*	ref	Specifies an entry provided by this module which can be called by other modules. This includes "main" functions, interrupt routines, and callbacks. Replacement of providedEntry / expectedCallback.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=implementedEntry.bswModuleEntry, implementedEntry.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
internalBehavior	BswInternalBehavior	*	aggr	The various BswInternalBehaviors associated with a Bsw ModuleDescription can be distributed over several physical files. Therefore the aggregation is <<atp Splitable>>.  <b>Stereotypes:</b> atpSplitable <b>Tags:</b> atp.Splitkey=internalBehavior.shortName xml.sequenceOffset=65
moduleId	PositiveInteger	0..1	attr	Refers to the BSW Module Identifier defined by the AUTOSAR standard. For non-standardized modules, a proprietary identifier can be optionally chosen.  <b>Tags:</b> xml.sequenceOffset=5
providedClient ServerEntry	BswModuleClientServer Entry	*	aggr	Specifies that this module provides a client server entry which can be called from another partition or core.This entry is declared locally to this context and will be connected to the requiredClientServerEntry of another or the same module via the configuration of the BSW Scheduler.  <b>Stereotypes:</b> atpSplitable; atpVariation <b>Tags:</b> atp.Splitkey=providedClientServerEntry.shortName, providedClientServerEntry.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=45





Class	BswModuleDescription			
providedData	VariableDataPrototype	*	aggr	<p>Specifies a data prototype provided by this module in order to be read from another partition or core. The providedData is declared locally to this context and will be connected to the requiredData of another or the same module via the configuration of the BSW Scheduler.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=providedData.shortName, providedData.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime            xml.sequenceOffset=55</p>
providedMode Group	ModeDeclarationGroup Prototype	*	aggr	<p>A set of modes which is owned and provided by this module or cluster. It can be connected to the required ModeGroups of other modules or clusters via the configuration of the BswScheduler. It can also be synchronized with modes provided via ports by an associated ServiceSwComponentType, EcuAbstraction SwComponentType or ComplexDeviceDriverSw ComponentType.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=providedModeGroup.shortName, provided ModeGroup.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime            xml.sequenceOffset=25</p>
releasedTrigger	Trigger	*	aggr	<p>A Trigger released by this module or cluster. It can be connected to the requiredTriggers of other modules or clusters via the configuration of the BswScheduler. It can also be synchronized with Triggers provided via ports by an associated ServiceSwComponentType, Ecu AbstractionSwComponentType or ComplexDeviceDriver SwComponentType.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=releasedTrigger.shortName, released Trigger.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime            xml.sequenceOffset=35</p>
requiredClient ServerEntry	BswModuleClientServer Entry	*	aggr	<p>Specifies that this module requires a client server entry which can be implemented on another partition or core. This entry is declared locally to this context and will be connected to the providedClientServerEntry of another or the same module via the configuration of the BSW Scheduler.</p> <p><b>Stereotypes:</b> atpSplitable; atpVariation  <b>Tags:</b>            atp.Splitkey=requiredClientServerEntry.shortName, requiredClientServerEntry.variationPoint.shortLabel            vh.latestBindingTime=preCompileTime            xml.sequenceOffset=50</p>
requiredData	VariableDataPrototype	*	aggr	<p>Specifies a data prototype required by this module in order to be provided from another partition or core. The required Data is declared locally to this context and will be connected to the providedData of another or the same module via the configuration of the BswScheduler.</p>





Class	BswModuleDescription			
				<p style="text-align: right;">△</p> <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=requiredData.shortName, required Data.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=60
requiredModeGroup	ModeDeclarationGroup Prototype	*	aggr	Specifies that this module or cluster depends on a certain mode group. The requiredModeGroup is local to this context and will be connected to the providedModeGroup of another module or cluster via the configuration of the BswScheduler.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=requiredModeGroup.shortName, required ModeGroup.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=30
requiredTrigger	Trigger	*	aggr	Specifies that this module or cluster reacts upon an external trigger. This requiredTrigger is declared locally to this context and will be connected to the providedTrigger of another module or cluster via the configuration of the BswScheduler.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=requiredTrigger.shortName, required Trigger.variationPoint.shortLabel vh.latestBindingTime=preCompileTime xml.sequenceOffset=40

**Table A.3: BswModuleDescription**

Class	BswModuleEntry			
<b>Package</b>	M2::AUTOSARTemplates::BswModuleTemplate::BswInterfaces			
<b>Note</b>	This class represents a single API entry (C-function prototype) into the BSW module or cluster.  The name of the C-function is equal to the short name of this element with one exception: In case of multiple instances of a module on the same CPU, special rules for "infixes" apply, see description of class BswImplementation.  <b>Tags:</b> atp.recommendedPackage=BswModuleEntrys			
<b>Base</b>	<i>ARElement, ARObject, AtpBlueprint, AtpBlueprintable, CollectableElement, Identifiable, Multilanguage Referrable, PackageableElement, Referrable</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
argument (ordered)	SwServiceArg	*	aggr	An argument belonging to this BswModuleEntry.  <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=blueprintDerivationTime xml.sequenceOffset=45
bswEntryKind	BswEntryKindEnum	0..1	attr	This describes whether the entry is concrete or abstract. If the attribute is missing the entry is considered as concrete.  <b>Tags:</b> xml.sequenceOffset=40
callType	BswCallType	1	attr	The type of call associated with this service.  <b>Tags:</b> xml.sequenceOffset=25







<b>Class</b>	<b>BswModuleEntry</b>			
execution Context	BswExecutionContext	1	attr	Specifies the execution context which is required (in case of entries into this module) or guaranteed (in case of entries called from this module) for this service. <b>Tags:</b> xml.sequenceOffset=30
function Prototype Emitter	NameToken	0..1	attr	This attribute is used to control the generation of function prototypes. If set to "RTE", the RTE generates the function prototypes in the Module Interlink Header File.
isReentrant	Boolean	1	attr	Reentrancy from the viewpoint of function callers: <ul style="list-style-type: none"> <li>• True: Enables the service to be invoked again, before the service has finished.</li> <li>• False: It is prohibited to invoke the service again before is has finished.</li> </ul> <b>Tags:</b> xml.sequenceOffset=15
isSynchronous	Boolean	1	attr	Synchronicity from the viewpoint of function callers: <ul style="list-style-type: none"> <li>• True: This calls a synchronous service, i.e. the service is completed when the call returns.</li> <li>• False: The service (on semantical level) may not be complete when the call returns.</li> </ul> <b>Tags:</b> xml.sequenceOffset=20
returnType	SwServiceArg	0..1	aggr	The return type belonging to this bswModuleEntry. <b>Tags:</b> xml.sequenceOffset=40
role	Identifier	0..1	attr	Specifies the role of the entry in the given context. It shall be equal to the standardized name of the service call, especially in cases where no ServiceIdentifier is specified, e.g. for callbacks. Note that the ShortName is not always sufficient because it maybe vendor specific (e.g. for callbacks which can have more than one instance). <b>Tags:</b> xml.sequenceOffset=10
serviceId	PositiveInteger	0..1	attr	Refers to the service identifier of the Standardized Interfaces of AUTOSAR basic software. For non-standardized interfaces, it can optionally be used for proprietary identification. <b>Tags:</b> xml.sequenceOffset=5
swServiceImpl Policy	SwServiceImplPolicy Enum	1	attr	Denotes the implementation policy as a standard function call, inline function or macro. This has to be specified on interface level because it determines the signature of the call. <b>Tags:</b> xml.sequenceOffset=35

**Table A.4: BswModuleEntry**

<b>Class</b>	<b>ClientServerInterface</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	A client/server interface declares a number of operations that can be invoked on a server by a client. <b>Tags:</b> atp.recommendedPackage=PortInterfaces			
<b>Base</b>	<i>ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, PortInterface, Referrable</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	ClientServerInterface			
operation	ClientServerOperation	*	aggr	ClientServerOperation(s) of this ClientServerInterface. <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=blueprintDerivationTime
possibleError	ApplicationError	*	aggr	Application errors that are defined as part of this interface.

**Table A.5: ClientServerInterface**

Class	ClientServerInterfaceToBswModuleEntryBlueprintMapping			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::StandardizationTemplate::ClientServerInterfaceToBswModuleEntryMapping			
<b>Note</b>	This represents a mapping between one ClientServerInterface blueprint and BswModuleEntry blueprint in order to express the intended implementation of ClientServerOperations by specific BswModuleEntries under consideration of PortDefinedArguments. Such a mapping enables the formal check whether the number of arguments and the data types of arguments of the operation + additional PortDefined Arguments matches the signature of the BswModuleEntry. <b>Tags:</b> atp.recommendedPackage=BlueprintMappingSets			
<b>Base</b>	ARElement, ARObject, AtpBlueprint, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Type	Mult.	Kind	Note
clientServerInterface	ClientServerInterface	1	ref	The referenced ClientServerInterface represents the client server interface the mapping is dedicated to.
operationMapping	ClientServerOperationBlueprintMapping	1..*	aggr	This specifies the operations used in the mapping between the ClientServerInterface and the BswModuleEntry. <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime
portDefinedArgumentBlueprint (ordered)	PortDefinedArgumentBlueprint	*	aggr	This specifies the PortDefinedArguments used in the mapping between the ClientServerInterface and the BswModuleEntry. <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=preCompileTime

**Table A.6: ClientServerInterfaceToBswModuleEntryBlueprintMapping**

Class	CompuMethod			
<b>Package</b>	M2::MSR::AsamHdo::ComputationMethod			
<b>Note</b>	This meta-class represents the ability to express the relationship between a physical value and the mathematical representation.  Note that this is still independent of the technical implementation in data types. It only specifies the formula how the internal value corresponds to its physical pendant. <b>Tags:</b> atp.recommendedPackage=CompuMethods			
<b>Base</b>	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Type	Mult.	Kind	Note
compuInternalToPhys	Compu	0..1	aggr	This specifies the computation from internal values to physical values. <b>Tags:</b> xml.sequenceOffset=80





Class	CompuMethod			
compuPhysToInternal	Compu	0..1	aggr	This represents the computation from physical values to the internal values. <b>Tags:</b> xml.sequenceOffset=90
displayFormat	DisplayFormatString	0..1	attr	This property specifies, how the physical value shall be displayed e.g. in documents or measurement and calibration tools. <b>Tags:</b> xml.sequenceOffset=20
unit	Unit	0..1	ref	This is the physical unit of the Physical values for which the CompuMethod applies. <b>Tags:</b> xml.sequenceOffset=30

**Table A.7: CompuMethod**

Class	DataConstr			
<b>Package</b>	M2::MSR::AsamHdo::Constraints::GlobalConstraints			
<b>Note</b>	This meta-class represents the ability to specify constraints on data. <b>Tags:</b> atp.recommendedPackage=DataConstrs			
<b>Base</b>	<i>ARElement, ARObject, AtpBlueprint, AtpBlueprintable, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
Attribute	Type	Mult.	Kind	Note
dataConstrRule	DataConstrRule	*	aggr	This is one particular rule within the data constraints. <b>Tags:</b> xml.roleElement=true xml.roleWrapperElement=true xml.sequenceOffset=30 xml.typeElement=false xml.typeWrapperElement=false

**Table A.8: DataConstr**

Class	ImplementationDataType			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ImplementationDataTypes			
<b>Note</b>	Describes a reusable data type on the implementation level. This will typically correspond to a typedef in C-code. <b>Tags:</b> atp.recommendedPackage=ImplementationDataTypes			
<b>Base</b>	<i>ARElement, ARObject, AbstractImplementationDataType, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, AutosarDataType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
Attribute	Type	Mult.	Kind	Note
dynamicArraySizeProfile	String	0..1	attr	Specifies the profile which the array will follow in case this data type is a variable size array.
isStructWithOptionalElement	Boolean	0..1	attr	This attribute is only valid if the attribute category is set to STRUCTURE.  If set to True, this attribute indicates that the ImplementationDataType has been created with the intention to define at least one element of the structure as optional.





Class	ImplementationDataType			
subElement (ordered)	ImplementationDataTypeElement	*	aggr	<p>Specifies an element of an array, struct, or union data type.</p> <p>The aggregation of ImplementationDataTypeElement is subject to variability with the purpose to support the conditional existence of elements inside a ImplementationDataType representing a structure.</p> <p><b>Stereotypes:</b> atpVariation  <b>Tags:</b>vh.latestBindingTime=preCompileTime</p>
symbolProps	SymbolProps	0..1	aggr	<p>This represents the SymbolProps for the ImplementationDataType.</p> <p><b>Stereotypes:</b> atpSplittable  <b>Tags:</b>atp.Splitkey=symbolProps.shortName</p>
typeEmitter	NameToken	0..1	attr	<p>This attribute is used to control which part of the AUTOSAR toolchain is supposed to trigger data type definitions.</p>

**Table A.9: ImplementationDataType**

Class	InterpolationRoutineMappingSet			
Package	M2::AUTOSARTemplates::SWComponentTemplate::MeasurementAndCalibration::InterpolationRoutineMappingSet			
Note	<p>This meta-class specifies a set of interpolation routine mappings.</p> <p><b>Tags:</b>atp.recommendedPackage=InterpolationRoutineMappingSets</p>			
Base	ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable			
Attribute	Type	Mult.	Kind	Note
interpolationRoutineMapping	InterpolationRoutineMapping	*	aggr	<p>This specifies one particular mapping of recordlayout and its matching interpolationRoutines.</p>

**Table A.10: InterpolationRoutineMappingSet**

Class	Keyword			
Package	M2::AUTOSARTemplates::CommonStructure::StandardizationTemplate::Keyword			
Note	<p>This meta-class represents the ability to predefine keywords which may subsequently be used to construct names following a given naming convention, e.g. the AUTOSAR naming conventions.</p> <p>Note that such names is not only shortName. It could be symbol, or even longName. Application of keywords is not limited to particular names.</p>			
Base	ARObject, Identifiable, MultilanguageReferrable, Referrable			
Attribute	Type	Mult.	Kind	Note
abbrName	NameToken	1	attr	<p>This attribute specifies an abbreviated name of a keyword. This abbreviation may e.g. be used for constructing valid shortNames according to the AUTOSAR naming conventions.</p> <p>Unlike shortName, it may contain any name token. E.g. it may consist of digits only.</p>
classification	NameToken	*	attr	<p>This attribute allows to attach classification to the Keyword such as MEAN, ACTION, CONDITION, INDEX, PREPOSITION</p>

**Table A.11: Keyword**

<b>Class</b>	<b>ModeDeclarationGroup</b>			
<b>Package</b>	M2::AUTOSARTemplates::CommonStructure::ModeDeclaration			
<b>Note</b>	A collection of Mode Declarations. Also, the initial mode is explicitly identified. <b>Tags:</b> atp.recommendedPackage=ModeDeclarationGroups			
<b>Base</b>	<i>ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
initialMode	ModeDeclaration	0..1	ref	The initial mode of the ModeDeclarationGroup. This mode is active before any mode switches occurred.
mode Declaration	ModeDeclaration	*	aggr	The ModeDeclarations collected in this ModeDeclaration Group. <b>Stereotypes:</b> atpVariation <b>Tags:</b> vh.latestBindingTime=blueprintDerivationTime
modeManager ErrorBehavior	ModeErrorBehavior	0..1	aggr	This represents the ability to define the error behavior expected by the mode manager in case of errors on the mode user side (e.g. terminated mode user).
modeTransition	ModeTransition	*	aggr	This represents the available ModeTransitions of the ModeDeclarationGroup
modeUserError Behavior	ModeErrorBehavior	0..1	aggr	This represents the definition of the error behavior expected by the mode user in case of errors on the mode manager side (e.g. terminated mode manager).
onTransition Value	PositiveInteger	0..1	attr	The value of this attribute shall be taken into account by the RTE generator for programmatically representing a value used for the transition between two statuses.

**Table A.12: ModeDeclarationGroup**

<b>Class</b>	<b>ModeSwitchInterface</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
<b>Note</b>	A mode switch interface declares a ModeDeclarationGroupPrototype to be sent and received. <b>Tags:</b> atp.recommendedPackage=PortInterfaces			
<b>Base</b>	<i>ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, PortInterface, Referrable</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
modeGroup	ModeDeclarationGroup Prototype	0..1	aggr	The ModeDeclarationGroupPrototype of this mode interface.

**Table A.13: ModeSwitchInterface**

<b>Class</b>	<b>NvBlockSwComponentType</b>			
<b>Package</b>	M2::AUTOSARTemplates::SWComponentTemplate::Components			
<b>Note</b>	The NvBlockSwComponentType defines non volatile data which data can be shared between Sw ComponentPrototypes. The non volatile data of the NvBlockSwComponentType are accessible via provided and required ports. <b>Tags:</b> atp.recommendedPackage=SwComponentTypes			
<b>Base</b>	<i>ARElement, ARObject, AtomicSwComponentType, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, Sw ComponentType</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>





Class	NvBlockSwComponentType			
bulkNvDataDescriptor	BulkNvDataDescriptor	*	aggr	This aggregation formally defines the bulk Nv Blocks that are provided to the application software by the enclosing NvBlockSwComponentType.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=bulkNvDataDescriptor.shortName, bulkNvDataDescriptor.variationPoint.shortLabel vh.latestBindingTime=preCompileTime
nvBlockDescriptor	NvBlockDescriptor	*	aggr	Specification of the properties of exactly one NVRAM Block.  <b>Stereotypes:</b> atpSplittable; atpVariation <b>Tags:</b> atp.Splitkey=nvBlockDescriptor.shortName, nvBlockDescriptor.variationPoint.shortLabel vh.latestBindingTime=preCompileTime

**Table A.14: NvBlockSwComponentType**

Class	SenderReceiverInterface			
Package	M2::AUTOSARTemplates::SWComponentTemplate::PortInterface			
Note	A sender/receiver interface declares a number of data elements to be sent and received. <b>Tags:</b> atp.recommendedPackage=PortInterfaces			
Base	ARElement, ARObject, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, DataInterface, Identifiable, MultilanguageReferrable, PackageableElement, PortInterface, Referrable			
Attribute	Type	Mult.	Kind	Note
dataElement	VariableDataPrototype	*	aggr	The data elements of this SenderReceiverInterface.
invalidationPolicy	InvalidationPolicy	*	aggr	InvalidationPolicy for a particular dataElement
metaDataItemSet	MetaDataItemSet	*	aggr	This aggregation defines fixed sets of meta-data items associated with dataElements of the enclosing SenderReceiverInterface

**Table A.15: SenderReceiverInterface**

Class	ServiceSwComponentType			
Package	M2::AUTOSARTemplates::SWComponentTemplate::Components			
Note	ServiceSwComponentType is used for configuring services for a given ECU. Instances of this class are only to be created in ECU Configuration phase for the specific purpose of the service configuration. <b>Tags:</b> atp.recommendedPackage=SwComponentTypes			
Base	ARElement, ARObject, AtomicSwComponentType, AtpBlueprint, AtpBlueprintable, AtpClassifier, AtpType, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable, SwComponentType			
Attribute	Type	Mult.	Kind	Note
–	–	–	–	–

**Table A.16: ServiceSwComponentType**

<b>Class</b>	<b>SwAddrMethod</b>			
<b>Package</b>	M2::MSR::DataDictionary::AuxillaryObjects			
<b>Note</b>	Used to assign a common addressing method, e.g. common memory section, to data or code objects. These objects could actually live in different modules or components. <b>Tags:</b> atp.recommendedPackage=SwAddrMethods			
<b>Base</b>	<i>ARElement, ARObject, AtpBlueprint, AtpBlueprintable, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
memory Allocation KeywordPolicy	MemoryAllocation KeywordPolicyType	0..1	attr	Enumeration to specify the name pattern of the Memory Allocation Keyword.
option	Identifier	*	attr	This attribute introduces the ability to specify further intended properties of the MemorySection in with the related objects shall be placed.  These properties are handled as to be selected. The intended options are mentioned in the list.  In the Memory Mapping configuration, this option list is used to determine an appropriate MemMapAddressing ModeSet.
section Initialization Policy	SectionInitialization PolicyType	0..1	attr	Specifies the expected initialization of the variables (inclusive those which are implementing VariableData Prototypes). Therefore this is an implementation constraint for initialization code of BSW modules (especially RTE) as well as the start-up code which initializes the memory segment to which the AutosarData Prototypes referring to the SwAddrMethod's are later on mapped.  If the attribute is not defined it has the identical semantic as the attribute value "INIT"
sectionType	MemorySectionType	0..1	attr	Defines the type of memory sections which can be associated with this addressing method.

**Table A.17: SwAddrMethod**

<b>Class</b>	<b>SwRecordLayout</b>			
<b>Package</b>	M2::MSR::DataDictionary::RecordLayout			
<b>Note</b>	Defines how the data objects (variables, calibration parameters etc.) are to be stored in the ECU memory. As an example, this definition specifies the sequence of axis points in the ECU memory. Iterations through axis values are stored within the sub-elements swRecordLayoutGroup. <b>Tags:</b> atp.recommendedPackage=SwRecordLayouts			
<b>Base</b>	<i>ARElement, ARObject, CollectableElement, Identifiable, MultilanguageReferrable, PackageableElement, Referrable</i>			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
swRecord LayoutGroup	<a href="#">SwRecordLayoutGroup</a>	0..1	aggr	This is the top level record layout group. <b>Tags:</b> xml.roleElement=true xml.roleWrapperElement=false xml.sequenceOffset=20 xml.typeElement=false xml.typeWrapperElement=false

**Table A.18: SwRecordLayout**

<b>Class</b>	<b>SwRecordLayoutGroup</b>			
<b>Package</b>	M2::MSR::DataDictionary::RecordLayout			
<b>Note</b>	Specifies how a record layout is set up. Using SwRecordLayoutGroup it recursively models iterations through axis values. The subelement swRecordLayoutGroupContentType may reference other Sw RecordLayouts, SwRecordLayoutVs and SwRecordLayoutGroups for the modeled record layout.			
<b>Base</b>	ARObject			
<b>Attribute</b>	<b>Type</b>	<b>Mult.</b>	<b>Kind</b>	<b>Note</b>
category	AsamRecordLayout Semantics	0..1	attr	<p>This attribute denotes the semantics in particular in terms of the corresponding A2L-Keyword. This is to support the mapping of the more general record layouts in AUTOSAR/MSR to the specific A2I keywords.</p> <p>It is possible to express the specific semantics of A2I recordlayout keywords in swRecordlayoutGroup but not always vice versa. Therefore the mapping is provided in this optional attribute.</p> <p><b>Tags:</b>xml.sequenceOffset=5</p>
desc	MultiLanguageOverview Paragraph	0..1	aggr	<p>This aggregation allows a brief description about the particular record layout group which can help to identify the entry. In-depth documentation should be added to the introduction of the surrounding record layout.</p> <p><b>Tags:</b>xml.sequenceOffset=20</p>
shortLabel	Identifier	0..1	attr	<p>This attribute specifies a name which can be used e.g. when ECU code is generated from the record layout group.</p> <p><b>Tags:</b>xml.sequenceOffset=3</p>
swGenericAxis ParamType	SwGenericAxisParam Type	0..1	ref	<p>This association allows to specify record layout groups to iterate over generic axis parameters. For example, if the generic axis parameter is an array, the record layout group will iterate over this array.</p> <p>Obviously, the axis referred to by swRecordLayoutGroup Axis shall be a generic axis in which the referenced Sw GenericAxisType is aggregated.</p> <p><b>Tags:</b>xml.sequenceOffset=50</p>
swRecord Layout Component	Identifier	0..1	attr	<p>This attribute is used to denote the component to which the group in question applies. Thus, the record layout supports structured objects.</p> <p>This secures independence from the sequence of components, because they can be referred to via name.</p> <p><b>Tags:</b>xml.sequenceOffset=90</p>
swRecord LayoutGroup Axis	AxisIndexType	0..1	attr	<p>This attribute specifies the iteration axis number for a Sw RecordLayoutGroup. The current record layout group then refers exactly to the axis with this number. This means that the values are taken by iterating along the thus referenced axis.</p> <p><b>Tags:</b>xml.sequenceOffset=30</p>
swRecord LayoutGroup ContentType	SwRecordLayoutGroup Content	0..1	aggr	<p>This is the contents of the recordLayout which is produced for every step of iteration.</p> <p><b>Tags:</b>        xml.roleElement=false        xml.roleWrapperElement=false        xml.sequenceOffset=100        xml.typeElement=false        xml.typeWrapperElement=false</p>







Class	SwRecordLayoutGroup			
swRecordLayoutGroupFrom	RecordLayoutIteratorPoint	0..1	attr	<p>This attribute specifies the iterator index for the point in the axis from which a record layout group is commenced. Negative values are also possible, i.e. the value -4 counts from the fourth value from the end. If this property is missing, the iteration starts with '1'.</p> <p><b>Tags:</b>xml.sequenceOffset=60</p>
swRecordLayoutGroupIndex	NameToken	0..1	attr	<p>This attribute attributes a symbolic name to the iterator of the superimposed record layout group. This can be referenced as a loop index in contained SwRecordLayoutV elements.</p> <p><b>Tags:</b>xml.sequenceOffset=40</p>
swRecordLayoutGroupStep	Integer	0..1	attr	<p>This attribute specifies the step width for the iterator index that is used for the current record layout group.</p> <p>Note that negative values are also possible, in case of the starting point is higher than the endpoint. If the property is missing, the step width is "1".</p> <p><b>Tags:</b>xml.sequenceOffset=80</p>
swRecordLayoutGroupTo	RecordLayoutIteratorPoint	0..1	attr	<p>This attribute specifies the end point for the iteration. Negative values are also possible, i.e. the value -4 counts up to the fourth value from the end. If this property is not there, the iteration ends at "-1" which is the last element.</p> <p>Note that depending on the arraySizeSemantics of SwTextProps the iteration ends at the value specified in swMaxTextSize.</p> <p><b>Tags:</b>xml.sequenceOffset=70</p>

**Table A.19: SwRecordLayoutGroup**

Class	SwRecordLayoutV			
<b>Package</b>	M2::MSR::DataDictionary::RecordLayout			
<b>Note</b>	<p>This element specifies which values are stored for the current SwRecordLayoutGroup. If no baseType is present, the SwBaseType referenced initially in the parent SwRecordLayoutGroup is valid. The specification of swRecordLayoutVAxis gives the axis of the values which shall be stored in accordance with the current record layout SwRecordLayoutGroup. In swRecordLayoutVProp one can specify the information which shall be stored.</p>			
<b>Base</b>	ARObject			
Attribute	Type	Mult.	Kind	Note
baseType	SwBaseType	0..1	ref	<p>This association allows to refer to a base type in case a specific encoding is intended. If no base type is referred, the base type referenced initially in the corresponding DataPrototype is to be used.</p> <p><b>Tags:</b>xml.sequenceOffset=30</p>
category	AsamRecordLayoutSemantics	0..1	attr	<p>This attribute denotes the semantics in particular in terms of the corresponding A2L-Keyword. This is to support the mapping of the more general record layouts in AUTOSAR/MSR to the specific A2I keywords. It is possible to express the specific semantics of A2I RecordLayout keywords in swRecordLayoutGroup but not always vice versa. Therefore the mapping is provided in this optional attribute.</p> <p><b>Tags:</b>xml.sequenceOffset=5</p>





Class	SwRecordLayoutV			
desc	MultiLanguageOverviewParagraph	0..1	aggr	This aggregation allows for a brief description about the particular record layout value which can help to identify the entry. In-depth documentation should be added to the introduction of the surrounding record layout. <b>Tags:</b> xml.sequenceOffset=20
shortLabel	Identifier	0..1	attr	This attribute specifies a name which can be used e.g. when ECU code is generated from the record layout value. <b>Tags:</b> xml.sequenceOffset=3
swGenericAxisParamType	SwGenericAxisParamType	0..1	ref	This association supports the case that a value from a generic axis definition shall be stored. This value is denoted by a particular generic axis parameter type. <b>Tags:</b> xml.sequenceOffset=70
swRecordLayoutVAxis	AxisIndexType	0..1	attr	This attribute gives the index of the axis of which values that are stored in the record. swRecordVIndex refers to the symbolic names of the iterators for which the axis value shall be stored in the record.  In case of nested iterators (mainly for multidimensional objects) the iterator names are specified as whitespace-separated names.  These symbolic names relate to swRecordLayoutGroupIndex. The iterators are processed from left to right in such a manner that they symbolize the loop index from the outside to the inside.  It is considered an error if more components are specified than axes exist in the related ApplicationDataType. <b>Tags:</b> xml.sequenceOffset=40
swRecordLayoutVFixValue	Integer	0..1	attr	This attribute specifies the filler character for the current record layout, in the form of hex digits. It is also used to specify the fix value for e.g. FIXRIGHTDIFF. <b>Tags:</b> xml.sequenceOffset=80
swRecordLayoutVIndex	NameTokens	0..1	attr	The symbolic value for iteration, or the symbolic values separated by whitespaces, refer to the symbolic values given in swRecordLayoutGroupIndex .  The iterators are processed from left to right, in such a manner that they symbolize the loop index from the outside to the inside.  It is considered an error if the record layout is referenced by an entity which has less number of axes than index names referenced here. <b>Tags:</b> xml.sequenceOffset=60
swRecordLayoutVProp	NameToken	0..1	attr	This attribute describes the kind of values to be stored. More details see below. The standardized values foreseen for this attribute are defined in [TPS_SWCT_01489]. <b>Tags:</b> xml.sequenceOffset=50

**Table A.20: SwRecordLayoutV**