

Document Title	Specification of CAN Driver
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	11

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R24-11

Document Change History			
Date	Release	Changed by	Description
2024-11-27	R24-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Minor corrections / clarifications / editorial changes • Added Change history of AUTOSAR traceable items • Removed SWS_Can_CONSTR_00508 • Change the Header file name [SWS_Can_00234], [SWS_Can_00235]
2023-11-23	R23-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Support for selective WakeUp via CAN-Controller • Changed document name to include "CP" • Added information about automatic handle IDs to configuration • Converted to \LaTeX
2022-11-24	R22-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • CanXL requirements were added • Minor corrections / clarifications / editorial changes





2021-11-25	R21-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Timestamp requirements were added • Removed [SWS_Can_00485] and ECUC_Can_00466 • Changed the scope of CanIndex from local to ECU global • Minor corrections / clarifications / editorial changes
2020-11-30	R20-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Removed Pretended Networking • CanDrv_CONSTR_00512 was added • Updated ECUC_Can_00471 descriptor • Add new parameter: CanObjectPayloadLength • A note was added to [SWS_Can_00403] • [SWS_Can_00222] was changed • Minor corrections / clarifications / editorial changes • Added Reporting of CAN Error Types chapter. Requirement [SWS_Can_91021] was added. • CanEnableSecurityEventReporting container was added
2019-11-28	R19-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Minor corrections / clarifications / editorial changes; • Changed Document Status from Final to published





2018-10-31	4.4.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • MCALMulticoreDistribution (CONC_639) as DRAFT • BusMirroring (CONC_634) • Header file cleanup • Replaced ChannelId with ShortName for multiple main functions ([SWS_Can_00441] and [SWS_Can_00442]) • Minor corrections / clarifications / editorial changes; For details please refer to the ChangeDocumentation
2017-12-08	4.3.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • Added Support to Tx/RxProcessing per Controller • Incompatible return types are corrected to E_NOT_OK and E_OK • Can_StateTransitionType is removed • Runtime error is added and Rephrased from "default error" to "development error" • [SWS_Can_00504] and [SWS_Can_00416] is modified
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • Added API's Can_GetControllerErrorState, Can_Delnit, Can_GetControllerMode, Types Can_ControllerStateType, Can_ErrorStateType and new requirements Can_91002 to [SWS_Can_91018]. • Modified minimum range of MainFunctionPeriod parameters and replaced Word "DLC" by "Data Length". • Removed unresolved BSW SRS references, definition of the "configuration variants", Can_StateTransitionType, WAKEUP related, Can_ChangeBaudrate API support, MISRA references, requirements related to module



△

			<p style="text-align: center;">△</p> <p>initialization check for scheduled functions.</p> <ul style="list-style-type: none"> • Small improvements and minor bug-fixes.
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • CanHwObjectCount parameter multiplicity is changed to 1 • Error Classification has changed • Improved 8.4.2 Enabling/Disabling wakeup notification • DET has been renamed from "Development Error Tracer" to "Default Error Tracer" • Small improvements and minor bug-fixes
2014-10-31	4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • Full CAN FD Support (incl. Trigger Transmit) • Removed CanIf_CancelTxConfirmation • Time-out and wake up event handling • Small improvements and minor bug-fixes
2014-03-31	4.1.3	AUTOSAR Release Management	<ul style="list-style-type: none"> • Added new requirements [SWS_Can_00497], [SWS_Can_00498], [SWS_Can_00499], and [SWS_Can_00496] • Modified requirements ECUC_Can_00445, [SWS_Can_00487], [SWS_Can_00469], [SWS_Can_00475], and [SWS_Can_00479] • Removed requirements [SWS_Can_00476], and [SWS_Can_00414]

▽



2013-10-31	4.1.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Removed the 'Timing' row from the API table(s) of chapter 'Scheduled Functions' • Modified range of Can_IdType and CAN_CHANGE_BAUDRATE_SUPPORT to CAN_CHANGE_BAUDRATE_API • Editorial changes • Removed chapter(s) on change documentation
2013-03-15	4.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Added support for Pretended Networking • Add DET error CAN_E_PARAM_BAUDRATE to the error classification table • Corrected the sequence for EcuM_SetWakeupEvent in section 7.7 • Updated Can_CheckWakeup as Configurable API • Added support to have more than one CanMailbox per HRH in order to receive back to back messages • Can_ChangeBaudrate and Can_CheckBaudrate API are deprecated and will be replaced by Can_SetBaudrate API
2011-12-22	4.0.3	AUTOSAR Administration	<ul style="list-style-type: none"> • Added [SWS_Can_00461] to capture - Detection of Power ON of controller due to CAN communication • Changed Can_InitController to Can_ChangeBaudrate • Added Can_CheckBaudrate • Added sub container CanMainFunctionRWPeriods to CanGeneral • Changed CanHardwareObject container • Updated description of ECUC_Can_00321





			<ul style="list-style-type: none"> • Changed Can_SetControllerMode in [SWS_Can_00370] to Can_Mainfunction_Mode • Added CanControllerDefaultBaudrate parameter • Updated description of [SWS_Can_00279] • Updated description of CAN321 • Added [SWS_Can_00445], [SWS_Can_00446] and [SWS_Can_00447] to capture Possible loss of CAN Wakeup • Changed "Module Short Name" (MODULENAME) to "Module Abbreviation" (MAB)
2009-12-18	4.0.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Modified [SWS_Can_00111] to correct the "Version Checking" information • Added new requirements [SWS_Can_00435] to [SWS_Can_00440] to introduce Can_GeneralTypes.h. • Added new requirements [SWS_Can_00441] and [SWS_Can_00442] to introduce multiple poll cycles • Added new requirements [SWS_Can_00443] and [SWS_Can_00444] to provide an optional callback on every reception of a LPDU





2010-02-02	3.1.4	AUTOSAR Administration	<ul style="list-style-type: none"> • General improvements of requirements in preparation of CT-development. • Can_MainFunction_Mode added to support asynchronous controller state change • Limited number of supported message objects removed • Description of CAN controller state transitions improved • Debugging concept added • Legal disclaimer revised
2008-08-13	3.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Legal disclaimer revised
2008-02-01	3.0.2	AUTOSAR Administration	<ul style="list-style-type: none"> • Table formatting corrected
2007-12-21	3.0.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Tables generated from UML-models, • General improvements of requirements in preparation of CT-development. • Functions Can_MainFunction_Write, Can_MainFunction_Read, Can_MainFunction_BusOff and Can_MainFunction_WakeUp changed to scheduled functions • Cycle Parameters added for new scheduled functions • Wakeup concept added (Chapter REF_Ref395085489 \r \h) and addition of function Can_Cbk_CheckWakeup • Document meta information extended • Small layout adaptations made



△

2007-01-24	2.1.15	AUTOSAR Administration	<ul style="list-style-type: none"> • File structure reworked (chapter REF _Ref158085666 \r \h) • Removed return value CAN_WAKEUP in function Can_SetControllerMode • Replaced by CAN_NOT_OK • Renamed CanIf_ControllerWakeup to CanIf_SetWakeupEvent • Reworked development errors (chapter REF _Ref182101189 \r \h) • Removed implementation specific description in Can_Write • Changed timing of cyclic functions to "fixed cyclic" • Reworked "Scope" for all configuration variables (chapter REF _Ref104709655 \r \h) • Legal disclaimer revised • Release notes added • "Advice for users" revised • "Revision Information" added
2006-05-16	2.0	AUTOSAR Administration	<ul style="list-style-type: none"> • Document structure adapted to common Release 2.0 SWS Template • clarified development and production error handling and function abortion • multiplexed transmission and TX cancellation • version check • configuration description according template • individual main functions for RX TX and status
2005-05-31	1.0	AUTOSAR Administration	<ul style="list-style-type: none"> • Initial release

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Contents

1	Introduction and functional Overview	14
2	Acronyms and Abbreviations	15
2.1	Priority Inversion	16
2.2	CAN Hardware Unit	18
3	Related Documentation	19
3.1	Related specification	19
4	Constraints and assumptions	20
4.1	Limitations	20
4.2	Applicability to car domains	20
5	Dependencies to other modules	21
5.1	Static Configuration	21
5.2	Driver Services	21
5.3	System Services	22
5.4	Can module Users	22
5.5	File Structure	22
6	Requirements Tracing	23
7	Functional Specification	27
7.1	Driver Scope	27
7.2	Driver State Machine	28
7.3	CAN Controller State Machine	29
7.3.1	CAN Controller State Description	30
7.3.2	CAN Controller State Transitions	31
7.3.3	State transition caused by function Can_Init	32
7.3.4	State transition caused by function Can_SetBaudrate	32
7.3.5	State transition caused by function Can_SetControllerMode	33
7.3.6	State transition caused by Hardware Events	35
7.3.7	State transition caused by function Can_DelInit	37
7.4	Can module/Controller Initialization	37
7.5	L-PDU transmission	39
7.5.1	Priority Inversion	40
7.5.2	Transmit Data Consistency	42
7.6	L-PDU reception	43
7.6.1	Receive Data Consistency	43
7.7	Wakeup Concept	45
7.8	CAN Controller with selective wakeup functionality	46
7.9	Notification concept	46
7.10	Reentrancy issues	47
7.11	Hardware Timestamping	47
7.12	Error classification	48

7.12.1	Development Errors	48
7.12.2	Runtime Errors	49
7.12.3	Production Errors	49
7.12.4	Extended Production Errors	49
7.12.5	Return Value	49
7.13	CAN FD Support	50
7.14	CAN XL Extension	50
7.15	Reporting of CAN Error Types	51
8	API Specification	52
8.1	Imported Types	52
8.2	Type definitions	52
8.2.1	Can_ConfigType	52
8.2.2	Can_PduType	53
8.2.3	Can_IdType	53
8.2.4	Can_HwHandleType	54
8.2.5	Can_HwType	54
8.2.6	Extension to Std_ReturnType	55
8.2.7	Can_ErrorStateType	55
8.2.8	Can_ControllerStateType	55
8.2.9	Can_ErrorType	56
8.2.10	Can_TimeStampType	57
8.3	Function Definitions	57
8.3.1	Services affecting the complete hardware unit	57
8.3.1.1	Can_Init	57
8.3.1.2	Can_GetVersionInfo	58
8.3.1.3	Can_Delnit	59
8.3.2	Services affecting one single CAN Controller	60
8.3.2.1	Can_SetBaudrate	60
8.3.2.2	Can_SetControllerMode	61
8.3.2.3	Can_DisableControllerInterrupts	63
8.3.2.4	Can_EnableControllerInterrupts	64
8.3.2.5	Can_CheckWakeup	65
8.3.2.6	Can_GetControllerErrorState	66
8.3.2.7	Can_GetControllerMode	67
8.3.2.8	canGetControllerRxErrorCounter	68
8.3.2.9	Can_GetControllerTxErrorCounter	69
8.3.2.10	Can_GetCurrentTime	71
8.3.2.11	Can_EnableEgressTimeStamp	72
8.3.2.12	Can_GetEgressTimeStamp	73
8.3.2.13	Can_GetIngressTimeStamp	75
8.3.3	Services affecting a Hardware Handle	76
8.3.3.1	Can_Write	76
8.4	Call-back notifications	79
8.4.1	Call-out function	79
8.4.2	Enabling/Disabling wakeup notification	80

8.5	Scheduled functions	80
8.5.1		81
8.5.1.1	Can_MainFunction_Write	81
8.5.1.2	Can_MainFunction_Read	82
8.5.1.3	Can_MainFunction_BusOff	83
8.5.1.4	Can_MainFunction_Wakeup	83
8.5.1.5	Can_MainFunction_Mode	84
8.6	Expected Interfaces	84
8.6.1	Mandatory Interfaces	84
8.6.2	Optional Interfaces	85
8.6.3	Configurable Interfaces	86
9	Sequence diagrams	87
9.1	Interaction between Can and CanIf module	87
9.2	Wakeup sequence	87
10	Configuration specification	88
10.1	How to read this chapter	88
10.2	Containers and configuration parameters	88
10.2.1	Can	96
10.2.2	CanGeneral	96
10.2.3	CanController	103
10.2.4	CanControllerBaudrateConfig	110
10.2.5	CanControllerFdBaudrateConfig	113
10.2.6	CanPartialNetwork	116
10.2.7	CanPnFrameDataMaskSpec	119
10.2.8	CanHardwareObject	120
10.2.9	CanHwFilter	126
10.2.10	CanConfigSet	127
10.2.11	CanMainFunctionRWPeriods	128
10.2.12	CanTTController	129
10.2.13	CanTTHardwareObjectTrigger	138
10.2.14	CanXLGeneral	142
10.2.15	CanXLController	143
10.2.16	CanXLHardwareObject	146
10.2.17	CanXLHwFilter	147
10.2.18	CanXLBaudrateConfig	147
10.2.19	CanXLEthEgressFifo	152
10.2.20	CanXLEthIngressFifo	154
11	Not applicable requirements	157
A	Change history of AUTOSAR traceable items	158
A.1	Traceable item history of this document according to AUTOSAR Release R24-11	158
A.1.1	Added Constraints in R24-11	158
A.1.2	Changed Constraints in R24-11	158

A.1.3	Deleted Constraints in R24-11	158
A.1.4	Added Specification Items in R24-11	158
A.1.5	Changed Specification Items in R24-11	158
A.1.6	Deleted Specification Items in R24-11	159

1 Introduction and functional Overview

This specification specifies the functionality, API and the configuration of the AUTOSAR Basic Software module CAN Driver (called "Can module" in this document).

The Can module is part of the lowest layer, performs the hardware access and offers a hardware independent API to the upper layer.

The only upper layer that has access to the Can module is the CanIf module (see also [[SRS_SPAL_12092](#)]).

The Can module provides services for initiating transmissions and calls the callback functions of the CanIf module for notifying events, independently from the hardware.

Furthermore, it provides services to control the behavior and state of the CAN controllers that are belonging to the same CAN Hardware Unit.

Several CAN controllers can be controlled by a single Can module as long as they belong to the same CAN Hardware Unit.

For a closer description of CAN controller and CAN Hardware Unit see chapter Acronyms and abbreviations and a diagram in [1].

2 Acronyms and Abbreviations

Abbreviation / Acronym:	Description:
CAN controller	A CAN controller serves exactly one physical channel.
CAN Hardware Unit	A CAN Hardware Unit may consists of one or multiple CAN controllers of the same type and one or multiple CAN RAM areas. The CAN Hardware Unit is either on-chip, or an external device. The CAN Hardware Unit is represented by one CAN driver.
CAN L-PDU	Data Link Layer Protocol Data Unit. Consists of Identifier, Data Length and Data (SDU). (see[2])
CAN L-SDU	Data Link Layer Service Data Unit. Data that is transported inside the L-PDU. (see[2])
DLC	Data Length Code (part of CAN message describes the SDU length)
Hardware Object	A CAN hardware object is defined as a PDU buffer inside the CAN RAM of the CAN hardware unit / CAN controller. A Hardware Object is defined as L-PDU buffer inside the CAN RAM of the CAN Hardware Unit.
Hardware Receive Handle (HRH)	The Hardware Receive Handle (HRH) is defined and provided by the CAN Driver. Each HRH typically represents just one hardware object. The HRH can be used to optimize software filtering.
Hardware Transmit Handle (HTH)	The Hardware Transmit Handle (HTH) is defined and provided by the CAN Driver. Each HTH typically represents just one or multiple hardware objects that are configured as hardware transmit buffer pool.
Inner Priority Inversion	Transmission of a high-priority L-PDU is prevented by the presence of a pending low-priority L-PDU in the same transmit hardware object.
ISR	Interrupt Service Routine
L-PDU Handle	The L-PDU handle is defined and placed inside the CanIf module layer. Typically each handle represents an L-PDU, which is a constant structure with information for Tx/Rx processing.
MCAL	Microcontroller Abstraction Layer
Outer Priority Inversion	A time gap occurs between two consecutive transmit L-PDUs. In this case a lower priority L-PDU from another node can prevent sending the own higher priority L-PDU. Here the higher priority L-PDU cannot participate in arbitration during network access because the lower priority L-PDU already won the arbitration.
Physical Channel	A physical channel represents an interface from a CAN controller to the CAN Network. Different physical channels of the CAN hardware unit may access different networks.
Priority	The Priority of a CAN L-PDU is represented by the CAN Identifier. The lower the numerical value of the identifier, the higher the priority.
SFR	Special Function Register. Hardware register that controls the controller behavior.
SPAL	Standard Peripheral Abstraction Layer

Table 2.1: Acronyms and Abbreviations

2.1 Priority Inversion

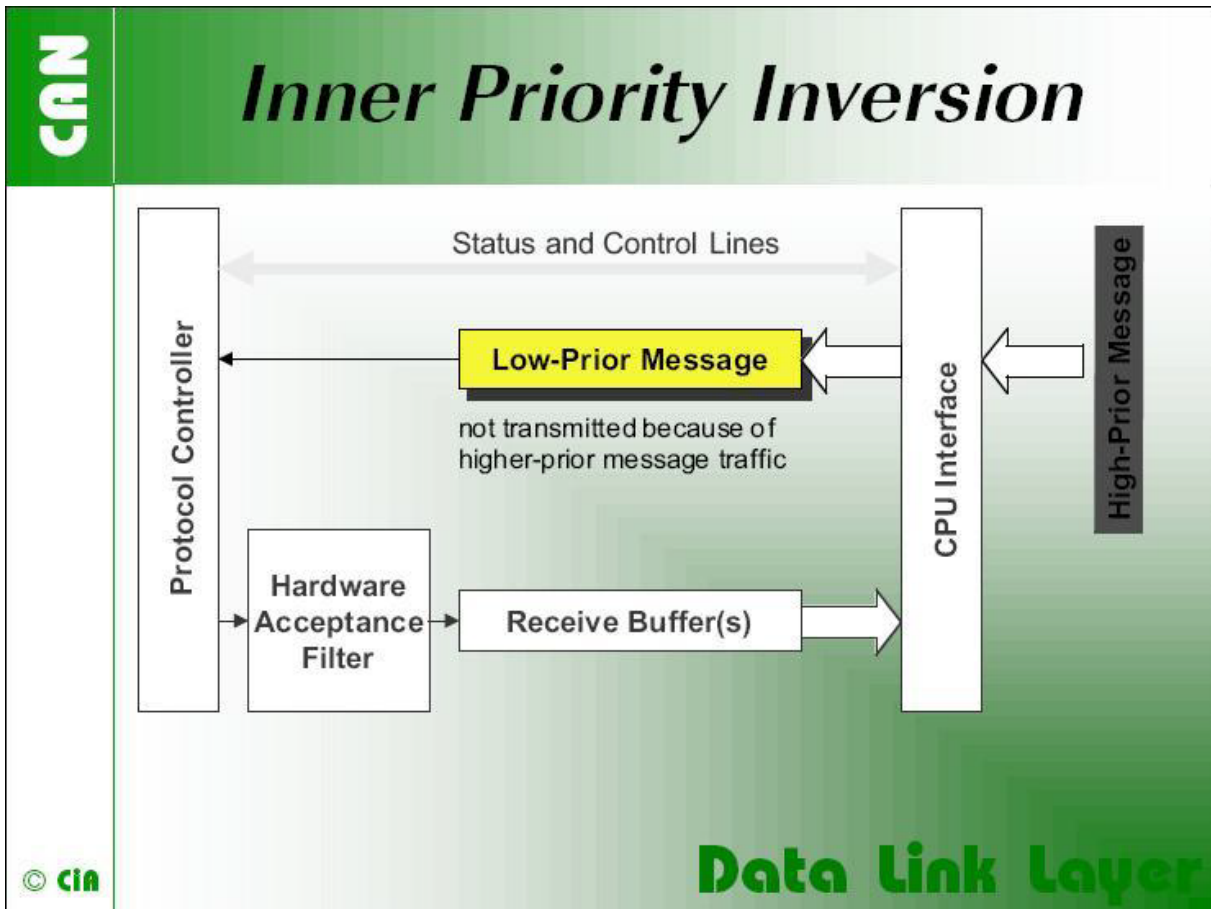


Figure 2.1: Inner Priority Inversion

"If only a single transmit buffer is used inner priority inversion may occur. Because of low priority a message stored in the buffer waits until the "traffic on the bus calms down". During the waiting time this message could prevent a message of higher priority generated by the same microcontroller from being transmitted over the bus."¹

¹Picture and text by CiA (CAN in Automation)

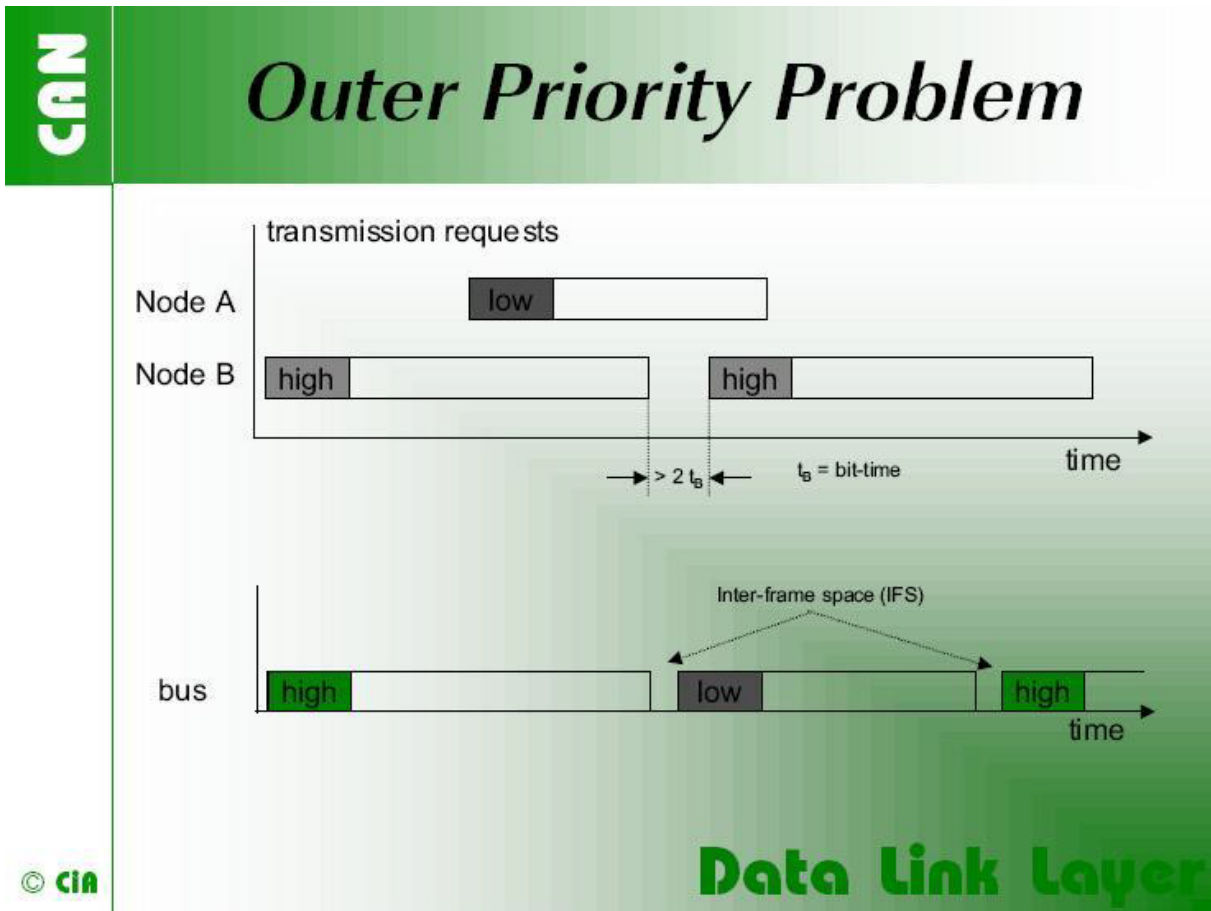


Figure 2.2: Outer Priority Inversion

"The problem of outer priority inversion may occur in some CAN implementations. Let us assume that a CAN node wishes to transmit a package of consecutive messages with high priority, which are stored in different message buffers. If the interframe space between these messages on the CAN network is longer than the minimum space defined by the CAN standard, a second node is able to start the transmission of a lower priority message. The minimum interframe space is determined by the Intermission field, which consists of 3 recessive bits. A message, pending during the transmission of another message, is started during the Bus Idle period, at the earliest in the bit following the Intermission field. The exception is that a node with a waiting transmission message will interpret a dominant bit at the third bit of Intermission as Start-of-Frame bit and starts transmission with the first identifier bit without first transmitting an SOF bit. The internal processing time of a CAN module has to be short enough to send out consecutive messages with the minimum interframe space to avoid the outer priority inversion under all the scenarios mentioned."²

²Text and image by CiA (CAN in Automation)

2.2 CAN Hardware Unit

The CAN Hardware Unit combines one or several CAN controllers, which may be located on-chip or as external standalone devices of the same type, with common or separate Hardware Objects.

Following figure shows a CAN Hardware Unit consisting of two CAN controllers connected to two Physical Channels:

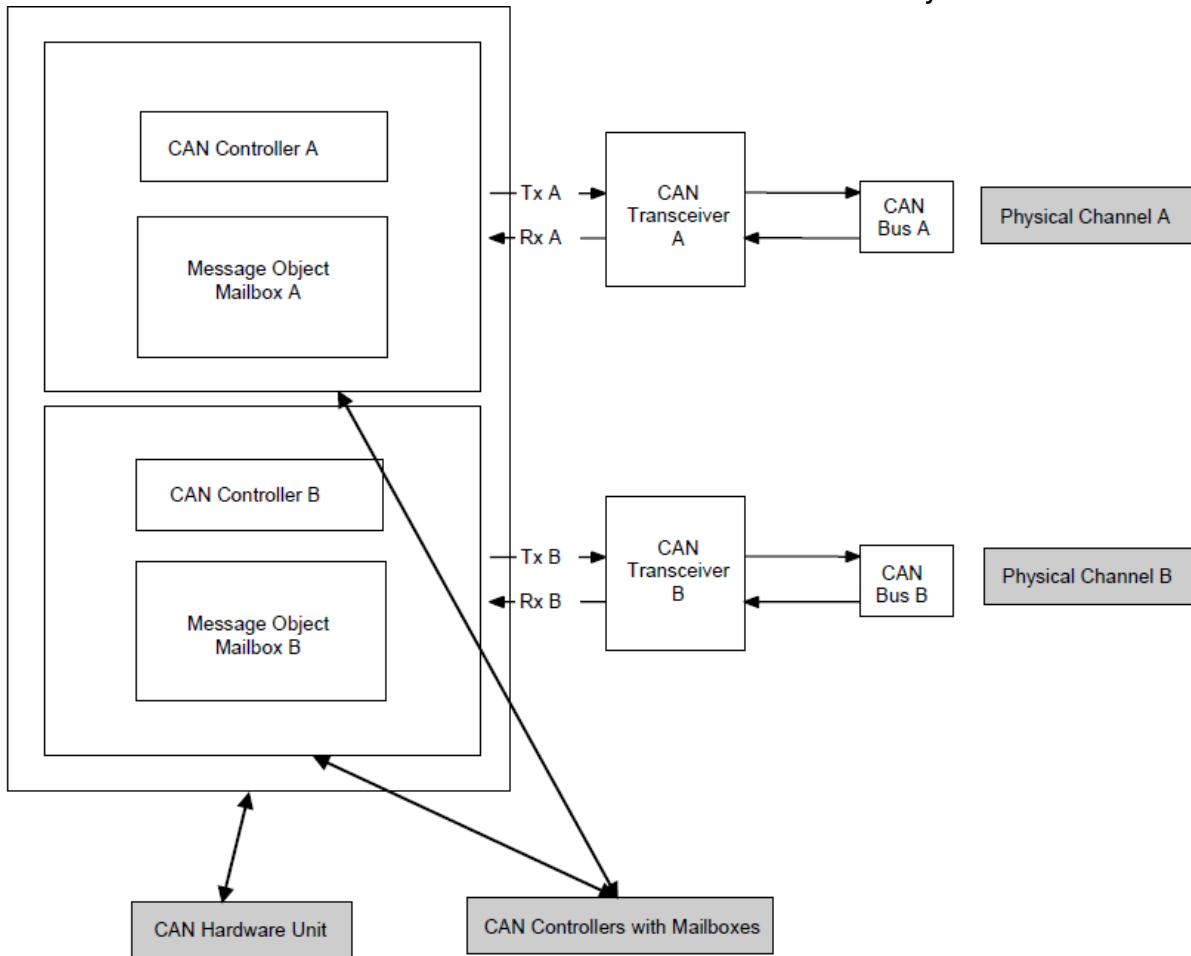


Figure 2.3: Physical Controller

3 Related Documentation

- [1] Specification of CAN Interface
AUTOSAR_CP_SWS_CANInterface
- [2] IEC: The Basic Model, IEC Norm
- [3] General Specification of Basic Software Modules
AUTOSAR_CP_SWS_BSWGeneral
- [4] Specification of MCU Driver
AUTOSAR_CP_SWS_MCUDriver
- [5] Specification of ECU State Manager
AUTOSAR_CP_SWS_ECUSTateManager
- [6] General Requirements on SPAL
AUTOSAR_CP_RS_SPALGeneral
- [7] CiA 610-1 version 1.0.0 (DSP) - CAN XL specifications and test plans - Part 1:
Data link layer and physical coding sub-layer requirements
<http://www.can-cia.org>
- [8] CiA 611-1 version 1.0.0 (DSP) - CAN XL higher layer functions - Part 1: Definition
of service data unit types
<http://www.can-cia.org>

3.1 Related specification

AUTOSAR provides a General Specification on Basic Software modules [3] (SWS BSW General), which is also valid for CAN Driver.

Thus, the specification SWS BSW General shall be considered as additional and required specification for CAN Driver.

4 Constraints and assumptions

4.1 Limitations

A CAN controller always corresponds to one physical channel. It is allowed to connect physical channels on bus side. Regardless the CanIf module will treat the concerned CAN controllers separately.

A few CAN hardware units support the possibility to combine several CAN controllers by using the CAN RAM, to extend the number of message objects for one CAN controller. These combined CAN controller are handled as one controller by the Can module.

The Can module does not support CAN remote frames.

[SWS_Can_00237]

Upstream requirements: [SRS_Can_01147](#)

[The Can module shall not transmit messages triggered by remote transmission requests.]

[SWS_Can_00236]

Upstream requirements: [SRS_Can_01147](#)

[The Can module shall initialize the CAN HW to ignore any remote transmission requests.]

4.2 Applicability to car domains

The Can module can be used for any application, where the CAN protocol is used.

5 Dependencies to other modules

5.1 Static Configuration

The configuration elements described in Chapter 10 can be referenced by other BSW modules for their configuration.

5.2 Driver Services

[SWS_Can_00238]

Upstream requirements: [SRS_BSW_00005](#)

[If the CAN controller is on-chip, the Can module shall not use any service of other drivers.]

[SWS_Can_00239]

Upstream requirements: [SRS_BSW_00377](#)

[The function Can_Init shall initialize all on-chip hardware resources that are used by the CAN controller. The only exception to this is the digital I/O pin configuration (of pins used by CAN), which is done by the port driver.]

[SWS_Can_00240] [The Mcu module (SPAL see [4]) shall configure register settings that are 'shared' with other modules.]

Implementation hint: The Mcu module shall be initialized before initializing the Can module.

[SWS_Can_00242]

Upstream requirements: [SRS_BSW_00005](#)

[If an off-chip CAN controller is used³, the Can module shall use services of other MCAL drivers (e.g. SPI).]

Implementation hint: If the Can module uses services of other MCAL drivers (e.g. SPI), it must be ensured that these drivers are up and running before initializing the Can module.

The sequence of initialization of different drivers is partly specified in [5].

³In this case the CAN driver is not any more part of the μ C abstraction layer but put part of the ECU abstraction layer. Therefore it is (theoretically) allowed to use any μ C abstraction layer driver it needs.

[SWS_Can_00244] [The Can module shall use the synchronous APIs of the underlying MCAL drivers and shall not provide callback functions that can be called by the MCAL drivers.]

Thus the type of connection between μ C and CAN Hardware Unit has only impact on implementation and not on the API.

5.3 System Services

[SWS_Can_00280] [In special hardware cases, the Can module shall poll for events of the hardware.]

[SWS_Can_00281] [The Can module shall use the OsCounter provided by the system service for timeout detection in case the hardware does not react in the expected time (hardware malfunction) to prevent endless loops.]

Implementation hint: The blocking time of the Can module function that is waiting for hardware reaction shall be shorter than the CAN main function (i.e. Can_MainFunction_Read) trigger period, because the CAN main functions can't be used for that purpose.

5.4 Can module Users

[SWS_Can_00058]

Upstream requirements: [SRS_SPAL_12092](#)

[The Can module interacts among other modules (eg. Default Error Tracer (DET), Ecu State Manager (ECUM)) with the CanIf module in a direct way. This document never specifies the actual origin of a request or the actual destination of a notification. The driver only sees the CanIf module as origin and destination.]

5.5 File Structure

[SWS_Can_00436] [Can_GeneralTypes.h shall contain all types and constants that are shared among the AUTOSAR CAN modules Can, CanIf and CanTrcv.]

6 Requirements Tracing

Requirement	Description	Satisfied by
[RS_Ids_00810]	Basic SW security events	[SWS_Can_91022] [SWS_Can_91023] [SWS_Can_91024]
[SRS_BSW_00005]	Modules of the μ C Abstraction Layer (MCAL) may not have hard coded horizontal interfaces	[SWS_Can_00238] [SWS_Can_00242]
[SRS_BSW_00007]	All Basic SW Modules written in C language shall conform to the MISRA C 2012 Standard.	[SWS_Can_00079]
[SRS_BSW_00101]	The Basic Software Module shall be able to initialize variables and hardware in a separate initialization function	[SWS_Can_00250]
[SRS_BSW_00159]	All modules of the AUTOSAR Basic Software shall support a tool based configuration	[SWS_Can_00022]
[SRS_BSW_00164]	The Implementation of interrupt service routines shall be done by the Operating System, complex drivers or modules	[SWS_Can_00033]
[SRS_BSW_00167]	All AUTOSAR Basic Software Modules shall provide configuration rules and constraints to enable plausibility checks	[SWS_Can_00024]
[SRS_BSW_00306]	AUTOSAR Basic Software Modules shall be compiler and platform independent	[SWS_Can_00079]
[SRS_BSW_00308]	AUTOSAR Basic Software Modules shall not define global data in their header files, but in the C file	[SWS_Can_00079]
[SRS_BSW_00309]	All AUTOSAR Basic Software Modules shall indicate all global data with read-only purposes by explicitly assigning the const keyword	[SWS_Can_00079]
[SRS_BSW_00312]	Shared code shall be reentrant	[SWS_Can_00214] [SWS_Can_00231] [SWS_Can_00232] [SWS_Can_00233]
[SRS_BSW_00323]	All AUTOSAR Basic Software Modules shall check passed API parameters for validity	[SWS_Can_00026] [SWS_Can_00513] [SWS_Can_00514] [SWS_Can_00518] [SWS_Can_00519] [SWS_Can_91006] [SWS_Can_91007] [SWS_Can_91017] [SWS_Can_91018]
[SRS_BSW_00330]	It shall be allowed to use macros instead of functions where source code is used and runtime is critical	[SWS_Can_00079]
[SRS_BSW_00331]	All Basic Software Modules shall strictly separate error and status information	[SWS_Can_00039] [SWS_Can_00104]
[SRS_BSW_00336]	Basic SW module shall be able to shutdown	[SWS_Can_91002]
[SRS_BSW_00337]	Classification of development errors	[SWS_Can_00026] [SWS_Can_00104]
[SRS_BSW_00344]	BSW Modules shall support link-time configuration	[SWS_Can_00021]
[SRS_BSW_00347]	A Naming separation of different instances of BSW drivers shall be in place	[SWS_Can_00077]





Requirement	Description	Satisfied by
[SRS_BSW_00357]	For success/failure of an API call a standard return type shall be defined	[SWS_Can_00506]
[SRS_BSW_00358]	The return type of init() functions implemented by AUTOSAR Basic Software Modules shall be void	[SWS_Can_00223]
[SRS_BSW_00369]	All AUTOSAR Basic Software Modules shall not return specific development error codes via the API	[SWS_Can_00089] [SWS_Can_00506] [SWS_Can_91011] [SWS_Can_91012]
[SRS_BSW_00373]	The main processing function of each AUTOSAR Basic Software Module shall be named according the defined convention	[SWS_Can_00031]
[SRS_BSW_00375]	Basic Software Modules shall report wake-up reasons	[SWS_Can_00271] [SWS_Can_00364]
[SRS_BSW_00377]	A Basic Software Module can return a module specific types	[SWS_Can_00239]
[SRS_BSW_00385]	List possible error notifications	[SWS_Can_00104]
[SRS_BSW_00386]	The BSW shall specify the configuration and conditions for detecting an error	[SWS_Can_00089]
[SRS_BSW_00404]	BSW Modules shall support post-build configuration	[SWS_Can_00021]
[SRS_BSW_00405]	BSW Modules shall support multiple configuration sets	[SWS_Can_00021]
[SRS_BSW_00406]	API handling in uninitialized state	[SWS_Can_00103] [SWS_Can_00512] [SWS_Can_00517] [SWS_Can_91005] [SWS_Can_91016]
[SRS_BSW_00414]	Init functions shall have a pointer to a configuration structure as single parameter	[SWS_Can_00223]
[SRS_BSW_00416]	The sequence of modules to be initialized shall be configurable	[SWS_Can_91005] [SWS_Can_91016]
[SRS_BSW_00428]	A BSW module shall state if its main processing function(s) has to be executed in a specific order or sequence	[SWS_Can_00110]
[SRS_BSW_00432]	Modules should have separate main processing functions for read/receive and write/transmit data path	[SWS_Can_00031] [SWS_Can_00108] [SWS_Can_00109] [SWS_Can_00112]
[SRS_BSW_00438]	Configuration data shall be defined in a structure	[SWS_Can_00291]
[SRS_BSW_00449]	BSW Service APIs used by Autosar Application Software shall return a Std_ReturnType	[SWS_Can_00506]
[SRS_Can_01005]	The CAN Interface shall perform a check for correct DLC of received PDUs	[SWS_Can_00218]
[SRS_Can_01041]	The CAN Driver shall implement an interface for initialization	[SWS_Can_00245] [SWS_Can_00246]
[SRS_Can_01042]	The CAN Driver shall support dynamic selection of configuration sets	[SWS_Can_00062]
[SRS_Can_01043]	The CAN Driver shall provide a service to enable/disable interrupts of the CAN Controller.	[SWS_Can_00049] [SWS_Can_00050]





Requirement	Description	Satisfied by
[SRS_Can_01045]	The CAN Driver shall offer a reception indication service.	[SWS_Can_00279] [SWS_Can_00396]
[SRS_Can_01049]	The CAN Driver shall provide a dynamic transmission request service	[SWS_Can_00212] [SWS_Can_00213] [SWS_Can_00214]
[SRS_Can_01051]	The CAN Driver shall provide a transmission confirmation service	[SWS_Can_00016]
[SRS_Can_01053]	The CAN Driver shall provide a service to change the CAN controller mode.	[SWS_Can_00017] [SWS_Can_91010]
[SRS_Can_01054]	The CAN Driver shall provide a notification for controller wake-up events	[SWS_Can_00235] [SWS_Can_00271] [SWS_Can_00364]
[SRS_Can_01055]	CAN Driver shall provide a notification for bus-off state	[SWS_Can_00020] [SWS_Can_00234]
[SRS_Can_01059]	The CAN Driver shall guarantee data consistency of received L-PDUs	[SWS_Can_00011] [SWS_Can_00012]
[SRS_Can_01060]	The CAN driver shall not recover from bus-off automatically	[SWS_Can_00272] [SWS_Can_00273] [SWS_Can_00274]
[SRS_Can_01062]	Each event for each CAN Controller shall be configurable to be detected by polling or by an interrupt	[SWS_Can_00007]
[SRS_Can_01122]	The CAN driver shall support the situation where a wakeup by bus occurs during the same time the transition to standby/sleep is in progress	[SWS_Can_00048]
[SRS_Can_01130]	Receive Status Interface of CAN Interface	[SWS_Can_00506]
[SRS_Can_01132]	The CAN driver shall be able to detect notification events message object specific by CAN-Interrupt and polling	[SWS_Can_00099]
[SRS_Can_01134]	The CAN Driver shall support multiplexed transmission	[SWS_Can_00277] [SWS_Can_00401] [SWS_Can_00402] [SWS_Can_00403]
[SRS_Can_01135]	It shall be possible to configure one or several TX Hardware Objects	[SWS_Can_00100]
[SRS_Can_01139]	The CAN Interface and Driver shall offer a CAN Controller specific interface for initialization	[SWS_Can_00062]
[SRS_Can_01147]	The CAN Driver shall not support remote frames	[SWS_Can_00236] [SWS_Can_00237]
[SRS_Can_01160]	Padding of bytes due to discrete CAN FD DLC	[SWS_Can_00502]
[SRS_Can_01162]	CAN Interface shall support classic CAN and CAN FD frames	[SWS_Can_00501]
[SRS_Can_01166]	The CAN Driver shall implement an interface for de-initialization	[SWS_Can_91002] [SWS_Can_91009] [SWS_Can_91010]
[SRS_Can_01167]	The CAN Driver shall provide a function to return the current CAN controller error state	[SWS_Can_91008]
[SRS_Can_01170]	The CAN Driver shall provide a function to return the current CAN controller Rx and Tx error counters	[SWS_Can_00515] [SWS_Can_00520]





Requirement	Description	Satisfied by
[SRS_Can_01181]	If partial networking is used, the ECU shall secure that the first message on the bus is the wakeup frame.	[SWS_CAN_91025] [SWS_CAN_91026] [SWS_CAN_91027] [SWS_CAN_91028] [SWS_CAN_91029]
[SRS_SPAL_00157]	All drivers and handlers of the AUTOSAR Basic Software shall implement notification mechanisms of drivers and handlers	[SWS_Can_00026] [SWS_Can_00031] [SWS_Can_00108] [SWS_Can_00109] [SWS_Can_00112]
[SRS_SPAL_12056]	All driver modules shall allow the static configuration of notification mechanism	[SWS_Can_00235]
[SRS_SPAL_12057]	All driver modules shall implement an interface for initialization	[SWS_Can_00245] [SWS_Can_00246]
[SRS_SPAL_12063]	All driver modules shall only support raw value mode	[SWS_Can_00059] [SWS_Can_00060]
[SRS_SPAL_12067]	All driver modules shall set their wake-up conditions depending on the selected operation mode	[SWS_Can_00257]
[SRS_SPAL_12069]	All drivers of the SPAL that wake up from a wake-up interrupt shall report the wake-up reason	[SWS_Can_00271] [SWS_Can_00364]
[SRS_SPAL_12075]	All drivers with random streaming capabilities shall use application buffers	[SWS_Can_00011]
[SRS_SPAL_12077]	All drivers shall provide a non blocking implementation	[SWS_Can_00372]
[SRS_SPAL_12092]	The driver's API shall be accessed by its handler or manager	[SWS_Can_00058]
[SRS_SPAL_12125]	All driver modules shall only initialize the configured resources	[SWS_Can_00053]
[SRS_SPAL_12129]	The ISRs shall be responsible for resetting the interrupt flags and calling the according notification function	[SWS_Can_00033]
[SRS_SPAL_12169]	All driver modules that provide different operation modes shall provide a service for mode selection	[SWS_Can_00017]
[SRS_SPAL_12263]	The implementation of all driver modules shall allow the configuration of specific module parameter types at link time	[SWS_Can_00021]
[SRS_SPAL_12265]	Configuration data shall be kept constant	[SWS_Can_00021]
[SRS_SPAL_12448]	All driver modules shall have a specific behavior after a development error detection	[SWS_Can_00089] [SWS_Can_00091]
[SRS_SPAL_12461]	Specific rules regarding initialization of controller registers shall apply to all driver implementations	[SWS_Can_00407]
[SRS_SPAL_12463]	The register initialization settings shall be combined and forwarded	[SWS_Can_00024]

Table 6.1: Requirements Tracing

7 Functional Specification

On L-PDU transmission, the Can module writes the L-PDU in an appropriate buffer inside the CAN controller hardware.

See chapter 7.5 for closer description of L-PDU transmission.

On L-PDU reception, the Can module calls the RX indication callback function with ID, Data Length and pointer to L-SDU as parameter.

See chapter 7.6 for closer description of L-PDU reception.

The Can module provides an interface that serves as periodical processing function, and which must be called by the Basic Software Scheduler module periodically.

Furthermore, the Can module provides services to control the state of the CAN controllers. Bus-off and Wake-up events are notified by means of callback functions.

The Can module is a Basic Software Module that accesses hardware resources. Therefore, it is designed to fulfill the requirements for Basic Software Modules specified in AUTOSAR_SRS_SPAL (see [6]).

[SWS_Can_00033]

Upstream requirements: [SRS_BSW_00164](#), [SRS_SPAL_12129](#)

[The Can module shall implement the interrupt service routines for all CAN Hardware Unit interrupts that are needed.]

[SWS_Can_00419] [The Can module shall disable all unused interrupts in the CAN controller.]

[SWS_Can_00420] [The Can module shall reset the interrupt flag at the end of the ISR (if not done automatically by hardware).]

Implementation hint: The Can module shall not set the configuration (i.e. priority) of the vector table entry.

[SWS_Can_00079]

Upstream requirements: [SRS_BSW_00007](#), [SRS_BSW_00306](#), [SRS_BSW_00308](#), [SRS_BSW_00309](#), [SRS_BSW_00330](#)

[The Can module shall fulfill all design and implementation guidelines described in [6].]

7.1 Driver Scope

One Can module provides access to one CAN Hardware Unit that may consist of several CAN controllers.

[SWS_Can_00077]

Upstream requirements: [SRS_BSW_00347](#)

[For CAN Hardware Units of different type, different Can modules shall be implemented.]

[SWS_Can_00284] [In case several CAN Hardware Units (of same or different vendor) are implemented in one ECU the function names, and global variables of the Can modules shall be implemented such that no two functions with the same name are generated.]

The naming convention is as follows:

```
<Can module name>_<vendorID>_<Vendor specific API name><driver abbreviation>()
```

[\[SRS_BSW_00347\]](#) specifies the naming convention.

[SWS_Can_00385] [The naming conventions shall be used only in that case, if multiple different CAN controller types on one ECU have to be supported.]

[SWS_Can_00386] [If only one controller type is used, the original naming conventions without any `driver abbreviation` extensions are sufficient.]

See [\[1\]](#) for description how several Can modules are handled by the CanIf module.

7.2 Driver State Machine

The Can module has a very simple state machine, with the two states `CAN_UNINIT` and `CAN_READY`. [7.1](#) shows the state machine.

[SWS_Can_00103]

Upstream requirements: [SRS_BSW_00406](#)

[After power-up/reset, the Can module shall be in the state `CAN_UNINIT`.]

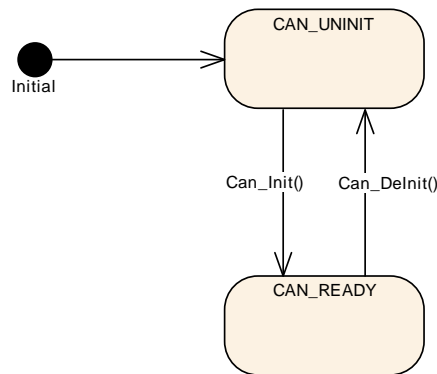


Figure 7.1: Driver State

[SWS_Can_00246]

Upstream requirements: [SRS_SPAL_12057](#), [SRS_Can_01041](#)

[The function `Can_Init` shall change the module state to `CAN_READY`, after initializing all controllers inside the HW Unit.]

[SWS_Can_00245]

Upstream requirements: [SRS_SPAL_12057](#), [SRS_Can_01041](#)

[The function `Can_Init` shall initialize all CAN controllers according to their configuration.]

Each CAN controller must then be started separately by calling the function `Can_SetControllerMode(CAN_CS_STARTED)`.

Implementation hint:

Hardware register settings that have impact on all CAN controllers inside the HW Unit can only be set in the function `Can_Init`.

Implementation hint:

The ECU State Manager module shall call `Can_Init` at most once during runtime.

[SWS_Can_91009]

Upstream requirements: [SRS_Can_01166](#)

[The function `Can_DeInit` shall change the module state to `CAN_UNINIT` before de-initializing all controllers inside the HW unit]

Refer to [[SWS_Can_91010](#)].

7.3 CAN Controller State Machine

Each CAN controller has complex state machines implemented in hardware. For simplification, the number of states is reduced to the following four basic states in this

description: UNINIT, STOPPED, STARTED and SLEEP.

Any CAN hardware access is encapsulated by functions of the Can module, but the Can module does not memorize the state changes.

The Can module offers the services [Can_Init](#), [Can_SetBaudrate](#) and [Can_SetControllerMode](#). These services perform the necessary register settings that cause the required change of the hardware CAN controller state.

There are two possibilities for triggering state changes by external events:

- Bus-off event
- HW wakeup event

These events are indicated either by an interrupt or by a status bit that is polled in the [Can_MainFunction_BusOff](#) or [Can_MainFunction_Wakeup](#).

The Can module does the register settings that are necessary to fulfill the required behavior (i.e. no hardware recovery in case of bus off).

Then it notifies the CanIf module with the corresponding callback function. The software state is then changed inside this callback function.

In case development errors are enabled and there is a not allowed transition requested by the upper layer, the Can module shall rise the development error [CAN_E_TRANSITION](#).

The Can module does not check the actual state before it performs [Can_Write](#) or raises callbacks.

7.3.1 CAN Controller State Description

This chapter describes the required hardware behavior for the different controller states.

CAN controller state UNINIT

The CAN controller is not initialized. All registers belonging to the CAN module are in reset state, CAN interrupts are disabled. The CAN Controller is not participating on the CAN bus.

CAN controller state STOPPED

In this state the CAN Controller is initialized but does not participate on the bus. In addition, error frames and acknowledges must not be sent.

(Example: For many controllers entering an 'initialization'-mode causes the controller to be stopped.)

CAN controller state STARTED

The controller is in a normal operation mode with complete functionality, which means it participates in the network. For many controllers leaving the 'initialization'-mode causes the controller to be started.

CAN controller state SLEEP

The hardware settings only differ from state STOPPED for CAN hardware that support a sleep mode (wake-up over CAN bus directly supported by CAN hardware).

[SWS_Can_00257]

Upstream requirements: [SRS_SPAL_12067](#)

[When the CAN hardware supports sleep mode and is triggered to transition into SLEEP state, the Can module shall set the controller to the SLEEP state from which the hardware can be woken over CAN Bus.]

[SWS_Can_00258] [When the CAN hardware does not support sleep mode and is triggered to transition into SLEEP state, the Can module shall emulate a logical SLEEP state from which it returns only, when it is triggered by software to transition into STOPPED state.]

[SWS_Can_00404] [The CAN hardware shall remain in state STOPPED, while the logical SLEEP state is active.]

7.3.2 CAN Controller State Transitions

A state transition is triggered by software with the function `Can_SetControllerMode` with the required transition as parameter. A successful state transition triggered by software is notified by the callback function (`CanIf_ControllerModeIndication`). The monitoring whether the requested state is achieved is part of an upper layer module and is not part of the Can module.

Some transitions are triggered by events on the bus (hardware). These transitions cause a notification by means of a callback function.

The behavior for invalid transitions in production code is undefined. [7.2](#) shows all valid state transitions.

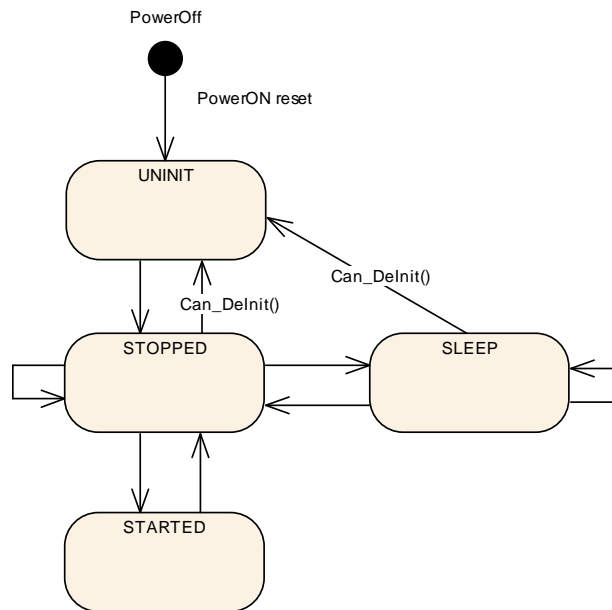


Figure 7.2: Controller State Machine

7.3.3 State transition caused by function Can_Init

- UNINIT -> STOPPED (for all controllers in HW unit)
- software triggered by the function call `Can_Init`
- does configuration for all CAN controllers inside HW Unit

All control registers are set according to the static configuration.

[SWS_Can_00259] [The function `Can_Init` shall set all CAN controllers in the state STOPPED.]

When the function `Can_Init` is entered and the Can module is not in state CAN_UNINIT or the CAN controllers are not in state UNINIT, it shall raise the error `CAN_E_TRANSITION` (Compare to [SWS_Can_00174] and [SWS_Can_00408]).

7.3.4 State transition caused by function Can_SetBaudrate

- STOPPED -> STOPPED; SLEEP -> SLEEP; STARTED -> STARTED
- software triggered by the function call `Can_SetBaudrate`
- changes the CAN controller configuration

CAN controller registers are set according to the static configurations.

[SWS_Can_00256] [If the call of `Can_SetBaudrate()` would cause a re-initialization of the CAN Controller and the CAN Controller is not in state STOPPED, it shall return `E_NOT_OK`.]

[SWS_Can_00260] [If re-initialization is necessary the function `Can_SetBaudrate` shall maintain the CAN controller in the state STOPPED.]

[SWS_Can_00422] [If re-initialization is necessary the function `Can_SetBaudrate` shall ensure that any settings that will cause the CAN controller to participate in the network are not set.]

7.3.5 State transition caused by function `Can_SetControllerMode`

The software can trigger a CAN controller state transition with the function `Can_SetControllerMode`. Depending on the CAN hardware, a change of a register setting to transition to a new CAN controller state may take over only after a delay. The Can module notifies the upper layer (`CanIf_ControllerModeIndication`) after a successful state transition about the new state. The monitoring whether the requested state is achieved is part of an upper layer module and is not part of the Can module.

[SWS_Can_00370] [The function `Can_MainFunction_Wakeup` shall poll a flag of the CAN status register until the flag signals that the change takes effect and notify the upper layer with function `CanIf_ControllerModeIndication` about a successful state transition referring to the corresponding CAN controller with the abstract `CanIf_ControllerId`.]

[SWS_Can_00398] [The function `Can_SetControllerMode` shall use the system service `GetCounterValue` for timeout monitoring to avoid blocking functions.]

[SWS_Can_00372]

Upstream requirements: [SRS_SPAL_12077](#)

[In case the flag signals that the change takes no effect and the maximum time `Can-TimeoutDuration` is elapsed, the function `Can_SetControllerMode` shall be left and the function `Can_MainFunction_Wakeup` shall continue to poll the flag.]

[SWS_Can_00373] [The function `Can_MainFunction_Wakeup` shall call the function `CanIf_ControllerModeIndication` to notify the upper layer about a successful state transition of the corresponding CAN controller referred by abstract `CanIf_ControllerId`, in case the state transition was triggered by function `Can_SetControllerMode`.]

State transition caused by function `Can_SetControllerMode` (`CAN_CS_STARTED`)

- STOPPED -> STARTED
- software triggered

[SWS_Can_00261] [The function `Can_SetControllerMode(CAN_CS_STARTED)` shall set the hardware registers in a way that makes the CAN controller participating on the network.]

[SWS_Can_00262] [The function `Can_SetControllerMode(CAN_CS_STARTED)` shall wait for limited time until the CAN controller is fully operational. Compare to [\[SWS_Can_00398\]](#).]

Transmit requests that are initiated before the CAN controller is operational get lost. The only indicator for operability is the reception of TX confirmations or RX indications. The sending entities might get a confirmation timeout and need to be able to cope with that.

[SWS_Can_00409] [When the function `Can_SetControllerMode(CAN_CS_STARTED)` is entered and the CAN controller is not in state STOPPED it shall detect a invalid state transition (Compare to [\[SWS_Can_00200\]](#)).]

State transition caused by function `Can_SetControllerMode` (`CAN_CS_STOPPED`)

- STARTED -> STOPPED
- SLEEP -> STOPPED
- software triggered

[SWS_Can_00263] [The function `Can_SetControllerMode(CAN_CS_STOPPED)` shall set the bits inside the CAN hardware such that the CAN controller stops participating on the network.]

[SWS_Can_00264] [The function `Can_SetControllerMode(CAN_CS_STOPPED)` shall wait for a limited time until the CAN controller is really switched off. Compare to [\[SWS_Can_00398\]](#).]

[SWS_Can_00267] [If the CAN HW does not support a sleep mode, the transition from SLEEP to STOPPED shall return from the logical sleep mode, but have no effect to the CAN controller state (as the controller is already in stopped state).]

[SWS_Can_00268] [The function `Can_SetControllerMode(CAN_CS_STOPPED)` shall wait for a limited time until the CAN controller is in STOPPED state. Compare to [\[SWS_Can_00398\]](#).]

[SWS_Can_00282] [The function `Can_SetControllerMode(CAN_CS_STOPPED)` shall cancel pending messages.]

State transition caused by function `Can_SetControllerMode(CAN_CS_SLEEP)`

- STOPPED -> SLEEP
- software triggered

[SWS_Can_00265] [The function `Can_SetControllerMode(CAN_CS_SLEEP)` shall set the controller into sleep mode.]

[SWS_Can_00266] [If the CAN HW does support a sleep mode, the function `Can_SetControllerMode(CAN_CS_SLEEP)` shall wait for a limited time until the CAN controller is in SLEEP state and it is assured that the CAN hardware is wake able. Compare to [\[SWS_Can_00398\]](#).]

[SWS_Can_00290] [If the CAN HW does not support a sleep mode, the function `Can_SetControllerMode(CAN_CS_SLEEP)` shall set the CAN controller to the logical sleep mode.]

[SWS_Can_00405] [This logical sleep mode shall left only, if function `Can_SetControllerMode(CAN_CS_STOPPED)` is called.]

[SWS_Can_00411] [When the function `Can_SetControllerMode(CAN_CS_SLEEP)` is entered and the CAN controller is neither in state STOPPED nor in state SLEEP, it shall detect a invalid state transition (Compare to [\[SWS_Can_00200\]](#)).]

7.3.6 State transition caused by Hardware Events

State transition caused by Hardware Wakeup (triggered by wake-up event from CAN bus)

- SLEEP -> STOPPED
- triggered by incoming L-PDUs
- The ECU Statemanager module is notified with the function `EcuM_CheckWakeup`

This state transition will only occur when sleep mode is supported by hardware.

[SWS_Can_00270] [On hardware wakeup (triggered by a wake-up event from CAN bus), the CAN controller shall transition into the state STOPPED.]

[SWS_Can_00271]

Upstream requirements: [SRS_BSW_00375](#), [SRS_SPAL_12069](#), [SRS_Can_01054](#)

[On hardware wakeup (triggered by a wake-up event from CAN bus), the Can module shall call the function `EcuM_CheckWakeup` either in interrupt context or in the context of `Can_MainFunction_Wakeup`.]

[SWS_Can_00269] [The Can module shall not further process the L-PDU that caused a wake-up.]

[SWS_Can_00048]

Upstream requirements: [SRS_Can_01122](#)

[In case of a CAN bus wake-up during sleep transition, the function `Can_SetControllerMode(CAN_CS_STOPPED)` shall return `E_NOT_OK`.]

State transition caused by Bus-Off (triggered by state change of CAN controller)

[SWS_Can_00020]

Upstream requirements: [SRS_Can_01055](#)

[

- STARTED -> STOPPED
- triggered by hardware if the CAN controller reaches bus-off state
- The CanIf module is notified with the function `CanIf_ControllerBusOff` after STOPPED state is reached referring to the corresponding CAN controller with the abstract `CanIf_ControllerId`.

]

[SWS_Can_00272]

Upstream requirements: [SRS_Can_01060](#)

[After bus-off detection, the CAN controller shall transition to the state STOPPED and the Can module shall ensure that the CAN controller doesn't participate on the network anymore.]

[SWS_Can_00273]

Upstream requirements: [SRS_Can_01060](#)

[After bus-off detection, the Can module shall cancel still pending messages.]

[SWS_Can_00274]

Upstream requirements: [SRS_Can_01060](#)

[The Can module shall disable or suppress automatic bus-off recovery.]

7.3.7 State transition caused by function `Can_DeInit`

- STOPPED -> UNINIT; SLEEP -> UNINIT (for all controllers in HW unit)
- software triggered by the function call `Can_DeInit`
- prepares all CAN controllers inside HW Unit to be re-configured

[SWS_Can_91010]

Upstream requirements: [SRS_Can_01166](#), [SRS_Can_01053](#)

[The function `Can_DeInit` shall set all CAN controllers in the state UNINIT]

When the function `Can_DeInit` is entered and the Can module is not in state `CAN_READY` or any of the CAN controllers is in state `STARTED`, it shall raise the error `CAN_E_TRANSITION` (Refer to [\[SWS_Can_91011\]](#) and [\[SWS_Can_91012\]](#)).

7.4 Can module/Controller Initialization

The ECU State Manager module shall initialize the Can module during startup phase by calling the function `Can_Init` before using any other functions of the Can module.

[SWS_Can_00250]

Upstream requirements: [SRS_BSW_00101](#)

[The function `Can_Init` shall initialize: static variables, including flags, Common setting for the complete CAN HW unit, CAN controller specific settings for each CAN controller]

[SWS_Can_00053]

Upstream requirements: [SRS_SPAL_12125](#)

[`Can_Init` shall not change registers of CAN controller Hardware resources that are not used.]

The Can module shall apply the following rules regarding initialization of controller registers:

[SWS_Can_00407]

Upstream requirements: [SRS_SPAL_12461](#)

[

- If the hardware allows for only one usage of the register, the Can module implementing that functionality is responsible initializing the register.
- If the register can affect several hardware modules and if it is an I/O register it shall be initialized by the PORT driver.
- If the register can affect several hardware modules and if it is not an I/O register it shall be initialized by the MCU driver.
- One-time writable registers that require initialization directly after reset shall be initialized by the startup code.
- All other registers shall be initialized by the startup code.

]

[SWS_Can_00056] [Post-Build configuration elements that are marked as 'multiple' ('M' or 'x') in chapter 10 can be selected by passing the pointer 'Config' to the init function of the module.]

[SWS_Can_00062]

Upstream requirements: [SRS_Can_01139](#), [SRS_Can_01042](#)

[If [Can_SetBaudrate](#) determines that the aimed configuration change requires a re-initialization and the CAN Controller is in STOPPED, the function [Can_SetBaudrate](#) shall re-initialize the CAN controller and the controller specific settings.]

If re-initialization is necessary, the CAN Controller has to be switched to STOPPED before [Can_SetBaudrate\(\)](#) can be executed and the new baud rate configuration can be applied.

[SWS_Can_00255] [The function [Can_SetBaudrate](#) shall only affect register areas that contain specific configuration for a single CAN controller.]

[SWS_Can_00021]

Upstream requirements: [SRS_BSW_00344](#), [SRS_BSW_00404](#), [SRS_BSW_00405](#), [SRS_SPAL_12263](#), [SRS_SPAL_12265](#)

[The desired CAN controller configuration can be selected with the parameter Config.]

[SWS_Can_00291]

Upstream requirements: [SRS_BSW_00438](#)

[Config is a pointer into an array of implementation specific data structure stored in ROM. The different controller configuration sets are located as data structures in ROM.]

The possible values for Config are provided by the configuration description (see chapter 10).

The Can module configuration defines the global CAN HW Unit settings and references to the default CAN controller configuration sets.

7.5 L-PDU transmission

On L-PDU transmission, the Can module converts the L-PDU contents ID and Data Length to a hardware specific format (if necessary) and triggers the transmission.

[SWS_Can_00059]

Upstream requirements: [SRS_SPAL_12063](#)

[Data mapping by CAN to memory is defined in a way that the CAN data byte which is sent out first is array element 0, the CAN data byte which is sent out last is array element 7 or 63 in case of CAN FD.]

[SWS_Can_00427] [If the presentation inside the CAN Hardware buffer differs from AUTOSAR definition, the Can module must provide an adapted SDU-Buffer for the upper layers.]

[SWS_Can_00100]

Upstream requirements: [SRS_Can_01135](#)

[Several TX hardware objects with unique HTHs may be configured. The CanIf module provides the HTH as parameter of the TX request. See Figure 7.3 for a possible configuration.]

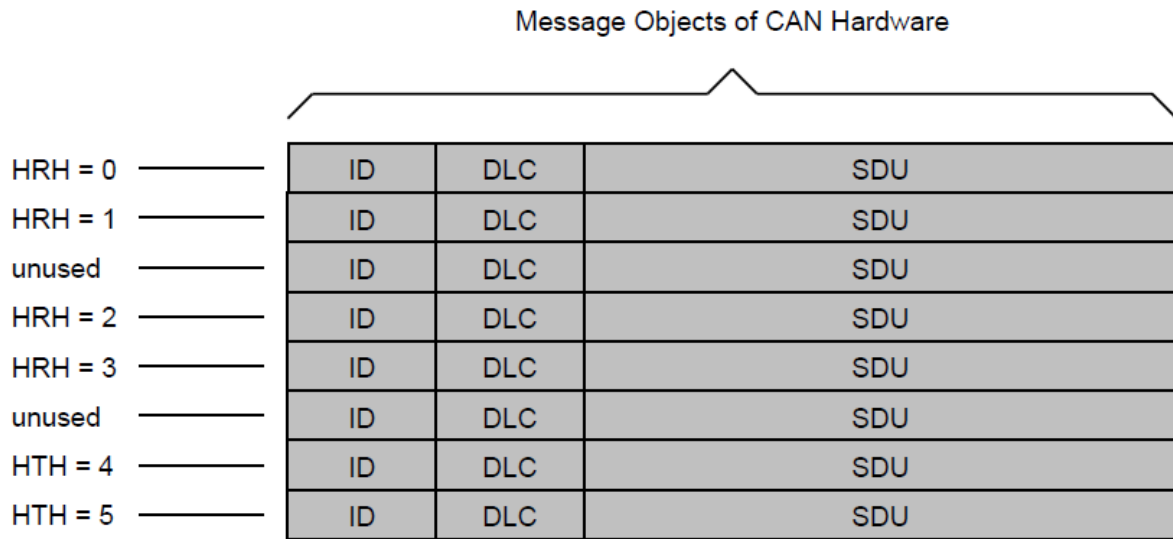


Figure 7.3: Example of assignment of HTHs and HRHs to the Hardware Objects. The numbering of HTHs and HRHs are implementation specific. The chosen numbering is only an example.

[SWS_Can_00276] [The function `Can_Write` shall store the `swPduHandle` that is given inside the parameter `PduInfo` until the Can module calls the `CanIf_TxConfirmation` for this request where the `swPduHandle` is given as parameter.]

The feature of **[SWS_Can_00276]** is used to reduce time for searching in the `CanIf` module implementation.

[SWS_Can_00016]

Upstream requirements: [SRS_Can_01051](#)

[The Can module shall call `CanIf_TxConfirmation` to indicate a successful transmission. It shall either called by the TX-interrupt service routine of the corresponding HW resource or inside the `Can_MainFunction_Write` in case of polling mode.]

7.5.1 Priority Inversion

Multiplexed transmission can be used to avoid outer/inner priority inversion (see chapter 2.1).

[SWS_Can_00277]

Upstream requirements: [SRS_Can_01134](#)

[The Can module shall allow that the functionality "Multiplexed Transmission" is statically configurable (ON | OFF) at pre-compile time.]

[SWS_Can_00401]

Upstream requirements: [SRS_Can_01134](#)

[Several transmit hardware objects (defined by "CanHwObjectCount") shall be assigned by one HTH to represent one transmit entity to the upper layer.]

[SWS_Can_00402]

Upstream requirements: [SRS_Can_01134](#)

[The Can module shall support multiplexed transmission mechanisms for devices where either

- Multiple transmit hardware objects, which are grouped to a transmit entity can be filled over the same register set, and the microcontroller stores the L-PDU into a free buffer autonomously, or
- The Hardware provides registers or functions to identify a free transmit hardware object within a transmit entity.

]

[SWS_Can_00403]

Upstream requirements: [SRS_Can_01134](#)

[The Can module shall support multiplexed transmission for devices, which send L-PDUs in order of L-PDU priority.]

Note: Ordering of L-PDUs by priority avoids inner priority inversion of the L-PDUs assigned to a Basic-CAN configured for multiplexed transmission. Another possibility to avoid inner priority inversion is the configuration of all HTHs to be Full-CAN if the CAN hardware is able to prioritize upon transmission using the CAN ID or related priority field.

Note: Software emulation of priority handling should be avoided, because the overhead would void the advantage of the multiplexed transmission.

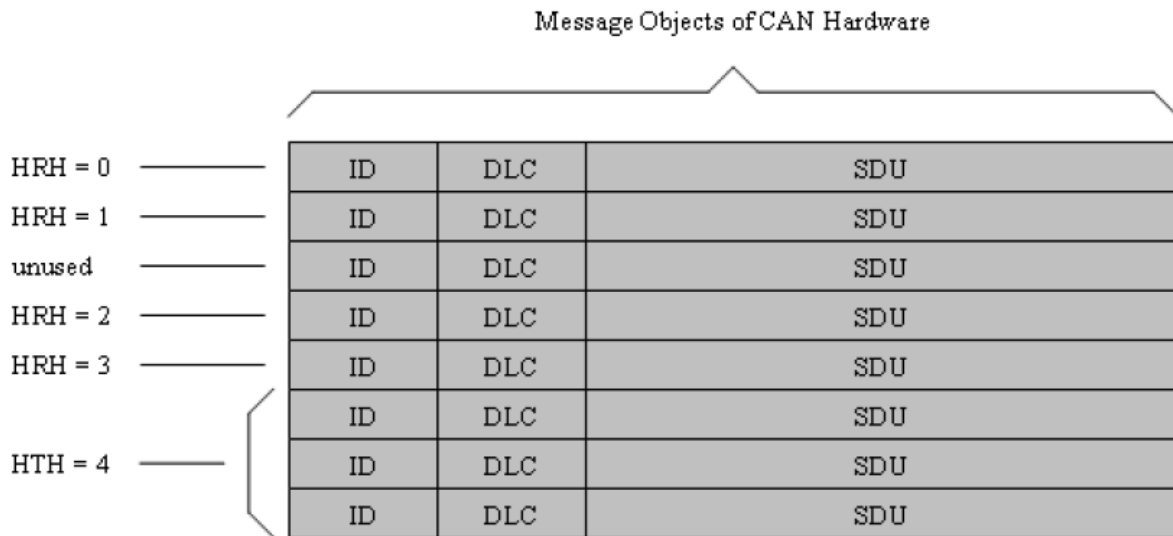


Figure 7.4: Example of assignment of HTHs and HRHs to the Hardware Objects with multiplexed transmission. The numbering of HTHs and HRHs are implementation specific. The chosen numbering is only an example.

[SWS_Can_00011]

Upstream requirements: [SRS_SPAL_12075](#), [SRS_Can_01059](#)

[The Can module shall directly copy the data from the upper layer buffers. It is the responsibility of the upper layer to keep the buffer consistent until return of function call ([Can_Write](#)).]

7.5.2 Transmit Data Consistency

7.6 L-PDU reception

[SWS_Can_00279]

Upstream requirements: [SRS_Can_01045](#)

[On L-PDU reception, the Can module shall call the RX indication callback function `CanIf_RxIndication` with ID, Hoh, abstract `CanIf_ControllerId` in parameter `Mailbox`, and the Data Length and pointer to the L-SDU buffer in parameter `PduInfoPtr`.]

[SWS_Can_00423] [In case of an Extended CAN frame, the Can module shall convert the ID to a standardized format since the Upper layer (CANIF) does not know whether the received CAN frame is a Standard CAN frame or Extended CAN frame. In case of an Extended CAN frame, MSB of a received CAN frame ID needs to be made as '1' to mark the received CAN frame as Extended.]

[SWS_Can_00396]

Upstream requirements: [SRS_Can_01045](#)

[The RX-interrupt service routine of the corresponding HW resource or the function `Can_MainFunction_Read` in case of polling mode shall call the callback function `CanIf_RxIndication`.]

[SWS_Can_00060]

Upstream requirements: [SRS_SPAL_12063](#)

[Data mapping by CAN to memory is defined in a way that the CAN data byte which is received first is array element 0, the CAN data byte which is received last is array element 7 or 63 in case of CAN FD. If the presentation inside the CAN Hardware buffer differs from AUTOSAR definition, the Can module must provide an adapted SDU-Buffer for the upper layers.]

[SWS_Can_00501]

Upstream requirements: [SRS_Can_01162](#)

[`CanDrv` shall indicate whether the received message is a conventional CAN frame or a CAN FD frame as described in `Can_IdType`.]

7.6.1 Receive Data Consistency

To prevent loss of received messages, some controllers support a FIFO built from a set of hardware objects, while on other controllers it is possible to configure another hardware object with the same properties that works as a shadow buffer and steps in when the main object is busy.

[SWS_Can_00489] [The CAN driver shall support controllers which implement a hardware FIFO. The size of the FIFO is configured via "CanHwObjectCount".]

[SWS_Can_00490] [Controllers that do not support a hardware FIFO often provide the capabilities to implement a shadow buffer mechanism, where additional hardware objects take over when the primary hardware object is busy. The number of hardware objects is configured via "CanHwObjectCount".]

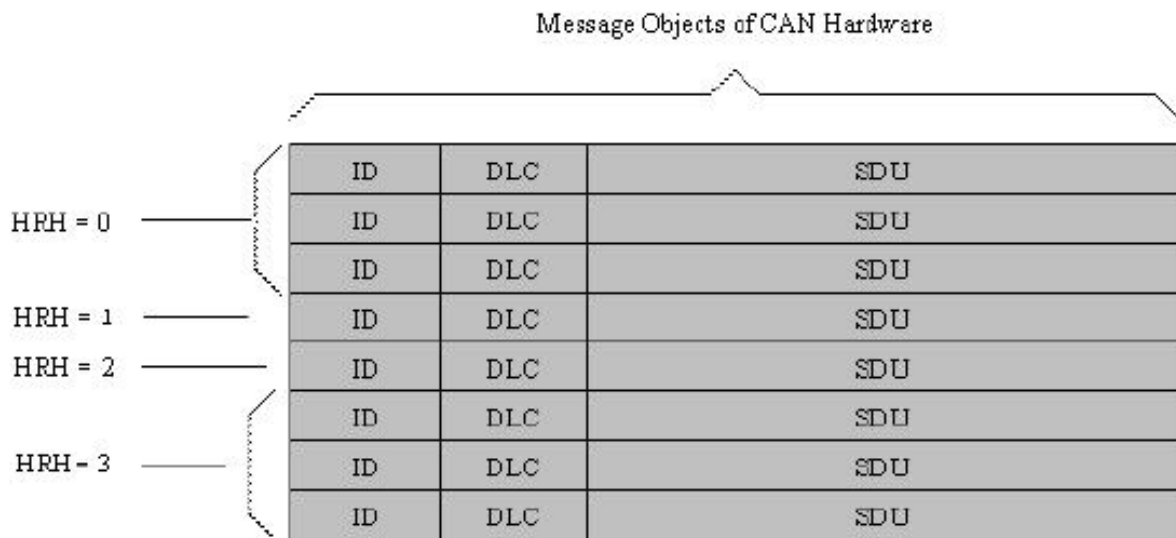


Figure 7.5: Example of assignment of same HRHs to multiple Hardware Objects The chosen numbering is only an example.

[SWS_Can_00299] [The Can module shall copy the L-SDU in a shadow buffer after reception, if the RX buffer cannot be protected (locked) by CAN Hardware against overwriting by a newly received message.]

[SWS_Can_00300] [The Can module shall copy the L-SDU in a shadow buffer, if the CAN Hardware is not globally accessible.]

The complete RX processing (including copying to destination layer, e.g. COM) is done in the context of the RX interrupt or in the context of the [Can_MainFunction_Read](#).

[SWS_Can_00012]

Upstream requirements: [SRS_Can_01059](#)

[The Can module shall guarantee that neither the ISRs nor the function [Can_MainFunction_Read](#) can be interrupted by itself. The CAN hardware (or shadow) buffer is always consistent, because it is written and read in sequence in exactly one function that is never interrupted by itself.]

If the CAN hardware cannot be configured to lock the RX hardware object after reception (hardware feature), it could happen that the hardware buffer is overwritten by a newly arrived message. In this case, the CAN controller detects an "overwrite" event, if supported by hardware.

If the CAN hardware can be configured to lock the RX hardware object after reception, it could happen that the newly arrived message cannot be stored to the hardware buffer. In this case, the CAN controller detects an "overrun" event, if supported by hardware.

[SWS_Can_00395] [Can module shall raise the runtime error [CAN_E_DATALOST](#) in case of "overwrite" or "overrun" event detection.]

Implementation Hint:

The system designer shall assure that the runtime for message reception (interrupt driven or polling) correlates with the fastest possible reception in the system.

7.7 Wakeup Concept

The Can module handles wakeups that can be detected by the Can controller itself and not via the Can transceiver. There are two possible scenarios: wakeup by interrupt and wakeup by polling.

For wakeup by interrupt, an ISR of the Can module is called when the hardware detects the wakeup.

[SWS_Can_00364]

Upstream requirements: [SRS_BSW_00375](#), [SRS_SPAL_12069](#), [SRS_Can_01054](#)

[If the ISR for wakeup events is called, it shall call `EcuM_CheckWakeup` in turn. The parameter passed to `EcuM_CheckWakeup` shall be the ID of the wakeup source referenced by the `CanWakeupSourceRef` configuration parameter.]

The ECU State Manager will then set up the MCU and call the Can module back via the Can Interface, resulting in a call to [Can_CheckWakeup](#).

When wakeup events are detected by polling, the ECU State Manager will cyclically call [Can_CheckWakeup](#) via the Can Interface as before. In both cases, `Can_CheckWakeup` will check if there was a wakeup detected by a Can controller and return the result. The CAN driver will then inform the ECU State Manager of the wakeup event via `EcuM_SetWakeupEvent`.

The wakeup validation to prevent false wakeup events, will be done by the ECU State Manager and the Can Interface afterwards and without any help from the Can module. For a general description of the wakeup mechanisms and wakeup sequence diagrams refer to Specification of ECU State Manager [5].

7.8 CAN Controller with selective wakeup functionality

This section describes requirements for CAN controller with selective wakeup functionality.

Partial Networking is a state in a CAN system where some nodes are in low power mode while other nodes are communicating. This reduces the power consumption by the entire network. Nodes in the low-power modes are woken up by predefined wakeup frames.

CAN Controller which support selective wakeup can be woken up by predefined wakeup frames.

[SWS_Can_00601] [If selective wakeup is supported by the CAN controller hardware, it shall be indicated with the configuration parameter CanHwPnSupport.]

[SWS_Can_00602] [If selective wakeup is supported, CAN controller shall be configured to wake up on a particular CAN frame or a group of CAN frames using the parameters CanPnFrameCanId, CanPnFrameCanIdMask and CanPnFrameDataMask.]

7.9 Notification concept

The Can module offers only an event triggered notification interface to the CanIf module. Each notification is represented by a callback function.

[SWS_Can_00099]

Upstream requirements: [SRS_Can_01132](#)

[The hardware events may be detected by an interrupt or by polling status flags of the hardware objects. The configuration possibilities regarding polling is hardware dependent (i.e. which events can be polled, which events need to be polled), and not restricted by this standard.]

[SWS_Can_00007]

Upstream requirements: [SRS_Can_01062](#)

[It shall be possible to configure the driver such that no interrupts at all are used (complete polling).]

The configuration of what is and is not polled by the Can module is internal to the driver, and not visible outside the module. The polling is done inside the CAN main functions (Can_MainFunction_xxx). Also the polled events are notified by the appropriate callback function. Then the call context is not the ISR but the CAN main function. The implementation of all callback functions shall be done as if the call context was the ISR.

For further details see also description of the CAN main functions [Can_MainFunction_Read](#), [Can_MainFunction_Write](#), [Can_MainFunction_BusOff](#) and [Can_MainFunction_Wakeup](#).

7.10 Reentrancy issues

A routine must satisfy the following conditions to be reentrant:

- It uses all shared variables in an atomic way, unless each is allocated to a specific instance of the function.
- It does not call non-reentrant functions.
- It does not use the hardware in a non-atomic way.

Transmit requests are simply forwarded by the `CanIf` module inside the function `CanIf_Transmit`.

The function `CanIf_Transmit` is re-entrant. Therefore the function [Can_Write](#) needs to be implemented thread-safe (for example by using mutexes):

Further (preemptive) calls will return with `CAN_BUSY` when the write can't be performed re-entrant. (example: write to different hardware TX Handles allowed, write to same TX Handles not allowed)

In case of `CAN_BUSY` the `CanIf` module queues that request. (same behavior as if all hardware objects are busy).

`Can_EnableCanInterrupts` and `Can_DisableCanInterrupts` may be called inside re-entrant functions. Therefore these functions also need to be reentrant.

All other services don't need to be implemented as reentrant functions.

The CAN main functions (i.e. [Can_MainFunction_Read](#)) shall not be interrupted by themselves. Therefore these CAN main functions are not reentrant.

7.11 Hardware Timestamping

Hardware-based timestamping, if supported by the CAN controller, can be used e.g. to enhance the precision of a synchronized time-base on CAN. The following CAN driver APIs are provided, if hardware-based timestamping is supported:

- [Can_GetCurrentTime](#)
- [Can_EnableEgressTimeStamp](#)
- [Can_GetEgressTimeStamp](#)
- [Can_GetIngressTimeStamp](#)

Those APIs need to be enabled by the configuration parameter `CanGlobalTimeSupport`.

The hardware-based timestamping function of a CAN controller shall provide a free-running counter that is used to take the timestamps of CAN message reception and transmission. A free-running counter is a counter that counts up and overflows to zero after reaching its specified maximum value. It is specified in the CiA 603 standard that the free-running counter counts clock cycles; the resolution shall be at least 1 μ s and at most 1 ns. It is highly recommended to provide 32-bit time-stamp registers and a 32-bit counter.

The timestamp for transmitted and received CAN messages is captured when the CAN frame is considered valid. Details are given in the CiA 603 standard.

7.12 Error classification

Section 7.11 "Error Handling" of the document "General Specification of Basic Software Modules" describes the error handling of the Basic Software in detail. Above all, it constitutes a classification scheme consisting of five error types which may occur in BSW modules.

Based on this foundation, the following section specifies particular errors arranged in the respective subsections below.

[SWS_Can_00104]

Upstream requirements: [SRS_BSW_00337](#), [SRS_BSW_00385](#), [SRS_BSW_00331](#)

[The Can module shall be able to detect the following errors and exceptions depending on its configuration (default/production)]

7.12.1 Development Errors

[SWS_Can_91019] Definiton of development errors in module Can [

Type of error	Related error code	Error value
API Service called with wrong parameter	CAN_E_PARAM_POINTER	0x01
API Service called with wrong parameter	CAN_E_PARAM_HANDLE	0x02
API Service called with wrong parameter	CAN_E_PARAM_DATA_LENGTH	0x03
API Service called with wrong parameter	CAN_E_PARAM_CONTROLLER	0x04
API Service used without initialization	CAN_E_UNINIT	0x05
Invalid transition for the current mode	CAN_E_TRANSITION	0x06
Parameter Baudrate has an invalid value	CAN_E_PARAM_BAUDRATE	0x07
Invalid configuration set selection	CAN_E_INIT_FAILED	0x09
API service called with invalid PDU ID	CAN_E_PARAM_LPDU	0x0A

]

7.12.2 Runtime Errors

[SWS_Can_91020] Definiton of runtime errors in module Can [

Type of error	Related error code	Error value
Received CAN message is lost	CAN_E_DATALOST	0x01

]

[SWS_Can_00026]

Upstream requirements: [SRS_BSW_00337](#), [SRS_BSW_00323](#), [SRS_SPAL_00157](#)

[The Can module shall indicate errors that are caused by erroneous usage of the Can module API. This covers API parameter checks and call sequence errors.]

[SWS_Can_00091]

Upstream requirements: [SRS_SPAL_12448](#)

[After return of the DET the Can module's function that raised the development error shall return immediately.]

[SWS_Can_00089]

Upstream requirements: [SRS_BSW_00369](#), [SRS_BSW_00386](#), [SRS_SPAL_12448](#)

[The Can module's environment shall indicate development errors only in the return values of a function of the Can module when DET is switched on and the function provides a return value. The returned value is E_NOT_OK.]

7.12.3 Production Errors

There are no productions errors.

7.12.4 Extended Production Errors

There are no extended production errors.

7.12.5 Return Value

CAN_BUSY is reported via return value of the function [Can_Write](#). The CanIf module reacts according the sequence diagrams specified for the CanIf module. E_NOT_OK is reported via return value in case of a wakeup during transition to sleep mode. Bus-off and Wake-up events are forwarded via notification callback functions.

7.13 CAN FD Support

For performance reasons some CAN controllers allow to use a Flexible Data-Rate feature called CAN FD (see "CAN with Flexible Data-Rate" specification). Indicated during the arbitration phase it is possible to switch to a higher baud rate during payload and CRC. This second baud rate has to be configured by extending `CanControllerBaudrateConfig` with `CanControllerFdBaudrateConfig`. If a baud rate is active which has a CAN FD configuration (see `CanControllerFdBaudrateConfig` 10.2.5) the CAN FD feature is enabled for this controller. The specified second baud rate is needed to support reception of CAN FD frames with bit rate switch (BRS). Whether the second baudrate is used for transmission or not depends on configuration parameter `CanControllerTxBitRateSwitch` (see `CanControllerFdBaudrateConfig` 10.2.5).

However, there may be cases where conventional CAN 2.0 messages need to be transmitted in networks supporting CAN-FD messages for example to facilitate CAN selective wakeup. In these cases it is necessary to support transmitting interleaved conventional CAN messages with CAN-FD messages. This can be achieved on frame level by using the two most significant bits of the `CanId` (see `Can_IdType` 8.2.3, [SWS_Can_00416]) passed during `Can_Write` to indicate which kind of frame shall be used.

CAN FD also supports an extended payload which allows the transmission of up to 64 bytes. This feature also depends on the CAN FD configuration (see `CanControllerFdBaudrateConfig` 10.2.5). Therefore, if the CAN Controller is in CAN FD mode (valid `CanControllerFdBaudrateConfig`) and the CAN FD flag is set in `CanId` passed to `Can_Write()`, `CanDrv` supports the transmission of PDUs with a length up to 64 bytes. If there is a request to transmit a CAN FD frame and the CAN Controller is not in CAN FD mode (no `CanControllerFdBaudrateConfig`) the frame is sent as conventional CAN frame as long as the PDU length ≤ 8 bytes.

7.14 CAN XL Extension

CAN/CAN-FD are proven in use, affordable and well distributed communication protocols with the respective communication stacks already specified within AUTOSAR.

Within the automotive industry there is a constant trend to increase communication bandwidth to cope with the complexity of modern E/E architectures. Having a lowcost, robust bus system that also follows this trend is clearly seen as a beneficial addition to the AUTOSAR standard. Therefore, CAN XL is introduced (see [7],[8]).

The goal is that CAN XL will help bridge the gap between current CAN implementations and current 100 Mbit Ethernet solutions. On the same network segment, both CAN 2.0/FD/XL and Ethernet traffic can coexist. Baudrate is not fixed to 10 Mbit like at 10BASE-T1S but can be adjusted flexible up to 20 Mbit/s. In addition, a payload up to 2048 bytes is possible.

CAN XL has a minimal impact on existing AUTOSAR Modules but still brings benefit of new properties.

Using the newly introduced CAN XL Driver it is still possible to send CAN 2.0 and CAN FD Frames without any changes.

As CAN XL Driver is implemented as an extension for the existing CAN Driver (with new document AUTOSAR_CP_SWS_CANXLDriver.pdf), non CAN XL hardware will still use basic CAN Driver implementation.

The CAN XL Driver is an extension of CAN Driver and introduces an additional API to support CAN XL Frames and Ethernet communication (see AUTOSAR_CP_SWS_CANXLDriver.pdf for further details).

7.15 Reporting of CAN Error Types

[SWS_Can_91022]

Upstream requirements: [RS_Ids_00810](#)

[If the CanEnableSecurityEventReporting true and CanDrv detects a CanErrorType in the range of 0x1-0xB, then CanDrv shall call CanIf_ErrorNotification with the ControllerId and the CanError as parameters.]

[SWS_Can_91024]

Upstream requirements: [RS_Ids_00810](#)

[If no of the predefined Can_ErrorType values matches to the error provided by the CAN hardware, the CAN driver shall not report the error to the CanIf.]

[SWS_Can_91023]

Upstream requirements: [RS_Ids_00810](#)

[If the CanEnableSecurityEventReporting true and CanDrv detects a transition to error state passive, then CanDrv shall call CanIf_ControllerErrorStatePassive with the ControllerId and the values for the Rx and Tx error counters.]

8 API Specification

The prefix of the function names may be changed in an implementation with several Can modules as described in [SWS_Can_00284].

8.1 Imported Types

In this chapter all types included from the following modules are listed:

[SWS_Can_00222] Definition of imported datatypes of module Can [

<i>Module</i>	<i>Header File</i>	<i>Imported Type</i>
Comtype	ComStack_Types.h	PduIdType
	ComStack_Types.h	PduInfoType
	ComStack_Types.h	PduLengthType
EcuM	EcuM.h	EcuM_WakeupSourceType
Icu	Icu.h	Icu_ChannelType
Os	Os.h	StatusType
	Os.h	TickRefType
	Os.h	TickType
	Rte_Os_Type.h	CounterType
Std	Std_Types.h	Std_ReturnType
	Std_Types.h	Std_VersionInfoType

]

8.2 Type definitions

8.2.1 Can_ConfigType

[SWS_Can_00413] Definition of datatype Can_ConfigType [

Name	Can_ConfigType
Kind	Structure
Description	This is the type of the external data structure containing the overall initialization data for the CAN driver and SFR settings affecting all controllers. Furthermore it contains pointers to controller configuration structures. The contents of the initialization data structure are CAN hardware specific.
Available via	Can.h

]

8.2.2 Can_PduType

[SWS_Can_00415] Definition of datatype Can_PduType [

Name	Can_PduType		
Kind	Structure		
Elements	swPduHandle		
	Type	PduIdType	
	Comment	–	
	length		
	Type	uint8	
	Comment	–	
	id		
	Type	Can_IdType	
	Comment	–	
	sdu		
Type	uint8*		
Comment	–		
Description	This type unites PduId (swPduHandle), SduLength (length), SduData (sdu), and CanId (id) for any CAN L-SDU.		
Available via	Can_GeneralTypes.h		

]

8.2.3 Can_IdType

[SWS_Can_00416] Definition of ImplementationData Type Can_IdType [

Name	Can_IdType		
Kind	Type		
Derived from	uint32		
Range	Standard32Bit	0..0x400007FF	0..0x400007FF
	Extended32Bit	0..0xDFFFFFFF	0..0xDFFFFFFF
Description	Represents the Identifier of an L-PDU. The two most significant bits specify the frame type: 00 CAN message with Standard CAN ID 01 CAN FD frame with Standard CAN ID 10 CAN message with Extended CAN ID 11 CAN FD frame with Extended CAN ID		
Variation	–		
Available via	Can_GeneralTypes.h		

]

8.2.4 Can_HwHandleType

[SWS_Can_00429] Definition of datatype Can_HwHandleType [

Name	Can_HwHandleType		
Kind	Type		
Derived from	Basetype	Variation	
	uint16	–	
	uint8	–	
Range	Standard	0..0x0FF	0..0x0FF
	Extended	0..0xFFFF	0..0xFFFF
Description	Represents the hardware object handles of a CAN hardware unit. For CAN hardware units with more than 255 HW objects use extended range.		
Available via	Can_GeneralTypes.h		

]

8.2.5 Can_HwType

[SWS_CAN_00496] Definition of datatype Can_HwType [

Name	Can_HwType		
Kind	Structure		
Elements	CanId		
	Type	Can_IdType	
	Comment	Standard/Extended CAN ID of CAN L-PDU	
	Hoh		
	Type	Can_HwHandleType	
	Comment	ID of the corresponding Hardware Object Range	
	ControllerId		
	Type	uint8	
Comment	ControllerId provided by CanIf clearly identify the corresponding controller		
Description	This type defines a data structure which clearly provides an Hardware Object Handle including its corresponding CAN Controller and therefore CanDrv as well as the specific CanId.		
Available via	Can_GeneralTypes.h		

]

8.2.6 Extension to Std_ReturnType

[SWS_Can_00039] Definition of Std_ReturnType-extension for module Can

Upstream requirements: [SRS_BSW_00331](#)

[

Range	CAN_BUSY	0x02	transmit request could not be processed because no transmit object was available
Description	Overlaid return value of Std_ReturnType for CAN driver API Can_Write()		
Available via	Can_GeneralTypes.h		

]

8.2.7 Can_ErrorStateType

[SWS_Can_91003] Definition of datatype Can_ErrorStateType [

Name	Can_ErrorStateType		
Kind	Enumeration		
Range	CAN_ERRORSTATE_ACTIVE	–	The CAN controller takes fully part in communication.
	CAN_ERRORSTATE_PASSIVE	–	The CAN controller takes part in communication, but does not send active error frames.
	CAN_ERRORSTATE_BUSOFF	–	The CAN controller does not take part in communication.
Description	Error states of a CAN controller.		
Available via	Can_GeneralTypes.h		

]

8.2.8 Can_ControllerStateType

[SWS_Can_91013] Definition of datatype Can_ControllerStateType [

Name	Can_ControllerStateType		
Kind	Enumeration		
Range	CAN_CS_UNINIT	0x00	CAN controller state UNINIT.
	CAN_CS_STARTED	0x01	CAN controller state STARTED.
	CAN_CS_STOPPED	0x02	CAN controller state STOPPED.



△

	CAN_CS_SLEEP	0x03	CAN controller state SLEEP.
Description	States that are used by the several ControllerMode functions.		
Available via	Can_GeneralTypes.h		

]

8.2.9 Can_ErrorType

[SWS_Can_91021] Definition of datatype Can_ErrorType [

Name	Can_ErrorType		
Kind	Enumeration		
Range	CAN_ERROR_BIT_MONITORING1	0x01	A 0 was transmitted and a 1 was read back
	CAN_ERROR_BIT_MONITORING0	0x02	A 1 was transmitted and a 0 was read back
	CAN_ERROR_BIT	0x03	The HW reports a CAN bit error but cannot report distinguish between CAN_ERROR_BIT_MONITORING1 and CAN_ERROR_BIT_MONITORING0
	CAN_ERROR_CHECK_ACK_FAILED	0x04	Acknowledgement check failed
	CAN_ERROR_CHECK_DELIMITER	0x05	Acknowledgement delimiter check failed
	CAN_ERROR_CHECK_ARBITRATION_LOST	0x06	The sender lost in arbitration.
	CAN_ERROR_CHECK_OVERLOAD	0x07	CAN overload detected via an overload frame. Indicates that the receive buffers of a receiver are full.
	CAN_ERROR_CHECK_FORM_FAILED	0x08	Violations of the fixed frame format
	CAN_ERROR_CHECK_STUFFING_FAILED	0x09	Stuffing bits not as expected
	CAN_ERROR_CHECK_CRC_FAILED	0xA	CRC failed
	CAN_ERROR_CHECK_BUS_LOCK	0xB	Bus lock (Bus is stuck to dominant level)
Description	The enumeration represents a superset of CAN Error Types which typical CAN HW is able to report. That means not all CAN HW will be able to support the complete set.		
Available via	Can_GeneralTypes.h		

]

8.2.10 Can_TimeStampType

[SWS_CAN_91029] Definition of datatype Can_TimeStampType

Status: DRAFT

Upstream requirements: [SRS_Can_01181](#)

[

Name	Can_TimeStampType (draft)	
Kind	Structure	
Elements	nanoseconds	
	Type	uint32
	Comment	Nanoseconds part of the time
	seconds	
	Type	uint32
	Comment	Seconds part of the time
Description	Variables of this type are used to express time stamps based on relative time. Value range: * Seconds: 0 .. 4.294.967.295 s (circa 136 years) * Nanoseconds: 0 .. 999.999.999 ns Tags: atp.Status=draft	
Available via	Can_GeneralTypes.h	

]

8.3 Function Definitions

8.3.1 Services affecting the complete hardware unit

8.3.1.1 Can_Init

[SWS_Can_00223] Definition of API function Can_Init

Upstream requirements: [SRS_BSW_00358](#), [SRS_BSW_00414](#)

[

Service Name	Can_Init	
Syntax	<pre>void Can_Init (const Can_ConfigType* Config)</pre>	
Service ID [hex]	0x00	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	Config	Pointer to driver configuration.
Parameters (inout)	None	

▽

△

Parameters (out)	None
Return value	None
Description	This function initializes the module.
Available via	Can.h

]

Symbolic names of the available configuration sets are provided by the configuration description of the Can module. See chapter 10 about configuration description.

[SWS_Can_00174] [If development error detection for the Can module is enabled: The function `Can_Init` shall raise the error `CAN_E_TRANSITION` if the driver is not in state `CAN_UNINIT`.]

[SWS_Can_00408] [If development error detection for the Can module is enabled: The function `Can_Init` shall raise the error `CAN_E_TRANSITION` if the CAN controllers are not in state `UNINIT`.]

8.3.1.2 Can_GetVersionInfo

[SWS_Can_00224] Definition of API function `Can_GetVersionInfo` [

Service Name	Can_GetVersionInfo	
Syntax	<pre>void Can_GetVersionInfo (Std_VersionInfoType* versioninfo)</pre>	
Service ID [hex]	0x07	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	versioninfo	Pointer to where to store the version information of this module.
Return value	None	
Description	This function returns the version information of this module.	
Available via	Can.h	

]

[SWS_Can_00177] [If development error detection for the Can module is enabled: The function `Can_GetVersionInfo` shall raise the error `CAN_E_PARAM_POINTER` if the parameter `versionInfo` is a null pointer.]

8.3.1.3 Can_DeInit

[SWS_Can_91002] Definition of API function Can_DeInit

Upstream requirements: [SRS_Can_01166](#), [SRS_BSW_00336](#)

[

Service Name	Can_DeInit
Syntax	void Can_DeInit (void)
Service ID [hex]	0x10
Sync/Async	Synchronous
Reentrancy	Non Reentrant
Parameters (in)	None
Parameters (inout)	None
Parameters (out)	None
Return value	None
Description	This function de-initializes the module.
Available via	Can.h

]

Note: General behavior and constraints on de-initialization functions are specified by [SWS_BSW_00152], [SWS_BSW_00072], [SWS_BSW_00232], [SWS_BSW_00233]

Caveat: Caller of the [Can_DeInit](#) function has to be sure no CAN controller is in the state STARTED

[SWS_Can_91011]

Upstream requirements: [SRS_BSW_00369](#)

[If development error detection for the Can module is enabled: The function [Can_DeInit](#) shall raise the error [CAN_E_TRANSITION](#) if the driver is not in state CAN_READY.]

[SWS_Can_91012]

Upstream requirements: [SRS_BSW_00369](#)

[If development error detection for the Can module is enabled: The function [Can_DeInit](#) shall raise the error [CAN_E_TRANSITION](#) if any of the CAN controllers is in state STARTED.]

8.3.2 Services affecting one single CAN Controller

8.3.2.1 Can_SetBaudrate

[SWS_CAN_00491] Definition of API function Can_SetBaudrate [

Service Name	Can_SetBaudrate	
Syntax	Std_ReturnType Can_SetBaudrate (uint8 Controller, uint16 BaudRateConfigID)	
Service ID [hex]	0x0f	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different Controllers. Non reentrant for the same Controller.	
Parameters (in)	Controller	CAN controller, whose baud rate shall be set
	BaudRateConfigID	references a baud rate configuration by ID (see CanController BaudRateConfigID)
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: Service request accepted, setting of (new) baud rate started E_NOT_OK: Service request not accepted
	Description	
		This service shall set the baud rate configuration of the CAN controller. Depending on necessary baud rate modifications the controller might have to reset.
Available via	Can.h	

]

There might be several baud rate configurations available. The function [Can_SetBaudrate](#) can be used to switch between different configurations.

Depending on the old and new baud rate configuration only a subset of parameters may be changed during runtime and a re-initialization of the CAN Controller might be avoidable.

If the call of [Can_SetBaudrate](#) will cause a re-initialization of the CAN Controller the CAN controller must be in state STOPPED when this function is called (see [\[SWS_Can_00256\]](#) and [\[SWS_Can_00260\]](#)).

The CAN controller is in state STOPPED after (re-)initialization (see [\[SWS_Can_00259\]](#)).

[SWS_Can_00492] [If development error detection for the Can module is enabled: The function [Can_SetBaudrate](#) shall raise the error [CAN_E_UNINIT](#) and return E_NOT_OK if the driver is not yet initialized.]

[SWS_Can_00493] [If development error detection for the Can module is enabled: The function [Can_SetBaudrate](#) shall raise the error [CAN_E_PARAM_BAUDRATE](#) and return E_NOT_OK if the parameter BaudRateConfigID has an invalid value.]

[SWS_Can_00494] [If development error detection for the Can module is enabled the function `Can_SetBaudrate` shall raise the error `CAN_E_PARAM_CONTROLLER` and return `E_NOT_OK` if the parameter `Controller` is out of range.]

[SWS_Can_00500] [If the requested baud rate change can not performed without a re-initialization of the CAN Controller `E_NO_OK` shall be returned.]

8.3.2.2 Can_SetControllerMode

[SWS_Can_00230] Definition of API function `Can_SetControllerMode` [

Service Name	Can_SetControllerMode	
Syntax	<pre>Std_ReturnType Can_SetControllerMode (uint8 Controller, Can_ControllerStateType Transition)</pre>	
Service ID [hex]	0x03	
Sync/Async	Asynchronous	
Reentrancy	Non Reentrant	
Parameters (in)	Controller	CAN controller for which the status shall be changed
	Transition	Transition value to request new CAN controller state
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: request accepted E_NOT_OK: request not accepted, a development error occurred
	Description	
Description		This function performs software triggered state transitions of the CAN controller State machine.
Available via	Can.h	

]

[SWS_Can_00017]

Upstream requirements: [SRS_SPAL_12169](#), [SRS_Can_01053](#)

[The function `Can_SetControllerMode` shall perform software triggered state transitions of the CAN controller State machine. See also [[SRS_SPAL_12169](#)]]

[SWS_Can_00384] [Each time the CAN controller state machine is triggered with the state transition value `CAN_CS_STARTED`, the function `Can_SetControllerMode` shall re-initialize the CAN controller with the same controller configuration set previously used by functions `Can_SetBaudrate` or `Can_Init`.]

Refer to [[SWS_Can_00048](#)] for the case of a wakeup event from CAN bus occurred during sleep transition.

[SWS_Can_00294] [The function `Can_SetControllerMode` shall disable the wake-up interrupt, while checking the wake-up status.]

[SWS_Can_00196] [The function `Can_SetControllerMode` shall enable interrupts that are needed in the new state.]

[SWS_Can_00425] [Enabling of CAN interrupts shall not be executed, when CAN interrupts have been disabled by function `Can_DisableControllerInterrupts`.]

[SWS_Can_00197] [The function `Can_SetControllerMode` shall disable interrupts that are not allowed in the new state.]

[SWS_Can_00426] [Disabling of CAN interrupts shall not be executed, when CAN interrupts have been disabled by function `Can_DisableControllerInterrupts`.]

[SWS_Can_00198] [If development error detection for the Can module is enabled: if the module is not yet initialized, the function `Can_SetControllerMode` shall raise development error `CAN_E_UNINIT` and return `E_NOT_OK`.]

[SWS_Can_00199] [If development error detection for the Can module is enabled: if the parameter is out of range, the function `Can_SetControllerMode` shall raise development error `CAN_E_PARAM_CONTROLLER` and return `E_NOT_OK`.]

[SWS_Can_00200] [If development error detection for the Can module is enabled: if an invalid transition has been requested, the function `Can_SetControllerMode` shall raise the error `CAN_E_TRANSITION` and return `E_NOT_OK`.]

[SWS_Can_00603] [If selective wakeup is supported by hardware and the requested mode is `CAN_CS_STARTED`, CAN controller shall call the API `CanIf_ConfirmCtrlPnAvailability()` for the corresponding abstract `CanIf ControllerId`. `CanIf_ConfirmCtrlPnAvailability` informs `CanNm` (through `CanIf` and `CanSm`) that selective wakeup is enabled.]

8.3.2.3 Can_DisableControllerInterrupts

[SWS_Can_00231] Definition of API function Can_DisableControllerInterrupts

Upstream requirements: [SRS_BSW_00312](#)

[

Service Name	Can_DisableControllerInterrupts	
Syntax	void Can_DisableControllerInterrupts (uint8 Controller)	
Service ID [hex]	0x04	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	Controller	CAN controller for which interrupts shall be disabled.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This function disables all interrupts for this CAN controller.	
Available via	Can.h	

]

[SWS_Can_00049]

Upstream requirements: [SRS_Can_01043](#)

[The function [Can_DisableControllerInterrupts](#) shall access the CAN controller registers to disable all interrupts for that CAN controller only, if interrupts for that CAN Controller are enabled.]

[SWS_Can_00202] [When [Can_DisableControllerInterrupts](#) has been called several times, [Can_EnableControllerInterrupts](#) must be called as many times before the interrupts are re-enabled.]

Implementation note:

The function [Can_DisableControllerInterrupts](#) can increase a counter on every execution that indicates how many [Can_EnableControllerInterrupts](#) need to be called before the interrupts will be enabled (incremental disable).

[SWS_Can_00204] [The Can module shall track all individual enabling and disabling of interrupts in other functions (i.e. [Can_SetControllerMode](#)) , so that the correct interrupt enable state can be restored.]

Implementation example:

- in 'interrupts enabled mode': For each interrupt state change does not only modify the interrupt enable bit, but also a software flag.
- in 'interrupts disabled mode': only the software flag is modified.
- `Can_DisableControllerInterrupts` and `Can_EnableControllerInterrupts` do not modify the software flags.
- `Can_EnableControllerInterrupts` reads the software flags to re-enable the correct interrupts.

[SWS_Can_00205] [If development error detection for the Can module is enabled: The function `Can_DisableControllerInterrupts` shall raise the error `CAN_E_UNINIT` if the driver not yet initialized.]

[SWS_Can_00206] [If development error detection for the Can module is enabled: The function `Can_DisableControllerInterrupts` shall raise the error `CAN_E_PARAM_CONTROLLER` if the parameter `Controller` is out of range.]

8.3.2.4 Can_EnableControllerInterrupts

[SWS_Can_00232] Definition of API function Can_EnableControllerInterrupts

Upstream requirements: [SRS_BSW_00312](#)

[

Service Name	Can_EnableControllerInterrupts	
Syntax	<pre>void Can_EnableControllerInterrupts (uint8 Controller)</pre>	
Service ID [hex]	0x05	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	Controller	CAN controller for which interrupts shall be re-enabled
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This function enables all allowed interrupts.	
Available via	Can.h	

]

[SWS_Can_00050]

Upstream requirements: [SRS_Can_01043](#)

[The function [Can_EnableControllerInterrupts](#) shall enable all interrupts that must be enabled according the current software status.]

[[SWS_Can_00202](#)] applies to this function.

[SWS_Can_00208] [The function [Can_EnableControllerInterrupts](#) shall perform no action when [Can_DisableControllerInterrupts](#) has not been called before.]

See also implementation example for “[Can_DisableControllerInterrupts](#)”.

[SWS_Can_00209] [If development error detection for the Can module is enabled: The function [Can_EnableControllerInterrupts](#) shall raise the error [CAN_E_UNINIT](#) if the driver not yet initialized.]

[SWS_Can_00210] [If development error detection for the Can module is enabled: The function [Can_EnableControllerInterrupts](#) shall raise the error [CAN_E_PARAM_CONTROLLER](#) if the parameter Controller is out of range.]

8.3.2.5 Can_CheckWakeup

[SWS_Can_00360] Definition of API function Can_CheckWakeup [

Service Name	Can_CheckWakeup	
Syntax	Std_ReturnType Can_CheckWakeup (uint8 Controller)	
Service ID [hex]	0x0b	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	Controller	Controller to be checked for a wakeup.
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: API call has been accepted E_NOT_OK: API call has not been accepted
Description	This function checks if a wakeup has occurred for the given controller.	
Available via	Can.h	

]

[SWS_Can_00361] [The function `Can_CheckWakeup` shall check if the requested CAN controller has detected a wakeup. If a wakeup event was successfully detected, reporting shall be done to EcuM via API `EcuM_SetWakeupEvent`.]

[SWS_Can_00362] [If development error detection for the Can module is enabled: The function `Can_CheckWakeup` shall raise the error `CAN_E_UNINIT` if the driver is not yet initialized.]

[SWS_Can_00363] [If development error detection for the Can module is enabled: The function `Can_CheckWakeup` shall raise the error `CAN_E_PARAM_CONTROLLER` if the parameter `Controller` is out of range.]

8.3.2.6 Can_GetControllerErrorState

[SWS_Can_91004] Definition of API function Can_GetControllerErrorState [

Service Name	Can_GetControllerErrorState	
Syntax	<pre>Std_ReturnType Can_GetControllerErrorState (uint8 ControllerId, Can_ErrorStateType* ErrorStatePtr)</pre>	
Service ID [hex]	0x11	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant for the same ControllerId	
Parameters (in)	ControllerId	Abstracted CanIf ControllerId which is assigned to a CAN controller, which is requested for ErrorState.
Parameters (inout)	None	
Parameters (out)	ErrorStatePtr	Pointer to a memory location, where the error state of the CAN controller will be stored.
Return value	Std_ReturnType	E_OK: Error state request has been accepted. E_NOT_OK: Error state request has not been accepted.
Description	This service obtains the error state of the CAN controller.	
Available via	Can.h	

]

[SWS_Can_91005]

Upstream requirements: [SRS_BSW_00406](#), [SRS_BSW_00416](#)

[If development error detection for the Can module is enabled: if the module is not yet initialized, the function `Can_GetControllerErrorState` shall raise development error `CAN_E_UNINIT` and return `E_NOT_OK`.]

[SWS_Can_91006]

Upstream requirements: [SRS_BSW_00323](#)

[If development error detection for the Can module is enabled: if the parameter ControllerId is out of range, the function [Can_GetControllerErrorState](#) shall raise development error [CAN_E_PARAM_CONTROLLER](#) and return E_NOT_OK.]

[SWS_Can_91007]

Upstream requirements: [SRS_BSW_00323](#)

[If development error detection for the Can module is enabled: if the parameter ErrorStatePtr is a null pointer, the function [Can_GetControllerErrorState](#) shall raise development error [CAN_E_PARAM_POINTER](#) and return E_NOT_OK.]

[SWS_Can_91008]

Upstream requirements: [SRS_Can_01167](#)

[When the API [Can_GetControllerErrorState\(\)](#) is called with Controller Id as input parameter then Can driver shall read the error state register of Can Controller and shall return the error status to upper layer.]

8.3.2.7 Can_GetControllerMode

[SWS_Can_91014] Definition of API function Can_GetControllerMode [

Service Name	Can_GetControllerMode	
Syntax	Std_ReturnType Can_GetControllerMode (uint8 Controller, Can_ControllerStateType* ControllerModePtr)	
Service ID [hex]	0x12	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	Controller	CAN controller for which the status shall be requested.
Parameters (inout)	None	
Parameters (out)	ControllerModePtr	Pointer to a memory location, where the current mode of the CAN controller will be stored.
Return value	Std_ReturnType	E_OK: Controller mode request has been accepted. E_NOT_OK: Controller mode request has not been accepted.
Description	This service reports about the current status of the requested CAN controller.	
Available via	Can.h	

]

[SWS_Can_91015] [The service [Can_GetControllerMode](#) shall return the mode of the requested CAN controller.]

[SWS_Can_91016]

Upstream requirements: [SRS_BSW_00406](#), [SRS_BSW_00416](#)

[If development error detection for the Can module is enabled: The function `Can_GetControllerMode` shall raise the error `CAN_E_UNINIT` and return `E_NOT_OK` if the driver is not yet initialized.]

[SWS_Can_91017]

Upstream requirements: [SRS_BSW_00323](#)

[If parameter `Controller` of `Can_GetControllerMode()` has an invalid value, the `CanDrv` shall report development error code `CAN_E_PARAM_CONTROLLER` to the `Det_ReportError` service of the DET.]

[SWS_Can_91018]

Upstream requirements: [SRS_BSW_00323](#)

[If parameter `ControllerModePtr` of `Can_GetControllerMode()` has a null pointer, the `CanDrv` shall report development error code `CAN_E_PARAM_POINTER` to the `Det_ReportError` service of the DET.]

8.3.2.8 canGetControllerRxErrorCounter

[SWS_Can_00511] Definition of API function `Can_GetControllerRxErrorCounter`

[

Service Name	Can_GetControllerRxErrorCounter	
Syntax	<pre>Std_ReturnType Can_GetControllerRxErrorCounter (uint8 ControllerId, uint8* RxErrorCounterPtr)</pre>	
Service ID [hex]	0x30	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant for the same ControllerId	
Parameters (in)	ControllerId	CAN controller, whose current Rx error counter shall be acquired.
Parameters (inout)	None	
Parameters (out)	RxErrorCounterPtr	Pointer to a memory location, where the current Rx error counter of the CAN controller will be stored.
Return value	Std_ReturnType	E_OK: Rx error counter available. E_NOT_OK: Wrong ControllerId, or Rx error counter not available.
Description	<p>Returns the Rx error counter for a CAN controller. This value might not be available for all CAN controllers, in which case <code>E_NOT_OK</code> would be returned.</p> <p>Please note that the value of the counter might not be correct at the moment the API returns it, because the Rx counter is handled asynchronously in hardware. Applications should not trust this value for any assumption about the current bus state.</p>	
Available via	Can.h	

]

[SWS_Can_00512]

Upstream requirements: [SRS_BSW_00406](#)

[If development error detection for the Can module is enabled: if the module is not yet initialized, the function Can_GetControllerRxErrorCounter shall raise development error [CAN_E_UNINIT](#) and return E_NOT_OK.]

[SWS_Can_00513]

Upstream requirements: [SRS_BSW_00323](#)

[If development error detection for the Can module is enabled: if the parameter ControllerId is out of range, the function Can_GetControllerRxErrorCounter shall raise development error [CAN_E_PARAM_CONTROLLER](#) and return E_NOT_OK.]

[SWS_Can_00514]

Upstream requirements: [SRS_BSW_00323](#)

[If development error detection for the Can module is enabled: if the parameter RxErrorCounterPtr is a null pointer, the function Can_GetControllerRxErrorCounter shall raise development error [CAN_E_PARAM_POINTER](#) and return E_NOT_OK.]

[SWS_Can_00515]

Upstream requirements: [SRS_Can_01170](#)

[When the API Can_GetControllerRxErrorCounter is called with Controller Id as input parameter then Can driver shall read the Rx error counter register of Can Controller and shall return the Rx error count to upper layer.]

8.3.2.9 Can_GetControllerTxErrorCounter

[SWS_Can_00516] Definition of API function Can_GetControllerTxErrorCounter

[

Service Name	Can_GetControllerTxErrorCounter	
Syntax	<pre>Std_ReturnType Can_GetControllerTxErrorCounter (uint8 ControllerId, uint8* TxErrorCounterPtr)</pre>	
Service ID [hex]	0x31	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant for the same ControllerId	
Parameters (in)	ControllerId	CAN controller, whose current Tx error counter shall be acquired.
Parameters (inout)	None	



△

Parameters (out)	TxErroCounterPtr	Pointer to a memory location, where the current Tx error counter of the CAN controller will be stored.
Return value	Std_ReturnType	E_OK: Tx error counter available. E_NOT_OK: Wrong ControllerId, or Tx error counter not available.
Description	Returns the Tx error counter for a CAN controller. This value might not be available for all CAN controllers, in which case E_NOT_OK would be returned. Please note that the value of the counter might not be correct at the moment the API returns it, because the Tx counter is handled asynchronously in hardware. Applications should not trust this value for any assumption about the current bus state.	
Available via	Can.h	

]

[SWS_Can_00517]

Upstream requirements: [SRS_BSW_00406](#)

[If development error detection for the Can module is enabled: if the module is not yet initialized, the function [Can_GetControllerTxErrorCounter](#) shall raise development error [CAN_E_UNINIT](#) and return E_NOT_OK.]

[SWS_Can_00518]

Upstream requirements: [SRS_BSW_00323](#)

[If development error detection for the Can module is enabled: if the parameter ControllerId is out of range, the function [Can_GetControllerTxErrorCounter](#) shall raise development error [CAN_E_PARAM_CONTROLLER](#) and return E_NOT_OK.]

[SWS_Can_00519]

Upstream requirements: [SRS_BSW_00323](#)

[If development error detection for the Can module is enabled: if the parameter TxErrorCounterPtr is a null pointer, the function [Can_GetControllerTxErrorCounter](#) shall raise development error [CAN_E_PARAM_POINTER](#) and return E_NOT_OK.]

[SWS_Can_00520]

Upstream requirements: [SRS_Can_01170](#)

[When the API [Can_GetControllerTxErrorCounter](#) is called with Controller Id as input parameter then Can driver shall read the Tx error counter register of Can Controller and shall return the Tx error count to upper layer.]

8.3.2.10 Can_GetCurrentTime

[SWS_CAN_91026] Definition of API function Can_GetCurrentTime

Status: DRAFT

Upstream requirements: [SRS_Can_01181](#)

[

Service Name	Can_GetCurrentTime (draft)	
Syntax	<pre>Std_ReturnType Can_GetCurrentTime (uint8 ControllerId, Can_TimeStampType* timeStampPtr)</pre>	
Service ID [hex]	0x32	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	ControllerId	Index of the addresses CAN controller.
Parameters (inout)	None	
Parameters (out)	timeStampPtr	current time stamp
Return value	Std_ReturnType	E_OK: successful E_NOT_OK: failed
Description	Returns a time value out of the HW registers according to the capability of the HW Important Note: Can_GetCurrentTime may be called within an exclusive area. Tags: atp.Status=draft	
Available via	Can.h	

]

[SWS_Can_00521]

Status: DRAFT

[If development error detection is enabled: the function shall check that the service [Can_Init](#) was previously called. If the check fails, the function shall raise the development error [CAN_E_UNINIT](#).]

[SWS_Can_00522]

Status: DRAFT

[If development error detection is enabled: the function shall check the parameter ControllerId for being valid. If the check fails, the function shall raise the development error [CAN_E_PARAM_CONTROLLER](#).]

[SWS_Can_00523]

Status: DRAFT

[If development error detection is enabled: the function shall check the parameter timeStampPtr for being valid. If the check fails, the function shall raise the development error [CAN_E_PARAM_POINTER](#).]

[SWS_Can_00524]

Status: DRAFT

[The function shall be pre-compile time configurable On/Off by the configuration parameter: CanGlobalTimeSupport.]

8.3.2.11 Can_EnableEgressTimeStamp

[SWS_CAN_91025] Definition of API function Can_EnableEgressTimeStamp

Status: DRAFT

Upstream requirements: [SRS_Can_01181](#)

[

Service Name	Can_EnableEgressTimeStamp (draft)	
Syntax	<pre>void Can_EnableEgressTimeStamp (Can_HwHandleType Hth)</pre>	
Service ID [hex]	0x33	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	Hth	information which HW-transmit handle shall be used for enabling the time stamp. Note: This is the smallest granularity which can be added for enabling the timestamp, at HTH level, without affecting the performance.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Activates egress time stamping on a dedicated HTH. Some HW does store once the egress time stamp marker and some HW needs it always before transmission. There will be no "disable" functionality, due to the fact, that the message type is always "time stamped" by network design. Tags: atp.Status=draft	
Available via	Can.h	

]

[SWS_Can_00525]

Status: DRAFT

[If development error detection is enabled: the function shall check that the service [Can_Init](#) was previously called. If the check fails, the function shall raise the development error [CAN_E_UNINIT](#).]

[SWS_Can_00526]

Status: DRAFT

[If development error detection for the Can module is enabled: The function `Can_Write` shall raise the error `CAN_E_PARAM_HANDLE` and shall return `E_NOT_OK` if the parameter `Hth` is not a configured Hardware Transmit Handle.]

[SWS_Can_00527]

Status: DRAFT

[The function shall be pre compile time configurable On/Off by the configuration parameter: `CanGlobalTimeSupport`.]

[SWS_Can_00528]

Status: DRAFT

[Caveat: The function requires previous controller initialization (`Can_Init`).]

8.3.2.12 Can_GetEgressTimeStamp

[SWS_CAN_91027] Definition of API function Can_GetEgressTimeStamp

Status: DRAFT

Upstream requirements: [SRS_Can_01181](#)

[

Service Name	Can_GetEgressTimeStamp (draft)	
Syntax	<pre>Std_ReturnType Can_GetEgressTimeStamp (PduIdType TxPduId, Can_HwHandleType Hth, Can_TimeStampType* timeStampPtr)</pre>	
Service ID [hex]	0x34	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant for the same TxPduId.	
Parameters (in)	TxPduId	L-PDU handle of CAN L-PDU for which the time stamp shall be returned.
	Hth	HW-transmit handle for which the egress timestamp shall be retrieved
Parameters (inout)	None	
Parameters (out)	timeStampPtr	current time stamp
Return value	Std_ReturnType	E_OK: success E_NOT_OK: failed to read time stamp.
Description	Reads back the egress time stamp on a dedicated message object. It needs to be called within the TxConfirmation() function. Tags: atp.Status=draft	





Available via	Can.h
----------------------	-------

]

[SWS_Can_00529]

Status: DRAFT

[If development error detection is enabled: the function shall check that the service `Can_Init` was previously called. If the check fails, the function shall raise the development error `CAN_E_UNINIT`.]

[SWS_Can_00530]

Status: DRAFT

[If development error detection is enabled: the function shall check the parameter `TxPdul` for being valid. If the check fails, the function shall raise the development error `CAN_E_PARAM_LPDU`.]

[SWS_Can_00531]

Status: DRAFT

[If development error detection for the Can module is enabled: The function `Can_GetEgressTimeStamp` shall raise the error `CAN_E_PARAM_HANDLE` and shall return `E_NOT_OK` if the parameter `Hth` is not a configured Hardware Transmit Handle.]

[SWS_Can_00532]

Status: DRAFT

[If development error detection is enabled: the function shall check the parameter `timeStampPtr` for being valid. If the check fails, the function shall raise the development error `CAN_E_PARAM_POINTER`.]

[SWS_Can_00533]

Status: DRAFT

[The function shall be pre-compile time configurable On/Off by the configuration parameter: `CanGlobalTimeSupport`.]

[SWS_Can_00534]

Status: DRAFT

[Caveat: The function requires previous controller initialization (`Can_Init`).]

8.3.2.13 Can_GetIngressTimeStamp

[SWS_CAN_91028] Definition of API function Can_GetIngressTimeStamp

Status: DRAFT

Upstream requirements: [SRS_Can_01181](#)

[

Service Name	Can_GetIngressTimeStamp (draft)	
Syntax	<pre>Std_ReturnType Can_GetIngressTimeStamp (Can_HwHandleType Hrh, Can_TimeStampType* timeStampPtr)</pre>	
Service ID [hex]	0x35	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant for the same Hrh, Reentrant for different Hrh	
Parameters (in)	Hrh	HW-receive handle for which the ingress timestamp shall be retrieved
Parameters (inout)	None	
Parameters (out)	timeStampPtr	current time stamp
Return value	Std_ReturnType	E_OK: success E_NOT_OK: failed to read time stamp.
Description	Reads back the ingress time stamp on a dedicated message object. It needs to be called within the RxIndication() function. Tags: atp.Status=draft	
Available via	Can.h	

]

[SWS_Can_00535]

Status: DRAFT

[If development error detection is enabled: the function shall check that the service [Can_Init](#) was previously called. If the check fails, the function shall raise the development error [CAN_E_UNINIT](#).]

[SWS_Can_00536]

Status: DRAFT

[If development error detection for the Can module is enabled: The function Can_GetIngressTimeStamp shall raise the error [CAN_E_PARAM_HANDLE](#) and shall return E_NOT_OK if the parameter Hrh is not a configured Hardware Receive Handle.]

[SWS_Can_00537]

Status: DRAFT

[If development error detection is enabled: the function shall check the parameter timeStampPtr for being valid. If the check fails, the function shall raise the development error [CAN_E_PARAM_POINTER](#).]

[SWS_Can_00538]

Status: DRAFT

[The function shall be pre-compile time configurable On/Off by the configuration parameter: CanGlobalTimeSupport.]

[SWS_Can_00539]

Status: DRAFT

[Caveat: The function requires previous controller initialization ([Can_Init](#)).]

8.3.3 Services affecting a Hardware Handle

8.3.3.1 Can_Write

[SWS_Can_00233] Definition of API function Can_Write

Upstream requirements: [SRS_BSW_00312](#)

[

Service Name	Can_Write	
Syntax	<pre>Std_ReturnType Can_Write (Can_HwHandleType Hth, const Can_PduType* PduInfo)</pre>	
Service ID [hex]	0x06	
Sync/Async	Synchronous	
Reentrancy	Reentrant (thread-safe)	
Parameters (in)	Hth	information which HW-transmit handle shall be used for transmit. Implicitly this is also the information about the controller to use because the Hth numbers are unique inside one hardware unit.
	PduInfo	Pointer to SDU user memory, Data Length and Identifier.
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: Write command has been accepted E_NOT_OK: development error occurred CAN_BUSY: No TX hardware buffer available or pre-emptive call of Can_Write that can't be implemented re-entrant (see Can_ReturnType)
Description	This function is called by CanIf to pass a CAN message to CanDrv for transmission.	
Available via	Can.h	

]

The function [Can_Write](#) first checks if the hardware transmit object that is identified by the HTH is free and if another [Can_Write](#) is ongoing for the same HTH.

[SWS_Can_00212]

Upstream requirements: [SRS_Can_01049](#)

[The function [Can_Write](#) shall perform following actions if the hardware transmit object is free:

- The mutex for that HTH is set to 'signaled'
- The ID, Data Length and SDU are put in a format appropriate for the hardware (if necessary) and copied in the appropriate hardware registers/buffers.
- All necessary control operations to initiate the transmit are done
- The mutex for that HTH is released
- The function returns with E_OK

]

[SWS_Can_00213]

Upstream requirements: [SRS_Can_01049](#)

[The function [Can_Write](#) shall perform no actions if the hardware transmit object is busy with another transmit request for an L-PDU:

1. The transmission of the other L-PDU shall not be cancelled and the function [Can_Write](#) is left without any actions.
2. The function [Can_Write](#) shall return CAN_BUSY.

]

[SWS_Can_00214]

Upstream requirements: [SRS_BSW_00312](#), [SRS_Can_01049](#)

[The function [Can_Write](#) shall return CAN_BUSY if a preemptive call of [Can_Write](#) has been issued, that could not be handled reentrant (i.e. a call with the same HTH).]

[SWS_Can_00275] [The function [Can_Write](#) shall be non-blocking.]

[SWS_Can_00216] [If development error detection for the Can module is enabled: The function [Can_Write](#) shall raise the error [CAN_E_UNINIT](#) and shall return E_NOT_OK if the driver is not yet initialized.]

[SWS_Can_00217] [If development error detection for the Can module is enabled: The function [Can_Write](#) shall raise the error [CAN_E_PARAM_HANDLE](#) and shall return E_NOT_OK if the parameter `Hth` is not a configured Hardware Transmit Handle.]

[SWS_Can_00218]

Upstream requirements: [SRS_Can_01005](#)

[The function [Can_Write](#) shall return E_NOT_OK and if development error detection for the CAN module is enabled shall raise the error [CAN_E_PARAM_DATA_LENGTH](#):

- If the length is more than 64 byte.
- If the length is more than 8 byte and the CAN controller is not in CAN FD mode (no [CanControllerFdBaudrateConfig](#)).
- If the length is more than 8 byte and the CAN controller is in CAN FD mode (valid [CanControllerFdBaudrateConfig](#)), but the CAN FD flag in [Can_PduType->id](#) is not set (refer to Chapter 8.2.3).

]

[SWS_Can_00219] [If development error detection for CanDrv is enabled: [Can_Write\(\)](#) shall raise [CAN_E_PARAM_POINTER](#) and shall return E_NOT_OK if the parameter [PduInfo](#) is a null pointer.]

[SWS_Can_00503] [[Can_Write\(\)](#) shall accept a null pointer as SDU ([Can_PduType.Can_SduPtrType](#) NULL) if the trigger transmit API is enabled for this hardware object ([CanTriggerTransmitEnable](#) TRUE).]

[SWS_Can_00504] [If the trigger transmit API is enabled for the hardware object, [Can_Write\(\)](#) shall interpret a null pointer as SDU ([Can_PduType.Can_SduPtrType](#) NULL) as request for using the trigger transmit interface. If so and the hardware object is free, [Can_Write\(\)](#) shall call [CanIf_TriggerTransmit\(\)](#) with the maximum size of the message buffer to acquire the PDU's data.]

Note: Using the message buffer size allows for late changes of the PDU size, e.g. if a container PDU receives another contained PDU between the call to [Can_Write\(\)](#) and the call of [CanIf_TriggerTransmit\(\)](#).

[SWS_Can_00505] [If development error detection for CanDrv is enabled: [Can_Write\(\)](#) shall raise [CAN_E_PARAM_POINTER](#) and shall return E_NOT_OK if the trigger transmit API is disabled for this hardware object ([CanTriggerTransmitEnable](#) = FALSE) and the SDU pointer inside [PduInfo](#) is a null pointer.]

[SWS_Can_00506]

Upstream requirements: [SRS_BSW_00449](#), [SRS_BSW_00357](#), [SRS_BSW_00369](#), [SRS_Can_01130](#)

[[Can_Write\(\)](#) shall return E_NOT_OK if the trigger transmit API ([CanIf_TriggerTransmit\(\)](#)) returns E_NOT_OK.]

[SWS_Can_00486] [The CAN Frame has to be sent according to the two most significant bits of Can_PduType->id. The CAN FD frame bit is only evaluated if CAN Controller is in CAN FD mode (valid CanControllerFdBaudrateConfig).]

[SWS_Can_00502]

Upstream requirements: [SRS_Can_01160](#)

[If PduInfo->SduLength does not match possible DLC values CanDrv shall use the next higher valid DLC for transmission with initialization of unused bytes to the value of the corresponding CanFdPaddingValue (see [ECUC_Can_00485](#)).]

8.4 Call-back notifications

This chapter lists all functions provided by the Can module to lower layer modules. The lower layer module of Can module is the SPI module. The SPI module, which is part of the MCAL, may used to exchange data between the microcontroller and an external CAN controller.

The Can module does not provide callback functions. Only synchronous MCAL API may used to access external CAN controllers.

8.4.1 Call-out function

The AUTOSAR CAN module supports optional L-PDU callouts on every reception of a L-PDU.

[SWS_Can_00443] Definition of configurable interface <LPDU_CalloutName> [

Service Name	<LPDU_CalloutName>	
Syntax	<pre>boolean <LPDU_CalloutName> (uint8 Hrh, Can_IdType CanId, uint8 CanDataLegth, const uint8* CanSduPtr)</pre>	
Service ID [hex]	0x20	
Sync/Async	Asynchronous	
Reentrancy	Non Reentrant	
Parameters (in)	Hrh	-
	CanId	-
	CanDataLegth	-
	CanSduPtr	-
Parameters (inout)	None	
Parameters (out)	None	



△

Return value	boolean	-
Description	-	
Available via	Can_Externals.h	

]

where <LPDU_CalloutName> has to be substituted with the concrete L-PDU callout name which is configurable, see [\[ECUC_Can_00434\]](#).

[SWS_Can_00444] [If the L-PDU callout returns false, the L-PDU shall not be processed any further.]

8.4.2 Enabling/Disabling wakeup notification

[SWS_Can_00445] [Can driver shall use the following APIs provided by Icu driver, to enable and disable the wakeup event notification:

- Icu_EnableNotification
- Icu_DisableNotification

]

[SWS_Can_00446] [Icu_EnableNotification shall be called when "external" Can controllers have been transitioned to SLEEP state.]

[SWS_Can_00447] [Icu_DisableNotification shall be called when "external" Can controllers have been transitioned to STOPPED state.]

8.5 Scheduled functions

These functions are directly called by Basic Software Scheduler. The following functions shall have no return value and no parameter. All functions shall be non-reentrant.

[SWS_Can_00110]

Upstream requirements: [SRS_BSW_00428](#)

[There is no requirement regarding the execution order of the CAN main processing functions.]

8.5.1

8.5.1.1 Can_MainFunction_Write

[SWS_Can_00225] Definition of scheduled function Can_MainFunction_Write [

Service Name	Can_MainFunction_Write
Syntax	void Can_MainFunction_Write (void)
Service ID [hex]	0x01
Description	This function performs the polling of TX confirmation when CAN_TX_PROCESSING is set to POLLING.
Available via	SchM_Can.h

]

[SWS_Can_00031]

Upstream requirements: [SRS_BSW_00432](#), [SRS_BSW_00373](#), [SRS_SPAL_00157](#)

[The function [Can_MainFunction_Write](#) shall perform the polling of TX confirmation when CanTxProcessing is set to POLLING or MIXED. In case of MIXED processing only the hardware objects for which CanHardwareObjectUsesPolling is set to TRUE shall be polled.]

[SWS_Can_00178] [The Can module may implement the function [Can_MainFunction_Write](#) as empty define in case no polling at all is used.]

[SWS_Can_00441] [If more than one main function period is configured by CanMainFunctionRWPeriods (see [ECUC_Can_00437](#)), the name of the [Can_MainFunction_Write](#)() functions shall be

- [Can_MainFunction_Write](#)_{CanMainFunctionRWPeriods.ShortName}() for each CanMainFunctionRWPeriods that is referenced by at least one TRANSMIT CanHardwareObject (see [ECUC_Can_00438](#)).

]

8.5.1.2 Can_MainFunction_Read

[SWS_Can_00226] Definition of scheduled function Can_MainFunction_Read [

Service Name	Can_MainFunction_Read
Syntax	void Can_MainFunction_Read (void)
Service ID [hex]	0x08
Description	This function performs the polling of RX indications when CAN_RX_PROCESSING is set to POLLING.
Available via	SchM_Can.h

]

[SWS_Can_00108]

Upstream requirements: [SRS_BSW_00432](#), [SRS_SPAL_00157](#)

[The function [Can_MainFunction_Read](#) shall perform the polling of RX indications when CanRxProcessing is set to POLLING or MIXED. In case of MIXED processing only the hardware objects for which CanHardwareObjectUsesPolling is set to TRUE shall be polled.]

[SWS_Can_00180] [The Can module may implement the function [Can_MainFunction_Read](#) as empty define in case no polling at all is used.]

[SWS_Can_00442] [If more than one main function period is configured by CanMainFunctionRWPeriods (see [ECUC_Can_00437](#)), the name of the [Can_MainFunction_Read](#)() functions shall be

- [Can_MainFunction_Read_<CanMainFunctionRWPeriods.ShortName>\(\)](#) for each CanMainFunctionRWPeriods that is referenced by at least one RECEIVE CanHardwareObject (see [ECUC_Can_00438](#)).

]

8.5.1.3 Can_MainFunction_BusOff

[SWS_Can_00227] Definition of scheduled function Can_MainFunction_BusOff [

Service Name	Can_MainFunction_BusOff
Syntax	void Can_MainFunction_BusOff (void)
Service ID [hex]	0x09
Description	This function performs the polling of bus-off events that are configured statically as 'to be polled'.
Available via	SchM_Can.h

]

[SWS_Can_00109]

Upstream requirements: [SRS_BSW_00432](#), [SRS_SPAL_00157](#)

[The function [Can_MainFunction_BusOff](#) shall perform the polling of bus-off events that are configured statically as 'to be polled'.]

[SWS_Can_00183] [The Can module may implement the function [Can_MainFunction_BusOff](#) as empty define in case no polling at all is used.]

8.5.1.4 Can_MainFunction_Wakeup

[SWS_Can_00228] Definition of scheduled function Can_MainFunction_Wakeup [

[

Service Name	Can_MainFunction_Wakeup
Syntax	void Can_MainFunction_Wakeup (void)
Service ID [hex]	0x0a
Description	This function performs the polling of wake-up events that are configured statically as 'to be polled'.
Available via	SchM_Can.h

]

[SWS_Can_00112]

Upstream requirements: [SRS_BSW_00432](#), [SRS_SPAL_00157](#)

[The function [Can_MainFunction_Wakeup](#) shall perform the polling of wake-up events that are configured statically as 'to be polled'.]

[SWS_Can_00185] [The Can module may implement the function [Can_MainFunction_Wakeup](#) as empty define in case no polling at all is used.]

8.5.1.5 Can_MainFunction_Mode

[SWS_Can_00368] Definition of scheduled function [Can_MainFunction_Mode](#) [

Service Name	Can_MainFunction_Mode
Syntax	void Can_MainFunction_Mode (void)
Service ID [hex]	0x0c
Description	This function performs the polling of CAN controller mode transitions.
Available via	SchM_Can.h

]

[SWS_Can_00369] [The function [Can_MainFunction_Wakeup](#) shall implement the polling of CAN status register flags to detect transition of CAN Controller state. Compare to Chapter 7.3.2.]

8.6 Expected Interfaces

In this chapter all interfaces required from other modules are listed.

8.6.1 Mandatory Interfaces

This chapter defines all interfaces which are required to fulfill the core functionality of the module. All callback functions that are called by the Can module are implemented in the CanIf module. These callback functions are not configurable.

[SWS_Can_00234] Definition of mandatory interfaces required by module [Can](#)

Upstream requirements: [SRS_Can_01055](#)

[

API Function	Header File	Description
CanIf_ControllerBusOff	CanIf.h	This service indicates a Controller BusOff event referring to the corresponding CAN Controller with the abstract CanIf ControllerId.

▽



API Function	Header File	Description
CanIf_ControllerModeIndication	CanIf.h	This service indicates a controller state transition referring to the corresponding CAN controller with the abstract CanIf ControllerId.
CanIf_RxIndication	CanIf.h	This service indicates a successful reception of a received CAN Rx L-PDU to the CanIf after passing all filters and validation checks.
CanIf_TxConfirmation	CanIf.h	This service confirms a previously successfully processed transmission of a CAN TxPDU.
Det_ReportRuntimeError	Det.h	Service to report runtime errors. If a callout has been configured then this callout shall be called.
GetCounterValue	Os.h	This service reads the current count value of a counter (returning either the hardware timer ticks if counter is driven by hardware or the software ticks when user drives counter).

]

8.6.2 Optional Interfaces

This chapter defines all interfaces that are required to fulfill an optional functionality of the module.

[SWS_Can_00235] Definition of optional interfaces requested by module Can

Upstream requirements: [SRS_SPAL_12056](#), [SRS_Can_01054](#)

[

API Function	Header File	Description
CanIf_ConfirmCtrlPnAvailability (draft)	CanIf.h	This service indicates that the controller is running in PN communication mode referring to the corresponding CAN controller with the abstract Can If ControllerId. Tags: atp.Status=draft
CanIf_ControllerErrorStatePassive	CanIf.h	The function derives the ErrorCounterTreshold from RxErrorCounter/ TxErrorCounter values and reports it to the IdsM as security event SEV_CAN_ERRORSTATE_PASSIVE to the IdsM. It also prepares the context data for the respective security event.
CanIf_ErrorNotification	CanIf.h	The function shall derive the bus error source rx or tx from the parameter CanError and report the bus error as security event SEV_CAN_TX_ERROR_DETECTED or SEV_CAN_RX_ERROR_DETECTED. It also prepares the context data for the respective security event.





API Function	Header File	Description
CanIf_TriggerTransmit	CanIf.h	Within this API, the upper layer module (called module) shall check whether the available data fits into the buffer size reported by PduInfoPtr->SduLength. If it fits, it shall copy its data into the buffer provided by PduInfoPtr->SduDataPtr and update the length of the actual copied data in PduInfoPtr->SduLength. If not, it returns E_NOT_OK without changing PduInfoPtr.
Det_ReportError	Det.h	Service to report development errors.
EcuM_CheckWakeup	EcuM.h	This function can be called to check the given wakeup sources. It will pass the argument to the integrator function EcuM_CheckWakeupHook. It can also be called by the ISR of a wakeup source to set up the PLL and check other wakeup sources that may be connected to the same interrupt.
EcuM_SetWakeupEvent	EcuM.h	Sets the wakeup event.
Icu_DisableNotification	Icu.h	This function disables the notification of a channel.
Icu_EnableNotification	Icu.h	This function enables the notification on the given channel.

└

8.6.3 Configurable Interfaces

There is no configurable target for the Can module. The Can module always reports to CanIf module.

9 Sequence diagrams

9.1 Interaction between Can and CanIf module

For sequence diagrams see the CanIf module Specification [1].
There are described the sequences for Transmission, Reception and Error Handling.

9.2 Wakeup sequence

For Wakeup sequence diagrams refer to Specification of ECU State Manager [5].

10 Configuration specification

This chapter defines configuration parameters and their clustering into containers. In order to support the specification Chapter 10.1 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave Chapter 10.1 in the specification to guarantee comprehension.

Chapter 10.2 specifies the structure (containers) and the parameters of the Can module.

Chapter 10.3 specifies published information of the Can module.

10.1 How to read this chapter

For details refer to the chapter 10.1 "Introduction to configuration specification" in SWS_BSWGeneral [3]

10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters describe Chapters 7 and Chapter 8. The described parameters are input for the Can module configurator.

[SWS_Can_00022]

Upstream requirements: [SRS_BSW_00159](#)

[The code configuration of the Can module is CAN controller specific. If the CAN controller is sited on-chip, the code generation tool for the Can module is μ Controller specific. If the CAN controller is an external device, the generation tool must not be μ Controller specific.]

[SWS_Can_00024]

Upstream requirements: [SRS_BSW_00167](#), [SRS_SPAL_12463](#)

[The valid values that can be configured are hardware dependent. Therefore the rules and constraints can't be given in the standard. The configuration tool is responsible to do a static configuration checking, also regarding dependencies between modules (i.e. Port driver, MCU driver etc.)]

[SWS_Can_00507] [The Can Driver module shall reject configurations with partition mappings which are not supported by the implementation.]

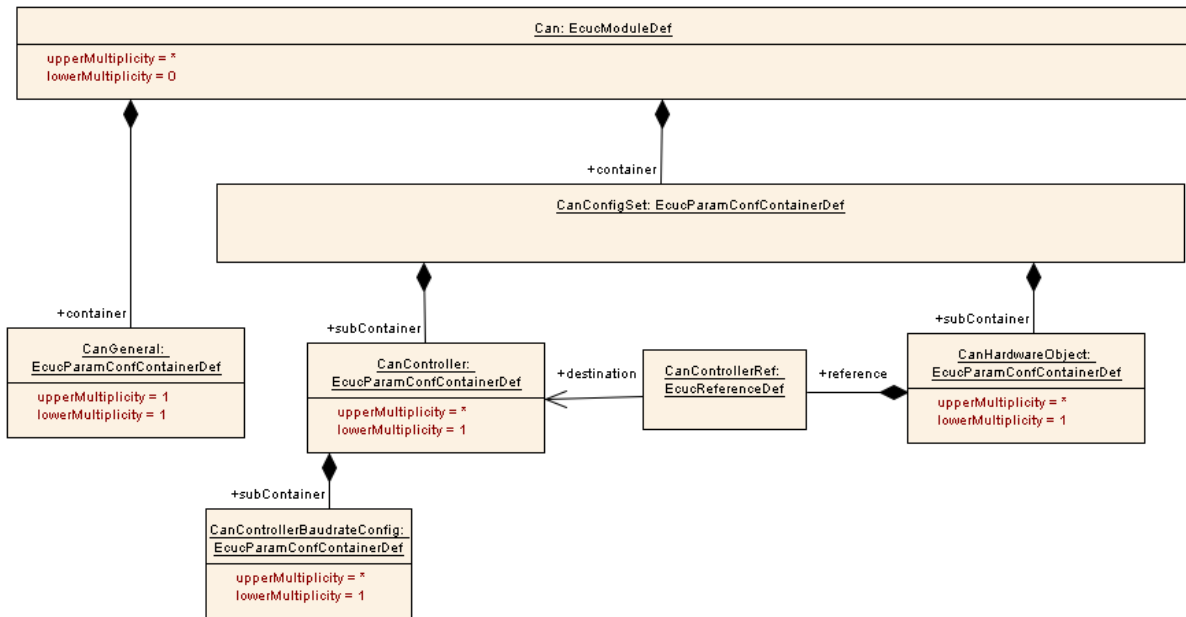


Figure 10.1: Can Module Configuration Layout

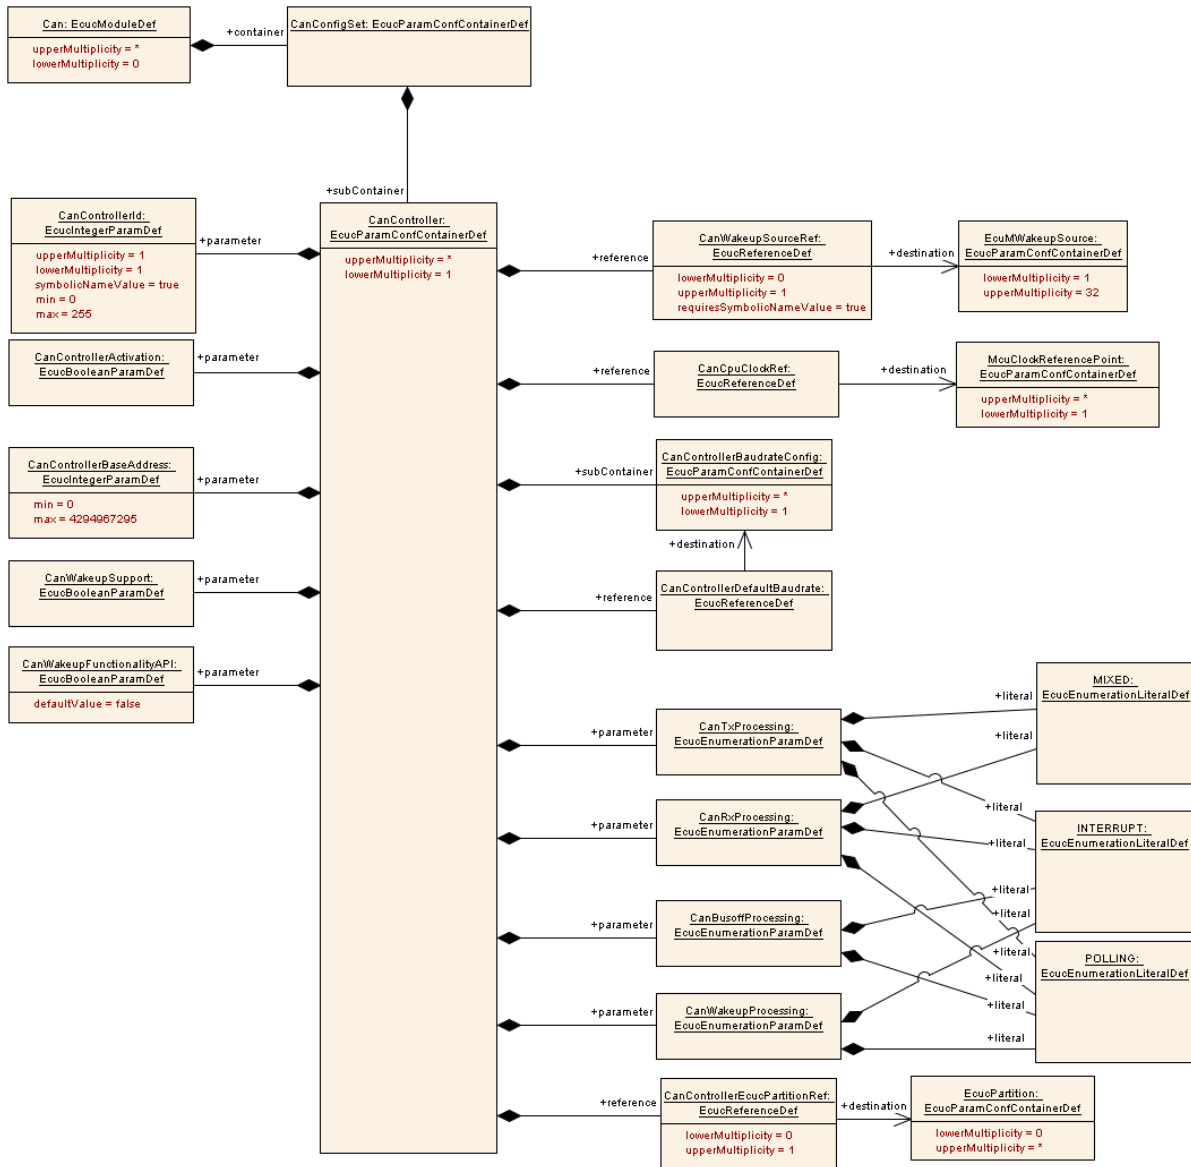


Figure 10.2: Can Controller Configuration Layout

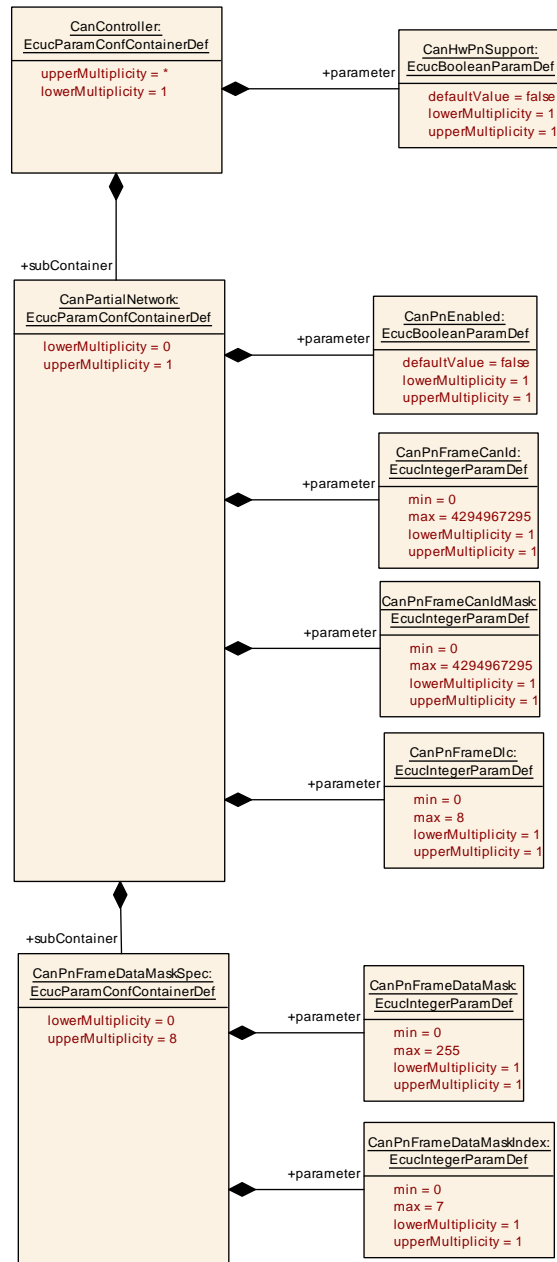


Figure 10.3: Can Controller Partial Network Configuration

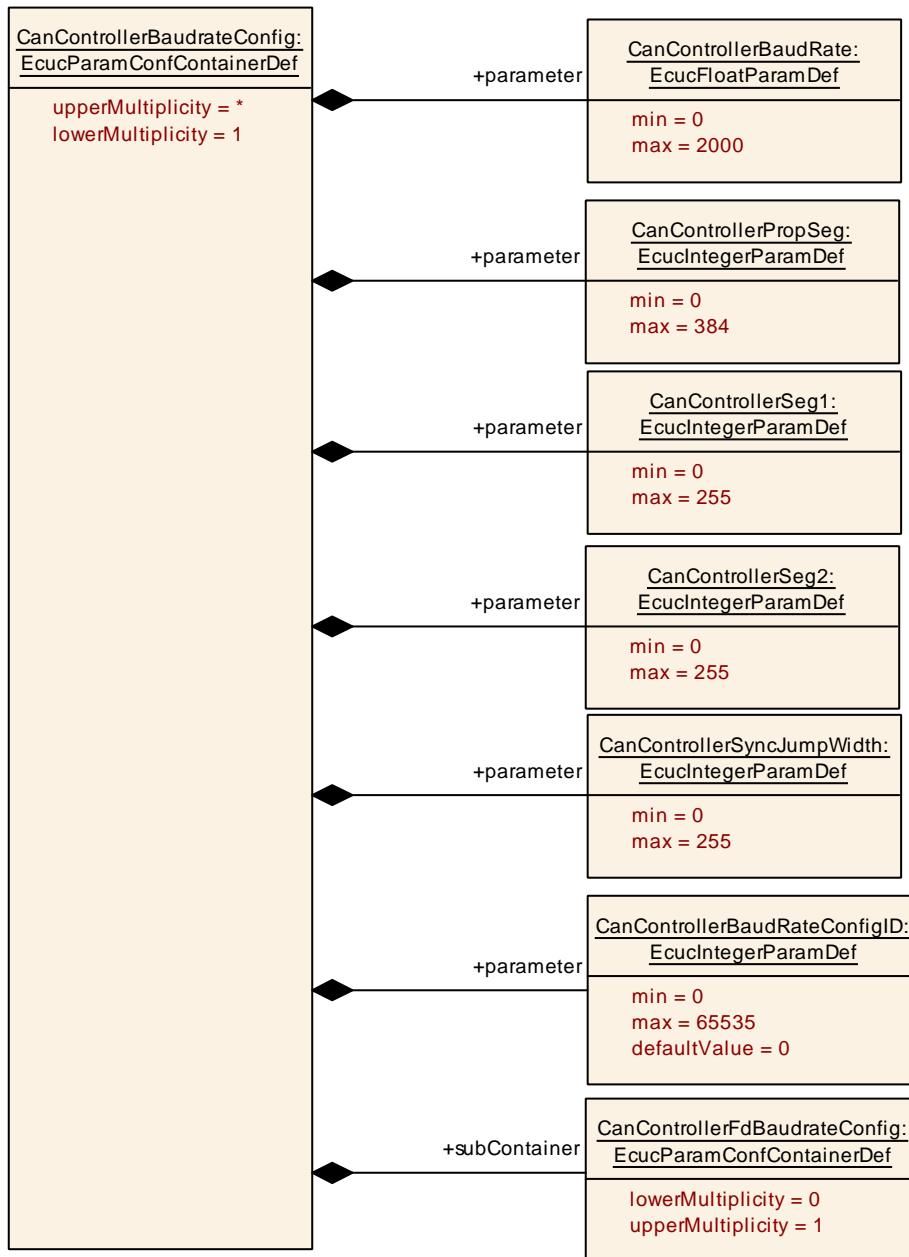


Figure 10.4: Can Controller Baud Rate Configuration Layout

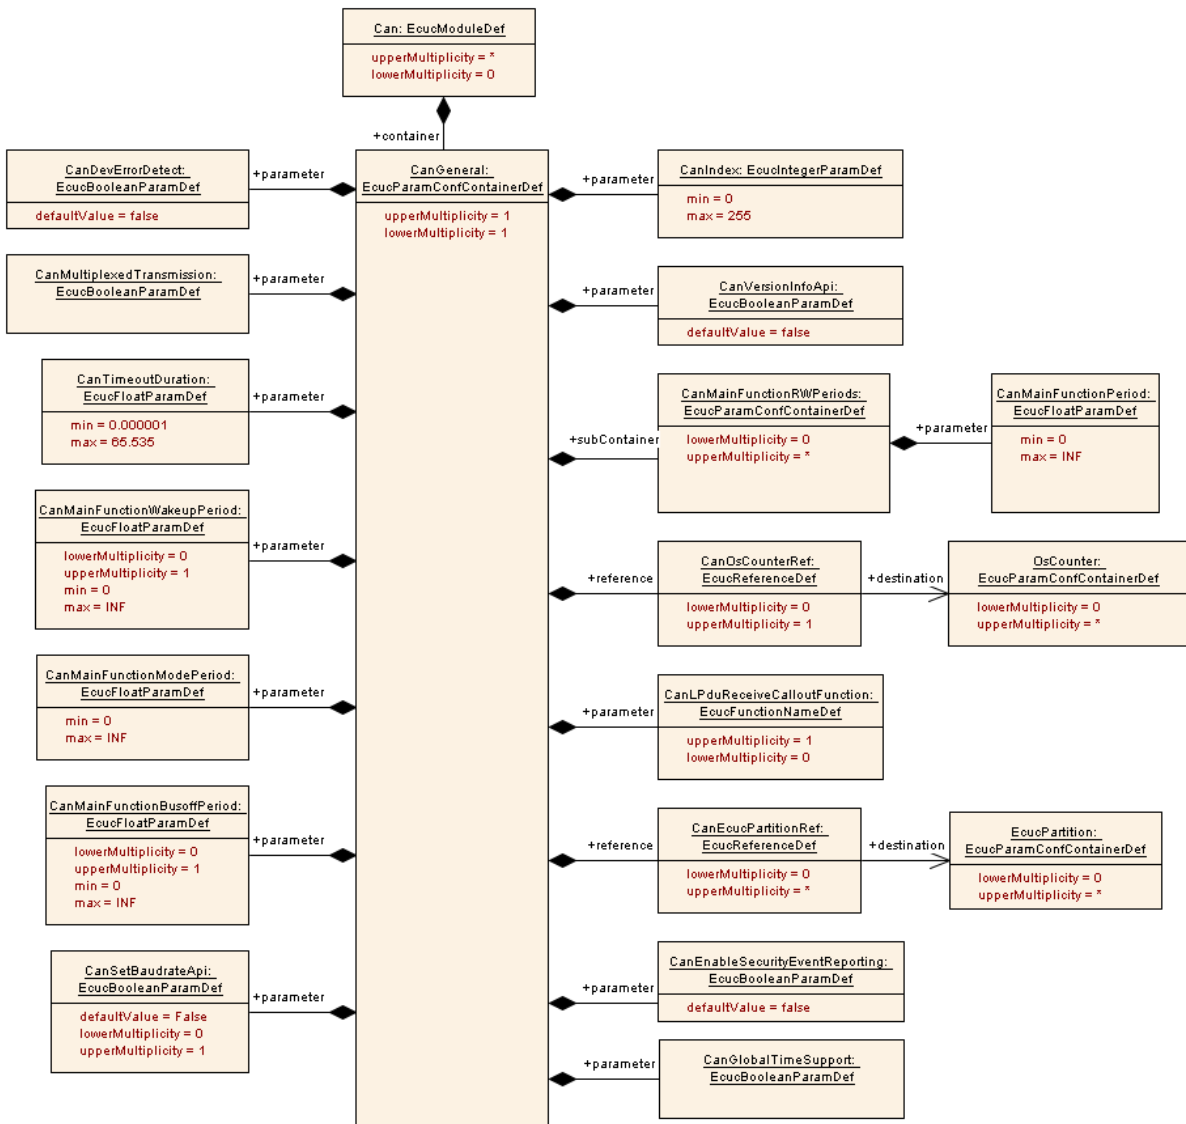


Figure 10.5: Can General Configuration Layout

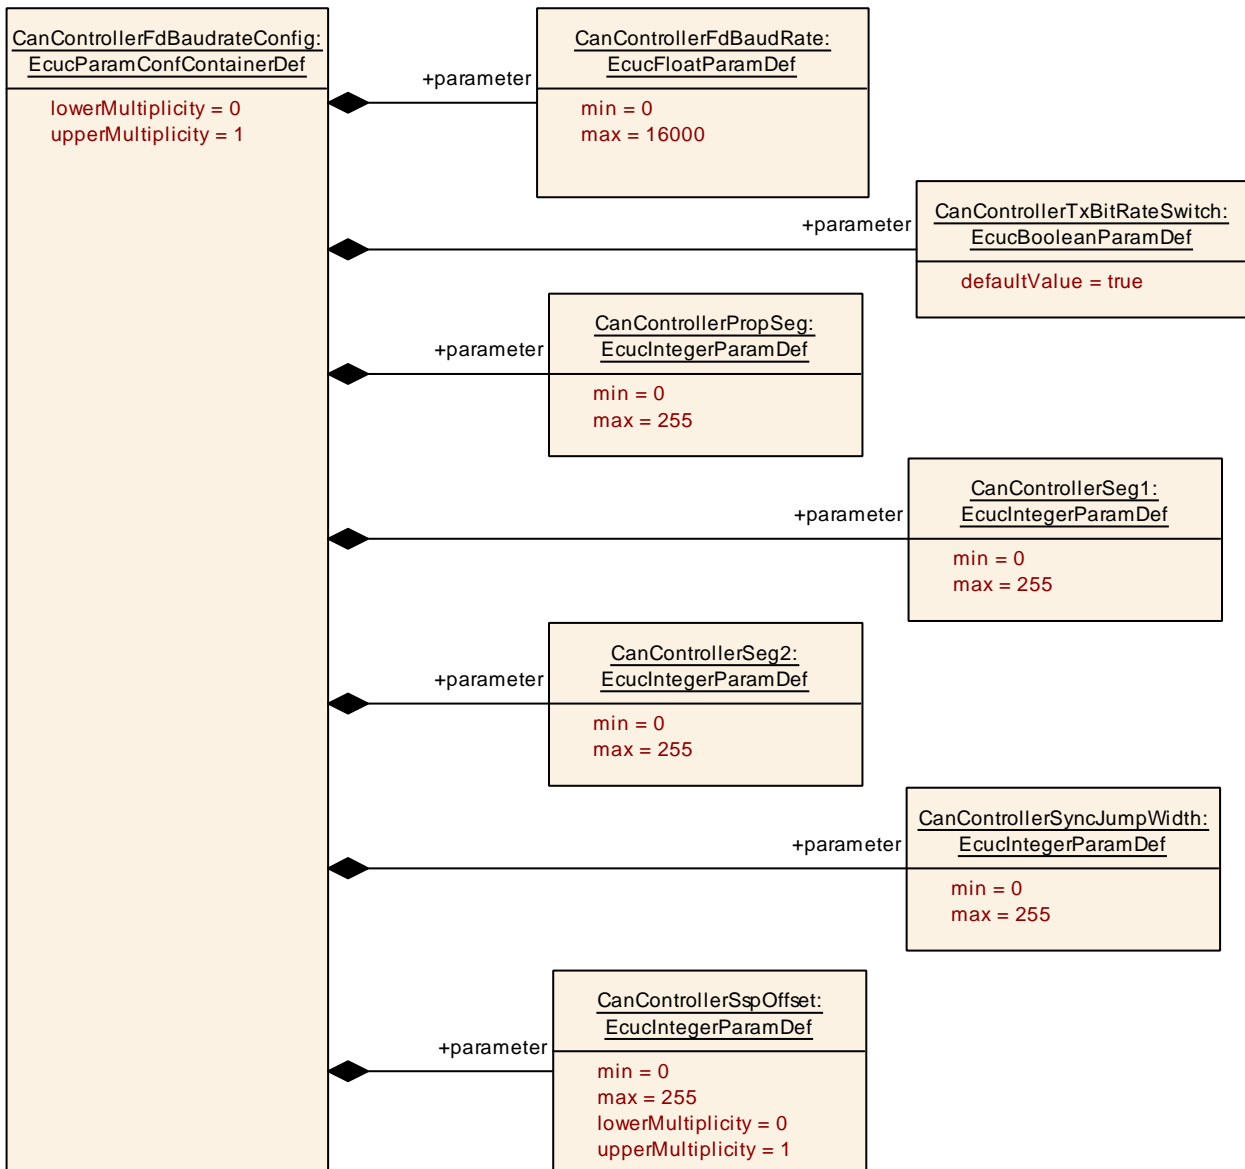


Figure 10.6: CanControllerFdBaudrateConfig

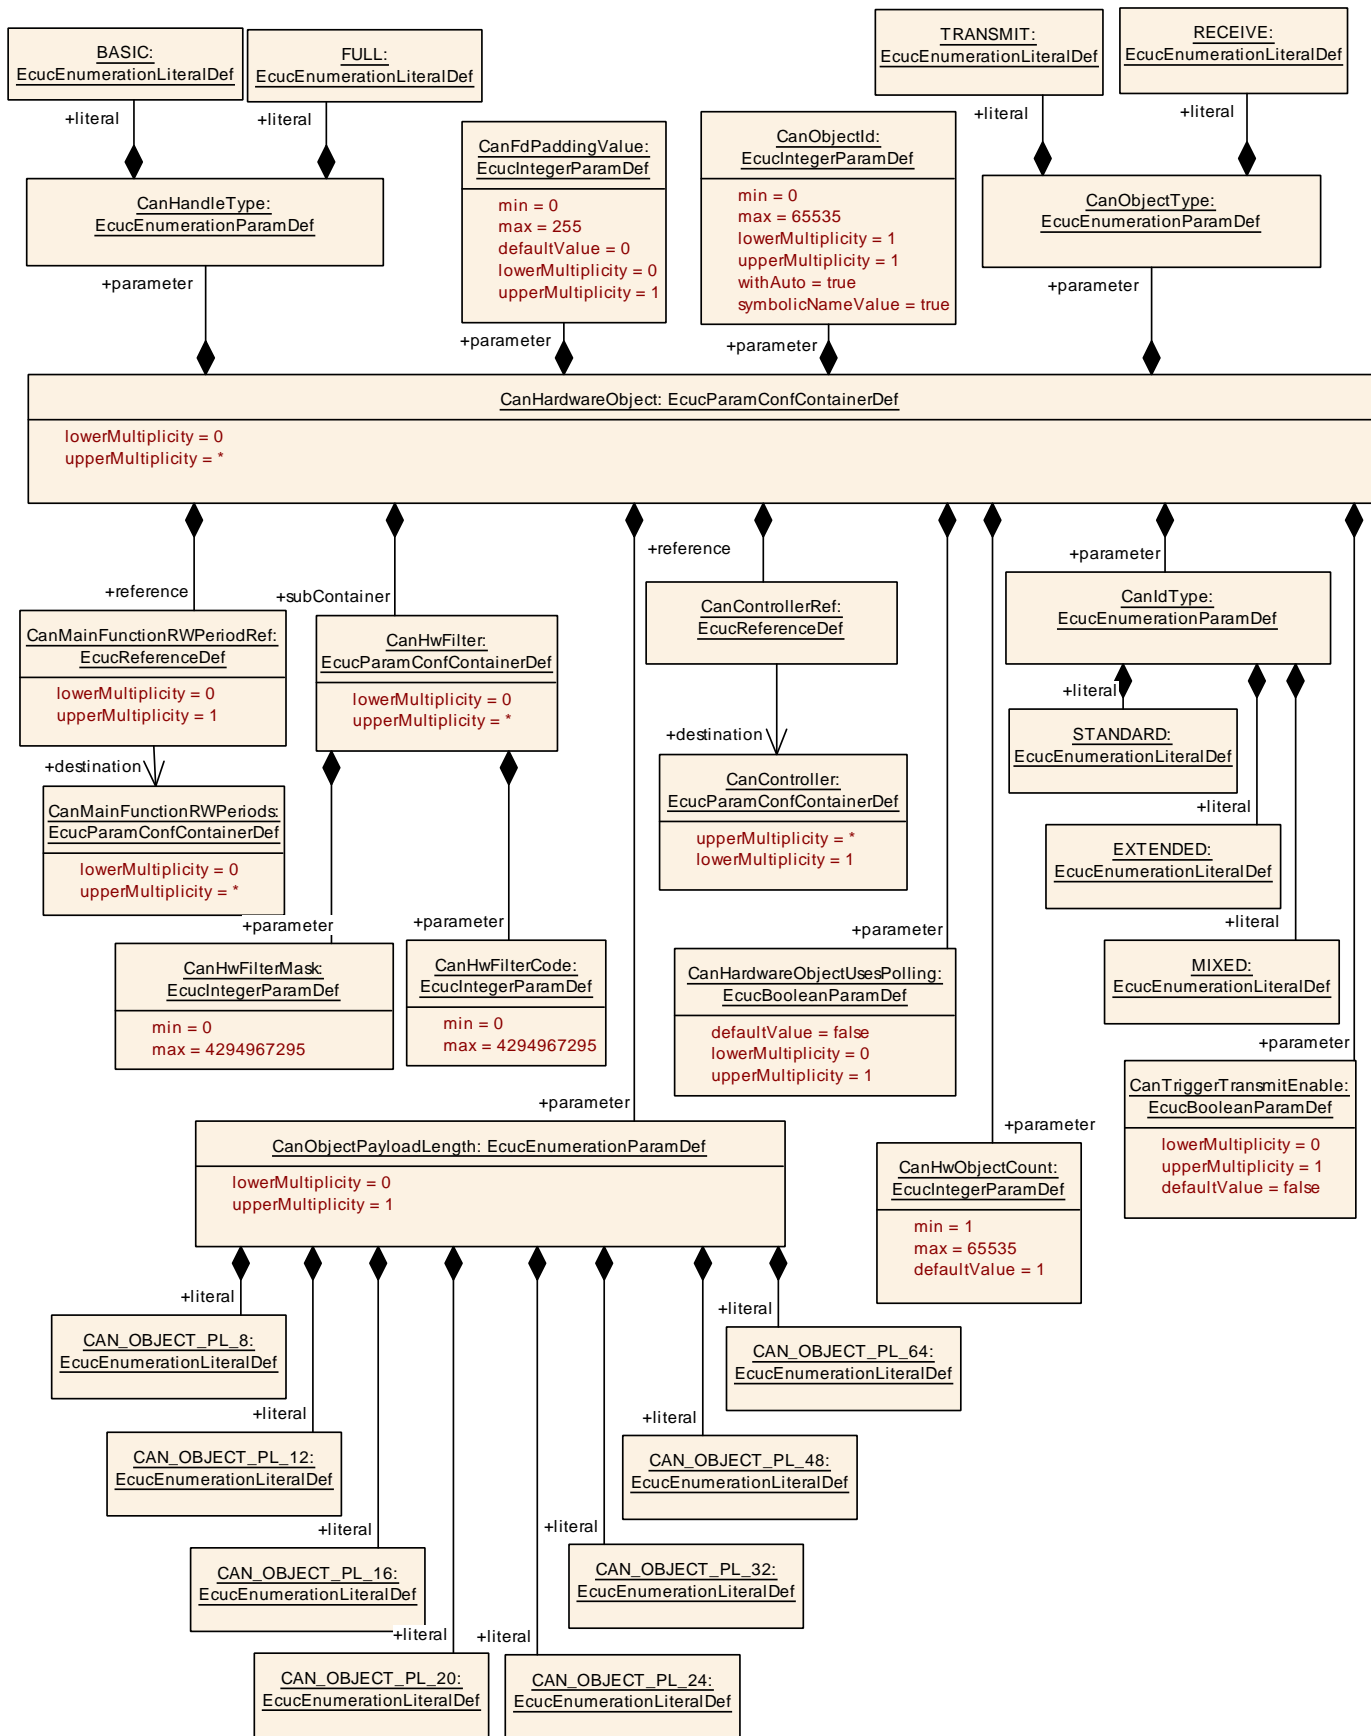


Figure 10.7: Can Hardware Object Configuration Layout

10.2.1 Can

[ECUC_Can_00489] Definition of EcucModuleDef Can [

Module Name	Can
Description	This container holds the configuration of a single CAN Driver.
Post-Build Variant Support	true
Supported Config Variants	VARIANT-POST-BUILD, VARIANT-PRE-COMPILE

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanConfigSet	1	This container contains the configuration parameters and sub containers of the AUTOSAR Can module.
CanGeneral	1	This container contains the parameters related each CAN Driver Unit.

]

10.2.2 CanGeneral

[ECUC_Can_00497] Definition of EcucParamConfContainerDef CanGeneral [

Container Name	CanGeneral
Parent Container	Can
Description	This container contains the parameters related each CAN Driver Unit.
Configuration Parameters	

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanDevErrorDetect	1	[ECUC_Can_00064]
CanEnableSecurityEventReporting	1	[ECUC_Can_00496]
CanGlobalTimeSupport	1	[ECUC_Can_00498]
CanIndex	1	[ECUC_Can_00320]
CanLPduReceiveCalloutFunction	0..1	[ECUC_Can_00434]
CanMainFunctionBusoffPeriod	0..1	[ECUC_Can_00355]
CanMainFunctionModePeriod	1	[ECUC_Can_00376]
CanMainFunctionWakeupPeriod	0..1	[ECUC_Can_00357]
CanMultiplexedTransmission	1	[ECUC_Can_00095]
CanSetBaudrateApi	0..1	[ECUC_Can_00482]
CanTimeoutDuration	1	[ECUC_Can_00113]
CanVersionInfoApi	1	[ECUC_Can_00106]
CanEcucPartitionRef	0..*	[ECUC_Can_00491]
CanOsCounterRef	0..1	[ECUC_Can_00431]
CanSupportTTCANRef	1	[ECUC_Can_00430]

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanMainFunctionRWPeriods	0..*	This container contains the parameter for configuring the period for cyclic call to Can_MainFunction_Read or Can_MainFunction_Write depending on the referring item.
CanXLGeneral	0..1	This container is specified in the SWS CAN XL Driver and contains global parameters of the CAN XL Driver.

]

[ECUC_Can_00064] Definition of EcucBooleanParamDef CanDevErrorDetect [

Parameter Name	CanDevErrorDetect		
Parent Container	CanGeneral		
Description	Switches the development error detection and notification on or off. <ul style="list-style-type: none"> • true: detection and notification is enabled. • false: detection and notification is disabled. 		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_Can_00496] Definition of EcucBooleanParamDef CanEnableSecurityEventReporting

Status: DRAFT

[

Parameter Name	CanEnableSecurityEventReporting		
Parent Container	CanGeneral		
Description	Switches the reporting of security events to the IdsM: - true: reporting is enabled. - false: reporting is disabled. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00498] Definition of EcucBooleanParamDef CanGlobalTimeSupport

Status: DRAFT

[

Parameter Name	CanGlobalTimeSupport		
Parent Container	CanGeneral		
Description	Enables/Disables the Global Time APIs used when hardware timestamping is supported by CAN controller. Tags: atp.Status=draft		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

]

[ECUC_Can_00320] Definition of EcucIntegerParamDef CanIndex

Parameter Name	CanIndex		
Parent Container	CanGeneral		
Description	Specifies the InstanceId of this module instance. If only one instance is present it shall have the Id 0.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00434] Definition of EcucFunctionNameDef CanLPduReceiveCalloutFunction

Parameter Name	CanLPduReceiveCalloutFunction		
Parent Container	CanGeneral		
Description	This parameter defines the existence and the name of a callout function that is called after a successful reception of a received CAN Rx L-PDU. If this parameter is omitted no callout shall take place.		
Multiplicity	0..1		





Type	EcucFunctionNameDef		
Default value	–		
Regular Expression	–		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_Can_00355] Definition of EcucFloatParamDef CanMainFunctionBusoff Period [

Parameter Name	CanMainFunctionBusoffPeriod		
Parent Container	CanGeneral		
Description	This parameter describes the period for cyclic call to Can_MainFunction_Busoff. Unit is seconds.		
Multiplicity	0..1		
Type	EcucFloatParamDef		
Range]0 .. INF[
Default value	–		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency			

]

[ECUC_Can_00376] Definition of EcucFloatParamDef CanMainFunctionModePeriod [

Parameter Name	CanMainFunctionModePeriod		
Parent Container	CanGeneral		
Description	This parameter describes the period for cyclic call to Can_MainFunction_Mode. Unit is seconds.		
Multiplicity	1		





Type	EcucFloatParamDef		
Range]0 .. INF[
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency			

]

[ECUC_Can_00357] Definition of EcucFloatParamDef CanMainFunctionWakeup Period [

Parameter Name	CanMainFunctionWakeupPeriod		
Parent Container	CanGeneral		
Description	This parameter describes the period for cyclic call to Can_MainFunction_Wakeup. Unit is seconds.		
Multiplicity	0..1		
Type	EcucFloatParamDef		
Range]0 .. INF[
Default value	-		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency			

]

[ECUC_Can_00095] Definition of EcucBooleanParamDef CanMultiplexedTransmission [

Parameter Name	CanMultiplexedTransmission		
Parent Container	CanGeneral		
Description	Specifies if multiplexed transmission shall be supported.ON or OFF		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	





	Post-build time	–	
Scope / Dependency	scope: ECU dependency: CAN Hardware Unit supports multiplexed transmission		

]

[ECUC_Can_00482] Definition of EcucBooleanParamDef CanSetBaudrateApi [

Parameter Name	CanSetBaudrateApi		
Parent Container	CanGeneral		
Description	The support of the Can_SetBaudrate API is optional. If this parameter is set to true the Can_SetBaudrate API shall be supported. Otherwise the API is not supported.		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00113] Definition of EcucFloatParamDef CanTimeoutDuration [

Parameter Name	CanTimeoutDuration		
Parent Container	CanGeneral		
Description	Specifies the maximum time for blocking function until a timeout is detected. Unit is seconds.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[1E-6 .. 65.535]		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_Can_00106] Definition of EcucBooleanParamDef CanVersionInfoApi [

Parameter Name	CanVersionInfoApi		
Parent Container	CanGeneral		
Description	Switches the Can_GetVersionInfo() API ON or OFF.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_Can_00491] Definition of EcucReferenceDef CanEcucPartitionRef [

Parameter Name	CanEcucPartitionRef		
Parent Container	CanGeneral		
Description	Maps the CAN driver to zero or multiple ECUC partitions to make the modules API available in this partition.		
Multiplicity	0..*		
Type	Reference to EcucPartition		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00431] Definition of EcucReferenceDef CanOsCounterRef [

Parameter Name	CanOsCounterRef		
Parent Container	CanGeneral		
Description	This parameter contains a reference to the OsCounter, which is used by the CAN driver.		
Multiplicity	0..1		
Type	Reference to OsCounter		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	





Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_Can_00430] Definition of EcucReferenceDef CanSupportTTCANRef [

Parameter Name	CanSupportTTCANRef		
Parent Container	CanGeneral		
Description	The parameter refers to CanIfSupportTTCAN parameter in the CAN Interface Module configuration. The CanIfSupportTTCAN parameter defines whether TTCAN is supported.		
Multiplicity	1		
Type	Reference to CanIfPrivateCfg		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: ECU		

]

10.2.3 CanController

[ECUC_Can_00354] Definition of EcucParamConfContainerDef CanController [

Container Name	CanController		
Parent Container	CanConfigSet		
Description	This container contains the configuration parameters of the CAN controller(s).		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanBusoffProcessing	1	[ECUC_Can_00314]
CanControllerActivation	1	[ECUC_Can_00315]
CanControllerBaseAddress	1	[ECUC_Can_00382]
CanControllerId	1	[ECUC_Can_00316]





Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanHwPnSupport	1	[ECUC_Can_00529]
CanRxProcessing	1	[ECUC_Can_00317]
CanTxProcessing	1	[ECUC_Can_00318]
CanWakeupProcessing	1	[ECUC_Can_00319]
CanWakeupSupport	1	[ECUC_Can_00330]
CanControllerDefaultBaudrate	1	[ECUC_Can_00435]
CanControllerEcucPartitionRef	0..1	[ECUC_Can_00492]
CanCpuClockRef	1	[ECUC_Can_00313]
CanWakeupSourceRef	0..1	[ECUC_Can_00359]

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanControllerBaudrateConfig	1..*	This container contains bit timing related configuration parameters of the CAN controller(s).
CanPartialNetwork	0..1	Container gives CAN Controller driver information about the configuration of Partial Networking functionality.
CanTTCController	0..1	CanTTCController is specified in the SWS TTCAN and contains the configuration parameters of the TTCAN controller(s) (which are needed in addition to the configuration parameters of the CAN controller(s)). This container is only included and valid if TTCAN is supported by the controller, enabled (see CanSupportTTCANRef, ECUC_Can_00430), and used.
CanXLController	0..1	This container is specified in the SWS CAN XL Driver and represents a CAN XL channel. If this container is present, the CAN driver will provide the extended CanXL API.

]

[ECUC_Can_00314] Definition of EcucEnumerationParamDef CanBusoffProcessing [

Parameter Name	CanBusoffProcessing		
Parent Container	CanController		
Description	Enables / disables API Can_MainFunction_BusOff() for handling busoff events in polling mode.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	INTERRUPT	Interrupt Mode of operation.	
	POLLING	Polling Mode of operation.	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_Can_00315] Definition of EcucBooleanParamDef CanControllerActivation [

Parameter Name	CanControllerActivation		
Parent Container	CanController		
Description	Defines if a CAN controller is used in the configuration.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

]

[ECUC_Can_00382] Definition of EcucIntegerParamDef CanControllerBaseAddress [

Parameter Name	CanControllerBaseAddress		
Parent Container	CanController		
Description	Specifies the CAN controller base address.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

]

[ECUC_Can_00316] Definition of EcucIntegerParamDef CanControllerId [

Parameter Name	CanControllerId		
Parent Container	CanController		
Description	This parameter provides the controller ID which is unique in a given CAN Driver. The value for this parameter starts with 0 and continue without any gaps.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	



△

	Post-build time	–	
Scope / Dependency	scope: ECU withAuto = true		

]

[ECUC_Can_00529] Definition of EcucBooleanParamDef CanHwPnSupport [

Parameter Name	CanHwPnSupport		
Parent Container	CanController		
Description	Indicates whether the HW supports the selective wakeup function. TRUE = Selective wakeup feature is supported by the CAN controller. FALSE = Selective wakeup functionality is not available in the CAN controller.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local dependency: CanWakeupSupport		

]

[ECUC_Can_00317] Definition of EcucEnumerationParamDef CanRxProcessing [

[

Parameter Name	CanRxProcessing		
Parent Container	CanController		
Description	Enables / disables API Can_MainFunction_Read() for handling PDU reception events in polling mode.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	INTERRUPT	Interrupt Mode of operation.	
	MIXED	Mixed Mode of operation	
	POLLING	Polling Mode of operation.	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_Can_00318] Definition of EcucEnumerationParamDef CanTxProcessing

[

Parameter Name	CanTxProcessing		
Parent Container	CanController		
Description	Enables / disables API Can_MainFunction_Write() for handling PDU transmission events in polling mode.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	INTERRUPT	Interrupt Mode of operation.	
	MIXED	Mixed Mode of operation	
	POLLING	Polling Mode of operation.	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_Can_00319] Definition of EcucEnumerationParamDef CanWakeupProcessing

[

Parameter Name	CanWakeupProcessing		
Parent Container	CanController		
Description	Enables / disables API Can_MainFunction_Wakeup() for handling wakeup events in polling mode.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	INTERRUPT	Interrupt Mode of operation.	
	POLLING	Polling Mode of operation.	
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_Can_00330] Definition of EcucBooleanParamDef CanWakeupSupport

[

Parameter Name	CanWakeupSupport		
Parent Container	CanController		
Description	CAN driver support for wakeup over CAN Bus.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	–		





Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency			

]

[ECUC_Can_00435] Definition of EcucReferenceDef CanControllerDefaultBaudrate [

Parameter Name	CanControllerDefaultBaudrate		
Parent Container	CanController		
Description	Reference to baudrate configuration container configured for the Can Controller.		
Multiplicity	1		
Type	Reference to CanControllerBaudrateConfig		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00492] Definition of EcucReferenceDef CanControllerEcucPartition Ref [

Parameter Name	CanControllerEcucPartitionRef		
Parent Container	CanController		
Description	Maps the CAN controller to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the CAN driver is mapped to.		
Multiplicity	0..1		
Type	Reference to EcucPartition		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00313] Definition of EcucReferenceDef CanCpuClockRef [

Parameter Name	CanCpuClockRef		
Parent Container	CanController		
Description	Reference to the CPU clock configuration, which is set in the MCU driver configuration		
Multiplicity	1		
Type	Reference to McuClockReferencePoint		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_Can_00359] Definition of EcucReferenceDef CanWakeupSourceRef [

Parameter Name	CanWakeupSourceRef		
Parent Container	CanController		
Description	This parameter contains a reference to the Wakeup Source for this controller as defined in the ECU State Manager. Implementation Type: reference to EcuM_WakeupSourceType		
Multiplicity	0..1		
Type	Symbolic name reference to EcuMWakeupSource		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[SWS_Can_CONSTR_00509] [The ECUC partitions referenced by CanControllerEcucPartitionRef shall be a subset of the ECUC partitions referenced by CanEcucPartitionRef.]

[SWS_Can_CONSTR_00510] [CanController and CanTrcvChannel of one communication channel shall all reference the same ECUC partition.]

[SWS_Can_CONSTR_00511] [If CanEcucPartitionRef references one or more ECUC partitions, CanControllerEcucPartitionRef shall have a multiplicity of one and reference one of these ECUC partitions as well.]

10.2.4 CanControllerBaudrateConfig

[ECUC_Can_00387] Definition of EcucParamConfContainerDef CanControllerBaudrateConfig [

Container Name	CanControllerBaudrateConfig		
Parent Container	CanController		
Description	This container contains bit timing related configuration parameters of the CAN controller(s).		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanControllerBaudRate	1	[ECUC_Can_00005]
CanControllerBaudRateConfigID	1	[ECUC_Can_00471]
CanControllerPropSeg	1	[ECUC_Can_00073]
CanControllerSeg1	1	[ECUC_Can_00074]
CanControllerSeg2	1	[ECUC_Can_00075]
CanControllerSyncJumpWidth	1	[ECUC_Can_00383]

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanControllerFdBaudrateConfig	0..1	This optional container contains bit timing related configuration parameters of the CAN controller(s) for payload and CRC of a CAN FD frame. If this container exists the controller supports CAN FD frames.
CanXLBaudrateConfig	0..1	This container is specified in the SWS CAN XL Driver and contains bit timing related configuration parameters of the CAN controller(s) for payload and CRC of a CAN XL frame.

]

[ECUC_Can_00005] Definition of EcucFloatParamDef CanControllerBaudRate [

Parameter Name	CanControllerBaudRate		
Parent Container	CanControllerBaudrateConfig		
Description	Specifies the baudrate of the controller in kbps.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 2000]		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	



△

	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00471] Definition of EcucIntegerParamDef CanControllerBaudRate ConfigID [

Parameter Name	CanControllerBaudRateConfigID		
Parent Container	CanControllerBaudrateConfig		
Description	This ID is used by SetBaudrate API and uniquely identifies a specific baud rate configuration within a controller configuration.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	0		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU dependency: CanSetBaudrateApi		

]

[ECUC_Can_00073] Definition of EcucIntegerParamDef CanControllerPropSeg [

Parameter Name	CanControllerPropSeg		
Parent Container	CanControllerBaudrateConfig		
Description	Specifies propagation delay in time quantas.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 384		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00074] Definition of EcucIntegerParamDef CanControllerSeg1

Parameter Name	CanControllerSeg1		
Parent Container	CanControllerBaudrateConfig		
Description	Specifies phase segment 1 in time quantas.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00075] Definition of EcucIntegerParamDef CanControllerSeg2

Parameter Name	CanControllerSeg2		
Parent Container	CanControllerBaudrateConfig		
Description	Specifies phase segment 2 in time quantas.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00383] Definition of EcucIntegerParamDef CanControllerSyncJump Width

Parameter Name	CanControllerSyncJumpWidth		
Parent Container	CanControllerBaudrateConfig		
Description	Specifies the synchronization jump width for the controller in time quantas.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	





	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

10.2.5 CanControllerFdBaudrateConfig

[ECUC_Can_00473] Definition of EcucParamConfContainerDef CanControllerFdBaudrateConfig [

Container Name	CanControllerFdBaudrateConfig
Parent Container	CanControllerBaudrateConfig
Description	This optional container contains bit timing related configuration parameters of the CAN controller(s) for payload and CRC of a CAN FD frame. If this container exists the controller supports CAN FD frames.
Configuration Parameters	

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanControllerFdBaudRate	1	[ECUC_Can_00481]
CanControllerPropSeg	1	[ECUC_Can_00476]
CanControllerSeg1	1	[ECUC_Can_00477]
CanControllerSeg2	1	[ECUC_Can_00478]
CanControllerSspOffset	0..1	[ECUC_Can_00494]
CanControllerSyncJumpWidth	1	[ECUC_Can_00479]
CanControllerTxBitRateSwitch	1	[ECUC_Can_00475]

No Included Containers

]

[ECUC_Can_00481] Definition of EcucFloatParamDef CanControllerFdBaudRate [

Parameter Name	CanControllerFdBaudRate		
Parent Container	CanControllerFdBaudrateConfig		
Description	Specifies the data segment baud rate of the controller in kbps.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 16000]		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE





	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00476] Definition of EcucIntegerParamDef CanControllerPropSeg [

Parameter Name	CanControllerPropSeg		
Parent Container	CanControllerFdBaudrateConfig		
Description	Specifies propagation delay in time quantas.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00477] Definition of EcucIntegerParamDef CanControllerSeg1 [

Parameter Name	CanControllerSeg1		
Parent Container	CanControllerFdBaudrateConfig		
Description	Specifies phase segment 1 in time quantas.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00478] Definition of EcucIntegerParamDef CanControllerSeg2 [

Parameter Name	CanControllerSeg2		
Parent Container	CanControllerFdBaudrateConfig		
Description	Specifies phase segment 2 in time quantas.		





Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00494] Definition of EcucIntegerParamDef CanControllerSspOffset

[

Parameter Name	CanControllerSspOffset		
Parent Container	CanControllerFdBaudrateConfig		
Description	<p>Specifies the Transmitter Delay Compensation Offset in minimum time quanta (see [17]). Transmitter Delay Compensation Offset is used to adjust the position of the Secondary Sample Point (SSP), relative to the beginning of the received bit. If this parameter is configured, the Transmitter Delay Compensation is done by measurement of the CAN controller. If not specified, Transmitter Delay Compensation is disabled.</p> <p>Note: $MTQ == \text{Minimum Time Quanta in seconds} == 1/(\text{frequency of the CAN controller clock})$ $\text{Secondary Sample Point Offset in seconds} = \text{CanControllerSspOffset} * MTQ$</p> <p>Example: CAN controller clock frequency = 20MHz => $MTQ = 1/20 * 10^{(-6)} \text{ s} = 0,05 \text{ us} = 50\text{ns}$ Baud rate = 1MBit/s => $\text{BitTime} = 1/(1 * 10^6) \text{ s/Bit} = 1 * 10^{(-6)} = 1\text{us/Bit}$ SSP = 75% => $\text{SSP in seconds} = 0,75 * 1\text{us} = 750 \text{ ns}$ $\text{CanControllerSspOffset in MTQ} = 750\text{ns} / 50\text{ns} = 15$</p> <p>Note: Please consider the minimum range (0..63) stated in [17] and the range definition (0..127) used as per [19].</p>		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00479] Definition of EcucIntegerParamDef CanControllerSyncJump Width

Parameter Name	CanControllerSyncJumpWidth		
Parent Container	CanControllerFdBaudrateConfig		
Description	Specifies the synchronization jump width for the controller in time quantas.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00475] Definition of EcucBooleanParamDef CanControllerTxBitRate Switch

Parameter Name	CanControllerTxBitRateSwitch		
Parent Container	CanControllerFdBaudrateConfig		
Description	Specifies if the bit rate switching shall be used for transmissions. If FALSE: CAN FD frames shall be sent without bit rate switching.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	true		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

10.2.6 CanPartialNetwork

[ECUC_Can_00530] Definition of EcucParamConfContainerDef CanPartialNetwork

Container Name	CanPartialNetwork		
Parent Container	CanController		
Description	Container gives CAN Controller driver information about the configuration of Partial Networking functionality.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanPnEnabled	1	[ECUC_Can_00531]
CanPnFrameCanId	1	[ECUC_Can_00532]
CanPnFrameCanIdMask	1	[ECUC_Can_00533]
CanPnFrameDlc	1	[ECUC_Can_00535]

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanPnFrameDataMaskSpec	0..8	Defines data payload mask to be used on the received payload in order to determine if the controller must be woken up by the received Wake-up Frame (WUF).

[[ECUC_Can_00531](#)] Definition of EcucBooleanParamDef [CanPnEnabled](#) [

Parameter Name	CanPnEnabled		
Parent Container	CanPartialNetwork		
Description	Indicates whether the selective wake-up function is enabled or disabled in HW. TRUE = Selective wakeup feature is enabled in the controller hardware FALSE = Selective wakeup feature is disabled in the controller hardware		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

[ECUC_Can_00532] Definition of EcucIntegerParamDef CanPnFrameCanId [

Parameter Name	CanPnFrameCanId		
Parent Container	CanPartialNetwork		
Description	CAN ID of the Wake-up Frame (WUF).		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00533] Definition of EcucIntegerParamDef CanPnFrameCanIdMask [

[

Parameter Name	CanPnFrameCanIdMask		
Parent Container	CanPartialNetwork		
Description	ID Mask for the selective activation of the CAN controller. It is used to enableFrame Wake-up (WUF) on a group of IDs.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00535] Definition of EcucIntegerParamDef CanPnFrameDlc [

Parameter Name	CanPnFrameDlc		
Parent Container	CanPartialNetwork		
Description	Data Length of the Wake-up Frame (WUF).		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 8		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	





	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

10.2.7 CanPnFrameDataMaskSpec

[ECUC_Can_00534] Definition of EcucParamConfContainerDef CanPnFrameDataMaskSpec [

Container Name	CanPnFrameDataMaskSpec		
Parent Container	CanPartialNetwork		
Description	Defines data payload mask to be used on the received payload in order to determine if the controller must be woken up by the received Wake-up Frame (WUF).		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanPnFrameDataMask	1	[ECUC_Can_00536]
CanPnFrameDataMaskIndex	1	[ECUC_Can_00537]

No Included Containers

]

[ECUC_Can_00536] Definition of EcucIntegerParamDef CanPnFrameDataMask [

Parameter Name	CanPnFrameDataMask		
Parent Container	CanPnFrameDataMaskSpec		
Description	Defines the n byte (Byte0 = LSB) of the data payload mask to be used on the received payload in order to determine if the controller must be woken up by the received Wake-up Frame (WUF).		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD





Scope / Dependency	scope: local
---------------------------	--------------

]

[ECUC_Can_00537] Definition of EcucIntegerParamDef CanPnFrameDataMask Index [

Parameter Name	CanPnFrameDataMaskIndex		
Parent Container	CanPnFrameDataMaskSpec		
Description	Holds the position n in frame of the mask-part		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 7		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

10.2.8 CanHardwareObject

[ECUC_Can_00324] Definition of EcucParamConfContainerDef CanHardwareObject [

Container Name	CanHardwareObject		
Parent Container	CanConfigSet		
Description	This container contains the configuration (parameters) of CAN Hardware Objects.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanFdPaddingValue	0..1	[ECUC_Can_00485]
CanHandleType	1	[ECUC_Can_00323]
CanHardwareObjectUsesPolling	0..1	[ECUC_Can_00490]
CanHwObjectCount	1	[ECUC_Can_00467]





Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanIdType	1	[ECUC_Can_00065]
CanObjectId	1	[ECUC_Can_00326]
CanObjectPayloadLength	0..1	[ECUC_Can_00495]
CanObjectType	1	[ECUC_Can_00327]
CanTriggerTransmitEnable	0..1	[ECUC_Can_00486]
CanControllerRef	1	[ECUC_Can_00322]
CanMainFunctionRWPeriodRef	0..1	[ECUC_Can_00438]

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanHwFilter	0..*	This container is only valid for HRHs and contains the configuration (parameters) of one hardware filter.
CanTTHardwareObjectTrigger	0..*	<p>CanTTHardwareObjectTrigger is specified in the SWS TTCAN and contains the configuration (parameters) of TTCAN triggers for Hardware Objects, which are additional to the configuration (parameters) of CAN Hardware Objects.</p> <p>This container is only included and valid if TTCAN is supported by the controller and, enabled (see CanSupportTTCANRef, ECUC_Can_00430), and used.</p>

]

[ECUC_Can_00485] Definition of EcucIntegerParamDef CanFdPaddingValue [

Parameter Name	CanFdPaddingValue		
Parent Container	CanHardwareObject		
Description	<p>Specifies the value which is used to pad unspecified data in CAN FD frames > 8 bytes for transmission. This is necessary due to the discrete possible values of the DLC if > 8 bytes.</p> <p>If the length of a PDU which was requested to be sent does not match the allowed DLC values, the remaining bytes up to the next possible value shall be padded with this value.</p>		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	0		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00323] Definition of EcucEnumerationParamDef CanHandleType [

Parameter Name	CanHandleType		
Parent Container	CanHardwareObject		
Description	Specifies the type (Full-CAN or Basic-CAN) of a hardware object.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	BASIC	For several L-PDUs are hadled by the hardware object	
	FULL	For only one L-PDU (identifier) is handled by the hardware object	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU dependency: This configuration element is used as information for the CAN Interface only. The relevant CAN driver configuration is done with the filter mask and identifier.		

]

[ECUC_Can_00490] Definition of EcucBooleanParamDef CanHardwareObject UsesPolling [

Parameter Name	CanHardwareObjectUsesPolling		
Parent Container	CanHardwareObject		
Description	Enables polling of this hardware object.		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Scope / Dependency	dependency: This parameter shall exist if CanRxProcessing/CanTxProcessing is set to Mixed.		

]

[ECUC_Can_00467] Definition of EcucIntegerParamDef CanHwObjectCount [

Parameter Name	CanHwObjectCount		
Parent Container	CanHardwareObject		
Description	Number of hardware objects used to implement one HOH. In case of a HRH this parameter defines the number of elements in the hardware FIFO or the number of shadow buffers, in case of a HTH it defines the number of hardware objects used for multiplexed transmission or for a hardware FIFO used by a FullCAN HTH.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	1 .. 65535		
Default value	1		
Post-Build Variant Multiplicity	true		





Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00065] Definition of EcucEnumerationParamDef CanIdType [

Parameter Name	CanIdType		
Parent Container	CanHardwareObject		
Description	Specifies whether the IdValue is of type standard identifier, extended identifier or mixed mode. ImplementationType: Can_IdType		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	EXTENDED	All the CANIDs are of type extended only (29 bit).	
	MIXED	The type of CANIDs can be both Standard or Extended.	
	STANDARD	All the CANIDs are of type standard only (11bit).	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00326] Definition of EcucIntegerParamDef CanObjectId [

Parameter Name	CanObjectId		
Parent Container	CanHardwareObject		
Description	Holds the handle ID of HRH or HTH. The value of this parameter is unique in a given CAN Driver, and it should start with 0 and continue without any gaps. The HRH and HTH Ids share a common ID range. Example: HRH0-0, HRH1-1, HTH0-2, HTH1-3		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants





	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: ECU withAuto = true		

]

[ECUC_Can_00495] Definition of EcucEnumerationParamDef CanObjectPayload Length [

Parameter Name	CanObjectPayloadLength		
Parent Container	CanHardwareObject		
Description	Specifies the maximum L-PDU payload length in bytes the hardware object can store. If the parameter is not provided, Can driver configuration generators have to assume the maximum length of the underlying CAN derivate, e.g. 8 bytes for CAN, 64 bytes for CAN-FD.		
Multiplicity	0..1		
Type	EcucEnumerationParamDef		
Range	CAN_OBJECT_PL_12	Payload length of 12 Bytes	
	CAN_OBJECT_PL_16	Payload length of 16 Bytes	
	CAN_OBJECT_PL_20	Payload length of 20 Bytes	
	CAN_OBJECT_PL_24	Payload length of 24 Bytes	
	CAN_OBJECT_PL_32	Payload length of 32 Bytes	
	CAN_OBJECT_PL_48	Payload length of 48 Bytes	
	CAN_OBJECT_PL_64	Payload length of 64 Bytes	
	CAN_OBJECT_PL_8	Payload length of 8 Bytes	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00327] Definition of EcucEnumerationParamDef CanObjectType [

Parameter Name	CanObjectType		
Parent Container	CanHardwareObject , CanXLHardwareObject		
Description	Specifies if the HardwareObject is used as Transmit or as Receive object		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	RECEIVE	Receive HOH	
	TRANSMIT	Transmit HOH	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	





	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00486] Definition of EcucBooleanParamDef CanTriggerTransmitEnable [

Parameter Name	CanTriggerTransmitEnable		
Parent Container	CanHardwareObject		
Description	This parameter defines if or if not Can supports the trigger-transmit API for this handle.		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00322] Definition of EcucReferenceDef CanControllerRef [

Parameter Name	CanControllerRef		
Parent Container	CanHardwareObject , CanXLHardwareObject		
Description	Reference to CAN Controller to which the HOH is associated to.		
Multiplicity	1		
Type	Reference to CanController		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: The referenced CanController has to contain a CanXLController.		

]

[ECUC_Can_00438] Definition of EcucReferenceDef CanMainFunctionRWPeriod Ref [

Parameter Name	CanMainFunctionRWPeriodRef		
Parent Container	CanHardwareObject , CanXLHardwareObject		
Description	Reference to CanMainFunctionPeriod. If configured, this hardware object will be polled.		
Multiplicity	0..1		
Type	Reference to CanMainFunctionRWPeriods		





Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[SWS_Can_CONSTR_00512] [If the optional parameter CanObjectPayloadLength is configured, the length shall be set that every PDU received or sent via that HOH "fits" into it. Therefore, if set, CanObjectPayloadLength shall be equal or greater than the maximum PduLength of all affected Pdu's of the EcuCPduCollection.]

Note: For A_HOH that has CanObjectPayloadLength configured and any PDU it sends/receives, A_PDU_Of_A_HOH the condition Can/CanConfigSet/A_HOH/CanObjectPayloadLength >= EcuC/EcuCPduCollection/A_PDU_Of_A_HOH/PduLength must hold.

10.2.9 CanHwFilter

[ECUC_Can_00468] Definition of EcucParamConfContainerDef CanHwFilter [

Container Name	CanHwFilter
Parent Container	CanHardwareObject
Description	This container is only valid for HRHs and contains the configuration (parameters) of one hardware filter.
Configuration Parameters	

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanHwFilterCode	1	[ECUC_Can_00469]
CanHwFilterMask	1	[ECUC_Can_00470]

No Included Containers

]

[ECUC_Can_00469] Definition of EcucIntegerParamDef CanHwFilterCode [

Parameter Name	CanHwFilterCode		
Parent Container	CanHwFilter		
Description	Specifies (together with the filter mask) the identifiers range that passes the hardware filter.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency			

]

[ECUC_Can_00470] Definition of EcucIntegerParamDef CanHwFilterMask [

Parameter Name	CanHwFilterMask		
Parent Container	CanHwFilter		
Description	<p>Describes a mask for hardware-based filtering of CAN identifiers. The CAN identifiers of incoming messages are masked with the appropriate CanFilterMaskValue. Bits holding a 0 mean don't care, i.e. do not compare the message's identifier in the respective bit position.</p> <p>The mask shall be build by filling with leading 0. In case of CanIdType EXTENDED or MIXED a 29 bit mask shall be build. In case of CanIdType STANDARD a 11 bit mask shall be build</p>		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	dependency: The filter mask settings must be known by the CanIf configuration for optimization of the SW filters.		

]

10.2.10 CanConfigSet

[ECUC_Can_00343] Definition of EcucParamConfContainerDef CanConfigSet [

Container Name	CanConfigSet
Parent Container	Can
Description	This container contains the configuration parameters and sub containers of the AUTOSAR Can module.
Configuration Parameters	

No Included Parameters

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanController	1..*	This container contains the configuration parameters of the CAN controller(s).
CanHardwareObject	0..*	This container contains the configuration (parameters) of CAN Hardware Objects.
CanXLHardwareObject	0..*	This container is specified in the SWS CAN XL Driver and contains the configuration (parameters) of CAN XL Hardware Objects.

]

10.2.11 CanMainFunctionRWPeriods

[ECUC_Can_00437] Definition of EcucParamConfContainerDef CanMainFunctionRWPeriods [

Container Name	CanMainFunctionRWPeriods		
Parent Container	CanGeneral		
Description	This container contains the parameter for configuring the period for cyclic call to Can_MainFunction_Read or Can_MainFunction_Write depending on the referring item.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanMainFunctionPeriod	1	[ECUC_Can_00484]

No Included Containers

]

[ECUC_Can_00484] Definition of EcucFloatParamDef CanMainFunctionPeriod [

Parameter Name	CanMainFunctionPeriod		
Parent Container	CanMainFunctionRWPeriods		
Description	This parameter describes the period for cyclic call to Can_MainFunction_Read or Can_MainFunction_Write depending on the referring item. Unit is seconds. Different poll-cycles will be configurable if more than one CanMainFunctionPeriod is configured. In this case multiple Can_MainFunction_Read() or Can_MainFunction_Write() will be provided by the CAN Driver module.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range]0 .. INF[
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

]

10.2.12 CanTTController
[ECUC_Can_00001] Definition of EcucParamConfContainerDef CanTTController [

[

Container Name	CanTTController
Parent Container	CanController
Description	<p>CanTTController is specified in the SWS TTCAN and contains the configuration parameters of the TTCAN controller(s) (which are needed in addition to the configuration parameters of the CAN controller(s)).</p> <p>This container is only included and valid if TTCAN is supported by the controller, enabled (see CanSupportTTCANRef, ECUC_Can_00430), and used.</p>
Configuration Parameters	

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanTTControllerApplWatchdogLimit	1	[ECUC_Can_00139]
CanTTControllerCycleCountMax	1	[ECUC_Can_00138]
CanTTControllerExpectedTxTrigger	1	[ECUC_Can_00136]
CanTTControllerExternalClockSynchronisation	1	[ECUC_Can_00135]
CanTTControllerGlobalTimeFiltering	1	[ECUC_Can_00134]
CanTTControllerInitialRefOffset	1	[ECUC_Can_00128]
CanTTControllerInterruptEnable	1	[ECUC_Can_00140]
CanTTControllerLevel2	1	[ECUC_Can_00131]
CanTTControllerNTUConfig	1	[ECUC_Can_00141]





Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanTTControllerOperationMode	1	[ECUC_Can_00127]
CanTTControllerSyncDeviation	1	[ECUC_Can_00132]
CanTTControllerTimeMaster	1	[ECUC_Can_00129]
CanTTControllerTimeMasterPriority	1	[ECUC_Can_00130]
CanTTControllerTURRestore	1	[ECUC_Can_00133]
CanTTControllerTxEnableWindowLength	1	[ECUC_Can_00137]
CanTTControllerWatchTriggerGapTimeMark	1	[ECUC_Can_00158]
CanTTControllerWatchTriggerTimeMark	1	[ECUC_Can_00157]
CanTTIRQProcessing	1	[ECUC_Can_00142]
CanTTControllerEcucPartitionRef	0..1	[ECUC_Can_00493]

No Included Containers

]

[ECUC_Can_00139] Definition of EcucIntegerParamDef CanTTControllerAppl WatchdogLimit [

Parameter Name	CanTTControllerApplWatchdogLimit		
Parent Container	CanTTController		
Description	Defines the maximum time period (unit is 256 times NTU) after which the application has to serve the watchdog.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00138] Definition of EcucIntegerParamDef CanTTControllerCycle CountMax [

Parameter Name	CanTTControllerCycleCountMax
Parent Container	CanTTController
Description	Defines the value for cycle_count_max. Allowed values: 0x00: 1 basic cycle 0x01: 2 basic cycles 0x03: 4 basic cycles 0x07: 8 basic cycles 0x0F: 16 basic cycles 0x1F: 32 basic cycles 0x3F: 64 basic cycles
Multiplicity	1





Type	EcucIntegerParamDef		
Range	0 .. 63		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00136] Definition of EcucIntegerParamDef CanTTControllerExpectedTxTrigger [

Parameter Name	CanTTControllerExpectedTxTrigger		
Parent Container	CanTTController		
Description	Number of expected_tx_trigger.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00135] Definition of EcucBooleanParamDef CanTTControllerExternalClockSynchronisation [

Parameter Name	CanTTControllerExternalClockSynchronisation		
Parent Container	CanTTController		
Description	Enables/disables the external clock synchronization. TRUE: External clock synchronization enabled. FALSE: External clock synchronization disabled. This parameter shall only be configurable if parameter CanTTControllerLevel2 equals TRUE.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD





Scope / Dependency	scope: ECU dependency: CanTTControllerLevel2 (ECUC_Can_00131)
---------------------------	--

]

[ECUC_Can_00134] Definition of EcucBooleanParamDef CanTTControllerGlobalTimeFiltering [

Parameter Name	CanTTControllerGlobalTimeFiltering		
Parent Container	CanTTController		
Description	Enables/disables the global time filtering. TRUE: Global time filtering enabled. FALSE: Global time filtering disabled. This parameter shall only be configurable if parameter CanTTControllerLevel2 equals TRUE.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: CanTTControllerLevel2 (ECUC_Can_00131)		

]

[ECUC_Can_00128] Definition of EcucIntegerParamDef CanTTControllerInitialRefOffset [

Parameter Name	CanTTControllerInitialRefOffset		
Parent Container	CanTTController		
Description	Defines the initial value for ref trigger offset.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 127		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00140] Definition of EcucIntegerParamDef CanTTControllerInterruptEnable

Parameter Name	CanTTControllerInterruptEnable		
Parent Container	CanTTController		
Description	<p>Enables/disables the respective interrupts. Bit Position set to 1: Enable respective interrupt. Bit Position set to 0: Disable respective interrupt.</p> <p>Bit Position / Interrupt Source: 10: Application Watchdog. 9: Watch Trigger reached. 8: Initialization Watch Trigger reached. 7: Change of Error Level. 6: Tx Overflow. 5: Tx Underflow. 4: Global Time Error. 3: Gap. 2: Start of Cycle. 1: Time Discontinuity. 0: Master State Change.</p> <p>Bit position "1: Time Discontinuity" and "4: Global Time Error" shall only be configurable if parameter CanTTControllerLevel2 equals TRUE.</p>		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 1023		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: CanTTControllerLevel2 (ECUC_Can_00131)		

]

[ECUC_Can_00131] Definition of EcucBooleanParamDef CanTTControllerLevel2

[

Parameter Name	CanTTControllerLevel2		
Parent Container	CanTTController		
Description	<p>Defines whether Level 2 or Level 1 is used. TRUE: Level 2. FALSE: Level 1.</p> <p>If this parameter is set to FALSE then all parameters with dependency to CanTTControllerLevel2 need not be configured.</p>		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00141] Definition of EcucFloatParamDef CanTTControllerNTUConfig [

Parameter Name	CanTTControllerNTUConfig		
Parent Container	CanTTController		
Description	Defines the config value for NTU (network time unit). Value given in microseconds. The value configured shall be greater than 0. Together with the local oscillator period, the TUR (time unit ratio) can be derived from the NTU. This parameter shall only be configurable if parameter CanTTControllerLevel2 equals TRUE.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 100]		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU dependency: CanTTControllerLevel2 (ECUC_Can_00131)		

]

[ECUC_Can_00127] Definition of EcucEnumerationParamDef CanTTControllerOperationMode [

Parameter Name	CanTTControllerOperationMode		
Parent Container	CanTTController		
Description	Defines the operation mode.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	CAN_TT_EVENT_SYNC_TIME_TRIGGERED		Event-synchronized time triggered operation
	CAN_TT_EVENT_TRIGGERED		Event triggered operation (normal can operation without time schedule)
	CAN_TT_TIME_TRIGGERED		Time triggered operation
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00132] Definition of EcucFloatParamDef CanTTControllerSyncDeviation

Parameter Name	CanTTControllerSyncDeviation		
Parent Container	CanTTController		
Description	Defines the maximum synchronization deviation: Given as a percentage value of the NTU (network time unit). The value configured shall be greater than 0. This parameter shall only be configurable if parameter CanTTControllerLevel2 equals TRUE.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 100]		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: CanTTControllerLevel2 (ECUC_Can_00131) Synchronisation Deviation <= 2*(CanTTSyncDeviation + 5)		

]

[ECUC_Can_00129] Definition of EcucBooleanParamDef CanTTControllerTimeMaster

Parameter Name	CanTTControllerTimeMaster		
Parent Container	CanTTController		
Description	Defines whether the controller acts as a potential time master. TRUE: Potential time master. FALSE: Time slave.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00130] Definition of EcucIntegerParamDef CanTTControllerTimeMasterPriority

Parameter Name	CanTTControllerTimeMasterPriority		
Parent Container	CanTTController		
Description	Defines the time master priority.		
Multiplicity	1		
Type	EcucIntegerParamDef		

▽



Range	0 .. 7		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00133] Definition of EcucBooleanParamDef CanTTControllerTUR-Restore [

Parameter Name	CanTTControllerTURRestore		
Parent Container	CanTTController		
Description	<p>Enables/disables the TUR restore. Note that the value configured for TUR can be derived from the value configured for NTU and the local oscillator preriod. TRUE: TUR restore enabled. FALSE: TUR restore disabled.</p> <p>This parameter shall only be configurable if parameter CanTTControllerLevel2 equals TRUE.</p>		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: CanTTControllerLevel2 (ECUC_Can_00131)		

]

[ECUC_Can_00137] Definition of EcucIntegerParamDef CanTTControllerTxEnableWindowLength [

Parameter Name	CanTTControllerTxEnableWindowLength		
Parent Container	CanTTController		
Description	Length of the tx enable window given in CAN bit times. Definition parameter "CanTTControllerTxEnableWindowlength" is used such that: Length of enable window = CanTTControllerTxEnableWindowLength + 1		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	1 .. 16		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	



△

	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00158] Definition of EcucIntegerParamDef CanTTControllerWatchTriggerGapTimeMark [

Parameter Name	CanTTControllerWatchTriggerGapTimeMark		
Parent Container	CanTTController		
Description	watch trigger time mark after a gap		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00157] Definition of EcucIntegerParamDef CanTTControllerWatchTriggerTimeMark [

Parameter Name	CanTTControllerWatchTriggerTimeMark		
Parent Container	CanTTController		
Description	watch trigger time mark		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00142] Definition of EcucEnumerationParamDef CanTTIRQProcessing [

Parameter Name	CanTTIRQProcessing		
Parent Container	CanTTController		
Description	Enables / disables API Can_MainFunction_BusOff() for handling busoff events in polling mode.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	INTERRUPT	Interrupt Mode of operation.	
	POLLING	Polling Mode of operation.	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00493] Definition of EcucReferenceDef CanTTControllerEcucPartitionRef [

Parameter Name	CanTTControllerEcucPartitionRef		
Parent Container	CanTTController		
Description	Maps the Time triggered CAN controller to zero or one ECUC partitions. The ECUC partition referenced is a subset of the ECUC partitions where the CAN driver is mapped to.		
Multiplicity	0..1		
Type	Reference to EcucPartition		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: ECU		

]

10.2.13 CanTTHardwareObjectTrigger

[ECUC_Can_00002] Definition of EcucParamConfContainerDef CanTTHardwareObjectTrigger [

Container Name	CanTTHardwareObjectTrigger
Parent Container	CanHardwareObject
Description	<p>CanTTHardwareObjectTrigger is specified in the SWS TTCAN and contains the configuration (parameters) of TTCAN triggers for Hardware Objects, which are additional to the configuration (parameters) of CAN Hardware Objects.</p> <p>This container is only included and valid if TTCAN is supported by the controller and, enabled (see CanSupportTTCANRef, ECUC_Can_00430), and used.</p>
Configuration Parameters	

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanTTHardwareObjectBaseCycle	1	[ECUC_Can_00147]
CanTTHardwareObjectCycleRepetition	1	[ECUC_Can_00148]
CanTTHardwareObjectTimeMark	1	[ECUC_Can_00146]
CanTTHardwareObjectTriggerId	1	[ECUC_Can_00155]
CanTTHardwareObjectTriggerType	1	[ECUC_Can_00145]

No Included Containers

]

[[ECUC_Can_00147](#)] Definition of EcuIntegerParamDef CanTTHardwareObjectBaseCycle [

Parameter Name	CanTTHardwareObjectBaseCycle		
Parent Container	CanTTHardwareObjectTrigger		
Description	Defines the cycle_offset. CanTTHardwareObjectBaseCycle must be not greater than cycle_count_max.		
Multiplicity	1		
Type	EcuIntegerParamDef		
Range	0 .. 63		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00148] Definition of EcucIntegerParamDef CanTTHardwareObjectCycleRepetition [

Parameter Name	CanTTHardwareObjectCycleRepetition		
Parent Container	CanTTHardwareObjectTrigger		
Description	Defines the repeat_factor. CanTTHardwareObjectCycleRepetition shall be a power of two (2), greater than cycle_offset but not greater than cycle_count_max + 1.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	1 .. 64		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_Can_00146] Definition of EcucIntegerParamDef CanTTHardwareObjectTimeMark [

Parameter Name	CanTTHardwareObjectTimeMark		
Parent Container	CanTTHardwareObjectTrigger		
Description	Defines the point in time, when the trigger will be activated. Value is given in cycle time.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00155] Definition of EcucIntegerParamDef CanTTHardwareObjectTriggerId [

Parameter Name	CanTTHardwareObjectTriggerId		
Parent Container	CanTTHardwareObjectTrigger		
Description	Sequential number which allows separation of different TTCAN triggers configured for one and the same hardware object.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		





Range	0 .. 63		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local withAuto = true		

]

[ECUC_Can_00145] Definition of EcucEnumerationParamDef CanTTHardwareObjectTriggerType [

Parameter Name	CanTTHardwareObjectTriggerType	
Parent Container	CanTTHardwareObjectTrigger	
Description	Defines the type of the trigger associated with the hardware object. This parameter depends on plain CAN parameter CAN_OBJECT_TYPE. If CAN_OBJECT_TYPE equals RECEIVE than this parameter is fixed to CAN_TT_RX_TRIGGER. If CAN_OBJECT_TYPE equals TRANSMIT than one of the following literals is configurable: CAN_TT_TX_REF_TRIGGER, CAN_TT_TX_REF_TRIGGER_GAP, CAN_TT_TX_TRIGGER_MERGED, CAN_TT_TX_TRIGGER_SINGLE, CAN_TT_TX_TRIGGER_EXCLUSIVE.	
Multiplicity	1	
Type	EcucEnumerationParamDef	
Range	CAN_TT_RX_TRIGGER	Trigger for verifying the successful reception of messages.
	CAN_TT_TX_REF_TRIGGER	Trigger for transmitting the reference message.
	CAN_TT_TX_REF_TRIGGER_GAP	Trigger for transmitting the reference message in case no event occurs after a gap.
	CAN_TT_TX_TRIGGER_EXCLUSIVE	Trigger for transmitting a message in an exclusive time window. Note, that messages in an exclusive window are transmitted continuously, i.e. regardless whether the same message has been transmitted before, the message, which is currently available, will be transmitted every time the tx trigger occurs.
	CAN_TT_TX_TRIGGER_MERGED	Trigger for transmitting a message inside a merged arbitration window (the last tx trigger in a merged arbitration window is of type CAN_TT_TX_TRIGGER_SINGLE). Note, that messages in an arbitration window are transmitted only, if new data is available. When the transmission was not successful, it will be repeated at the next tx trigger for this message. When the transmission was successful, this message will not be transmitted again at the next tx triggers until a new message for this tx trigger is provided.





	CAN_TT_TX_TRIGGER_SINGLE	Trigger for transmitting a message in a single (non-merged) arbitration window (or the last tx trigger in a merged arbitration window). Note, that messages in an arbitration window are transmitted only, if new data is available. When the transmission was not successful, it will be repeated at the next tx trigger for this message. When the transmission was successful, this message will not be transmitted again at the next tx triggers until a new message for this tx trigger is provided.	
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: CAN_OBJECT_TYPE		

]

10.2.14 CanXLGeneral

[ECUC_Can_00524] Definition of EcucParamConfContainerDef CanXLGeneral [

Container Name	CanXLGeneral		
Parent Container	CanGeneral		
Description	This container is specified in the SWS CAN XL Driver and contains global parameters of the CAN XL Driver.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanXLEthGlobalTimeSupport	1	[ECUC_Can_00525]

No Included Containers

]

[ECUC_Can_00525] Definition of EcucBooleanParamDef CanXLEthGlobalTime Support

Parameter Name	CanXLEthGlobalTimeSupport		
Parent Container	CanXLGeneral		
Description	Enables/Disables the Global Time APIs for the Ethernet Interface used when hardware timestamping is supported by CAN controller.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

10.2.15 CanXLController

[ECUC_Can_00499] Definition of EcucParamConfContainerDef CanXLController

Container Name	CanXLController		
Parent Container	CanController		
Description	This container is specified in the SWS CAN XL Driver and represents a CAN XL channel. If this container is present, the CAN driver will provide the extended CanXL API.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanXLCtrlEthDefaultPriority	0..1	[ECUC_Can_00500]
CanXLEthDefaultQueue	0..1	[ECUC_Can_00501]
CanXLEthPhysAddress	0..1	[ECUC_Can_00506]
CanXLEthEcucPartitionRef	0..1	[ECUC_Can_00511]

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanXLEthEgressFifo	0..*	Represents a Fifo at the egress side.
CanXLEthIngressFifo	0..*	Represents a Fifo at the ingress side.

[ECUC_Can_00500] Definition of EcucIntegerParamDef CanXLCtrlEthDefaultPriority [

Parameter Name	CanXLCtrlEthDefaultPriority		
Parent Container	CanXLController		
Description	Defines the default CAN XL Priority ID to be used for outgoing tunneled Ethernet frames.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	-		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00501] Definition of EcucIntegerParamDef CanXLEthDefaultQueue

[

Parameter Name	CanXLEthDefaultQueue		
Parent Container	CanXLController		
Description	Defines the default CAN XL Queue to be used for outgoing tunneled Ethernet frames.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00506] Definition of EcucStringParamDef CanXLEthPhysAddress [

Parameter Name	CanXLEthPhysAddress		
Parent Container	CanXLController		
Description	Specifies the unique 48-bit physical address (MAC address) of the controller in network byte order.		
Multiplicity	0..1		
Type	EcucStringParamDef		
Default value	–		
Length	17-17		
Regular Expression	([0-9a-fA-F]{2:}){5}[0-9a-fA-F]{2}		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00511] Definition of EcucReferenceDef CanXLEthEcucPartitionRef [

Parameter Name	CanXLEthEcucPartitionRef		
Parent Container	CanXLController		
Description	Maps the Ethernet Interface access to the CAN XL controller to zero or one ECUC partitions.		
Multiplicity	0..1		
Type	Reference to EcucPartition		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

10.2.16 CanXLHardwareObject

[ECUC_Can_00526] Definition of EcucParamConfContainerDef CanXLHardware Object [

Container Name	CanXLHardwareObject		
Parent Container	CanConfigSet		
Description	This container is specified in the SWS CAN XL Driver and contains the configuration (parameters) of CAN XL Hardware Objects.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanObjectType	1	[ECUC_Can_00327]
CanXLObjectId	1	[ECUC_Can_00527]
CanControllerRef	1	[ECUC_Can_00322]
CanMainFunctionRWPeriodRef	0..1	[ECUC_Can_00438]

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanXLHwFilter	0..*	This container is only valid for CAN XL HRHs and contains the configuration (parameters) of one hardware filter. This container is intentionally left empty, because the parameters are very hardware specific and shall be filled in by the VSMD.

]

For parameter table [\[ECUC_Can_00327\] CanObjectType](#), see definition below container [CanHardwareObject](#).

[ECUC_Can_00527] Definition of EcucIntegerParamDef CanXLObjectId [

Parameter Name	CanXLObjectId		
Parent Container	CanXLHardwareObject		
Description	Holds the handle ID of CAN XL HRH or HTH.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	





	Post-build time	-	
Scope / Dependency	scope: local		

]

For parameter table [ECUC_Can_00322] [CanControllerRef](#), see definition below container [CanHardwareObject](#).

For parameter table [ECUC_Can_00438] [CanMainFunctionRWPeriodRef](#), see definition below container [CanHardwareObject](#).

10.2.17 CanXLHwFilter

[ECUC_Can_00528] Definition of EcucParamConfContainerDef CanXLHwFilter [

Container Name	CanXLHwFilter		
Parent Container	CanXLHardwareObject		
Description	This container is only valid for CAN XL HRHs and contains the configuration (parameters) of one hardware filter. This container is intentionally left empty, because the parameters are very hardware specific and shall be filled in by the VSMD.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

No Included Parameters

No Included Containers

]

10.2.18 CanXLBaudrateConfig

[ECUC_Can_00512] Definition of EcucParamConfContainerDef CanXLBaudrate Config [

Container Name	CanXLBaudrateConfig		
Parent Container	CanControllerBaudrateConfig		
Description	This container is specified in the SWS CAN XL Driver and contains bit timing related configuration parameters of the CAN controller(s) for payload and CRC of a CAN XL frame.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanXLBaudRate	1	[ECUC_Can_00513]
CanXLErrorSignaling	1	[ECUC_Can_00523]
CanXLPropSeg	1	[ECUC_Can_00517]
CanXLPwmL	1	[ECUC_Can_00514]
CanXLPwmO	1	[ECUC_Can_00516]
CanXLPwmS	1	[ECUC_Can_00515]
CanXLSeg1	1	[ECUC_Can_00518]
CanXLSeg2	1	[ECUC_Can_00519]
CanXLSspOffset	0..1	[ECUC_Can_00521]
CanXLSyncJumpWidth	1	[ECUC_Can_00520]
CanXLTrcvPwmMode	1	[ECUC_Can_00522]

No Included Containers

]

[[ECUC_Can_00513](#)] Definition of EcucFloatParamDef CanXLBaudRate [

Parameter Name	CanXLBaudRate		
Parent Container	CanXLBaudrateConfig		
Description	Specifies the data segment baud rate of the controller in kbps. Note: The CAN XL baudrate should be at least twice the nominal bitrate so that an error flag can safely destroy a CAN XL frame.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range	[0 .. 20000]		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: Has to be at least twice as high as CanControllerBaudRate.		

]

[ECUC_Can_00523] Definition of EcucBooleanParamDef CanXLErrorSignaling [

Parameter Name	CanXLErrorSignaling		
Parent Container	CanXLBaudrateConfig		
Description	Specifies if error signaling shall be enabled.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: Only relevant if CanXLTrcvPwmMode is disabled.		

]

[ECUC_Can_00517] Definition of EcucIntegerParamDef CanXLPropSeg [

Parameter Name	CanXLPropSeg		
Parent Container	CanXLBaudrateConfig		
Description	Specifies propagation delay in time quantas.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00514] Definition of EcucIntegerParamDef CanXLPwmL [

Parameter Name	CanXLPwmL		
Parent Container	CanXLBaudrateConfig		
Description	Specifies the PWM long phase length.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD





Scope / Dependency	scope: local
---------------------------	--------------

]

[ECUC_Can_00516] Definition of EcucIntegerParamDef CanXLPwmO [

Parameter Name	CanXLPwmO		
Parent Container	CanXLBaudrateConfig		
Description	Specifies the PWM time offset.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00515] Definition of EcucIntegerParamDef CanXLPwmS [

Parameter Name	CanXLPwmS		
Parent Container	CanXLBaudrateConfig		
Description	Specifies the PWM short phase length.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00518] Definition of EcucIntegerParamDef CanXLSeg1 [

Parameter Name	CanXLSeg1		
Parent Container	CanXLBaudrateConfig		
Description	Specifies phase segment 1 in time quantas.		
Multiplicity	1		
Type	EcucIntegerParamDef		





Range	0 .. 255		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00519] Definition of EcucIntegerParamDef CanXLSeg2 [

Parameter Name	CanXLSeg2		
Parent Container	CanXLBaudrateConfig		
Description	Specifies phase segment 2 in time quantas.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00521] Definition of EcucIntegerParamDef CanXLSpOffset [

Parameter Name	CanXLSpOffset		
Parent Container	CanXLBaudrateConfig		
Description	Specifies the Transmitter Delay Compensation Offset in minimum time quanta. If this parameter is configured, the Transmitter Delay Compensation is done by measurement of the CAN controller. If not specified, Transmitter Delay Compensation is disabled. See ECUC_Can_00494 for details.		
Multiplicity	0..1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	–		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	



△

	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00520] Definition of EcucIntegerParamDef CanXLSyncJumpWidth [

Parameter Name	CanXLSyncJumpWidth		
Parent Container	CanXLBaudrateConfig		
Description	Specifies the synchronization jump width for the controller in time quantas.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00522] Definition of EcucBooleanParamDef CanXLTrcvPwmMode [

Parameter Name	CanXLTrcvPwmMode		
Parent Container	CanXLBaudrateConfig		
Description	Specifies if the transceiver shall be set to the PWM mode.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

10.2.19 CanXLEthEgressFifo

[ECUC_Can_00502] Definition of EcucParamConfContainerDef CanXLEthEgressFifo [

Container Name	CanXLEthEgressFifo		
Parent Container	CanXLController		
Description	Represents a Fifo at the egress side.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanXLEthEgressFifoCanXLPriority	1	[ECUC_Can_00503]
CanXLEthEgressFifoCanXLQueue	1	[ECUC_Can_00504]
CanXLEthEgressFifoldx	1	[ECUC_Can_00505]

No Included Containers

]

[[ECUC_Can_00503](#)] Definition of EcucIntegerParamDef CanXLEthEgressFifoCanXLPriority [

Parameter Name	CanXLEthEgressFifoCanXLPriority		
Parent Container	CanXLEthEgressFifo		
Description	Defines the CAN XL Priority ID to be used for outgoing tunneled Ethernet frames using this FIFO.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[[ECUC_Can_00504](#)] Definition of EcucIntegerParamDef CanXLEthEgressFifoCanXLQueue [

Parameter Name	CanXLEthEgressFifoCanXLQueue		
Parent Container	CanXLEthEgressFifo		
Description	Defines the CAN XL Queue to be used for outgoing tunneled Ethernet frames using this FIFO.		
Multiplicity	1		



△

Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00505] Definition of EcucIntegerParamDef CanXLEthEgressFifoldx

[

Parameter Name	CanXLEthEgressFifoldx		
Parent Container	CanXLEthEgressFifo		
Description	Egress Fifo index.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 255		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local withAuto = true		

]

10.2.20 CanXLEthIngressFifo

[ECUC_Can_00507] Definition of EcucParamConfContainerDef CanXLEthIngressFifo

[

Container Name	CanXLEthIngressFifo		
Parent Container	CanXLController		
Description	Represents a Fifo at the ingress side.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	–	
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
CanXLEthIngressFifoCanXLQueue	1	[ECUC_Can_00509]
CanXLEthIngressFifoldx	1	[ECUC_Can_00508]
CanXLEthIngressFifoVcid	0..*	[ECUC_Can_00510]

No Included Containers

]

[ECUC_Can_00509] Definition of EcucIntegerParamDef CanXLEthIngressFifoCanXLQueue [

Parameter Name	CanXLEthIngressFifoCanXLQueue		
Parent Container	CanXLEthIngressFifo		
Description	Defines the CAN XL Queue to be used for incoming tunneled Ethernet frames using this FIFO.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_Can_00508] Definition of EcucIntegerParamDef CanXLEthIngressFifoldx [

[

Parameter Name	CanXLEthIngressFifoldx		
Parent Container	CanXLEthIngressFifo		
Description	Ingress Fifo index.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local withAuto = true		

]

[ECUC_Can_00510] Definition of EcuIntegerParamDef CanXLEthIngressFifo Vcid

Parameter Name	CanXLEthIngressFifoVcid		
Parent Container	CanXLEthIngressFifo		
Description	Configures a VCID to be accepted by this FIFO. If not present, all VCIDs shall be accepted.		
Multiplicity	0..*		
Type	EcuIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	-	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

11 Not applicable requirements

[SWS_Can_NA]

Upstream requirements: SRS_BSW_00162, SRS_BSW_00168, SRS_BSW_00170, SRS_BSW_00307, SRS_BSW_00325, [SRS_BSW_00336](#), SRS_BSW_00342, SRS_BSW_00353, SRS_BSW_00359, SRS_BSW_00378, SRS_BSW_00383, SRS_BSW_00395, SRS_BSW_00397, SRS_BSW_00398, SRS_BSW_00399, SRS_BSW_00400, SRS_BSW_00409, SRS_BSW_00413, SRS_BSW_00415, SRS_BSW_00417, SRS_BSW_00422, SRS_BSW_00423, SRS_BSW_00424, SRS_BSW_00425, SRS_BSW_00426, SRS_BSW_00427, SRS_BSW_00429, SRS_BSW_00433, SRS_BSW_00439, SRS_BSW_00440, SRS_BSW_00447, [SRS_BSW_00449](#), SRS_BSW_00453, SRS_Can_01125, SRS_Can_01126, SRS_SPAL_12064, SRS_SPAL_12068, SRS_SPAL_12163, SRS_SPAL_12462

[These requirements are not applicable to this specification.]

A Change history of AUTOSAR traceable items

A.1 Traceable item history of this document according to AUTOSAR Release R24-11

A.1.1 Added Constraints in R24-11

none

A.1.2 Changed Constraints in R24-11

none

A.1.3 Deleted Constraints in R24-11

Number	Heading
[SWS_Can_-CONSTR_-00508]	

Table A.1: Deleted Constraints in R24-11

A.1.4 Added Specification Items in R24-11

none

A.1.5 Changed Specification Items in R24-11

Number	Heading
[ECUC_Can_00491]	Definition of EcucReferenceDef CanEcucPartitionRef
[SWS_Can_00222]	Definition of imported datatypes of module Can
[SWS_Can_00234]	Definition of mandatory interfaces required by module Can
[SWS_Can_00235]	Definition of optional interfaces requested by module Can

Table A.2: Changed Specification Items in R24-11

A.1.6 Deleted Specification Items in R24-11

none