

Document Title	Specification of Network Management for SAE J1939
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	612

Document Status	published
Part of AUTOSAR Standard	Classic Platform
Part of Standard Release	R24-11

Document Change History			
Date	Release	Changed by	Description
2024-11-27	R24-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Changed lower layer to LSduR
2023-11-23	R23-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Changed document name to include "CP" • Added configuration of dynamic addressing • Added information about automatic handle IDs to configuration
2022-11-24	R22-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Converted to \LaTeX • Fixed generic component names
2021-11-25	R21-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • No content changes
2020-11-30	R20-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Improved structure of error sections • Replaced error descriptions with generated tables
2019-11-28	R19-11	AUTOSAR Release Management	<ul style="list-style-type: none"> • Clarification of AC transmission • Constraint regarding detection of address conflicts • Changed Document Status from Final to published



△

2018-10-31	4.4.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • Changed header file structure • Harmonized J1939NM_E_UNINIT
2017-12-08	4.3.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • Fixed include hierarchy • Removed multiple configuration container
2016-11-30	4.3.0	AUTOSAR Release Management	<ul style="list-style-type: none"> • Address coordination for gateways • Improved handling of meta data • Reliable TxConfirmation replaces timeout • SetEventStatus replaces ReportErrorStatus
2015-07-31	4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Support for networks without address claiming • Fixed state notifications to BswM • Introduction of further error classes
2014-10-31	4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"> • Enhanced description of extended production error J1939NM_E_ADDRESS_LOST • Fixed usage of 'const' in NM APIs • Harmonized with SWS BSW General
2014-03-31	4.1.3	AUTOSAR Release Management	<ul style="list-style-type: none"> • Introduction of random delays • Fixed state diagram • Removed configurable dummy APIs
2013-10-31	4.1.2	AUTOSAR Release Management	<ul style="list-style-type: none"> • Additional development errors for function parameter checks • Removed change documentation
2013-03-15	4.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Initial release

Disclaimer

This work (specification and/or software implementation) and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the work.

The material contained in this work is protected by copyright and other types of intellectual property rights. The commercial exploitation of the material contained in this work requires a license to such intellectual property rights.

This work may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the work may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The work has been developed for automotive applications only. It has neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Contents

1	Introduction and Functional Overview	7
1.1	Network Management According to SAE J1939	7
1.2	J1939 Network Management BSW Module	7
2	Acronyms and Abbreviations	8
3	Related Documentation	9
3.1	Input Documents & Related Standards and Norms	9
3.2	Related Specifications	10
4	Constraints and assumptions	11
4.1	Limitations	11
4.2	Applicability to Car Domains	11
5	Dependencies to Other Modules	12
5.1	File Structure	12
5.1.1	Code File Structure	12
5.1.2	Header File Structure	12
6	Requirements Tracing	13
7	Functional Specification	15
7.1	Overview	15
7.2	Module Handling	15
7.2.1	Initialization	15
7.2.2	Timing Related Functionality	16
7.3	Network Management States of the J1939Nm	17
7.3.1	ECU Startup	17
7.3.2	Address Loss	19
7.3.3	ECU Shutdown	20
7.4	Transmission of AddressClaimed	21
7.5	Reception of AddressClaimed	22
7.6	Request for AddressClaimed	23
7.7	Address Coordination	24
7.8	Error Classification	25
7.8.1	Development Errors	25
7.8.2	Runtime Errors	26
7.8.3	Production Errors	26
7.8.4	Extended Production Errors	26
8	API Specification	28
8.1	API Parameter Checking	28
8.2	Imported Types	28
8.3	Type Definitions	29
8.3.1	J1939Nm_ConfigType	29

8.4	Function Definitions	29
8.4.1	J1939Nm_Init	30
8.4.2	J1939Nm_Delnit	30
8.4.3	J1939Nm_GetVersionInfo	31
8.4.4	J1939Nm_NetworkRequest	32
8.4.5	J1939Nm_NetworkRelease	32
8.4.6	J1939Nm_GetState	33
8.4.7	J1939Nm_GetBusOffDelay	34
8.4.8	J1939Nm_PassiveStartUp	34
8.5	Callback Notifications	35
8.5.1	J1939Nm_RxIndication	35
8.5.2	J1939Nm_TxConfirmation	36
8.5.3	J1939Nm_RequestIndication	36
8.6	Scheduled Functions	37
8.6.1	J1939Nm_MainFunction	38
8.7	Expected Interfaces	38
8.7.1	Mandatory Interfaces	38
8.7.2	Optional Interfaces	39
8.7.3	Configurable Interfaces	39
8.7.3.1	<User_AddressClaimedIndication>	39
9	Sequence Diagrams	41
9.1	Transmission of AddressClaimed	41
9.2	Reception of AddressClaimed	41
9.3	Request for AddressClaimed	42
10	Configuration Specification	43
10.1	Containers and Configuration Parameters	44
10.1.1	J1939Nm	48
10.1.2	J1939NmGeneral	48
10.1.3	J1939NmConfigSet	51
10.1.4	J1939NmSharedAddressSpace	52
10.1.5	J1939NmChannel	53
10.1.6	J1939NmTxPdu	55
10.1.7	J1939NmRxPdu	56
10.1.8	J1939NmNodeSpecificDemEventParameterRefs	57
10.1.9	J1939NmNode	59
10.1.10	J1939NmExternalNode	65
10.2	Configuration of NM Interface	72
A	Not Applicable Requirements	73
B	Change History of AUTOSAR Traceable Items	74
B.1	Traceable Item History of this Document According to AUTOSAR Release R24-11	74
B.1.1	Added Specification Items in R24-11	74
B.1.2	Changed Specification Items in R24-11	74

B.1.3	Deleted Specification Items in R24-11	74
B.2	Traceable Item History of this Document According to AUTOSAR Re- lease R23-11	74
B.2.1	Added Specification Items in R23-11	74
B.2.2	Changed Specification Items in R23-11	74
B.2.3	Deleted Specification Items in R23-11	74

1 Introduction and Functional Overview

This specification specifies the functionality, API and the configuration of the AUTOSAR Basic Software module [J1939 Network Management](#).

1.1 Network Management According to SAE J1939

In contrast to other AUTOSAR network management approaches, the task of [J1939 network management](#) is not to handle sleep and wake-up of ECUs, but to assign a unique address to each ECU.

This is achieved by sending the [AddressClaimed](#) (AC, 0x0EE00) [parameter group](#) (PG) at start-up, which announces the desired address. If another ECU claims the same address, and has higher priority, the ECU has to go silent after sending the [CannotClaimAddress parameter group](#) (AC with null address 0xFE as [source address](#)). The [AddressClaimed PG](#) must also be sent upon request.

1.2 J1939 Network Management BSW Module

The [J1939 Network Management](#) module ([J1939Nm](#)) handles received and transmitted [AddressClaimed](#) (AC) PGs. It supports transmission of AC on start-up, after a contending AC received from another [node](#), and on request (triggered by the [J1939 Request Manager](#)).

Besides this, the [J1939 Network Management](#) module also ensures that the ECU does not send any messages during startup or after address loss.

2 Acronyms and Abbreviations

The glossary below includes acronyms and abbreviations relevant to the [SAE J1939 Network Management](#) module that are not included in the [1, AUTOSAR Glossary].

Abbreviation / Acronym	Description
AC	J1939 AddressClaimed PG (PGN = 0x0EE00), CannotClaimAddress when SA = 0xFE
BSW	Basic Software (module)
BswM	Basic Software Mode Manager
CanIf	CAN Interface
CDD	Complex Driver, any software that interfaces directly with AUTOSAR BSW, but is not defined by AUTOSAR
ComM	Communication Manager
DA	Destination Address
DET	Default Error Tracer, supports development and run-time error reporting
DEM	Diagnostic Event Manager, stores diagnostic events, including extended production errors
DP	Data Page, the most significant bit (MSB) of the 18 bit PGN
EDP	Extended Data Page, the second bit (after MSB) of the 18 bit PGN
J1939Nm	SAE J1939 Network Management
J1939Rm	SAE J1939 Request Manager
LSduR	L-SDU Router
NAME	The 64 bit NAME of a Node
Node	J1939 node - can be attached to more than one channel
NodeChannel	The connection of a node to one channel
Nm	Network Management Interface
PDUF	PDU Format, the middle byte of the 18 bit PGN
PDUS	PDU Specific, the lower byte of the 18 bit PGN
PG	Parameter Group
PGN	Parameter Group Number (18 bits, contains EDP, DP, PDUF, PDUS)
RQST	J1939 Request PG (PGN = 0x0EA00)
RTE	AUTOSAR Runtime Environment
SA	Source Address
SchM	Basic Software Schedule Manager, part of the RTE

3 Related Documentation

3.1 Input Documents & Related Standards and Norms

- [1] Glossary
AUTOSAR_FO_TR_Glossary
- [2] General Specification of Basic Software Modules
AUTOSAR_CP_SWS_BSWGeneral
- [3] SAE J1939-81 Network Management
- [4] Layered Software Architecture
AUTOSAR_CP_EXP_LayeredSoftwareArchitecture
- [5] Specification of Linklayer Sdu Routing Module
AUTOSAR_CP_SWS_LSduRouter
- [6] Specification of CAN Interface
AUTOSAR_CP_SWS_CANInterface
- [7] Specification of a Request Manager for SAE J1939
AUTOSAR_CP_SWS_SAEJ1939RequestManager
- [8] Specification of Network Management
AUTOSAR_AP_SWS_NetworkManagement
- [9] Specification of Basic Software Mode Manager
AUTOSAR_CP_SWS_BSWModeManager
- [10] Specification of Diagnostic Event Manager
AUTOSAR_CP_SWS_DiagnosticEventManager
- [11] Specification of Default Error Tracer
AUTOSAR_CP_SWS_DefaultErrorTracer
- [12] Complex Driver design and integration guideline
AUTOSAR_CP_EXP_CDDDesignAndIntegrationGuideline
- [13] Specification of ECU Configuration
AUTOSAR_CP_TPS_ECUConfiguration
- [14] Specification of Communication Manager
AUTOSAR_CP_SWS_COMManager
- [15] Requirements on BSW Modules for SAE J1939
AUTOSAR_CP_RS_SAEJ1939
- [16] General Requirements on Basic Software Modules
AUTOSAR_CP_RS_BSWGeneral
- [17] Specification of Communication Stack Types
AUTOSAR_CP_SWS_CommunicationStackTypes

- [18] Specification of Standard Types
AUTOSAR_CP_SWS_StandardTypes
- [19] Specification of RTE Software
AUTOSAR_CP_SWS_RTE
- [20] System Template
AUTOSAR_CP_TPS_SystemTemplate

3.2 Related Specifications

AUTOSAR provides a General Specification on [Basic Software](#) modules [2, SWS BSW General], which is also valid for [SAE J1939 Network Management](#).

Thus, the specification [2, SWS BSW General] shall be considered as additional and required specification for [SAE J1939 Network Management](#).

4 Constraints and assumptions

4.1 Limitations

The [J1939 Network Management](#) module does not support all features defined in [\[3, SAE J1939-81\]](#), especially:

- Changing the address of a [node](#) after reception of [CommandedAddress](#) or after an address loss.
- Changing the [NAME](#) of a [node](#) using the Name Management protocol.
- Detection of address violations by messages other than [AddressClaimed](#).

4.2 Applicability to Car Domains

J1939 is developed by the SAE as a standard for heavy-duty on-highway, farming, and construction vehicles. It is not applicable to passenger cars or light trucks.

5 Dependencies to Other Modules

The [4, EXP Layered Software Architecture] shows an overview of the neighboring modules of the J1939 Network Management.

The J1939 Network Management module (J1939Nm) has direct interfaces and/or configuration dependencies towards the L-SDU Router (LSduR, [5, SWS L-SDU Router]), CAN Interface (CanIf, [6, SWS CAN Interface]), the J1939 Request Manager (J1939Rm, [7, SWS SAE J1939 Request Manager]), the Network Management Interface (Nm, [8, SWS Network Management]), the Basic Software Mode Manager (BswM, see [9, SWS Basic Software Mode Manager]), the Diagnostic Event Manager (DEM, [10, SWS Diagnostic Event Manager]), and the Default Error Tracer (DET, [11, SWS Default Error Tracer]), and also to Complex Drivers (CDD, see [12, CDD Design And Integration Guideline] and [13, TPS ECU Configuration]). Besides these, there are also indirect dependencies towards the Communication Manager (ComM, [14, SWS Communication Manager]).

The J1939 Network Management module includes header files of the L-SDU Router, the Network Management Interface, the J1939 Request Manager, the Diagnostic Event Manager, and the Default Error Tracer.

5.1 File Structure

5.1.1 Code File Structure

For details, refer to the subsection 5.1.6 “Code file structure” of the [2, SWS BSW General].

5.1.2 Header File Structure

For details, refer to the subsection 5.1.7 “Header file structure” of the [2, SWS BSW General].

6 Requirements Tracing

The following tables reference the requirements specified in [15, SRS SAE J1939] (Requirements on BSW Modules for SAE J1939) and [16, SRS BSW General] and links to the fulfillment of these.

Requirement	Description	Satisfied by
[SRS_BSW_00171]	Optional functionality of a Basic-SW component that is not required in the ECU shall be configurable at pre-compile-time	[SWS_J1939Nm_00059] [SWS_J1939Nm_00060]
[SRS_BSW_00350]	All AUTOSAR Basic Software Modules shall allow the enabling/disabling of detection and reporting of development errors.	[SWS_J1939Nm_00005]
[SRS_BSW_00385]	List possible error notifications	[SWS_J1939Nm_00012]
[SRS_BSW_00386]	The BSW shall specify the configuration and conditions for detecting an error	[SWS_J1939Nm_00005] [SWS_J1939Nm_00025] [SWS_J1939Nm_00026] [SWS_J1939Nm_00067]
[SRS_BSW_00406]	API handling in uninitialized state	[SWS_J1939Nm_00002]
[SRS_BSW_00407]	Each BSW module shall provide a function to read out the version information of a dedicated module implementation	[SWS_J1939Nm_00033]
[SRS_BSW_00466]	Classification of extended production errors	[SWS_J1939Nm_00012]
[SRS_BSW_00469]	Fault detection and healing of production errors and extended production errors	[SWS_J1939Nm_00012]
[SRS_BSW_00470]	Execution frequency of production error detection	[SWS_J1939Nm_00012]
[SRS_BSW_00471]	Do not cause dead-locks on detection of production errors - the ability to heal from previously detected production errors	[SWS_J1939Nm_00012]
[SRS_BSW_00472]	Avoid detection of two production errors with the same root cause.	[SWS_J1939Nm_00012]
[SRS_BSW_00478]	Timing limits of main functions	[SWS_J1939Nm_00006] [SWS_J1939Nm_00039]
[SRS_J1939_00030]	The J1939 Network Management module shall provide an interface for module initialization	[SWS_J1939Nm_00002] [SWS_J1939Nm_00007] [SWS_J1939Nm_00031]
[SRS_J1939_00031]	The J1939 Network Management module shall provide an interface for module shutdown	[SWS_J1939Nm_00003] [SWS_J1939Nm_00032]
[SRS_J1939_00032]	The J1939 Network Management module shall report a failed address claim to the Diagnostic Event Manager	[SWS_J1939Nm_00012]
[SRS_J1939_00033]	The J1939 Network Management module shall perform an initial address claim at startup	[SWS_J1939Nm_00009] [SWS_J1939Nm_00016] [SWS_J1939Nm_00017] [SWS_J1939Nm_00019] [SWS_J1939Nm_00062] [SWS_J1939Nm_00073]



△

Requirement	Description	Satisfied by
[SRS_J1939_00034]	The J1939 Network Management module shall react correctly to contending address claims	[SWS_J1939Nm_00014] [SWS_J1939Nm_00016] [SWS_J1939Nm_00017] [SWS_J1939Nm_00018] [SWS_J1939Nm_00019] [SWS_J1939Nm_00020] [SWS_J1939Nm_00021] [SWS_J1939Nm_00062] [SWS_J1939Nm_00068] [SWS_J1939Nm_00069] [SWS_J1939Nm_00073] [SWS_J1939Nm_00074]
[SRS_J1939_00035]	The J1939 Network Management module shall react to requests for the AddressClaimed PG	[SWS_J1939Nm_00016] [SWS_J1939Nm_00017] [SWS_J1939Nm_00018] [SWS_J1939Nm_00019] [SWS_J1939Nm_00022] [SWS_J1939Nm_00023] [SWS_J1939Nm_00043] [SWS_J1939Nm_00062] [SWS_J1939Nm_00073]
[SRS_J1939_00036]	The J1939 Network Management module shall only allow communication after a successful address claim	[SWS_J1939Nm_00010] [SWS_J1939Nm_00011] [SWS_J1939Nm_00015] [SWS_J1939Nm_00021] [SWS_J1939Nm_00044] [SWS_J1939Nm_00045] [SWS_J1939Nm_00063] [SWS_J1939Nm_00064] [SWS_J1939Nm_00065] [SWS_J1939Nm_00066]
[SRS_J1939_00037]	The J1939 Network Management module shall delay communication after initial address claim	[SWS_J1939Nm_00010] [SWS_J1939Nm_00013] [SWS_J1939Nm_00061] [SWS_J1939Nm_00063]
[SRS_J1939_00049]	J1939 Modules shall support Meta Data	[SWS_J1939Nm_00073] [SWS_J1939Nm_00074]
[SRS_J1939_00051]	The J1939 Network Management module shall route received address claims to connected channels	[SWS_J1939Nm_00071] [SWS_J1939Nm_00072]

Table 6.1: Requirements Tracing

7 Functional Specification

This chapter defines the behavior of the [J1939 Network Management](#) module. The API of the module is defined in [Chapter 8](#), while the configuration is defined in [Chapter 10](#).

7.1 Overview

The [J1939 Network Management](#) module supports transmission and reception of [AddressClaimed](#) PGs, and handling of requests for the [AddressClaimed](#) PG. It also ensures that the ECU does not send messages during the initial address claiming phase or after the ECU sent a [CannotClaimAddress](#) PG because it lost its address to a contending address claim.

7.2 Module Handling

This section contains description of auxiliary functionality of the [J1939 Network Management](#) module.

7.2.1 Initialization

The [J1939 Network Management](#) module is initialized via [J1939Nm_Init](#), and de-initialized via [J1939Nm_DeInit](#). Except for [J1939Nm_GetVersionInfo](#) and [J1939Nm_Init](#), the API functions of the [J1939 Network Management](#) module may only be called after the module has been properly initialized.

[SWS_J1939Nm_00002]

Upstream requirements: [SRS_J1939_00030](#), [SRS_BSW_00406](#)

[A call to [J1939Nm_Init](#) initializes all internal variables and sets the [J1939 Network Management](#) module to the initialized state.]

[SWS_J1939Nm_00003]

Upstream requirements: [SRS_J1939_00031](#)

[A call to [J1939Nm_DeInit](#) sets the [J1939 Network Management](#) module back to the uninitialized state.]

[SWS_J1939Nm_00005]

Upstream requirements: [SRS_BSW_00350](#), [SRS_BSW_00386](#)

[When [J1939Nm_Init](#) is called in initialized state, the [J1939 Network Management](#) module shall not re-initialize its internal variables. It shall instead call [Det_ReportError](#) with the error code [J1939NM_E_REINIT](#) if development error detection is enabled via [J1939NmDevErrorDetect](#).]

7.2.2 Timing Related Functionality

To be able to measure times, the [J1939 Network Management](#) module is triggered cyclically via the [J1939Nm_MainFunction](#).

[SWS_J1939Nm_00006]

Upstream requirements: [SRS_BSW_00478](#)

[The [J1939 Network Management](#) module shall use the [J1939Nm_MainFunction](#) for timing related purposes.]

The recovery after a bus off must be delayed by a random time to avoid repeating bus offs when two [nodes](#) try to claim the same address. This random delay is also required when sending a [CannotClaimAddress PG](#) after a contending address claim or after a request for the [AddressClaimed PG](#).

[SWS_J1939Nm_00068]

Upstream requirements: [SRS_J1939_00034](#)

[The [J1939Nm](#) shall calculate a random number for delaying bus off recovery and transmission of a [CannotClaimAddress PG](#). The calculation shall use the [NAME](#) of a [node](#) as seed.]

[SWS_J1939Nm_00069]

Upstream requirements: [SRS_J1939_00034](#)

[When [J1939Nm_GetBusOffDelay](#) is called, [J1939Nm](#) shall return a random number based on the [NAMEs](#) of all [nodes](#) attached to the reported channel. This random number gives the delay time, based on the tick time configured via [J1939NmBusOffDelayTickPeriod](#).]

7.3 Network Management States of the J1939Nm

While the *NM Interface* handles network management states on channel level, the *J1939 Network Management* module needs a finer granularity, because several *nodes* can be attached to each channel. The connection of a *node* to one channel is called *NodeChannel* hereafter.

The following picture shows the internal NM related states of the *J1939 Network Management* module for one of its *NodeChannels* (i.e. one channel of a single *node*), and the transitions between these states:

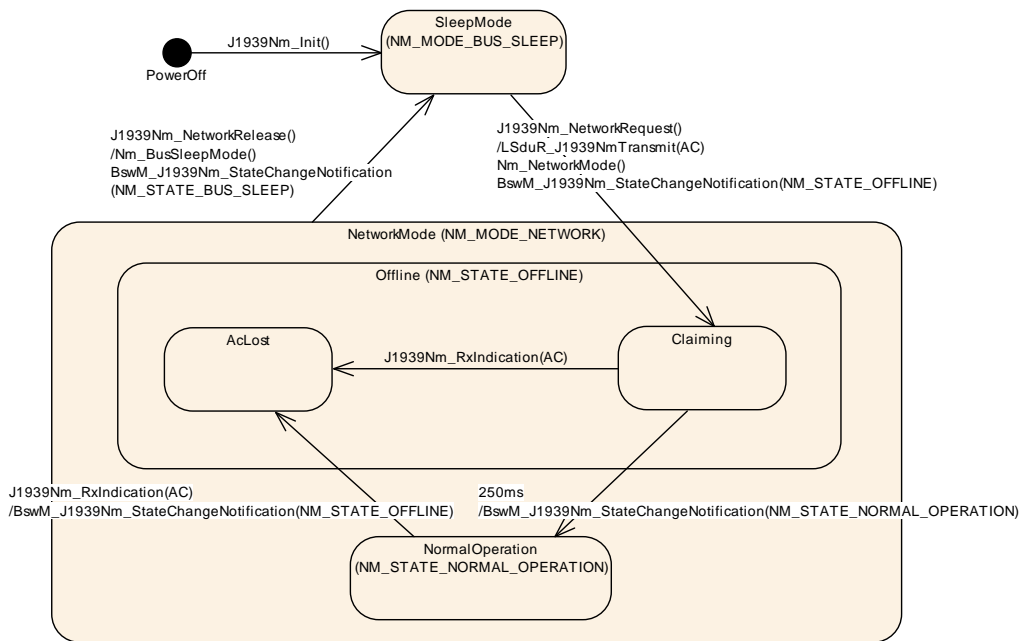


Figure 7.1: Internal states of J1939Nm with startup delay

The *J1939 Network Management* module reports state changes to the *NM Interface* and to the *Basic Software Mode Manager*.

While the states reported to the *NM Interface* are accumulated states of all *NodeChannels* of a CAN channel, the *J1939 Network Management* module reports states to the *BswM* separately for each *NodeChannel*.

7.3.1 ECU Startup

The *J1939 Network Management* module starts all *NodeChannels* in ‘SleepMode’ (corresponding to `NM_MODE_BUS_SLEEP`). The CAN channels will be switched to ‘NetworkMode’ (corresponding to `NM_MODE_NETWORK`) immediately afterwards by a network request issued from the *ComM* via *NM Interface*.

[SWS_J1939Nm_00007]

Upstream requirements: [SRS_J1939_00030](#)

[During initialization via [J1939Nm_Init](#), the [J1939 Network Management](#) module shall silently assume the 'SleepMode' for all [NodeChannels](#).]

[SWS_J1939Nm_00009]

Upstream requirements: [SRS_J1939_00033](#)

[A call to [J1939Nm_NetworkRequest](#) shall set all [NodeChannels](#) of the reported channel to 'NetworkMode'. The [J1939 Network Management](#) module shall notify this mode change to the [NM Interface](#) via [Nm_NetworkMode](#), and shall trigger transmission of an [AddressClaimed](#) PG for each [NodeChannel](#) where [J1939NmChannelUsesAddressArbitration](#) is enabled.]

The transmission of the [AddressClaimed](#) PG is described in detail in [Section 7.4](#).

When entering the network mode, the behavior of the [J1939 Network Management](#) module depends on the configuration parameter [J1939NmNodeStartUpDelay](#). Controlled by this parameter, the [J1939 Network Management](#) module switches the state of the affected [NodeChannels](#) either to the sub state 'Claiming' of the state 'Offline' (corresponding to [NM_STATE_OFFLINE](#)), or to the state 'NormalOperation' (corresponding to [NM_STATE_NORMAL_OPERATION](#)).

[SWS_J1939Nm_00010]

Upstream requirements: [SRS_J1939_00036](#), [SRS_J1939_00037](#)

[If a [node](#) of the [J1939 Network Management](#) module is configured for deferred online state ([J1939NmNodeStartUpDelay](#) enabled), its [NodeChannels](#) shall enter the sub state 'Claiming' of the state 'Offline' immediately after the switch from 'SleepMode' to 'NetworkMode'. The [J1939 Network Management](#) module shall report this state change to the [Basic Software Mode Manager](#) via [BswM_J1939Nm_StateChangeNotification\(NM_STATE_OFFLINE\)](#).]

[SWS_J1939Nm_00011]

Upstream requirements: [SRS_J1939_00036](#)

[If a [node](#) of the [J1939 Network Management](#) module is configured for immediate online state ([J1939NmNodeStartUpDelay](#) disabled), its [NodeChannels](#) shall enter the state 'NormalOperation' immediately after the switch from 'SleepMode' to 'NetworkMode'. The [J1939 Network Management](#) module shall report this state change to the [Basic Software Mode Manager](#) via [BswM_J1939Nm_StateChangeNotification\(NM_STATE_NORMAL_OPERATION\)](#).]

The [NM Interface](#) expects an accumulated channel state.

[SWS_J1939Nm_00063]

Upstream requirements: SRS_J1939_00036, SRS_J1939_00037

[When all `NodeChannels` of a channel are configured for deferred on-line state (`J1939NmNodeStartUpDelay` enabled), the `J1939 Network Management` module shall report the state change of these `NodeChannels` to the 'Offline' state immediately to the `NM Interface` via `Nm_StateChangeNotification(NM_STATE_OFFLINE)`.]

[SWS_J1939Nm_00064]

Upstream requirements: SRS_J1939_00036

[When the first `NodeChannel` of a channel changes its state to 'NormalOperation', the `J1939 Network Management` module shall report this state change immediately to the `NM Interface` via `Nm_StateChangeNotification(NM_STATE_NORMAL_OPERATION)`.]

When a `NodeChannel` has stayed for 250ms in state 'Claiming' after transmission of the initial `AddressClaimed PG`, it will switch to state 'NormalOperation'.

[SWS_J1939Nm_00061]

Upstream requirements: SRS_J1939_00037

[When `J1939Nm_TxConfirmation` is called with result `E_OK` for the initial `AddressClaimed PG` of a `NodeChannel` (transmitted during the transition to the 'Claiming' sub state), the `J1939 Network Management` module shall start the delay timer for this `NodeChannel`.]

[SWS_J1939Nm_00013]

Upstream requirements: SRS_J1939_00037

[When the delay timer of a `NodeChannel` expires in sub state 'Claiming', the `J1939 Network Management` module shall switch that `NodeChannel` to state 'NormalOperation' and shall report this state change to the `Basic Software Mode Manager` via `BswM_J1939Nm_StateChangeNotification(NM_STATE_NORMAL_OPERATION)`.]

7.3.2 Address Loss

When a `node` of the `J1939 Network Management` module loses its claimed address on one of its channels (see [Section 7.5](#)), it will switch that `NodeChannel` to the sub state 'AcLost' of state 'Offline', notifying the `NM Interface` and the `BswM` of this state change and sending a `CannotClaimAddress PG` for the losing `node` on that channel (see [Section 7.4](#)).

[SWS_J1939Nm_00014]

Upstream requirements: [SRS_J1939_00034](#)

[When a [NodeChannel](#) loses its address in 'NetworkMode', it shall switch to the sub state 'AcLost' of state 'Offline' and, after a delay calculated according to [\[SWS_J1939Nm_00068\]](#), trigger transmission of a [CannotClaimAddress PG](#).]

[SWS_J1939Nm_00065]

Upstream requirements: [SRS_J1939_00036](#)

[When a [NodeChannel](#) switches from state 'NormalOperation' to the sub state 'AcLost' of state 'Offline', the [J1939 Network Management](#) module shall notify the [Basic Software Mode Manager](#) via [BswM_J1939Nm_StateChangeNotification\(NM_STATE_OFFLINE\)](#).]

[SWS_J1939Nm_00066]

Upstream requirements: [SRS_J1939_00036](#)

[When the last [NodeChannel](#) of a channel changes its state to 'Offline', the [J1939 Network Management](#) module shall report this state change immediately to the [NM Interface](#) via [Nm_StateChangeNotification\(NM_STATE_OFFLINE\)](#).]

7.3.3 ECU Shutdown

To shut down the network, [ComM](#) calls the [Nm_NetworkRelease](#) API of the [NM Interface](#), which in turn calls [J1939Nm_NetworkRelease](#). The [J1939 Network Management](#) module will then switch to 'SleepMode', and notify this to the [NM Interface](#).

[SWS_J1939Nm_00015]

Upstream requirements: [SRS_J1939_00036](#)

[A call to [J1939Nm_NetworkRelease](#) shall set all [NodeChannels](#) of the reported channel to 'SleepMode'. The [J1939 Network Management](#) module shall notify this mode change to the [NM Interface](#) via [Nm_BusSleepMode](#), and shall report a state change to 'SleepMode' to the [NM Interface](#) via [Nm_StateChangeNotification\(NM_STATE_BUS_SLEEP\)](#) and to [BswM](#) via [BswM_J1939Nm_StateChangeNotification\(NM_STATE_BUS_SLEEP\)](#).]

7.4 Transmission of AddressClaimed

For each `NodeChannel`, the `J1939 Network Management` module needs to ensure that a contending `AddressClaimed` PG or a request for `AddressClaimed` is answered by at least one `AddressClaimed` PG. If an `AddressClaimed` PG is still pending for that `NodeChannel`, but now a `CannotClaimAddress` PG must be sent, it suffices to send the `CannotClaimAddress`. Therefore, a single buffer per `NodeChannel` that stores only the last transmission request is sufficient.

For the transmission of both the `AddressClaimed` and the `CannotClaimAddress` PG, the `J1939 Network Management` module uses just one PDU per channel with variable `source address` contained in the meta data of the PDU.

[SWS_J1939Nm_00016]

Upstream requirements: [SRS_J1939_00033](#), [SRS_J1939_00034](#), [SRS_J1939_00035](#)

[When the `J1939 Network Management` module needs to send an `AddressClaimed` (or `CannotClaimAddress`) PG, and no previous transmission is pending, it shall directly forward the corresponding PDU to the `CAN Interface` via `LSduR_J1939NmTransmit`.]

[SWS_J1939Nm_00073]

Upstream requirements: [SRS_J1939_00033](#), [SRS_J1939_00034](#), [SRS_J1939_00035](#), [SRS_J1939_00049](#)

[The `J1939 Network Management` module shall use a meta data item of type `CAN_ID_32` to provide the `source address` of transmitted `AddressClaimed` and `CannotClaimAddress` PGs. The `source address` resides in the last (least significant) byte of the meta data item.]

[SWS_J1939Nm_00017]

Upstream requirements: [SRS_J1939_00033](#), [SRS_J1939_00034](#), [SRS_J1939_00035](#)

[When the `J1939 Network Management` module needs to send an `AddressClaimed` (or `CannotClaimAddress`) PG, and the `CAN Interface` has not yet called `J1939Nm_TxConfirmation` for the previous transmission, the `J1939 Network Management` module shall buffer this PG for later transmission.]

[SWS_J1939Nm_00018]

Upstream requirements: [SRS_J1939_00034](#), [SRS_J1939_00035](#)

[Apart from the initial `AddressClaimed` PG, the `J1939 Network Management` module shall buffer only the latest `AddressClaimed` or `CannotClaimAddress` PG.]

Rationale: The initial `AddressClaimed` PG must be transmitted before any `CannotClaimAddress` PG according to [3, SAE J1939-81]. Otherwise, the `J1939 Network`

Management module should report current state even if the original request preceded a state change.

[SWS_J1939Nm_00019]

Upstream requirements: SRS_J1939_00033, SRS_J1939_00034, SRS_J1939_00035

[A call to `J1939Nm_TxConfirmation` with result `E_OK` shall trigger transmission of a buffered `AddressClaimed` or `CannotClaimAddress PG` via `LSduR_J1939NmTransmit`.]

[SWS_J1939Nm_00062]

Upstream requirements: SRS_J1939_00033, SRS_J1939_00034, SRS_J1939_00035

[When `LSduR_J1939NmTransmit` returns with `E_NOT_OK` or when `J1939Nm_TxConfirmation` is called with result `E_NOT_OK`, the transmission of that `PG` shall be triggered again.]

7.5 Reception of AddressClaimed

The `source address` of received `AddressClaimed PGs` must be immediately compared to the `source addresses` of all `NodeChannels` attached to the same channel (see `J1939NmNodePreferredAddress`). If any of these matches, the payload of the received `PG` must be compared to the configured `NAME` for the matching `source address` (see `J1939NmNodeNameXxx`), and depending on the relative priority, the `J1939 Network Management` module must send an `AddressClaimed` or a `CannotClaimAddress PG`. The priority is determined by the numerical value of the `NAME`.

To be able to identify the `source address`, the PDU associated with the `AddressClaimed PG` shall have a variable `source address` contained in the meta data of the PDU. In addition, the priority needs to be ignored for this PDU.

[SWS_J1939Nm_00074]

Upstream requirements: SRS_J1939_00034, SRS_J1939_00049

[The `J1939 Network Management` module shall use a meta data item of type `CAN_ID_32` to determine the `source address` of received `AddressClaimed` and `CannotClaimAddress PGs`. The `source address` resides in the last (least significant) byte of the meta data item.]

[SWS_J1939Nm_00020]

Upstream requirements: SRS_J1939_00034

[If `J1939NmChannelUsesAddressArbitration` is enabled, a call to `J1939Nm_RxIndication` indicating reception of an `AddressClaimed PG` with one of the

source addresses configured via `J1939NmNodePreferredAddress` and a payload that has a higher numerical value than the `NAME` for this source address configured via `J1939NmNodeNameXxx` shall trigger transmission of an `AddressClaimed` PG for the according `NodeChannel`.]

See also [Section 7.4](#).

[SWS_J1939Nm_00021]

Upstream requirements: [SRS_J1939_00034](#), [SRS_J1939_00036](#)

[If `J1939NmChannelUsesAddressArbitration` is enabled, a call to `J1939Nm_RxIndication` indicating reception of an `AddressClaimed` PG with one of the source addresses configured via `J1939NmNodePreferredAddress` and a payload that has a lower numerical value than the `NAME` for this source address configured via `J1939NmNodeNameXxx` shall induce a state change of the according `NodeChannel` to the sub state 'AcLost' of state 'Offline'.]

The state change to 'Offline' will be notified to the `NM Interface` and the `Basic Software Mode Manager` and will trigger transmission of a `CannotClaimAddress` PG (see [Section 7.4](#)).

Sometimes, the application needs to know the content of all `AddressClaimed` messages on the bus, e.g. to build up a table that maps functions to addresses. The `J1939 Network Management` module shall support this use case via a generic call-out function (see [Section 7.5](#)).

[SWS_J1939Nm_00060]

Upstream requirements: [SRS_BSW_00171](#)

[If enabled via `J1939NmUserCallout`, the `J1939Nm` shall forward the source address and the content of each `AddressClaimed` PG to the call-out function `<User_AddressClaimedIndication>` (see [\[SWS_J1939Nm_00028\]](#)).

7.6 Request for AddressClaimed

When the `J1939 Network Management` module receives a request for the `AddressClaimed` PGN from the `J1939 Request Manager`, it will answer either with an `AddressClaimed` or with a `CannotClaimAddress` PG, depending on the current state (see below).

Independent of the request being global or specific, the transmitted PG is always global.

[SWS_J1939Nm_00022]

Upstream requirements: [SRS_J1939_00035](#)

[A call to [J1939Nm_RequestIndication](#) shall trigger transmission of an [Address-Claimed](#) PG when the addressed [NodeChannel](#) is in state 'NormalOperation' or sub state 'Claiming' of state 'Offline'.]

[SWS_J1939Nm_00023]

Upstream requirements: [SRS_J1939_00035](#)

[A call to [J1939Nm_RequestIndication](#) shall trigger transmission of a [Cannot-ClaimAddress](#) PG after a delay calculated according to [\[SWS_J1939Nm_00068\]](#) when the addressed [NodeChannel](#) is in sub state 'AcLost' of state 'Offline'.]

The [J1939Nm_RequestIndication](#) will never be triggered in state 'SleepMode', because then no CAN messages can be received.

7.7 Address Coordination

The [J1939 Network Management](#) module is able to coordinate the addresses of different J1939 channels connected to a gateway, so that routed messages have valid addresses on every bus on which they appear.

There are two basic strategies:

1. Several J1939 channels form one common address space. In this scenario, the [J1939 Network Management](#) module replicates all [AddressClaimed](#) messages appearing on one of the networks on all other networks of the same address space. [Nodes](#) connected via the gateway perform a direct arbitration of addresses.
2. Selected [nodes](#) of one channel appear also on one or more other channels. In this scenario, the [J1939 Network Management](#) module claims the addresses of configured external [nodes](#). Address arbitration is performed between the gateway and the [nodes](#) on one channel.

A single gateway can combine both strategies for different sets of channels. The main difference of the strategies is that addresses are not shared in the second strategy, and therefore more than 254 [nodes](#) can be present within one system.

[SWS_J1939Nm_00071]

Upstream requirements: [SRS_J1939_00051](#)

[If gateway support is enabled via [J1939NmGatewaySupport](#), and the configuration contains a [J1939NmSharedAddressSpace](#), the [J1939Nm](#) shall transmit all [AddressClaimed](#) messages received on one of the channels referenced by

[J1939NmSharedAddressSpace](#) on all other channels referenced by the same [J1939NmSharedAddressSpace](#).]

[SWS_J1939Nm_00072]

Upstream requirements: [SRS_J1939_00051](#)

[If gateway support is enabled via [J1939NmGatewaySupport](#), and the configuration contains a [J1939NmExternalNode](#), the channels referenced by [J1939NmExternalNodeGatewayedChannelRef](#) shall be treated like internal [NodeChannels](#), with the difference that the state transition from ‘SleepMode’ to ‘NetworkMode’ is triggered by the reception of an [AddressClaimed](#) message from the external [node](#) and enters ‘NormalOperation’ immediately, and the transition to ‘Sleep-Mode’ is triggered by the reception of a [CannotClaimAddress](#) message from the same [node](#).]

7.8 Error Classification

The section 7.2 “Error Handling” of the [2, SWS BSW General] describes the error handling of the [Basic Software](#) in detail. Above all, it constitutes a classification scheme consisting of five error types which may occur in [BSW](#) modules.

Based on this foundation, this section specifies particular errors arranged in the respective subsections below.

7.8.1 Development Errors

[SWS_J1939Nm_00024] Definiton of development errors in module J1939Nm [

Type of error	Related error code	Error value
An API was called while the module was uninitialized	J1939NM_E_UNINIT	0x01
The Init API was called twice	J1939NM_E_REINIT	0x02
J1939Nm_Init was called with an invalid configuration pointer	J1939NM_E_INIT_FAILED	0x03
An API service was called with a NULL pointer	J1939NM_E_PARAM_POINTER	0x10
An API service was called with a wrong ID	J1939NM_E_INVALID_PDU_SDU_ID	0x11
An API service was called with wrong network handle	J1939NM_E_INVALID_NETWORK_ID	0x12
An API was called with an unsupported PGN	J1939NM_E_INVALID_PGN	0x13
An API was called with an illegal priority	J1939NM_E_INVALID_PRIO	0x14
An API was called with an illegal node address	J1939NM_E_INVALID_ADDRESS	0x15
An API was called with an illegal node ID	J1939NM_E_INVALID_NODE	0x16

]

7.8.2 Runtime Errors

Runtime errors have not yet been classified.

7.8.3 Production Errors

There are no production errors.

7.8.4 Extended Production Errors

Extended production errors are handled as events of the [Diagnostic Event Manager](#). The event IDs are defined in the following tables, while the actual values are assigned externally by the configuration of the [Diagnostic Event Manager](#), and are included in the [J1939 Network Management module via Dem.h](#).

[SWS_J1939Nm_00012]

Upstream requirements: [SRS_J1939_00032](#), [SRS_BSW_00385](#), [SRS_BSW_00466](#), [SRS_BSW_00469](#), [SRS_BSW_00470](#), [SRS_BSW_00471](#), [SRS_BSW_00472](#)

[

Error Name:	J1939NM_E_ADDRESS_LOST	
Short Description:	The desired address could not be claimed.	
Long Description:	During start-up of the ECU, all J1939Nm nodes need to send an address claim to the bus and wait for acceptance of the claimed address. If another ECU claims the same address and has a higher priority, the ECU loses its address and stops communication. This is a critical problem, because J1939Nm was not specified for networks where this can happen.	
Detection Criteria:	Fail	When address claiming failed, because an <code>AddressClaimed</code> message with higher priority was received (see [SWS_J1939Nm_00021]), the J1939 Network Management module shall report the extended production error J1939NM_E_ADDRESS_LOST with event status <code>DEM_EVENT_STATUS_PREFAILED</code> to DEM .
	Pass	When address claiming succeeded, because the J1939 Network Management entered the state 'NormalOperation' (see [SWS_J1939Nm_00011] and [SWS_J1939Nm_00013]), the J1939 Network Management module shall report the extended production error J1939NM_E_ADDRESS_LOST with event status <code>DEM_EVENT_STATUS_PREPASSED</code> to DEM .
Secondary Parameters:	Address claiming is started when a <code>node</code> enters <code>NetworkMode</code> for a channel.	

▽



Time Required:	Typically 250ms after changing to NetworkMode, but possible during entire run time when addresses can change at run time or ECUs are attached later (or wake up later).
Monitor Frequency	The bus is continuously monitored for AddressClaimed messages.

]

8 API Specification

8.1 API Parameter Checking

The [J1939 Network Management](#) module performs parameter checks for all called APIs. It reports the development error [J1939NM_E_INVALID_PDU_SDU_ID](#) when a check of a PDU/SDU ID fails, [J1939NM_E_INVALID_NETWORK_ID](#) when a check of a network handle fails, and [J1939NM_E_PARAM_POINTER](#) when a call provides a NULL pointer.

[SWS_J1939Nm_00025]

Upstream requirements: [SRS_BSW_00386](#)

[If development error detection is enabled via [J1939NmDevErrorDetect](#), the [J1939 Network Management](#) module shall check PduIdType parameters (SDU/PDU IDs) of its API functions against the configured IDs, and shall report the development error [J1939NM_E_INVALID_PDU_SDU_ID](#) when an unknown ID is provided by the call.]

[SWS_J1939Nm_00026]

Upstream requirements: [SRS_BSW_00386](#)

[If development error detection is enabled via [J1939NmDevErrorDetect](#), the [J1939 Network Management](#) module shall check NetworkHandleType parameters (network handles) of its API functions against the referenced network handles of [ComM](#), and shall report the development error [J1939NM_E_INVALID_NETWORK_ID](#) when an unknown handle is provided by the call.]

[J1939NM_E_PARAM_POINTER](#) shall be reported as specified in [2, SWS BSW General] by [SWS_BSW_00212].

8.2 Imported Types

In this section, all types used by the [J1939 Network Management](#) module are listed together with the defining module:

[SWS_J1939Nm_00029] Definition of imported datatypes of module J1939Nm [

Module	Header File	Imported Type
Comtype	ComStack_Types.h	NetworkHandleType
	ComStack_Types.h	PduIdType
	ComStack_Types.h	PduInfoType
	ComStack_Types.h	PduLengthType



△

<i>Module</i>	<i>Header File</i>	<i>Imported Type</i>
Dem	Rte_Dem_Type.h	Dem_EventIdType
	Rte_Dem_Type.h	Dem_EventStatusType
J1939Rm	Rte_J1939Rm_Type.h	J1939Rm_ExtIdInfoType
	Rte_J1939Rm_Type.h	J1939Rm_ExtIdType
Nm	NmStack_types.h	Nm_ModeType
	NmStack_types.h	Nm_StateType
Std	Std_Types.h	Std_ReturnType
	Std_Types.h	Std_VersionInfoType

┌

The types that are declared in `ComStack_Types.h` are defined in [17, SWS Communication Stack Types], while the types declared in `Std_Types.h` are defined in [18, SWS Standard Types].

8.3 Type Definitions

8.3.1 J1939Nm_ConfigType

[SWS_J1939Nm_00030] Definition of datatype J1939Nm_ConfigType [

Name	J1939Nm_ConfigType	
Kind	Structure	
Elements	implementation specific	
	Type	–
	Comment	–
Description	<p>This is the base type for the configuration of the J1939 Network Management module.</p> <p>A pointer to an instance of this structure will be used in the initialization of the J1939 Network Management module.</p> <p>The content of this structure is defined in chapter 10 Configuration specification.</p>	
Available via	J1939Nm.h	

┌

8.4 Function Definitions

This is a list of functions provided for upper layer modules.

8.4.1 J1939Nm_Init

[SWS_J1939Nm_00031] Definition of API function J1939Nm_Init

Upstream requirements: [SRS_J1939_00030](#)

[

Service Name	J1939Nm_Init	
Syntax	<pre>void J1939Nm_Init (const J1939Nm_ConfigType* configPtr)</pre>	
Service ID [hex]	0x01	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	configPtr	Pointer to selected configuration structure
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	This function initializes the J1939 Network Management module.	
Available via	J1939Nm.h	

]

See [Section 7.2.1](#) for details.

See [Section 8.1](#) for parameter checks.

[J1939NM_E_INIT_FAILED](#) shall be reported as specified in [2, SWS BSW General] by [SWS_BSW_00050].

8.4.2 J1939Nm_DeInit

[SWS_J1939Nm_00032] Definition of API function J1939Nm_DeInit

Upstream requirements: [SRS_J1939_00031](#)

[

Service Name	J1939Nm_DeInit	
Syntax	<pre>void J1939Nm_DeInit (void)</pre>	
Service ID [hex]	0x02	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	None	
Parameters (inout)	None	

▽



Parameters (out)	None
Return value	None
Description	This function resets the J1939 Network Management module to the uninitialized state.
Available via	J1939Nm.h

]

See [Section 7.2.1](#) for details.

8.4.3 J1939Nm_GetVersionInfo

[SWS_J1939Nm_00033] Definition of API function J1939Nm_GetVersionInfo

Upstream requirements: [SRS_BSW_00407](#)

[

Service Name	J1939Nm_GetVersionInfo	
Syntax	void J1939Nm_GetVersionInfo (Std_VersionInfoType* versionInfo)	
Service ID [hex]	0x03	
Sync/Async	Synchronous	
Reentrancy	Non Reentrant	
Parameters (in)	None	
Parameters (inout)	None	
Parameters (out)	versionInfo	Pointer to where to store the version information of this module.
Return value	None	
Description	Returns the version information of this module.	
Available via	J1939Nm.h	

]

See subsection 8.3.4 “Get Version Information” of [2, SWS BSW General] for details. The module ID of the [J1939 Network Management](#) is also defined in [2, SWS BSW General].

See [Section 8.1](#) for parameter checks.

8.4.4 J1939Nm_NetworkRequest

[SWS_J1939Nm_00044] Definition of API function J1939Nm_NetworkRequest

Upstream requirements: [SRS_J1939_00036](#)

[

Service Name	J1939Nm_NetworkRequest	
Syntax	Std_ReturnType J1939Nm_NetworkRequest (NetworkHandleType nmChannelHandle)	
Service ID [hex]	0x05	
Sync/Async	Synchronous	
Reentrancy	Reentrant (but not for the same NM-Channel)	
Parameters (in)	nmChannelHandle	Identification of the NM-channel
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: No error E_NOT_OK: Requesting of network has failed
Description	Request the network, since ECU needs to communicate on the bus.	
Available via	J1939Nm.h	

]

See [Section 7.3.1](#) for details.

See [Section 7.2.1](#) for error handling and [Section 8.1](#) for parameter checks.

8.4.5 J1939Nm_NetworkRelease

[SWS_J1939Nm_00045] Definition of API function J1939Nm_NetworkRelease

Upstream requirements: [SRS_J1939_00036](#)

[

Service Name	J1939Nm_NetworkRelease	
Syntax	Std_ReturnType J1939Nm_NetworkRelease (NetworkHandleType nmChannelHandle)	
Service ID [hex]	0x06	
Sync/Async	Asynchronous	
Reentrancy	Reentrant (but not for the same NM-Channel)	
Parameters (in)	nmChannelHandle	Identification of the NM-channel
Parameters (inout)	None	
Parameters (out)	None	

▽



Return value	Std_ReturnType	E_OK: No error E_NOT_OK: Releasing of network has failed
Description	Release the network, since ECU doesn't have to communicate on the bus.	
Available via	J1939Nm.h	

└

See [Section 7.3.3](#) for details.

See [Section 7.2.1](#) for error handling and [Section 8.1](#) for parameter checks.

8.4.6 J1939Nm_GetState

[SWS_J1939Nm_00052] Definition of API function J1939Nm_GetState [

Service Name	J1939Nm_GetState	
Syntax	Std_ReturnType J1939Nm_GetState (NetworkHandleType NetworkHandle, Nm_StateType* nmStatePtr, Nm_ModeType* nmModePtr)	
Service ID [hex]	0x0d	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	NetworkHandle	Identification of the NM-channel
Parameters (inout)	None	
Parameters (out)	nmStatePtr	Pointer where state of the network management shall be copied to.
	nmModePtr	Pointer where the mode of the network management shall be copied to.
Return value	Std_ReturnType	E_OK: No error E_NOT_OK: Getting of NM state has failed
Description	Returns the state and the mode of the network management.	
Available via	J1939Nm.h	

└

See [Section 7.2.1](#) for error handling and [Section 8.1](#) for parameter checks.

8.4.7 J1939Nm_GetBusOffDelay

[SWS_J1939Nm_00070] Definition of API function J1939Nm_GetBusOffDelay [

Service Name	J1939Nm_GetBusOffDelay	
Syntax	<pre>void J1939Nm_GetBusOffDelay (NetworkHandleType network, uint8* delayCyclesPtr)</pre>	
Service ID [hex]	0x10	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different networks	
Parameters (in)	network	CAN network where a BusOff occurred.
Parameters (inout)	None	
Parameters (out)	delayCyclesPtr	Number of CanSM base cycles to wait additionally to L1/L2 after a BusOff occurred.
Return value	None	
Description	This callout function returns the number of CanSM base cycles to wait additionally to L1/L2 after a BusOff occurred.	
Available via	J1939Nm.h	

]

See [Section 7.2.1](#) for error handling and [Section 8.1](#) for parameter checks.

8.4.8 J1939Nm_PassiveStartUp

[SWS_J1939Nm_00054] Definition of API function J1939Nm_PassiveStartUp [

Service Name	J1939Nm_PassiveStartUp	
Syntax	<pre>Std_ReturnType J1939Nm_PassiveStartUp (NetworkHandleType nmChannelHandle)</pre>	
Service ID [hex]	0x0f	
Sync/Async	Synchronous	
Reentrancy	Reentrant (but not for the same NM-Channel)	
Parameters (in)	nmChannelHandle	Identification of the NM-channel
Parameters (inout)	None	
Parameters (out)	None	
Return value	Std_ReturnType	E_OK: No error E_NOT_OK: Passive startup of network management has failed
Description	Passive startup of the NM. It triggers the transition from Bus-Sleep Mode to the Network Mode without requesting the network.	
Available via	J1939Nm.h	

]

This API is just a dummy to satisfy [NM Interface](#) linkage. It shall always return `E_NOT_OK`.

See [Section 7.2.1](#) for error handling and [Section 8.1](#) for parameter checks.

8.5 Callback Notifications

This is a list of functions provided for other modules.

8.5.1 J1939Nm_RxIndication

[SWS_J1939Nm_00036] Definition of callback function J1939Nm_RxIndication [

Service Name	J1939Nm_RxIndication	
Syntax	<pre>void J1939Nm_RxIndication (PduIdType RxPduId, const PduInfoType* PduInfoPtr)</pre>	
Service ID [hex]	0x42	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different PduIds. Non reentrant for the same PduId.	
Parameters (in)	RxPduId	ID of the received PDU.
	PduInfoPtr	Contains the length (SduLength) of the received PDU, a pointer to a buffer (SduDataPtr) containing the PDU, and the MetaData related to this PDU.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Indication of a received PDU from a lower layer communication interface module.	
Available via	J1939Nm.h	

]

See [Section 7.5](#) for details.

See [Section 7.2.1](#) for error handling and [Section 8.1](#) for parameter checks.

8.5.2 J1939Nm_TxConfirmation

[SWS_J1939Nm_00037] Definition of callback function J1939Nm_TxConfirmation

Service Name	J1939Nm_TxConfirmation	
Syntax	<pre>void J1939Nm_TxConfirmation (PduIdType TxPduId, Std_ReturnType result)</pre>	
Service ID [hex]	0x40	
Sync/Async	Synchronous	
Reentrancy	Reentrant for different Pdulds. Non reentrant for the same PduId.	
Parameters (in)	TxPduId	ID of the PDU that has been transmitted.
	result	E_OK: The PDU was transmitted. E_NOT_OK: Transmission of the PDU failed.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	The lower layer communication interface module confirms the transmission of a PDU, or the failure to transmit a PDU.	
Available via	J1939Nm.h	

]

See [Section 7.4](#) for details.

See [Section 7.2.1](#) for error handling and [Section 8.1](#) for parameter checks.

8.5.3 J1939Nm_RequestIndication

[SWS_J1939Nm_00043] Definition of callback function J1939Nm_RequestIndication

Upstream requirements: [SRS_J1939_00035](#)

[

Service Name	J1939Nm_RequestIndication	
Syntax	<pre>void J1939Nm_RequestIndication (uint8 node, NetworkHandleType channel, uint32 requestedPgn, const J1939Rm_ExtIdInfoType* extIdInfo, uint8 sourceAddress, uint8 destAddress, uint8 priority)</pre>	
Service ID [hex]	0x47	

▽



Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	node	Node by which the request was received.
	channel	Channel on which the request was received.
	requestedPgn	PGN of the requested PG.
	extIdInfo	Extended identifier bytes.
	sourceAddress	Address of the node that sent the Request PG.
	destAddress	Address of this node or 0xFF for broadcast.
	priority	Priority of the Request PG.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Indicates reception of a Request or Request2 PG.	
Available via	J1939Nm.h	

]

See [Section 7.6](#) for details.

[SWS_J1939Nm_00067]

Upstream requirements: [SRS_BSW_00386](#)

[The [J1939 Network Management](#) module shall ignore the call to [J1939Nm_RequestIndication](#) when the [sourceAddress](#) or the [priority](#) are not in the valid range, or when [node](#) is not one of the configured [node IDs](#) (see [J1939NmNodeId](#)), or when [requestedPgn](#) is not the [PGN](#) of [AC](#), or when [destAddress](#) is not 0xFF or the address of the reported [node](#). If development error detection is enabled via [J1939NmDevErrorDetect](#), the [J1939 Network Management](#) module shall report the corresponding development error: [J1939NM_E_INVALID_NODE](#) for [node](#), [J1939NM_E_INVALID_PGN](#) for [requestedPgn](#), [J1939NM_E_INVALID_ADDRESS](#) for [sourceAddress](#) or [destAddress](#), and [J1939NM_E_INVALID_PRIO](#) for [priority](#).]

See [Section 7.2.1](#) for further error handling and [Section 8.1](#) for further parameter checks.

8.6 Scheduled Functions

This function is directly called by the [Basic Software Scheduler](#) ([SchM](#), see [[19](#), [SWS RTE](#)]).

8.6.1 J1939Nm_MainFunction

[SWS_J1939Nm_00038] Definition of scheduled function J1939Nm_MainFunction [

Service Name	J1939Nm_MainFunction
Syntax	void J1939Nm_MainFunction (void)
Service ID [hex]	0x04
Description	Main function of the J1939 Network Management module. Used for scheduling purposes and timeout supervision.
Available via	SchM_J1939Nm.h

]

[SWS_J1939Nm_00039]

Upstream requirements: [SRS_BSW_00478](#)

[The frequency of invocations of [J1939Nm_MainFunction](#) is determined by the configuration parameter [J1939NmMainFunctionPeriod](#).]

8.7 Expected Interfaces

In this section all interfaces required from other modules are listed.

8.7.1 Mandatory Interfaces

This subsection defines all interfaces that are required to fulfill the core functionality of the module.

[SWS_J1939Nm_00040] Definition of mandatory interfaces required by module J1939Nm [

API Function	Header File	Description
BswM_J1939Nm_StateChange Notification	BswM_J1939Nm.h	Notification of current J1939Nm state after state changes.
Dem_SetEventStatus	Dem.h	Called by SW-Cs or BSW modules to report monitor status information to the Dem. BSW modules calling Dem_SetEventStatus can safely ignore the return value. This API will be available only if ((Dem/Dem ConfigSet/DemEventParameter/DemEvent ReportingType) == STANDARD_REPORTING)
LSduR_J1939NmTransmit (draft)	LSduR_J1939Nm.h	Requests transmission of a PDU.





<i>API Function</i>	<i>Header File</i>	<i>Description</i>
Nm_BusSleepMode	Nm.h	Notification that the network management has entered Bus-Sleep Mode.
Nm_NetworkMode	Nm.h	Notification that the network management has entered Network Mode.
Nm_StateChangeNotification	Nm.h	Notification that the state of the lower layer <Bus>Nm has changed.

]

8.7.2 Optional Interfaces

This subsection defines all interfaces that are required to fulfill an optional functionality of the module.

[SWS_J1939Nm_00041] Definition of optional interfaces requested by module J1939Nm [

<i>API Function</i>	<i>Header File</i>	<i>Description</i>
Det_ReportError	Det.h	Service to report development errors.

]

8.7.3 Configurable Interfaces

In this subsection, all interfaces are listed where the target function could be configured. The target function is usually a call-back function. The name of this kind of interfaces is not fixed because they are configurable.

8.7.3.1 <User_AddressClaimedIndication>

[SWS_J1939Nm_00028] Definition of configurable interface < User_Address ClaimedIndication > [

<i>Service Name</i>	< User_AddressClaimedIndication >
<i>Syntax</i>	<pre>void < User_AddressClaimedIndication > (NetworkHandleType channel, uint8 sourceAddress, const uint8* name)</pre>



△

Service ID [hex]	0x20	
Sync/Async	Synchronous	
Reentrancy	Reentrant	
Parameters (in)	channel	Channel on which the AC was received.
	sourceAddress	Address of the node that sent the AC or NULL address (0xFE).
	name	Pointer to the byte array containing the 64bit NAME.
Parameters (inout)	None	
Parameters (out)	None	
Return value	None	
Description	Provides the content of received AddressClaimed (AC) PGs.	
Available via	J1939Nm_Externals.h	

]

[SWS_J1939Nm_00059]

Upstream requirements: [SRS_BSW_00171](#)

[The [<User_AddressClaimedIndication>](#) function shall only be available if [J1939NmUserCallout](#) is configured.]

See [Section 7.5](#) for details.

9 Sequence Diagrams

The following sequence diagrams shall give an impression of the way the [J1939 Network Management](#) module shall behave and interoperate with other [BSW](#) modules. They are not complete and not binding for the implementation.

9.1 Transmission of AddressClaimed

The following diagram shows the interaction with [CanIf](#) when an [AddressClaimed](#) is transmitted.

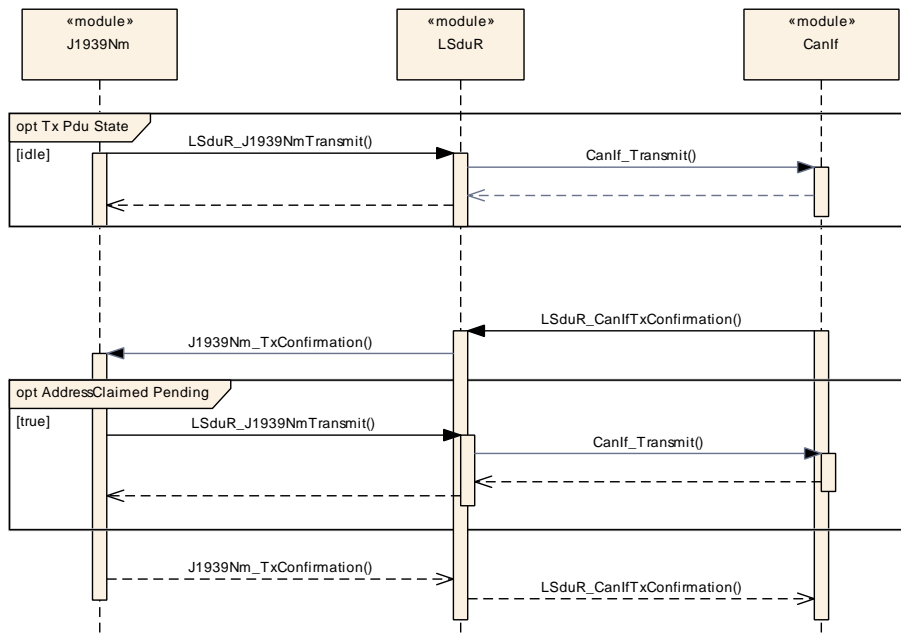


Figure 9.1: Transmission of AddressClaimed PG (“J1939Nm AC Transmission”)

9.2 Reception of AddressClaimed

The following diagram shows the interaction with [CanIf](#) when an [AddressClaimed](#) is received.

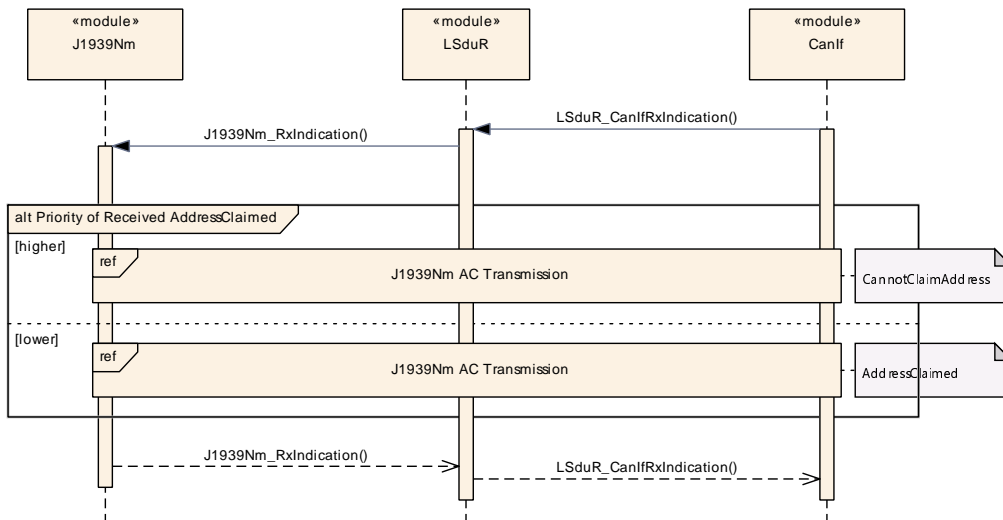


Figure 9.2: Reception of AddressClaimed PG

9.3 Request for AddressClaimed

The following diagram shows the interaction with [J1939Rm](#) and [CanIf](#) when a request for [AddressClaimed](#) is handled.

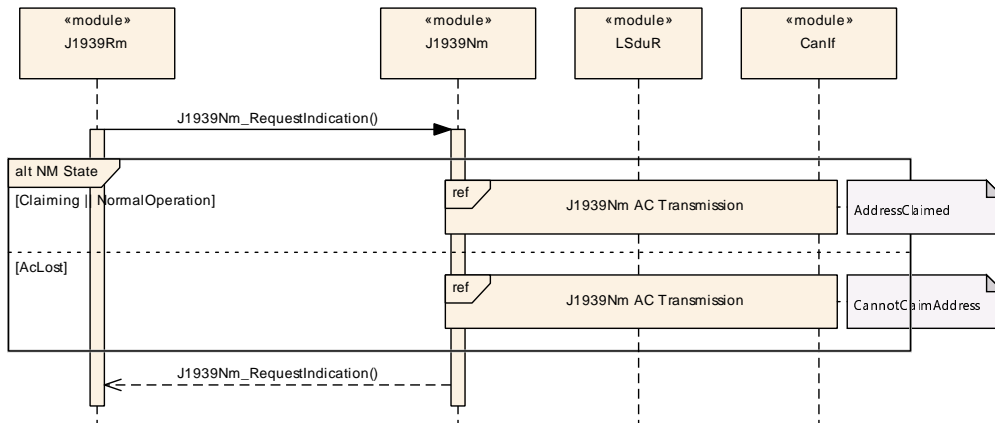


Figure 9.3: Request for the AddressClaimed PG

10 Configuration Specification

In general, this chapter defines configuration parameters and their clustering into containers. For general information about the definition of containers and parameters, refer to the section 10.1 “Introduction to configuration specification” in [2, SWS BSW General]. For details about published information of the [J1939 Network Management](#) module, refer to the section 10.3 “Published Information” in [2, SWS BSW General].

Section [10.1](#) specifies the structure (containers) and the parameters of the [J1939 Network Management](#) module.

Section [10.2](#) gives hints on how to configure the [NM Interface](#) to support [J1939Nm](#).

10.1 Containers and Configuration Parameters

The following subsections summarize all configuration parameters of the [J1939 Network Management](#). The detailed meaning of the parameters is described in chapters 7 and 8.

Some of these containers and parameters are derived from classes and attributes of the [20, TPS System Template], which also contains the rules for these derivations.

The following pictures show an overview of the configuration parameters available for [J1939Nm](#):

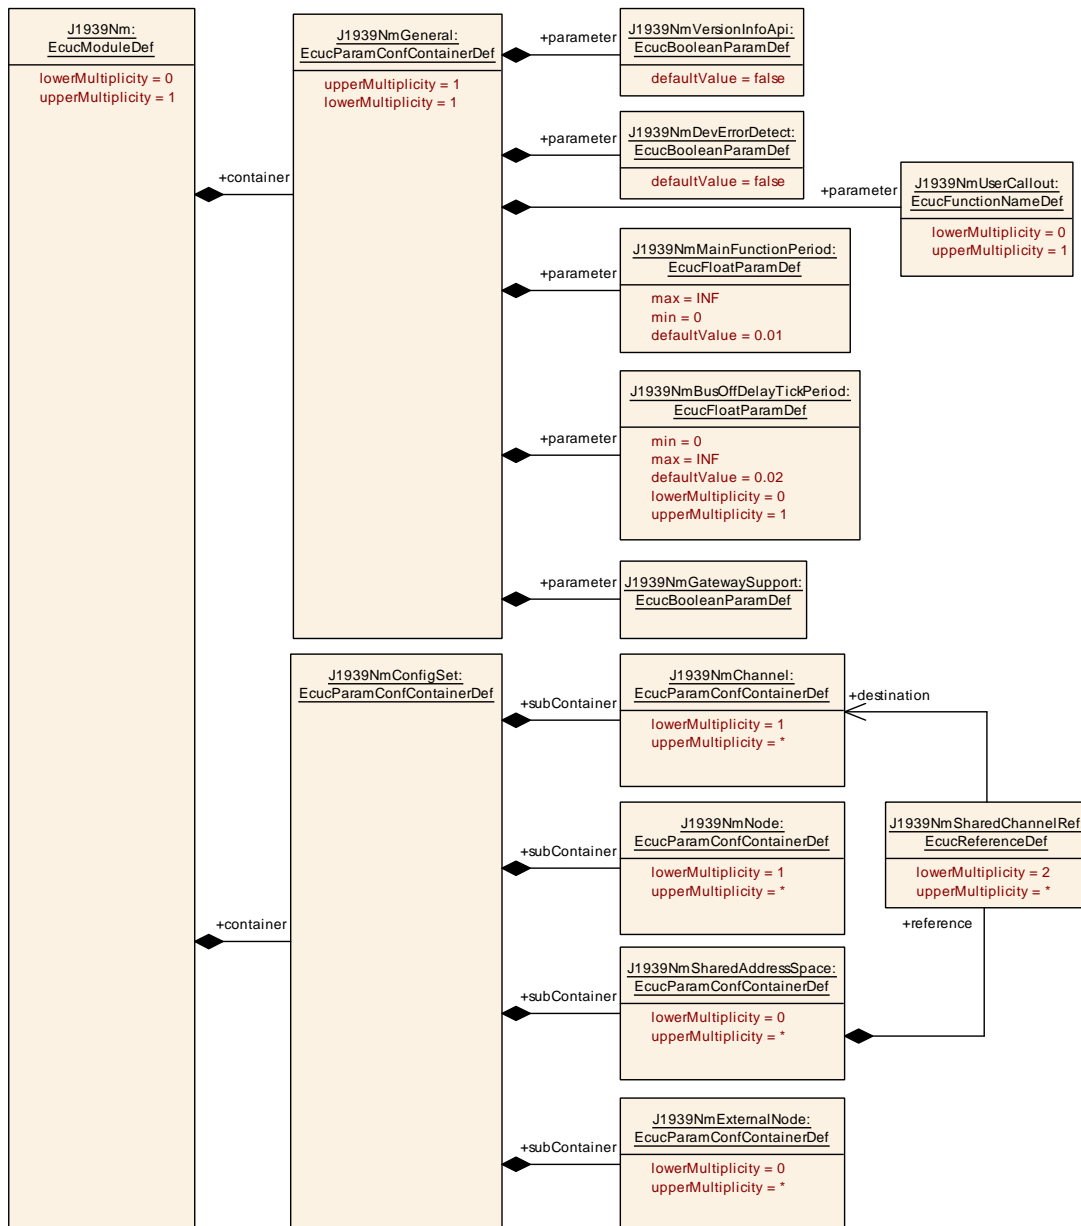


Figure 10.1: Configuration container J1939Nm

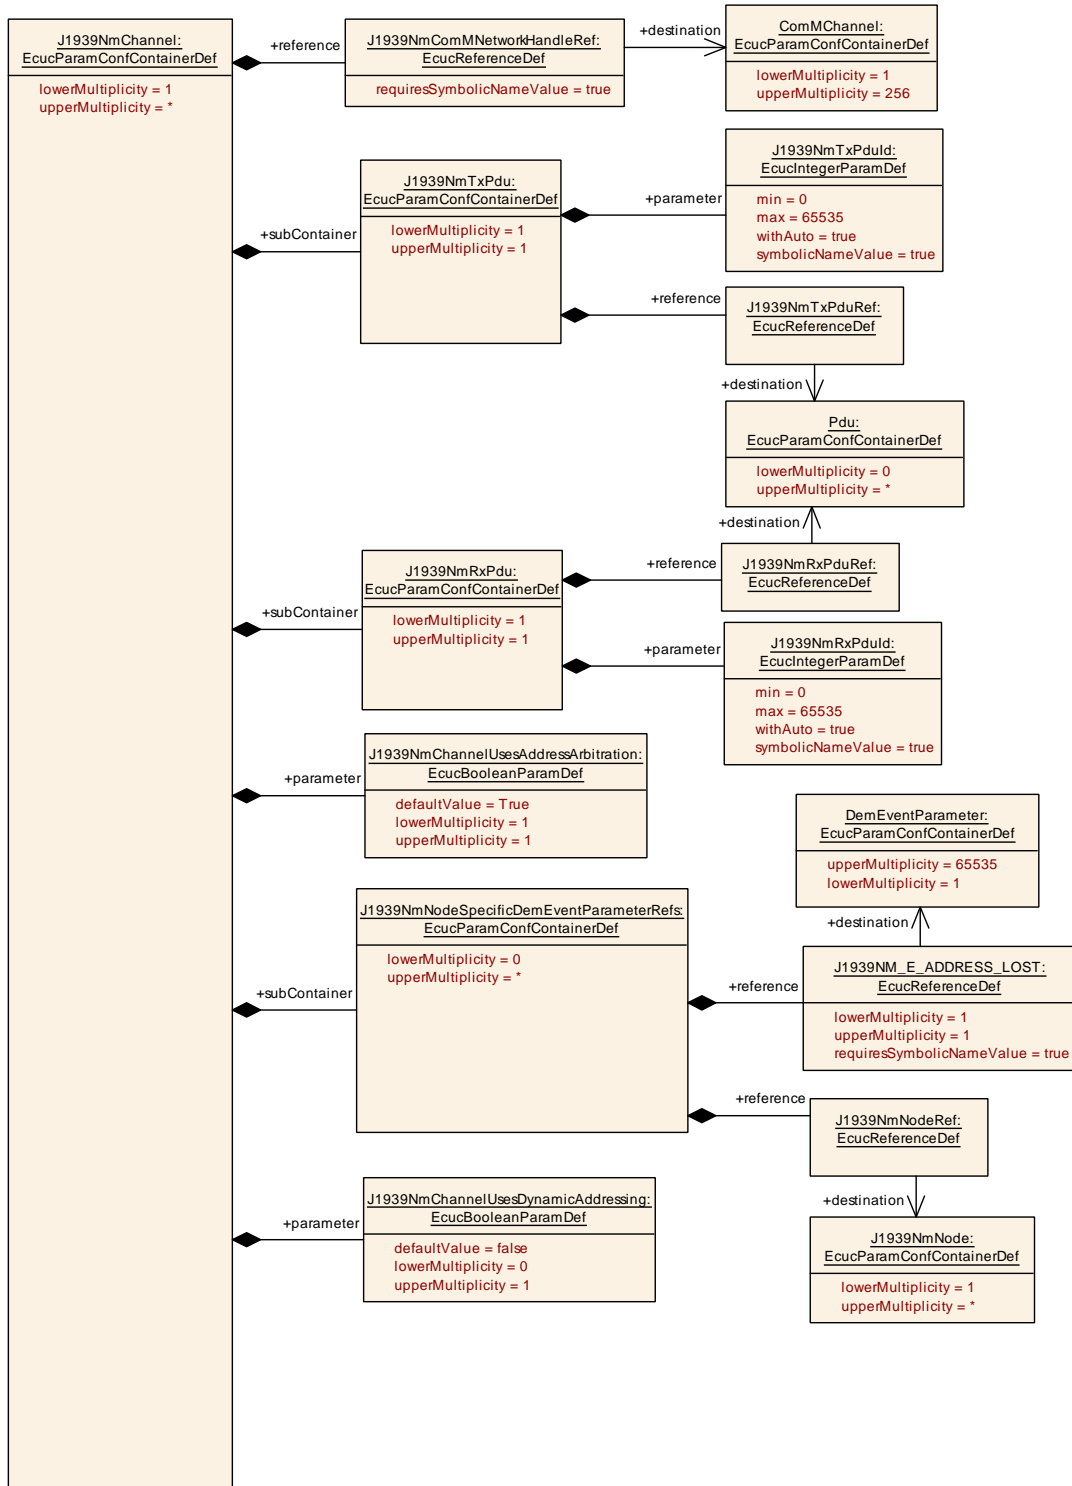


Figure 10.2: Configuration container J1939NmChannel

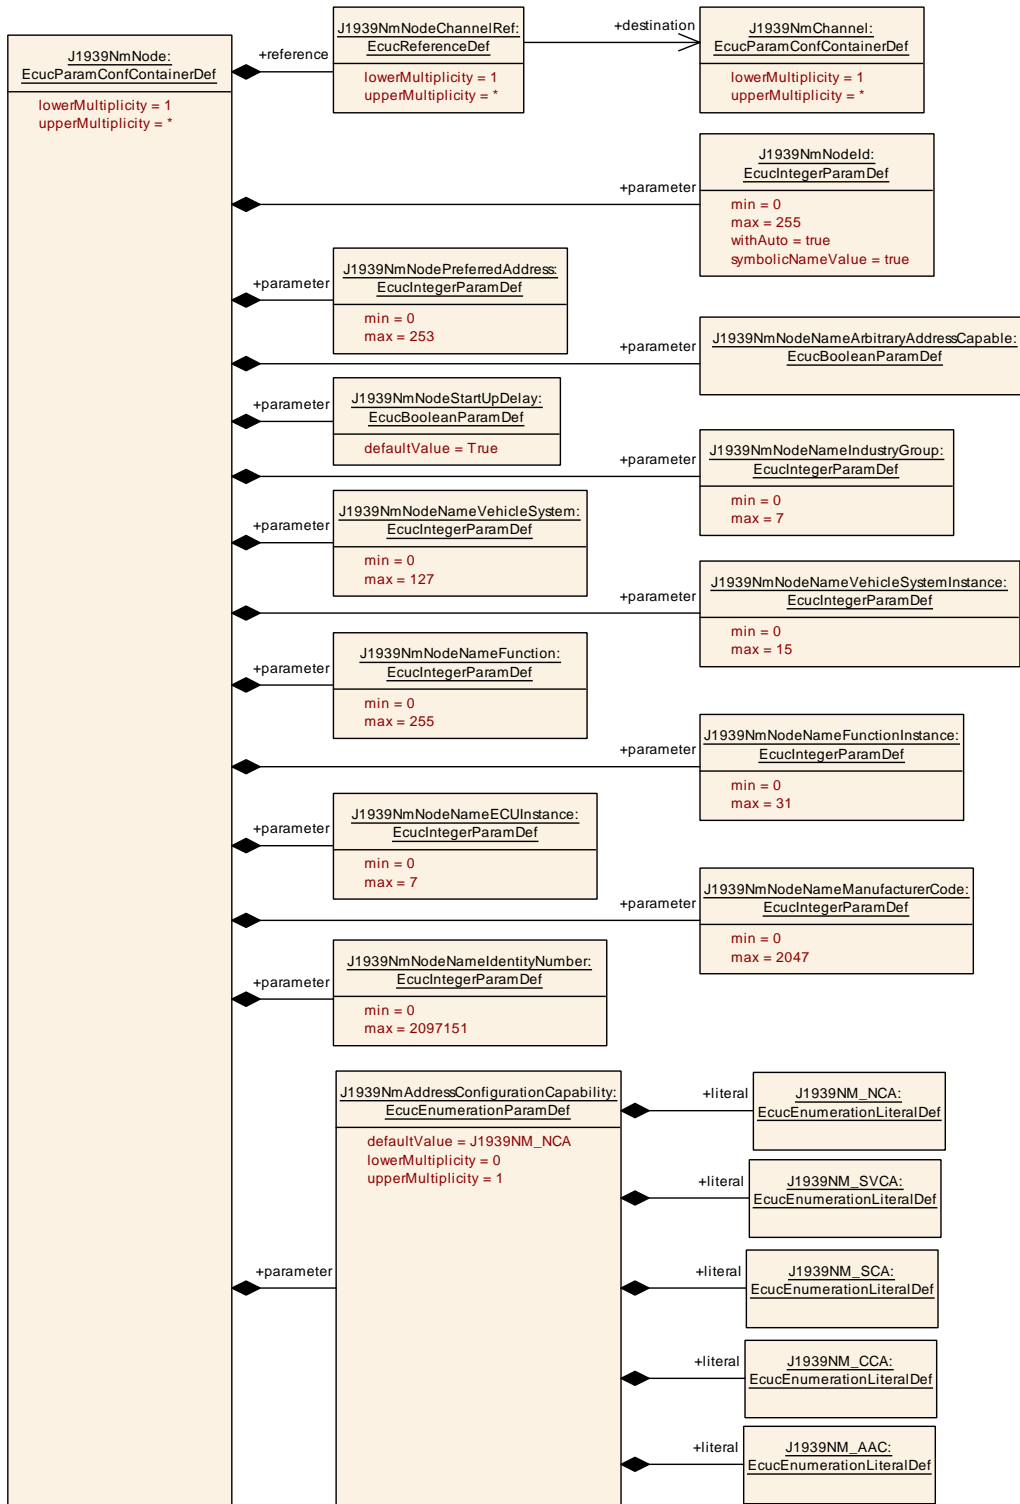


Figure 10.3: Configuration container J1939NmNode

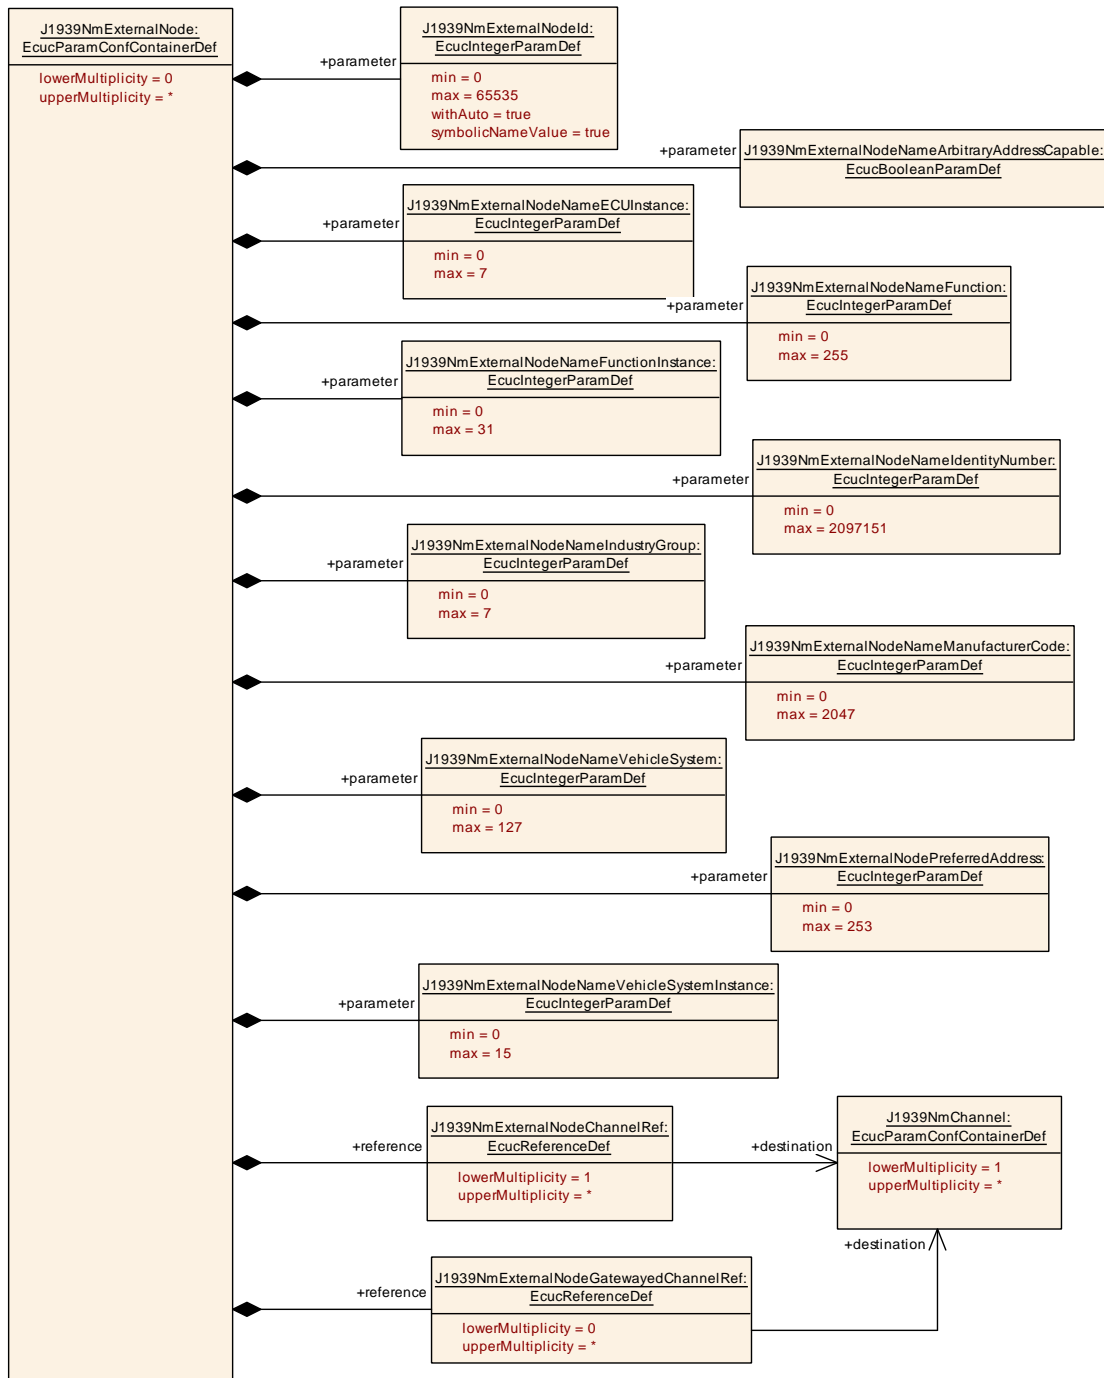


Figure 10.4: Configuration container J1939NmExternalNode

10.1.1 J1939Nm

[ECUC_J1939Nm_00028] Definition of EcucModuleDef J1939Nm [

Module Name	J1939Nm
Description	Configuration of the J1939 Network Management module.
Post-Build Variant Support	true
Supported Config Variants	VARIANT-LINK-TIME, VARIANT-POST-BUILD, VARIANT-PRE-COMPILE

Included Containers		
Container Name	Multiplicity	Scope / Dependency
J1939NmConfigSet	1	This container contains the configuration parameters and sub containers of the AUTOSAR J1939Nm module.
J1939NmGeneral	1	Contains the general configuration parameters of the module.

]

10.1.2 J1939NmGeneral

[ECUC_J1939Nm_00001] Definition of EcucParamConfContainerDef J1939Nm General [

Container Name	J1939NmGeneral
Parent Container	J1939Nm
Description	Contains the general configuration parameters of the module.
Configuration Parameters	

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
J1939NmBusOffDelayTickPeriod	0..1	[ECUC_J1939Nm_00034]
J1939NmDevErrorDetect	1	[ECUC_J1939Nm_00003]
J1939NmGatewaySupport	1	[ECUC_J1939Nm_00036]
J1939NmMainFunctionPeriod	1	[ECUC_J1939Nm_00004]
J1939NmUserCallout	0..1	[ECUC_J1939Nm_00032]
J1939NmVersionInfoApi	1	[ECUC_J1939Nm_00002]

No Included Containers

]

[ECUC_J1939Nm_00034] Definition of EcucFloatParamDef J1939NmBusOffDelay TickPeriod [

Parameter Name	J1939NmBusOffDelayTickPeriod		
Parent Container	J1939NmGeneral		
Description	Duration of ticks that are used to time BusOff delays after conflicting address claims. This parameter must be synchronized with the main function period of the CAN State Manager.		
Multiplicity	0..1		
Type	EcucFloatParamDef		
Range]0 .. INF[
Default value	0.02		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00003] Definition of EcucBooleanParamDef J1939NmDevError Detect [

Parameter Name	J1939NmDevErrorDetect		
Parent Container	J1939NmGeneral		
Description	Switches the development error detection and notification on or off. <ul style="list-style-type: none"> • true: detection and notification is enabled. • false: detection and notification is disabled. 		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00036] Definition of EcucBooleanParamDef J1939NmGatewaySupport [

Parameter Name	J1939NmGatewaySupport		
Parent Container	J1939NmGeneral		
Description	Enables/disables support for claiming the addresses of routed messages.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00004] Definition of EcucFloatParamDef J1939NmMainFunctionPeriod [

Parameter Name	J1939NmMainFunctionPeriod		
Parent Container	J1939NmGeneral		
Description	Call cycle in seconds of J1939Nm_MainFunction.		
Multiplicity	1		
Type	EcucFloatParamDef		
Range]0 .. INF[
Default value	0.01		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	-	
Scope / Dependency	scope: ECU		

]

[ECUC_J1939Nm_00032] Definition of EcucFunctionNameDef J1939NmUserCallout [

Parameter Name	J1939NmUserCallout		
Parent Container	J1939NmGeneral		
Description	Pre-processor switch for enabling the <User_AddressClaimedIndication> and defining the name of the callout function.		
Multiplicity	0..1		
Type	EcucFunctionNameDef		
Default value	-		
Regular Expression	-		
Post-Build Variant Multiplicity	false		





Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00002] Definition of EcucBooleanParamDef J1939NmVersionInfoApi [

Parameter Name	J1939NmVersionInfoApi		
Parent Container	J1939NmGeneral		
Description	Pre-processor switch for enabling version info API support.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

10.1.3 J1939NmConfigSet

[ECUC_J1939Nm_00027] Definition of EcucParamConfContainerDef J1939NmConfigSet [

Container Name	J1939NmConfigSet
Parent Container	J1939Nm
Description	This container contains the configuration parameters and sub containers of the AUTOSAR J1939Nm module.
Configuration Parameters	
No Included Parameters	

Included Containers		
Container Name	Multiplicity	Scope / Dependency
J1939NmChannel	1..*	Physical CAN channel handled by J1939Nm.
J1939NmExternalNode	0..*	Logical node implemented in another ECU. Configures potential communication partners. If this container is connected to more than one channel, the external ECU is linked to the local ECU by each of these channels.
J1939NmNode	1..*	Logical node representing one function handled by J1939Nm.
J1939NmSharedAddressSpace	0..*	Set of J1939NmChannels that share a common address space. Address claims will be routed between these channels.

]

10.1.4 J1939NmSharedAddressSpace

[ECUC_J1939Nm_00037] Definition of EcucParamConfContainerDef J1939NmSharedAddressSpace [

Container Name	J1939NmSharedAddressSpace		
Parent Container	J1939NmConfigSet		
Description	Set of J1939NmChannels that share a common address space. Address claims will be routed between these channels.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
J1939NmSharedChannelRef	2..*	[ECUC_J1939Nm_00038]

No Included Containers

]

[ECUC_J1939Nm_00038] Definition of EcucReferenceDef J1939NmSharedChannelRef [

Parameter Name	J1939NmSharedChannelRef
Parent Container	J1939NmSharedAddressSpace
Description	Reference to a channel that belongs to the shared address space.
Multiplicity	2..*
Type	Reference to J1939NmChannel
Post-Build Variant Multiplicity	true



△

Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

10.1.5 J1939NmChannel

[ECUC_J1939Nm_00005] Definition of EcucParamConfContainerDef J1939NmChannel [

Container Name	J1939NmChannel		
Parent Container	J1939NmConfigSet		
Description	Physical CAN channel handled by J1939Nm.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
J1939NmChannelUsesAddressArbitration	1	[ECUC_J1939Nm_00035]
J1939NmChannelUsesDynamicAddressing	0..1	[ECUC_J1939Nm_00054]
J1939NmComMNetworkHandleRef	1	[ECUC_J1939Nm_00008]

Included Containers		
Container Name	Multiplicity	Scope / Dependency
J1939NmNodeSpecificDemEventParameterRefs	0..*	Container for the references to DemEventParameter elements related to one J1939NmNode which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.
J1939NmRxPdu	1	Contains the configuration of the PDU used to receive the AddressClaimed PG. This PDU consumes a meta data item of type CAN_ID_32.
J1939NmTxPdu	1	Contains the configuration of the PDU used to transmit the AddressClaimed PG. This PDU produces a meta data item of type CAN_ID_32.

]

[ECUC_J1939Nm_00035] Definition of EcucBooleanParamDef J1939NmChannelUsesAddressArbitration [

Parameter Name	J1939NmChannelUsesAddressArbitration		
Parent Container	J1939NmChannel		
Description	<p>Defines whether the nodes attached to this channel use an initial address claim, and whether they react to contending address claims of other nodes.</p> <p>True: The initial address claim is sent, and the node reacts to address claims of other nodes. False: The node only sends an address claim upon request, and does not react to other address claims.</p>		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	true		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00054] Definition of EcucBooleanParamDef J1939NmChannelUsesDynamicAddressing [

Parameter Name	J1939NmChannelUsesDynamicAddressing		
Parent Container	J1939NmChannel		
Description	<p>Defines whether fully dynamic address resolution according to SAE J1939-81 shall be supported on this channel.</p> <ul style="list-style-type: none"> • True: The dynamically allocated addresses on the bus are matched at runtime to the configured addresses (see J1939NmNode.J1939NmNodePreferredAddress and J1939NmExternalNode.J1939NmExternalNodePreferredAddress). J1939NmNodes with J1939NmAddressConfigurationCapability set to J1939NM_AAC will change their addresses dynamically in case of an address conflict. • False: The addresses on the bus resemble the configured addresses. J1939NmAddressConfigurationCapability shall not be set to J1939NM_AAC. 		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00008] Definition of EcucReferenceDef J1939NmComMNetworkHandleRef [

Parameter Name	J1939NmComMNetworkHandleRef		
Parent Container	J1939NmChannel		
Description	Reference to the channel defined by the ComMChannel providing access to the unique channel index ComMChannelId.		
Multiplicity	1		
Type	Symbolic name reference to ComMChannel		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	–	
Scope / Dependency	scope: local		

]

10.1.6 J1939NmTxPdu

[ECUC_J1939Nm_00009] Definition of EcucParamConfContainerDef J1939NmTxPdu [

Container Name	J1939NmTxPdu
Parent Container	J1939NmChannel
Description	Contains the configuration of the PDU used to transmit the AddressClaimed PG. This PDU produces a meta data item of type CAN_ID_32.
Configuration Parameters	

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
J1939NmTxPduld	1	[ECUC_J1939Nm_00011]
J1939NmTxPduRef	1	[ECUC_J1939Nm_00012]

No Included Containers

]

[ECUC_J1939Nm_00011] Definition of EcucIntegerParamDef J1939NmTxPduld [

Parameter Name	J1939NmTxPduld
Parent Container	J1939NmTxPdu
Description	The PDU identifier used for TxConfirmation from LSduR.
Multiplicity	1
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)



△

Range	0 .. 65535		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: ECU withAuto = true		

]

[ECUC_J1939Nm_00012] Definition of EcucReferenceDef J1939NmTxPduRef [

Parameter Name	J1939NmTxPduRef		
Parent Container	J1939NmTxPdu		
Description	Reference to the Pdu object representing the PDU.		
Multiplicity	1		
Type	Reference to Pdu		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	–	
Scope / Dependency	scope: local		

]

10.1.7 J1939NmRxPdu

[ECUC_J1939Nm_00010] Definition of EcucParamConfContainerDef J1939NmRxPdu [

Container Name	J1939NmRxPdu
Parent Container	J1939NmChannel
Description	Contains the configuration of the PDU used to receive the AddressClaimed PG. This PDU consumes a meta data item of type CAN_ID_32.
Configuration Parameters	

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
J1939NmRxPduId	1	[ECUC_J1939Nm_00014]
J1939NmRxPduRef	1	[ECUC_J1939Nm_00013]

No Included Containers

]

[ECUC_J1939Nm_00014] Definition of EcucIntegerParamDef J1939NmRxPduId [

Parameter Name	J1939NmRxPduId		
Parent Container	J1939NmRxPdu		
Description	The PDU identifier used for RxIndication from LSduR.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: ECU withAuto = true		

]

[ECUC_J1939Nm_00013] Definition of EcucReferenceDef J1939NmRxPduRef [

Parameter Name	J1939NmRxPduRef		
Parent Container	J1939NmRxPdu		
Description	Reference to the Pdu object representing the PDU.		
Multiplicity	1		
Type	Reference to Pdu		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	-	
Scope / Dependency	scope: local		

]

10.1.8 J1939NmNodeSpecificDemEventParameterRefs

[ECUC_J1939Nm_00006] Definition of EcucParamConfContainerDef J1939NmNodeSpecificDemEventParameterRefs [

Container Name	J1939NmNodeSpecificDemEventParameterRefs		
Parent Container	J1939NmChannel		
Description	Container for the references to DemEventParameter elements related to one J1939Nm Node which shall be invoked using the API Dem_SetEventStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEvent Parameter's DemEventId symbolic value. The standardized errors are provided in this container and can be extended by vendor-specific error references.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
J1939NM_E_ADDRESS_LOST	1	[ECUC_J1939Nm_00007]
J1939NmNodeRef	1	[ECUC_J1939Nm_00053]

No Included Containers

]

[ECUC_J1939Nm_00007] Definition of EcucReferenceDef J1939NM_E_ADDRESS_LOST [

Parameter Name	J1939NM_E_ADDRESS_LOST		
Parent Container	J1939NmNodeSpecificDemEventParameterRefs		
Description	Reference to the DemEventParameter which shall be issued when the ECU failed to claim one of its addresses.		
Multiplicity	1		
Type	Symbolic name reference to DemEventParameter		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00053] Definition of EcucReferenceDef J1939NmNodeRef [

Parameter Name	J1939NmNodeRef		
Parent Container	J1939NmNodeSpecificDemEventParameterRefs		
Description	Reference to J1939NmNode.		
Multiplicity	1		
Type	Reference to J1939NmNode		
Post-Build Variant Value	true		



△

Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

┌

10.1.9 J1939NmNode

[ECUC_J1939Nm_00015] Definition of EcucParamConfContainerDef J1939Nm Node

Container Name	J1939NmNode		
Parent Container	J1939NmConfigSet		
Description	Logical node representing one function handled by J1939Nm.		
Post-Build Variant Multiplicity	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
J1939NmAddressConfigurationCapability	0..1	[ECUC_J1939Nm_00055]
J1939NmNodeId	1	[ECUC_J1939Nm_00030]
J1939NmNodeNameArbitraryAddressCapable	1	[ECUC_J1939Nm_00018]
J1939NmNodeNameECUInstance	1	[ECUC_J1939Nm_00024]
J1939NmNodeNameFunction	1	[ECUC_J1939Nm_00022]
J1939NmNodeNameFunctionInstance	1	[ECUC_J1939Nm_00023]
J1939NmNodeNameIdentityNumber	1	[ECUC_J1939Nm_00026]
J1939NmNodeNameIndustryGroup	1	[ECUC_J1939Nm_00019]
J1939NmNodeNameManufacturerCode	1	[ECUC_J1939Nm_00025]
J1939NmNodeNameVehicleSystem	1	[ECUC_J1939Nm_00021]
J1939NmNodeNameVehicleSystemInstance	1	[ECUC_J1939Nm_00020]
J1939NmNodePreferredAddress	1	[ECUC_J1939Nm_00016]
J1939NmNodeStartUpDelay	1	[ECUC_J1939Nm_00017]
J1939NmNodeChannelRef	1..*	[ECUC_J1939Nm_00029]

No Included Containers

└

[ECUC_J1939Nm_00055] Definition of EcucEnumerationParamDef J1939NmAddressConfigurationCapability [

Parameter Name	J1939NmAddressConfigurationCapability		
Parent Container	J1939NmNode		
Description	Defines the Address Configuration Capability of the J1939NmNode (corresponding to an SAE J1939 Controller Application, CA).		
Multiplicity	0..1		
Type	EcucEnumerationParamDef		
Range	J1939NM_AAC	Arbitrary Address Capable CA.	
	J1939NM_CCA	Command Configurable Address CA.	
	J1939NM_NCA	Non-Configurable Address CA.	
	J1939NM_SCA	Self-Configurable Address CA.	
	J1939NM_SVCA	Service Configurable Address CA.	
Default value	J1939NM_NCA		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00030] Definition of EcucIntegerParamDef J1939NmNodeId [

Parameter Name	J1939NmNodeId		
Parent Container	J1939NmNode		
Description	Unique identifier of this node.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: ECU withAuto = true		

]

**[ECUC_J1939Nm_00018] Definition of EcucBooleanParamDef J1939NmNode
NameArbitraryAddressCapable** [

Parameter Name	J1939NmNodeNameArbitraryAddressCapable		
Parent Container	J1939NmNode		
Description	Arbitrary Address Capable field of the NAME of this node.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	-		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	-	
	Post-build time	-	
Scope / Dependency	scope: local		

]

**[ECUC_J1939Nm_00024] Definition of EcucIntegerParamDef J1939NmNode
NameECUInstance** [

Parameter Name	J1939NmNodeNameECUInstance		
Parent Container	J1939NmNode		
Description	ECU Instance field of the NAME of this node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 7		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

**[ECUC_J1939Nm_00022] Definition of EcucIntegerParamDef J1939NmNode
NameFunction** [

Parameter Name	J1939NmNodeNameFunction		
Parent Container	J1939NmNode		
Description	Function field of the NAME of this node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE



△

	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00023] Definition of EcucIntegerParamDef J1939NmNode NameFunctionInstance [

Parameter Name	J1939NmNodeNameFunctionInstance		
Parent Container	J1939NmNode		
Description	Function Instance field of the NAME of this node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 31		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00026] Definition of EcucIntegerParamDef J1939NmNode NameIdentityNumber [

Parameter Name	J1939NmNodeNameIdentityNumber		
Parent Container	J1939NmNode		
Description	Identity Number field of the NAME of this node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 2097151		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

**[ECUC_J1939Nm_00019] Definition of EcucIntegerParamDef J1939NmNode
NameIndustryGroup [**

Parameter Name	J1939NmNodeNameIndustryGroup		
Parent Container	J1939NmNode		
Description	Industry Group field of the NAME of this node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 7		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

**[ECUC_J1939Nm_00025] Definition of EcucIntegerParamDef J1939NmNode
NameManufacturerCode [**

Parameter Name	J1939NmNodeNameManufacturerCode		
Parent Container	J1939NmNode		
Description	Manufacturer Code field of the NAME of this node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 2047		
Default value	–		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

**[ECUC_J1939Nm_00021] Definition of EcucIntegerParamDef J1939NmNode
NameVehicleSystem [**

Parameter Name	J1939NmNodeNameVehicleSystem		
Parent Container	J1939NmNode		
Description	Vehicle System field of the NAME of this node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 127		
Default value	–		
Post-Build Variant Value	true		

▽

△

Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00020] Definition of EcucIntegerParamDef J1939NmNodeNameVehicleSystemInstance [

Parameter Name	J1939NmNodeNameVehicleSystemInstance		
Parent Container	J1939NmNode		
Description	Vehicle System Instance field of the NAME of this node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 15		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00016] Definition of EcucIntegerParamDef J1939NmNodePreferredAddress [

Parameter Name	J1939NmNodePreferredAddress		
Parent Container	J1939NmNode		
Description	Source address of this node used for address claiming.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 253		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_J1939Nm_00017] Definition of EcucBooleanParamDef J1939NmNode StartUpDelay [

Parameter Name	J1939NmNodeStartUpDelay		
Parent Container	J1939NmNode		
Description	<p>If enabled, the node will start communication after a delay of 250ms after transmission of the initial AddressClaimed, depending on the configured J1939NmNodePreferred Address. If disabled, the node will start communication immediately at network start-up.</p> <p>Please note: According to J1939/81, the 250ms delay is not required for single address CAs with desired source addresses in the ranges 0..127 or 248..253.</p>		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	true		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00029] Definition of EcucReferenceDef J1939NmNodeChannel Ref [

Parameter Name	J1939NmNodeChannelRef		
Parent Container	J1939NmNode		
Description	Reference to the channels this node has access to.		
Multiplicity	1..*		
Type	Reference to J1939NmChannel		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	–	
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME, VARIANT-POST-BUILD
	Post-build time	–	
Scope / Dependency	scope: local		

]

10.1.10 J1939NmExternalNode

[ECUC_J1939Nm_00039] Definition of EcucParamConfContainerDef J1939Nm ExternalNode [

Container Name	J1939NmExternalNode		
Parent Container	J1939NmConfigSet		
Description	Logical node implemented in another ECU. Configures potential communication partners. If this container is connected to more than one channel, the external ECU is linked to the local ECU by each of these channels.		
Post-Build Variant Multiplicity	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	
Configuration Parameters			

Included Parameters		
Parameter Name	Multiplicity	ECUC ID
J1939NmExternalNodeId	1	[ECUC_J1939Nm_00040]
J1939NmExternalNodeNameArbitraryAddressCapable	1	[ECUC_J1939Nm_00041]
J1939NmExternalNodeNameECUInstance	1	[ECUC_J1939Nm_00042]
J1939NmExternalNodeNameFunction	1	[ECUC_J1939Nm_00043]
J1939NmExternalNodeNameFunctionInstance	1	[ECUC_J1939Nm_00044]
J1939NmExternalNodeNameIdentityNumber	1	[ECUC_J1939Nm_00045]
J1939NmExternalNodeNameIndustryGroup	1	[ECUC_J1939Nm_00046]
J1939NmExternalNodeNameManufacturerCode	1	[ECUC_J1939Nm_00047]
J1939NmExternalNodeNameVehicleSystem	1	[ECUC_J1939Nm_00048]
J1939NmExternalNodeNameVehicleSystemInstance	1	[ECUC_J1939Nm_00050]
J1939NmExternalNodePreferredAddress	1	[ECUC_J1939Nm_00049]
J1939NmExternalNodeChannelRef	1..*	[ECUC_J1939Nm_00051]
J1939NmExternalNodeGatewayedChannelRef	0..*	[ECUC_J1939Nm_00052]

No Included Containers

]

[ECUC_J1939Nm_00040] Definition of EcucIntegerParamDef J1939NmExternalNodeId [

Parameter Name	J1939NmExternalNodeId		
Parent Container	J1939NmExternalNode		
Description	Unique identifier of this external node.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 65535		
Default value	–		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	–	
	Post-build time	–	





Scope / Dependency	scope: ECU withAuto = true
---------------------------	-------------------------------

]

**[ECUC_J1939Nm_00041] Definition of EcucBooleanParamDef J1939NmExternal
NodeNameArbitraryAddressCapable** [

Parameter Name	J1939NmExternalNodeNameArbitraryAddressCapable		
Parent Container	J1939NmExternalNode		
Description	Arbitrary Address Capable field of the NAME of this external node.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

**[ECUC_J1939Nm_00042] Definition of EcucIntegerParamDef J1939NmExternal
NodeNameECUInstance** [

Parameter Name	J1939NmExternalNodeNameECUInstance		
Parent Container	J1939NmExternalNode		
Description	ECU Instance field of the NAME of this external node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 7		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

**[ECUC_J1939Nm_00043] Definition of EcucIntegerParamDef J1939NmExternal
NodeNameFunction** [

Parameter Name	J1939NmExternalNodeNameFunction		
Parent Container	J1939NmExternalNode		
Description	Function field of the NAME of this external node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

**[ECUC_J1939Nm_00044] Definition of EcucIntegerParamDef J1939NmExternal
NodeNameFunctionInstance** [

Parameter Name	J1939NmExternalNodeNameFunctionInstance		
Parent Container	J1939NmExternalNode		
Description	Function Instance field of the NAME of this external node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 31		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

**[ECUC_J1939Nm_00045] Definition of EcucIntegerParamDef J1939NmExternal
NodeNameIdentityNumber** [

Parameter Name	J1939NmExternalNodeNameIdentityNumber		
Parent Container	J1939NmExternalNode		
Description	Identity Number field of the NAME of this external node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 2097151		
Default value	-		
Post-Build Variant Value	true		



△

Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00046] Definition of EcucIntegerParamDef J1939NmExternalNodeNameIndustryGroup [

Parameter Name	J1939NmExternalNodeNameIndustryGroup		
Parent Container	J1939NmExternalNode		
Description	Industry Group field of the NAME of this external node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 7		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00047] Definition of EcucIntegerParamDef J1939NmExternalNodeNameManufacturerCode [

Parameter Name	J1939NmExternalNodeNameManufacturerCode		
Parent Container	J1939NmExternalNode		
Description	Manufacturer Code field of the NAME of this external node.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 2047		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00048] Definition of EcuIntegerParamDef J1939NmExternalNodeNameVehicleSystem [

Parameter Name	J1939NmExternalNodeNameVehicleSystem		
Parent Container	J1939NmExternalNode		
Description	Vehicle System field of the NAME of this external node.		
Multiplicity	1		
Type	EcuIntegerParamDef		
Range	0 .. 127		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00050] Definition of EcuIntegerParamDef J1939NmExternalNodeNameVehicleSystemInstance [

Parameter Name	J1939NmExternalNodeNameVehicleSystemInstance		
Parent Container	J1939NmExternalNode		
Description	Vehicle System Instance field of the NAME of this external node.		
Multiplicity	1		
Type	EcuIntegerParamDef		
Range	0 .. 15		
Default value	-		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00049] Definition of EcuIntegerParamDef J1939NmExternalNodePreferredAddress [

Parameter Name	J1939NmExternalNodePreferredAddress		
Parent Container	J1939NmExternalNode		
Description	Source address of this external node.		
Multiplicity	1		
Type	EcuIntegerParamDef		
Range	0 .. 253		
Default value	-		
Post-Build Variant Value	true		



△

Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: ECU		

]

[ECUC_J1939Nm_00051] Definition of EcucReferenceDef J1939NmExternalNodeChannelRef [

Parameter Name	J1939NmExternalNodeChannelRef		
Parent Container	J1939NmExternalNode		
Description	Reference to the channels of the local ECU this external node has access to.		
Multiplicity	1..*		
Type	Reference to J1939NmChannel		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

[ECUC_J1939Nm_00052] Definition of EcucReferenceDef J1939NmExternalNodeGatewayedChannelRef [

Parameter Name	J1939NmExternalNodeGatewayedChannelRef		
Parent Container	J1939NmExternalNode		
Description	Reference to the channels on which messages to/from this external node shall be gatewayed. The address claim from the external node will be replicated on these channels.		
Multiplicity	0..*		
Type	Reference to J1939NmChannel		
Post-Build Variant Multiplicity	true		
Post-Build Variant Value	true		
Multiplicity Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	X	VARIANT-LINK-TIME
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

]

10.2 Configuration of NM Interface

The [J1939 Network Management](#) module relies on the following channel configuration in the [NM Interface](#) to be operational:

- NmActiveCoordinator: False
- NmBusSynchronizationEnabled: False
- NmChannelSleepMaster: True
- NmComControlEnabled: False
- NmCoordClusterIndex: <undefined>
- NmCoordinatorSyncSupport: False
- NmNodeDetectionEnabled: False
- NmNodeIdEnabled: False
- NmPassiveModeEnabled: False
- NmRemoteSleepIndEnabled: False
- NmShutdownDelayTimer: 0.0
- NmStateReportEnabled: False
- NmStateReportSignalRef: <undefined>
- NmSynchronizingNetwork: False
- NmUserDataEnabled: False

A Not Applicable Requirements

[SWS_J1939Nm_NA_00001] Requirements Not Applicable to this Specification

Upstream requirements: SRS_BSW_00168, SRS_BSW_00375, SRS_BSW_00399, SRS_BSW_-
00416, SRS_BSW_00417, SRS_BSW_00419, SRS_BSW_00422,
SRS_BSW_00425, SRS_BSW_00458, SRS_BSW_00490, SRS_BSW_-
00492

[These requirements are not applicable to this specification.]

B Change History of AUTOSAR Traceable Items

Please note that the lists in this chapter also include traceable items that have been removed from the specification in a later version. These items do not appear as hyperlinks in the document.

B.1 Traceable Item History of this Document According to AUTOSAR Release R24-11

B.1.1 Added Specification Items in R24-11

none

B.1.2 Changed Specification Items in R24-11

[\[SWS_J1939Nm_00016\]](#) [\[SWS_J1939Nm_00019\]](#) [\[SWS_J1939Nm_00040\]](#) [\[SWS_J1939Nm_00062\]](#)

B.1.3 Deleted Specification Items in R24-11

none

B.2 Traceable Item History of this Document According to AUTOSAR Release R23-11

B.2.1 Added Specification Items in R23-11

none

B.2.2 Changed Specification Items in R23-11

none

B.2.3 Deleted Specification Items in R23-11

none