

<b>Document Title</b>	Specification of Watchdog Interface
<b>Document Owner</b>	AUTOSAR
<b>Document Responsibility</b>	AUTOSAR
<b>Document Identification No</b>	041
<b>Document Classification</b>	Standard
<b>Document Version</b>	2.7.0
<b>Document Status</b>	Final
<b>Part of Release</b>	4.1
<b>Revision</b>	2

<b>Document Change History</b>			
<b>Date</b>	<b>Version</b>	<b>Changed by</b>	<b>Change Description</b>
31.10.2013	2.7.0	AUTOSAR Release Management	<ul style="list-style-type: none"> <li>• Editorial changes</li> <li>• Removed chapter(s) on change documentation</li> </ul>
27.02.2013	2.6.1	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• Artifact path fixed</li> </ul>
27.02.2013	2.6.0	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• Reworked according to the new SWS_BSWGeneral</li> <li>• New indexing scheme for requirements</li> </ul>
08.11.2011	2.5.0	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• Modification in DeviceIndex</li> <li>• New template with requirements traceability</li> </ul>
25.11.2010	2.4.0	AUTOSAR Administration	Update of module version check, addition of invalid pointer as error code and checking for null pointer
30.11.2009	2.3.0	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• Modifications for windowed watchdog concept</li> <li>• Further maintenance for R4.0</li> <li>• Legal disclaimer revised</li> </ul>
23.06.2008	2.2.1	AUTOSAR Administration	Legal disclaimer revised
07.12.2007	2.2.0	AUTOSAR Administration	<ul style="list-style-type: none"> <li>• The main bullets summarizing the changes are</li> <li>• Tables of chapter 8 has been replaced with</li> <li>• Contents generated from AUTOSAR BSW model</li> <li>• Document meta information extended</li> <li>• Small layout adaptations made</li> </ul>

31.01.2007	2.1.0	AUTOSAR Administration	<ul style="list-style-type: none"><li>• In chapter 5.1.2 the file include structure has been changed to comply with the SPAL general include structure.</li><li>• Legal disclaimer revised</li><li>• Release Notes added</li><li>• “Advice for users” revised</li><li>• “Revision Information” added</li></ul>
20.03.2006	2.0.0	AUTOSAR Administration	Document structure adapted to common Release 2.0 SWS Template
23.06.2005	1.0.0	AUTOSAR Administration	Initial release

## Disclaimer

This specification and the material contained in it, as released by AUTOSAR is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only.

For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

## Advice for users

AUTOSAR Specification Documents may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the Specification Documents for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such Specification Documents, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.

## Table of Contents

1	Introduction and functional overview .....	6
2	Acronyms and abbreviations .....	7
3	Related documentation.....	8
3.1	Input documents .....	8
3.2	Related standards and norms .....	8
3.3	Related specification .....	8
4	Constraints and assumptions .....	9
4.1	Limitations .....	9
4.2	Applicability to car domains .....	9
5	Dependencies to other modules.....	10
5.1	File structure.....	10
5.1.1	Code file structure.....	10
5.1.2	Header file structure.....	10
5.1.3	Version check .....	12
6	Requirements traceability .....	13
7	Functional specification .....	27
7.1	General behavior .....	27
7.2	Error classification .....	27
7.3	Error detection .....	27
7.4	Error notification .....	27
7.5	API parameter checking .....	27
7.6	Debugging .....	28
8	API specification.....	29
8.1	Imported types.....	29
8.2	Type definitions .....	29
8.2.1	WdgIf_ModeType.....	29
8.3	Function definitions.....	29
8.3.1	WdgIf_SetMode .....	30
8.3.2	WdgIf_SetTriggerCondition.....	31
8.3.3	WdgIf_GetVersionInfo.....	31
8.4	Call-back notifications.....	32
8.5	Scheduled functions .....	32
8.6	Expected interfaces .....	32
8.6.1	Mandatory interfaces .....	32
8.6.2	Optional interfaces.....	32
8.6.3	Configurable interfaces .....	32
9	Sequence diagrams .....	33
10	Configuration specification .....	34
10.1	How to read this chapter .....	34
10.2	Containers and configuration parameters .....	35
10.2.1	Variants .....	35

10.2.2	WdgIf .....	35
10.2.3	WdgIfGeneral .....	35
10.2.4	WdgIfDevice .....	36
10.3	Published parameters .....	37
11	Not applicable requirements .....	38

## 1 Introduction and functional overview

This specification describes the functionality, API and the configuration of the AUTOSAR Basic Software module Watchdog Interface.

In case of more than one watchdog device and watchdog driver (e.g. both an internal software watchdog and an external hardware watchdog) being used on an ECU, this module allows the watchdog manager (or any other client of the watchdog) to select the correct watchdog driver - and thus the watchdog device - while retaining the API and functionality of the underlying driver.

The Watchdog Interface is part of the Onboard Device Abstraction Layer (see [1]).

**[SWS\_WdgIf\_00026]** The Watchdog Interface provides uniform access to services of the underlying watchdog drivers like mode switching and setting trigger conditions (SRS\_Wdg\_12165, SRS\_Wdg\_12167, SRS\_MemHwAb\_14019)

## 2 Acronyms and abbreviations

*Note: For this module there are no local acronyms and abbreviations. All used acronyms and abbreviations should be contained in the AUTOSAR glossary.*

### 3 Related documentation

#### 3.1 Input documents

- [1] Layered Software Architecture  
AUTOSAR\_EXP\_LayeredSoftwareArchitecture.pdf
- [2] General Requirements on Basic Software Modules  
AUTOSAR\_SRS\_BSWGeneral.pdf
- [3] General Requirements on SPAL  
AUTOSAR\_SRS\_SPALGeneral.pdf
- [4] Requirements on Memory Hardware Abstraction Layer  
AUTOSAR\_SRS\_MemoryHWAbstractionLayer.pdf
- [5] Specification of Watchdog Driver  
AUTOSAR\_SWS\_WatchdogDriver.pdf
- [6] Specification of Development Error Tracer  
AUTOSAR\_SWS\_DevelopmentErrorTracer.pdf
- [7] Basic Software Module Description Template  
AUTOSAR\_TPS\_BSWModuleDescriptionTemplate.pdf
- [8] AUTOSAR Requirements on Watchdog Driver  
AUTOSAR\_SRS\_WatchdogDriver.pdf
- [9] General Specification of Basic Software Modules  
AUTOSAR\_SWS\_BSWGeneral.pdf

#### 3.2 Related standards and norms

None

#### 3.3 Related specification

AUTOSAR provides a General Specification on Basic Software modules [9] (SWS BSW General), which is also valid for Watchdog Interface.

Thus, the specification SWS BSW General shall be considered as additional and required specification for Watchdog Interface.



## **4 Constraints and assumptions**

### **4.1 Limitations**

No limitations.

### **4.2 Applicability to car domains**

No restrictions.

## 5 Dependencies to other modules

The Watchdog Interface is part of the ECU Abstraction Layer. It allows the upper layer, especially the watchdog manager, to uniformly access one or more watchdog drivers. The implementation of the Watchdog Interface therefore depends on the number of watchdog drivers below.

### 5.1 File structure

#### 5.1.1 Code file structure

**[SWS\_WdgIf\_00037]** The code file structure shall not be completely defined within this specification. ]()

**[SWS\_WdgIf\_00051]** The Watchdog Interface shall comprise, if required, an implementation source file `WdgIf.c` (e.g. for tables of function pointers). ]()

#### 5.1.2 Header file structure


**[SWS\_WdgIf\_00010]** The Watchdog Interface's implementer shall place the type definitions of the Watchdog Interface in the file `WdgIf_Types.h`. ]()

**[SWS\_WdgIf\_00001]** The Watchdog Interface shall comprise a header file "`WdgIf.h`" declaring the API of the Watchdog Interface. If an API is implemented as a macro, it will be also contained here. ]()

Note: This is the only header file to be imported by the "user" of the Watchdog Interface.

**[SWS\_WdgIf\_00050]** The Watchdog Interface shall comprise a configuration header file "`WdgIf_Cfg.h`" providing its pre-compile configuration definitions. ](SRS\_BSW\_00381)

**[SWS\_WdgIf\_00002]** The file include structure shall be as follows:

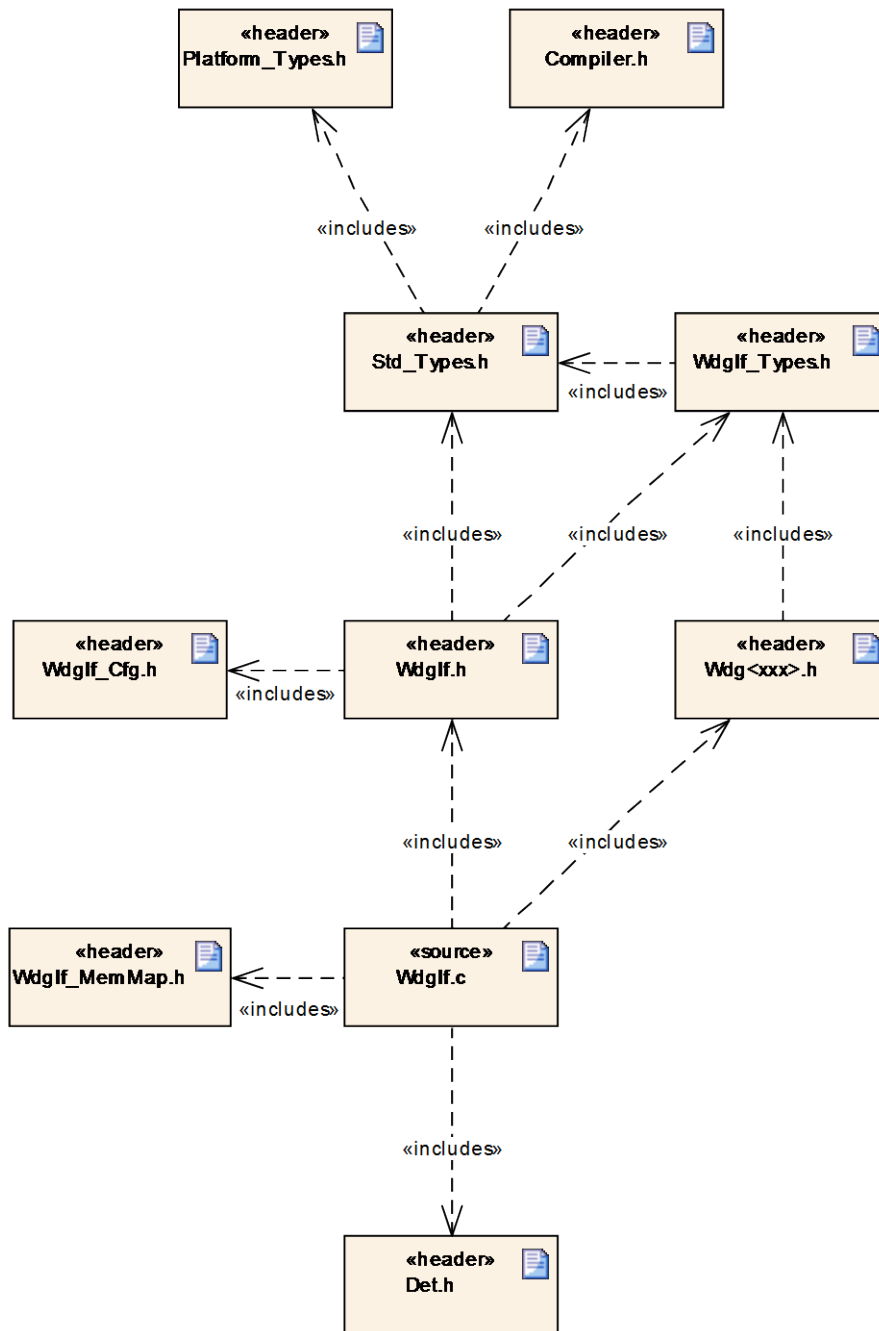

**Figure 1: File include structure of the Watchdog Interface**

\_(SRS\_BSW\_00348, SRS\_BSW\_00353, SRS\_BSW\_00361)

Notes to the figure:

- WdgIf may be a pure macro implementation even in the case of configured development error tracing, which means WdgIf.c may not exist. In this case, Det.h and Wdg<xxx>.h must be included in WdgIf.h instead.
- Wdg<xxx>.h has to be included for the API declaration of the watchdog drivers which, in case of multiple existence, have driver specific “infixes” <xxx>

according to [SRS\\_BSW\\_00374](#). The figure shows two driver instances as an example.

### 5.1.3 Version check

For details refer to the chapter 5.1.8 “Version Check” in *SWS\_BSWGeneral*.

## 6 Requirements traceability

Requirement	Description	Satisfied by
-	-	SWS_Wdglf_00001
-	-	SWS_Wdglf_00010
-	-	SWS_Wdglf_00013
-	-	SWS_Wdglf_00030
-	-	SWS_Wdglf_00037
-	-	SWS_Wdglf_00041
-	-	SWS_Wdglf_00042
-	-	SWS_Wdglf_00044
-	-	SWS_Wdglf_00047
-	-	SWS_Wdglf_00048
-	-	SWS_Wdglf_00051
-	-	SWS_Wdglf_00056
-	-	SWS_Wdglf_00057
-	-	SWS_Wdglf_00058
-	-	SWS_Wdglf_00061
BSW00421	-	SWS_Wdglf_00999
BSW00445	-	SWS_Wdglf_00999
BSW004450032100341	-	SWS_Wdglf_00999
BSW0044500333	-	SWS_Wdglf_00999
BSW0044500334	-	SWS_Wdglf_00999
BSW0044500401	-	SWS_Wdglf_00999
BSW00445009	-	SWS_Wdglf_00999
BSW00445010	-	SWS_Wdglf_00999
BSW0044512015	-	SWS_Wdglf_00999
BSW0044512019	-	SWS_Wdglf_00999
BSW0044512056	-	SWS_Wdglf_00999
BSW0044512057	-	SWS_Wdglf_00999
BSW0044512063	-	SWS_Wdglf_00999
BSW0044512064	-	SWS_Wdglf_00999
BSW0044512067	-	SWS_Wdglf_00999
BSW0044512068	-	SWS_Wdglf_00999
BSW0044512069	-	SWS_Wdglf_00999
BSW0044512075	-	SWS_Wdglf_00999
BSW0044512077	-	SWS_Wdglf_00999
BSW0044512078	-	SWS_Wdglf_00999
BSW0044512092	-	SWS_Wdglf_00999
BSW0044512105	-	SWS_Wdglf_00999

BSW0044512106	-	SWS_Wdglf_00999
BSW0044512125	-	SWS_Wdglf_00999
BSW0044512129	-	SWS_Wdglf_00999
BSW0044512155	-	SWS_Wdglf_00999
BSW0044512163	-	SWS_Wdglf_00999
BSW0044512166	-	SWS_Wdglf_00999
BSW0044512168	-	SWS_Wdglf_00999
BSW0044512169	-	SWS_Wdglf_00999
BSW0044512263	-	SWS_Wdglf_00999
BSW0044512265	-	SWS_Wdglf_00999
BSW0044512267	-	SWS_Wdglf_00999
BSW0044512461	-	SWS_Wdglf_00999
BSW0044512462	-	SWS_Wdglf_00999
BSW0044512463	-	SWS_Wdglf_00999
BSW00445157	-	SWS_Wdglf_00999
BSW00445172	-	SWS_Wdglf_00999
BSW00446	-	SWS_Wdglf_00999
BSW0424	-	SWS_Wdglf_00999
SRS_BSW_00005	Modules of the æC Abstraction Layer (MCAL) may not have hard coded horizontal interfaces	SWS_Wdglf_00999
SRS_BSW_00007	All Basic SW Modules written in C language shall conform to the MISRA C 2004 Standard.	SWS_Wdglf_00999
SRS_BSW_00101	The Basic Software Module shall be able to initialize variables and hardware in a separate initialization function	SWS_Wdglf_00999
SRS_BSW_00159	All modules of the AUTOSAR Basic Software shall support a tool based configuration	SWS_Wdglf_00999
SRS_BSW_00161	The AUTOSAR Basic Software shall provide a microcontroller abstraction layer which provides a standardized interface to higher software layers	SWS_Wdglf_00999
SRS_BSW_00162	The AUTOSAR Basic Software shall provide a hardware abstraction layer	SWS_Wdglf_00999
SRS_BSW_00164	The Implementation of interrupt service routines shall be done by the Operating System, complex drivers or modules	SWS_Wdglf_00999
SRS_BSW_00168	SW components shall be tested by a function defined in a common API in the Basis-SW	SWS_Wdglf_00999
SRS_BSW_00170	The AUTOSAR SW Components shall provide information about their dependency from faults, signal qualities, driver demands	SWS_Wdglf_00999
SRS_BSW_00300	All AUTOSAR Basic Software Modules shall be identified by an unambiguous name	SWS_Wdglf_00999
SRS_BSW_00304	All AUTOSAR Basic Software Modules shall use the following data types instead of native C data types	SWS_Wdglf_00999

SRS_BSW_00306	AUTOSAR Basic Software Modules shall be compiler and platform independent	SWS_Wdglf_00999
SRS_BSW_00307	Global variables naming convention	SWS_Wdglf_00999
SRS_BSW_00308	AUTOSAR Basic Software Modules shall not define global data in their header files, but in the C file	SWS_Wdglf_00999
SRS_BSW_00309	All AUTOSAR Basic Software Modules shall indicate all global data with read-only purposes by explicitly assigning the const keyword	SWS_Wdglf_00999
SRS_BSW_00312	Shared code shall be reentrant	SWS_Wdglf_00999
SRS_BSW_00314	All internal driver modules shall separate the interrupt frame definition from the service routine	SWS_Wdglf_00999
SRS_BSW_00323	All AUTOSAR Basic Software Modules shall check passed API parameters for validity	SWS_Wdglf_00028
SRS_BSW_00325	The runtime of interrupt service routines and functions that are running in interrupt context shall be kept short	SWS_Wdglf_00999
SRS_BSW_00326	-	SWS_Wdglf_00999
SRS_BSW_00327	Error values naming convention	SWS_Wdglf_00006
SRS_BSW_00328	All AUTOSAR Basic Software Modules shall avoid the duplication of code	SWS_Wdglf_00999
SRS_BSW_00330	It shall be allowed to use macros instead of functions where source code is used and runtime is critical	SWS_Wdglf_00999
SRS_BSW_00331	All Basic Software Modules shall strictly separate error and status information	SWS_Wdglf_00999
SRS_BSW_00335	Status values naming convention	SWS_Wdglf_00999
SRS_BSW_00336	Basic SW module shall be able to shutdown	SWS_Wdglf_00999
SRS_BSW_00337	Classification of development errors	SWS_Wdglf_00006, SWS_Wdglf_00009
SRS_BSW_00339	Reporting of production relevant error status	SWS_Wdglf_00999
SRS_BSW_00342	It shall be possible to create an AUTOSAR ECU out of modules provided as source code and modules provided as object code, even mixed	SWS_Wdglf_00999
SRS_BSW_00343	The unit of time for specification and configuration of Basic SW modules shall be preferably in physical time unit	SWS_Wdglf_00999
SRS_BSW_00344	BSW Modules shall support link-time configuration	SWS_Wdglf_00999
SRS_BSW_00347	A Naming separation of different instances of BSW drivers shall be in place	SWS_Wdglf_00999
SRS_BSW_00348	All AUTOSAR standard types and constants shall be placed and organized in a standard type header file	SWS_Wdglf_00002
SRS_BSW_00353	All integer type definitions of target and compiler specific scope shall be placed and organized in a single type header	SWS_Wdglf_00002
SRS_BSW_00355	-	SWS_Wdglf_00999

SRS_BSW_00357	For success/failure of an API call a standard return type shall be defined	SWS_Wdglf_00046
SRS_BSW_00358	The return type of init() functions implemented by AUTOSAR Basic Software Modules shall be void	SWS_Wdglf_00999
SRS_BSW_00359	All AUTOSAR Basic Software Modules callback functions shall avoid return types other than void if possible	SWS_Wdglf_00999
SRS_BSW_00360	AUTOSAR Basic Software Modules callback functions are allowed to have parameters	SWS_Wdglf_00999
SRS_BSW_00361	All mappings of not standardized keywords of compiler specific scope shall be placed and organized in a compiler specific type and keyword header	SWS_Wdglf_00002
SRS_BSW_00370	All AUTOSAR Basic Software Modules shall group and out-source callback declarations in a separate header file	SWS_Wdglf_00999
SRS_BSW_00371	The passing of function pointers as API parameter is forbidden for all AUTOSAR Basic Software Modules	SWS_Wdglf_00999
SRS_BSW_00373	The main processing function of each AUTOSAR Basic Software Module shall be named according the defined convention	SWS_Wdglf_00999
SRS_BSW_00375	Basic Software Modules shall report wake-up reasons	SWS_Wdglf_00999
SRS_BSW_00376	-	SWS_Wdglf_00999
SRS_BSW_00377	A Basic Software Module can return a module specific types	SWS_Wdglf_00999
SRS_BSW_00378	AUTOSAR shall provide a boolean type	SWS_Wdglf_00999
SRS_BSW_00380	Configuration parameters being stored in memory shall be placed into separate c-files	SWS_Wdglf_00999
SRS_BSW_00381	The pre-compile time parameters shall be placed into a separate configuration header file	SWS_Wdglf_00050
SRS_BSW_00383	The Basic Software Module specifications shall specify which other configuration files from other modules they use at least in the description	SWS_Wdglf_00999
SRS_BSW_00385	List possible error notifications	SWS_Wdglf_00006
SRS_BSW_00386	The BSW shall specify the configuration for detecting an error	SWS_Wdglf_00006
SRS_BSW_00387	The Basic Software Module specifications shall specify how the callback function is to be implemented	SWS_Wdglf_00999
SRS_BSW_00398	The link-time configuration is achieved on object code basis in the stage after compiling and before linking	SWS_Wdglf_00999
SRS_BSW_00399	Parameter-sets shall be located in a separate segment and shall be loaded after the code	SWS_Wdglf_00999
SRS_BSW_00400	Parameter shall be selected from multiple sets of parameters after code has been loaded and started	SWS_Wdglf_00999



SRS_BSW_00404	BSW Modules shall support post-build configuration	SWS_Wdglf_00999
SRS_BSW_00405	BSW Modules shall support multiple configuration sets	SWS_Wdglf_00999
SRS_BSW_00406	A static status variable denoting if a BSW module is initialized shall be initialized with value 0 before any APIs of the BSW module is called	SWS_Wdglf_00999
SRS_BSW_00409	All production code error ID symbols are defined by the Dem module and shall be retrieved by the other BSW modules from Dem configuration	SWS_Wdglf_00009
SRS_BSW_00412	References to c-configuration parameters shall be placed into a separate h-file	SWS_Wdglf_00999
SRS_BSW_00413	An index-based accessing of the instances of BSW modules shall be done	SWS_Wdglf_00999
SRS_BSW_00414	The init function may have parameters	SWS_Wdglf_00999
SRS_BSW_00415	Interfaces which are provided exclusively for one module shall be separated into a dedicated header file	SWS_Wdglf_00999
SRS_BSW_00416	The sequence of modules to be initialized shall be configurable	SWS_Wdglf_00999
SRS_BSW_00417	Software which is not part of the SW-C shall report error events only after the DEM is fully operational.	SWS_Wdglf_00999
SRS_BSW_00419	If a pre-compile time configuration parameter is implemented as "const" it should be placed into a separate c-file	SWS_Wdglf_00999
SRS_BSW_00422	Pre-de-bouncing of error status information is done within the DEM	SWS_Wdglf_00999
SRS_BSW_00423	BSW modules with AUTOSAR interfaces shall be describable with the means of the SW-C Template	SWS_Wdglf_00999
SRS_BSW_00425	The BSW module description template shall provide means to model the defined trigger conditions of schedulable objects	SWS_Wdglf_00999
SRS_BSW_00426	BSW Modules shall ensure data consistency of data which is shared between BSW modules	SWS_Wdglf_00999
SRS_BSW_00427	ISR functions shall be defined and documented in the BSW module description template	SWS_Wdglf_00999
SRS_BSW_00428	A BSW module shall state if its main processing function(s) has to be executed in a specific order or sequence	SWS_Wdglf_00999
SRS_BSW_00429	BSW modules shall be only allowed to use OS objects and/or related OS services	SWS_Wdglf_00999
SRS_BSW_00432	Modules should have separate main processing functions for read/receive and write/transmit data path	SWS_Wdglf_00999
SRS_BSW_00433	Main processing functions are only allowed to be called from task bodies provided by the BSW Scheduler	SWS_Wdglf_00999

SRS_BSW_00437	Memory mapping shall provide the possibility to define RAM segments which are not to be initialized during startup	SWS_Wdglf_00999
SRS_BSW_00438	Configuration data shall be defined in a structure	SWS_Wdglf_00999
SRS_BSW_00439	Enable BSW modules to handle interrupts	SWS_Wdglf_00999
SRS_BSW_00440	The callback function invocation by the BSW module shall follow the signature provided by RTE to invoke servers via Rte_Call API	SWS_Wdglf_00999
SRS_BSW_00441	Naming convention for type, macro and function	SWS_Wdglf_00999
SRS_BSW_00442	The AUTOSAR architecture shall support standardized debugging and tracing features	SWS_Wdglf_00999
SRS_BSW_00447	Standardizing Include file structure of BSW Modules Implementing Autosar Service	SWS_Wdglf_00999
SRS_BSW_00449	BSW Service APIs used by Autosar Application Software shall return a Std_ReturnType	SWS_Wdglf_00999
SRS_BSW_00450	A Main function of a un-initialized module shall return immediately	SWS_Wdglf_00999
SRS_MemHwAb_14019	The Memory Abstraction Interface shall provide uniform access to the API services of the underlying memory abstraction modules	SWS_Wdglf_00017, SWS_Wdglf_00026
SRS_MemHwAb_14020	The Memory Abstraction Interface shall allow the selection of an underlying memory abstraction module by using a device index	SWS_Wdglf_00018
SRS_MemHwAb_14021	The Memory Abstraction Interface shall allow the pre-compile time configuration of the number of underlying memory abstraction modules	SWS_Wdglf_00019, SWS_Wdglf_00020
SRS_MemHwAb_14022	The Memory Abstraction Interface shall preserve the functionality of the underlying memory abstraction module	SWS_Wdglf_00003
SRS_MemHwAb_14023	The Memory Abstraction Interface shall only check those parameters that are used within the interface itself	SWS_Wdglf_00028
SRS_MemHwAb_14024	The Memory Abstraction Interface shall preserve the timing behavior of the underlying memory abstraction modules and their APIs	SWS_Wdglf_00003
SRS_MemHwAb_14025	The Memory Abstraction Interface shall be implemented in an efficient way	SWS_Wdglf_00019, SWS_Wdglf_00020
SRS_SPAL_12448	All driver modules shall have a specific behavior after a development error detection	SWS_Wdglf_00028
SRS_Wdg_12018	The watchdog driver shall provide a service for selecting the watchdog mode	SWS_Wdglf_00016
SRS_Wdg_12165	For an external watchdog driver the same requirements shall apply like for an internal watchdog driver	SWS_Wdglf_00017, SWS_Wdglf_00026
SRS_Wdg_12167	The external watchdog driver shall have a semantically identical API as an internal watchdog driver	SWS_Wdglf_00017, SWS_Wdglf_00026

Document: General Requirements on Basic Software Modules [2]

<b>Requirement</b>	<b>Satisfied by</b>
[[SRS_BSW_00344] Reference to link-time configuration	Not applicable (this module only provides pre-compile time parameters)
[SRS_BSW_00404] Reference to post build time configuration	Not applicable (this module only provides pre-compile time parameters)
[SRS_BSW_00405] Reference to multiple configuration sets	Not applicable (this module does not provide an initialization routine)
[SRS_BSW_00345] Pre-compile-time configuration	Chapter 10.2
[SRS_BSW_00159] Tool--based configuration	Not applicable (requirement on the implementation)
[SRS_BSW_00167] Static configuration checking	<a href="#">SWS_WdgIf_00005</a>
[SRS_BSW_00171] Configurability of optional functionality	Chapter 10.2
[SRS_BSW_00170] Data for reconfiguration of AUTOSAR SW-components	Not applicable (this module does not depend on faults, signals, ...)
[SRS_BSW_00380] Separate C-File for configuration parameters	Not applicable (this module only provides pre-compile time parameters)
[SRS_BSW_00419] Separate C-Files for pre-compile time configuration parameters	Not applicable (this module does only provide #define's as pre-compile time configuration parameters)
[SRS_BSW_00381] Separate configuration header file for pre-compile time parameters	<a href="#">SWS_WdgIf_00050</a>
[SRS_BSW_00412] Separate H-File for configuration parameters	Not applicable (this module only provides pre-compile time parameters)
[SRS_BSW_00383] List dependencies of configuration files	Not applicable (this module does not use configuration files from other modules)
[SRS_BSW_00384] List dependencies to other modules	Chapter 5
[SRS_BSW_00387] Specify the configuration class of callback function	Not applicable (this module does not provide any callback functions)
[SRS_BSW_00388] Introduce containers	Chapter 10.2
[SRS_BSW_00389] Containers shall have names	Chapter 10.2
[SRS_BSW_00390] Parameter content shall be unique within the module	Chapter 10.2
[SRS_BSW_00391] Parameter shall have unique names	Chapter 10.2
[SRS_BSW_00392] Parameters shall have a type	Chapter 10.2
[SRS_BSW_00393] Parameters shall have a range	Chapter 10.2
[SRS_BSW_00394] Specify the scope of the parameters	Chapter 10.2
[SRS_BSW_00395] List the required parameters (per parameter)	Chapter 10.2
[SRS_BSW_00396] Configuration classes	Chapter 10.2
[SRS_BSW_00397] Pre-compile-time parameters	Chapter 10.2
[SRS_BSW_00398] Link-time parameters	Not applicable

	(this module does not provide any link-time parameters)
[SRS_BSW_00399] Loadable Post-build time parameters	Not applicable (this module does not provide any post build parameters)
[SRS_BSW_00400] Selectable Post-build time parameters	Not applicable (this module does not provide any post build parameters)
[SRS_BSW_00438] Post Build Configuration Data Structure	Not applicable (this module does not provide any post build parameters)
[SRS_BSW_00402] Published information	Chapter 10.3
[SRS_BSW_00375] Notification of wake-up reason	Not applicable (this module does not wake up the ECU / MCU)
[SRS_BSW_00101] Initialization interface	Not applicable (the module does not need to be initialized)
[SRS_BSW_00416] Sequence of Initialization	Not applicable (requirement on system integration, not on a single module)
[SRS_BSW_00406] Check module initialization	Not applicable (the module does not need to be initialized)
[SRS_BSW_00437] Nolnit--Area in RAM	Not applicable (the module does not need this feature)
[SRS_BSW_00168] Diagnostic Interface of SW components	Not applicable (the module does not support a special diagnostic interface)
[SRS_BSW_00407] Function to read out published parameters	Chapter 8.3.3
[SRS_BSW_00423] Usage of SW-C template to describe BSW modules with AUTOSAR Interfaces	Not applicable (this module does not provide an AUTOSAR interface)
[SRS_BSW_00424] BSW main processing function task allocation	Not applicable (this module does not provide a main function)
[SRS_BSW_00425] Trigger conditions for schedulable objects	Not applicable (this module does not provide any scheduled objects)
[SRS_BSW_00426] Exclusive areas in BSW modules	Not applicable (this module does not have any exclusive areas)
[SRS_BSW_00427] ISR description for BSW modules	Not applicable (this module does not implement any ISRs)
[SRS_BSW_00428] Execution order dependencies of main processing functions	Not applicable (this module does not provide a main function)
[SRS_BSW_00429] Restricted BSW OS functionality access	Not applicable (this module does not use any OS functions or objects)
[SRS_BSW_00432] Modules should have separate main processing functions for read/receive and write/transmit data path	Not applicable (this module does not provide a main function, much less two)
[SRS_BSW_00433] Calling of main processing functions	Not applicable (requirement on the BSW task scheduler)
[SRS_BSW_00450] Main Function Processing for Un-Initialized Modules	Not applicable (this module does not provide a main function)
[SRS_BSW_00442] Debugging Support in Modules	Not applicable (this module does not have internal states)
[SRS_BSW_00336] Shutdown interface	Not applicable (the module does not need to be shut down)
[SRS_BSW_00337] Classification of errors	<a href="#">SWS_WdgIf_00006</a> , <a href="#">SWS_WdgIf_00009</a>
[SRS_BSW_00338] Detection and Reporting of development errors	<a href="#">SWS_WdgIf_00007</a>

[SRS_BSW_00369] Do not return development error codes via API	Chapter 8.3
[SRS_BSW_00339] Reporting of production relevant error status	Not applicable (no production relevant errors)
[BSW00421] Reporting of production relevant error events	Not applicable (no production relevant errors)
[SRS_BSW_00422] Pre-de-bouncing of production relevant error status	Not applicable (requirement for DEM, not a general requirement)
[SRS_BSW_00417] Reporting of Error Events by Non-Basic Software	Not applicable (this is a BSW module)
[SRS_BSW_00323] API parameter checking	<a href="#">SWS_WdgIf_00028</a>
[SRS_BSW_00004] Version check	<a href="#">SWS_WdgIf_00005</a>
[SRS_BSW_00409] Header files for production code error IDs	<a href="#">SWS_WdgIf_00009</a>
[SRS_BSW_00385] List possible error notifications	<a href="#">SWS_WdgIf_00006</a>
[SRS_BSW_00386] Configuration for detecting an error	<a href="#">SWS_WdgIf_00006</a> , <a href="#">SWS_WdgIf_00007</a>
[SRS_BSW_00161] Microcontroller abstraction	Not applicable (requirement on AUTOSAR architecture, not a single module)
[SRS_BSW_00162] ECU layout abstraction	Not applicable (requirement on AUTOSAR architecture, not a single module)
[SRS_BSW_00005] No hard coded horizontal interfaces within MCAL	Not applicable (requirement on AUTOSAR architecture, not a single module)
[SRS_BSW_00415] User dependent include files	Not applicable (only one user for this module)
[SRS_BSW_00164] Implementation of interrupt service routines	Not applicable (this module does not implement any ISRs)
[SRS_BSW_00325] Runtime of interrupt service routines	Not applicable (this module does not implement any ISRs)
[SRS_BSW_00326] Transition from ISRs to OS tasks	Not applicable (this module does not implement any ISRs)
[SRS_BSW_00342] Usage of source code and object code	Not applicable (requirement on AUTOSAR architecture, not a single module)
[SRS_BSW_00343] Specification and configuration of time	Not applicable (no configurable timings)
[SRS_BSW_00160] Human-readable configuration data	Implicitly fulfilled through XML
[SRS_BSW_00007] HIS MISRA C	Not applicable (requirement on implementation, not on specification)
[SRS_BSW_00300] Module naming convention	Not applicable (requirement on implementation, not on specification)
[SRS_BSW_00413] Accessing instances of BSW modules	Not applicable (this is not a driver)
[SRS_BSW_00347] Naming separation of different instances of BSW drivers	Not applicable (this is not a driver)
[SRS_BSW_00441] Enumeration literals and #define naming convention	Not applicable (requirement on implementation)
[SRS_BSW_00305] Data types naming convention	Chapter 8.2
[SRS_BSW_00307] Global variables naming convention	Not applicable (requirement on the implementation, not on the

	specification)
[SRS_BSW_00310] API naming convention	Chapters 8.3.1, 8.3.2, 8.3.3
[SRS_BSW_00373] Main processing function naming convention	Not applicable (this module does not provide a main processing function)
[SRS_BSW_00327] Error values naming convention	<a href="#">SWS_WdgIf_00006</a>
[SRS_BSW_00335] Status values naming convention	Not applicable (this module does not provide an internal status variable)
[SRS_BSW_00350] Development error detection keyword	<a href="#">SWS_WdgIf_00007</a> , <a href="#">SWS_WdgIf_00031</a> , <a href="#">SWS_WdgIf_00032</a>
[SRS_BSW_00408] Configuration parameter naming convention	Chapter 10.2
[SRS_BSW_00410] Compiler switches shall have defined values	Chapter 10.2
[SRS_BSW_00411] Get version info keyword	Chapter 10.2
[SRS_BSW_00346] Basic set of module files	Chapter 5.1
[SRS_BSW_00158] Separation of configuration from implementation	Chapter 5.1
[SRS_BSW_00314] Separation of interrupt frames and service routines	Not applicable (this module does not implement any ISRs)
[SRS_BSW_00370] Separation of callback interface from API	Not applicable (this module does not provide any callback routines)
[SRS_BSW_00435] Module Header File Structure for the Basic Software Scheduler	Chapter 5.1.2
[SRS_BSW_00436] Module Header File Structure for the Basic Software Memory Mapping	Chapter 5.1.2
[SRS_BSW_00447] Standardizing Include file structure of BSW Modules Implementing Autosar Service	Not applicable (this module does not implement an Autosar Service)
[SRS_BSW_00348] Standard type header	<a href="#">SWS_WdgIf_00002</a>
[SRS_BSW_00353] Platform specific type header	<a href="#">SWS_WdgIf_00002</a>
[SRS_BSW_00361] Compiler specific language extension header	<a href="#">SWS_WdgIf_00002</a>
[SRS_BSW_00301] Limit imported information	Chapter 5.1.2
[SRS_BSW_00302] Limit exported information	Chapter 5.1.2
[SRS_BSW_00328] Avoid duplication of code	Not applicable (requirement on the implementation, not on the specification)
[SRS_BSW_00312] Shared code shall be reentrant	Not applicable (requirement on the implementation, not on the specification)
[SRS_BSW_00006] Platform independency	Fulfilled by the design of the WdgIf as an abstraction above the Wdg Driver(s)
[SRS_BSW_00439] Declaration of interrupt handlers and ISRs	Not applicable (this module does not implement any ISRs)
[SRS_BSW_00448] Module SWS shall not contain requirements from Other Modules	This is a process requirement; it should be fulfilled throughout the Spec.
[SRS_BSW_00449] BSW Service APIs used by Autosar Application Software shall return a Std_ReturnType	Not applicable (this module does not implement an Autosar Service)
[SRS_BSW_00357] Standard API return type	<a href="#">SWS_WdgIf_00046</a>
[SRS_BSW_00377] Module specific API return types	Not applicable (no module specific return types)
[SRS_BSW_00304] AUTOSAR integer data types	Not applicable (requirement on implementation, not for specification)

[SRS_BSW_00355] Do not redefine AUTOSAR integer data types	Not applicable (requirement on implementation, not for specification)
[SRS_BSW_00378] AUTOSAR boolean type	Not applicable (requirement on implementation, not for specification)
[SRS_BSW_00306] Avoid direct use of compiler and platform specific keywords	Not applicable (requirement on implementation, not for specification)
[SRS_BSW_00308] Definition of global data	Not applicable (requirement on implementation, not for specification)
[SRS_BSW_00309] Global data with read-only constraint	Not applicable (requirement on implementation, not for specification)
[SRS_BSW_00371] Do not pass function pointers via API	Not applicable (no function pointers in this specification)
[SRS_BSW_00358] Return type of init() functions	Not applicable (this module does not need to be initiaized)
[SRS_BSW_00414] Parameter of init function	Not applicable (this module does not need to be initiaized)
[SRS_BSW_00376] Return type and parameters of main processing functions	Not applicable (this module does not provide a main processing function)
[SRS_BSW_00359] Return type of callback functions	Not applicable (this module does not provide any callback routines)
[SRS_BSW_00360] Parameters of callback functions	Not applicable (this module does not provide any callback routines)
[SRS_BSW_00440] Function prototype for callback functions of AUTOSAR Services	Not applicable (this module does not implement an Autosar Service)
[SRS_BSW_00329] Avoidance of generic interfaces	Chapters 8.3.1, 8.3.2, 8.3.3 (explicit interfaces defined)
[SRS_BSW_00330] Usage of macros / inline functions instead of functions	Not applicable (requirement on implementation, not for specification)
[SRS_BSW_00331] Separation of error and status values	<a href="#">SWS WdgIf 00007</a> applicable (this module does not provide any internal status variable)
[BSW00443] Enabling / disabling defensive behavior of BSW	No concrete requirements for defensive behavior of Wdg were requested.
[BSW00444] Error reporting and logging for defensive behavior	No concrete requirements for defensive behavior of Wdg were requested.
[BSW00445] Protection against untimely call of BSW initialization	Not applicable (this module needs no initialization)
[BSW00446] Protection against untimely call of BSW de-initialization	Not applicable (this module needs no de-initialization)
[SRS_BSW_00009] Module User Documentation	Not applicable (requirement on documentation, not on specification)
[SRS_BSW_00401] Documentation of multiple instances of configuration parameters	Not applicable (this module does not need to be initiaized)
[SRS_BSW_00172] Compatibility and documentation of scheduling strategy	Not applicable (no internal scheduling policy)
[SRS_BSW_00010] Memory resource documentation	Not applicable (requirement on documentation, not on specification)
[SRS_BSW_00333] Documentation of callback function context	Not applicable (this module does not provide any callback

	routines)
[SRS_BSW_00374] Module vendor identification	<a href="#">SWS WdgIf 00034</a>
[SRS_BSW_00379] Module identification	<a href="#">SWS WdgIf 00034</a>
[SRS_BSW_00003] Version identification	<a href="#">SWS WdgIf 00034</a>
[SRS_BSW_00318] Format of module version numbers	<a href="#">SWS WdgIf 00034</a> ,
[SRS_BSW_00321] Enumeration of module version numbers	Not applicable (requirement on implementation, not for specification)
[SRS_BSW_00341] Microcontroller compatibility documentation	Not applicable (requirement on documentation, not on specification)
[SRS_BSW_00334] Provision of XML file	Not applicable (requirement on documentation, not on specification)

Document: General Requirements on SPAL [3]

Note: This module does not belong to the MCAL layer, but to the Onboard Device Abstraction Layer. Nonetheless certain MCAL requirements might be applicable.

<b>Requirement</b>	<b>Satisfied by</b>
[SRS_SPAL_12263] Object code compatible configuration concept	Not applicable (the module is not configurable at runtime)
[SRS_SPAL_12056] Configuration of notification mechanisms	Not applicable (the module does not support any notification mechanism)
[SRS_SPAL_12267] Configuration of wake-up sources	Not applicable (the module does not wake up the ECU / MCU)
[SRS_SPAL_12057] Driver module initialization	Not applicable (the module does not support initialization)
[SRS_SPAL_12125] Initialization of hardware resources	Not applicable (the module does not support initialization)
[SRS_SPAL_12163] Driver module de-initialization	Not applicable (the module does not support initialization)
[SRS_SPAL_12461] Responsibility for register initialization	Not applicable (the module does not support initialization)
[SRS_SPAL_12462] Provide settings for register initialization	Not applicable (the module does not support initialization)
[SRS_SPAL_12463] Combine and forward settings for register initialization	Not applicable (requirement on configuration, not on specification)
[SRS_SPAL_12068] MCAL initialization sequence	Not applicable (not a requirement for a SW module but for system integration)
[SRS_SPAL_12069] Wake-up notification of ECU State Manager	Not applicable (the module does not wake up the ECU / MCU)
[SRS_SPAL_00157] Notification mechanisms of drivers and handlers	Not applicable (the module does not support any notification mechanism)
[BSW12155] Prototypes of callback functions	Not applicable (the module does not provide any callback functions)
[SRS_SPAL_12169] Control of operation mode	Not applicable (the module does not support different operating modes)
[SRS_SPAL_12063] Raw value mode	Not applicable (the module does not provide any data to the user)



[SRS_SPAL_12075] Use of application buffers	Not applicable (the module does not operate on buffers)
[SRS_SPAL_12129] Resetting of interrupt flags	Not applicable (the module does not implement any interrupt service routines)
[SRS_SPAL_12064] Change of operation mode during running operation	Not applicable (the module does not support different operating modes)
[SRS_SPAL_12448] Behavior after development error detection	<a href="#">SWS_WdgIf_00028</a>
[SRS_SPAL_12067] Setting of wake-up conditions	Not applicable (the module does not wake up the ECU / MCU)
[SRS_SPAL_12077] Non-blocking implementation	Not applicable (no long term loops)
[SRS_SPAL_12078] Runtime and memory efficiency	Not applicable (requirement for implementation, not for specification)
[SRS_SPAL_12092] Access to drivers	Not applicable (only interface to watchdog drivers)
[SRS_SPAL_12265] Configuration data shall be kept constant	Not applicable (no configuration data)
[SRS_SPAL_12264] Specification of configuration items	Chapter 10.2

#### Document: Requirements on Watchdog Driver [8]

This document states also requirements for the Watchdog Interface.

<b>Requirement</b>	<b>Satisfied by</b>
[SRS_Wdg_12015] Configuration of watchdog modes	Not applicable (this is a requirement for the Wdg Driver only)
[SRS_Wdg_12105] Watchdog initialization	Not applicable (the module does not support initialization)
[SRS_Wdg_12106] Prohibit disabling of watchdog	Not applicable (this is a requirement for the Wdg Driver only)
[SRS_Wdg_12018] Watchdog mode selection service	<a href="#">SWS_WdgIf_00016</a>
[SRS_Wdg_12019] Watchdog trigger service	Not applicable (this is a requirement for the Wdg Driver only)
[SRS_Wdg_12165] Functional scope	<a href="#">SWS_WdgIf_00017</a> , <a href="#">SWS_WdgIf_00026</a>
[SRS_Wdg_12166] SPI channel configuration	Not applicable (this is a requirement for the Wdg Driver only)
[SRS_Wdg_12167] Common Watchdog API	<a href="#">SWS_WdgIf_00017</a> , <a href="#">SWS_WdgIf_00026</a>
[SRS_Wdg_12168] Microcontroller independency	Not applicable (requirement for implementation, not for specification)

#### Document: Requirements on Memory Hardware Abstraction Layer [4]

These requirements also hold for the Onboard Device Abstraction Layer, as far as applicable, and thus for the Watchdog Interface.

<b>Requirement</b>	<b>Satisfied by</b>
SRS_MemHwAb_14019 Provide uniform access to underlying memory abstraction modules	<a href="#">SWS_WdgIf_00017</a> , <a href="#">SWS_WdgIf_00026</a>
SRS_MemHwAb_14020 Selection of underlying memory abstraction modules	<a href="#">SWS_WdgIf_00018</a>

SRS_MemHwAb_14021 Number of underlying memory abstraction modules	<a href="#">SWS_Wdglf_00019</a> , <a href="#">SWS_Wdglf_00020</a>
SRS_MemHwAb_14022 Preserving of functionality	<a href="#">SWS_Wdglf_00003</a> , <a href="#">WDGIF004</a>
SRS_MemHwAb_14023 Parameter checking	<a href="#">SWS_Wdglf_00005</a> , <a href="#">SWS_Wdglf_00028</a>
SRS_MemHwAb_14024 Preserving of timing behavior	<a href="#">SWS_Wdglf_00003</a> ,
SRS_MemHwAb_14025 Efficient implementation	<a href="#">SWS_Wdglf_00019</a> , <a href="#">SWS_Wdglf_00020</a>

## 7 Functional specification

### 7.1 General behavior

**[SWS\_WdgIf\_00003]** The Watchdog Interface shall not add functionality to the watchdog drivers. Also the Watchdog Interface does not abstract from watchdog properties like toggle or window mode, timeout periods etc. that is it does not hide any features of the underlying watchdog driver and watchdog hardware. (SRS\_MemHwAb\_14022, SRS\_MemHwAb\_14024)

### 7.2 Error classification

**[SWS\_WdgIf\_00006]** The following errors and exceptions shall be detectable by the Watchdog Interface depending on its configuration (development / production). (SRS\_BSW\_00337, SRS\_BSW\_00385, SRS\_BSW\_00386, SRS\_BSW\_00327)

Type or error	Relevance	Related error code	Value [hex]
API service called with wrong device index parameter	Development	WDGIF_E_PARAM_DEVICE	0x01
Invalid pointer in parameter list	Development	WDGIF_E_INV_POINTER	0x02

**[SWS\_WdgIf\_00030]** Development error values are of type uint8. ()

### 7.3 Error detection

For details refer to the chapter 7.3 “Error Detection” in *SWS\_BSWGeneral*.

### 7.4 Error notification

**[SWS\_WdgIf\_00009]** A detection of errors not listed in the table above [\[SWS\\_WdgIf\\_00006\]](#) shall not be implemented. (SRS\_BSW\_00337, SRS\_BSW\_00409)

### 7.5 API parameter checking

**[SWS\_WdgIf\_00028]** If more than one watchdog driver is configured and the development error detection is enabled for this module, the parameter `DeviceIndex` shall be checked for being an existing device within the module’s services. Detected errors shall be reported to the Development Error Tracer (DET) with the error code `WDGIF_E_PARAM_DEVICE` and the called service shall not be executed. If the called

function has a return value this value shall be set `E_NOT_OK. J`(SRS\_BSW\_00323, SRS\_SPAL\_12448, SRS\_MemHwAb\_14023)

## 7.6 Debugging

For details refer to the chapter 7.1.17 “Debugging support” in *SWS\_BSWGeneral*.

## 8 API specification

### 8.1 Imported types

In this chapter all types included from the following files are listed:

[SWS\_WdgIf\_00041]Imported Type

┌

<i>Module</i>	<i>Imported Type</i>
Std_Types	Std_ReturnType
	Std_VersionInfoType

└()

### 8.2 Type definitions

Note: The implementer of the Watchdog Interface shall not change or extend the type definitions of the Watchdog Interface for a specific watchdog device or platform.

#### 8.2.1 WdgIf\_ModeType

[SWS\_WdgIf\_00061]WdgIf\_ModeType

┌

<b>Name:</b>	WdgIf_ModeType	
<b>Type:</b>	Enumeration	
<b>Range:</b>	WDGIF_OFF_MODE	In this mode, the watchdog driver is disabled (switched off).
	WDGIF_SLOW_MODE	In this mode, the watchdog driver is set up for a long timeout period (slow triggering).
	WDGIF_FAST_MODE	In this mode, the watchdog driver is set up for a short timeout period (fast triggering).
<b>Description:</b>	Mode type of the WdgIf module	

└()

[SWS\_WdgIf\_00016]┌The WdgIf\_ModeType values shall be passed as parameters to the watchdog drivers mode switching function

(Wdg\_SetMode).└(SRS\_Wdg\_12018)

Note: The hardware specific settings behind these modes are given in the watchdog drivers configuration set.

### 8.3 Function definitions

[SWS\_WdgIf\_00017]┌The Watchdog Interface shall map the APIs specified in this chapter to the API of the underlying drivers. For functional behavior refer to the specification of the watchdog driver└(SRS\_Wdg\_12165, SRS\_Wdg\_12167, SRS\_MemHwAb\_14019)

**[SWS\_WdgIf\_00018]** The Watchdog Interface shall use the parameter `DeviceIndex` for selection of watchdog drivers. If only one watchdog driver is configured, the parameter `DeviceIndex` shall be ignored. (SRS\_MemHwAb\_14020)

**[SWS\_WdgIf\_00013]** The data type for the watchdog device index shall be `uint8.DeviceIndex` shall provide a zero-based consecutive index. ()

**[SWS\_WdgIf\_00019]** If only one watchdog driver is configured, the Watchdog Interface shall cause no runtime overhead when mapping the Watchdog Interface API to the API of the corresponding Watchdog Driver. (SRS\_MemHwAb\_14021, SRS\_MemHwAb\_14025)

Implementation hint: This could be done by using macros as for example

```
#define WdgIf_SetMode(DeviceIndex, WdgMode) \
    Wdg_SetMode(WdgMode)
```

**[SWS\_WdgIf\_00020]** If more than one watchdog driver is configured, the Watchdog Interface shall use efficient mechanisms to map the API calls to the appropriate watchdog driver. (SRS\_MemHwAb\_14021, SRS\_MemHwAb\_14025)

Implementation hint: One solution is to use tables of pointers to functions where the parameter `DeviceIndex` is used as array index, for example

```
#define WdgIf_SetMode(DeviceIndex, WdgMode) \
    SetModeFctPtr[DeviceIndex](WdgMode)
```

Note: The service IDs are related to the service IDs of the watchdog driver specification (see [5]). For that reason, they may not start with 0.

### 8.3.1 WdgIf\_SetMode

**[SWS\_WdgIf\_00042]** WdgIf\_SetMode

┌

<b>Service name:</b>	WdgIf_SetMode	
<b>Syntax:</b>	Std_ReturnType WdgIf_SetMode( uint8 DeviceIndex, WdgIf_ModeType WdgMode )	
<b>Service ID[hex]:</b>	0x01	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Non Reentrant	
<b>Parameters (in):</b>	DeviceIndex	Identifies the Watchdog Driver instance.
	WdgMode	The watchdog driver mode (see Watchdog Driver).
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	Std_ReturnType	--

<b>Description:</b>	Map the service WdgIf_SetMode to the service Wdg_SetMode of the corresponding Watchdog Driver.
---------------------	--

⌋()

**[SWS\_WdgIf\_00057]**⌈WdgIf\_SetMode shall return the value which it gets from the service Wdg\_SetMode of the corresponding Watchdog Driver.⌋()

Possible content of the return value is specified by the Watchdog Driver, see [5].

### 8.3.2 WdgIf\_SetTriggerCondition

**[SWS\_WdgIf\_00044]**WdgIf\_SetTriggerCondition

⌈

<b>Service name:</b>	WdgIf_SetTriggerCondition	
<b>Syntax:</b>	<pre>void WdgIf_SetTriggerCondition(     uint8 DeviceIndex,     uint16 Timeout )</pre>	
<b>Service ID[hex]:</b>	0x02	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Non Reentrant	
<b>Parameters (in):</b>	DeviceIndex	Identifies the Watchdog Driver instance.
	Timeout	Timeout value (milliseconds) for setting the trigger counter.
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	None	
<b>Return value:</b>	None	
<b>Description:</b>	Map the service WdgIf_SetTriggerCondition to the service Wdg_SetTriggerCondition of the corresponding Watchdog Driver.	

⌋()

### 8.3.3 WdgIf\_GetVersionInfo

**[SWS\_WdgIf\_00046]**WdgIf\_GetVersionInfo

⌈

<b>Service name:</b>	WdgIf_GetVersionInfo	
<b>Syntax:</b>	<pre>void WdgIf_GetVersionInfo(     Std_VersionInfoType* VersionInfoPtr )</pre>	
<b>Service ID[hex]:</b>	0x03	
<b>Sync/Async:</b>	Synchronous	
<b>Reentrancy:</b>	Reentrant	
<b>Parameters (in):</b>	None	
<b>Parameters (inout):</b>	None	
<b>Parameters (out):</b>	VersionInfoPtr	Pointer to where to store the version information of this module.
<b>Return value:</b>	None	
<b>Description:</b>	Returns the version information.	

⌋(SRS\_BSW\_00357)

**[SWS\_WdgIf\_00058]** If development error detection for the Watchdog Interface module is enabled, then the function `WdgIf_GetVersionInfo` shall check whether the parameter `VersionInfoPtr` is a NULL pointer (`NULL_PTR`). If `VersionInfoPtr` is a NULL pointer, then the function `WdgIf_GetVersionInfo` shall raise the development error `WDGIF_E_INV_POINTER` (i.e. invalid pointer) and return. `⌋()`

## 8.4 Call-back notifications

This module does not provide any callback functions.

## 8.5 Scheduled functions

This module does not need any scheduled functions.

## 8.6 Expected interfaces

In this chapter all interfaces required from other modules are listed.

### 8.6.1 Mandatory interfaces

This chapter defines all interfaces which are required to fulfill the core functionality of the module.

#### **[SWS\_WdgIf\_00047]**

⌈

<i>API function</i>	<i>Description</i>
<code>Wdg_SetMode</code>	Switches the watchdog into the mode <code>Mode</code> .
<code>Wdg_SetTriggerCondition</code>	Sets the timeout value for the trigger counter.

⌋()

### 8.6.2 Optional interfaces

This chapter defines all interfaces which are required to fulfill an optional functionality of the module.

#### **[SWS\_WdgIf\_00048]**

⌈

<i>API function</i>	<i>Description</i>
<code>Det_ReportError</code>	Service to report development errors.

⌋()

### 8.6.3 Configurable interfaces

There are no configurable interfaces for this module.



## 9 Sequence diagrams

Refer to specification of watchdog driver [5].

## 10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. In order to support the specification Chapter 10.1 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave Chapter 10.1 in the specification to guarantee comprehension.

Chapter 10.2 specifies the structure (containers) and the parameters of the module Wdgf.

Chapter 10.3 specifies published information of the module Wdgf.

### 10.1 How to read this chapter

For details refer to the chapter 10.1 “Introduction to configuration specification” in *SWS\_BSWGeneral*.

## 10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters are described in chapters 7 and 8.

### 10.2.1 Variants

[SWS\_Wdglf\_00056] This module shall support only the configuration variant VARIANT-PRE-COMPILE. Only parameters with "Pre-compile time" configuration are allowed in this variant. ]()

### 10.2.2 Wdglf

<b>SWS Item</b>	<b>ECUC_Wdglf_00033 :</b>
<b>Module Name</b>	Wdglf
<b>Module Description</b>	Configuration of the Wdglf (Watchdog Interface) module.

Included Containers		
Container Name	Multiplicity	Scope / Dependency
WdglfDevice	1..*	It contains the information for the selection of a particular Watchdog device in case multiple Watchdog drivers are connected.
WdglfGeneral	1	This container collects all generic watchdog interface parameters.

### 10.2.3 WdglfGeneral

<b>SWS Item</b>	<b>ECUC_Wdglf_00001 :</b>
<b>Container Name</b>	WdglfGeneral{Wdglf_ModuleConfiguration}
<b>Description</b>	This container collects all generic watchdog interface parameters.
<b>Configuration Parameters</b>	

<b>SWS Item</b>	<b>ECUC_Wdglf_00005 :</b>		
<b>Name</b>	WdglfDevErrorDetect {WDGIF_DEV_ERROR_DETECT}		
<b>Description</b>	Pre-processor switch for enabling the development error detection and reporting. true: Development error detection enabled false: Development error detection disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		
<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

<b>SWS Item</b>	<b>ECUC_Wdglf_00003 :</b>		
<b>Name</b>	WdglfVersionInfoApi {WDGIF_VERSION_INFO_API}		
<b>Description</b>	Pre-processor switch to enable / disable the service returning the version information. true: Version information service enabled false: Version information service disabled		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucBooleanParamDef		

<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

#### 10.2.4 WdgIfDevice

<b>SWS Item</b>	<b>ECUC_WdgIf_00002 :</b>		
<b>Container Name</b>	WdgIfDevice		
<b>Description</b>	It contains the information for the selection of a particular Watchdog device in case multiple Watchdog drivers are connected.		
<b>Configuration Parameters</b>			

<b>SWS Item</b>	<b>ECUC_WdgIf_00006 :</b>		
<b>Name</b>	WdgIfDeviceIndex		
<b>Description</b>	Represents the watchdog interface ID so that it can be referenced by the watchdog manager.		
<b>Multiplicity</b>	1		
<b>Type</b>	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
<b>Range</b>	0 .. 255		
<b>Default value</b>	--		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: ECU		

<b>SWS Item</b>	<b>ECUC_WdgIf_00007 :</b>		
<b>Name</b>	WdgIfDriverRef		
<b>Description</b>	Reference to the watchdog drivers that are controlled by the watchdog interface.		
<b>Multiplicity</b>	1		
<b>Type</b>	Symbolic name reference to [ WdgGeneral ]		
<b>ConfigurationClass</b>	<b>Pre-compile time</b>	X	All Variants
	<b>Link time</b>	--	
	<b>Post-build time</b>	--	
<b>Scope / Dependency</b>	scope: local		

**No Included Containers**

### 10.3 Published parameters

For details refer to the chapter 10.3 “Published Information” in *SWS\_BSWGeneral*.

## 11 Not applicable requirements

**[SWS\_Wdglf\_00999]** These requirements are not applicable to this

specification. (SRS\_BSW\_00344, SRS\_BSW\_00404, SRS\_BSW\_00405, SRS\_BSW\_00159, SRS\_BSW\_00170, SRS\_BSW\_00380, SRS\_BSW\_00419, SRS\_BSW\_00412, SRS\_BSW\_00383, SRS\_BSW\_00387, SRS\_BSW\_00398, SRS\_BSW\_00399, SRS\_BSW\_00400, SRS\_BSW\_00438, SRS\_BSW\_00375, SRS\_BSW\_00101, SRS\_BSW\_00416, SRS\_BSW\_00406, SRS\_BSW\_00437, SRS\_BSW\_00168, SRS\_BSW\_00423, BSW0424, SRS\_BSW\_00425, SRS\_BSW\_00426, SRS\_BSW\_00427, SRS\_BSW\_00428, SRS\_BSW\_00429, SRS\_BSW\_00432, SRS\_BSW\_00433, SRS\_BSW\_00450, SRS\_BSW\_00442, SRS\_BSW\_00336, SRS\_BSW\_00339, BSW00421, SRS\_BSW\_00422, SRS\_BSW\_00417, SRS\_BSW\_00161, SRS\_BSW\_00162, SRS\_BSW\_00005, SRS\_BSW\_00415, SRS\_BSW\_00164, SRS\_BSW\_00325, SRS\_BSW\_00326, SRS\_BSW\_00342, SRS\_BSW\_00343, SRS\_BSW\_00007, SRS\_BSW\_00300, SRS\_BSW\_00413, SRS\_BSW\_00347, SRS\_BSW\_00441, SRS\_BSW\_00307, SRS\_BSW\_00373, SRS\_BSW\_00335, SRS\_BSW\_00314, SRS\_BSW\_00370, SRS\_BSW\_00447, SRS\_BSW\_00328, SRS\_BSW\_00312, SRS\_BSW\_00439, SRS\_BSW\_00449, SRS\_BSW\_00377, SRS\_BSW\_00304, SRS\_BSW\_00355, SRS\_BSW\_00378, SRS\_BSW\_00306, SRS\_BSW\_00308, SRS\_BSW\_00309, SRS\_BSW\_00371, SRS\_BSW\_00358, SRS\_BSW\_00414, SRS\_BSW\_00376, SRS\_BSW\_00359, SRS\_BSW\_00360, SRS\_BSW\_00440, SRS\_BSW\_00330, SRS\_BSW\_00331, BSW00445, BSW00446, BSW00445009, BSW0044500401, BSW00445172, BSW00445010, BSW0044500333, BSW004450032100341, BSW0044500334, BSW0044512263, BSW0044512056, BSW0044512267, BSW0044512057, BSW0044512125, BSW0044512163, BSW0044512461, BSW0044512462, BSW0044512463, BSW0044512068, BSW0044512069, BSW00445157, BSW0044512155, BSW0044512169, BSW0044512063, BSW0044512075, BSW0044512129, BSW0044512064, BSW0044512067, BSW0044512077, BSW0044512078, BSW0044512092, BSW0044512265, BSW0044512015, BSW0044512105, BSW0044512106, BSW0044512019, BSW0044512166, BSW0044512168)