

Document Title	Specification of CAN Transceiver Driver
Document Owner	AUTOSAR
Document Responsibility	AUTOSAR
Document Identification No	071
Document Classification	Standard
Document Status	Final
Part of AUTOSAR Release	4.2.2

Document Change History		
Release	Changed by	Change Description
4.2.2	AUTOSAR Release Management	<ul style="list-style-type: none"> Clarification regarding wake-up flag indication Editorial changes
4.2.1	AUTOSAR Release Management	<ul style="list-style-type: none"> Revised the configuration of CAN Transceiver. Minor corrections in wait state functionality. Clarification regarding the wakeup sources.
4.1.3	AUTOSAR Release Management	<ul style="list-style-type: none"> Revised configuration for SPI interface. Revised naming convention for transceiver driver
4.1.2	AUTOSAR Release Management	<ul style="list-style-type: none"> Removed 'Timing' row from scheduled functions API table. Editorial changes Removed chapter(s) on change documentation
4.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> Updated sequence diagrams Reworked according to the new SWS_BSWGeneral
4.0.3	AUTOSAR Administration	<ul style="list-style-type: none"> Added support for Partial Networking Implemented Production error concept Updated Baud rate configuration parameter handling Added support to detect that power-on was caused by CAN communication Reentrancy attribute is corrected for APIs Corrections in few requirements Optional Interfaces Table is corrected
4.0.1	AUTOSAR Administration	<ul style="list-style-type: none"> CanTrcv state names changed and state diagram modified Usage of SBCs are no longer restricted Mode switch requests to the current mode are allowed CanTrvc driver has to invoke CanIf_TrvcModeIndication after each mode switch request, when the requested mode has been reached

Document Change History		
Release	Changed by	Change Description
3.1.4	AUTOSAR Administration	<ul style="list-style-type: none"> • Wakeup event reporting: In R4.0, CanTrcv stores wakeup events. CanIf invokes function CanTrcv_CheckWakeup() periodically to check for wakeup events. • Wakeup modes: In R4.0, wakeup through interrupt mechanism is not supported. Only POLLING and NOT_SUPPORTED wakeup modes are available in CanTrcv. • Sleep Wait Count added: Wait count for transitioning into sleep mode (CanTrcvSleepWaitCount) added. • Legal disclaimer revised
3.1.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Legal disclaimer revised
3.0.1	AUTOSAR Administration	<ul style="list-style-type: none"> • Changed API name CanIf_TrvcWakeupByBus to CanIf_SetWakeupEvent • New error code CANTRCV_E_PARAM_TRCV_WAKEUP_MODE has been added. • Output parameter in the API's CanTrcv_GetOpMode, CanTrcv_GetBusWuReason and CanTrcv_GetVersionInfo is changed to pointer type. • API CanTrcv_CB_WakeupByBus has been modified • Document meta information extended • Small layout adaptations made
2.1.15	AUTOSAR Administration	<ul style="list-style-type: none"> • CAN transceiver driver is below CAN interface. All API access from higher layers are routed through CAN interface. • One CAN transceiver driver used per CAN transceiver hardware type. For different CAN transceiver hardware types different CAN transceiver drivers are used. One CAN transceiver driver supports all CAN transceiver hardware of same type • Legal disclaimer revised • Release Notes added • "Advice for users" revised • "Revision Information" added
2.0	AUTOSAR Administration	<ul style="list-style-type: none"> • Initial release

Disclaimer

This specification and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

Advice for users

AUTOSAR specifications may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the specifications for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such specifications, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.

Table of Content

1	Introduction.....	6
1.1	Goal of CAN Transceiver Driver	7
1.2	Explicitly uncovered CAN transceiver functionality	7
1.3	Single wire CAN transceivers according SAE J2411	7
2	Acronyms and abbreviations	8
3	Related documentation.....	9
3.1	Input documents	9
3.2	Related standards and norms	9
3.3	Related specification	9
4	Constraints and assumptions	10
4.1	Limitations	10
4.2	Applicability to car domains	10
5	Dependencies to other modules.....	11
5.1	File structure.....	11
5.1.1	Code file structure.....	11
5.1.2	Header file structure.....	12
6	Requirements Traceability	13
7	Functional specification	23
7.1	CAN transceiver driver operation modes.....	23
7.1.1	Operation mode switching	24
7.2	CAN transceiver hardware operation modes.....	24
7.2.1	Example for temporary “Go-To-Sleep” mode	25
7.2.2	Example for “PowerOn/ListenOnly” mode.....	25
7.3	CAN transceiver wake up types	25
7.4	Enabling/Disabling wakeup notification	26
7.5	CAN transceiver wake up modes	26
7.6	Error classification	27
7.6.1	Development Errors	27
7.6.2	Production Errors	27
7.6.3	Extended Production Errors.....	27
7.7	Preconditions for driver initialization	28
7.8	Instance concept	28
7.9	Wait states.....	29
7.10	Transceivers with selective wakeup functionality	29
8	API specification.....	30
8.1	Imported types.....	30
8.2	Type definitions	31
8.3	Function definitions.....	32
8.3.1	CanTrcv_Init.....	32
8.3.2	CanTrcv_SetOpMode	33
8.3.3	CanTrcv_GetOpMode.....	35
8.3.4	CanTrcv_GetBusWuReason.....	36
8.3.5	CanTrcv_GetVersionInfo	37
8.3.6	CanTrcv_SetWakeupMode.....	37

8.3.7	CanTrcv_GetTrcvSystemData	39
8.3.8	CanTrcv_ClearTrcvWufFlag.....	40
8.3.9	CanTrcv_ReadTrcvTimeoutFlag	40
8.3.10	CanTrcv_ClearTrcvTimeoutFlag.....	41
8.3.11	CanTrcv_ReadTrcvSilenceFlag.....	42
8.3.12	CanTrcv_CheckWakeup.....	42
8.3.13	CanTrcv_SetPNActivationState.....	43
8.3.14	CanTrcv_CheckWakeFlag.....	44
8.4	Scheduled functions	44
8.4.1	CanTrcv_MainFunction.....	44
8.4.2	CanTrcv_MainFunctionDiagnostics	45
8.5	Call-back notifications.....	46
8.6	Expected Interfaces.....	46
8.6.1	Mandatory Interfaces	46
8.6.2	Optional Interfaces.....	46
8.6.3	Configurable interfaces	47
9	Sequence diagram	48
9.1	Wake up with valid validation	48
9.2	Interaction with DIO module	49
9.3	De-Initialization (SPI Synchronous).....	52
9.4	De-Initialization (SPI Asynchronous).....	54
10	Configuration specification.....	56
10.1	How to read this chapter.....	56
10.2	Containers and configuration parameters.....	57
10.2.1	Variants	57
10.2.2	CanTrcv.....	57
10.2.3	CanTrcvGeneral	57
10.2.4	CanTrcvConfigSet	61
10.2.5	CanTrcvChannel.....	62
10.2.6	CanTrcvAccess	67
10.2.7	CanTrcvDioAccess	67
10.2.8	CanTrcvDioChannelAccess.....	67
10.2.9	CanTrcvSpiAccess	68
10.2.10	CanTrcvSpiSequence.....	69
10.2.11	CanTrcvDemEventParameterRefs	70
10.2.12	CanTrcvPartialNetwork.....	71
10.2.13	CanTrcvPnFrameDataMaskSpec	74
10.3	Published Information	75
11	Not applicable requirements	76

1 Introduction

This specification describes the functionality, APIs and configuration of CAN Transceiver Driver module. The CAN Transceiver Driver module is responsible for handling the CAN transceiver hardware chips on an ECU.


The CAN Transceiver is a hardware device, which adapts the signal levels that are used on the CAN bus to the logical (digital) signal levels recognised by a microcontroller.

In addition, the transceivers are able to detect electrical malfunctions like wiring issues, ground offsets or transmission of long dominant signals. Depending on the interfacing with the microcontroller, they flag the detected error summarized by a single port pin or very detailed by SPI.

Some transceivers support power supply control and wake up via the CAN bus. Different wake up/sleep and power supply concepts are usual on the market.

Within the automotive environment, there are mainly three different CAN bus physics used. These are ISO11898 for high-speed CAN (up to 1Mbits/s), ISO11519 for low-speed CAN (up to 125Kbits/s) and SAE J2411 for single-wire CAN.

Latest developments include System Basis Chips (SBCs) where power supply control and advanced watchdogs are implemented in addition to CAN. These are enclosed in one housing and controlled through single interface (e.g. via SPI).

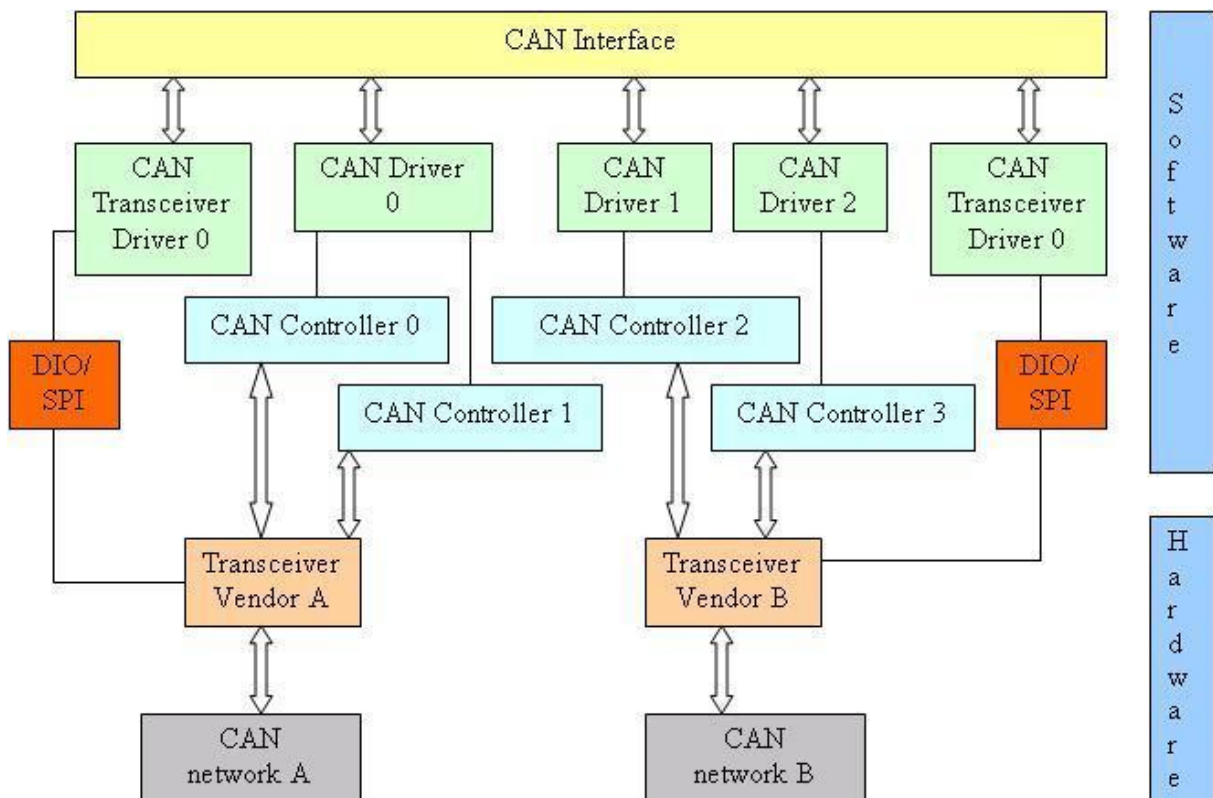

1.1 Goal of CAN Transceiver Driver

The target of this document is to specify the interfaces and behavior which are applicable to most current and future CAN transceiver devices.

The CAN transceiver driver abstracts the CAN transceiver hardware. It offers a hardware independent interface to the higher layers. It abstracts from the ECU layout by using APIs of MCAL layer to access the CAN transceiver hardware.

1.2 Explicitly uncovered CAN transceiver functionality

Some CAN bus transceivers offer additional functionality, for example, ECU self test or error detection capability for diagnostics.

ECU self test and error detection are not defined within AUTOSAR and requiring such functionality would lock out most currently used transceiver hardware chips. Therefore, features like “ground shift detection”, “selective wake up”, “slope control” are not supported.

1.3 Single wire CAN transceivers according SAE J2411

Single wire CAN according SAE J2411 is not supported by AUTOSAR.

2 Acronyms and abbreviations

Abbreviation	Description
ComM	Communication Manager
DEM	Diagnostic Event Manager
DET	Development Error Tracer
DIO	Digital Input Output (SPAL module)
EB	Externally Buffered channels. Buffers containing data to transfer are outside the SPI Handler/Driver.
EcuM	ECU State Manager
IB	Internally Buffered channels. Buffers containing data to transfer are inside the SPI Handler/Driver.
ISR	Interrupt Service Routine
MCAL	Micro Controller Abstraction Layer
Port	Port module (SPAL module)
n/a	Not Applicable
SBC	System Basis Chip; a device, which integrates e.g. CAN and/or LIN transceiver, watchdog and power control.
SPAL	Standard Peripheral Abstraction Layer
SPI Channel	A channel is a software exchange medium for data that are defined with the same criteria: configuration parameters, number of data elements with same size and data pointers (source & destination) or location. See specification of SPI driver for more details.
SPI Job	A job is composed of one or several channels with the same chip select. A job is considered to be atomic and therefore cannot be interrupted. A job has also an assigned priority. See specification of SPI driver for more details.
SPI Sequence	A sequence is a number of consecutive jobs to be transmitted. A sequence depends on a static configuration. See specification of SPI driver for more details.
CAN Channel	A physical channel which is connected to a CAN network from a CAN controller through a CAN transceiver.
API	Application Programming Interface

3 Related documentation

3.1 Input documents

- [1] List of Basic Software Modules
AUTOSAR_TR_BSWModuleList.pdf
- [2] Layered Software Architecture
AUTOSAR_EXP_LayeredSoftwareArchitecture.pdf
- [3] Specification of ECU Configuration
AUTOSAR_TPS_ECUConfiguration.pdf
- [4] General Requirements on Basic Software
AUTOSAR_SRS_BSWGeneral.pdf
- [5] Specification of Specification of CAN Interface
AUTOSAR_SWS_CANInterface.pdf
- [6] Basic Software Module Description Template,
AUTOSAR_TPS_BSWModuleDescriptionTemplate.pdf
- [7] General Specification of Basic Software Modules
AUTOSAR_SWS_BSWGeneral.pdf

3.2 Related standards and norms

- [8] ISO11898 – Road vehicles - Controller area network (CAN)

3.3 Related specification

AUTOSAR provides a General Specification on Basic Software modules [7] (SWS BSW General), which is also valid for CAN Transceiver Driver.

Thus, the specification SWS BSW General shall be considered as additional and required specification for CAN Transceiver Driver.

4 Constraints and assumptions

4.1 Limitations

[SWS_CanTrcv_00098] | The CAN bus transceiver hardware shall provide the functionality and an interface which can be mapped to the operation mode model of the AUTOSAR CAN transceiver driver. | (SRS_BSW_00172)

See also Chapter 7.1.

The used APIs of underlying drivers (SPI and DIO) shall be synchronous.

Implementations of underlying drivers which does not support synchronous behavior cannot be used together with CAN transceiver driver.

4.2 Applicability to car domains

This driver might be applicable in all car domains using CAN for communication.

5 Dependencies to other modules

Module	Dependencies
CanIf	All CAN transceiver drivers are arranged below CanIf.
ComM	ComM steers CAN transceiver driver communication modes via CanIf. Each CAN transceiver driver is steered independently.
DET	DET gets development error information from CAN transceiver driver.
DEM	DEM gets production error information from CAN transceiver driver.
DIO	DIO module is used to access CAN transceiver device connected via ports.
EcuM	EcuM gets information about wake up events from CAN transceiver driver via CanIf.
SPI	SPI module is used to access CAN transceiver device connected via SPI.

5.1 File structure

5.1.1 Code file structure

[SWS_CanTrcv_00064] | The naming convention prescribed by AUTOSAR is applied to all files of the CanTrcv module. | (SRS_BSW_00300)


[SWS_CanTrcv_00065] | The CanTrcv module consists of the following files:

File name	Requirements	Description
CanTrcv.c	SWS_CanTrcv_00069	The implementation general c file. It does not contain interrupt routines.
CanTrcv.h	SWS_CanTrcv_00052	It contains only information relevant for other BSW modules (API). Differences in API depending in configuration are encapsulated.
CanTrcv_Cfg.h	SWS_CanTrcv_00083	Pre-compile time configuration parameter file. It's generated by the configuration tool.
CanTrcv_Cfg.c	SWS_CanTrcv_00062	Pre-compile time configuration code file. It's generated by the configuration tool. (SRS_BSW_00346, SRS_BSW_00158)

5.1.2 Header file structure

[SWS_CanTrcv_00067]

[

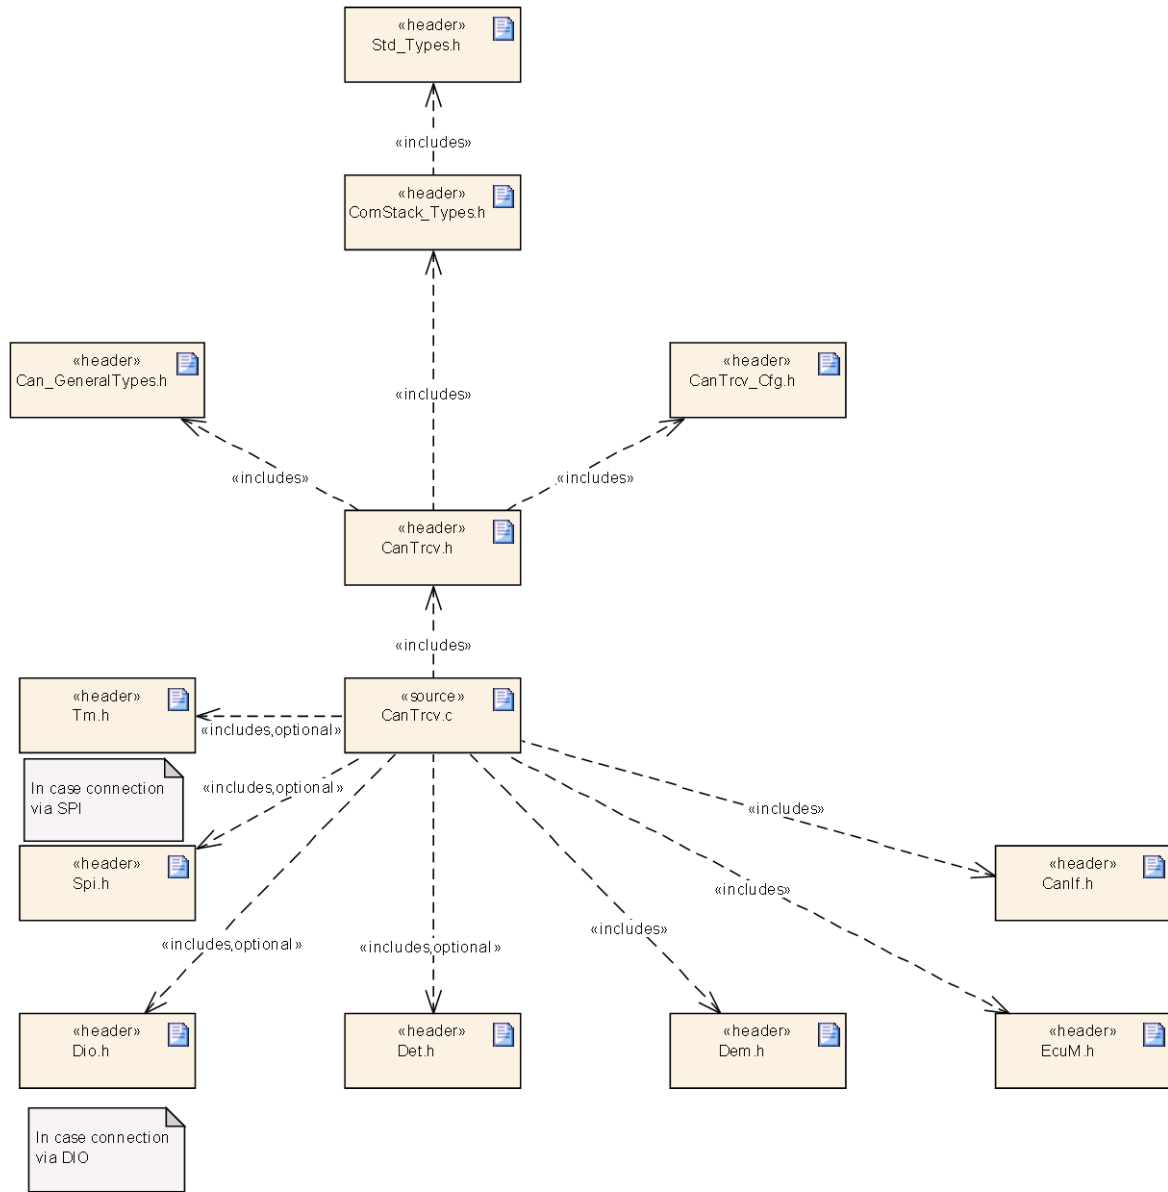

] (SRS_BSW_00301, SRS_BSW_00409)

[SWS_CanTrcv_00162] [CanTrcv.h shall include Can_GeneralTypes.h, for the general CAN type definitions.] ()

[SWS_CanTrcv_00166] [The imported types described in [SWS_CanTrcv_00163](#), [SWS_CanTrcv_00164](#) and [SWS_CanTrcv_00165](#) shall be defined in Can_GeneralTypes.h.] ()

6 Requirements Traceability

Requirement	Description	Satisfied by
-	-	SWS_CanTrcv_00002
-	-	SWS_CanTrcv_00065
-	-	SWS_CanTrcv_00084
-	-	SWS_CanTrcv_00086
-	-	SWS_CanTrcv_00087
-	-	SWS_CanTrcv_00089
-	-	SWS_CanTrcv_00094
-	-	SWS_CanTrcv_00100
-	-	SWS_CanTrcv_00102
-	-	SWS_CanTrcv_00103
-	-	SWS_CanTrcv_00104
-	-	SWS_CanTrcv_00105
-	-	SWS_CanTrcv_00106
-	-	SWS_CanTrcv_00107
-	-	SWS_CanTrcv_00111
-	-	SWS_CanTrcv_00113
-	-	SWS_CanTrcv_00114
-	-	SWS_CanTrcv_00115
-	-	SWS_CanTrcv_00116
-	-	SWS_CanTrcv_00117
-	-	SWS_CanTrcv_00120
-	-	SWS_CanTrcv_00121
-	-	SWS_CanTrcv_00122
-	-	SWS_CanTrcv_00123
-	-	SWS_CanTrcv_00124
-	-	SWS_CanTrcv_00125
-	-	SWS_CanTrcv_00127
-	-	SWS_CanTrcv_00128
-	-	SWS_CanTrcv_00129
-	-	SWS_CanTrcv_00130
-	-	SWS_CanTrcv_00131
-	-	SWS_CanTrcv_00132
-	-	SWS_CanTrcv_00133
-	-	SWS_CanTrcv_00143
-	-	SWS_CanTrcv_00144
-	-	SWS_CanTrcv_00145

-	-	SWS_CanTrcv_00146
-	-	SWS_CanTrcv_00148
-	-	SWS_CanTrcv_00150
-	-	SWS_CanTrcv_00158
-	-	SWS_CanTrcv_00161
-	-	SWS_CanTrcv_00162
-	-	SWS_CanTrcv_00163
-	-	SWS_CanTrcv_00164
-	-	SWS_CanTrcv_00165
-	-	SWS_CanTrcv_00166
-	-	SWS_CanTrcv_00167
-	-	SWS_CanTrcv_00168
-	-	SWS_CanTrcv_00171
-	-	SWS_CanTrcv_00172
-	-	SWS_CanTrcv_00173
-	-	SWS_CanTrcv_00174
-	-	SWS_CanTrcv_00175
-	-	SWS_CanTrcv_00177
-	-	SWS_CanTrcv_00178
-	-	SWS_CanTrcv_00180
-	-	SWS_CanTrcv_00181
-	-	SWS_CanTrcv_00182
-	-	SWS_CanTrcv_00183
-	-	SWS_CanTrcv_00184
-	-	SWS_CanTrcv_00186
-	-	SWS_CanTrcv_00187
-	-	SWS_CanTrcv_00188
-	-	SWS_CanTrcv_00189
-	-	SWS_CanTrcv_00190
-	-	SWS_CanTrcv_00191
-	-	SWS_CanTrcv_00192
-	-	SWS_CanTrcv_00193
-	-	SWS_CanTrcv_00194
-	-	SWS_CanTrcv_00195
-	-	SWS_CanTrcv_00196
-	-	SWS_CanTrcv_00197
-	-	SWS_CanTrcv_00198
-	-	SWS_CanTrcv_00199
-	-	SWS_CanTrcv_00200
-	-	SWS_CanTrcv_00201

-	-	SWS_CanTrcv_00202
-	-	SWS_CanTrcv_00203
-	-	SWS_CanTrcv_00204
-	-	SWS_CanTrcv_00205
-	-	SWS_CanTrcv_00207
-	-	SWS_CanTrcv_00209
-	-	SWS_CanTrcv_00210
-	-	SWS_CanTrcv_00211
-	-	SWS_CanTrcv_00213
-	-	SWS_CanTrcv_00215
-	-	SWS_CanTrcv_00216
-	-	SWS_CanTrcv_00217
-	-	SWS_CanTrcv_00218
-	-	SWS_CanTrcv_00219
-	-	SWS_CanTrcv_00220
-	-	SWS_CanTrcv_00221
-	-	SWS_CanTrcv_00222
-	-	SWS_CanTrcv_00223
-	-	SWS_CanTrcv_00224
-	-	SWS_CanTrcv_00225
-	-	SWS_CanTrcv_00226
-	-	SWS_CanTrcv_00229
-	-	SWS_CanTrcv_00230
SRS_BSW_00005	Modules of the $\hat{\mu}$ C Abstraction Layer (MCAL) may not have hard coded horizontal interfaces	SWS_CanTrcv_00999
SRS_BSW_00006	The source code of software modules above the $\hat{\mu}$ C Abstraction Layer (MCAL) shall not be processor and compiler dependent.	SWS_CanTrcv_00999
SRS_BSW_00007	All Basic SW Modules written in C language shall conform to the MISRA C 2004 Standard.	SWS_CanTrcv_00999
SRS_BSW_00009	All Basic SW Modules shall be documented according to a common standard.	SWS_CanTrcv_00999
SRS_BSW_00010	The memory consumption of all Basic SW Modules shall be documented for a defined configuration for all supported platforms.	SWS_CanTrcv_00999
SRS_BSW_00101	The Basic Software Module shall be able to initialize variables and hardware in a separate initialization function	SWS_CanTrcv_00001
SRS_BSW_00160	Configuration files of AUTOSAR Basic SW module shall be readable for human beings	SWS_CanTrcv_00090, SWS_CanTrcv_00091, SWS_CanTrcv_00093,

		SWS_CanTrcv_00095
SRS_BSW_00161	The AUTOSAR Basic Software shall provide a microcontroller abstraction layer which provides a standardized interface to higher software layers	SWS_CanTrcv_00999
SRS_BSW_00164	The Implementation of interrupt service routines shall be done by the Operating System, complex drivers or modules	SWS_CanTrcv_00999
SRS_BSW_00168	SW components shall be tested by a function defined in a common API in the Basis-SW	SWS_CanTrcv_00999
SRS_BSW_00171	Optional functionality of a Basic-SW component that is not required in the ECU shall be configurable at pre-compile-time	SWS_CanTrcv_00013
SRS_BSW_00172	The scheduling strategy that is built inside the Basic Software Modules shall be compatible with the strategy used in the system	SWS_CanTrcv_00001, SWS_CanTrcv_00013, SWS_CanTrcv_00090, SWS_CanTrcv_00091, SWS_CanTrcv_00098, SWS_CanTrcv_00099
SRS_BSW_00300	All AUTOSAR Basic Software Modules shall be identified by an unambiguous name	SWS_CanTrcv_00064
SRS_BSW_00301	All AUTOSAR Basic Software Modules shall only import the necessary information	SWS_CanTrcv_00067
SRS_BSW_00304	All AUTOSAR Basic Software Modules shall use the following data types instead of native C data types	SWS_CanTrcv_00999
SRS_BSW_00305	Data types naming convention	SWS_CanTrcv_00999
SRS_BSW_00306	AUTOSAR Basic Software Modules shall be compiler and platform independent	SWS_CanTrcv_00999
SRS_BSW_00307	Global variables naming convention	SWS_CanTrcv_00999
SRS_BSW_00308	AUTOSAR Basic Software Modules shall not define global data in their header files, but in the C file	SWS_CanTrcv_00999
SRS_BSW_00309	All AUTOSAR Basic Software Modules shall indicate all global data with read-only purposes by explicitly assigning the const keyword	SWS_CanTrcv_00999
SRS_BSW_00310	API naming convention	SWS_CanTrcv_00001, SWS_CanTrcv_00005, SWS_CanTrcv_00007, SWS_CanTrcv_00008, SWS_CanTrcv_00009, SWS_CanTrcv_00013
SRS_BSW_00312	Shared code shall be reentrant	SWS_CanTrcv_00999
SRS_BSW_00321	The version numbers of AUTOSAR Basic Software Modules shall be enumerated according specific rules	SWS_CanTrcv_00999

SRS_BSW_00325	The runtime of interrupt service routines and functions that are running in interrupt context shall be kept short	SWS_CanTrcv_00999
SRS_BSW_00326	-	SWS_CanTrcv_00999
SRS_BSW_00327	Error values naming convention	SWS_CanTrcv_00050, SWS_CanTrcv_00206, SWS_CanTrcv_00227
SRS_BSW_00328	All AUTOSAR Basic Software Modules shall avoid the duplication of code	SWS_CanTrcv_00999
SRS_BSW_00329	-	SWS_CanTrcv_00001, SWS_CanTrcv_00005, SWS_CanTrcv_00007, SWS_CanTrcv_00008, SWS_CanTrcv_00009, SWS_CanTrcv_00013
SRS_BSW_00330	It shall be allowed to use macros instead of functions where source code is used and runtime is critical	SWS_CanTrcv_00999
SRS_BSW_00331	All Basic Software Modules shall strictly separate error and status information	SWS_CanTrcv_00206, SWS_CanTrcv_00227
SRS_BSW_00333	For each callback function it shall be specified if it is called from interrupt context or not	SWS_CanTrcv_00999
SRS_BSW_00334	All Basic Software Modules shall provide an XML file that contains the meta data	SWS_CanTrcv_00999
SRS_BSW_00336	Basic SW module shall be able to shut-down	SWS_CanTrcv_00999
SRS_BSW_00337	Classification of development errors	SWS_CanTrcv_00206, SWS_CanTrcv_00227
SRS_BSW_00338	-	SWS_CanTrcv_00050
SRS_BSW_00339	Reporting of production relevant error status	SWS_CanTrcv_00228
SRS_BSW_00341	Module documentation shall contains all needed informations	SWS_CanTrcv_00999
SRS_BSW_00342	It shall be possible to create an AUTOSAR ECU out of modules provided as source code and modules provided as object code, even mixed	SWS_CanTrcv_00999
SRS_BSW_00343	The unit of time for specification and configuration of Basic SW modules shall be preferably in physical time unit	SWS_CanTrcv_00112
SRS_BSW_00344	BSW Modules shall support link-time configuration	SWS_CanTrcv_00999
SRS_BSW_00347	A Naming separation of different instances of BSW drivers shall be in place	SWS_CanTrcv_00016
SRS_BSW_00350	All AUTOSAR Basic Software Modules shall apply a specific naming rule for enabling/disabling the detection and reporting of development errors	SWS_CanTrcv_00050
SRS_BSW_00355	-	SWS_CanTrcv_00999

SRS_BSW_00358	The return type of init() functions implemented by AUTOSAR Basic Software Modules shall be void	SWS_CanTrcv_00001
SRS_BSW_00359	All AUTOSAR Basic Software Modules callback functions shall avoid return types other than void if possible	SWS_CanTrcv_00999
SRS_BSW_00360	AUTOSAR Basic Software Modules callback functions are allowed to have parameters	SWS_CanTrcv_00999
SRS_BSW_00369	All AUTOSAR Basic Software Modules shall not return specific development error codes via the API	SWS_CanTrcv_00001, SWS_CanTrcv_00005, SWS_CanTrcv_00007, SWS_CanTrcv_00008, SWS_CanTrcv_00009, SWS_CanTrcv_00013
SRS_BSW_00370	-	SWS_CanTrcv_00085
SRS_BSW_00371	The passing of function pointers as API parameter is forbidden for all AUTOSAR Basic Software Modules	SWS_CanTrcv_00001, SWS_CanTrcv_00005, SWS_CanTrcv_00007, SWS_CanTrcv_00008, SWS_CanTrcv_00009, SWS_CanTrcv_00013
SRS_BSW_00373	The main processing function of each AUTOSAR Basic Software Module shall be named according the defined convention	SWS_CanTrcv_00013
SRS_BSW_00375	Basic Software Modules shall report wake-up reasons	SWS_CanTrcv_00007
SRS_BSW_00376	-	SWS_CanTrcv_00013
SRS_BSW_00377	A Basic Software Module can return a module specific types	SWS_CanTrcv_00005, SWS_CanTrcv_00007
SRS_BSW_00378	AUTOSAR shall provide a boolean type	SWS_CanTrcv_00999
SRS_BSW_00383	The Basic Software Module specifications shall specify which other configuration files from other modules they use at least in the description	SWS_CanTrcv_00999
SRS_BSW_00384	The Basic Software Module specifications shall specify at least in the description which other modules they require	SWS_CanTrcv_00999
SRS_BSW_00385	List possible error notifications	SWS_CanTrcv_00050, SWS_CanTrcv_00206, SWS_CanTrcv_00227, SWS_CanTrcv_00228
SRS_BSW_00386	The BSW shall specify the configuration for detecting an error	SWS_CanTrcv_00050
SRS_BSW_00387	-	SWS_CanTrcv_00999
SRS_BSW_00388	Containers shall be used to group configuration parameters that are defined for the same object	SWS_CanTrcv_00090, SWS_CanTrcv_00091, SWS_CanTrcv_00093, SWS_CanTrcv_00095
SRS_BSW_00389	Containers shall have names	SWS_CanTrcv_00090, SWS_CanTrcv_00091,

		SWS_CanTrcv_00093, SWS_CanTrcv_00095
SRS_BSW_00390	Parameter content shall be unique within the module	SWS_CanTrcv_00090, SWS_CanTrcv_00091, SWS_CanTrcv_00093, SWS_CanTrcv_00095
SRS_BSW_00391	-	SWS_CanTrcv_00090, SWS_CanTrcv_00091, SWS_CanTrcv_00093, SWS_CanTrcv_00095
SRS_BSW_00392	Parameters shall have a type	SWS_CanTrcv_00090, SWS_CanTrcv_00091, SWS_CanTrcv_00093, SWS_CanTrcv_00095
SRS_BSW_00393	Parameters shall have a range	SWS_CanTrcv_00090, SWS_CanTrcv_00091, SWS_CanTrcv_00093, SWS_CanTrcv_00095
SRS_BSW_00394	The Basic Software Module specifications shall specify the scope of the configuration parameters	SWS_CanTrcv_00090, SWS_CanTrcv_00091, SWS_CanTrcv_00093, SWS_CanTrcv_00095
SRS_BSW_00395	The Basic Software Module specifications shall list all configuration parameter dependencies	SWS_CanTrcv_00091, SWS_CanTrcv_00093, SWS_CanTrcv_00095
SRS_BSW_00396	The Basic Software Module specifications shall specify the supported configuration classes for changing values and multiplicities for each parameter/container	SWS_CanTrcv_00017
SRS_BSW_00398	The link-time configuration is achieved on object code basis in the stage after compiling and before linking	SWS_CanTrcv_00999
SRS_BSW_00399	Parameter-sets shall be located in a separate segment and shall be loaded after the code	SWS_CanTrcv_00999
SRS_BSW_00400	Parameter shall be selected from multiple sets of parameters after code has been loaded and started	SWS_CanTrcv_00999
SRS_BSW_00401	Documentation of multiple instances of configuration parameters shall be available	SWS_CanTrcv_00999
SRS_BSW_00404	BSW Modules shall support post-build configuration	SWS_CanTrcv_00999
SRS_BSW_00405	BSW Modules shall support multiple configuration sets	SWS_CanTrcv_00999
SRS_BSW_00406	A static status variable denoting if a BSW module is initialized shall be initialized with value 0 before any APIs of the BSW module is called	SWS_CanTrcv_00005, SWS_CanTrcv_00007, SWS_CanTrcv_00008, SWS_CanTrcv_00009, SWS_CanTrcv_00013
SRS_BSW_00407	Each BSW module shall provide a function to read out the version information	SWS_CanTrcv_00008

	of a dedicated module implementation	
SRS_BSW_00408	All AUTOSAR Basic Software Modules configuration parameters shall be named according to a specific naming rule	SWS_CanTrcv_00090, SWS_CanTrcv_00091, SWS_CanTrcv_00093, SWS_CanTrcv_00095
SRS_BSW_00409	All production code error ID symbols are defined by the Dem module and shall be retrieved by the other BSW modules from Dem configuration	SWS_CanTrcv_00067
SRS_BSW_00410	Compiler switches shall have defined values	SWS_CanTrcv_00999
SRS_BSW_00411	All AUTOSAR Basic Software Modules shall apply a naming rule for enabling/disabling the existence of the API	SWS_CanTrcv_00008
SRS_BSW_00413	An index-based accessing of the instances of BSW modules shall be done	SWS_CanTrcv_00016
SRS_BSW_00414	Init functions shall have a pointer to a configuration structure as single parameter	SWS_CanTrcv_00001
SRS_BSW_00416	The sequence of modules to be initialized shall be configurable	SWS_CanTrcv_00999
SRS_BSW_00417	Software which is not part of the SW-C shall report error events only after the DEM is fully operational.	SWS_CanTrcv_00999
SRS_BSW_00420	-	SWS_CanTrcv_00999
SRS_BSW_00422	Pre-de-bouncing of error status information is done within the DEM	SWS_CanTrcv_00999
SRS_BSW_00423	BSW modules with AUTOSAR interfaces shall be describable with the means of the SW-C Template	SWS_CanTrcv_00999
SRS_BSW_00424	BSW module main processing functions shall not be allowed to enter a wait state	SWS_CanTrcv_00013
SRS_BSW_00425	The BSW module description template shall provide means to model the defined trigger conditions of schedulable objects	SWS_CanTrcv_00090
SRS_BSW_00426	BSW Modules shall ensure data consistency of data which is shared between BSW modules	SWS_CanTrcv_00999
SRS_BSW_00427	ISR functions shall be defined and documented in the BSW module description template	SWS_CanTrcv_00999
SRS_BSW_00428	A BSW module shall state if its main processing function(s) has to be executed in a specific order or sequence	SWS_CanTrcv_00013
SRS_BSW_00429	BSW modules shall be only allowed to use OS objects and/or related OS services	SWS_CanTrcv_00999
SRS_BSW_00431	-	SWS_CanTrcv_00999
SRS_BSW_00432	Modules should have separate main processing functions for read/receive	SWS_CanTrcv_00999


	and write/transmit data path	
SRS_BSW_00433	Main processing functions are only allowed to be called from task bodies provided by the BSW Scheduler	SWS_CanTrcv_00999
SRS_BSW_00434	-	SWS_CanTrcv_00999
SRS_Can_01090	The bus transceiver driver package shall offer configuration parameters that are needed to configure the driver for a given bus and the supported notifications	SWS_CanTrcv_00090, SWS_CanTrcv_00091, SWS_CanTrcv_00093, SWS_CanTrcv_00095
SRS_Can_01091	The CAN bus transceiver driver shall support the configuration for more than one bus	SWS_CanTrcv_00005, SWS_CanTrcv_00007, SWS_CanTrcv_00009, SWS_CanTrcv_00016, SWS_CanTrcv_00017
SRS_Can_01092	The bus transceiver driver shall support the independent configuration of the bus operation mode for each supported bus.	SWS_CanTrcv_00091
SRS_Can_01095	The bus transceiver driver shall support the compile time configuration of one notification to an upper layer for change notification for "wakeup by bus" events	SWS_CanTrcv_00007
SRS_Can_01096	The bus transceiver driver shall provide an API to initialize the driver internally and set then all attached transceivers in their pre-selected operation modes	SWS_CanTrcv_00001
SRS_Can_01097	CAN Bus Transceiver driver API shall be synchronous	SWS_CanTrcv_00001, SWS_CanTrcv_00005, SWS_CanTrcv_00007, SWS_CanTrcv_00009, SWS_CanTrcv_00013
SRS_Can_01098	The bus transceiver driver shall support an API to send the addressed transceiver into its Standby mode	SWS_CanTrcv_00055
SRS_Can_01099	The bus transceiver driver shall support an API to send the addressed transceiver into its Sleep mode	SWS_CanTrcv_00055
SRS_Can_01100	The bus transceiver driver shall support an API to send the addressed transceiver into its Normal mode	SWS_CanTrcv_00055
SRS_Can_01101	The bus transceiver driver shall support an API to read out the current operation mode of the transceiver of a specified bus within the ECU	SWS_CanTrcv_00005
SRS_Can_01103	The bus transceiver driver shall support an API to read out the reason of the last wakeup of a specified bus within the ECU	SWS_CanTrcv_00007
SRS_Can_01106	The bus transceiver driver shall call the appropriate callback function of EcuM in case a wakeup by bus event is detected	SWS_CanTrcv_00007
SRS_Can_01107	The CAN Transceiver Driver shall support the situation where a wakeup by	SWS_CanTrcv_00999

	bus occurs during the same time the transition to standby/sleep is in progress	
SRS_Can_01108	The bus transceiver driver shall support the AUTOSAR ECU state manager in a way that a safe system startup and shutdown is possible	SWS_CanTrcv_00001
SRS_Can_01109	The bus transceiver driver shall check the control communication to the transceiver and the reaction of the transceiver for correctness	SWS_CanTrcv_00001, SWS_CanTrcv_00005, SWS_CanTrcv_00007, SWS_CanTrcv_00009, SWS_CanTrcv_00013
SRS_Can_01110	CAN Bus Transceiver driver shall handle the transceiver specific timing requirements internally	SWS_CanTrcv_00001, SWS_CanTrcv_00005, SWS_CanTrcv_00007, SWS_CanTrcv_00009, SWS_CanTrcv_00013
SRS_Can_01115	The bus transceiver driver shall support an API to enable and disable the wakeup notification for each bus separately	SWS_CanTrcv_00009
SRS_Can_01138	The CAN Bus Transceiver Driver shall provide one callback function for lower layer ICU Driver for wake up by bus events	SWS_CanTrcv_00999
SRS_Can_01157	The bus transceiver driver shall provide an API for clearing the WUF bit in the transceiver hardware	SWS_CanTrcv_00214

7 Functional specification

7.1 CAN transceiver driver operation modes

[SWS_CanTrcv_00055] | The CanTrcv module shall implement the state diagram shown below, independently for each configured transceiver.] (SRS_Can_01098, SRS_Can_01099, SRS_Can_01100)

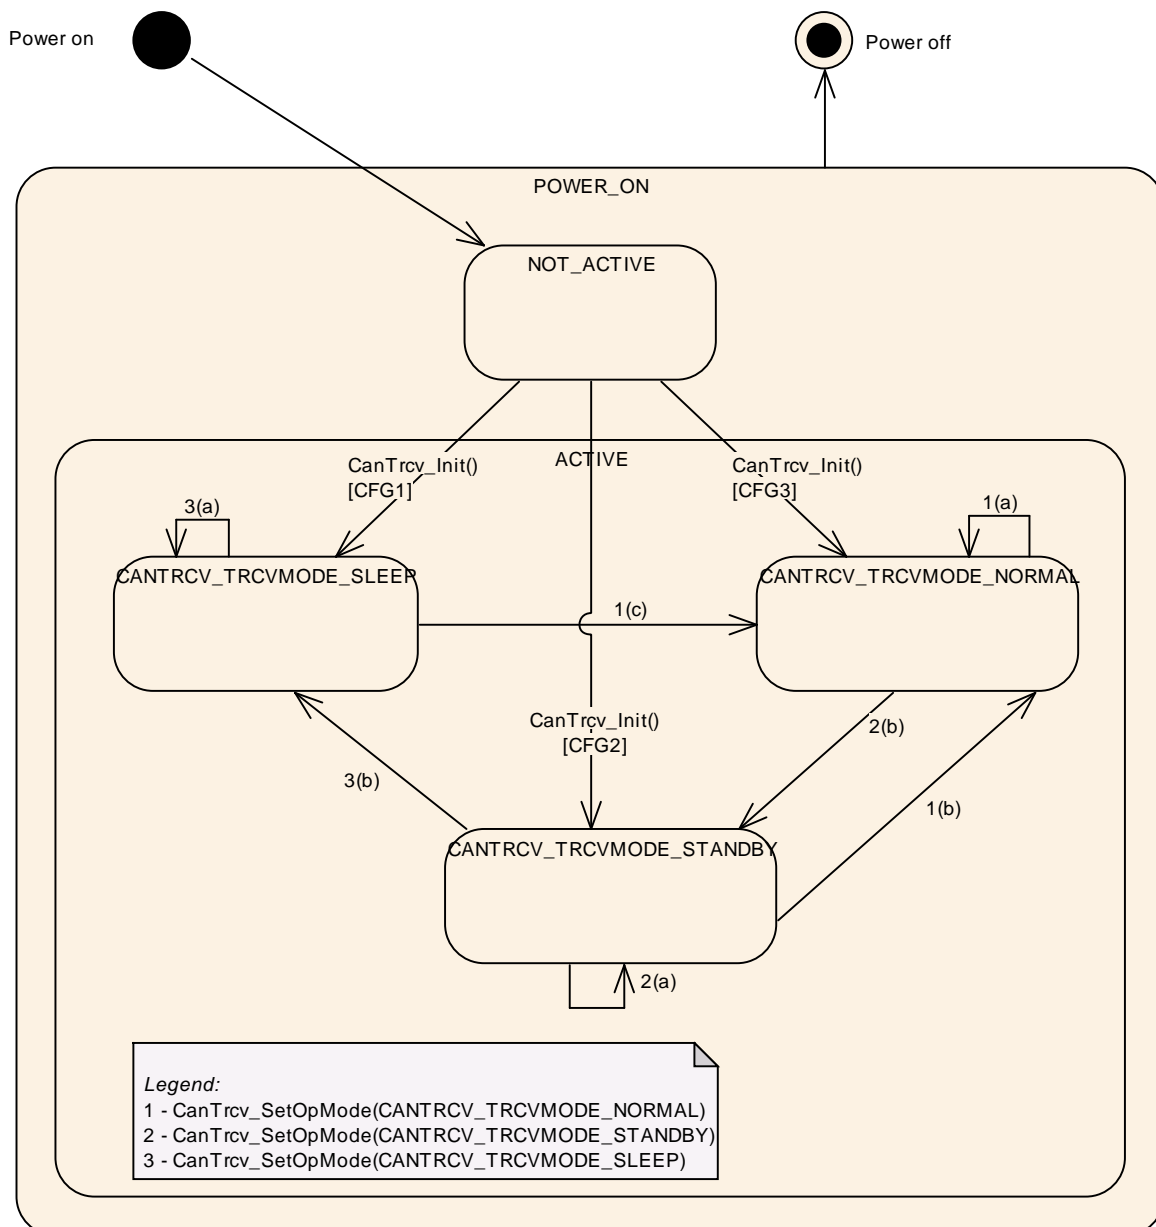

The main idea intended by this diagram, is to support a lot of up to now available CAN bus transceivers in a generic view. Depending on the CAN transceiver hardware, the model may have one or two states more than necessary for a given CAN transceiver hardware but this will clearly decouple the ComM and EcuM from the used hardware.

[SWS_CanTrcv_00148] | The function `CanTrcv_Init` causes a state change to either `CANTRCV_TRCVMODE_SLEEP`, `CANTRCV_TRCVMODE_NORMAL` or `CANTRCV_TRCVMODE_STANDBY`. This depends on the configuration and is independently configurable for each transceiver. | ()

State	Description
POWER_ON	ECU is fully powered.
NOT_ACTIVE	State of CAN transceiver hardware depends on ECU hardware and on Dio and Port driver configuration. CAN transceiver driver is not initialized and therefore not active.
ACTIVE	The function <code>CanTrcv_Init</code> has been called. It carries CAN transceiver driver to active state. Depending on configuration CAN transceiver driver enters the state <code>CANTRCV_TRCVMODE_SLEEP</code> , <code>CANTRCV_TRCVMODE_STANDBY</code> or <code>CANTRCV_TRCVMODE_NORMAL</code> .
CANTRCV_TRCVMODE_NORMAL	Full bus communication. If CAN transceiver hardware controls ECU power supply, ECU is fully powered. The CAN transceiver driver detects no further wake up information.
CANTRCV_TRCVMODE_STANDBY	No communication is possible. ECU is still powered if CAN transceiver hardware controls ECU power supply. A transition to <code>CANTRCV_TRCVMODE_SLEEP</code> is only valid from this mode. A wake up by bus or by a local wake up event is possible.
CANTRCV_TRCVMODE_SLEEP	No communication is possible. ECU may be unpowered depending on responsibility to handle power supply. A wake up by bus or by a local wake up event is possible.

If a CAN transceiver driver covers more than one CAN transceiver (configured as channels), all transceivers (channels) are either in the state `NOT_ACTIVE` or in the state `ACTIVE`.

In state `ACTIVE`, each transceiver may be in a different sub state.

7.1.1 Operation mode switching

A mode switch is requested with a call to the function `CanTrcv_SetOpMode`.

[SWS_CanTrcv_00161] | A mode switch request to the current mode is allowed and shall not lead to an error, even if DET is enabled. | ()

[SWS_CanTrcv_00158] | The `CanTrcv` module shall invoke the callback function `CanIf_TrvcModeIndication`, for each mode switch request with call to `CanTrcv_SetOpMode`, after the requested mode has been reached referring to the corresponding CAN transceiver with the abstract `CanIf_TransceiverId`. | ()

7.2 CAN transceiver hardware operation modes

The CAN transceiver hardware may support more mode transitions than shown in the state diagram above. The dependencies and the recommended implementations behaviour are explained in this chapter.

It is implementation specific to decide which CAN transceiver hardware state is covered by which CAN transceiver driver software state. An implementation has to guarantee that the whole functionality of the described CAN transceiver driver software state is realized by the implementation.

7.2.1 Example for temporary “Go-To-Sleep” mode

The mode often referred to as “Go-to-sleep” is a temporary mode when switching from Normal to Sleep. The driver encapsulates such a temporary mode within one of the CAN transceiver driver software states. In addition, the CAN transceiver driver switches first from Normal to Standby and then with an additional API call from Standby to Sleep.

7.2.2 Example for “PowerOn/ListenOnly” mode

The mode often referred to as “PowerOn“ or “ListenOnly” is a mode where the CAN transceiver hardware is only able to receive messages but not able to send messages. Also, transmission of the acknowledge bit during reception of a message is suppressed. This mode is not supported because it is outside of the CAN standard and not supported by all CAN transceiver hardware chips.

7.3 CAN transceiver wake up types

There are three different scenarios which are often called wake up:

Scenario 1:

- MCU is not powered.
- Parts of ECU including CAN transceiver hardware are powered.
- The considered CAN transceiver is in SLEEP mode.
- A wake up event on CAN bus is detected by CAN transceiver hardware.
- The CAN transceiver hardware causes powering of MCU.

In terms of AUTOSAR, this is kept as a cold start and NOT as a wake up.

Scenario 2:

- MCU is in low power mode.
- Parts of ECU including CAN transceiver hardware are powered.
- The considered CAN transceiver is in STANDBY mode.
- A wake up event on CAN bus is detected by CAN transceiver hardware.
- The CAN transceiver hardware causes a SW interrupt for waking up.

In terms of AUTOSAR, this is kept as a wake up of the CAN channel and of the MCU.

Scenario 3:

- MCU is in full power mode.
- At least parts of ECU including CAN transceiver hardware are powered.
- The considered CAN transceiver is in STANDBY mode.
- A wake up event on CAN is detected by CAN transceiver hardware.

- The CAN transceiver hardware either causes a SW interrupt for waking up or is polled cyclically for wake up events.

In terms of AUTOSAR, this is kept as a wake up of the CAN channel.

7.4 Enabling/Disabling wakeup notification

[SWS_CanTrcv_00171] [CanTrcv driver shall use the following APIs provided by ICU driver, to enable and disable the wakeup event notification:

- Icu_EnableNotification
- Icu_DisableNotification

CanTrcv driver shall enable/disable ICU channels only if reference is configured for the parameter `CanTrcvIcuChannelRef.`] ()

CanTrcv driver shall ensure the following to avoid the loss of wakeup events:

[SWS_CanTrcv_00172] [It shall enable the ICU channels when the transceiver transitions to the Standby mode (`CANTRCV_STANDBY`).] ()

[SWS_CanTrcv_00173] [It shall disable the ICU channels when the transceiver transitions to the Normal mode (`CANTRCV_NORMAL`).] ()

7.5 CAN transceiver wake up modes

CAN transceiver driver offers two wake up modes:

[SWS_CanTrcv_00090] [**NOT_SUPPORTED mode**] (SRS_BSW_00388, SRS_BSW_00389, SRS_BSW_00390, SRS_BSW_00391, SRS_BSW_00392, SRS_BSW_00393, SRS_BSW_00394, SRS_BSW_00408, SRS_BSW_00425, SRS_BSW_00160, SRS_BSW_00172, SRS_Can_01090)

In mode `NOT_SUPPORTED`, no wake ups are generated by CAN transceiver driver. This mode is supported by all CAN transceiver hardware types.

[SWS_CanTrcv_00091] [**POLLING mode**] (SRS_BSW_00388, SRS_BSW_00389, SRS_BSW_00390, SRS_BSW_00391, SRS_BSW_00392, SRS_BSW_00393, SRS_BSW_00394, SRS_BSW_00395, SRS_BSW_00408, SRS_BSW_00160, SRS_BSW_00172, SRS_Can_01090, SRS_Can_01092)

In mode `POLLING`, wake ups generated by CAN transceiver driver may cause CAN channel wake ups. In this mode, no MCU wake ups are possible. This mode presumes a support by used CAN transceiver hardware type. Wake up mode `POLLING` requires function `CanTrcv_CheckWakeup` and main function `CanTrcv_MainFunction` to be present in source code.

The main function `CanTrcv_MainFunction` shall be called by BSW scheduler and `CanTrcv_CheckWakeup` by `CanIf`.

The selection of the wake up mode is done by the configuration parameter `CanTrcvWakeUpSupport`. The support of wake ups may be switched on and off for each CAN transceiver individually by the configuration parameter `CanTrcvWakeupByBusUsed`.

Note: In both modes the function `CanTrcv_CheckWakeup` shall be present, but the functionality shall be based on the configured wakeup mode (`NOT_SUPPORTED` OR `POLLING`).

Implementation Hint:

If a CAN transceiver needs a specific state transition (e.g. Sleep -> Normal) initiated by the software after detection of a wake-up, this may be accomplished by the CanTrcv module, during the execution of CanTrcv_CheckWakeup. This behaviour is implementation specific.

It has to be assured by configuration of modules, which are involved in wake-up process (EcuM, CanIf, ICU etc...) that CanTrcv_CheckWakeup is called, when a transceiver needs a specific state transition.

7.6 Error classification

7.6.1 Development Errors

[SWS_CanTrcv_00050]

Type or error	Relevance	Related error code	Value [hex]
API called with wrong parameter for the CAN transceiver	Development	CANTRCV_E_INVALID_TRANSCEIVER	1
API called with null pointer parameter	Development	CANTRCV_E_PARAM_POINTER	2
API service used without initialization	Development	CANTRCV_E_UNINIT	11
API service called in wrong transceiver operation mode	Development	CANTRCV_E_TRCV_NOT_STANDBY CANTRCV_E_TRCV_NOT_NORMAL	21 22
API service called with invalid parameter for TrcvWakeup-Mode	Development	CANTRCV_E_PARAM_TRCV_WAKEUP_MODE	23
API service called with invalid parameter for OpMode	Development	CANTRCV_E_PARAM_TRCV_OPMODE	24
Configured baud rate is not supported by the transceiver	Development	CANTRCV_E_BAUDRATE_NOT_SUPPORTED	25
No/incorrect communication to transceiver.	Development	CANTRCV_E_NO_TRCV_CONTROL	26
Module initialization has failed, e.g. CanTrcv_Init() called with an invalid pointer in postbuild.	Development	CANTRCV_E_INIT_FAILED	27

] (SRS_BSW_00327, SRS_BSW_00338, SRS_BSW_00350, SRS_BSW_00385, SRS_BSW_00386)

7.6.2 Production Errors

This module does not specify any production errors

7.6.3 Extended Production Errors

[SWS_CanTrcv_00228]

[

Error Name:	CANTRCV_E_BUS_ERROR	
Short Description:	A CAN bus error occurred during communication	
Long Description:	This Extended Production Error shall be issued when a bus failure is detected by the transceiver during the CAN communication..	
Detection Criteria:	Fail	When the flag corresponding to bus failure is set, Dem_ReportErrorStatus shall be reported with parameters EventId as CANTRCV_E_BUS_ERROR and EventStatus as DEM_EVENT_STATUS_FAILED. SWS_CanTrcv_00206 , SWS_CanTrcv_00229
	Pass	When the flag corresponding to bus failure is not set, Dem_ReportErrorStatus shall be reported with parameters EventId as CANTRCV_E_BUS_ERROR and EventStatus as DEM_EVENT_STATUS_PASSED. SWS_CanTrcv_00227 , SWS_CanTrcv_00229
Secondary Parameters:	N/A	
Time Required:	N/A	
Monitor Frequency	continuous	

] (SRS_BSW_00339, SRS_BSW_00385)

[SWS_CanTrcv_00229] [The extended production error CANTRCV_E_BUS_ERROR (value assigned by DEM) shall be detectable by the CAN transceiver module when Bus Error (BUSERR) flag is set, depending on whether it is configured and supported by hardware.] ()

7.7 Preconditions for driver initialization

[SWS_CanTrcv_00099] [The environment of the CanTrcv module shall make sure that all necessary BSW drivers (used by the CanTrcv module) have been initialized and are usable before CanTrcv_Init is called.] (SRS_BSW_00172)

The CAN bus transceiver driver uses drivers for Spi and Dio to control the CAN bus transceiver hardware. Thus, these drivers must be available and ready to operate before the CAN bus transceiver driver is initialized.

The CAN transceiver driver may have timing requirements for the initialization sequence and the access to the transceiver device which must be fulfilled by these used underlying drivers.

The timing requirements might be that

- 1) The call of the CAN bus transceiver driver initialization has to be performed very early after power up to be able to read all necessary information out of the transceiver hardware in time for all other users within the ECU.
- 2) The runtime of the used underlying services is very short and synchronous to enable the driver to keep his own timing requirements limited by the used hardware device.
- 3) The runtime of the driver may be enlarged due to some hardware devices configuring the port pin level to be valid for e.g. 50µs before changing it again to reach a specific state (e.g. sleep).

7.8 Instance concept

[SWS_CanTrcv_00016] [For each different CAN transceiver hardware type, an ECU has one CAN transceiver driver instance. One instance serves all CAN trans-

ceiver hardware of same type.] (SRS_BSW_00347, SRS_BSW_00413, SRS_Can_01091)

7.9 Wait states

For changing operation modes, the CAN transceiver hardware may have to perform wait states.

[SWS_CanTrcv_00230] [The CAN Transceiver Driver shall use the Time service `Tm_BusyWait1us16bit` to realize the wait time for transceiver state changes.] ()

7.10 Transceivers with selective wakeup functionality

This section describes requirements for CAN transceivers with selective wakeup functionality.

Partial Networking is a state in a CAN system where some nodes are in low power mode while other nodes are communicating. This reduces the power consumption by the entire network. Nodes in the low-power modes are woken up by pre-defined wakeup frames.

Transceivers which support selective wakeup can be woken up by Wake Up Frame/ Frames (WUF), in addition to the wakeup by Wake Up Pattern (WUP) offered by normal transceivers.

[SWS_CanTrcv_00174] [If selective wakeup is supported by the transceiver hardware, it shall be indicated with the configuration parameter `CanTrcvHwPnSupport`.] ()

[SWS_CanTrcv_00175] [The configuration container for selective wakeup functionality (`CanTrcvPartialNetwork`) and for the following APIs:

- 8.4.7 `CanTrcv_GetTrcvSystemData`,
- 8.4.8 `CanTrcv_ClearTrcvWufFlag`,
- 8.4.9 `CanTrcv_ReadTrcvTimeoutFlag`,
- 8.4.10 `CanTrcv_ClearTrcvTimeoutFlag` and
- 8.4.11 `CanTrcv_ReadTrcvSilenceFlag`

shall exist only if `CanTrcvHwPnSupport = TRUE`.] ()

[SWS_CanTrcv_00177] [If selective wakeup is supported, CAN transceivers shall be configured to wake up on a particular CAN frame or a group of CAN frames using the parameters `CanTrcvPnFrameCanId`, `CanTrcvPnFrameCanIdMask` and `CanTrcvPnFrameDataMask`.] ()

[SWS_CanTrcv_00178] [If the transceiver has the ability to identify bus failures (and distinguish between bus failures and other hardware failures), it shall be indicated using the configuration parameter `CanTrcvBusErrFlag` for bus diagnostic purposes.] ()

Note:

For CAN transceivers supporting selective wakeup functionality, detection of wakeup frames is possible during Normal mode (`CANTRCV_TRCVMODE_NORMAL`). Detected wakeup frames are signaled by the transceiver WUF flag. This ensures that no wakeup frame is lost during a transition to Standby mode (`CANTRCV_TRCVMODE_STANDBY`).

8 API specification

8.1 Imported types

In this chapter all types included from the following files are listed:

[SWS_CanTrcv_00084]

Module	Imported Type
Can_GeneralTypes	CanTrcv_TrvcModeType
	CanTrcv_TrvcWakeupModeType
	CanTrcv_TrvcWakeupReasonType
Dem	Dem_EventIdType
	Dem_EventStatusType
Dio	Dio_ChannelGroupType
	Dio_ChannelType
	Dio_LevelType
	Dio_PortLevelType
	Dio_PortType
EcuM	EcuM_WakeupSourceType
Icu	Icu_ChannelType
Spi	Spi_ChannelType
	Spi_DataBufferType
	Spi_NumberOfDataType
	Spi_SequenceType
	Spi_StatusType
Std_Types	Std_ReturnType
	Std_VersionInfoType

] ()

[SWS_CanTrcv_00163]

Name:	CanTrcv_TrvcModeType	
Type:	Enumeration	
Range:	CANTRCV_TRCVMODE_SLEEP	Transceiver mode SLEEP
	CANTRCV_TRCVMODE_STANDBY	Transceiver mode STANDBY
	CANTRCV_TRCVMODE_NORMAL	= 0 Transceiver mode NORMAL
Description:	Operating modes of the CAN Transceiver Driver.	

] ()

[SWS_CanTrcv_00164]

Name:	CanTrcv_TrvcWakeupModeType	
Type:	Enumeration	
Range:	CANTRCV_WUMODE_ENABLE	= 0 The notification for wakeup events is enabled on the addressed transceiver.
	CANTRCV_WUMODE_DISABLE	The notification for wakeup events is disabled on the addressed transceiver.
	CANTRCV_WUMODE_CLEAR	A stored wakeup event is cleared on the addressed transceiver.

Description:	This type shall be used to control the CAN transceiver concerning wake up events and wake up notifications.
---------------------	---

] ()

[SWS_CanTrcv_00165]

Name:	CanTrcv_TrcevWakeupReasonType	
Type:	Enumeration	
Range:	CANTRCV_WU_ERROR	= 0 Due to an error wake up reason was not detected. This value may only be reported when error was reported to DEM before.
	CANTRCV_WU_NOT_SUPPORTED	The transceiver does not support any information for the wake up reason.
	CANTRCV_WU_BY_BUS	The transceiver has detected, that the network has caused the wake up of the ECU.
	CANTRCV_WU_INTERNALLY	The transceiver has detected, that the network has woken up by the ECU via a request to NORMAL mode.
	CANTRCV_WU_RESET	The transceiver has detected, that the "wake up" is due to an ECU reset.
	CANTRCV_WU_POWER_ON	The transceiver has detected, that the "wake up" is due to an ECU reset after power on.
	CANTRCV_WU_BY_PIN	The transceiver has detected a wake-up event at one of the transceiver's pins (not at the CAN bus).
	CANTRCV_WU_BY_SYSERR	The transceiver has detected, that the wake up of the ECU was caused by a HW related device failure.
Description:	This type denotes the wake up reason detected by the CAN transceiver in detail.	

] ()

8.2 Type definitions

[SWS_CanTrcv_00209]

Name:	CanTrcv_ConfigType	
Type:	Structure	
Range:	Implementation specific	--
Description:	This is the type of the external data structure containing the overall initialization data for the CAN transceiver driver and settings affecting all transceivers. Furthermore it contains pointers to transceiver configuration structures. The contents of the initialization data structure are CAN transceiver hardware specific.	

] ()

[SWS_CanTrcv_00210]

Name:	CanTrcv_PNActivationType	
Type:	Enumeration	
Range:	PN_ENABLED	PN wakeup functionality in CanTrcv is enabled.
	PN_DISABLED	PN wakeup functionality in CanTrcv is disabled.
Description:	Datatype used for describing whether PN wakeup functionality in CanTrcv is enabled or disabled.	

] ()

[SWS_CanTrcv_00211]

Name:	CanTrcv_TrvcFlagStateType	
Type:	Enumeration	
Range:	CANTRCV_FLAG_SET	The flag is set in the transceiver hardware.
	CANTRCV_FLAG_CLEARED	The flag is cleared in the transceiver hardware.
Description:	Provides the state of a flag in the transceiver hardware.	

] ()

8.3 Function definitions

8.3.1 CanTrcv_Init

[SWS_CanTrcv_00001]

Service name:	CanTrcv_Init	
Syntax:	<pre>void CanTrcv_Init(const CanTrcv_ConfigType* ConfigPtr)</pre>	
Service ID[hex]:	0x00	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	ConfigPtr	Pointer to driver configuration.
Parameters (in-out):	None	
Parameters (out):	None	
Return value:	None	
Description:	Initializes the CanTrcv module.	

] (SRS_BSW_00310, SRS_BSW_00329, SRS_BSW_00358, SRS_BSW_00369, SRS_BSW_00371, SRS_BSW_00414, SRS_BSW_00101, SRS_BSW_00172, SRS_Can_01096, SRS_Can_01097, SRS_Can_01109, SRS_Can_01110, SRS_Can_01108)

[SWS_CanTrcv_00180] | The function `CanTrcv_Init` shall initialize all the connected CAN transceivers based on their initialization sequences and configuration (provided by parameter `ConfigPtr`). Meanwhile, it shall support the configuration sequence of the AUTOSAR stack also.] ()

[SWS_CanTrcv_00100] | The function `CanTrcv_Init` shall set the CAN transceiver hardware to the state configured by the configuration parameter `CanTrcvInitState`.] ()

Note that in the time span between power up and the call to `CanTrcv_Init`, the CAN transceiver hardware may be in a different state. This depends on hardware and SPAL driver configuration.

The initialization sequence after reset (e.g. power up) is a critical phase for the CAN transceiver driver.

This API shall store the wake up event, if any, during initialization time.

See also requirement SWS_CanTrcv_00099.

[SWS_CanTrcv_00167] | If supported by hardware, `CanTrcv_Init` shall validate whether there has been a wake up due to transceiver activity and if TRUE, reporting shall be done to EcuM via API `EcuM_SetWakeupEvent` with the wakeup source referenced in `CanTrcvWakeupSourceRef`.] ()

[SWS_CanTrcv_00181] | If selective wakeup is enabled and supported by hardware: POR and SYSERR flags of the transceiver status shall be checked by `CanTrcv_Init` API. | ()

[SWS_CanTrcv_00182] | If the POR flag or SYSERR flag is set, transceiver shall be re-configured for selective wakeup functionality by running the configuration sequence.

If the POR flag or SYSERR flag is not set, the configuration stored in the transceiver memory will be still valid and re-configuration is not necessary. | ()

[SWS_CanTrcv_00183] | If the POR flag is set, wakeup shall be reported to EcuM through API `EcuM_SetWakeupEvent` with a wakeup source value, which has a “1” at the bit position according to the symbolic name value referred by `CanTrcvPorWakeupSourceRef`, and “0” on all others. | ()

[SWS_CanTrcv_00184] | If the SYSERR flag is set, wakeup shall be reported to EcuM through API `EcuM_SetWakeupEvent` with a wakeup source value, which has a “1” at the bit position according to the symbolic name value referred by `CanTrcvSyserrWakeupSourceRef`, and “0” on all others. | ()

[SWS_CanTrcv_00113] | If there is no/incorrect communication towards the transceiver, the function `CanTrcv_Init` shall report the development error `CANTRCV_E_NO_TRCV_CONTROL`.

For Eg., there are different transceiver types and different access ways (port connection, SPI). This development error should be signaled if you detect any miscommunication with your hardware. Depending on connection type and depending on your transceiver hardware you may not run in situations where you have to signal this error. | ()

[SWS_CanTrcv_00168] | If DET is enabled for `CanTrcv` module: the function `CanTrcv_Init` shall raise the development error `CANTRCV_E_BAUDRATE_NOT_SUPPORTED`, if the configured baud rate is not supported by the transceiver. | ()

[SWS_CanTrcv_00226] | In order to implement the AUTOSAR Partial Networking mechanism CAN transceivers shall support the definition of a data mask for the Wake Up Frame (the configuration structure of `CanTrcvPnFrameDataMask` is mandatory). | ()

8.3.2 CanTrcv_SetOpMode

[SWS_CanTrcv_00002]

Service name:	CanTrcv_SetOpMode	
Syntax:	Std_ReturnType CanTrcv_SetOpMode(uint8 Transceiver, CanTrcv_TrcevModeType OpMode)	
Service ID[hex]:	0x01	
Sync/Async:	Asynchronous	
Reentrancy:	Reentrant for different transceivers	
Parameters (in):	Transceiver	CAN transceiver to which API call has to be applied.
	OpMode	This parameter contains the desired operating mode
Parameters (in-out):	None	
Parameters (out):	None	

Return value:	Std_ReturnType	E_OK: will be returned if the request for transceiver mode change has been accepted. E_NOT_OK: will be returned if the request for transceiver mode change has not been accepted or any parameter is out of the allowed range.
Description:	Sets the mode of the Transceiver to the value OpMode.	

] (SRS_BSW_00310, SRS_BSW_00329; SRS_BSW_00357, SRS_BSW_00369, SRS_BSW_00371, SRS_BSW_00406, SRS_Can_01091, SRS_Can_01097, SRS_Can_01098, SRS_Can_01099, SRS_Can_01100, SRS_Can_01109, SRS_Can_01110, SRS_Can_01108)

[SWS_CanTrcv_00102] | The function `CanTrcv_SetOpMode` shall switch the internal state of Transceiver to the value of the parameter `OpMode`, which can be `CANTRCV_TRCVMODE_NORMAL`, `CANTRCV_TRCVMODE_STANDBY` or `CANTRCV_TRCVMODE_SLEEP`. | ()

[SWS_CanTrcv_00103] | The user of the `CanTrcv` module shall call the function `CanTrcv_SetOpMode` with `OpMode = CANTRCV_TRCVMODE_STANDBY` or `CANTRCV_TRCVMODE_NORMAL`, if the Transceiver is in mode `CANTRCV_TRCVMODE_NORMAL`. | ()

[SWS_CanTrcv_00104] | The user of the `CanTrcv` module shall call the function `CanTrcv_SetOpMode` with `OpMode = CANTRCV_TRCVMODE_SLEEP` or `CANTRCV_TRCVMODE_STANDBY`, if the Transceiver is in mode `CANTRCV_TRCVMODE_STANDBY`. | ()

This API is applicable to each transceiver with each value for parameter `CanTrcv_SetOpMode`, regardless of whether the transceiver hardware supports these modes or not. This is to simplify the view of the `CanIf` to the assigned bus.

[SWS_CanTrcv_00105] | If the requested mode is not supported by the underlying transceiver hardware, the function `CanTrcv_SetOpMode` shall return `E_NOT_OK`. | ()

The number of supported busses is set up in the configuration phase.

[SWS_CanTrcv_00186] | If selective wakeup is supported by hardware: the flags `POR` and `YSERR` of the transceiver status shall be checked by `CanTrcv_SetOpMode` API. | ()

[SWS_CanTrcv_00187] | If the `POR` flag is set, transceiver shall be re-initialized to run the transceiver's configuration sequence. | ()

[SWS_CanTrcv_00188] | If the `YSERR` flag is NOT set and the requested mode is `CANTRCV_NORMAL`, transceiver shall call the API `CanIf_ConfirmPnAvailability()` for the corresponding abstract `CanIf` TransceiverId. `CanIf_ConfirmPnAvailability` informs `CanNm` (through `CanIf` and `CanSm`) that selective wakeup is enabled. | ()

[SWS_CanTrcv_00114] | If there is no/incorrect communication to the transceiver, the function `CanTrcv_SetOpMode` shall report development error `CANTRCV_E_NO_TRCV_CONTROL` and return `E_NOT_OK`. | ()

[SWS_CanTrcv_00120] | If development error detection for the module `CanTrcv` is enabled:

If the function `CanTrcv_SetOpMode` is called with `OpMode = CANTRCV_TRCVMODE_STANDBY`, and the Transceiver is not in mode `CANTRCV_TRCVMODE_NORMAL` or `CANTRCV_TRCVMODE_STANDBY`, the

function `CanTrcv_SetOpMode` shall raise the development error `CANTRCV_E_TRCV_NOT_NORMAL` and return `E_NOT_OK`.] ()

[SWS_CanTrcv_00121] [If development error detection for the module `CanTrcv` is enabled:

If the function `CanTrcv_SetOpMode` is called with `OpMode = CANTRCV_TRCVMODE_SLEEP`, and the Transceiver is not in mode `CANTRCV_TRCVMODE_STANDBY` or `CANTRCV_TRCVMODE_SLEEP`, the function `CanTrcv_SetOpMode` shall raise the development error `CANTRCV_E_TRCV_NOT_STANDBY` and return `E_NOT_OK`.] ()

[SWS_CanTrcv_00122] [If development error detection for the module `CanTrcv` is enabled:

If called before the `CanTrcv` module has been initialized, the function `CanTrcv_SetOpMode` shall raise the development error `CANTRCV_E_UNINIT` and return `E_NOT_OK`.] ()

[SWS_CanTrcv_00123] [If development error detection for the module `CanTrcv` is enabled: If called with an invalid Transceiver number, the function `CanTrcv_SetOpMode` shall raise the development error `CANTRCV_E_INVALID_TRANSCEIVER` and return `E_NOT_OK`.] ()

[SWS_CanTrcv_00087] [If development error detection for the module `CanTrcv` is enabled: If called with an invalid `OpMode`, the function `CanTrcv_SetOpMode` shall raise the development error `CANTRCV_E_PARAM_TRCV_OPMODE` and return `E_NOT_OK`.] ()

8.3.3 CanTrcv_GetOpMode

[SWS_CanTrcv_00005]

Service name:	CanTrcv_GetOpMode	
Syntax:	Std_ReturnType CanTrcv_GetOpMode(uint8 Transceiver, CanTrcv_TrcevModeType* OpMode)	
Service ID[hex]:	0x02	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	Transceiver	CAN transceiver to which API call has to be applied.
Parameters (in-out):	None	
Parameters (out):	OpMode	Pointer to operation mode of the bus the API is applied to.
Return value:	Std_ReturnType	E_OK: will be returned if the operation mode was detected. E_NOT_OK: will be returned if the operation mode was not detected.
Description:	Gets the mode of the Transceiver and returns it in OpMode.	

] (SRS_BSW_00310, SRS_BSW_00329, SRS_BSW_00369, SRS_BSW_00371, SRS_BSW_00377, SRS_BSW_00406, SRS_Can_01091, SRS_Can_01097, SRS_Can_01101, SRS_Can_01109, SRS_Can_01110)

[SWS_CanTrcv_00106] [The function `CanTrcv_GetOpMode` shall collect the actual state of the CAN transceiver driver in the out parameter `OpMode`.] ()

See function `CanTrcv_Init` for the provided state after the CAN transceiver driver initialization till the first operation mode change request.

The number of supported busses is statically set in the configuration phase.

[SWS_CanTrcv_00115] | If there is no/incorrect communication to the transceiver, the function `CanTrcv_GetOpMode` shall report the development error `CANTRCV_E_NO_TRCV_CONTROL` and return `E_NOT_OK`. | ()

[SWS_CanTrcv_00124] | If development error detection for the module `CanTrcv` is enabled: If called before the `CanTrcv` module has been initialized, the function `CanTrcv_GetOpMode` shall raise the development error `CANTRCV_E_UNINIT` and return `E_NOT_OK`. | ()

[SWS_CanTrcv_00129] | If development error detection for the module `CanTrcv` is enabled: If called with an invalid Transceiver number, the function `CanTrcv_GetOpMode` shall raise the development error `CANTRCV_E_INVALID_TRANSCEIVER` and return `E_NOT_OK`. | ()

[SWS_CanTrcv_00132] | If development error detection for the module `CanTrcv` is enabled: If called with `OpMode = NULL`, the function `CanTrcv_GetOpMode` shall raise the development error `CANTRCV_E_PARAM_POINTER` and return `E_NOT_OK`. | ()

8.3.4 CanTrcv_GetBusWuReason

[SWS_CanTrcv_00007]

Service name:	CanTrcv_GetBusWuReason	
Syntax:	<pre>Std_ReturnType CanTrcv_GetBusWuReason(uint8 Transceiver, CanTrcv_TrcevWakeupReasonType* reason)</pre>	
Service ID[hex]:	0x03	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	Transceiver	CAN transceiver to which API call has to be applied.
Parameters (in-out):	None	
Parameters (out):	reason	Pointer to wake up reason of the bus the API is applied to.
Return value:	Std_ReturnType	<p><code>E_OK</code>: will be returned if the transceiver wakeup reason was provided.</p> <p><code>E_NOT_OK</code>: will be returned if no wake up reason is available or if the service request failed due to development errors.</p>
Description:	Gets the wakeup reason for the Transceiver and returns it in parameter Reason.	

| (SRS_BSW_00310, SRS_BSW_00329, SRS_BSW_00369, SRS_BSW_00371, SRS_BSW_00375, SRS_BSW_00377, SRS_BSW_00406, SRS_Can_01091, SRS_Can_01095, SRS_Can_01097, SRS_Can_01103, SRS_Can_01106, SRS_Can_01109, SRS_Can_01110)

[SWS_CanTrcv_00107] | The function `CanTrcv_GetBusWuReason` shall collect the reason for the wake up that the CAN transceiver has detected in the parameter Reason. | ()

The ability to detect and differentiate the possible wake up reasons depends strongly on the CAN transceiver hardware.

Be aware if more than one bus is available, each bus may report a different wake up reason. E.g. if an ECU has CAN, a wake up by CAN may occur and the incoming data may cause an internal wake up for another CAN bus.

The CAN transceiver driver has a “per bus” view and does not vote the more important reason or sequence internally. The same may be true if e.g. one transceiver controls the power supply and the other is just powered or un-powered.

The number of supported busses is statically set in the configuration phase.

[SWS_CanTrcv_00116] | If there is no/incorrect communication to the transceiver, the function `CanTrcv_GetBusWuReason` shall report the development error `CANTRCV_E_NO_TRCV_CONTROL` and return `E_OK`. | ()

[SWS_CanTrcv_00125] | If development error detection for the module `CanTrcv` is enabled: If called before the `CanTrcv` module has been initialized, the function `CanTrcv_GetBusWuReason` shall raise development error `CANTRCV_E_UNINIT` and return `E_NOT_OK`. | ()

[SWS_CanTrcv_00130] | If development error detection for the module `CanTrcv` is enabled: If called with an invalid Transceiver number, the function `CanTrcv_GetBusWuReason` shall raise development error `CANTRCV_E_INVALID_TRANSCEIVER` and return `E_NOT_OK`. | ()

[SWS_CanTrcv_00133] | If development error detection for the module `CanTrcv` is enabled: If called with `Reason = NULL`, the function `CanTrcv_GetBusWuReason` shall raise the development error `CANTRCV_E_PARAM_POINTER` and return `E_NOT_OK`. | ()

8.3.5 CanTrcv_GetVersionInfo

[SWS_CanTrcv_00008]

Service name:	CanTrcv_GetVersionInfo	
Syntax:	<pre>void CanTrcv_GetVersionInfo(Std_VersionInfoType* versioninfo)</pre>	
Service ID[hex]:	0x04	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	None	
Parameters (in-out):	None	
Parameters (out):	versioninfo	Pointer to version information of this module.
Return value:	None	
Description:	Gets the version of the module and returns it in <code>VersionInfo</code> .	

| (SRS_BSW_00310, SRS_BSW_00329, SRS_BSW_00369, SRS_BSW_00371, SRS_BSW_00406, SRS_BSW_00407, SRS_BSW_00411)

8.3.6 CanTrcv_SetWakeupMode

[SWS_CanTrcv_00009]

Service name:	CanTrcv_SetWakeupMode	
Syntax:	<pre>Std_ReturnType CanTrcv_SetWakeupMode(uint8 Transceiver, CanTrcv_TrcvWakeupModeType TrcvWakeupMode)</pre>	
Service ID[hex]:	0x05	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant for different transceivers	
Parameters (in):	Transceiver	CAN transceiver to which API call has to be applied.
	TrcvWakeupMode	Requested transceiver wakeup reason
Parameters (in-out):	None	

out):			
Parameters (out):	None		
Return value:	<table border="1"> <tr> <td>Std_ReturnType</td> <td> E_OK: Will be returned, if the wakeup state has been changed to the requested mode. E_NOT_OK: Will be returned, if the wakeup state change has failed or the parameter is out of the allowed range. The previous state has not been changed. </td> </tr> </table>	Std_ReturnType	E_OK: Will be returned, if the wakeup state has been changed to the requested mode. E_NOT_OK: Will be returned, if the wakeup state change has failed or the parameter is out of the allowed range. The previous state has not been changed.
Std_ReturnType	E_OK: Will be returned, if the wakeup state has been changed to the requested mode. E_NOT_OK: Will be returned, if the wakeup state change has failed or the parameter is out of the allowed range. The previous state has not been changed.		
Description:	Enables, disables or clears wake-up events of the Transceiver according to TrcvWakeupMode.		

] (SRS_BSW_00310, SRS_BSW_00329, SRS_BSW_00369, SRS_BSW_00371, SRS_BSW_00406, SRS_Can_01091, SRS_Can_01097, SRS_Can_01109, SRS_Can_01110, SRS_Can_01115)

[SWS_CanTrcv_00111] | Enabled: If the function `CanTrcv_SetWakeupMode` is called with `TrcvWakeupMode = CANTRCV_WUMODE_ENABLE` and if the `CanTrcv` module has a stored wakeup event pending for the addressed bus, the `CanTrcv` module shall update its wakeup event as 'present'.] ()

[SWS_CanTrcv_00093] | Disabled: If the function `CanTrcv_SetWakeupMode` is called with `TrcvWakeupMode = CANTRCV_WUMODE_DISABLE`, the wakeup events are disabled on the addressed transceiver. It is required by the transceiver device and the transceiver driver to detect the wakeup events and store it internally, in order to raise the wakeup events when the wakeup mode is enabled again.

] (SRS_BSW_00388, SRS_BSW_00389, SRS_BSW_00390, SRS_BSW_00391, SRS_BSW_00392, SRS_BSW_00393, SRS_BSW_00394, SRS_BSW_00395, SRS_BSW_00408, SRS_BSW_00160, SRS_Can_01090)

[SWS_CanTrcv_00094] | Clear: If the function `CanTrcv_SetWakeupMode` is called with `TrcvWakeupMode = CANTRCV_WUMODE_CLEAR`, then a stored wakeup event is cleared on the addressed transceiver.] ()

[SWS_CanTrcv_00150] | Clearing of wakeup events have to be used when the wake up notification is disabled to clear all stored wake up events under control of the higher layer.] ()

[SWS_CanTrcv_00095] | The implementation can enable, disable or clear wake up events from the last communication cycle. It is very important not to lose wake up events during the disabled period.] (SRS_BSW_00388, SRS_BSW_00389, SRS_BSW_00390, SRS_BSW_00391, SRS_BSW_00392, SRS_BSW_00393, SRS_BSW_00394, SRS_BSW_00395, SRS_BSW_00408, SRS_BSW_00160, SRS_Can_01090)

The number of supported busses is statically set in the configuration phase.

[SWS_CanTrcv_00117] | If there is no/incorrect communication to the transceiver, the function `CanTrcv_SetWakeupMode` shall report the development error `CANTRCV_E_NO_TRCV_CONTROL` and return `E_NOT_OK`.] ()

[SWS_CanTrcv_00127] | If development error detection for the module `CanTrcv` is enabled: If called before the `CanTrcv` has been initialized, the function `CanTrcv_SetWakeupMode` shall raise development error `CANTRCV_E_UNINIT` and return `E_NOT_OK`.] ()

[SWS_CanTrcv_00131] | If development error detection for the module `CanTrcv` is enabled: If called with an invalid Transceiver number, the function `CanTrcv_SetWakeupMode` shall raise development error `CANTRCV_E_INVALID_TRANSCEIVER` and return `E_NOT_OK`.] ()

[SWS_CanTrcv_00089] | If development error detection for the module `CanTrcv` is enabled: If called with an invalid `TrcvWakeupMode`, the function `CanTrcv_SetWakeupMode` shall raise the development error `CANTRCV_E_PARAM_TRCV_WAKEUP_MODE`

and return E_NOT_OK.] ()

8.3.7 CanTrcv_GetTrcvSystemData

[SWS_CanTrcv_00213]

Service name:	CanTrcv_GetTrcvSystemData	
Syntax:	Std_ReturnType CanTrcv_GetTrcvSystemData (uint8 Transceiver, const uint32* TrcvSysData)	
Service ID[hex]:	0x09	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	Transceiver	CAN transceiver ID.
Parameters (in-out):	None	
Parameters (out):	TrcvSysData	Configuration/Status data of the transceiver.
Return value:	Std_ReturnType	E_OK: will be returned if the transceiver status is successfully read. E_NOT_OK: will be returned if the transceiver status data is not available or a development error occurs.
Description:	Reads the transceiver configuration/status data and returns it through parameter TrcvSysData. This API shall exist only if CanTrcvHwPnSupport = TRUE.	

] ()

[SWS_CanTrcv_00189] [The function CanTrcv_GetTrcvSystemData shall read the configuration/status of the CAN transceiver and store the read data in the out parameter TrcvSysData. If this is successful, E_OK shall be returned.

Hint: This API can be invoked through diagnostic services or during initialization to determine the transceiver status and its availability.

Note: Currently an agreement on the parameter set for the transceiver HW specification has not been reached. For this reason, the diagnostic data is now returned as a uint32 (as stored in the transceiver registers). When a definitive and standard parameter set is defined, a data structure may be defined for abstracting the diagnostic data.] ()

[SWS_CanTrcv_00190] [If there is no/incorrect communication to the transceiver, the function CanTrcv_GetTrcvSystemData shall report the development error CANTRCV_E_NO_TRCV_CONTROL and return E_NOT_OK.] ()

[SWS_CanTrcv_00191] [If DET is enabled for the CanTrcv module: if called before the CanTrcv has been initialized, the function CanTrcv_GetTrcvSystemData shall raise development error CANTRCV_E_UNINIT and return E_NOT_OK.] ()

[SWS_CanTrcv_00192] [If DET is enabled for the CanTrcv module: if called with an invalid transceiver ID for parameter Transceiver, function CanTrcv_GetTrcvSystemData shall raise the development error CANTRCV_E_INVALID_TRANSCEIVER and return E_NOT_OK.] ()

[SWS_CanTrcv_00193] [If DET is enabled for the CanTrcv module: if called with NULL pointer for parameter TrcvSysData, function CanTrcv_GetTrcvSystemData shall raise the development error CANTRCV_E_PARAM_POINTER and return E_NOT_OK.] ()

8.3.8 CanTrcv_ClearTrcvWufFlag

[SWS_CanTrcv_00214]

Service name:	CanTrcv_ClearTrcvWufFlag
Syntax:	Std_ReturnType CanTrcv_ClearTrcvWufFlag(uint8 Transceiver)
Service ID[hex]:	0x0a
Sync/Async:	Synchronous
Reentrancy:	Reentrant for different transceivers
Parameters (in):	Transceiver CAN Transceiver ID.
Parameters (in-out):	None
Parameters (out):	None
Return value:	Std_ReturnType E_OK: will be returned if the WUF flag has been cleared. E_NOT_OK: will be returned if the WUF flag has not been cleared or a development error occurs.
Description:	Clears the WUF flag in the transceiver hardware. This API shall exist only if CanTrcvHwPnSupport = TRUE.

] (SRS_Can_01157)

[SWS_CanTrcv_00194] | The function `CanTrcv_ClearTrcvWufFlag` shall clear the wakeup flag in the CAN transceiver. If successful, `E_OK` shall be returned.

Implementation Hints:

This API shall be used by the CanSM module for ensuring that no frame wakeup event is lost, during entering a low-power mode. This API clears the WUF flag.

The CAN transceiver shall be put into Standby mode (`CANTRCV_STANDBY`) after clearing of the WUF flag.

If a system error (SYSERR, e.g. configuration error) occurs while selective wakeup functionality is being enabled, transceiver will disable the functionality. Transceiver will wake up on the next CAN wake pattern (WUP).

In case of any other hardware error (e.g. frame detection error), transceiver will wake up if the error counter inside the transceiver overflows.] ()

[SWS_CanTrcv_00195] | CanTrcv shall inform CanIf that the wakeup flag has been cleared for the requested Transceiver, through the callback notification `CanIf_ClearTrcvWufFlagIndication` referring to the corresponding CAN transceiver with the abstract `CanIf_TransceiverId`.] ()

[SWS_CanTrcv_00196] | If there is no/incorrect communication to the transceiver, the function `CanTrcv_ClearTrcvWufFlag` shall report the development error `CANTRCV_E_NO_TRCV_CONTROL` and return `E_NOT_OK`.] ()

[SWS_CanTrcv_00197] | If DET is enabled for the CanTrcv module: if called before the CanTrcv has been initialized, the function `CanTrcv_ClearTrcvWufFlag` shall raise development error `CANTRCV_E_UNINIT` and return `E_NOT_OK`.] ()

[SWS_CanTrcv_00198] | If DET is enabled for the CanTrcv module: if called with an invalid transceiver ID for parameter `Transceiver`, function `CanTrcv_ClearTrcvWufFlag` shall raise the development error `CANTRCV_E_INVALID_TRANSCEIVER` and return `E_NOT_OK`.] ()

8.3.9 CanTrcv_ReadTrcvTimeoutFlag

[SWS_CanTrcv_00215]

Service name:	CanTrcv_ReadTrcvTimeoutFlag	
Syntax:	Std_ReturnType CanTrcv_ReadTrcvTimeoutFlag(uint8 Transceiver, CanTrcv_TrvcFlagStateType* FlagState)	
Service ID[hex]:	0x0b	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	Transceiver	CAN transceiver ID.
Parameters (in-out):	None	
Parameters (out):	FlagState	State of the timeout flag.
Return value:	Std_ReturnType	E_OK: Will be returned, if status of the timeout flag is successfully read. E_NOT_OK: Will be returned, if status of the timeout flag could not be read.
Description:	Reads the status of the timeout flag from the transceiver hardware. This API shall exist only if CanTrcvHwPnSupport = TRUE.	

] ()

[SWS_CanTrcv_00199] | If DET for the module CanTrcv is enabled: If called with an invalid transceiver ID Transceiver, the function CanTrcv_ReadTrcvTimeoutFlag shall raise the development error CANTRCV_E_INVALID_TRANSCEIVER and return E_NOT_OK.] ()

[SWS_CanTrcv_00200] | If DET for the module CanTrcv is enabled: If called with FlagState = NULL, the function CanTrcv_ReadTrcvTimeoutFlag shall raise the development error CANTRCV_E_PARAM_POINTER and return E_NOT_OK.] ()

8.3.10 CanTrcv_ClearTrcvTimeoutFlag

[SWS_CanTrcv_00216]

Service name:	CanTrcv_ClearTrcvTimeoutFlag	
Syntax:	Std_ReturnType CanTrcv_ClearTrcvTimeoutFlag(uint8 Transceiver)	
Service ID[hex]:	0x0c	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	Transceiver	CAN transceiver ID.
Parameters (in-out):	None	
Parameters (out):	None	
Return value:	Std_ReturnType	E_OK: Will be returned, if the timeout flag is successfully cleared. E_NOT_OK: Will be returned, if the timeout flag could not be cleared.
Description:	Clears the status of the timeout flag in the transceiver hardware. This API shall exist only if CanTrcvHwPnSupport = TRUE.	

] ()

[SWS_CanTrcv_00201] | If DET for the module CanTrcv is enabled: If called with an invalid transceiver ID Transceiver, the function

CanTrcv_ClearTrcvTimeoutFlag shall raise the development error CANTRCV_E_INVALID_TRANSCEIVER and return E_NOT_OK.] ()

8.3.11 CanTrcv_ReadTrcvSilenceFlag

[SWS_CanTrcv_00217]

Service name:	CanTrcv_ReadTrcvSilenceFlag	
Syntax:	Std_ReturnType CanTrcv_ReadTrcvSilenceFlag(uint8 Transceiver, CanTrcv_TrvcFlagStateType* FlagState)	
Service ID[hex]:	0x0d	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	Transceiver	CAN transceiver ID.
Parameters (in-out):	None	
Parameters (out):	FlagState	State of the silence flag.
Return value:	Std_ReturnType	E_OK: Will be returned, if status of the silence flag is successfully read. E_NOT_OK: Will be returned, if status of the silence flag could not be read.
Description:	Reads the status of the silence flag from the transceiver hardware. This API shall exist only if CanTrcvHwPnSupport = TRUE.	

] ()

[SWS_CanTrcv_00202] | If DET for the module CanTrcv is enabled: If called with an invalid transceiver ID Transceiver, the function CanTrcv_ReadTrcvSilenceFlag shall raise the development error CANTRCV_E_INVALID_TRANSCEIVER and return E_NOT_OK.] ()

[SWS_CanTrcv_00203] | If DET for the module CanTrcv is enabled: If called with FlagState = NULL, the function CanTrcv_ReadTrcvSilenceFlag shall raise the development error CANTRCV_E_PARAM_POINTER and return E_NOT_OK.] ()

8.3.12 CanTrcv_CheckWakeup

[SWS_CanTrcv_00143]

Service name:	CanTrcv_CheckWakeup	
Syntax:	Std_ReturnType CanTrcv_CheckWakeup(uint8 Transceiver)	
Service ID[hex]:	0x07	
Sync/Async:	Synchronous	
Reentrancy:	Reentrant	
Parameters (in):	Transceiver	CAN transceiver to which API call has to be applied.
Parameters (in-out):	None	
Parameters (out):	None	
Return value:	Std_ReturnType	E_OK: API call has been accepted E_NOT_OK: API call has not been accepted
Description:	Service is called by underlying CANIF in case a wake up interrupt is detected.	

] ()

EcuM_EndCheckWakeup(WakeupSource) is called by CanTrcv_CheckWakeup for checking the wakeup source asynchronously.

[SWS_CanTrcv_00144] [If development error detection for the module CanTrcv is enabled: If called before the CanTrcv module has been initialized, the function CanTrcv_CheckWakeup shall raise the development error CANTRCV_E_UNINIT and return E_NOT_OK.] ()

[SWS_CanTrcv_00145] [If development error detection for the module CanTrcv is enabled: If called with an invalid Transceiver number, the function CanTrcv_CheckWakeup shall raise the development error CANTRCV_E_INVALID_TRANSCEIVER and return E_NOT_OK.] ()

[SWS_CanTrcv_00146] [If supported by hardware, CanTrcv_CheckWakeup shall validate whether there has been a wake up due to transceiver activity and if TRUE, reporting shall be done to EcuM via API EcuM_SetWakeupEvent with the wakeup source referenced in CanTrcvWakeupSourceRef.] ()

8.3.13 CanTrcv_SetPNActivationState

[SWS_CanTrcv_00219]

[

Service name:	CanTrcv_SetPNActivationState	
Syntax:	Std_ReturnType CanTrcv_SetPNActivationState(CanTrcv_PNActivationType ActivationState)	
Service ID[hex]:	0x0f	
Sync/Async:	Synchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	ActivationState	PN_ENABLED: PN wakeup functionality in CanTrcv shall be enabled. PN_DISABLED: PN wakeup functionality in CanTrcv shall be disabled.
Parameters (in-out):	None	
Parameters (out):	None	
Return value:	Std_ReturnType	E_OK: Will be returned, if the PN has been changed to the requested configuration. E_NOT_OK: Will be returned, if the PN configuration change has failed. The previous configuration has not been changed.
Description:	The API configures the wake-up of the transceiver for Standby and Sleep Mode: Either the CAN transceiver is woken up by a remote wake-up pattern (standard CAN wake-up) or by the configured remote wake-up frame.	

] ()

[SWS_CanTrcv_00220] [If development error detection for the module CanTrcv is enabled: If called before the CanTrcv module has been initialized, the function CanTrcv_SetPNActivationState shall raise the development error CANTRCV_E_UNINIT and return E_NOT_OK.] ()

[SWS_CanTrcv_00221] [CanTrcv shall enable the PN wakeup functionality when function CanTrcv_SetPNActivationState is called with ActivationState=PN_ENABLED and return E_OK.] ()

[SWS_CanTrcv_00222] | CanTrcv shall disable the PN wakeup functionality when function `CanTrcv_SetPNActivationState` is called with `ActivationState=PN_DISABLED` and return `E_OK`. | ()

8.3.14 CanTrcv_CheckWakeFlag

[SWS_CanTrcv_00223] |

Service name:	CanTrcv_CheckWakeFlag	
Syntax:	Std_ReturnType CanTrcv_CheckWakeFlag(uint8 Transceiver)	
Service ID[hex]:	0x0e	
Sync/Async:	Asynchronous	
Reentrancy:	Non Reentrant	
Parameters (in):	Transceiver	CAN transceiver ID.
Parameters (in-out):	None	
Parameters (out):	None	
Return value:	Std_ReturnType	E_OK: Will be returned, if the request for checking the wakeup flag has been accepted. E_NOT_OK: Will be returned, if the request for checking the wakeup flag has not been accepted.
Description:	Requests to check the status of the wakeup flag from the transceiver hardware.	

| ()

[SWS_CanTrcv_00224] | CanTrcv shall inform the CanIf with the callback notification `CanIf_CheckTrcvWakeFlagIndication`, that the wake flag of the CAN Transceiver with the corresponding `TransceiverId` has been checked. |()

[SWS_CanTrcv_00225] | If DET for the module `CanTrcv` is enabled: If called with an invalid transceiver ID `Transceiver`, the function `CanTrcv_CheckWakeFlag` shall raise the development error `CANTRCV_E_INVALID_TRANSCEIVER` and return `E_NOT_OK`. | ()

8.4 Scheduled functions

This chapter lists all functions provided by the `CanTrcv` module and called directly by the Basic Software Module Scheduler.

8.4.1 CanTrcv_MainFunction

[SWS_CanTrcv_00013]

Service name:	CanTrcv_MainFunction	
Syntax:	void CanTrcv_MainFunction(void)	
Service ID[hex]:	0x06	
Description:	Service to scan all busses for wake up events and perform these event.	

| (SRS_BSW_00310, SRS_BSW_00329, SRS_BSW_00369, SRS_BSW_00371, SRS_BSW_00373, SRS_BSW_00376, SRS_BSW_00406, SRS_BSW_00424,

SRS_BSW_00428, SRS_BSW_00171, SRS_BSW_00172, SRS_Can_01097, SRS_Can_01109, SRS_Can_01110)

The CAN bus transceiver driver may have cyclic jobs like polling for wake up events (if configured).

[SWS_CanTrcv_00112] | The `CanTrcv_MainFunction` shall scan all busses in STANDBY and SLEEP for wake up events.

This function shall set a wake-up event flag to perform these events. | (SRS_BSW_00343)

According to [SRS_BSW_00424], main processing functions shall be allocated by basic tasks. No special call order to be kept. This function is directly called by Basic Software Scheduler.

See configuration parameter `CanTrcvWakeUpSupport`.

[SWS_CanTrcv_00128] | If development error detection for the module `CanTrcv` is enabled: If called before the `CanTrcv` has been initialized, the function `CanTrcv_MainFunction` shall raise development error `CANTRCV_E_UNINIT`. | ()

8.4.2 CanTrcv_MainFunctionDiagnostics

[SWS_CanTrcv_00218]

Service name:	<code>CanTrcv_MainFunctionDiagnostics</code>
Syntax:	<code>void CanTrcv_MainFunctionDiagnostics(void)</code>
Service ID[hex]:	<code>0x08</code>
Description:	Reads the transceiver diagnostic status periodically and sets product/development accordingly.

| ()

[SWS_CanTrcv_00204] | The cyclic function `CanTrcv_MainFunctionDiagnostics` shall read the transceiver status periodically and report production/development errors accordingly. | ()

[SWS_CanTrcv_00205] | The cyclic function `CanTrcv_MainFunctionDiagnostics` shall exist only if `CanTrcvBusErrFlag = TRUE`. | ()

[SWS_CanTrcv_00206] | If configured and supported by hardware: if the `BUSERR` flag reported from BSW is set, function `CanTrcv_MainFunctionDiagnostics` shall call the API `Dem_ReportErrorStatus` with parameters `EventId` as `CANTRCV_E_BUS_ERROR` and `EventStatus` as `DEM_EVENT_STATUS_FAILED`. | (SRS_BSW_00337, SRS_BSW_00385, SRS_BSW_00327, SRS_BSW_00331)

[SWS_CanTrcv_00227] | If configured and supported by hardware: if the `BUSERR` flag reported from BSW is reset, function `CanTrcv_MainFunctionDiagnostics` shall call the API `Dem_ReportErrorStatus` with parameters `EventId` as `CANTRCV_E_BUS_ERROR` and `EventStatus` as `DEM_EVENT_STATUS_PASSED`. | (SRS_BSW_00337, SRS_BSW_00385, SRS_BSW_00327, SRS_BSW_00331)

[SWS_CanTrcv_00207] | If DET for the module `CanTrcv` is enabled: If called before the `CanTrcv` has been initialized, the function `CanTrcv_MainFunctionDiagnostics` shall raise development error `CANTRCV_E_UNINIT`. | ()

8.5 Call-back notifications

Since the CanTrcv is a driver module, it doesn't provide any callback functions for lower layer modules.

8.6 Expected Interfaces

This chapter lists all functions the module CanTrcv requires from other modules.

8.6.1 Mandatory Interfaces

This chapter defines all interfaces which are required to fulfill the core functionality of the module.

[SWS_CanTrcv_00085]

<i>API function</i>	<i>Description</i>
CanIf_TrcvModelIndication	This service indicates a transceiver state transition referring to the corresponding CAN transceiver with the abstract CanIf TransceiverId.
Dem_ReportErrorStatus	Queues the reported events from the BSW modules (API is only used by BSW modules). The interface has an asynchronous behavior, because the processing of the event is done within the Dem main function. OBD Events Suppression shall be ignored for this computation.

] (SRS_BSW_00370)

8.6.2 Optional Interfaces

This chapter defines all interfaces which are required to fulfill an optional functionality of the module.

[SWS_CanTrcv_00086]

<i>API function</i>	<i>Description</i>
CanIf_CheckTrcvWakeFlagIndication	This service indicates that the check of the transceiver's wake-up flag has been finished by the corresponding CAN transceiver with the abstract CanIf TransceiverId. This indication is used to cope with the asynchronous transceiver communication.
CanIf_ClearTrcvWufFlagIndication	This service indicates that the transceiver has cleared the WufFlag referring to the corresponding CAN transceiver with the abstract CanIf TransceiverId.
CanIf_ConfirmPnAvailability	This service indicates that the transceiver is running in PN communication mode referring to the corresponding CAN transceiver with the abstract CanIf TransceiverId.
Det_ReportError	Service to report development errors.
Dio_ReadChannel	Returns the value of the specified DIO channel.
Dio_ReadChannelGroup	This Service reads a subset of the adjoining bits of a port.
Dio_ReadPort	Returns the level of all channels of that port.
Dio_WriteChannel	Service to set a level of a channel.
Dio_WriteChannelGroup	Service to set a subset of the adjoining bits of a port to a specified level.
Dio_WritePort	Service to set a value of the port.
EcuM_SetWakeupEvent	Sets the wakeup event.
Icu_DisableNotification	This function disables the notification of a channel.
Icu_EnableNotification	This function enables the notification on the given channel.
Spi_GetStatus	Service returns the SPI Handler/Driver software module status.

Spi_ReadIB	Service for reading synchronously one or more data from an IB SPI Handler/Driver Channel specified by parameter.
Spi_SetupEB	Service to setup the buffers and the length of data for the EB SPI Handler/Driver Channel specified.
Spi_SyncTransmit	Service to transmit data on the SPI bus
Spi_WriteIB	Service for writing one or more data to an IB SPI Handler/Driver Channel specified by parameter.
Tm_BusyWait1us16bit	Performs busy waiting by polling with a guaranteed minimum waiting time.

J ()

1. The interfaces of the SPI module are used by the CanTrcv module if there are instances of the container CanTrcvSpiSequence.
2. The interfaces of the DIO module are used by the CanTrcv module if there are instances of the container CanTransceiverDIOAccess.

Note: If the Can transceiver is controlled via Dio/Spi, the Dio/Spi interfaces are required to fulfill the core functionality of the module. Which interfaces are needed exactly shall not be detailed further in this specification

8.6.3 Configurable interfaces

There are no configurable interfaces for CAN transceiver driver.

9 Sequence diagram


The focus of the following diagrams is on the interaction between the CAN transceiver driver and the BSW modules CanIf, ComM, EcuM and Dio. Depending on the CAN transceiver hardware, one or more calls to `Dio_WriteChannels` may be necessary.

Depending on the transceiver hardware, there may be a need of wait states for some transitions.


9.1 Wake up with valid validation

For all wakeup related sequence diagrams please refer to chapter 9 of ECU State Manager.


9.2 Interaction with DIO module

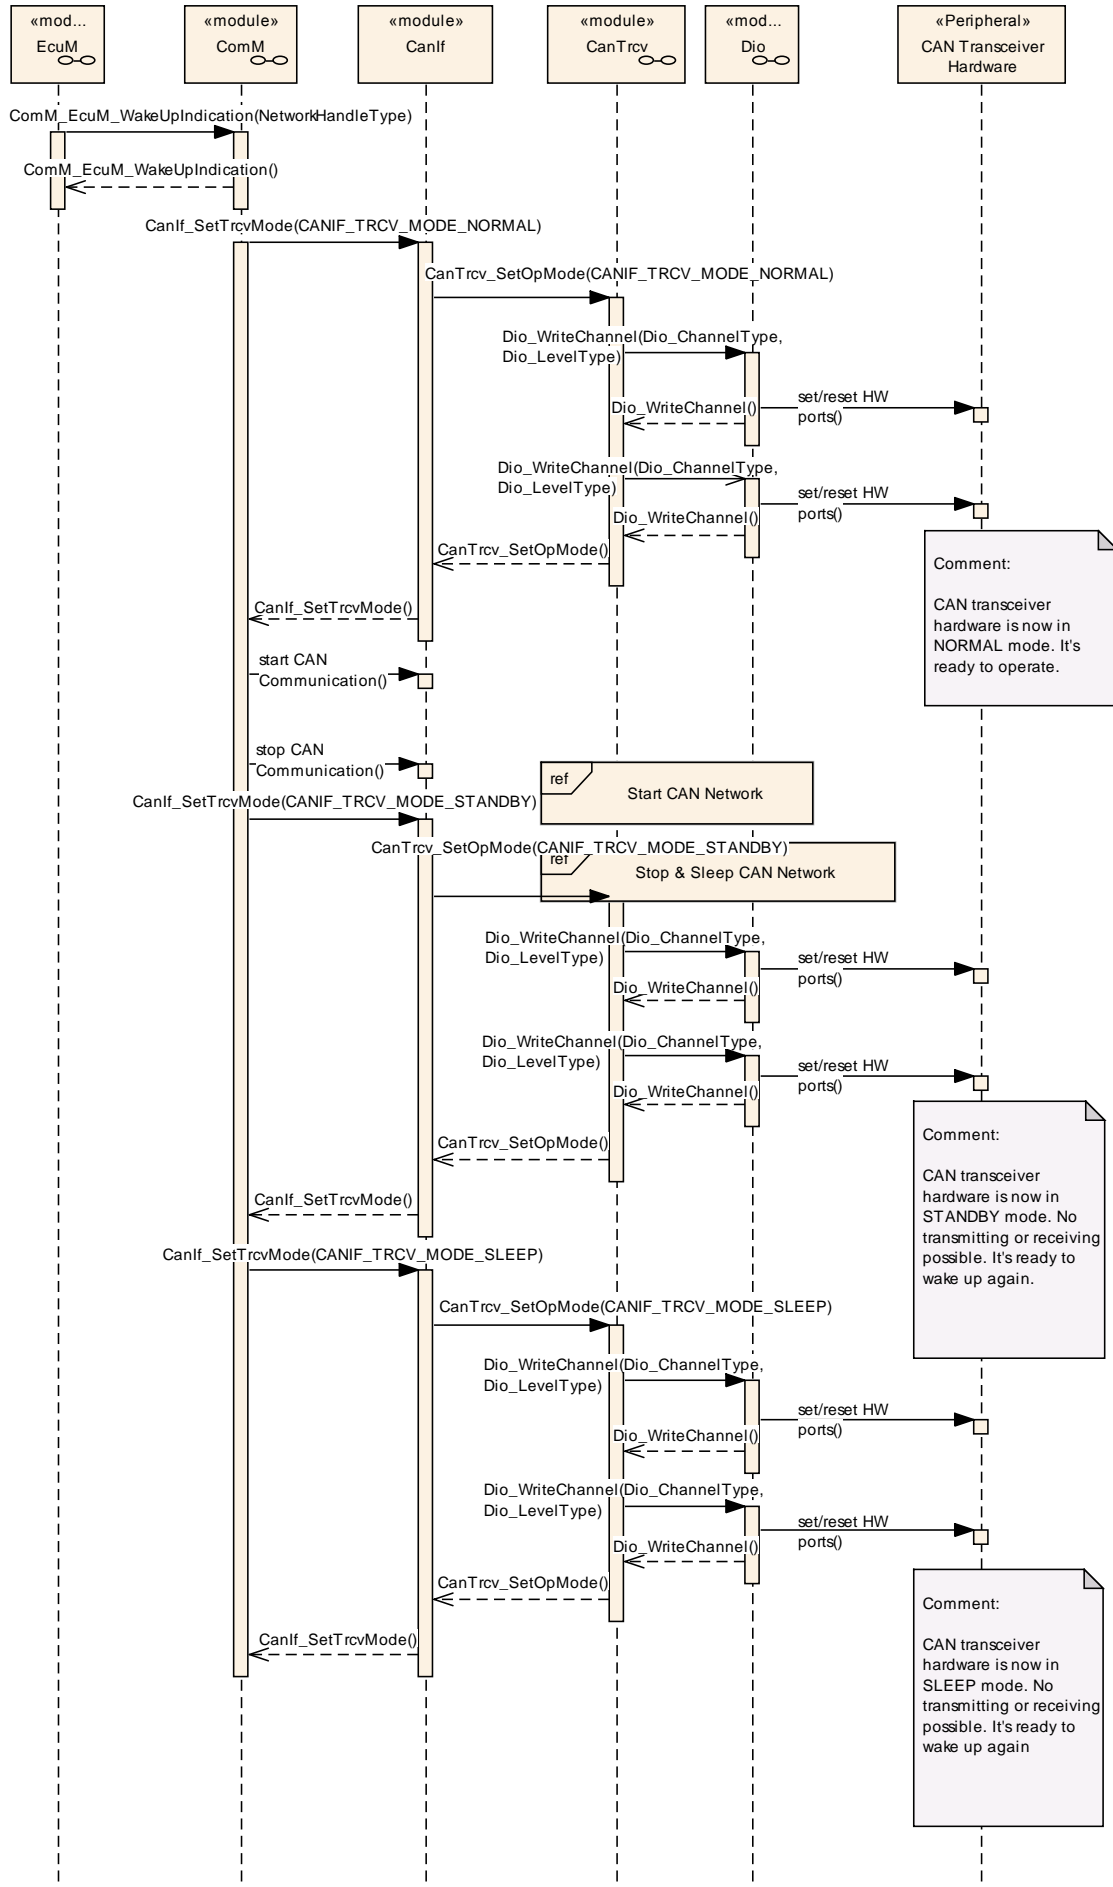

9.3 De-Initialization (SPI Synchronous)

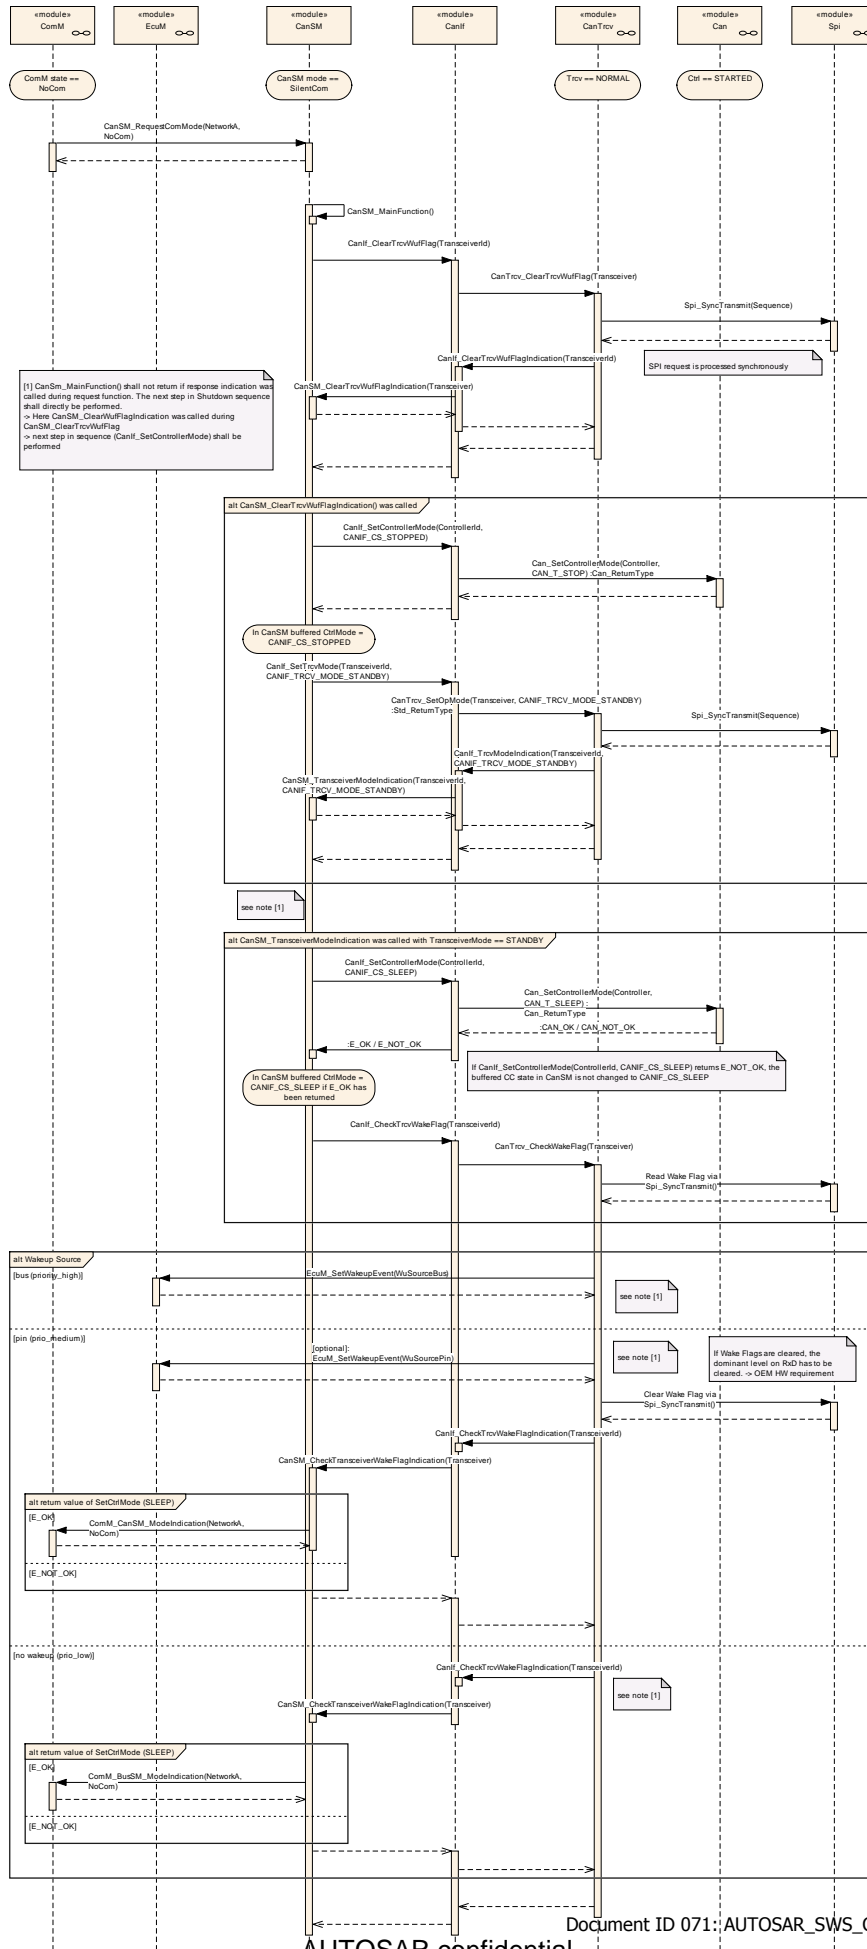

9.4 De-Initialization (SPI Asynchronous)

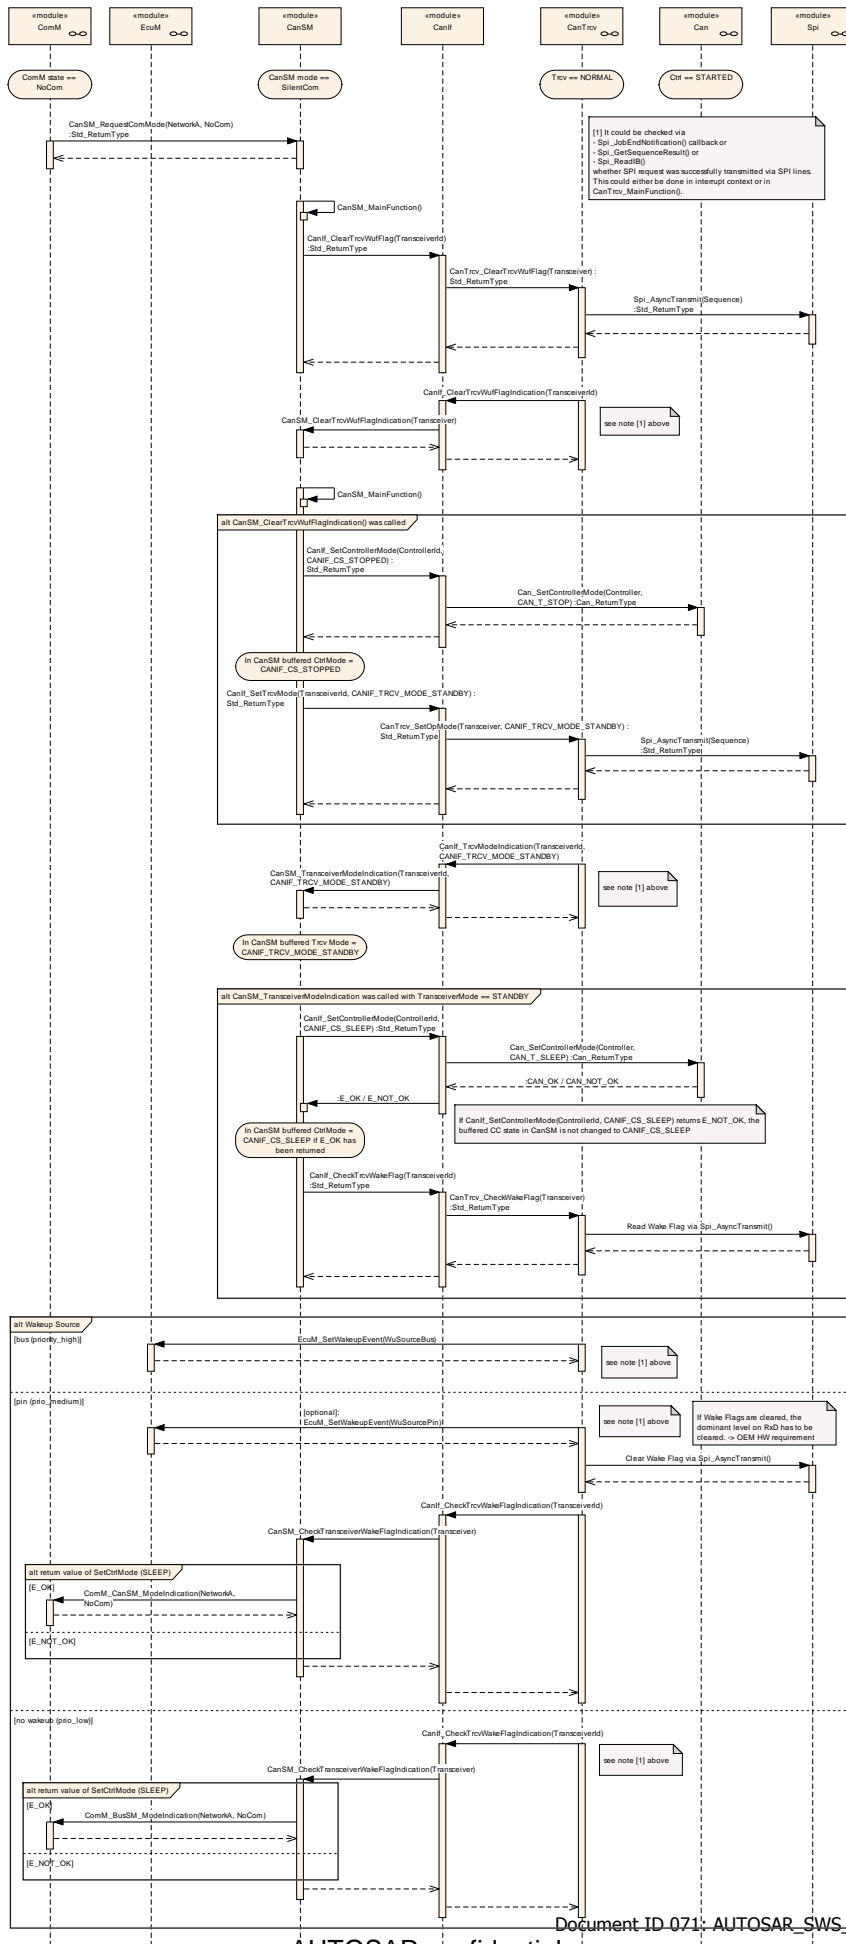

10 Configuration specification

In general this chapter defines configuration parameters and their clustering into containers. In order to support the specification Chapter 10.1 describes fundamentals.

Chapter 10.2 specifies the structure (containers) and the parameters of the module CanTrcv.

Chapter 0 specifies published information of the module CanTrcv.

10.1 How to read this chapter

For details refer to the chapter 10.1 “Introduction to configuration specification” in *SWS_BSWGeneral*

10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters are described in preceding chapters.

10.2.1 Variants


Currently VARIANT-PRE-COMPILE variant is defined for CanTrcv. VARIANT-PRE-COMPILE:Only parameters with “Pre-compile time” configuration are allowed in this variant

[SWS_CanTrcv_00017] [Only Pre-compile time configuration is allowed. Thus only VARIANT-PRE-COMPILE is allowed.] (SRS_BSW_00396, SRS_Can_01091)

10.2.2 CanTrcv

Module Name	CanTrcv
Module Description	Configuration of the CanTrcv (CAN Transceiver driver) module.
Post-Build Variant Support	true

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTrcvConfigSet	1	This container contains the configuration parameters and sub containers of the AUTOSAR WdgM module.
CanTrcvGeneral	1	Container gives CAN transceiver driver basic information.

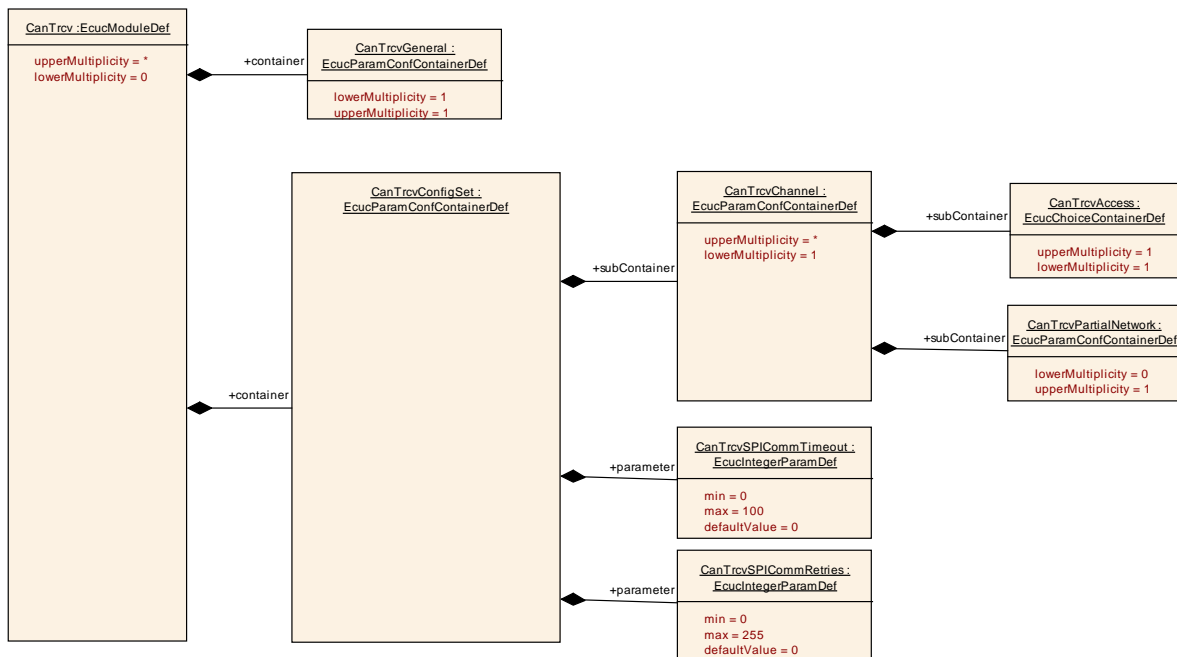

10.2.3 CanTrcvGeneral

SWS Item	ECUC_CanTrcv_00090 :
Container Name	CanTrcvGeneral
Description	Container gives CAN transceiver driver basic information.
Configuration Parameters	

SWS Item	ECUC_CanTrcv_00152 :
Name	CanTrcvDevErrorDetect

Description	Switches the Default Error Tracer (Det) detection and notification ON or OFF. <ul style="list-style-type: none"> true: enabled (ON). false: disabled (OFF). <p>If enabled, #define CANTRCV_DEV_ERROR_DETECT ON shall be generated. If disabled, #define CANTRCV_DEV_ERROR_DETECT OFF shall be generated. Define shall be part of file CanTrcv_Cfg.h.</p>		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00153 :		
Name	CanTrcvGetVersionInfo		
Description	Switches version information API on and off. If switched off, function need not be present in compiled code.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00184 :		
Name	CanTrcvIndex		
Description	Specifies the InstanceId of this module instance. If only one instance is present it shall have the Id 0.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00187 :		
Name	CanTrcvMainFunctionDiagnosticsPeriod		
Description	This parameter describes the period for cyclic call to CanTrcv_MainFunctionDiagnostics. Unit is seconds.		
Multiplicity	0..1		
Type	EcucFloatParamDef		
Range	0.001 .. 65.535		
Default value	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		

Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00186 :		
Name	CanTrcvMainFunctionPeriod		
Description	This parameter describes the period for cyclic call to CanTrcv_MainFunction. Unit is seconds.		
Multiplicity	0..1		
Type	EcucFloatParamDef		
Range	0.001 .. 65.535		
Default value	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		


SWS Item	ECUC_CanTrcv_00190 :		
Name	CanTrcvTimerType		
Description	Type of the Time Service Predefined Timer.		
Multiplicity	0..1		
Type	EcucEnumerationParamDef		
Range	None		None
	Timer_1us16bit		16 bit 1us timer
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00191 :		
Name	CanTrcvWaitTime		
Description	Wait time for transceiver state changes in seconds.		
Multiplicity	0..1		
Type	EcucFloatParamDef		
Range	0 .. 2.55E-4		
Default value	--		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		

Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00154 :		
Name	CanTrcvWakeUpSupport		
Description	Informs whether wake up is supported by polling or not supported. In case no wake up is supported by the hardware, setting has to be NOT_SUPPORTED. Only in the case of wake up supported by polling, function CanTrcv_MainFunction has to be present and to be invoked by the scheduler.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	CANTRCV_WAKEUP_BY_POLLING		Wake up by polling
	CANTRCV_WAKEUP_NOT_SUPPORTED		Wake up is not supported
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local dependency: CanTrcvWakeupByBusUsed		

No Included Containers

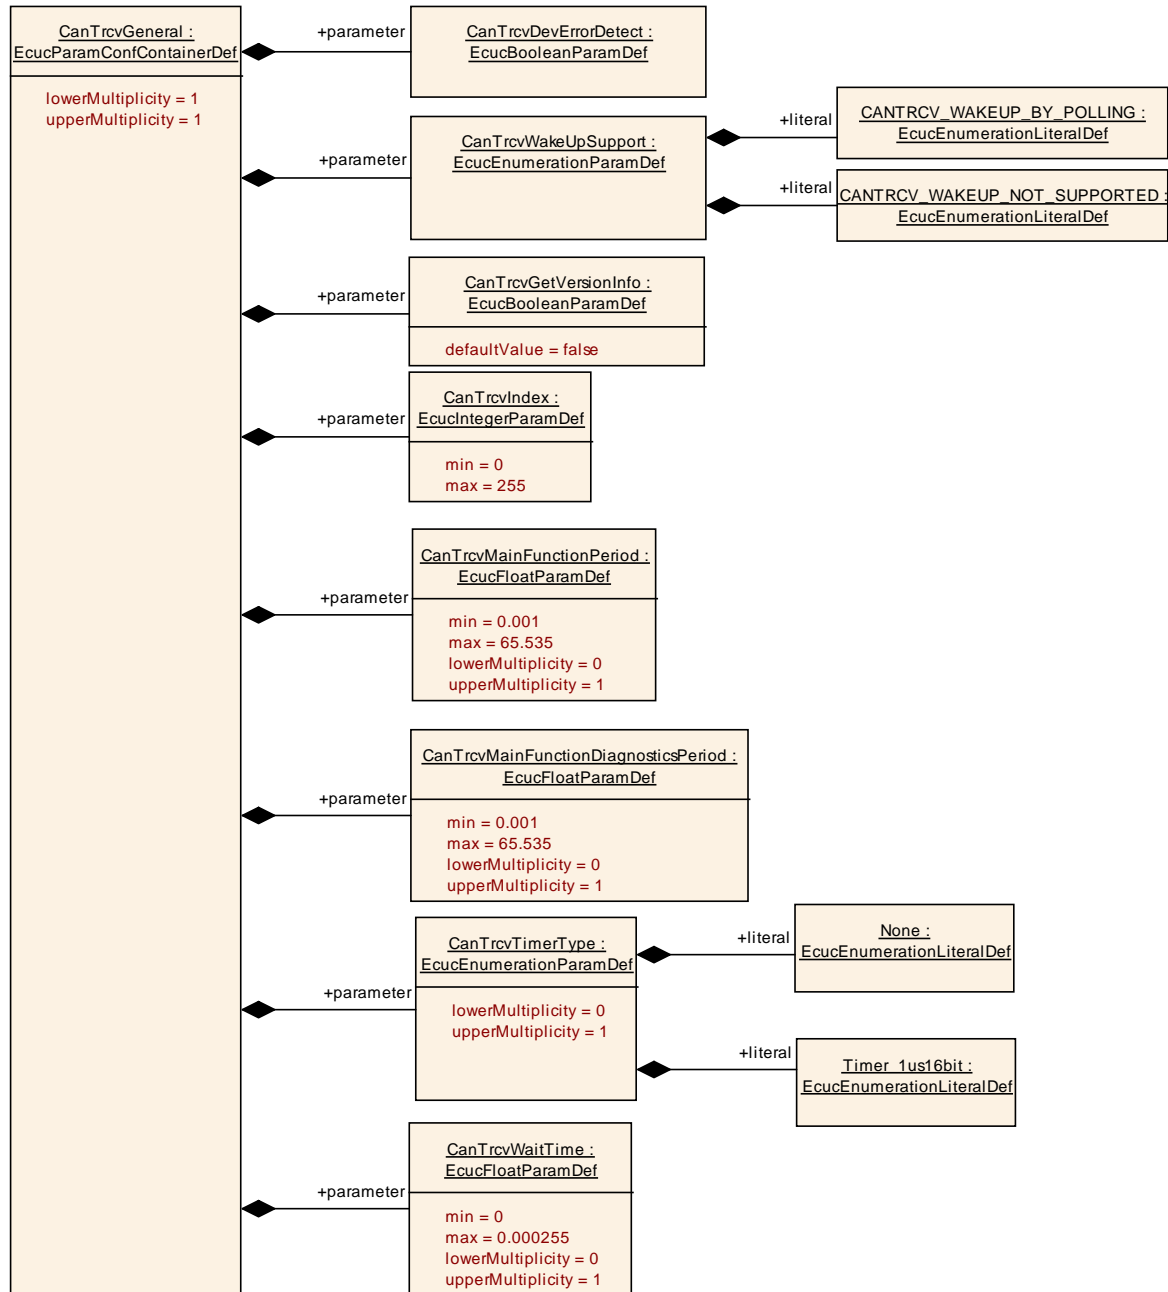

10.2.4 CanTrcvConfigSet

SWS Item	ECUC_CanTrcv_00173 :
Container Name	CanTrcvConfigSet
Description	This container contains the configuration parameters and sub containers of the AUTOSAR WdgM module.
Configuration Parameters	

SWS Item	ECUC_CanTrcv_00175 :
Name	CanTrcvSPICommRetries
Description	Indicates the maximum number of communication retries in case of a failed SPI communication (applies both to timed out communication and to errors/NACK in the response data). If configured value is '0', no retry is allowed (communication is expected to succeed at first try).
Multiplicity	1

Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	0		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: This parameter exists only if atleast one SPI Sequence is referenced in CanTrcvSpiSequence.		

SWS Item	ECUC_CanTrcv_00174 :		
Name	CanTrcvSPICommTimeout		
Description	Indicates the maximum time allowed to the CanTrcv for replying (either positively or negatively) to a SPI command. Timeout is configured in milliseconds. Timeout value of '0' means that no specific timeout is to be used by CanTrcv and the communication is executed at the best of the SPI HW capacity.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 100		
Default value	0		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: This parameter exists only if atleast one SPI Sequence is referenced in CanTrcvSpiSequence.		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTrcvChannel	1..*	Container gives CAN transceiver driver information about a single CAN transceiver (channel).

10.2.5 CanTrcvChannel

SWS Item	ECUC_CanTrcv_00143 :		
Container Name	CanTrcvChannel		
Description	Container gives CAN transceiver driver information about a single CAN transceiver (channel).		
Configuration Parameters			

SWS Item	ECUC_CanTrcv_00155 :		
Name	CanTrcvChannelId		
Description	Unique identifier of the CAN Transceiver Channel.		
Multiplicity	1		
Type	EcucIntegerParamDef (Symbolic Name generated for this parameter)		
Range	0 .. 255		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_CanTrcv_00096 :		
Name	CanTrcvChannelUsed		
Description	Shall the related CAN transceiver channel be used?		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	true		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00097 :		
Name	CanTrcvControlsPowerSupply		
Description	Is ECU power supply controlled by this transceiver? TRUE = Controlled by transceiver. FALSE = Not controlled by transceiver.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00160 :		
Name	CanTrcvHwPnSupport		
Description	Indicates whether the HW supports the selective wake-up function TRUE = Selective wakeup feature is supported by the transceiver FALSE = Selective wakeup functionality is not available in transceiver		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local dependency: CanTrcvWakeUpSupport		

SWS Item	ECUC_CanTrcv_00146 :		
Name	CanTrcvInitState		
Description	State of CAN transceiver after call to CanTrcv_Init.		
Multiplicity	1		
Type	EcucEnumerationParamDef		
Range	CANTRCV_OP_MODE_NORMAL		Normal operation mode
	CANTRCV_OP_MODE_SLEEP		Sleep operation mode
	CANTRCV_OP_MODE_STANDBY		Standby operation mode
Default value	CANTRCV_OP_MODE_NORMAL		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00147 :		
Name	CanTrcvMaxBaudrate		
Description	Max baudrate for transceiver hardware type. Only used for validation purposes. Value shall be configured by configuration tool based on transceiver hardware type.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 1000		
Default value	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00148 :		
Name	CanTrcvWakeupByBusUsed		
Description	Is wake up by bus supported? If CAN transceiver hardware does not support wake up by bus value is always FALSE. If CAN transceiver hardware supports wake up by bus value is TRUE or FALSE depending whether it is used or not. TRUE = Is used. FALSE = Is not used.		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local dependency: CanTrcvWakeUpSupport		

SWS Item	ECUC_CanTrcv_00185 :		
Name	CanTrcvIcuChannelRef		
Description	Reference to the IcuChannel to enable/disable the interrupts for wakeups.		
Multiplicity	0..1		
Type	Reference to [IcuChannel]		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency			

SWS Item	ECUC_CanTrcv_00181 :		
Name	CanTrcvPorWakeupSourceRef		
Description	Symbolic name reference to specify the wakeup sources that should be used in the calls to EcuM_SetWakeupEvent as specified in		


	[SWS_CanTrcv_00183] and [SWS_CanTrcv_00184]. This reference is mandatory if the HW supports POR or SYSERR flags		
Multiplicity	0..1		
Type	Symbolic name reference to [EcuMWakeupSource]		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_CanTrcv_00182 :		
Name	CanTrcvSyserrWakeupSourceRef		
Description	Symbolic name reference to specify the wakeup sources that should be used in the calls to EcuM_SetWakeupEvent as specified in [SWS_CanTrcv_00183] and [SWS_CanTrcv_00184] This reference is mandatory if the HW supports POR or SYSERR flags		
Multiplicity	0..1		
Type	Symbolic name reference to [EcuMWakeupSource]		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU		

SWS Item	ECUC_CanTrcv_00177 :		
Name	CanTrcvWakeupSourceRef		
Description	Reference to a wakeup source in the EcuM configuration. This reference is only needed if CanTrcvWakeupByBusUsed is true.		
Multiplicity	0..1		
Type	Reference to [EcuMWakeupSource]		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU dependency: CanTrcvWakeupByBusUsed		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTrcvAccess	1	Container gives CanTrcv Driver information about access to a single CAN transceiver.
CanTrcvDemEventParameter-Refs	0..1	Container for the references to DemEventParameter elements which shall be invoked using the API


		Dem_ReportErrorStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId value.
CanTrcvPartialNetwork	0..1	Container gives CAN transceiver driver information about the configuration of Partial Networking functionality.

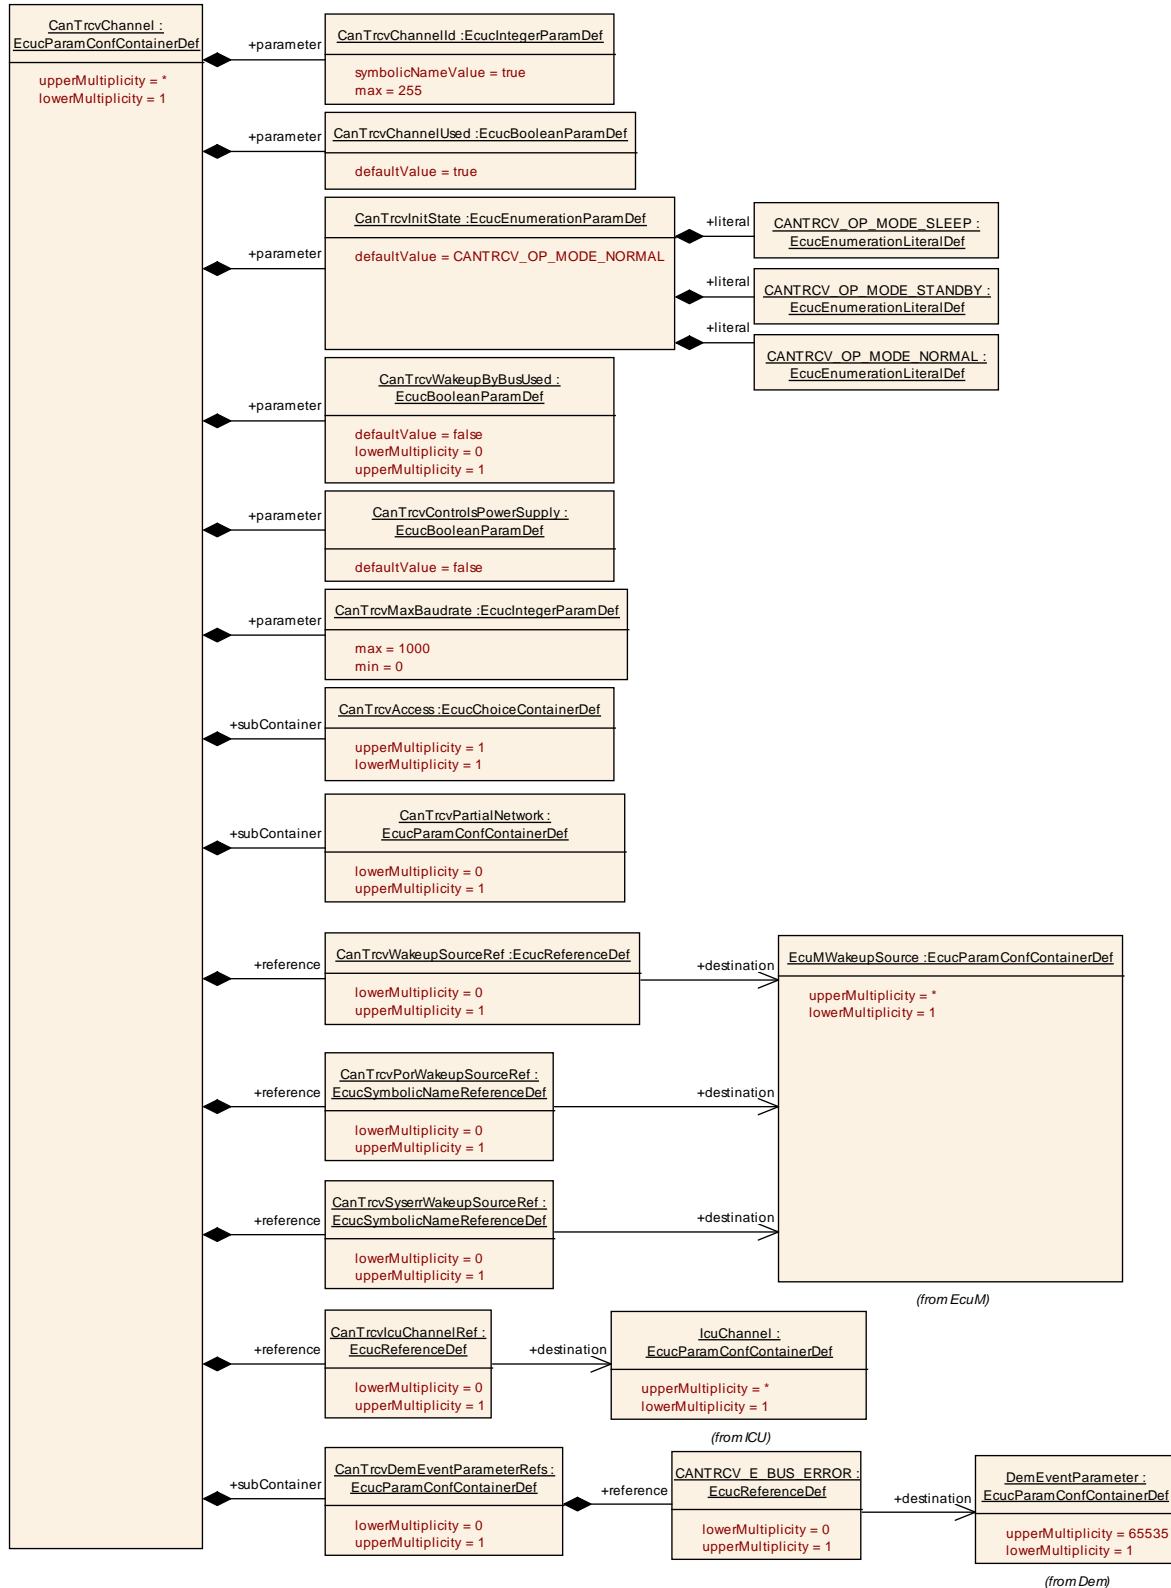

10.2.6 CanTrcvAccess

SWS Item	ECUC_CanTrcv_00101 :
Choice container Name	CanTrcvAccess
Description	Container gives CanTrcv Driver information about access to a single CAN transceiver.

Container Choices		
Container Name	Multiplicity	Scope / Dependency
CanTrcvDioAccess	0..1	Container gives CAN transceiver driver information about accessing ports and port pins. In addition relation between CAN transceiver hardware pin names and Dio port access information is given. If a CAN transceiver hardware has no Dio interface, there is no instance of this container.
CanTrcvSpiAccess	0..1	Container gives CAN transceiver driver information about accessing Spi. If a CAN transceiver hardware has no Spi interface, there is no instance of this container.

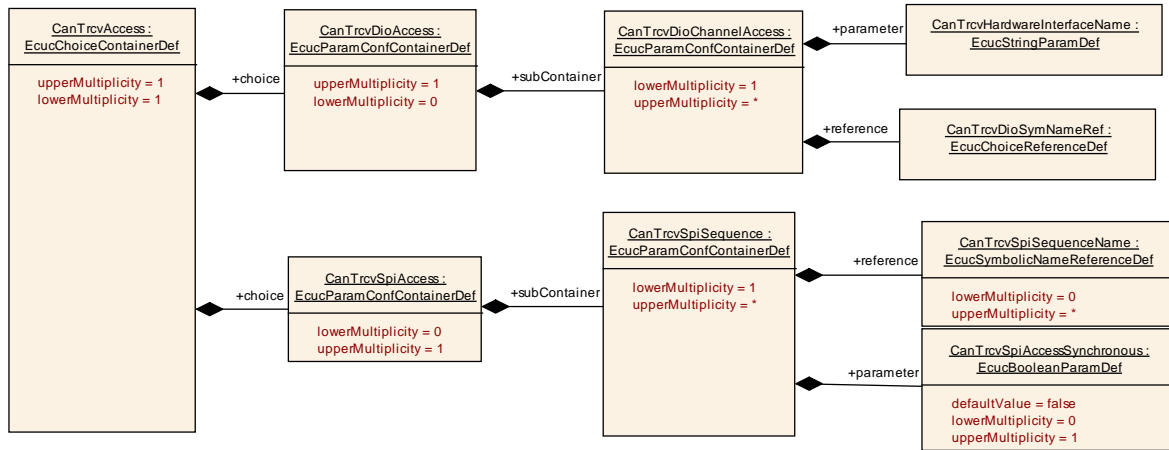

10.2.7 CanTrcvDioAccess

SWS Item	ECUC_CanTrcv_00145 :
Container Name	CanTrcvDioAccess
Description	Container gives CAN transceiver driver information about accessing ports and port pins. In addition relation between CAN transceiver hardware pin names and Dio port access information is given. If a CAN transceiver hardware has no Dio interface, there is no instance of this container.
Configuration Parameters	

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTrcvDioChannelAccess	1..*	Container gives DIO channel access by single Can transceiver channel.

10.2.8 CanTrcvDioChannelAccess

SWS Item	ECUC_CanTrcv_00157 :
Container Name	CanTrcvDioChannelAccess
Description	Container gives DIO channel access by single Can transceiver channel.
Configuration Parameters	

SWS Item	ECUC_CanTrcv_00150 :
Name	CanTrcvHardwareInterfaceName

Description	CAN transceiver hardware interface name. It is typically the name of a pin. From a Dio point of view it is either a port, a single channel or a channel group. Depending on this fact either CANTRCV_DIO_PORT_SYMBOLIC_NAME or CANTRCV_DIO_CHANNEL_SYMBOLIC_NAME or CANTRCV_DIO_CHANNEL_GROUP_SYMBOLIC_NAME shall reference a Dio configuration. The CAN transceiver driver implementation description shall list up this name for the appropriate CAN transceiver hardware.		
Multiplicity	1		
Type	EcucStringParamDef		
Default value	--		
maxLength	--		
minLength	--		
regularExpression	--		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00149 :		
Name	CanTrcvDioSymNameRef		
Description	Choice Reference to a DIO Port, DIO Channel or DIO Channel Group. This reference replaces the CANTRCV_DIO_PORT_SYM_NAME, CANTRCV_DIO_CHANNEL_SYM_NAME and CANTRCV_DIO_GROUP_SYM_NAME references in the Can Trcv SWS.		
Multiplicity	1		
Type	Choice reference to [DioChannel , DioChannelGroup , DioPort]		
Post-Build Variant Value	false		
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency			

No Included Containers

10.2.9 CanTrcvSpiAccess

SWS Item	ECUC_CanTrcv_00183 :		
Container Name	CanTrcvSpiAccess		
Description	Container gives CAN transceiver driver information about accessing Spi. If a CAN transceiver hardware has no Spi interface, there is no instance of this container.		
Configuration Parameters			

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTrcvSpiSequence	1..*	Container gives CAN transceiver driver information about one SPI sequence. One SPI sequence used by CAN transceiver driver is in exclusive use for it. No other driver is allowed to access this sequence. CAN transceiver driver may use one sequence to access n CAN transceiver hardwares chips of the same type or n sequences are used to access one single CAN transceiver hardware chip. If a CAN transceiver hardware has no SPI interface, there is no instance of this container.


10.2.10 CanTrcvSpiSequence

SWS Item	ECUC_CanTrcv_00144 :
Container Name	CanTrcvSpiSequence
Description	Container gives CAN transceiver driver information about one SPI sequence. One SPI sequence used by CAN transceiver driver is in exclusive use for it. No other driver is allowed to access this sequence. CAN transceiver driver may use one sequence to access n CAN transceiver hardware chips of the same type or n sequences are used to access one single CAN transceiver hardware chip. If a CAN transceiver hardware has no SPI interface, there is no instance of this container.
Configuration Parameters	

SWS Item	ECUC_CanTrcv_00176 :		
Name	CanTrcvSpiAccessSynchronous		
Description	This parameter is used to define whether the access to the Spi sequence is synchronous or asynchronous. true: SPI access is synchronous. false: SPI access is asynchronous.		
Multiplicity	0..1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00151 :		
Name	CanTrcvSpiSequenceName		
Description	Reference to a Spi sequence configuration container.		
Multiplicity	0..*		
Type	Symbolic name reference to [SpiSequence]		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: local dependency: SpiSequence		

No Included Containers

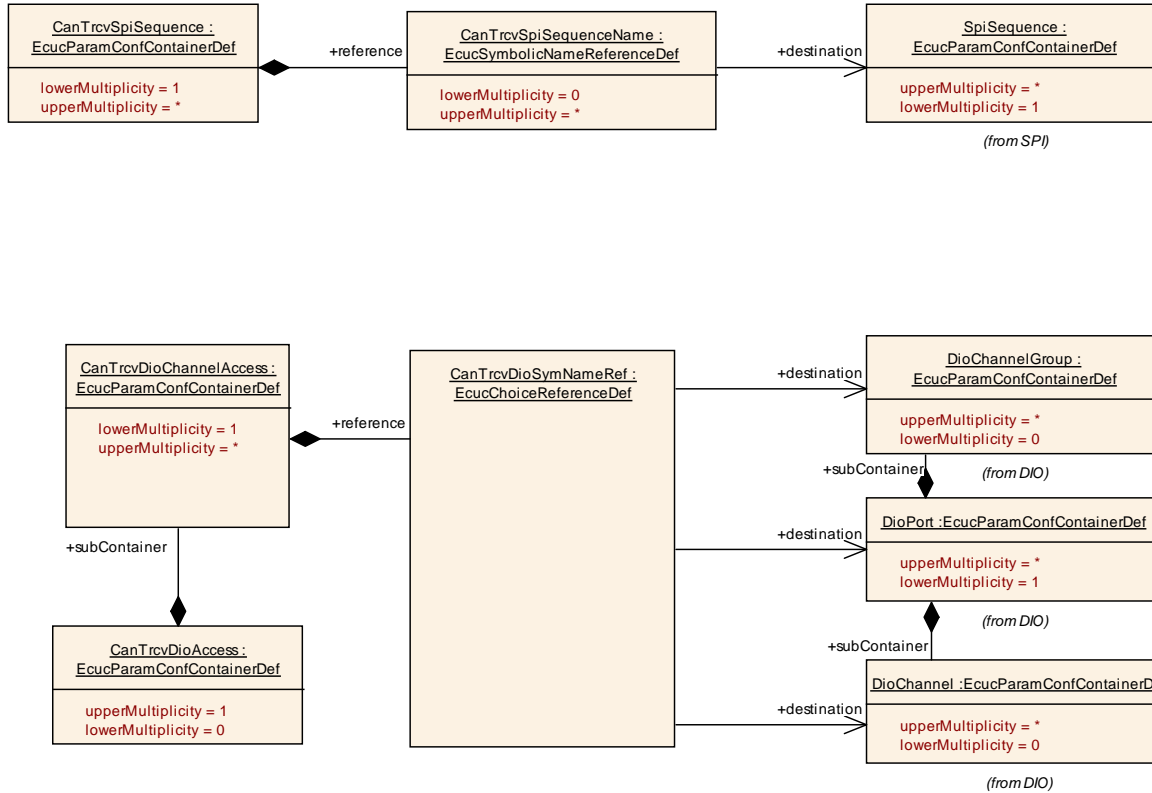

10.2.11 CanTrcvDemEventParameterRefs

SWS Item	ECUC_CanTrcv_00188 :
Container Name	CanTrcvDemEventParameterRefs
Description	Container for the references to DemEventParameter elements which shall be invoked using the API Dem_ReportErrorStatus in case the corresponding error occurs. The EventId is taken from the referenced DemEventParameter's DemEventId value.
Configuration Parameters	

SWS Item	ECUC_CanTrcv_00189 :		
Name	CANTRCV_E_BUS_ERROR		
Description	Reference to the DemEventParameter which shall be issued when bus error has occurred.		
Multiplicity	0..1		
Type	Reference to [DemEventParameter]		
Post-Build Variant Multiplicity	false		
Post-Build Variant Value	false		
Multiplicity Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Value Configuration Class	Pre-compile time	X	All Variants
	Link time	--	
	Post-build time	--	
Scope / Dependency	scope: ECU dependency: DEM		

No Included Containers

10.2.12 CanTrcvPartialNetwork

SWS Item	ECUC_CanTrcv_00161 :		
Container Name	CanTrcvPartialNetwork		
Description	Container gives CAN transceiver driver information about the configuration of Partial Networking functionality.		
Configuration Parameters			

SWS Item	ECUC_CanTrcv_00169 :		
Name	CanTrcvBaudRate		
Description	Indicates the CAN Bus communication baud rate in kbps.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 1000		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local dependency: Although WUF with DLC=0 is technically possible, it is explicitly not wanted.		

SWS Item	ECUC_CanTrcv_00171 :		
Name	CanTrcvBusErrFlag		
Description	Indicates if the Bus Error (BUSERR) flag is managed by the BSW. This flag is set if a bus failure is detected by the transceiver. TRUE = Supported by transceiver and managed by BSW. FALSE = Not managed by BSW.		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00164 :		
Name	CanTrcvPnCanIdsExtended		
Description	Indicates whether extended or standard ID is used. TRUE = Extended Can identifier is used. FALSE = Standard Can identifier is used		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00172 :		
Name	CanTrcvPnEnabled		
Description	Indicates whether the selective wake-up function is enabled or disabled in HW. TRUE = Selective wakeup feature is enabled in the transceiver hardware		

	FALSE = Selective wakeup feature is disabled in the transceiver hardware		
Multiplicity	1		
Type	EcucBooleanParamDef		
Default value	false		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00163 :		
Name	CanTrcvPnFrameCanId		
Description	CAN ID of the Wake-up Frame (WUF).		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		


SWS Item	ECUC_CanTrcv_00162 :		
Name	CanTrcvPnFrameCanIdMask		
Description	ID Mask for the selective activation of the transceiver. It is used to enable-Frame Wake-up (WUF) on a group of IDs.		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 4294967295		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00168 :		
Name	CanTrcvPnFrameDlc		
Description	Data Length of the Wake-up Frame (WUF).		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 8		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00170 :		
Name	CanTrcvPowerOnFlag		
Description	Description: Indicates if the Power On Reset (POR) flag is available and is managed by the transceiver. TRUE = Supported by Hardware. FALSE = Not supported by Hardware		
Multiplicity	1		
Type	EcucBooleanParamDef		

Default value	false		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

Included Containers		
Container Name	Multiplicity	Scope / Dependency
CanTrcvPnFrameData-MaskSpec	0..8	Defines data payload mask to be used on the received payload in order to determine if the transceiver must be woken up by the received Wake-up Frame (WUF).

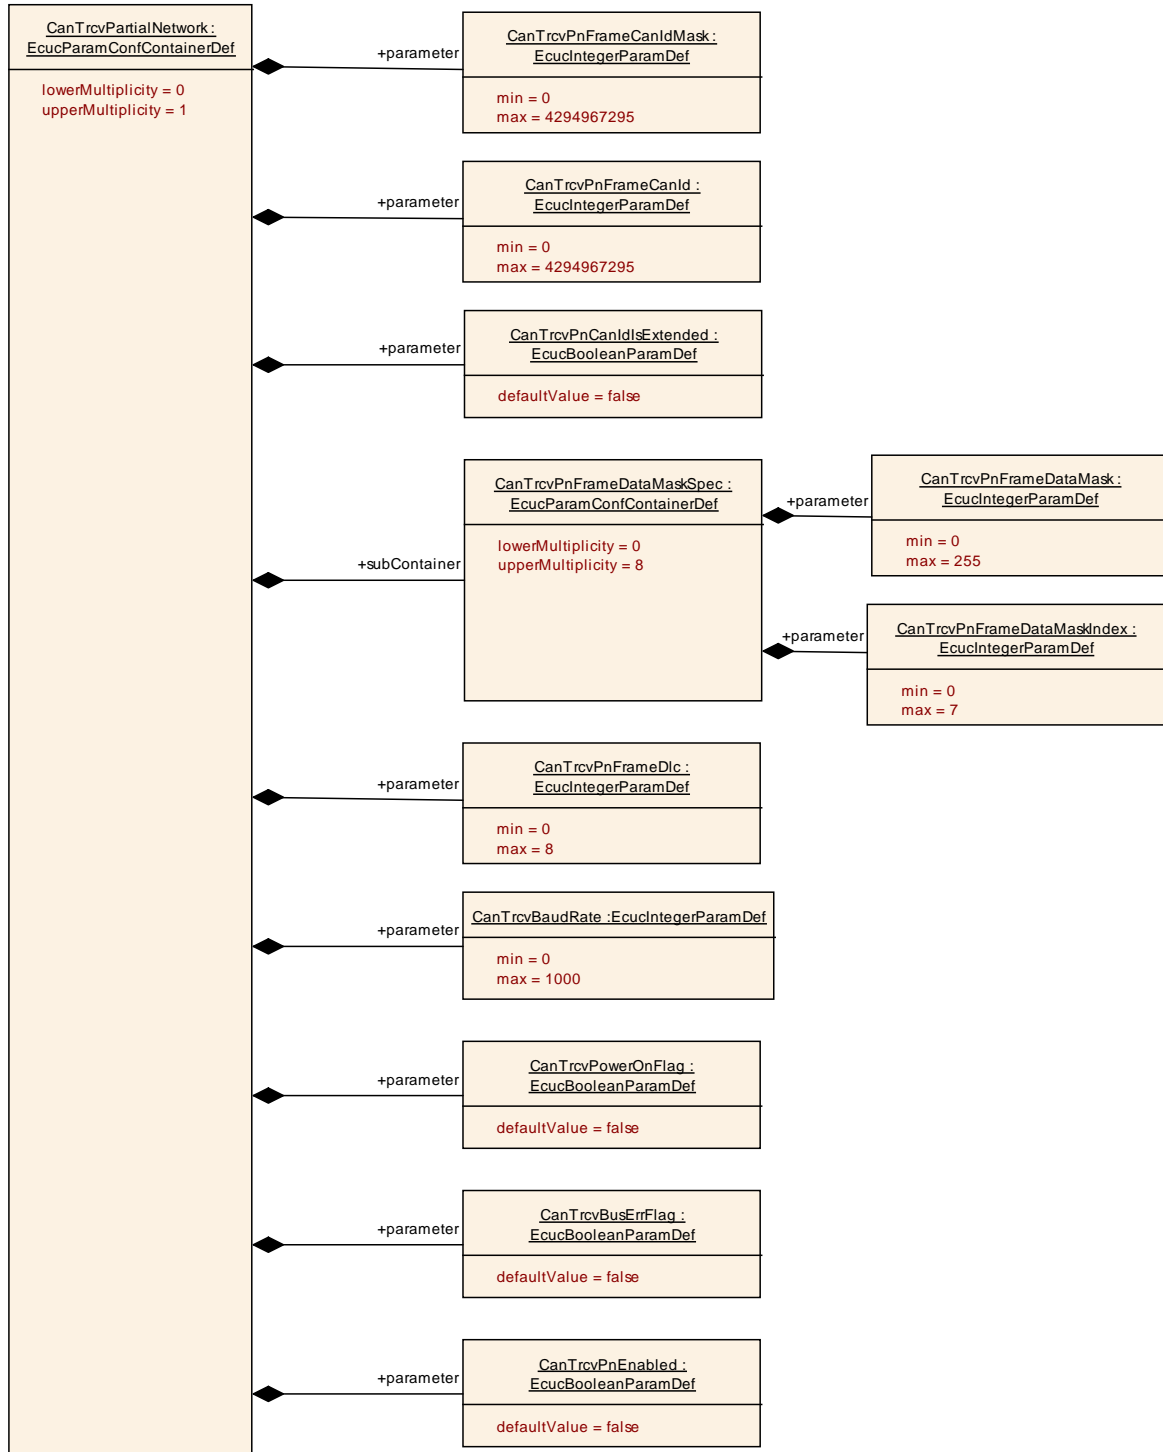

10.2.13 CanTrcvPnFrameDataMaskSpec

SWS Item	ECUC_CanTrcv_00165 :
Container Name	CanTrcvPnFrameDataMaskSpec
Description	Defines data payload mask to be used on the received payload in order to determine if the transceiver must be woken up by the received Wake-up Frame (WUF).
Configuration Parameters	

SWS Item	ECUC_CanTrcv_00166 :
Name	CanTrcvPnFrameDataMask

Description	Defines the n byte (Byte0 = LSB) of the data payload mask to be used on the received payload in order to determine if the transceiver must be woken up by the received Wake-up Frame (WUF).		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 255		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

SWS Item	ECUC_CanTrcv_00167 :		
Name	CanTrcvPnFrameDataMaskIndex		
Description	holds the position n in frame of the mask-part		
Multiplicity	1		
Type	EcucIntegerParamDef		
Range	0 .. 7		
Default value	--		
Post-Build Variant Value	true		
Value Configuration Class	Pre-compile time	X	VARIANT-PRE-COMPILE
	Link time	--	
	Post-build time	X	VARIANT-POST-BUILD
Scope / Dependency	scope: local		

No Included Containers

10.3 Published Information

For details refer to the chapter 10.3 “Published Information” in [SWS_BSWGeneral](#)

11 Not applicable requirements

[SWS_CanTrcv_00999] [These requirements are not applicable to this specification.] (SRS_BSW_00304, SRS_BSW_00305, SRS_BSW_00306, SRS_BSW_00307, SRS_BSW_00308, SRS_BSW_00309, SRS_BSW_00312, SRS_BSW_00321, SRS_BSW_00325, SRS_BSW_00326, SRS_BSW_00328, SRS_BSW_00330, SRS_BSW_00333, SRS_BSW_00334, SRS_BSW_00336, SRS_BSW_00341, SRS_BSW_00342, SRS_BSW_00344, SRS_BSW_00355, SRS_BSW_00359, SRS_BSW_00360, SRS_BSW_00378, SRS_BSW_00383, SRS_BSW_00384, SRS_BSW_00387, SRS_BSW_00398, SRS_BSW_00399, SRS_BSW_00400, SRS_BSW_00401, SRS_BSW_00404, SRS_BSW_00405, SRS_BSW_00410, SRS_BSW_00416, SRS_BSW_00417, SRS_BSW_00420, SRS_BSW_00422, SRS_BSW_00423, SRS_BSW_00426, SRS_BSW_00427, SRS_BSW_00429, SRS_BSW_00431, SRS_BSW_00432, SRS_BSW_00433, SRS_BSW_00434, SRS_BSW_00005, SRS_BSW_00006, SRS_BSW_00007, SRS_BSW_00009, SRS_BSW_00010, SRS_BSW_00161, SRS_BSW_00164, SRS_BSW_00168, SRS_Can_01107, SRS_Can_01138)