

| <b>Document Title</b>             |          | <b>Specification of LIN Network Management</b> |
|-----------------------------------|----------|--|
| <b>Document Owner</b>             | AUTOSAR  |  |
| <b>Document Responsibility</b>    | AUTOSAR  |  |
| <b>Document Identification No</b> | 297      |  |
| <b>Document Classification</b>    | Standard |  |
|                                   |          |  |
| <b>Document Status</b>            | Final    |  |
| <b>Part of AUTOSAR Release</b>    | 4.2.2    |  |

| <b>Document Change History</b> |                            |   |
|--------------------------------|----------------------------|---|
| <b>Release</b>                 | <b>Changed by</b>          | <b>Change Description</b>   |
| 4.2.2                          | AUTOSAR Release Management | <ul style="list-style-type: none"> <li>Updated the SWS requirements for DET renaming.</li> <li>Updated the SWS for LinNmComUserDataSupport.</li> <li>Removed SWS requirement SWS_LinNm_00040.</li> <li>Removed SWS numbers LINNM170, LINNM171 and updated with SWS_LinNm_00173, SWS_LinNm_00174.</li> </ul>   |
| 4.2.1                          | AUTOSAR Release Management | <ul style="list-style-type: none"> <li>Added SWS_LinNm_00172 for LinNm_ConfigType, LINNM170 for LinNm_MainFunction, ECUC_LinNm_00027 for LinNmTimeoutTime and ECUC_LinNm_00028 for LinNmMainFunctionPeriod.</li> <li>Updated SWS_LinNm_00029 and SWS_LinNm_00054 for LinNm initialization ConfigPtr.</li> <li>Updated “Figure 7-1”, “Figure 7-2” and “9.2 LinNm_PassiveStartUp” to enter the Lin channel into sleep mode once the LinNmTimeoutTime elapsed in passive startup.</li> <li>Updated the requirements for const usage in function parameters.</li> </ul> |
| 4.1.3                          | AUTOSAR Release Management | <ul style="list-style-type: none"> <li>Harmonize descriptions of identical API functions</li> <li>Removed SWS_LinNm_00003</li> </ul>  |
| 4.1.2                          | AUTOSAR Release Management | <ul style="list-style-type: none"> <li>Editorial changes</li> <li>Removed chapter(s) on change documentation</li> </ul>   |
| 4.1.1                          | AUTOSAR Administration     | <ul style="list-style-type: none"> <li>Corrected Sync / Async value of NM APIs</li> <li>Renamed MemMap.h to LinNm_MemMap.h</li> </ul>   |

| <b>Document Change History</b> |                        |   |
|--------------------------------|------------------------|---|
| <b>Release</b>                 | <b>Changed by</b>      | <b>Change Description</b>   |
| 4.0.3                          | AUTOSAR Administration | <ul style="list-style-type: none"><li>• Added support for NM Coordinator Synchronization</li><li>• Changed Nm_ReturnType to Std_ReturnType</li><li>• Updated “Module short name” to “Module Abbreviation”</li></ul> |
| 3.1.4                          | AUTOSAR Administration | <ul style="list-style-type: none"><li>• Initial release</li></ul>   |

## Disclaimer

This specification and the material contained in it, as released by AUTOSAR, is for the purpose of information only. AUTOSAR and the companies that have contributed to it shall not be liable for any use of the specification.

The material contained in this specification is protected by copyright and other types of Intellectual Property Rights. The commercial exploitation of the material contained in this specification requires a license to such Intellectual Property Rights.

This specification may be utilized or reproduced without any modification, in any form or by any means, for informational purposes only. For any other purpose, no part of the specification may be utilized or reproduced, in any form or by any means, without permission in writing from the publisher.

The AUTOSAR specifications have been developed for automotive applications only. They have neither been developed, nor tested for non-automotive applications.

The word AUTOSAR and the AUTOSAR logo are registered trademarks.

## Advice for users

AUTOSAR specifications may contain exemplary items (exemplary reference models, "use cases", and/or references to exemplary technical solutions, devices, processes or software).

Any such exemplary items are contained in the specifications for illustration purposes only, and they themselves are not part of the AUTOSAR Standard. Neither their presence in such specifications, nor any later documentation of AUTOSAR conformance of products actually implementing such exemplary items, imply that intellectual property rights covering such exemplary items are licensed under the same rules as applicable to the AUTOSAR Standard.

**Table of Contents**

|        |  |    |
|--------|--|----|
| 1      | Introduction and Functional Overview ..... | 6  |
| 2      | Acronyms and abbreviations .....           | 7  |
| 3      | Related documentation.....                 | 8  |
| 3.1    | Input documents .....                      | 8  |
| 3.2    | Related standards and norms .....          | 9  |
| 3.3    | Related specification .....                | 9  |
| 4      | Constraints and assumptions .....          | 10 |
| 4.1    | Limitations .....                          | 10 |
| 4.2    | Applicability to car domains .....         | 10 |
| 5      | Dependencies to other modules.....         | 11 |
| 5.1    | File Structure .....                       | 12 |
| 5.1.1  | Code File Structure .....                  | 12 |
| 5.1.2  | Header File Structure.....                 | 12 |
| 6      | Requirements traceability .....            | 13 |
| 7      | Functional specification .....             | 20 |
| 7.1    | Coordination algorithm .....               | 20 |
| 7.2    | Operational Modes .....                    | 22 |
| 7.2.1  | Network Mode.....                          | 22 |
| 7.2.2  | Bus-Sleep Mode .....                       | 22 |
| 7.3    | Network states.....                        | 23 |
| 7.4    | Initialization.....                        | 24 |
| 7.5    | Execution.....                             | 25 |
| 7.5.1  | Processor architecture .....               | 25 |
| 7.5.2  | Timing parameters .....                    | 25 |
| 7.6    | Additional features.....                   | 26 |
| 7.6.1  | State change notification.....             | 26 |
| 7.7    | Error classification .....                 | 26 |
| 7.7.1  | Development Errors .....                   | 26 |
| 7.7.2  | Runtime Errors.....                        | 26 |
| 7.7.3  | Transient Faults .....                     | 26 |
| 7.7.4  | Production Errors .....                    | 26 |
| 7.7.5  | Extended Production Errors .....           | 27 |
| 7.8    | Error detection .....                      | 27 |
| 7.9    | Error notification .....                   | 27 |
| 7.10   | Application notes .....                    | 27 |
| 7.10.1 | Wakeup notification .....                  | 27 |
| 7.10.2 | Coordination of coupled networks .....     | 27 |
| 7.10.3 | Coordinator Synchronization Support.....   | 28 |
| 7.10.4 | Debugging Concept.....                     | 28 |
| 8      | API specification .....                    | 29 |
| 8.1    | Imported Types .....                       | 29 |
| 8.2    | Type Definitions.....                      | 29 |

|        |   |    |
|--------|---|----|
| 8.2.1  | LinNm_ConfigType .....  | 29 |
| 8.3    | LinNm Functions called by the Nm .....                        | 30 |
| 8.3.1  | LinNm_Init.....   | 30 |
| 8.3.2  | LinNm_PassiveStartUp.....                                     | 30 |
| 8.3.3  | LinNm_NetworkRequest .....                                    | 31 |
| 8.3.4  | LinNm_NetworkRelease .....                                    | 31 |
| 8.3.5  | LinNm_GetVersionInfo.....                                     | 32 |
| 8.3.6  | LinNm_RequestBusSynchronization.....                          | 32 |
| 8.3.7  | LinNm_CheckRemoteSleepIndication .....                        | 33 |
| 8.3.8  | LinNm_SetSleepReadyBit .....                                  | 33 |
| 8.3.9  | Communication control services provided by NM Interface ..... | 34 |
| 8.3.10 | Extra services provided by NM Interface .....                 | 35 |
| 8.4    | Scheduled Functions .....                                     | 41 |
| 8.4.1  | LinNm_MainFunction .....                                      | 41 |
| 8.5    | Expected Interfaces.....                                      | 41 |
| 8.5.1  | Mandatory Interfaces .....                                    | 41 |
| 8.5.2  | Optional Interfaces.....                                      | 41 |
| 8.5.3  | Configurable interfaces .....                                 | 42 |
| 8.5.4  | Job End Notification .....                                    | 42 |
| 8.6    | Parameter check .....   | 42 |
| 8.7    | Version check.....  | 42 |
| 9      | Sequence diagrams .....                                       | 43 |
| 9.1    | LinNm_Init .....  | 43 |
| 9.2    | LinNm_PassiveStartUp .....                                    | 44 |
| 9.3    | LinNm_NormalOperation.....                                    | 45 |
| 10     | Configuration specification .....                             | 46 |
| 10.1   | How to read this chapter .....                                | 46 |
| 10.2   | Containers and configuration parameters .....                 | 47 |
| 10.2.1 | Variants .....  | 47 |
| 10.3   | Containers and configuration parameters .....                 | 48 |
| 10.3.1 | LinNm .....   | 48 |
| 10.3.2 | LinNmGlobalConfig.....  | 48 |
| 10.3.3 | LinNmChannelConfig.....                                       | 54 |
| 10.4   | Published parameters .....                                    | 54 |
| 11     | Not applicable requirements.....                              | 55 |

## 1 Introduction and Functional Overview

The AUTOSAR LIN Network Management is a hardware independent protocol that can only be used on LIN (for limitations refer to chapter 4.1). Its main purpose is to coordinate the transition between normal operation and bus-sleep mode of the network.

For a general understanding of the AUTOSAR Network Management functionality please refer to [8].

Moreover, the LIN stack in AUTOSAR supports Master behavior and the protocols LIN2.x and LIN1.x.

## 2 Acronyms and abbreviations

| <b>Acronym/abbreviation:</b> | <b>Description:</b>                     |
|------------------------------|---|
| <b>API</b>                   | Application Programming Interface       |
| <b>BSW</b>                   | Basic Software                          |
| <b>DET</b>                   | Default Error Tracer                    |
| <b>LinNm</b>                 | Abbreviation for LIN Network Management |
| <b>NM</b>                    | Network Management                      |
| <b>PDU</b>                   | Protocol Data Unit                      |
| <b>SDU</b>                   | Service Data Unit                       |

## 3 Related documentation

### 3.1 Input documents

- [1] Layered Software Architecture  
AUTOSAR\_EXP\_LayeredSoftwareArchitecture.pdf
- [2] General Requirements on Basic Software Modules  
AUTOSAR\_SRS\_BSWGeneral
- [3] Requirements on Network Management  
AUTOSAR\_SRS\_NetworkManagement.pdf
- [4] Requirements on LIN  
AUTOSAR\_SRS\_LIN.pdf
- [5] Specification of Communication Stack Types  
AUTOSAR\_SWS\_CommunicationStackTypes.pdf
- [6] Specification of ECU Configuration  
AUTOSAR\_TPS\_ECUConfiguration.pdf
- [7] Specification of BSW Scheduler  
AUTOSAR\_SWS\_BSW\_Scheduler.pdf
- [8] Specification of Generic Network Management Interface  
AUTOSAR\_SWS\_NetworkManagementInterface.pdf
- [9] Specification of Communication Manager  
AUTOSAR\_SWS\_COMManger.pdf
- [10] Specification of ECU State Manager  
AUTOSAR\_SWS\_ECUStateManager.pdf
- [11] Specification of Operating System  
AUTOSAR\_SWS\_OS.pdf
- [12] Specification of Default Error Tracer  
AUTOSAR\_SWS\_DefaultErrorTracer.pdf
- [13] Specification of Standard Types  
AUTOSAR\_SWS\_StandardTypes.pdf
- [14] Specification of Platform Types  
AUTOSAR\_SWS\_PlatformTypes.pdf
- [15] Specification of Compiler Abstraction  
AUTOSAR\_SWS\_CompilerAbstraction.pdf

- [16] Basic Software Module Description Template,  
AUTOSAR\_TPS\_BSWModuleDescriptionTemplate.pdf
- [17] List of Basic Software Modules  
AUTOSAR\_TR\_BSWModuleList
- [18] General Specification of Basic Software Modules  
AUTOSAR\_SWS\_BSWGeneral.pdf

### **3.2 Related standards and norms**

Not available.

### **3.3 Related specification**

AUTOSAR provides a General Specification on Basic Software modules [18] (SWS BSW General), which is also valid for LIN Network Management.


Thus, the specification SWS BSW General shall be considered as additional and required specification for LIN Network Management.

## 4 Constraints and assumptions

### 4.1 Limitations

1. One instance of LinNm is associated with only one network management cluster in one network. One network management cluster can have multiple instances of LinNm in one node.
2. One instance of LinNm is associated with only one network within the same ECU.
3. LinNm is only applicable for LIN systems.

The Figure 4-1 presents an AUTOSAR Network Management stack within an example ECU belonging to two LinNm clusters.

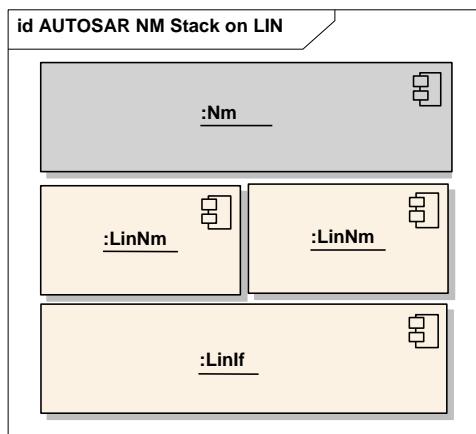

**Figure 4-1**


The LinNm strategy management does no need of specific coordination algorithm (like CanNm for example). Indeed, the LIN master can send to sleep and wake-up all LIN slaves connected to the bus without waiting their approvals.

### 4.2 Applicability to car domains

The LinNm module can be applied to any car domain under limitations provided above.

## 5 Dependencies to other modules

LIN Network Management (LinNm) and provides services to the Generic Network Management Interface (Nm).

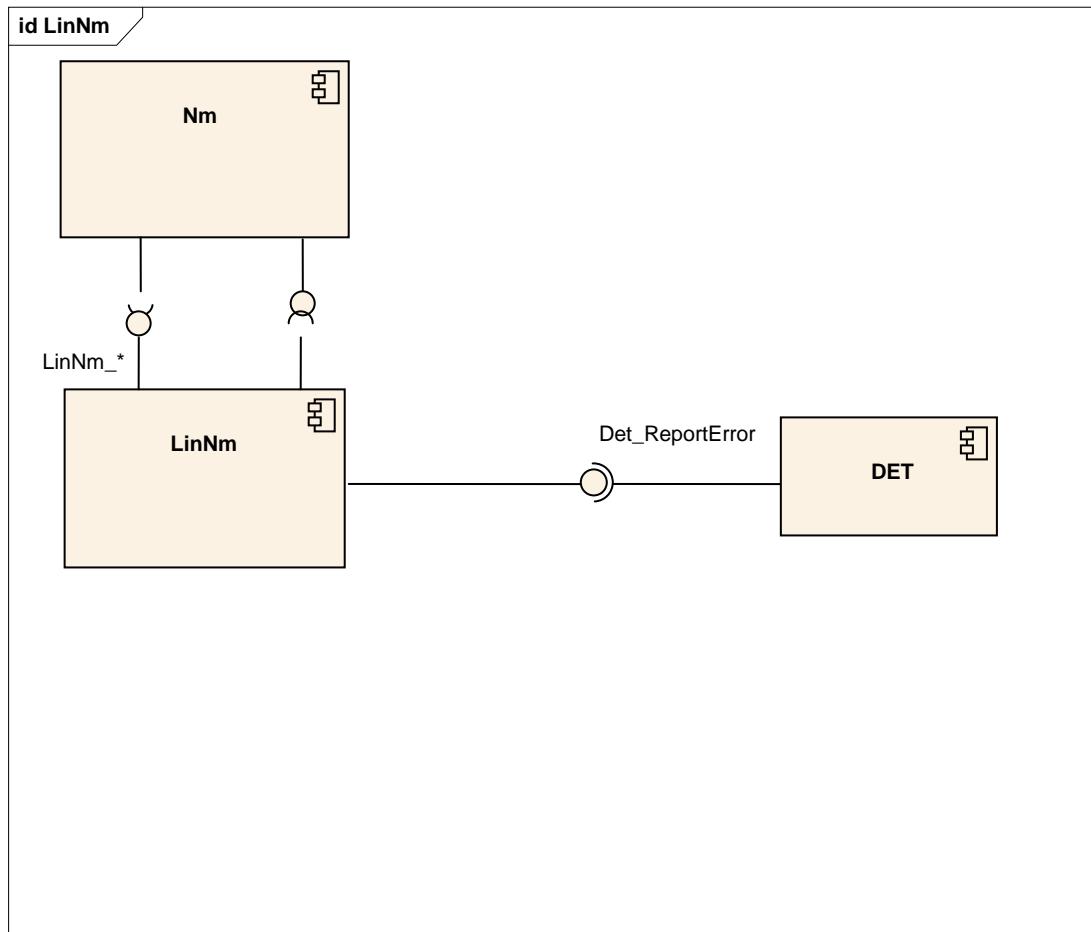

**Figure 5-1 Dependencies to other modules**

## 5.1 File Structure

### 5.1.1 Code File Structure

**[SWS\_LinNm\_00000]** 「The code file structure shall not be defined within this specification completely. 」 (SRS\_BSW\_00419, SRS\_BSW\_00346, SRS\_BSW\_00158, SRS\_BSW\_00308)

Note: No Post Build time configurable parameters for this Module.

### 5.1.2 Header File Structure

**[SWS\_LinNm\_00001]** 「The LinNm module shall provide the following H-files.

- LinNm.h (for declaration of provided interface functions)
- LinNm\_Cbk.h (for declaration of provided call-back functions)
- LinNm\_Cfg.h (for pre-compile time configurable parameters) 」  
(SRS\_BSW\_00345, SRS\_BSW\_00381, SRS\_BSW\_00412, SRS\_BSW\_00346, SRS\_BSW\_00158, SRS\_BSW\_00370, SRS\_BSW\_00302)

**[SWS\_LinNm\_00002]** 「The LinNm module shall include the following H-files.

- ComStack\_Types.h
  - Note: The following header files are indirectly included by ComStack\_Types.h*
    - Std\_Types.h (for AUTOSAR standard types )
    - Platform\_Types.h (for platform specific types)
    - Compiler.h (for compiler specific language extensions)
- LinNm.h (for declaration of provided interface functions)
- Nm\_Cbk.h (for LinNm specific callbacks of Generic Generic Network Management Interface)
- Det.h (for interface of DET – included only if DET is configured)
- NmStack\_Types.h (for common network management types)
- SchM\_LinNm.h (for services of the Basic Software Scheduler)
- LinNm\_MemMap.h (for Memory Mapping) 」 (SRS\_BSW\_00348, SRS\_BSW\_00353, SRS\_BSW\_00361, SRS\_BSW\_00301)

**[SWS\_LinNm\_00144]** 「The LinNm module shall include PduR\_LinNm.h if LinNmComUserDataSupport is enabled. 」 ()

## 6 Requirements traceability

| Requirement | Description | Satisfied by    |
|-------------|-------------|-----------------|
| -           | -           | SWS_LinNm_00004 |
| -           | -           | SWS_LinNm_00005 |
| -           | -           | SWS_LinNm_00006 |
| -           | -           | SWS_LinNm_00008 |
| -           | -           | SWS_LinNm_00012 |
| -           | -           | SWS_LinNm_00014 |
| -           | -           | SWS_LinNm_00015 |
| -           | -           | SWS_LinNm_00016 |
| -           | -           | SWS_LinNm_00017 |
| -           | -           | SWS_LinNm_00018 |
| -           | -           | SWS_LinNm_00019 |
| -           | -           | SWS_LinNm_00020 |
| -           | -           | SWS_LinNm_00022 |
| -           | -           | SWS_LinNm_00025 |
| -           | -           | SWS_LinNm_00026 |
| -           | -           | SWS_LinNm_00029 |
| -           | -           | SWS_LinNm_00034 |
| -           | -           | SWS_LinNm_00037 |
| -           | -           | SWS_LinNm_00038 |
| -           | -           | SWS_LinNm_00041 |
| -           | -           | SWS_LinNm_00042 |
| -           | -           | SWS_LinNm_00053 |
| -           | -           | SWS_LinNm_00054 |
| -           | -           | SWS_LinNm_00055 |
| -           | -           | SWS_LinNm_00056 |
| -           | -           | SWS_LinNm_00058 |
| -           | -           | SWS_LinNm_00061 |
| -           | -           | SWS_LinNm_00063 |
| -           | -           | SWS_LinNm_00064 |
| -           | -           | SWS_LinNm_00065 |
| -           | -           | SWS_LinNm_00069 |
| -           | -           | SWS_LinNm_00070 |
| -           | -           | SWS_LinNm_00071 |
| -           | -           | SWS_LinNm_00072 |
| -           | -           | SWS_LinNm_00074 |
| -           | -           | SWS_LinNm_00075 |
| -           | -           | SWS_LinNm_00076 |

|   |   |                 |
|---|---|-----------------|
| - | - | SWS_LinNm_00077 |
| - | - | SWS_LinNm_00078 |
| - | - | SWS_LinNm_00089 |
| - | - | SWS_LinNm_00090 |
| - | - | SWS_LinNm_00091 |
| - | - | SWS_LinNm_00092 |
| - | - | SWS_LinNm_00093 |
| - | - | SWS_LinNm_00094 |
| - | - | SWS_LinNm_00095 |
| - | - | SWS_LinNm_00096 |
| - | - | SWS_LinNm_00098 |
| - | - | SWS_LinNm_00099 |
| - | - | SWS_LinNm_00102 |
| - | - | SWS_LinNm_00103 |
| - | - | SWS_LinNm_00106 |
| - | - | SWS_LinNm_00108 |
| - | - | SWS_LinNm_00109 |
| - | - | SWS_LinNm_00110 |
| - | - | SWS_LinNm_00111 |
| - | - | SWS_LinNm_00112 |
| - | - | SWS_LinNm_00113 |
| - | - | SWS_LinNm_00114 |
| - | - | SWS_LinNm_00115 |
| - | - | SWS_LinNm_00116 |
| - | - | SWS_LinNm_00117 |
| - | - | SWS_LinNm_00118 |
| - | - | SWS_LinNm_00119 |
| - | - | SWS_LinNm_00120 |
| - | - | SWS_LinNm_00121 |
| - | - | SWS_LinNm_00122 |
| - | - | SWS_LinNm_00123 |
| - | - | SWS_LinNm_00124 |
| - | - | SWS_LinNm_00125 |
| - | - | SWS_LinNm_00126 |
| - | - | SWS_LinNm_00127 |
| - | - | SWS_LinNm_00128 |
| - | - | SWS_LinNm_00129 |
| - | - | SWS_LinNm_00130 |
| - | - | SWS_LinNm_00131 |

|               |   |                                     |
|---------------|---|-------------------------------------|
| -             | -   | SWS_LinNm_00135                     |
| -             | -   | SWS_LinNm_00136                     |
| -             | -   | SWS_LinNm_00140                     |
| -             | -   | SWS_LinNm_00141                     |
| -             | -   | SWS_LinNm_00144                     |
| -             | -   | SWS_LinNm_00147                     |
| -             | -   | SWS_LinNm_00148                     |
| -             | -   | SWS_LinNm_00149                     |
| -             | -   | SWS_LinNm_00150                     |
| -             | -   | SWS_LinNm_00151                     |
| -             | -   | SWS_LinNm_00153                     |
| -             | -   | SWS_LinNm_00154                     |
| -             | -   | SWS_LinNm_00156                     |
| -             | -   | SWS_LinNm_00157                     |
| -             | -   | SWS_LinNm_00158                     |
| -             | -   | SWS_LinNm_00159                     |
| -             | -   | SWS_LinNm_00160                     |
| -             | -   | SWS_LinNm_00161                     |
| -             | -   | SWS_LinNm_00162                     |
| -             | -   | SWS_LinNm_00163                     |
| -             | -   | SWS_LinNm_00169                     |
| -             | -   | SWS_LinNm_00172                     |
| -             | -   | SWS_LinNm_00173                     |
| -             | -   | SWS_LinNm_00174                     |
| -             | -   | SWS_LinNm_00175                     |
| -             | -   | SWS_LinNm_00176                     |
| -             | -   | SWS_LinNm_00177                     |
| BSW00434      | -   | SWS_LinNm_00165                     |
| BSW136        | -   | SWS_LinNm_00165                     |
| BSW139        | -   | SWS_LinNm_00165                     |
| BSW140        | -   | SWS_LinNm_00165                     |
| SRS_BSW_00005 | Modules of the $\mu$ C Abstraction Layer (MCAL) may not have hard coded horizontal interfaces                                 | SWS_LinNm_00165                     |
| SRS_BSW_00006 | The source code of software modules above the $\mu$ C Abstraction Layer (MCAL) shall not be processor and compiler dependent. | SWS_LinNm_00165                     |
| SRS_BSW_00010 | The memory consumption of all Basic SW Modules shall be documented for a defined configuration for all supported platforms.   | SWS_LinNm_00165                     |
| SRS_BSW_00158 | All modules of the AUTOSAR Basic Software shall strictly separate configuration from implementation                           | SWS_LinNm_00000,<br>SWS_LinNm_00001 |

|               |  |                                     |
|---------------|--|-------------------------------------|
| SRS_BSW_00160 | Configuration files of AUTOSAR Basic SW module shall be readable for human beings  | SWS_LinNm_00165                     |
| SRS_BSW_00161 | The AUTOSAR Basic Software shall provide a microcontroller abstraction layer which provides a standardized interface to higher software layers | SWS_LinNm_00165                     |
| SRS_BSW_00162 | The AUTOSAR Basic Software shall provide a hardware abstraction layer  | SWS_LinNm_00165                     |
| SRS_BSW_00164 | The Implementation of interrupt service routines shall be done by the Operating System, complex drivers or modules                             | SWS_LinNm_00165                     |
| SRS_BSW_00168 | SW components shall be tested by a function defined in a common API in the Basis-SW  | SWS_LinNm_00165                     |
| SRS_BSW_00170 | The AUTOSAR SW Components shall provide information about their dependency from faults, signal qualities, driver demands                       | SWS_LinNm_00165                     |
| SRS_BSW_00172 | The scheduling strategy that is built inside the Basic Software Modules shall be compatible with the strategy used in the system               | SWS_LinNm_00165                     |
| SRS_BSW_00301 | All AUTOSAR Basic Software Modules shall only import the necessary information   | SWS_LinNm_00002                     |
| SRS_BSW_00302 | All AUTOSAR Basic Software Modules shall only export information needed by other modules   | SWS_LinNm_00001                     |
| SRS_BSW_00305 | Data types naming convention   | SWS_LinNm_00165                     |
| SRS_BSW_00306 | AUTOSAR Basic Software Modules shall be compiler and platform independent  | SWS_LinNm_00165                     |
| SRS_BSW_00307 | Global variables naming convention   | SWS_LinNm_00165                     |
| SRS_BSW_00308 | AUTOSAR Basic Software Modules shall not define global data in their header files, but in the C file   | SWS_LinNm_00000                     |
| SRS_BSW_00309 | All AUTOSAR Basic Software Modules shall indicate all global data with read-only purposes by explicitly assigning the const keyword            | SWS_LinNm_00165                     |
| SRS_BSW_00312 | Shared code shall be reentrant   | SWS_LinNm_00165                     |
| SRS_BSW_00314 | All internal driver modules shall separate the interrupt frame definition from the service routine   | SWS_LinNm_00165                     |
| SRS_BSW_00321 | The version numbers of AUTOSAR Basic Software Modules shall be enumerated according specific rules   | SWS_LinNm_00165                     |
| SRS_BSW_00323 | All AUTOSAR Basic Software Modules shall check passed API parameters for validity  | SWS_LinNm_00047,<br>SWS_LinNm_00048 |
| SRS_BSW_00325 | The runtime of interrupt service routines and functions that are running in interrupt context shall be kept short                              | SWS_LinNm_00165                     |
| SRS_BSW_00326 | -  | SWS_LinNm_00165                     |
| SRS_BSW_00328 | All AUTOSAR Basic Software Modules shall avoid the duplication of code   | SWS_LinNm_00165                     |
| SRS_BSW_00330 | It shall be allowed to use macros instead of functions where source code is used and runtime is critical                                       | SWS_LinNm_00165                     |
| SRS_BSW_00331 | All Basic Software Modules shall strictly separate error and status information  | SWS_LinNm_00165                     |

|               |   |                                     |
|---------------|---|-------------------------------------|
| SRS_BSW_00333 | For each callback function it shall be specified if it is called from interrupt context or not  | SWS_LinNm_00165                     |
| SRS_BSW_00334 | All Basic Software Modules shall provide an XML file that contains the meta data  | SWS_LinNm_00165                     |
| SRS_BSW_00335 | Status values naming convention   | SWS_LinNm_00165                     |
| SRS_BSW_00336 | Basic SW module shall be able to shutdown   | SWS_LinNm_00165                     |
| SRS_BSW_00339 | Reporting of production relevant error status   | SWS_LinNm_00165                     |
| SRS_BSW_00341 | Module documentation shall contains all needed informations   | SWS_LinNm_00165                     |
| SRS_BSW_00345 | BSW Modules shall support pre-compile configuration   | SWS_LinNm_00001                     |
| SRS_BSW_00346 | All AUTOSAR Basic Software Modules shall provide at least a basic set of module files   | SWS_LinNm_00000,<br>SWS_LinNm_00001 |
| SRS_BSW_00347 | A Naming seperation of different instances of BSW drivers shall be in place   | SWS_LinNm_00165                     |
| SRS_BSW_00348 | All AUTOSAR standard types and constants shall be placed and organized in a standard type header file   | SWS_LinNm_00002                     |
| SRS_BSW_00353 | All integer type definitions of target and compiler specific scope shall be placed and organized in a single type header                          | SWS_LinNm_00002                     |
| SRS_BSW_00361 | All mappings of not standardized keywords of compiler specific scope shall be placed and organized in a compiler specific type and keyword header | SWS_LinNm_00002                     |
| SRS_BSW_00370 | -   | SWS_LinNm_00001                     |
| SRS_BSW_00375 | Basic Software Modules shall report wake-up reasons   | SWS_LinNm_00165                     |
| SRS_BSW_00377 | A Basic Software Module can return a module specific types  | SWS_LinNm_00165                     |
| SRS_BSW_00381 | The pre-compile time parameters shall be placed into a separate configuration header file   | SWS_LinNm_00001                     |
| SRS_BSW_00387 | -   | SWS_LinNm_00165                     |
| SRS_BSW_00409 | All production code error ID symbols are defined by the Dem module and shall be retrieved by the other BSW modules from Dem configuration         | SWS_LinNm_00165                     |
| SRS_BSW_00410 | Compiler switches shall have defined values   | SWS_LinNm_00165                     |
| SRS_BSW_00412 | References to c-configuration parameters shall be placed into a separate h-file   | SWS_LinNm_00001                     |
| SRS_BSW_00413 | An index-based accessing of the instances of BSW modules shall be done  | SWS_LinNm_00165                     |
| SRS_BSW_00415 | Interfaces which are provided exclusively for one module shall be separated into a dedicated header file  | SWS_LinNm_00165                     |
| SRS_BSW_00416 | The sequence of modules to be initialized shall be configurable   | SWS_LinNm_00165                     |
| SRS_BSW_00417 | Software which is not part of the SW-C shall report error events only after the DEM is fully operational.   | SWS_LinNm_00165                     |
| SRS_BSW_00419 | If a pre-compile time configuration parameter is  | SWS_LinNm_00000                     |

|               |   |                 |
|---------------|---|-----------------|
|               | implemented as "const" it should be placed into a separate c-file   |                 |
| SRS_BSW_00423 | BSW modules with AUTOSAR interfaces shall be describable with the means of the SW-C Template  | SWS_LinNm_00165 |
| SRS_BSW_00424 | BSW module main processing functions shall not be allowed to enter a wait state   | SWS_LinNm_00165 |
| SRS_BSW_00425 | The BSW module description template shall provide means to model the defined trigger conditions of schedulable objects              | SWS_LinNm_00165 |
| SRS_BSW_00426 | BSW Modules shall ensure data consistency of data which is shared between BSW modules   | SWS_LinNm_00165 |
| SRS_BSW_00427 | ISR functions shall be defined and documented in the BSW module description template  | SWS_LinNm_00165 |
| SRS_BSW_00429 | BSW modules shall be only allowed to use OS objects and/or related OS services  | SWS_LinNm_00165 |
| SRS_BSW_00432 | Modules should have separate main processing functions for read/receive and write/transmit data path                                | SWS_LinNm_00165 |
| SRS_Lin_01515 | The LIN Interface shall provide an API to wake-up a LIN channel cluster   | SWS_LinNm_00165 |
| SRS_Lin_01523 | There shall be a API call to send the LIN bus to sleep-mode.  | SWS_LinNm_00165 |
| SRS_Lin_01564 | A Schedule Table Manager shall be available   | SWS_LinNm_00165 |
| SRS_Nm_00043  | NM shall not prohibit bus traffic with NM not being initialized   | SWS_LinNm_00165 |
| SRS_Nm_00046  | It shall be possible to trigger the startup of all Nodes at any Point in Time.  | SWS_LinNm_00165 |
| SRS_Nm_00048  | NM shall put the communication controller into sleep mode if there is no bus communication  | SWS_LinNm_00165 |
| SRS_Nm_00050  | The NM shall provide the current state of NM  | SWS_LinNm_00165 |
| SRS_Nm_00051  | NM shall inform application when NM state changes occur.  | SWS_LinNm_00165 |
| SRS_Nm_00052  | The NM interface shall signal to the application that all other ECUs are ready to sleep.  | SWS_LinNm_00165 |
| SRS_Nm_00053  | NM on a node which is or become bus unavailable shall have a deterministic Behavior   | SWS_LinNm_00165 |
| SRS_Nm_00054  | There shall be a deterministic time from the point where all nodes agree to go to bus sleep to the point where bus is switched off. | SWS_LinNm_00165 |
| SRS_Nm_00137  | NM shall perform communication system error handling for errors that have impact on the NM behavior.                                | SWS_LinNm_00165 |
| SRS_Nm_00142  | NM shall guarantee an upper limit for the bus load generated by NM itself.  | SWS_LinNm_00165 |
| SRS_Nm_00143  | The bus load caused by NM shall be predictable.   | SWS_LinNm_00165 |
| SRS_Nm_00144  | NM shall support communication clusters of up to 64 ECUs  | SWS_LinNm_00165 |
| SRS_Nm_00145  | On a properly configured node, NM shall tolerate a  | SWS_LinNm_00165 |

|              |  |                 |
|--------------|--|-----------------|
|              | loss of a predefined number of NM messages   |                 |
| SRS_Nm_00146 | The NM shall tolerate a time jitter of NM messages in one or more ECUs   | SWS_LinNm_00165 |
| SRS_Nm_00147 | The NM algorithm shall be processor independent.   | SWS_LinNm_00165 |
| SRS_Nm_00151 | The Network Management algorithm shall allow any node to integrate into an already running NM cluster                                | SWS_LinNm_00165 |
| SRS_Nm_00153 | The Network Management shall optionally provide a possibility to detect present nodes  | SWS_LinNm_00165 |
| SRS_Nm_00154 | The Network Management API shall be independent from the communication bus   | SWS_LinNm_00165 |
| SRS_Nm_02503 | The NM API shall optionally give the possibility to send user data   | SWS_LinNm_00165 |
| SRS_Nm_02504 | The NM API shall optionally give the possibility to get user data  | SWS_LinNm_00165 |
| SRS_Nm_02505 | The NM shall optionally set the local node identifier to the NM-message  | SWS_LinNm_00165 |
| SRS_Nm_02506 | The NM API shall give the possibility to read the source node identifier of the sender   | SWS_LinNm_00165 |
| SRS_Nm_02508 | Every node shall have associated with it a node identifier that is unique in the NM-cluster  | SWS_LinNm_00165 |
| SRS_Nm_02509 | The NM interface shall signal to the application that at least one other ECUs is not ready to sleep anymore.                         | SWS_LinNm_00165 |
| SRS_Nm_02510 | For CAN NM it shall be optionally possible to immediately transmit the confirmation  | SWS_LinNm_00165 |
| SRS_Nm_02511 | It shall be possible to configure the Network Management of a node in Cluster Shutdown   | SWS_LinNm_00165 |
| SRS_Nm_02512 | The NM shall give the possibility to enable or disable the network management related communication configured for an active NM node | SWS_LinNm_00165 |

## 7 Functional specification

### 7.1 Coordination algorithm

The AUTOSAR LinNm is based on a basic state machine to go to network mode or bus sleep mode.


The main concept of the AUTOSAR LinNm state machine can be defined by the following requirement:

**[SWS\_LinNm\_00004]** 「If *LinNm\_NetworkRelease* is called in the Network mode then mode shall be changed to Bus Sleep mode.」()

**[SWS\_LinNm\_00161]** 「If *LinNm\_PassiveStartUp* is called in Bus Sleep Mode, then mode shall be changed to Network mode.」()

**[SWS\_LinNm\_00162]** 「If *LinNm\_NetworkRequest* is called in Bus Sleep Mode, then mode shall be changed to Network mode.」()

The Figure 7-1 shows an overview of the state diagram for the AUTOSAR LinNm state machine from point of view of one single node in the network management cluster (one state machine per network). All services called by AUTOSAR LinNm module are in italic typeface, the bus-communication state is underlined and the events triggering the state transitions are in normal typeface.

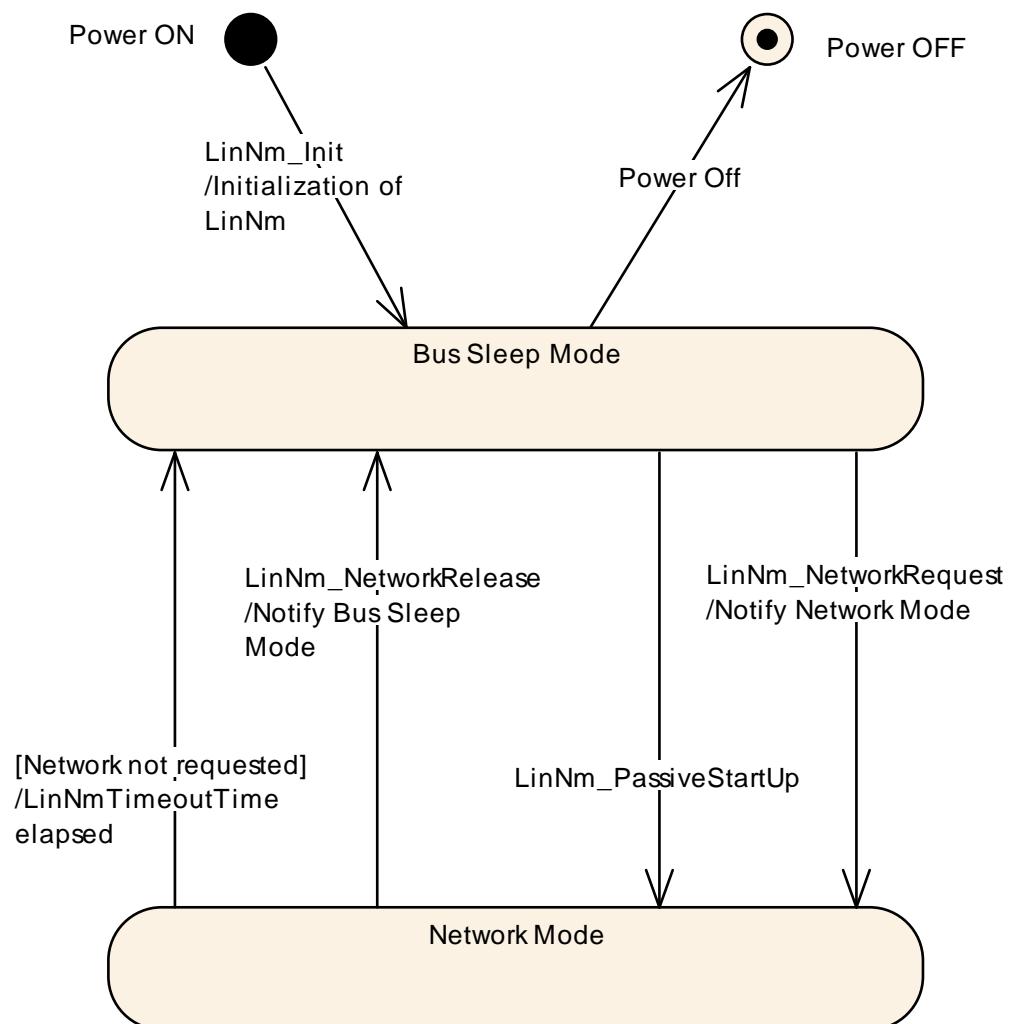

**Figure 7-1**

## 7.2 Operational Modes

In the following chapter operational modes of the AUTOSAR LinNm coordination algorithm are described in detail.

**[SWS\_LinNm\_00005]** [The AUTOSAR LinNm shall contain two operational modes visible at the module's interface:

- Network Mode
- Bus-Sleep Mode] ()

**[SWS\_LinNm\_00006]** [Changes of the AUTOSAR LinNm operational modes shall be notified to the upper layer (NM) by means of callback functions (`Nm_NetworkMode`, `Nm_BusSleepMode`).] ()

### 7.2.1 Network Mode

**[SWS\_LinNm\_00008]** [When the Network Mode is entered; LinNm shall notify the upper layer (NM) of the new current operational mode by calling the callback function `Nm_NetworkMode`.] ()

**[SWS\_LinNm\_00174]** [ If Network Mode has been entered due to a call of function `LinNm_PassiveStartUp` and if within the time configured by the parameter `LinNmTimeoutTime` network has not been requested; then LinNm module shall perform a transition to Bus-Sleep Mode.] ()

**Note:** If configuration parameter `LinNmTimeoutTime` is set to 0 LinNm module shall immediately leave Network Mode after entering it; if no network has been requested.

### 7.2.2 Bus-Sleep Mode

The communication controller is switched into the sleep mode and power consumption is reduced to the adequate level in the Bus-Sleep Mode.

**[SWS\_LinNm\_00012]** [When Bus-Sleep Mode is entered, except by default at initialization, the LinNm module shall notify the upper layer by calling the callback function `Nm_BusSleepMode`.] ()

**Note:** In the Bus-Sleep Mode is assumed that the network is released, unless bus communication is explicitly requested.

**[SWS\_LinNm\_00014]** [When the network is requested in Bus-Sleep Mode, the LinNm module shall enter the Network Mode. ] ()

### 7.3 Network states

Network states (i.e. ‘NM\_STATE\_NORMAL\_OPERATION’ and ‘NM\_STATE\_BUS\_SLEEP’) are two additional states of the AUTOSAR LinNm state machine that exist in parallel to the state machine. Network states denote, whether the software components need to communicate on the bus (the network state is then ‘requested’); or whether the software components don’t have to communicate on the bus (the bus network state is then ‘released’).

**[SWS\_LinNm\_00015]** [The function call **LinNm\_NetworkRequest** shall request the network. I.e. the LinNm module shall change network state to ‘NM\_STATE\_NORMAL\_OPERATION’. ] ()

**[SWS\_LinNm\_00016]** [The function call **LinNm\_NetworkRelease** shall release the network. I.e. the LinNm module shall change network state to ‘NM\_STATE\_BUS\_SLEEP’. ] ()

**[SWS\_LinNm\_00160]** [If **LinNm\_PassiveStartUp** is called in Bus Sleep Mode, then LinNm shall change network state to NM\_STATE\_NORMAL\_OPERATION. ] ()

**[SWS\_LinNm\_00103]** [The Modes and States shall be available for debugging. ] ()

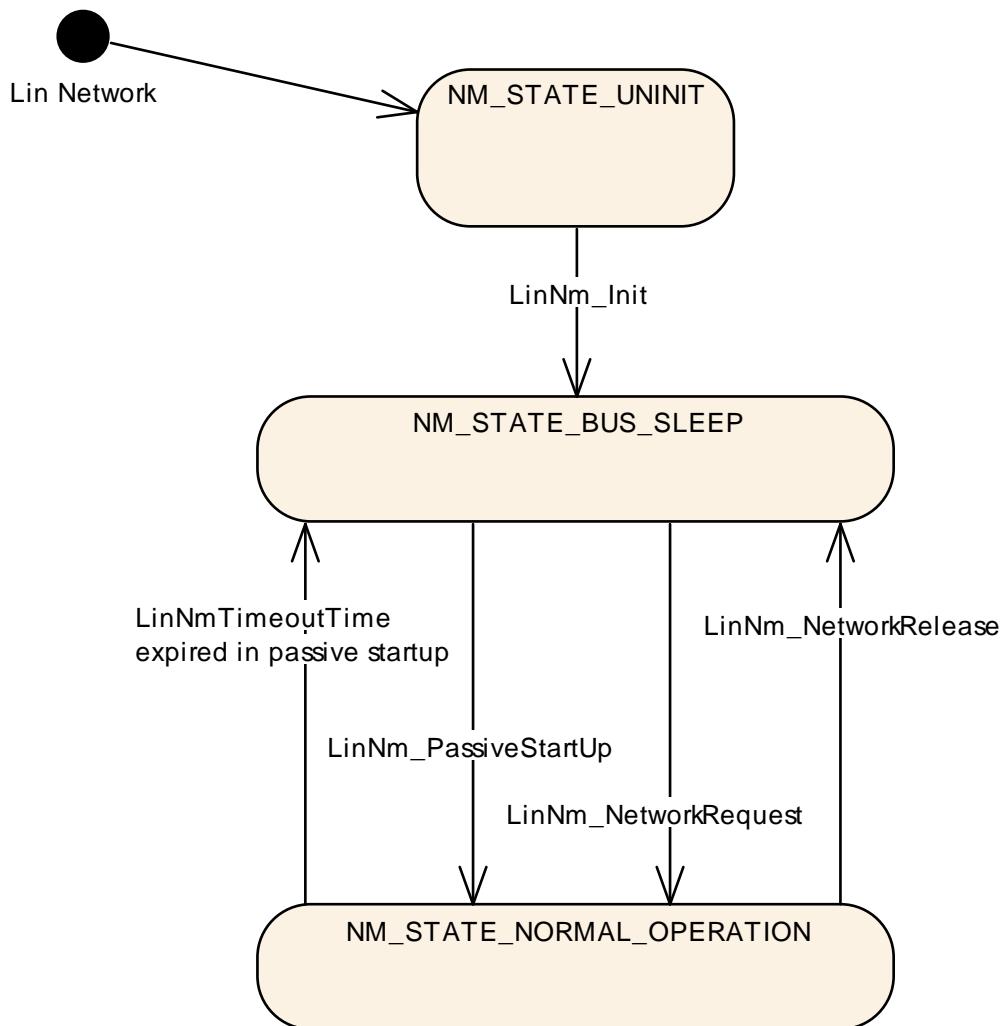


Figure 7-2

## 7.4 Initialization

**[SWS\_LinNm\_00017]** [During initialization of the LinNm module (**LinNm\_Init**) the LinNm module shall set the Network Management State to **NM\_STATE\_UNINIT**. ] ( )

**[SWS\_LinNm\_00018]** [If the initialization of the LinNm module (**LinNm\_Init**) is successful, the LinNm module shall set the Network Management State to **NM\_STATE\_BUS\_SLEEP**. ] ( )

**[SWS\_LinNm\_00102]** [No callouts shall be made from the init function, since it is not known if the other module is initialized. ] ( )

Note: The LinNm module should be initialized before any other network management service is called.

**[SWS\_LinNm\_00019]** 「If initialized, by default, the LinNm module shall set the network state to NM\_STATE\_BUS\_SLEEP. 」()

**[SWS\_LinNm\_00020]** 「If initialized, by default, the LinNm module shall enter the Bus-Sleep Mode. 」()

**[SWS\_LinNm\_00022]** 「If `LinNm_PassiveStartUp` is called in the Network Mode, the LinNm module shall not execute this service and shall return `E_NOT_OK`. 」()

**[SWS\_LinNm\_00156]** 「If `LinNm_NetworkRequest` is called in the Network Mode, the LinNM module shall not execute this service and shall return `E_NOT_OK`. 」()

**[SWS\_LinNm\_00157]** 「If `LinNm_NetworkRelease` is called in the Bus Sleep Mode, the LinNM module shall not execute this service and shall return `E_NOT_OK`. 」()

**[SWS\_LinNm\_00025]** 「If LinNm is not initialized the LinNm module shall reject each call of a LinNm function with the respective error code, except `LinNm_Init` and `LinNm_GetVersionInfo`. 」()

## 7.5 Execution

### 7.5.1 Processor architecture

**[SWS\_LinNm\_00026]** 「The AUTOSAR LinNm state machine shall be processor independent, which means it shall not rely on any processor specific hardware support and thus shall be realizable on any processor architecture that is in the scope of AUTOSAR. 」()

### 7.5.2 Timing parameters

There is no configuration parameter.

## 7.6 Additional features

### 7.6.1 State change notification

**[SWS\_LinNm\_00061]** [If the configuration parameter **LINNM\_STATE\_CHANGE\_IND\_ENABLED** is defined, the LinNm module shall call the callback function `Nm_StateChangeNotification` each time the bus state is modified.] ()

## 7.7 Error classification

### 7.7.1 Development Errors

This chapter shall list all Development Errors that can be detected within this software module. For each error, a value shall be defined.

**[SWS\_LinNm\_00029]** [The following errors shall be detectable by the LinNm depending on its build version (development).]

| Type or error  | Relevance   | Related error code      | Error Value |
|--|-------------|-------------------------|-------------|
| API service used without module initialization                                       | Development | LINNM_E_NO_INIT         | 0x01        |
| API service called with wrong channel handle   | Development | LINNM_E_INVALID_CHANNEL | 0x02        |
| Null pointer has been passed as an argument.   | Development | LINNM_E_PARAM_POINTER   | 0x12        |
| LinNm initialization has been failed, e.g. selected configuration set doesn't exist. | Development | LINNM_E_INIT_FAILED     | 0x13        |

] ()

### 7.7.2 Runtime Errors

There are no runtime errors.

### 7.7.3 Transient Faults

There are no transient faults.

### 7.7.4 Production Errors

There are no production errors.

### 7.7.5 Extended Production Errors

There are no extended production errors.

## 7.8 Error detection

For details refer to the chapters 7.3 “Error Detection” in *SWS\_BSWGeneral*.

## 7.9 Error notification

**[SWS\_LinNm\_00034]** [If default error detection is enabled and the input arguments to LinNm API services are invalid then the LinNm module shall report respective errors to Default Error Tracer and return without any action.] ()

**[SWS\_LinNm\_00037]** [If default error detection is enabled and the LinNm module is not initialized then all the LinNm API services (except LinNm\_Init and LinNm\_GetVersionInfo) shall report an error **LINNM\_E\_NO\_INIT** to Default Error Tracer and return without any action.] ()

**[SWS\_LinNm\_00038]** [If default error detection is enabled and the input argument nmChannelHandle has an invalid value then the network handle services shall report an error **LINNM\_E\_INVALID\_CHANNEL** to Default Error Tracer and return without any action.] ()

Note: The network handle is invalid if it is different from allowed configured values.] ()

## 7.10 Application notes

### 7.10.1 Wakeup notification

Wakeup notification is defined in detail in the ECU State Manager specification.

### 7.10.2 Coordination of coupled networks

**[SWS\_LinNm\_00041]** [Support of bus synchronization on demand shall be statically configurable with use of the **LINNM\_BUS\_SYNCHRONIZATION\_ENABLED** switch (configuration parameter).] ()

**[SWS\_LinNm\_00042]** 「If **LinNm\_RequestBusSynchronization** is called in Bus-Sleep Mode, the LinNm module shall not execute the service and shall return **e\_ok**.」()

**[SWS\_LinNm\_00140]** 「The parameter **LINNM\_SYNCHRONIZATIONPOINT\_ENABLED** shall be always disabled.」()

**[SWS\_LinNm\_00141]** 「LinNm shall make a callout to **Nm\_RemoteSleepIndication(channel)** after wakeup of Network.(i.e., after entering into Normal Operation Mode).」()

**Note:** LinNm shall never make callouts to **Nm\_SynchronizationPoint(channel)**.

### 7.10.3 Coordinator Synchronization Support

When having more than one coordinator connected to the same bus a special bit in the Control Bit Vector (CBV), the *NmCoordinatorSleepReady* bit is used to indicate that the main coordinator requests to start shutdown sequence. The main functionality of the algorithm is described in the Nm module.

**[SWS\_LinNm\_00169]** 「The API **LinNm\_SetSleepReadyBit()** and the feature "Coordinated Bus Shutdown" shall only be available if **LinNmCoordinatorSyncSupport** is set to TRUE.」()

### 7.10.4 Debugging Concept

For details refer to the chapter 7.1.17 “Debugging support” in *SWS\_BSWGeneral*.

## 8 API specification

**[SWS\_LinNm\_00047]** 「The LinNm module shall provide parameter value check only in "development mode".」 (SRS\_BSW\_00323)

**[SWS\_LinNm\_00048]** 「The LinNm module shall reject the execution of a service called with an invalid parameter and shall inform the DET.」 (SRS\_BSW\_00323)

AUTOSAR LinNm API consists of services, which are LIN specific and can be called whenever they are required; each service apart from `LinNm_Init` refers to one NM channel only.

### 8.1 Imported Types

In this chapter all types included from the following files are listed:

**[SWS\_LinNm\_00078]** 「

| <i>Module</i>  | <i>Imported Type</i> |
|----------------|----------------------|
| ComStack_Types | NetworkHandleType    |
|                | PduldType            |
|                | PduInfoType          |
| Nm             | Nm_ModeType          |
|                | Nm_StateType         |
| Std_Types      | Std_ReturnType       |
|                | Std_VersionInfoType  |

」()

### 8.2 Type Definitions

#### 8.2.1 LinNm\_ConfigType

**[SWS\_LinNm\_00172]**「

|                     |  |
|---------------------|--|
| <b>Name:</b>        | LinNm_ConfigType   |
| <b>Type:</b>        | Structure  |
| <b>Range:</b>       | implementation specific  |
| <b>Description:</b> | A pointer to an instance of this structure will be used in the initialization of LinNm module.<br>The outline of the structure is defined in chapter 10 Configuration Specification. |

」()

## 8.3 LinNm Functions called by the Nm

### 8.3.1 LinNm\_Init

[SWS\_LinNm\_00054] [

|                            |  |
|----------------------------|--|
| <b>Service name:</b>       | LinNm_Init   |
| <b>Syntax:</b>             | void LinNm_Init(<br>const LinNm_ConfigType* ConfigPtr<br>) |
| <b>Service ID[hex]:</b>    | 0x00   |
| <b>Sync/Async:</b>         | Synchronous  |
| <b>Reentrancy:</b>         | Non Reentrant  |
| <b>Parameters (in):</b>    | ConfigPtr   Pointer to a selected configuration structure  |
| <b>Parameters (inout):</b> | None   |
| <b>Parameters (out):</b>   | None   |
| <b>Return value:</b>       | None   |
| <b>Description:</b>        | Initialize the complete LinNm module.                      |

] ()

### 8.3.2 LinNm\_PassiveStartUp

[SWS\_LinNm\_00063] [

|                            |   |
|----------------------------|---|
| <b>Service name:</b>       | LinNm_PassiveStartUp  |
| <b>Syntax:</b>             | Std_ReturnType LinNm_PassiveStartUp(<br>NetworkHandleType nmChannelHandle<br>)                |
| <b>Service ID[hex]:</b>    | 0x01  |
| <b>Sync/Async:</b>         | Asynchronous  |
| <b>Reentrancy:</b>         | Reentrant (but not for the same NM-Channel)   |
| <b>Parameters (in):</b>    | nmChannelHandle   Identification of the NM-channel  |
| <b>Parameters (inout):</b> | None  |
| <b>Parameters (out):</b>   | None  |
| <b>Return value:</b>       | Std_ReturnType   E_OK: No error<br>E_NOT_OK: Passive startup of network management has failed |
| <b>Description:</b>        | Passive startup of the AUTOSAR LIN NM.  |

] ()

[SWS\_LinNm\_00064] [If the current state is not equal to Bus-Sleep Mode, then the function LinNm\_PassiveStartUp shall have no effect except that E\_NOT\_OK is returned.] ()

[SWS\_LinNm\_00065] [Caveats of LinNm\_PassiveStartUp: The LinNm module is initialized correctly.] ()

### 8.3.3 LinNm\_NetworkRequest

[SWS\_LinNm\_00055] [

|                            |  |  |
|----------------------------|--|--|
| <b>Service name:</b>       | LinNm_NetworkRequest   |  |
| <b>Syntax:</b>             | Std_ReturnType LinNm_NetworkRequest(<br>NetworkHandleType nmChannelHandle<br>) |  |
| <b>Service ID[hex]:</b>    | 0x02   |  |
| <b>Sync/Async:</b>         | Asynchronous   |  |
| <b>Reentrancy:</b>         | Reentrant (but not for the same NM-channel)                                    |  |
| <b>Parameters (in):</b>    | nmChannelHandle  | Identification of the NM-channel                             |
| <b>Parameters (inout):</b> | None   |  |
| <b>Parameters (out):</b>   | None   |  |
| <b>Return value:</b>       | Std_ReturnType   | E_OK: No error<br>E_NOT_OK: Requesting of network has failed |
| <b>Description:</b>        | Request the network, since ECU needs to communicate on the bus.                |  |

] ()

[SWS\_LinNm\_00053] [Caveats of LinNm\_NetworkRequest: The LinNm module is initialized correctly.] ()

[SWS\_LinNm\_00158] [Configuration of LinNm\_NetworkRequest: This function is only available if `LINNM_PASSIVE_MODE_ENABLED` is set to FALSE.] ()

### 8.3.4 LinNm\_NetworkRelease

[SWS\_LinNm\_00056] [

|                            |  |   |
|----------------------------|--|---|
| <b>Service name:</b>       | LinNm_NetworkRelease   |   |
| <b>Syntax:</b>             | Std_ReturnType LinNm_NetworkRelease(<br>NetworkHandleType nmChannelHandle<br>) |   |
| <b>Service ID[hex]:</b>    | 0x03   |   |
| <b>Sync/Async:</b>         | Asynchronous   |   |
| <b>Reentrancy:</b>         | Reentrant (but not for the same NM-Channel)                                    |   |
| <b>Parameters (in):</b>    | nmChannelHandle  | Identification of the NM-channel                            |
| <b>Parameters (inout):</b> | None   |   |
| <b>Parameters (out):</b>   | None   |   |
| <b>Return value:</b>       | Std_ReturnType   | E_OK: No error<br>E_NOT_OK: Releasing of network has failed |
| <b>Description:</b>        | Release the network, since ECU doesn't have to communicate on the bus.         |   |

] ()

[SWS\_LinNm\_00058] [Caveats of LinNm\_NetworkRelease: The LinNm module is initialized correctly.] ()

**[SWS\_LinNm\_00159]** 「Configuration of LinNm\_NetworkRelease: This function is only available if `LINNM_PASSIVE_MODE_ENABLED` is set to FALSE.」( )

### 8.3.5 LinNm\_GetVersionInfo

**[SWS\_LinNm\_00106]** [

|                            |  |
|----------------------------|--|
| <b>Service name:</b>       | LinNm_GetVersionInfo   |
| <b>Syntax:</b>             | void LinNm_GetVersionInfo(<br>Std_VersionInfoType* versioninfo<br>)            |
| <b>Service ID[hex]:</b>    | 0xf1   |
| <b>Sync/Async:</b>         | Synchronous  |
| <b>Reentrancy:</b>         | Reentrant  |
| <b>Parameters (in):</b>    | None   |
| <b>Parameters (inout):</b> | None   |
| <b>Parameters (out):</b>   | versioninfo   Pointer to where to store the version information of this module |
| <b>Return value:</b>       | None   |
| <b>Description:</b>        | This service returns the version information of this module.                   |

」( )

**[SWS\_LinNm\_00163]** 「If default error detection is enabled and the input argument `versioninfo` has null pointer then the service `LinNm_GetVersionInfo()` shall report an error `LINNM_E_PARAM_POINTER` to Default Error Tracer and return without any action.」( )

### 8.3.6 LinNm\_RequestBusSynchronization

**[SWS\_LinNm\_00089]** [

|                            |   |
|----------------------------|---|
| <b>Service name:</b>       | LinNm_RequestBusSynchronization   |
| <b>Syntax:</b>             | Std_ReturnType LinNm_RequestBusSynchronization(<br>NetworkHandleType nmChannelHandle<br>) |
| <b>Service ID[hex]:</b>    | 0xc0  |
| <b>Sync/Async:</b>         | Asynchronous  |
| <b>Reentrancy:</b>         | Non Reentrant   |
| <b>Parameters (in):</b>    | nmChannelHandle   Identification of the NM-channel  |
| <b>Parameters (inout):</b> | None  |
| <b>Parameters (out):</b>   | None  |
| <b>Return value:</b>       | Std_ReturnType   E_OK : No error  |
| <b>Description:</b>        | Empty function to be compliant with NM specifications. Request bus synchronization.       |

」( )

**[SWS\_LinNm\_00095]** 「Service call `LinNm_RequestBusSynchronization` shall provide an empty implementation.」( )

**[SWS\_LinNm\_00090]** 「Caveats of LinNm\_RequestBusSynchronization: The LinNm module is initialized correctly.」()

**[SWS\_LinNm\_00091]** 「Configuration of LinNm\_RequestBusSynchronization: Optional (Only available if `LINNM_BUS_SYNCHRONIZATION_ENABLED` is defined) and `LINNM_PASSIVE_MODE_ENABLED` is not defined.」()

Rationale: This service is typically used for supporting the NM gateway extensions.

### 8.3.7 LinNm\_CheckRemoteSleepIndication

**[SWS\_LinNm\_00092]** 「

|                            |   |  |
|----------------------------|---|--|
| <b>Service name:</b>       | LinNm_CheckRemoteSleepIndication  |  |
| <b>Syntax:</b>             | <pre>Std_ReturnType LinNm_CheckRemoteSleepIndication(     NetworkHandleType nmChannelHandle,     boolean* nmRemoteSleepIndPtr )</pre> |  |
| <b>Service ID[hex]:</b>    | 0xd0  |  |
| <b>Sync/Async:</b>         | Synchronous   |  |
| <b>Reentrancy:</b>         | Reentrant (but not for the same NM-channel)   |  |
| <b>Parameters (in):</b>    | nmChannelHandle   | Identification of the NM-channel   |
| <b>Parameters (inout):</b> | None  |  |
| <b>Parameters (out):</b>   | nmRemoteSleepIndPtr   | Pointer where check result of remote sleep indication shall be copied to |
| <b>Return value:</b>       | Std_ReturnType  | E_OK: No error   |
| <b>Description:</b>        | Empty function to be compliant with NM specifications.  |  |

」()

**[SWS\_LinNm\_00093]** 「Service call `LinNm_CheckRemoteSleepIndication` shall provide an empty implementation.」()

**[SWS\_LinNm\_00094]** 「Caveats of LinNm\_CheckRemoteSleepIndication: The LinNm module and Nm module shall be initialized correctly.」()

**[SWS\_LinNm\_00096]** 「Configuration of LinNm\_CheckRemoteSleepIndication: Optional (Only available if `LINNM_REMOTE_SLEEP_INDICATION_ENABLED` is defined)」()

### 8.3.8 LinNm\_SetSleepReadyBit

**[SWS\_LinNm\_00175]** 「

|                      |                        |
|----------------------|------------------------|
| <b>Service name:</b> | LinNm_SetSleepReadyBit |
|----------------------|------------------------|

|                            |  |  |
|----------------------------|--|--|
| <b>Syntax:</b>             | Std_ReturnType LinNm_SetSleepReadyBit(<br>NetworkHandleType nmChannelHandle,<br>boolean nmSleepReadyBit<br>) |  |
| <b>Service ID[hex]:</b>    | 0x10   |  |
| <b>Sync/Async:</b>         | Synchronous  |  |
| <b>Reentrancy:</b>         | Non Reentrant  |  |
| <b>Parameters (in):</b>    | nmChannelHandle  | Identification of the NM-channel       |
|                            | nmSleepReadyBit  | Value written to ReadySleep Bit in CBV |
| <b>Parameters (inout):</b> | None   |  |
| <b>Parameters (out):</b>   | None   |  |
| <b>Return value:</b>       | Std_ReturnType   | E_OK: No error                         |
| <b>Description:</b>        | Empty function to be compliant with NM specifications.   |  |

] ()

**[SWS\_LinNm\_00176]** [ Configuration of LinNm\_SetSleepReadyBit: This function is only available if LinNmCoordinatorSyncSupport is set to TRUE.] ()

**[SWS\_LinNm\_00177]** [ Service call LinNm\_SetSleepReadyBit shall provide an empty implementation.] ()

### 8.3.9 Communication control services provided by NM Interface

The following services are provided by NM Interface to allow the **Diagnostic Communication Manager (DCM)** to control the transmission of NM Messages.

#### 8.3.9.1 LinNm\_DisableCommunication

**[SWS\_LinNm\_00108]** [

|                            |  |                                  |
|----------------------------|--|----------------------------------|
| <b>Service name:</b>       | LinNm_DisableCommunication   |                                  |
| <b>Syntax:</b>             | Std_ReturnType LinNm_DisableCommunication(<br>NetworkHandleType NetworkHandle<br>) |                                  |
| <b>Service ID[hex]:</b>    | 0x04   |                                  |
| <b>Sync/Async:</b>         | Asynchronous   |                                  |
| <b>Reentrancy:</b>         | Non-reentrant for the same NetworkHandle, reentrant otherwise                      |                                  |
| <b>Parameters (in):</b>    | NetworkHandle  | Identification of the NM-channel |
| <b>Parameters (inout):</b> | None   |                                  |
| <b>Parameters (out):</b>   | None   |                                  |
| <b>Return value:</b>       | Std_ReturnType   | E_OK: No error                   |
| <b>Description:</b>        | Empty function to be compliant with NM specifications.                             |                                  |

] ()

**[SWS\_LinNm\_00109]** [Caveats of LinNm\_DisableCommunication: The **LinNm** and the **Nm** itself are initialized correctly. ] ()

**[SWS\_LinNm\_00110]** 「 Configuration of LinNm\_DisableCommunication: This function is only available if LINNM\_COM\_CONTROL\_ENABLED is set to TRUE. 」 ()

### 8.3.9.2 LinNm\_EnableCommunication

**[SWS\_LinNm\_00111]** 「

|                            |  |                                  |
|----------------------------|--|----------------------------------|
| <b>Service name:</b>       | LinNm_EnableCommunication  |                                  |
| <b>Syntax:</b>             | <pre>Std_ReturnType LinNm_EnableCommunication(     NetworkHandleType NetworkHandle )</pre> |                                  |
| <b>Service ID[hex]:</b>    | 0x05   |                                  |
| <b>Sync/Async:</b>         | Asynchronous   |                                  |
| <b>Reentrancy:</b>         | Non-reentrant for the same NetworkHandle, reentrant otherwise                              |                                  |
| <b>Parameters (in):</b>    | NetworkHandle  | Identification of the NM-channel |
| <b>Parameters (inout):</b> | None   |                                  |
| <b>Parameters (out):</b>   | None   |                                  |
| <b>Return value:</b>       | Std_ReturnType   | E_OK: No error                   |
| <b>Description:</b>        | Empty function to be compliant with NM specifications.                                     |                                  |

」 ()

**[SWS\_LinNm\_00112]** 「 Caveats of LinNm\_EnableCommunication: The **LinNm** and the **Nm** itself are initialized correctly. 」 ()

**[SWS\_LinNm\_00113]** 「 Configuration of LinNm\_EnableCommunication: This function is only available if LINNM\_COM\_CONTROL\_ENABLED is set to TRUE. 」 ()

### 8.3.10 Extra services provided by NM Interface

The following services are provided by NM Interface for OEM specific extensions of the NM stack and are not required by any AUTOSAR module.

#### 8.3.10.1 LinNm\_SetUserData

**[SWS\_LinNm\_00114]** 「

|                         |  |                                  |
|-------------------------|--|----------------------------------|
| <b>Service name:</b>    | LinNm_SetUserData  |                                  |
| <b>Syntax:</b>          | <pre>Std_ReturnType LinNm_SetUserData(     NetworkHandleType NetworkHandle,     const uint8* nmUserDataPtr )</pre> |                                  |
| <b>Service ID[hex]:</b> | 0x06   |                                  |
| <b>Sync/Async:</b>      | Synchronous  |                                  |
| <b>Reentrancy:</b>      | Non-reentrant for the same NetworkHandle, reentrant otherwise  |                                  |
| <b>Parameters (in):</b> | NetworkHandle  | Identification of the NM-channel |

|                            |  |   |
|----------------------------|--|---|
|                            | nmUserDataPtr  | User data for the next transmitted NM message |
| <b>Parameters (inout):</b> | None   |   |
| <b>Parameters (out):</b>   | None   |   |
| <b>Return value:</b>       | Std_ReturnType   | E_OK: No error                                |
| <b>Description:</b>        | Empty function to be compliant with NM specifications. |   |

」()

**[SWS\_LinNm\_00115]** 「Caveats of LinNm\_SetUserData: The **LinNm** and the **Nm** itself are initialized correctly.」()

**[SWS\_LinNm\_00116]** 「Configuration of LinNm\_SetUserData: This function is only available if LINNM\_USER\_DATA\_ENABLED is set to TRUE and LINNM\_PASSIVE\_MODE\_ENABLED is set to FALSE.」()

**[SWS\_LinNm\_00147]** 「If LinNmComUserDataSupport is enabled the API LinNm\_SetUserData shall not be available.」()

### 8.3.10.2 LinNm\_GetUserData

**[SWS\_LinNm\_00117]** 「

|                            |  |   |
|----------------------------|--|---|
| <b>Service name:</b>       | LinNm_GetUserData  |   |
| <b>Syntax:</b>             | <pre>Std_ReturnType LinNm_GetUserData(     NetworkHandleType NetworkHandle,     uint8* nmUserDataPtr )</pre> |   |
| <b>Service ID[hex]:</b>    | 0x07   |   |
| <b>Sync/Async:</b>         | Synchronous  |   |
| <b>Reentrancy:</b>         | Reentrant  |   |
| <b>Parameters (in):</b>    | NetworkHandle  | Identification of the NM-channel  |
| <b>Parameters (inout):</b> | None   |   |
| <b>Parameters (out):</b>   | nmUserDataPtr  | Pointer where user data out of the last successfully received NM message shall be copied to |
| <b>Return value:</b>       | Std_ReturnType   | E_OK: No error  |
| <b>Description:</b>        | Empty function to be compliant with NM specifications.   |   |

」()

**[SWS\_LinNm\_00118]** 「Caveats of LinNm\_GetUserData: The **LinNm** and the **Nm** itself are initialized correctly.」()

**[SWS\_LinNm\_00119]** 「Configuration of LinNm\_GetUserData: This function is only available if LINNM\_USER\_DATA\_ENABLED is set to TRUE.」()

### 8.3.10.3 LinNm\_GetPduData

[SWS\_LinNm\_00120] 「

|                            |   |  |
|----------------------------|---|--|
| <b>Service name:</b>       | LinNm_GetPduData  |  |
| <b>Syntax:</b>             | <pre>Std_ReturnType LinNm_GetPduData(     NetworkHandleType NetworkHandle,     uint8* nmPduData )</pre> |  |
| <b>Service ID[hex]:</b>    | 0x08  |  |
| <b>Sync/Async:</b>         | Synchronous   |  |
| <b>Reentrancy:</b>         | Reentrant   |  |
| <b>Parameters (in):</b>    | NetworkHandle   | Identification of the NM-channel         |
| <b>Parameters (inout):</b> | None  |  |
| <b>Parameters (out):</b>   | nmPduData   | Pointer where NM PDU shall be copied to. |
| <b>Return value:</b>       | Std_ReturnType  | E_OK: No error                           |
| <b>Description:</b>        | Empty function to be complaint with NM specifications.  |  |

」()

[SWS\_LinNm\_00121] 「Caveats of LinNm\_GetPduData: The **LinNm** and the **Nm** itself are initialized correctly.」()

[SWS\_LinNm\_00122] 「Configuration of LinNm\_GetPduData: This function is only available if LINNM\_NODE\_ID\_ENABLED or LINNM\_USER\_DATA\_ENABLED is set to TRUE.」()

### 8.3.10.4 LinNm\_RepeatMessageRequest

[SWS\_LinNm\_00123] 「

|                            |   |                                  |
|----------------------------|---|----------------------------------|
| <b>Service name:</b>       | LinNm_RepeatMessageRequest  |                                  |
| <b>Syntax:</b>             | <pre>Std_ReturnType LinNm_RepeatMessageRequest(     NetworkHandleType NetworkHandle )</pre> |                                  |
| <b>Service ID[hex]:</b>    | 0x09  |                                  |
| <b>Sync/Async:</b>         | Asynchronous  |                                  |
| <b>Reentrancy:</b>         | Non-reentrant for the same NetworkHandle, reentrant otherwise                               |                                  |
| <b>Parameters (in):</b>    | NetworkHandle   | Identification of the NM-channel |
| <b>Parameters (inout):</b> | None  |                                  |
| <b>Parameters (out):</b>   | None  |                                  |
| <b>Return value:</b>       | Std_ReturnType  | E_OK: No error                   |
| <b>Description:</b>        | Empty function to be complaint with NM specifications.                                      |                                  |

」()

[SWS\_LinNm\_00124] 「Caveats of LinNm\_RepeatMessageRequest: **LinNm** and **Nm** itself are initialized correctly.」()

**[SWS\_LinNm\_00125]** 「 Configuration of LinNm\_RepeatMessageRequest: This function is only available if LINNM\_NODE\_DETECTION\_ENABLED is TRUE. 」 ()

### 8.3.10.5 LinNm\_GetNodeIdentifier

**[SWS\_LinNm\_00126]** 「

|                            |  |   |
|----------------------------|--|---|
| <b>Service name:</b>       | LinNm_GetNodeIdentifier  |   |
| <b>Syntax:</b>             | <pre>Std_ReturnType LinNm_GetNodeIdentifier(     NetworkHandleType NetworkHandle,     uint8* nmNodeIdPtr )</pre> |   |
| <b>Service ID[hex]:</b>    | 0x0a   |   |
| <b>Sync/Async:</b>         | Synchronous  |   |
| <b>Reentrancy:</b>         | Non-reentrant for the same NetworkHandle, reentrant otherwise  |   |
| <b>Parameters (in):</b>    | NetworkHandle  | Identification of the NM-channel  |
| <b>Parameters (inout):</b> | None   |   |
| <b>Parameters (out):</b>   | nmNodeIdPtr  | Pointer where node identifier out of the last successfully received NM-message shall be copied to |
| <b>Return value:</b>       | Std_ReturnType   | E_OK: No error  |
| <b>Description:</b>        | Empty function to be complaint with NM specifications.   |   |

」 ()

**[SWS\_LinNm\_00127]** 「 Caveats of LinNm\_GetNodeIdentifier: The **LinNm** and the **Nm** itself are initialized correctly. 」 ()

**[SWS\_LinNm\_00128]** 「 Configuration of LinNm\_GetNodeIdentifier: This function is only available if LINNM\_NODE\_ID\_ENABLED is set to TRUE. 」 ()

### 8.3.10.6 LinNm\_GetLocalNodeIdentifier

**[SWS\_LinNm\_00129]** 「

|                            |   |  |
|----------------------------|---|--|
| <b>Service name:</b>       | LinNm_GetLocalNodeIdentifier  |  |
| <b>Syntax:</b>             | <pre>Std_ReturnType LinNm_GetLocalNodeIdentifier(     NetworkHandleType NetworkHandle,     uint8* nmNodeIdPtr )</pre> |  |
| <b>Service ID[hex]:</b>    | 0x0b  |  |
| <b>Sync/Async:</b>         | Synchronous   |  |
| <b>Reentrancy:</b>         | Non-reentrant for the same NetworkHandle, reentrant otherwise   |  |
| <b>Parameters (in):</b>    | NetworkHandle   | Identification of the NM-channel                                   |
| <b>Parameters (inout):</b> | None  |  |
| <b>Parameters (out):</b>   | nmNodeIdPtr   | Pointer where node identifier of the local node shall be copied to |
| <b>Return value:</b>       | Std_ReturnType  | E_OK: No error   |
| <b>Description:</b>        | Empty function to be complaint with NM specifications.  |  |

」()

**[SWS\_LinNm\_00130]** 「Caveats of LinNm\_GetLocalNodIdentifier: The **LinNm** and the **Nm** itself are initialized correctly.」()

**[SWS\_LinNm\_00131]** 「Configuration of LinNm\_GetLocalNodIdentifier: This function is only available if LINNM\_NODE\_ID\_ENABLED is set to TRUE.」()

### 8.3.10.7 LinNm\_GetState

**[SWS\_LinNm\_00135]** 「

|                            |  |   |
|----------------------------|--|---|
| <b>Service name:</b>       | LinNm_GetState   |   |
| <b>Syntax:</b>             | <pre>Std_ReturnType LinNm_GetState(     NetworkHandleType nmNetworkHandle,     Nm_StateType* nmStatePtr,     Nm_ModeType* nmModePtr )</pre>                        |   |
| <b>Service ID[hex]:</b>    | 0x0e   |   |
| <b>Sync/Async:</b>         | Synchronous  |   |
| <b>Reentrancy:</b>         | Reentrant  |   |
| <b>Parameters (in):</b>    | nmNetworkHandle  | Identification of the NM-channel  |
| <b>Parameters (inout):</b> | None   |   |
| <b>Parameters (out):</b>   | nmStatePtr   | Pointer where state of the network management shall be copied to                    |
|                            | nmModePtr  | Pointer to the location where the mode of the network management shall be copied to |
| <b>Return value:</b>       | Std_ReturnType   | E_OK: No error  |
| <b>Description:</b>        | Returns the state of the network management. The function LinNm_GetState shall be called (e.g. LinNm_GetState function is called if channel is configured as LIN). |   |

」()

**[SWS\_LinNm\_00136]** 「Caveats of LinNm\_GetState: The **LinNm** and the **Nm** itself are initialized correctly.」()

### 8.3.10.8 LinNm\_Transmit

**[SWS\_LinNm\_00148]** 「

|                         |   |  |
|-------------------------|---|--|
| <b>Service name:</b>    | LinNm_Transmit  |  |
| <b>Syntax:</b>          | <pre>Std_ReturnType LinNm_Transmit(     PduIdType LinTxPduId,     const PduInfoType* PduInfoPtr )</pre> |  |
| <b>Service ID[hex]:</b> | 0x0f  |  |
| <b>Sync/Async:</b>      | Synchronous   |  |
| <b>Reentrancy:</b>      | Non Reentrant   |  |
| <b>Parameters (in):</b> | LinTxPduId  | Upper layer identification of the LIN frame to be transmitted (not |

|                            |   |   |
|----------------------------|---|---|
|                            |   | the LIN protected ID).<br>This parameter is used to determine the corresponding LIN protected ID (PID) and implicitly the LIN Driver instance as well as the corresponding LIN Controller device. |
| PduInfoPtr                 |   | Pointer to a structure with frame related data: DLC and pointer to frame data buffer. This parameter is not used by this call.  |
| <b>Parameters (inout):</b> | None  |   |
| <b>Parameters (out):</b>   | None  |   |
| <b>Return value:</b>       | Std_ReturnType  | E_NOT_OK: returns always  |
| <b>Description:</b>        | Empty function to be compliant with NM specifications. Always return E_NOT_OK |   |

」()

**[SWS\_LinNm\_00149]** 「Service call `LinNm_Transmit` shall provide an empty implementation」()

**[SWS\_LinNm\_00150]** 「Caveats of LinNm\_Transmit: The **LinNm** and the **Nm** itself are initialized correctly.」()

**[SWS\_LinNm\_00151]** 「Configuration of LinNm\_Transmit: This function is only available if `LINNM_COM_USER_DATA_SUPPORT` is set to TRUE.」()

### 8.3.10.9 LinNm\_TxConfirmation

**[SWS\_LinNm\_00153]** 「

|                            |   |  |
|----------------------------|---|--|
| <b>Service name:</b>       | LinNm_TxConfirmation  |  |
| <b>Syntax:</b>             | <pre>void LinNm_TxConfirmation(     PduIdType TxPduId )</pre>                         |  |
| <b>Service ID[hex]:</b>    | 0x40  |  |
| <b>Sync/Async:</b>         | Synchronous   |  |
| <b>Reentrancy:</b>         | Reentrant for different Pduds. Non reentrant for the same Pdud.                       |  |
| <b>Parameters (in):</b>    | TxPduId   | ID of the I-PDU that has been transmitted. |
| <b>Parameters (inout):</b> | None  |  |
| <b>Parameters (out):</b>   | None  |  |
| <b>Return value:</b>       | None  |  |
| <b>Description:</b>        | The lower layer communication interface module confirms the transmission of an I-PDU. |  |

」()

**[SWS\_LinNm\_00154]** 「Caveats of LinNm\_TxConfirmation: The **LinNm** and the **Nm** itself are initialized correctly.」()

## 8.4 Scheduled Functions

### 8.4.1 LinNm\_MainFunction

[SWS\_LinNm\_00173][

|                         |   |
|-------------------------|---|
| <b>Service name:</b>    | LinNm_MainFunction  |
| <b>Syntax:</b>          | void LinNm_MainFunction (<br>void<br>)  |
| <b>Service ID[hex]:</b> | 0x11  |
| <b>Description:</b>     | Main function of the LinNm which processes the algorithm described in document SWS LinNm. |

] ()

## 8.5 Expected Interfaces

In this chapter all interfaces required from other modules are listed.

### 8.5.1 Mandatory Interfaces

This chapter defines all interfaces which are required to fulfill the core functionality of the module.

| <b>API function</b> | <b>Description</b>   |
|---------------------|--|
| Nm_BusSleepMode     | Notification that the network management has entered Bus-Sleep Mode. |
| Nm_NetworkMode      | Notification that the network management has entered Network Mode.   |

### 8.5.2 Optional Interfaces

This chapter defines all interfaces which are required to fulfill an optional functionality of the module.

| <b>API function</b>              | <b>Description</b>   |
|----------------------------------|--|
| Det_ReportError                  | Service to report development errors.  |
| Nm_CoordReadyToSleepCancellation | Cancels an indication, when the NM Coordinator Sleep Ready bit in the Control Bit Vector is set back to 0.                   |
| Nm_CoordReadyToSleepIndication   | Sets an indication, when the NM Coordinator Sleep Ready bit in the Control Bit Vector is set                                 |
| Nm_RemoteSleepIndication         | Notification that the network management has detected that all other nodes on the network are ready to enter Bus-Sleep Mode. |
| Nm_StateChangeNotification       | Notification that the state of the lower layer <BusNm> has changed.  |

### 8.5.3 Configurable interfaces

Not applicable

### 8.5.4 Job End Notification

Not applicable

## 8.6 Parameter check

**[SWS\_LinNm\_00069]** [If default error detection is enabled by `LINNM_DEV_ERROR_DETECT` (configuration parameter), then for all LinNm API services validity check of input parameters shall be made.] ()

**[SWS\_LinNm\_00070]** [Parameter type checking shall be made at compile time; if types do not fit the compilation process shall be stopped and respective compilation warnings or errors shall be returned as far as supported by the compiler.] ()

**[SWS\_LinNm\_00071]** [Parameter value check (for parameters of the constant value) shall be made at configuration time; if the value is invalid, the configuration process shall be stopped and respective configuration error shall be reported.] ()

**[SWS\_LinNm\_00072]** [Parameter value check (for parameters of the variable value) shall be made at execution time; if the value is invalid, execution of a service shall be rejected and the LinNm module shall report respective errors to Default Error Tracer.] ()

## 8.7 Version check

For details refer to the chapter 5.1.8 “Version Check” in *SWS\_BSWGeneral*.

## 9 Sequence diagrams

### 9.1 LinNm\_Init

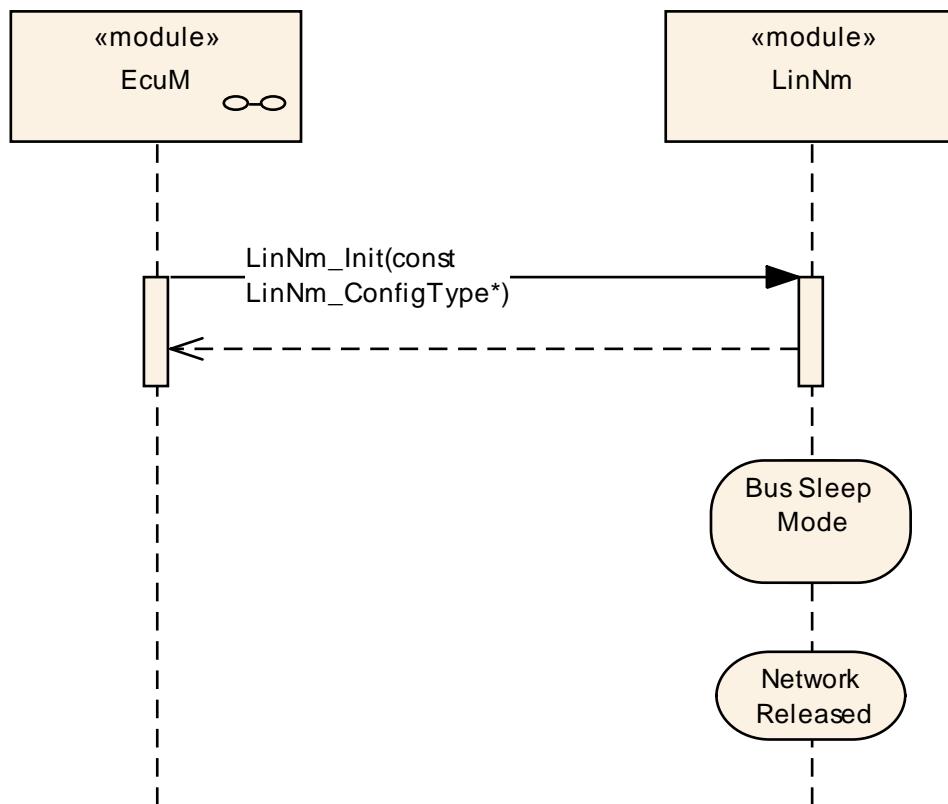


Figure 9-1 LinNm\_init

## 9.2 LinNm\_PassiveStartUp

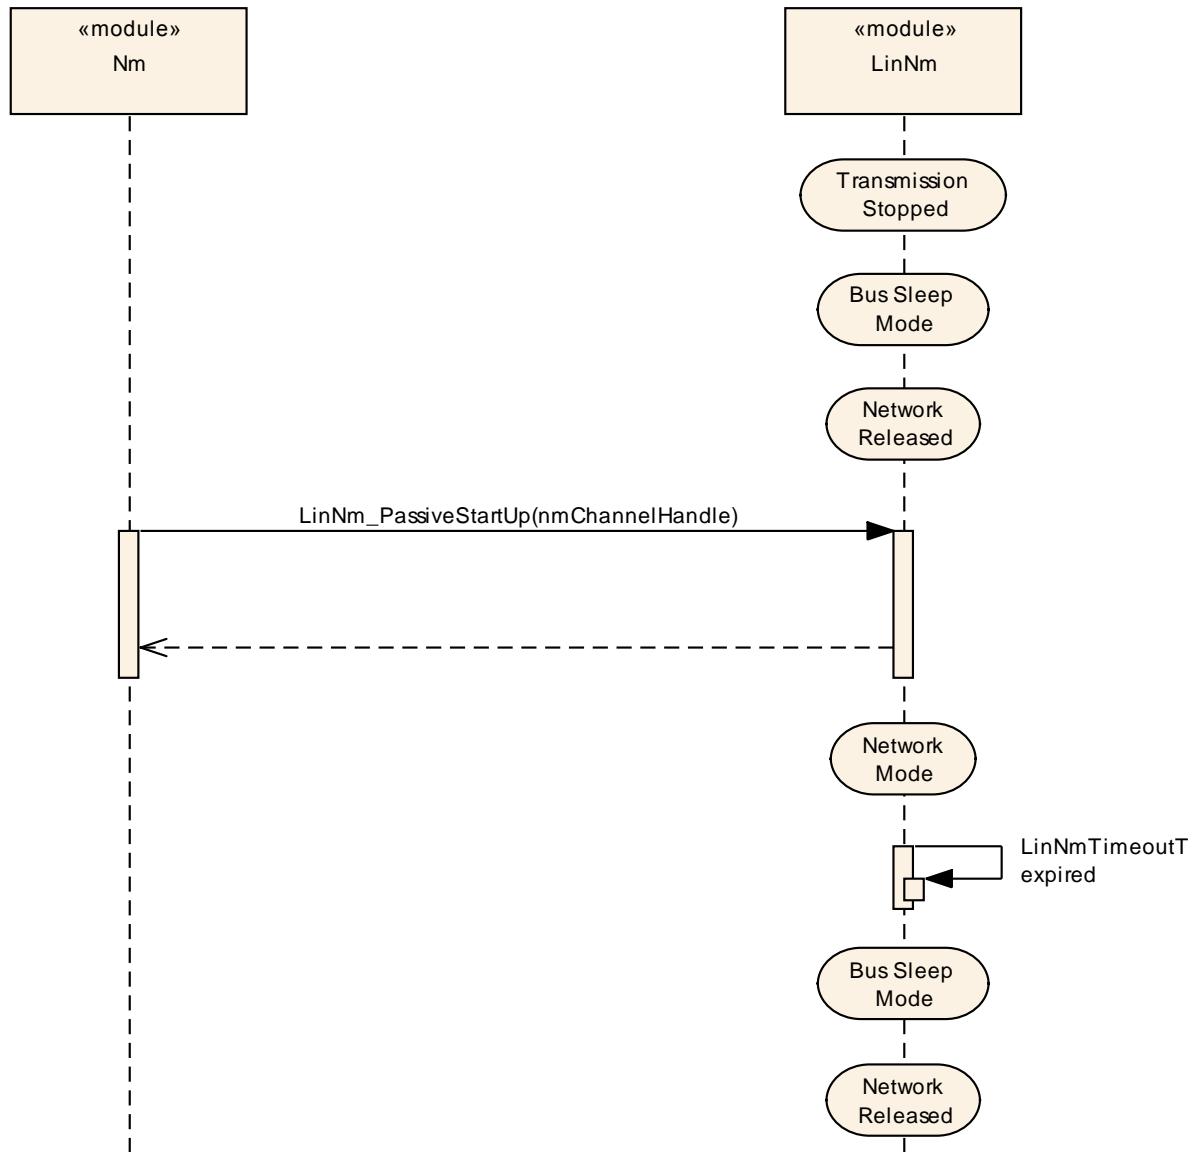


Figure 9-2 LinNm Passive Startup

### 9.3 LinNm\_NormalOperation

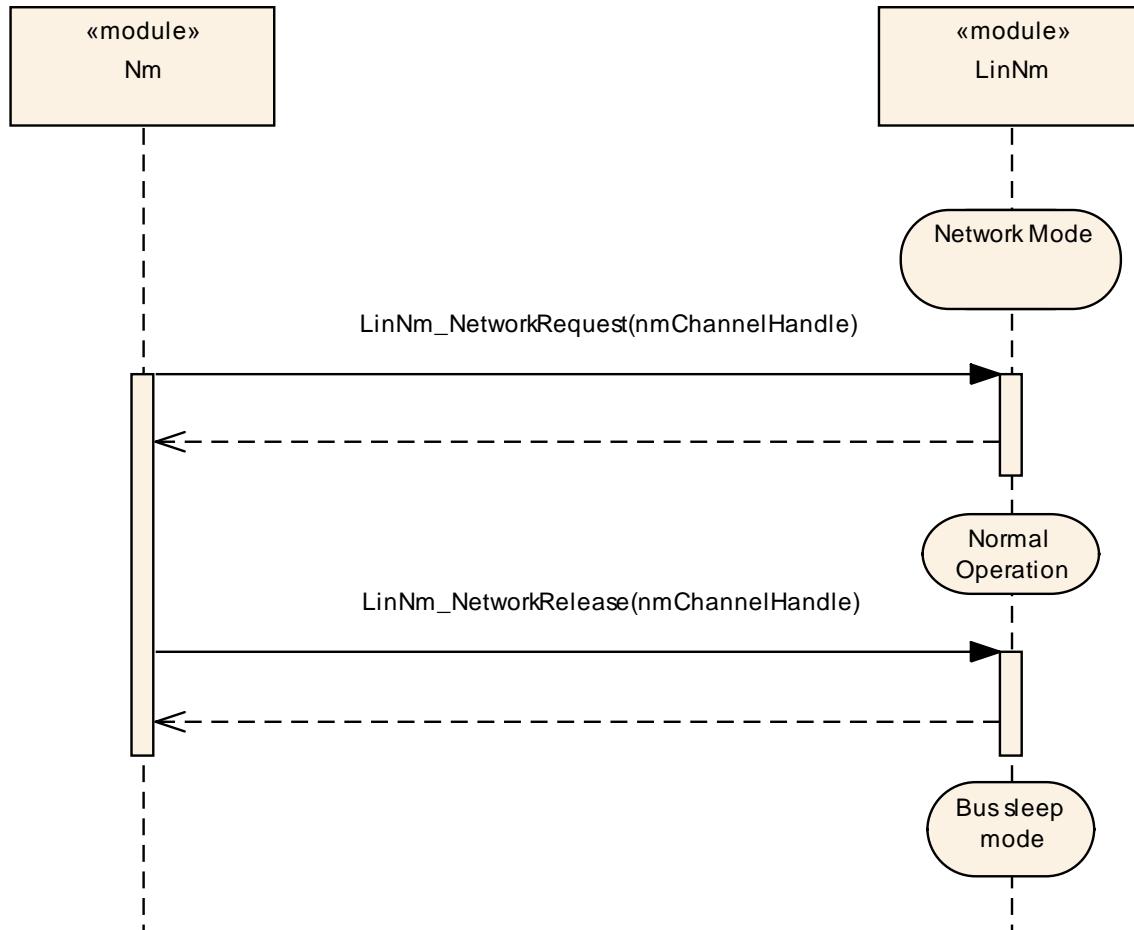


Figure 9-3 LinNm Normal Operation

## 10 Configuration specification

In general, this chapter defines configuration parameters and their clustering into containers. In order to support the specification chapter 10.1 describes fundamentals. It also specifies a template (table) you shall use for the parameter specification. We intend to leave chapter 10.1 in the specification to guarantee comprehension.

Chapter 10.2 specifies the structure (containers) and the parameters of the module LinNm.

Chapter 10.3 specifies published information of the module LinNm.

### 10.1 How to read this chapter

For details refer to the chapter 10.1 “Introduction to configuration specification” in *SWS\_BSWGeneral*.

## 10.2 Containers and configuration parameters

The following chapters summarize all configuration parameters. The detailed meanings of the parameters describe Chapters 7 and 8.

The configuration parameters as defined in this chapter are used to create a data model for an AUTOSAR tool chain. The realization in the code is implementation specific.

The configuration parameters as defined in this chapter are used to create a data model for an AUTOSAR tool chain. The realization in the code is implementation specific.

The configuration parameters are divided in parameters which are used to enable features, parameters which affect all instances of the LinNm and parameters which affect the respective instances of the LinNm.

**[SWS\_LinNm\_00074]** [All configuration items shall be located outside the kernel of the module. ] ( )

### 10.2.1 Variants

**[SWS\_LinNm\_00075]** [Variant 1: All configuration parameters shall be configurable at pre-compile time.

Use case: Source code optimizations ] ( )

**[SWS\_LinNm\_00076]** [Variant 2: All configuration parameters of the container `LinNm_GlobalConfig` related to enable or disable a configurable feature shall be configurable at pre-compile time; the remaining configuration parameters shall be configurable at link time.

Use case: Object code. ] ( )

**[SWS\_LinNm\_00077]** [Variant 3: The parameters contained in `LinNm_GlobalConfig` are configurable at pre-compile time

Use case: ECU configuration can be flashed (L) and selected during initialization phase (M). ] ( )

Note:

The possibility to select a configuration (post-build time type L) is only explicitly mentioned for Variant 3, but from a technical perspective it is also possible to provide this configuration variant for variant 1 and 2.

## 10.3 Containers and configuration parameters

This chapter describes the configuration container and parameters used for LinNm configuration.

### 10.3.1 LinNm

|                                   |   |  |
|-----------------------------------|---|--|
| <b>Module Name</b>                | <i>LinNm</i>                                    |  |
| <b>Module Description</b>         | Configuration Parameters for the Lin Nm module. |  |
| <b>Post-Build Variant Support</b> | false   |  |

| <b>Included Containers</b> |                     |  |
|----------------------------|---------------------|--|
| <b>Container Name</b>      | <b>Multiplicity</b> | <b>Scope / Dependency</b>  |
| LinNmGlobalConfig          | 1                   | This container contains the global configuration parameter of the LinNm. |



Figure 10-1 LinNm top level configuration overview

### 10.3.2 LinNmGlobalConfig

|                                 |  |  |
|---------------------------------|--|--|
| <b>SWS Item</b>                 | <b>ECUC_LinNm_00001 :</b>  |  |
| <b>Container Name</b>           | LinNmGlobalConfig  |  |
| <b>Description</b>              | This container contains the global configuration parameter of the LinNm. |  |
| <b>Configuration Parameters</b> |  |  |

|                                  |   |                |
|----------------------------------|---|----------------|
| <b>SWS Item</b>                  | <b>ECUC_LinNm_00015 :</b>   |                |
| <b>Name</b>                      | LinNmBusSynchronizationEnabled  |                |
| <b>Description</b>               | Pre-processor switch for enabling bus synchronization support of the LinNm. This feature is required for NM Coordinator nodes only. |                |
| <b>Multiplicity</b>              | 1   |                |
| <b>Type</b>                      | EcucBooleanParamDef   |                |
| <b>Default value</b>             | --  |                |
| <b>Post-Build Variant Value</b>  | false   |                |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>   | X All Variants |
|                                  | <b>Link time</b>  | --             |
|                                  | <b>Post-build time</b>  | --             |
| <b>Scope / Dependency</b>        | scope: local<br>dependency: It must not be enabled if LINNM_PASSIVE_MODE_ENABLED is enabled.  |                |

|                      |  |  |
|----------------------|--|--|
| <b>SWS Item</b>      | <b>ECUC_LinNm_00019 :</b>  |  |
| <b>Name</b>          | LinNmComControlEnabled   |  |
| <b>Description</b>   | Pre-processor switch for enabling the Communication Control support. |  |
| <b>Multiplicity</b>  | 1  |  |
| <b>Type</b>          | EcucBooleanParamDef  |  |
| <b>Default value</b> | --   |  |

|                                  |                         |    |              |
|----------------------------------|-------------------------|----|--------------|
| <b>Post-Build Variant Value</b>  | false                   |    |              |
| <b>Value Configuration Class</b> | <i>Pre-compile time</i> | X  | All Variants |
|                                  | <i>Link time</i>        | -- |              |
|                                  | <i>Post-build time</i>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local            |    |              |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_LinNm_00025 : (Obsolete)</b>   |    |              |
| <b>Name</b>                      | LinNmComUserDataSupport  |    |              |
| <b>Description</b>               | Pre-processor switch for enabling the NM COM user data support.<br>This parameter is set to obsolete and will be removed in release 4.3. |    |              |
| <b>Tags:</b>                     | atp.Status=obsolete  |    |              |
| <b>Multiplicity</b>              | 0..1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef  |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <i>Pre-compile time</i>  | X  | All Variants |
|                                  | <i>Link time</i>   | -- |              |
|                                  | <i>Post-build time</i>   | -- |              |
| <b>Scope / Dependency</b>        | scope: local   |    |              |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_LinNm_00026 :</b>   |    |              |
| <b>Name</b>                      | LinNmCoordinatorSyncSupport   |    |              |
| <b>Description</b>               | Enables/disables the coordinator synchronization support.   |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef   |    |              |
| <b>Default value</b>             | --  |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <i>Pre-compile time</i>   | X  | All Variants |
|                                  | <i>Link time</i>  | -- |              |
|                                  | <i>Post-build time</i>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local<br>dependency: LinNmCoordinatorSyncSupport has to be set to FALSE if LinNmPassiveModeEnabled is set to TRUE. |    |              |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_LinNm_00003 :</b>  |    |              |
| <b>Name</b>                      | LinNmDevErrorDetect  |    |              |
| <b>Description</b>               | Switches the Default Error Tracer (Det) detection and notification ON or OFF.<br><br>• true: enabled (ON).<br>• false: disabled (OFF). |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucBooleanParamDef  |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <i>Pre-compile time</i>  | X  | All Variants |
|                                  | <i>Link time</i>   | -- |              |
|                                  | <i>Post-build time</i>   | -- |              |
| <b>Scope / Dependency</b>        | scope: local   |    |              |

|                     |  |  |  |
|---------------------|--|--|--|
| <b>SWS Item</b>     | <b>ECUC_LinNm_00028 :</b>                    |  |  |
| <b>Name</b>         | LinNmMainFunctionPeriod                      |  |  |
| <b>Description</b>  | Call cycle in seconds of LinNm_MainFunction. |  |  |
| <b>Multiplicity</b> | 1  |  |  |

|                           |                   |    |                    |
|---------------------------|-------------------|----|--------------------|
| Type                      | EcucFloatParamDef |    |                    |
| Range                     | 0 .. 0.255        |    |                    |
| Default value             | --                |    |                    |
| Post-Build Variant Value  | false             |    |                    |
| Value Configuration Class | Pre-compile time  | X  | VARIANT-PRE-COMPIL |
|                           | Link time         | X  | VARIANT-LINK-TIME  |
|                           | Post-build time   | -- |                    |
| Scope / Dependency        | scope: local      |    |                    |

|                           |   |    |              |
|---------------------------|---|----|--------------|
| SWS Item                  | ECUC_LinNm_00020 :  |    |              |
| Name                      | LinNmNodeDetectionEnabled                                     |    |              |
| Description               | Pre-processor switch for enabling the Node Detection feature. |    |              |
| Multiplicity              | 1   |    |              |
| Type                      | EcucBooleanParamDef   |    |              |
| Default value             | --  |    |              |
| Post-Build Variant Value  | false   |    |              |
| Value Configuration Class | Pre-compile time  | X  | All Variants |
|                           | Link time   | -- |              |
|                           | Post-build time   | -- |              |
| Scope / Dependency        | scope: local  |    |              |

|                           |  |    |              |
|---------------------------|--|----|--------------|
| SWS Item                  | ECUC_LinNm_00021 :   |    |              |
| Name                      | LinNmNodeIdEnabled   |    |              |
| Description               | Pre-processor switch for enabling transmission of the source node identifier in NM messages. |    |              |
| Multiplicity              | 1  |    |              |
| Type                      | EcucBooleanParamDef  |    |              |
| Default value             | --   |    |              |
| Post-Build Variant Value  | false  |    |              |
| Value Configuration Class | Pre-compile time   | X  | All Variants |
|                           | Link time  | -- |              |
|                           | Post-build time  | -- |              |
| Scope / Dependency        | scope: local   |    |              |

|                           |   |    |              |
|---------------------------|---|----|--------------|
| SWS Item                  | ECUC_LinNm_00005 :  |    |              |
| Name                      | LinNmPassiveModeEnabled   |    |              |
| Description               | Pre-processor switch for enabling support of the Passive Mode of the LinNm. |    |              |
| Multiplicity              | 1   |    |              |
| Type                      | EcucBooleanParamDef   |    |              |
| Default value             | --  |    |              |
| Post-Build Variant Value  | false   |    |              |
| Value Configuration Class | Pre-compile time  | X  | All Variants |
|                           | Link time   | -- |              |
|                           | Post-build time   | -- |              |
| Scope / Dependency        | scope: local  |    |              |

|                           |  |   |              |
|---------------------------|--|---|--------------|
| SWS Item                  | ECUC_LinNm_00016 :   |   |              |
| Name                      | LinNmRemoteSleepIndicationEnabled  |   |              |
| Description               | Pre-processor switch for enabling Remote Sleep Indication support. This feature is required for NM Coordinator nodes only. |   |              |
| Multiplicity              | 1  |   |              |
| Type                      | EcucBooleanParamDef  |   |              |
| Default value             | --   |   |              |
| Post-Build Variant Value  | false  |   |              |
| Value Configuration Class | Pre-compile time   | X | All Variants |

|                           |  |    |  |
|---------------------------|--|----|--|
|                           | <i>Link time</i>   | -- |  |
|                           | <i>Post-build time</i>   | -- |  |
| <b>Scope / Dependency</b> | scope: local<br>dependency: It must not be enabled if LINNM_PASSIVE_MODE_ENABLED is enabled. |    |  |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_LinNm_00018 :</b>   |    |              |
| <b>Name</b>                      | LinNmStateChangelndEnabled  |    |              |
| <b>Description</b>               | Pre-processor switch for enabling the Network Management state change notification. |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef   |    |              |
| <b>Default value</b>             | --  |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <i>Pre-compile time</i>   | X  | All Variants |
|                                  | <i>Link time</i>  | -- |              |
|                                  | <i>Post-build time</i>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local  |    |              |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_LinNm_00022 :</b>   |    |              |
| <b>Name</b>                      | LinNmSynchronizationPointEnabled  |    |              |
| <b>Description</b>               | Pre-processor switch for enabling the Synchronize NM feature.                             |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef   |    |              |
| <b>Default value</b>             | false   |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <i>Pre-compile time</i>   | X  | All Variants |
|                                  | <i>Link time</i>  | -- |              |
|                                  | <i>Post-build time</i>  | -- |              |
| <b>Scope / Dependency</b>        | scope: local<br>dependency: Pre-processor switch for enabling the Synchronize NM feature. |    |              |

|                                  |  |    |              |
|----------------------------------|--|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_LinNm_00017 :</b>                            |    |              |
| <b>Name</b>                      | LinNmUserDataEnabled                                 |    |              |
| <b>Description</b>               | Pre-processor switch for enabling User Data support. |    |              |
| <b>Multiplicity</b>              | 1  |    |              |
| <b>Type</b>                      | EcucBooleanParamDef                                  |    |              |
| <b>Default value</b>             | --   |    |              |
| <b>Post-Build Variant Value</b>  | false  |    |              |
| <b>Value Configuration Class</b> | <i>Pre-compile time</i>                              | X  | All Variants |
|                                  | <i>Link time</i>                                     | -- |              |
|                                  | <i>Post-build time</i>                               | -- |              |
| <b>Scope / Dependency</b>        | scope: local   |    |              |

|                                  |   |    |              |
|----------------------------------|---|----|--------------|
| <b>SWS Item</b>                  | <b>ECUC_LinNm_00004 :</b>                                   |    |              |
| <b>Name</b>                      | LinNmVersionInfoApi   |    |              |
| <b>Description</b>               | Pre-processor switch for enabling version info API support. |    |              |
| <b>Multiplicity</b>              | 1   |    |              |
| <b>Type</b>                      | EcucBooleanParamDef   |    |              |
| <b>Default value</b>             | --  |    |              |
| <b>Post-Build Variant Value</b>  | false   |    |              |
| <b>Value Configuration Class</b> | <i>Pre-compile time</i>                                     | X  | All Variants |
|                                  | <i>Link time</i>  | -- |              |
|                                  | <i>Post-build time</i>                                      | -- |              |
| <b>Scope / Dependency</b>        | scope: local  |    |              |

| <b>Included Containers</b> |                     |  |
|----------------------------|---------------------|--|
| <b>Container Name</b>      | <b>Multiplicity</b> | <b>Scope / Dependency</b>  |
| LinNmChannelConfig         | 1..*                | This container contains the channel specific configuration parameter of the LinNm. |

**[SWS\_LinNm\_00098]** [The Global Scope specifies configuration parameter that shall be defined in the module's configuration header file **LinNm\_Cfg.h.** ] ( )

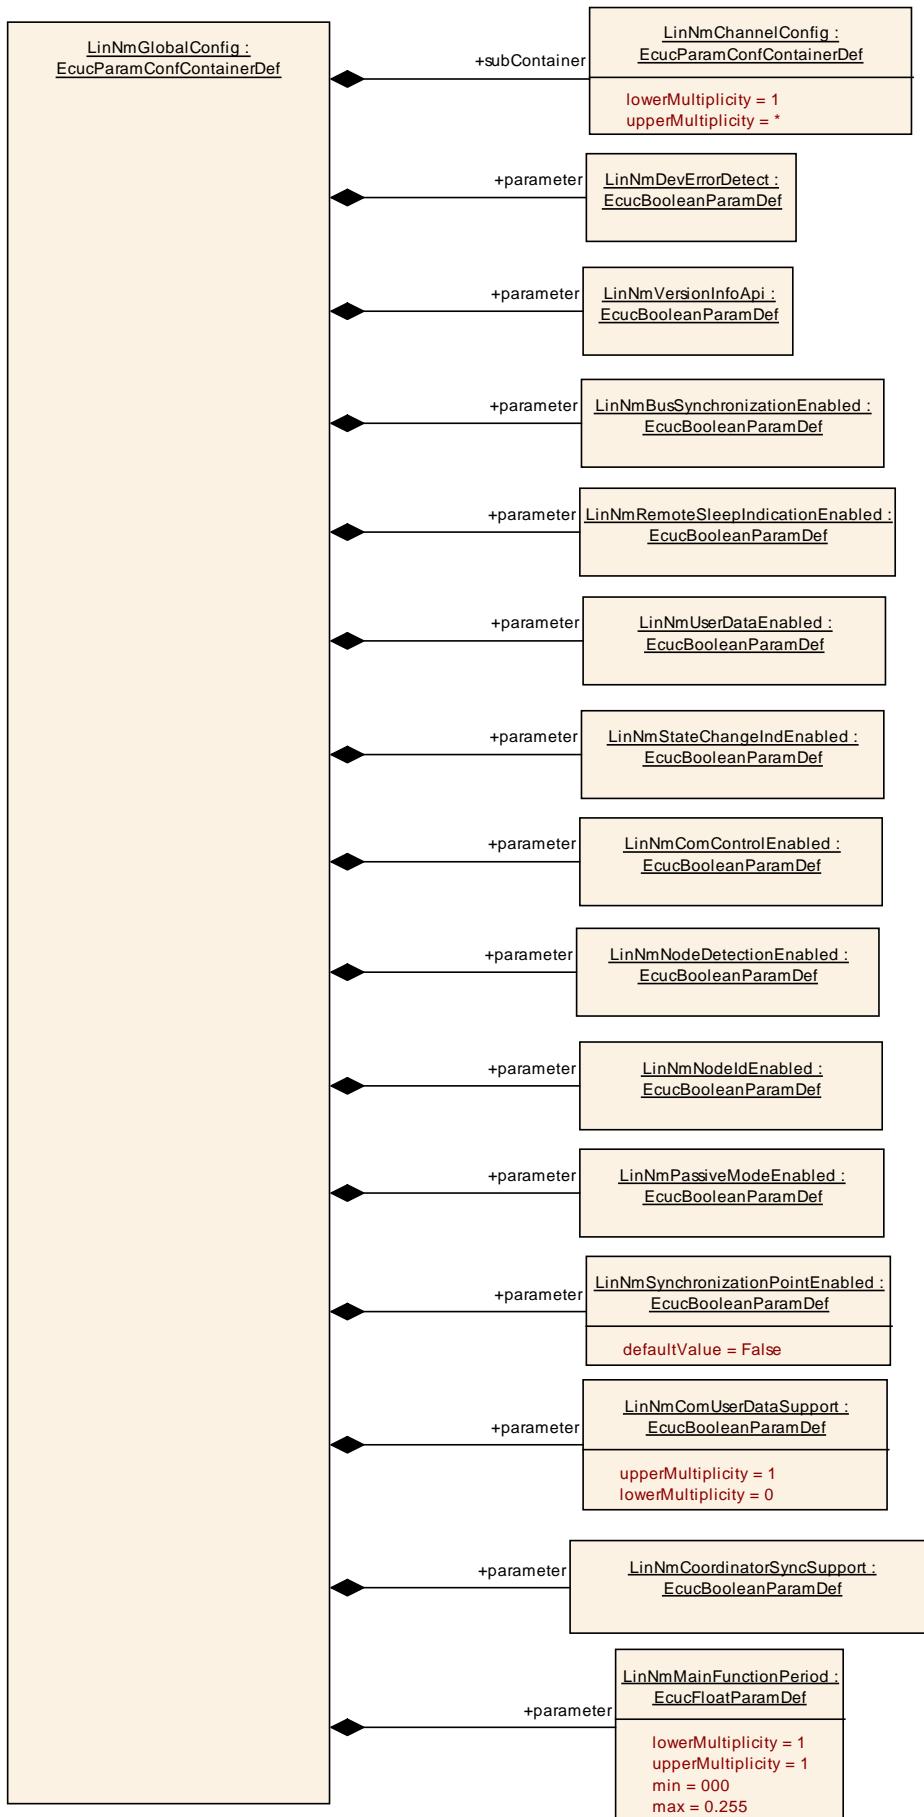


Figure 10-2 Parameters of LinNm global configuration

### 10.3.3 LinNmChannelConfig

|                                 |  |  |  |
|---------------------------------|--|--|--|
| <b>SWS Item</b>                 | ECUC_LinNm_00002 :   |  |  |
| <b>Container Name</b>           | LinNmChannelConfig   |  |  |
| <b>Description</b>              | This container contains the channel specific configuration parameter of the LinNm. |  |  |
| <b>Configuration Parameters</b> |  |  |  |

|                                  |   |    |                    |
|----------------------------------|---|----|--------------------|
| <b>SWS Item</b>                  | ECUC_LinNm_00027 :  |    |                    |
| <b>Name</b>                      | LinNmTimeoutTime  |    |                    |
| <b>Description</b>               | Network Timeout after passive start-up. It denotes the time in seconds how long the NM shall stay in Network Mode in case of passive start-up before transition into Bus-Sleep Mode is initiated. |    |                    |
| <b>Multiplicity</b>              | 1   |    |                    |
| <b>Type</b>                      | EcucFloatParamDef   |    |                    |
| <b>Range</b>                     | 0 .. 65.535   |    |                    |
| <b>Default value</b>             | --  |    |                    |
| <b>Post-Build Variant Value</b>  | false   |    |                    |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>   | X  | VARIANT-PRE-COMPIL |
|                                  | <b>Link time</b>  | X  | VARIANT-LINK-TIME  |
|                                  | <b>Post-build time</b>  | -- |                    |
| <b>Scope / Dependency</b>        | scope: ECU  |    |                    |

|                                  |  |    |                    |
|----------------------------------|--|----|--------------------|
| <b>SWS Item</b>                  | ECUC_LinNm_00014 :   |    |                    |
| <b>Name</b>                      | LinNmComMNetworkHandleRef  |    |                    |
| <b>Description</b>               | This reference points to the unique channel defined by the ComMChannel and provides access to the unique channel index value in ComMChannelId. |    |                    |
| <b>Multiplicity</b>              | 1  |    |                    |
| <b>Type</b>                      | Symbolic name reference to [ ComMChannel ]   |    |                    |
| <b>Post-Build Variant Value</b>  | false  |    |                    |
| <b>Value Configuration Class</b> | <b>Pre-compile time</b>  | X  | VARIANT-PRE-COMPIL |
|                                  | <b>Link time</b>   | X  | VARIANT-LINK-TIME  |
|                                  | <b>Post-build time</b>   | -- |                    |
| <b>Scope / Dependency</b>        | scope: ECU   |    |                    |

#### No Included Containers

**[SWS\_LinNm\_00099]** [The container LinNmChannelConfig specifies configuration parameter that shall be located in a data structure. | ()]

### 10.4 Published parameters

For details refer to the chapter 10.3 “Published Information” in *SWS\_BSWGeneral*.

## 11 Not applicable requirements

[SWS\_LinNm\_00165] [ These requirements are not applicable to this specification.] (SRS\_Lin\_01564, SRS\_Lin\_01515, SRS\_Lin\_01523, SRS\_BSW\_00170, SRS\_BSW\_00387, SRS\_BSW\_00375, SRS\_BSW\_00416, SRS\_BSW\_00168, SRS\_BSW\_00423, SRS\_BSW\_00424, SRS\_BSW\_00425, SRS\_BSW\_00426, SRS\_BSW\_00427, SRS\_BSW\_00429, SRS\_BSW\_00432, BSW00434, SRS\_BSW\_00336, SRS\_BSW\_00339, SRS\_BSW\_00417, SRS\_BSW\_00409, SRS\_BSW\_00161, SRS\_BSW\_00162, SRS\_BSW\_00005, SRS\_BSW\_00415, SRS\_BSW\_00164, SRS\_BSW\_00325, SRS\_BSW\_00326, SRS\_BSW\_00160, SRS\_BSW\_00413, SRS\_BSW\_00347, SRS\_BSW\_00305, SRS\_BSW\_00307, SRS\_BSW\_00335, SRS\_BSW\_00410, SRS\_BSW\_00314, SRS\_BSW\_00328, SRS\_BSW\_00312, SRS\_BSW\_00006, SRS\_BSW\_00377, SRS\_BSW\_00306, SRS\_BSW\_00309, SRS\_BSW\_00330, SRS\_BSW\_00331, SRS\_BSW\_00172, SRS\_BSW\_00010, SRS\_BSW\_00333, SRS\_BSW\_00321, SRS\_BSW\_00341, SRS\_BSW\_00334, SRS\_Nm\_00151, SRS\_Nm\_00043, SRS\_Nm\_00046, SRS\_Nm\_00048, SRS\_Nm\_00050, SRS\_Nm\_00051, SRS\_Nm\_00052, SRS\_Nm\_02509, SRS\_Nm\_02503, SRS\_Nm\_02504, SRS\_Nm\_00153, SRS\_Nm\_02508, SRS\_Nm\_02505, SRS\_Nm\_02506, SRS\_Nm\_02511, SRS\_Nm\_00053, SRS\_Nm\_00137, BSW136, BSW140, SRS\_Nm\_00054, SRS\_Nm\_00142, SRS\_Nm\_00143, SRS\_Nm\_00144, SRS\_Nm\_00145, SRS\_Nm\_00146, SRS\_Nm\_00147, SRS\_Nm\_00154, BSW139, SRS\_Nm\_02510, SRS\_Nm\_02512)